

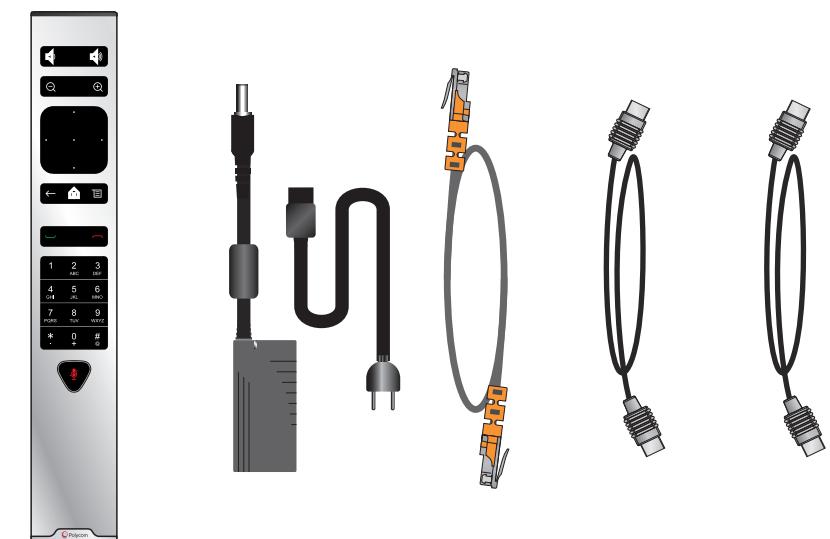


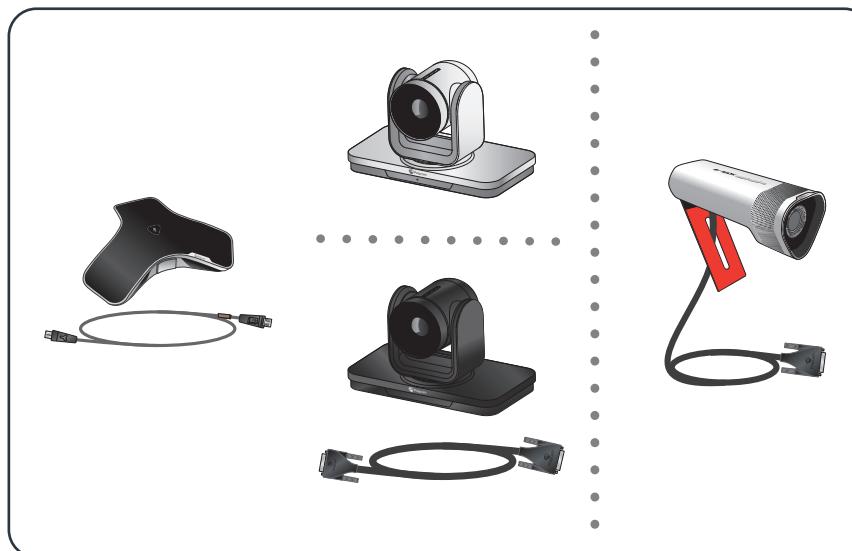

# Polycom® RealPresence® Group 500 System Setup Sheet

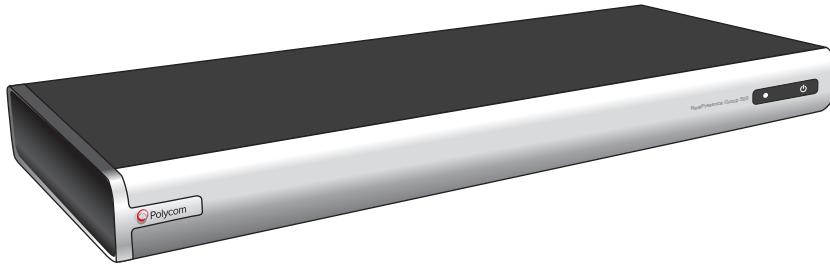

## Minimum Setup

Installation des éléments de base

Instalación necesaria

Instalação básica

Grundinstallation

Installazione necessaria





Nødvendig oppsett

Minimális beállítások

Konfiguracja minimalna

Необходимая настройка

必須設定  
标准设置  
必要設定  
필수 설정

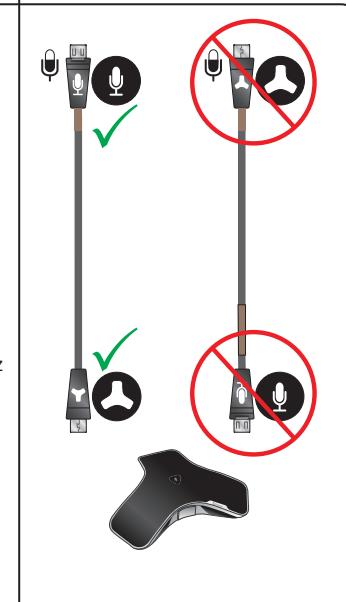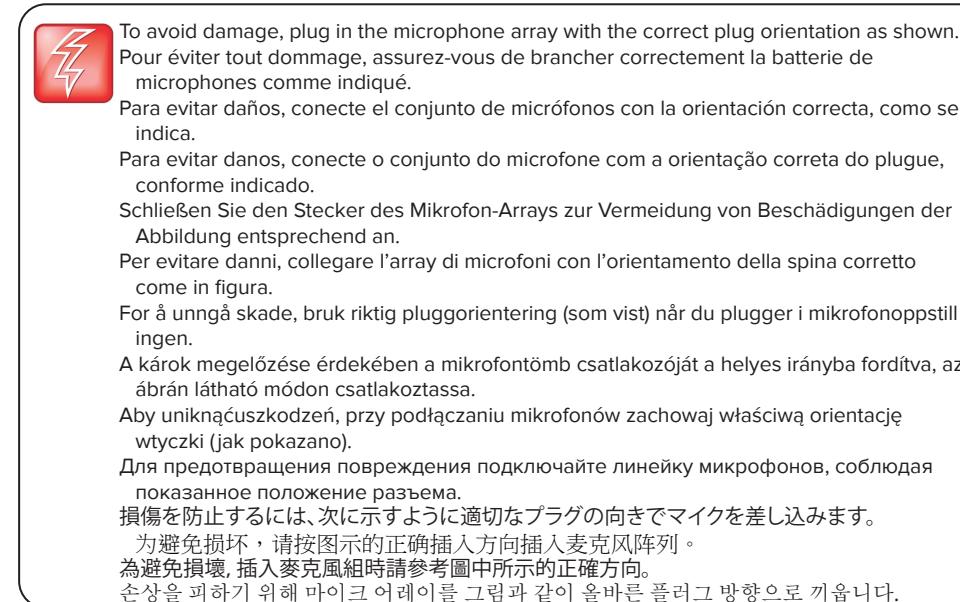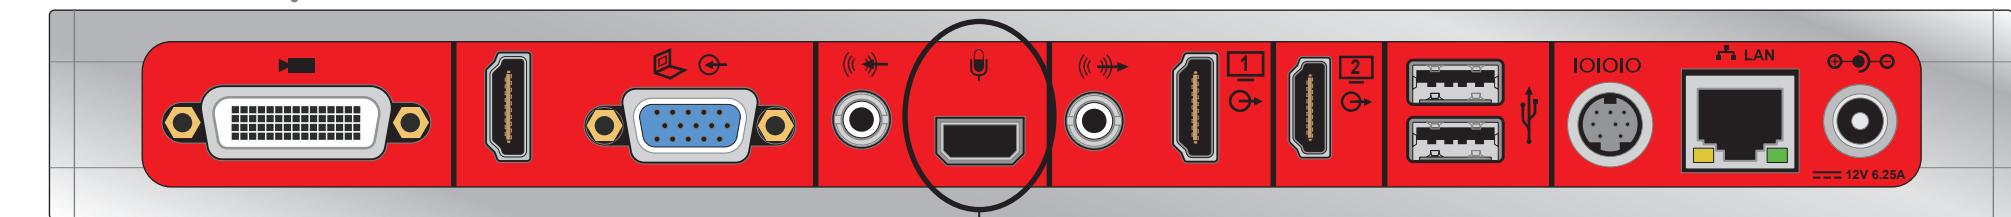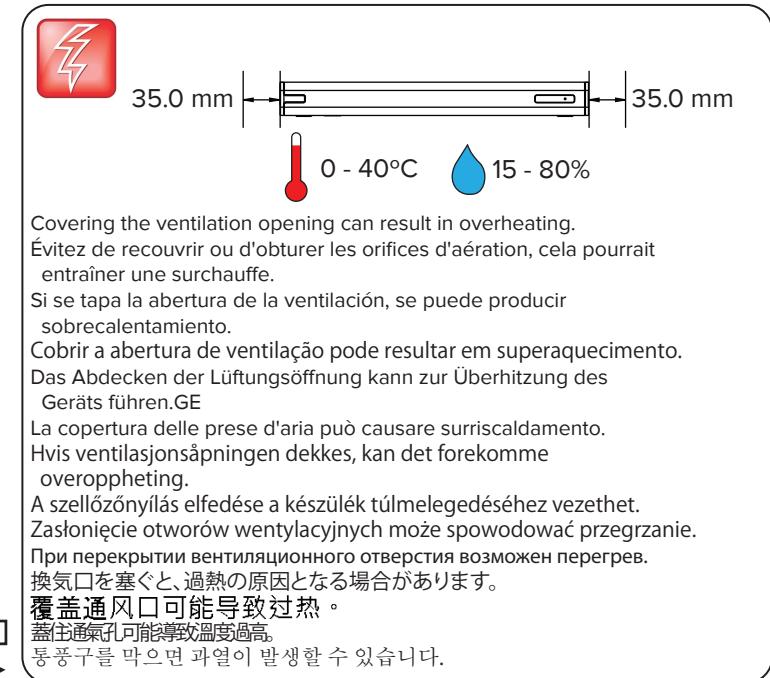




## Optional Setup

Installation de l'équipement optionnel  
Instalación del equipo optativo  
Instalação do equipamento opcional

Einrichten der optionalen Ausrüstung  
Installazione delle apparecchiature opzionali  
Valgfritt oppsett

Kiegészítő beállítások  
Konfiguracja opcjonalna  
Дополнительная настройка

オプション設定  
选择设置  
選擇設定  
선택 설정

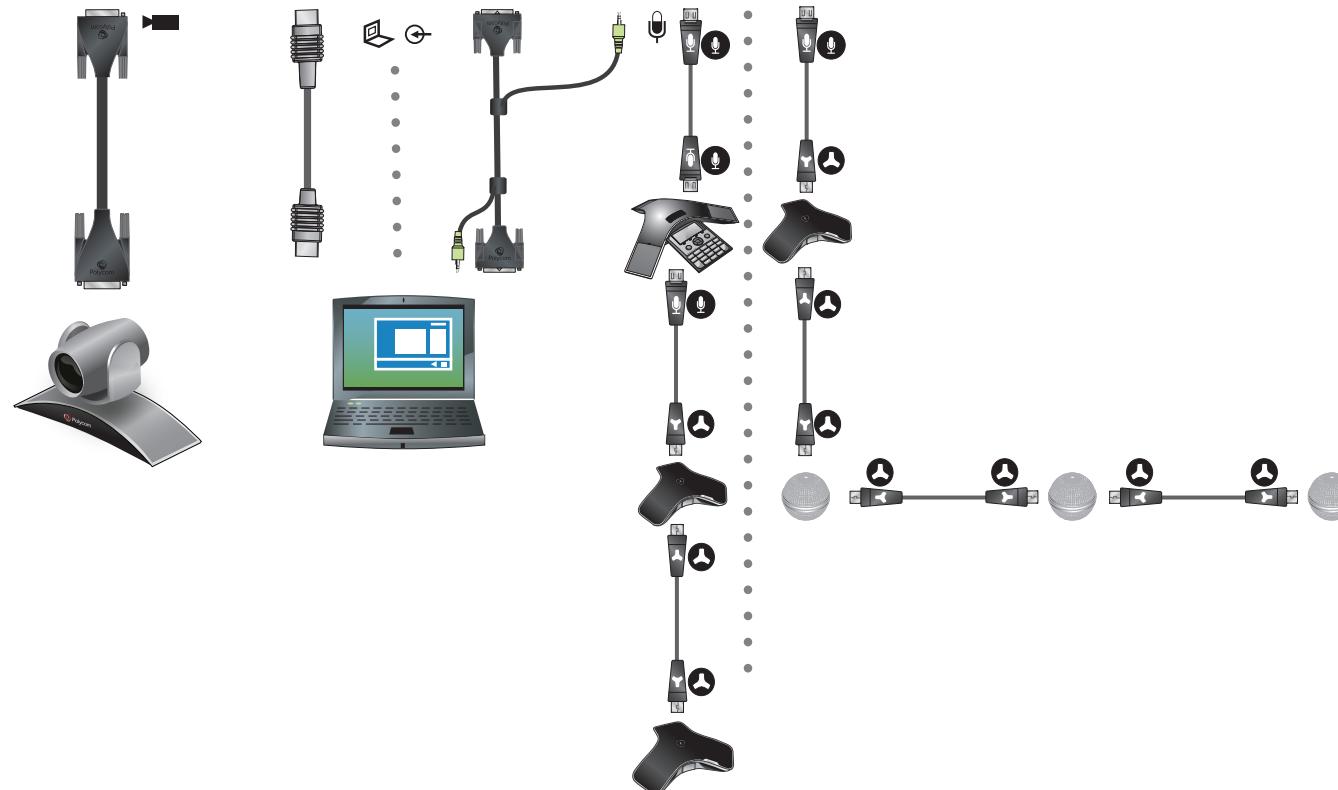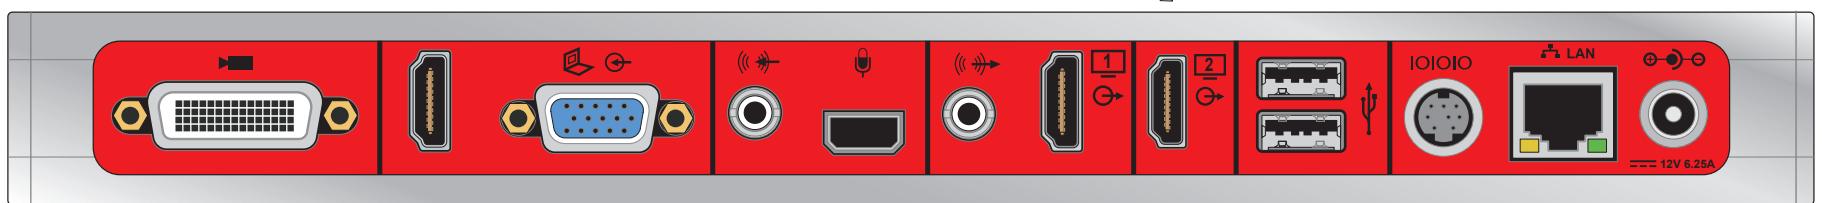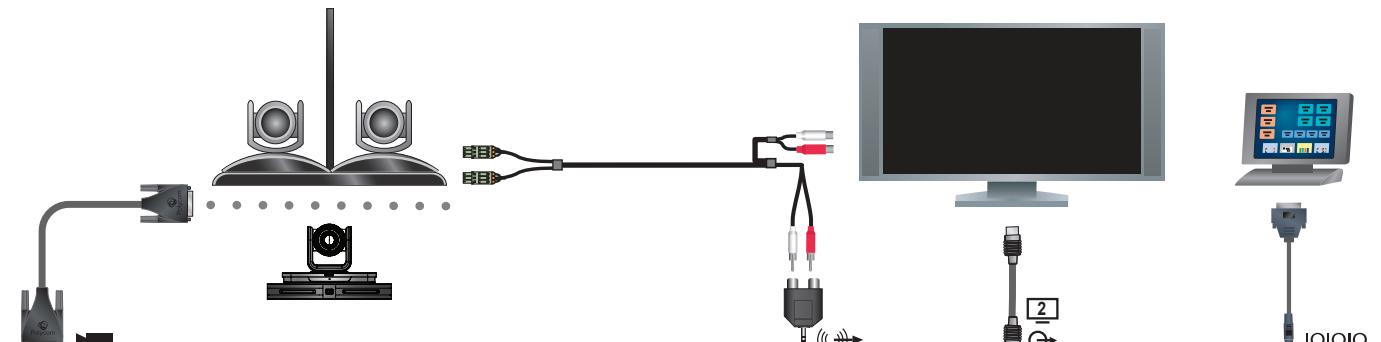

1725-64952-008A



## Power on the System

Mise sous tension du système  
Encender el sistema  
Ligue o sistema  
System einschalten

Accendi il sistema  
Slå på systemet  
Kapcsolja be a rendszert  
Włącz zasilanie systemu

Включение системы  
システムの電源を入れる  
啟動系統  
打开系统电源  
시스템 전원 켜기




## Charge the Battery

Mise en charge de la batterie  
Cargar la batería  
Carregue a bateria  
Akku laden

Carica la batteria  
Lad batteriet  
Tölts az akkumulátort  
Naładuj baterię

Зарядка аккумулятора  
バッテリの充電  
电池充电  
为电池充电  
배터리 충전 하기

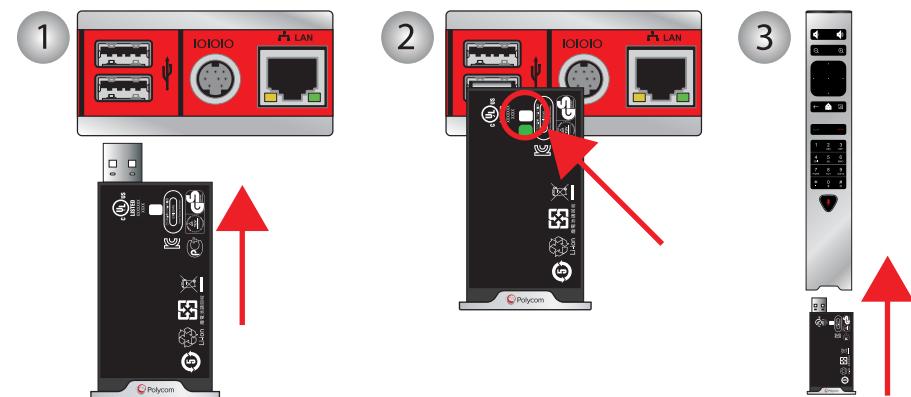

## Product Documentation

Documentation du produit  
Documentación del producto  
Documentação do produto  
Produktdocumentation  
Documentazione del prodotto  
Produktdokumentasjon  
Termékdokumentáció  
Dokumentacija produktu  
Документация продукта  
製品マニュアル  
产品文档  
产品說明文件  
제품 설명서



**Polycom | Support**