



 **Polycom Moscow**
T +7-495-924-25-25
zakaz@polycom-moscow.ru
www.polycom-moscow.ru

Administrator Guide

Version 8.6 | June 2015 | 3725-74301-000D

RealPresence[®] Collaboration Server (RMX)

1800/2000/4000



Copyright© 2015, Polycom, Inc. All rights reserved. No part of this document may be reproduced, translated into another language or format, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Polycom, Inc.

6001 America Center Drive
San Jose, CA 95002
USA



Polycom®, the Polycom logo and the names and marks associated with Polycom products are trademarks and/or service marks of Polycom, Inc. and are registered and/or common law marks in the United States and various other countries. All other trademarks are property of their respective owners. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient's personal use, without the express written permission of Polycom.



Java is a registered trademark of Oracle America, Inc., and/or its affiliates.

End User License Agreement By installing, copying, or otherwise using this product, you acknowledge that you have read, understand and agree to be bound by the terms and conditions of the End User License Agreement for this product. The EULA for this product is available on the Polycom Support page for the product.

Patent Information The accompanying product may be protected by one or more U.S. and foreign patents and/or pending patent applications held by Polycom, Inc.

Open Source Software Used in this Product This product may contain open source software. You may receive the open source software from Polycom up to three (3) years after the distribution date of the applicable product or software at a charge not greater than the cost to Polycom of shipping or distributing the software to you.

Disclaimer While Polycom uses reasonable efforts to include accurate and up-to-date information in this document, Polycom makes no warranties or representations as to its accuracy. Polycom assumes no liability or responsibility for any typographical or other errors or omissions in the content of this document.

Limitation of Liability Polycom and/or its respective suppliers make no representations about the suitability of the information contained in this document for any purpose. Information is provided "as is" without warranty of any kind and is subject to change without notice. The entire risk arising out of its use remains with the recipient. In no event shall Polycom and/or its respective suppliers be liable for any direct, consequential, incidental, special, punitive or other damages whatsoever (including without limitation, damages for loss of business profits, business interruption, or loss of business information), even if Polycom has been advised of the possibility of such damages.

Customer Feedback We are striving to improve our documentation quality and we appreciate your feedback. Email your opinions and comments to DocumentationFeedback@polycom.com.

Polycom Support Visit the [Polycom Support Center](#) for End User License Agreements, software downloads, product documents, product licenses, troubleshooting tips, service requests, and more.

Contents

Overview	1
About RealPresence Collaboration Server (RMX) Administrator Guide	1
Who Should Read This Guide?	2
Prerequisites	2
How This Guide is Organized	2
About the RealPresence Collaboration Server System	3
Network Services Guidelines	4
IP Networks	4
ISDN Networks	5
Card Configuration Modes	5
Viewing the Card Configuration Mode	5
RealPresence Collaboration Server Supported Features	6
Software Prerequisites and Guidelines	8
Conferencing Modes Overview	10
AVC Conferencing	10
Continuous Presence (CP) Conferencing	10
Video Protocol Support in CP Conferences	12
Video Switching (VSW) Conferencing	12
Video Switching (VSW) Conferencing Guidelines	13
AVC Basic Conferencing Parameters	14
Supplemental Conferencing Features	15
SVC-based Conferencing	16
SVC Conferencing Guidelines	18
MCU Supported Resolutions for SVC Conferencing	19
Mixed CP and SVC Conferencing	21
MCU Resource Capacities for Mixed CP and SVC Conferences	22
Using Conference Profiles	23
Conferencing Parameters Defined in a Profile	23
Conferencing Capabilities in the Various Conferencing Modes	24
Default Profile Settings in CP Conferencing Mode	25

Default Profile Settings in SVC Only Conferencing Mode	27
Default Profile Settings in a Mixed CP and SVC Conferencing Mode	28
Viewing the List of Conference Profiles	30
Profiles Toolbar	32
Modifying an Existing Profile	32
Deleting a Conference Profile	33
Defining New Profiles	33
Exporting and Importing Conference Profiles	34
Guidelines for Exporting and Importing Conference Profiles	34
Exporting Conference Profiles	34
Exporting All Conference Profiles from an MCU	34
Exporting Selected Conference Profiles	35
Importing Conference Profiles	36
Defining AVC-Based Conference Profiles	38
Defining AVC CP Conferencing Profiles	38
Additional Information for Setting CP Profiles	74
Gathering Phase	74
Gathering Phase Guidelines	75
Gathering Phase Duration	76
Enabling the Gathering Phase Display	77
Overlay Layouts	77
Guidelines for using the Overlay Layouts	78
Selecting the Overlay Layouts	79
Site Names Definition	80
Guidelines	81
Shorten the Site Name Display	81
Site Names Display Position	82
Sending Text Messages During a Conference Using Message Overlay	84
Guidelines	84
Sending Messages to All Conference Participants using Message Overlay	85
Sending Messages to Selected Participants Using Message Overlay	86
Selecting the Chinese Font for Text Display	86
Selecting the Chinese Font	86
Defining an AVC Video Switching Conference Profile	88
H.264 High Profile Support in Video Switching Conferences	91
Minimum Threshold Line Rate System Flags	91
Defining SVC and Mixed CP and SVC Conference Profiles	93
Defining SVC Conference Profiles	93

Defining Mixed CP and SVC Conferencing Profiles	105
Video Protocols and Resolution Configuration for CP Conferencing	107
Video Resolutions in AVC CP Conferencing	107
Video Display with CIF, SD and HD Video Connections	108
H.264 High Profile Support in CP Conferences	108
H.264 High Profile Guidelines	108
HD1080p60 Resolution Guidelines	109
CP Conferencing with H.263 4CIF	110
H.263 4CIF Guidelines	110
The CP Resolution Decision Matrix	111
Video Resource Usage	111
Default Minimum Threshold Line Rates and Resource Usage Summary	112
Resolution Configuration for CP Conferences	113
Guidelines	113
Modifying the Resolution Configuration	113
Resolution Configuration - Basic	115
Maximum CP Resolution Pane	115
Resolution Configuration Pane	115
Resolution Configuration - Detailed	116
Sharpness and Motion	116
Resolution Configuration Sliders	117
Flag Settings	120
Setting the Maximum CP Resolution for Conferencing	120
Minimum Frame Rate Threshold for SD Resolution	120
Additional Video Resolutions	120
w448p Resolution	121
Guidelines	121
Content	122
Packet Loss Compensation	122
Enabling Support of the w448p Resolution	122
Collaboration Server System Flag Settings	123
Additional Intermediate Video Resolutions	123
Sharing Content During Conferences	124
Content Control Protocols	124
Guidelines for Controlling Content	124
Supported Content Control Protocols	124
Content Sharing Using H.239 Protocol	125
Content Sharing Using BFCP Protocol	125

Guidelines for Using SIP BFCP Content	125
Content Sharing Using People+Content Protocol	126
Guidelines for Content Sharing Using People+Content Protocol	126
Content Media Protocols	127
Content Transmission Methods	128
Content Video Switching	128
Highest Common	128
Fixed Rate	129
Multiple Content Resolutions	129
Guidelines for Sharing Contents using Multiple Content Resolutions	130
Content Settings	131
Customized Content Rate	131
MCU Usage Modes of Content Protocols	131
H.263	132
H.263 & H.264 Auto Selection	132
H.264 Cascade Optimized	132
H.264 HD	132
H.264 Content Sharing Properties	132
Guidelines for Sharing Content Using H.264 HD	133
Content Sharing Related Issues	134
Sharing Content in Cascaded Environments	134
Guidelines for Content Snatching in Cascaded Conferences	134
Sending Content to Legacy Endpoints	135
Guidelines for Sending Content to Legacy Endpoints	135
Content Display on Legacy Endpoints	135
Sending Content to Legacy Endpoints in Telepresence Mode	136
Exclusive Content Mode	137
Guidelines for Sharing Content in Exclusive Content Mode	137
Forcing Other Content Capabilities	138
Managing Noisy Content Connections	138
Useful Procedures in Content Sharing	139
Defining Content Sharing Parameters for a Conference	139
H.264 Cascade Optimized Content Sharing	141
Selecting a Customized Content Rate	142
Sharing Content in Multiple Content Resolutions Mode	143
Giving and Canceling Token Ownership (AVC Participants)	144
Stopping a Content Session	145
Content Sharing Reference Tables	146
Resolutions and Content Rate Reference Tables	146
H.263 Content Rate Table	146

H.264 Resolution per Content Rate Tables	147
H.264 Highest Common Content Rates Tables	148
H.264 Cascade Optimized (Fixed) Content Rates Tables	150
Implementing Media Encryption for Secured Conferencing	152
Media Encryption Guidelines	152
Mixing Encrypted and Non-encrypted Endpoints in one Conference	153
Direct Connection to the Conference	154
Connection to the Entry Queue	155
Moving from the Entry Queue to Conferences or Between Conferences	156
Recording Link Encryption	156
Enabling Media Encryption for a Conference	157
Setting the Encryption Flags	157
Enabling Encryption in the Profile	157
Enabling Encryption at the Participant Level	158
Monitoring the Encryption Status	159
Setting Conferences for Telepresence Mode (AVC CP)	161
Collaboration Server Telepresence Mode Guidelines	161
System Level	161
Conference Level	162
Automatic Detection of Immersive Telepresence (ITP) Sites	162
Horizontal Striping	163
Cropping	163
Gathering Phase with ITP Room Systems	164
Aspect ratio for standard endpoints	164
Skins and Frames	164
RPX and OTX Video Layouts	164
Room Switch Telepresence Layouts	167
Telepresence Display Decision Matrix	167
Guidelines for Managing the Room Switch Telepresence Layouts by the MCU	168
Speaker Priority in CP Video Layouts	169
Reserved Screens	169
Grid Screens	169
Video Layout Examples	169
Selecting Speaker Priority	172
Sending Content to Legacy Endpoints in Telepresence Conferences	172
Guidelines for Sending Content to Legacy Endpoints in Telepresence Conferences	173
Content Display on Legacy Endpoints in Telepresence Conferences	173
Enabling Telepresence Mode	174

Monitoring Telepresence Mode	176
Monitoring Ongoing Conferences	176
Monitoring Participant Properties	177
Creating Multiple Cascade Links Between Telepresence Conferences	178
Guidelines for Creating Multiple Cascading Links between Conferences	178
Enabling and Using Multiple Cascade Links	179
Creating a Link Participant	181
Link Participant in the Dial Out RMX	181
Participant Link in the Dial In RMX	183
Monitoring Multiple Cascade Links	184
Disconnection Causes	184
Additional Conferencing Information	186
Video Preview	186
Video Preview Guidelines	186
Workstation Requirements to Display Video Preview	187
Testing your Workstation	187
Previewing the Participant Video	188
Auto Scan and Customized Polling in Video Layout	190
Guidelines for Using Auto Scan and Customized Polling	190
Enabling the Auto Scan and Customized Polling	190
Enabling the Auto Scan	190
Customized Polling	191
Packet Loss Compensation - LPR and DBA	193
Packet Loss	193
Causes of Packet Loss	193
Effects of Packet Loss on Conferences	193
Lost Packet Recovery	193
Lost Packet Recovery Guidelines	193
Enabling Lost Packet Recovery	194
Monitoring Lost Packet Recovery	195
Layout Indications	197
Network Quality Indication	197
Network Quality Levels	197
Indication Threshold Values	198
Displaying the Network Quality icons	198
Customizing the Network Quality Icon Display	198
Recording Indications	200
Audio and Video Participants Indication	200
Setting Layout Indication via User Interface	201

Layout Indications Icon Display Positions	202
Layout Indications Guidelines	203
1x1 Layout Scenario Adaptation	204
Lecture Mode	204
Enabling Lecture Mode	205
Selecting the Conference Lecturer	205
Enabling the Automatic Switching	207
Lecture Mode Monitoring	208
Restricting Content Broadcast to Lecturer	210
Muting Participants Except the Lecturer	211
Guidelines for Muting all the Participants Except the Lecturer	211
Enabling the Mute Participants Except Lecturer Option	212
Audio Algorithm Support	213
Audio Algorithm Support Guidelines	213
SIP Encryption	214
Mono	214
Stereo	215
Audio algorithms supported for ISDN	216
Monitoring Participant Audio Properties	217
Automatic Muting of Noisy Endpoints	219
Guidelines for Automatically Muting Noisy Endpoints	219
Automatic Muting of Noisy Endpoints	220
Automatic Muting of Noisy Endpoints at the Conference Level	220
Automatic Muting of Noisy Endpoints at the MCU Level	221
Permanent Conference	222
Guidelines	222
Enabling a Permanent Conference	223
Closed Captions	224
Closed Captions Guidelines	224
Enabling Closed Captions	224
Defining Cascading Conferences	226
Cascading Link Properties	226
Setting the Video Layout in Cascading conferences	226
Guidelines for Setting the Video Layout in Cascading Conferences	227
Flags Controlling Cascading Layouts	228
DTMF Forwarding	228
Play Tone Upon Cascading Link Connection	228
Possible Cascading Topologies	229
Basic Cascading	229

Basic Cascading Using IP Cascaded Link	230
Dialing Directly to a Conference	230
Dialing to an Entry Queue	230
Automatic Identification of the Cascading Link	231
Basic Cascading Using ISDN Cascaded Link	231
Network Topologies Enabling Content Sharing Over ISDN Cascaded Links	231
Guidelines	232
Gateway to Gateway Calls via ISDN Cascading Link	232
Gateway to MCU Calls via ISDN Cascading Link	233
MCU to MCU Calls via ISDN Cascading Link	234
RealPresence Collaboration Server Configuration Enabling ISDN Cascading Links	234
Suppression of DTMF Forwarding	239
Star Cascading Topology	239
Master-Slave Cascading	239
Creating a Cascade Enabled Dial-out/Dial-in Participant Link	241
Cascading via Entry Queue	246
Enabling Cascading	246
Creating the Cascade-enabled Entry Queue	247
Creating the Dial-out Cascaded Link	248
Enabling Cascaded Conferences without Password	250
Monitoring Star Cascaded Conferences	250
Creating the Dial-out Link from a Conference Running on the MGC to the Conference	
Running on the RealPresence Collaboration Server	251
Cascading Conferences - H.239-enabled MIH Topology	252
MIH Cascading Levels	253
Cascading Topologies	253
MIH Cascading Guidelines in CP Licensing	254
MGC to RealPresence Collaboration Server Cascading	257
Meeting Rooms	268
Use Time Out as DTMF Delimiter	269
Meeting Rooms List	269
Use Time Out as DTMF Delimiter	271
Meeting Room Toolbar & Right-click Menu	272
Creating a New Meeting Room	273
Entry Queues, Ad Hoc Conferences and SIP Factories	274
Entry Queues	274
Defining a New Entry Queue	275
Listing Entry Queues	279
Modifying the EQ Properties	279

Transit Entry Queue	279
Setting a Transit Entry Queue	280
IVR Provider Entry Queue (Shared Number Dialing)	281
Call Flow	281
Guidelines for setting the Entry Queue as IVR Provider	281
Configuring the Collaboration Server as IVR Provider	281
Using External IVR Services via the MCCF-IVR Package	282
Call Flows	283
Guidelines for Using External IVR Services via the MCCF-IVR Package	284
Configuring the MCU to Support External IVR Services via the MCCF-IVR	285
Configuring the Entry Queue to Use External IVR Services	285
SIP Factories	286
Creating SIP Factories	286
SIP Registration & Presence for Entry Queues and SIP Factories with SIP Servers	288
Guidelines for registering Entry Queues and SIP Factories with SIP Servers	288
Monitoring Registration Status	289
Ad Hoc Conferencing	289
Gateway to Polycom® Distributed Media Application™ (DMA™) 7000	290
Address Book	291
Viewing the Address Book	292
Displaying and Hiding the Group Members in the Navigation Pane	293
Participants List Pane Information	293
Displaying and Hiding the Address Book	294
Adding Participants from the Address Book	294
Adding Individual Participants from the Address Book to Conferences	294
Adding a Group from the Address Book to Conferences	295
Participant Groups	295
Managing Groups in the Address Book	295
Managing the Address Book	297
Guidelines	297
Adding a Participant to the Address Book	297
Adding a New participant to the Address Book Directly	297
Substituting E.164 Number in Dial String	303
Adding a Participant from an Ongoing Conference to the Address Book	303
Modifying Participants in the Address Book	304
Deleting Participants from the Address Book	305
Copying or Moving a Participant	306
Searching the Address Book	307
Filtering the Address Book	307

Filtering Address Book Data Using a Predefined Pattern	308
Filtering Address Book Data Using a Custom Pattern	309
Clearing the Filter	311
Obtaining the Display Name from the Address Book	312
Guidelines for Obtaining the Display Name from the Address Book	312
Enabling and Disabling the Obtain Display Name from Address Book Feature	312
Importing and Exporting Address Books	313
Exporting an Address Book	313
Importing an Address Book	313
Upgrading and Downgrading Considerations	314
Integrating the Global Address Book (GAB) with the Collaboration Server	314
Integration with Resource Manager	314
Scheduling Reservations	316
Using the Reservation Calendar	318
Toolbar Buttons	318
Reservations Views	319
Week View	319
Day View	319
Today View	320
List View	320
Changing the Calendar View	321
Scheduling Conferences Using the Reservation Calendar	323
Creating a New Reservation	323
Managing Reservations	329
Guidelines	329
Viewing and Modifying Reservations	329
Using the Week and Day views of the Reservations Calendar	329
Adjusting the Start Times of all Reservations	331
Deleting Reservations	333
Searching for Reservations using Quick Search	333
Operator Assistance & Participant Move	335
Operator Conferences	335
Operator Conference Guidelines	336
Defining the Components Enabling Operator Assistance	336
To define a Conference IVR Service with Operator Assistance Options	337
To define an Entry Queue IVR Service with Operator Assistance Options	339
To define a Conference Profile for an Operator Conference	340
Starting an Ongoing Operator Conference	342

Saving an Operator Conference to a Template	345
Starting an Operator Conference from a Template	346
Monitoring Operator Conferences and Participants Requiring Assistance	347
Requesting Help	347
Participant Alerts List	348
Audible Alarms	349
Using Audible Alarms	349
Conference Templates	350
Using Conference Templates	351
Toolbar Buttons	351
Creating a New Conference Template	352
Creating a new Conference Template from Scratch	352
Saving an Ongoing or AVC-CP Operator Conference as a Template	358
Starting an Ongoing Conference From a Template	359
Starting an Operator Conference from a Template (AVC Conferencing)	360
Scheduling a Reservation From a Conference Template	361
Deleting a Conference Template	363
Exporting and Importing Conference Templates	363
Exporting Conference Templates	364
Exporting All Conference Templates from an MCU	364
Exporting Selected Conference Templates	365
Importing Conference Templates	366
Start a Conference	369
Start an AVC CP Conference from the Conferences Pane	370
General Tab	371
Participants Tab	375
Information Tab	377
Media Sources Tab	378
Starting a Mixed CP and SVC or SVC Only Conference from the Conferences Pane ..	379
Starting a New SVC Conference	379
Scheduling an AVC-based Reservation	380
Starting an Ongoing Conference From a Template	381
Starting a Meeting from Microsoft Outlook Using Polycom Add-in	382
Conference and Participant Level Operations	383
Conference Operations	383
Copy Conference	383
Paste Conference	383

Paste Conference As	384
Participant Operations	385
Operational Buttons	385
Copy, Cut and Paste Participant	387
Copy Participant	387
Cut Participant	387
Paste Participant	387
Paste Participant As	388
Moving Participants Between Conferences	389
Move Guidelines	389
Moving Participants Options	390
Moving a Participant Interactively	390
Personal Conference Manager (PCM) (AVC CP Conferences)	391
PCM Usage Guidelines	391
Modifying the PCM_FECC System Flag	392
PCM Interface	393
Initiating PCM	393
Remote Control Device Keys	393
Menu Navigation - Arrow and Zoom Keys	394
DTMF Codes - Numeric Keys	395
PCM Main Menu - Level 1	395
Click & View	395
Invite Participant	396
Participants Mute/Status	397
Far End Camera Control	398
Video Forcing	400
Recording	400
PCM Main Menu - Level 2	402
Drop Participant	402
Terminating a Conference	403
Polycom Conferencing for Microsoft Outlook®	404
Setting up the Calendaring Solution	405
Calendaring Guidelines	410
Creating and Connecting to a Conference	412
Creating a Conference	412
Connecting to a Conference	413
Collaboration Server Standalone Deployment	414
Collaboration Server and Polycom RealPresence DMA System Deployment	414
Polycom Solution Support	414

Conference and Participant Monitoring	415
General Monitoring	415
Multi-Selection	416
Using the Chairperson Password for Filtering	416
Conference Level Monitoring	417
Monitoring the Conference in the Conference List Pane	418
Viewing the Properties of CP and Mixed CP and SVC Conferences	420
Viewing the Properties of Ongoing SVC Conferences	432
Monitoring of Operator Conferences and Participants Requiring Assistance	437
Requesting Help	438
Request to Speak	439
Participant Alerts List	439
Participant Level Monitoring	440
Participant Connection Monitoring (AVC and SVC-based Connections)	441
Viewing the Properties of Participants	445
Monitoring IP Participants	446
Monitoring SIP BFCP Content	457
Detecting Endpoint Disconnection	458
Monitoring ISDN/PSTN Participants	459
Monitoring Telepresence Participant Properties	466
Recording and Streaming Conferences	467
Creating Multiple Virtual Recording Rooms on the Polycom® RealPresence® Media Suite	468
Configuring the Collaboration Server to Enable Recording	468
Defining the Dial Out Recording Link	469
Enabling the Recording Features in a Conference IVR Service	470
Enabling the Recording in the Conference Profile	471
Dial Out Recording Link Encryption	473
Dial Out Recording Link Encryption Flag Setting	473
Dial Out Recording Link Settings	474
Managing the Recording Process	474
Recording Layout	475
Using the Collaboration Server Web Client to Manage the Recording Process	476
Using DTMF Codes to Manage the Recording Process	478
Conference Recording with Codian IP VCR	478
Users Connections and Notes	479
Collaboration Server Users	479
User Types	479
Administrator	479

Administrator Read-only	480
Operator	480
Chairperson	480
Auditor	480
Machine Account	480
Listing Users	480
Adding a New User	481
Deleting a User	482
Changing a User's Password	483
Disabling a User	483
Enabling a User	483
Renaming a User	484
Machine Account	484
Guidelines for defining a machine account	485
Monitoring	485
Active Directory	485
Connections	486
Viewing the Connections List	486
Notes	486
Using Notes	486
IP Network Services	488
Collaboration Server IP Network Services Overview	488
Management Network (Primary)	489
Default IP Service (Conferencing Service)	489
Using IPv6 Networking Addresses for Collaboration Server Internal and External Entities	490
IPv6 Addressing Guidelines	490
Modifying the Management Network	491
Modifying the Default IP Network Service	499
Ethernet Settings	515
IP Network Monitoring	519
LAN Redundancy	525
Media Redundancy - Collaboration Server (RMX) 2000/4000	525
Media and Signaling Redundancy - Collaboration Server (RMX) 1800	525
Signaling and Management Redundancy - Collaboration Server (RMX) 4000	527
Management Redundancy - Collaboration Server (RMX) 1800	527
Configuration Requirements	528
RealPresence Collaboration Server 1800	528
RealPresence Collaboration Server (RMX) 2000	529

RealPresence Collaboration Server (RMX) 4000	529
On all systems:	529
Hardware Monitor Indications	529
Network Traffic Control	530
SIP Proxy Failover With Polycom® Distributed Media Application™ (DMA™) 7000	530
RealPresence Collaboration Server (RMX) Network Port Usage	531
Defining ISDN/PSTN Network Services	534
ISDN/PSTN Network Services Overview	534
Adding/Modifying ISDN/PSTN Network Services	536
Obtaining ISDN/PSTN required information	536
Modifying an ISDN/PSTN Network Service	542
Network Security	544
Collaboration Server (RMX) 4000	544
Collaboration Server 1800	544
Collaboration Server (RMX) 2000	544
Multiple Network Services	544
Guidelines	546
Resource Allocation and Capacity	548
First Time Installation and Configuration	548
Upgrading to Multiple Services	548
Gather Network Equipment and Address Information - IP Network Services Required Information	549
RealPresence Collaboration Server (RMX) Hardware Installation	550
Collaboration Server (RMX) 4000 Multiple Services Configuration	550
RealPresence Collaboration Server (RMX) 2000 Multiple Services Configuration	551
Collaboration Server (RMX) 1800 Multiple Services Configuration	553
Collaboration Server Configuration	554
System Flags and License Settings	554
IP Network Service Definition	554
Setting a Network Service as Default	562
Ethernet Settings	562
Signaling Host IP Address and MCU Prefix in GK Indications	563
Conference Profile	563
Gateway Profiles	563
Hardware Monitor	565
Signaling Monitor	566
Conferencing	566
Defining Dial Out Participants	566
Reserving Video Resources for a Conference	567

Monitoring Conferences	567
Resource Report	568
Port Usage Gauges	568
NAT (Network Address Translation) Traversal	569
Deployment Architectures	570
Remote Connection Using the Internet	570
Business to Business Connections	571
FW (Firewall) NAT Keep Alive	571
System Configuration in SBC environments	572
SIP TCP Keep-Alive	572
IVR Services	573
IVR Services List	573
IVR Services Toolbar	574
Adding Languages	575
Uploading a Message File to the Collaboration Server	576
Defining a New Conference IVR Service	578
Defining a New Conference IVR Service	579
Change to Chairperson	596
Controlling the receipt of in-band and out-of-band DTMF Codes	597
Entry Queue IVR Service	597
Defining a New Entry Queue IVR Service	597
Setting a Conference IVR Service or Entry Queue IVR Service as the Default Service ..	603
Modifying the Conference or Entry Queue IVR Service Properties	605
Replacing the Music File	606
Adding a Music File	606
Creating Audio Prompts and Video Slides	607
Recording an Audio Message	607
Defining the format settings for audio messages	607
Recording a new audio message	609
Creating a Welcome Video Slide	611
Inviting Participants using DTMF	612
Invite Call Flow	612
Entering Additional DTMF Codes	612
Error Handling	612
Guidelines	613
Enabling the Invite Participants using DTMF Option	613
Disabling the Invite Participant Option	616
External IVR Service Control	617
IVR Services Support with TIP Protocol	617

Guidelines for TIP Support with IVR Services	617
Default IVR Prompts and Messages	618
Volume Control of IVR Messages, Roll Call and Music	622
IVR Services in TIP-Enabled Conferences	623
IVR Services in TIP-Enabled Conferences Guidelines	623
Entry Queue and Virtual Entry Queue Access	623
Configuring the Conference and Entry Queue IVR Services	623
Call Detail Record (CDR) Utility	624
The CDR File Properties	624
CDR File Formats	624
Multi-Part CDR Files	625
Enabling the Multi-Part CDR Option	626
CDR File Contents	626
Viewing, Retrieving and Archiving Conference Information	627
Viewing the Conference Records	627
Multi-part CDR File display	628
Refreshing the CDR List	629
Retrieving and Archiving Conference CDR Records	629
Gateway Calls	630
Gateway Functionality	630
Call Flows	631
IP Participants	631
Direct Dialing	631
Gateway IVR Dialing For IP Participants	634
Direct Dialing Using IP Addresses	635
Calling a SIP Endpoint in a Remote Domain	637
ISDN Participants	638
Dialing via Gateway IVR for ISDN Participants	638
Direct Dial-in to Endpoints or DMA VMR using Automatically Generated Destination Numbers	639
Configuring the Gateway Components on the Collaboration Server	641
Defining the IVR Service for Gateway Calls	641
Defining the Conference Profile for Gateway Calls	644
Defining the Gateway Profile	645
System Configuration	646
Displaying the Connection Information	646
Enabling PSTN dial-in using GK prefix	646
Gateway Calls Redialing	646
Gateway Redial Guidelines	646

Redial on Wrong Number	646
Disconnect on Busy	648
Disconnect on No Answer	648
Disconnect on Wrong Number	648
Monitoring Ongoing Gateway Sessions	648
Connection Indications	648
Gateway Session Parameters	649
Connected Participant Parameters	650
Direct Dialing from ISDN/PSTN Endpoint to IP Endpoint via a Meeting Room	651
Dialing to Polycom® RealPresence DMA System	653
Calling a RealPresence DMA Direct with Automatically Generated Destination Dial Strings	653
Calling the RealPresence DMA via Gateway IVR	654
Manual Dial String Entry	654
Automatic Dial String Generation	655
PSTN Dial-in Using GK Prefix	656
Deploying a Polycom RMX™ Serial Gateway S4GW	657
RMX Manager Application	658
Installing the RMX Manager Application	658
Guidelines	659
Accessing or Downloading the RMX Manager Installer	659
Accessing the RMX Manager Application Installer Directly from the MCU	659
Downloading the Installation files from Polycom Support Site	660
Accessing the RMX Manager Installer from the Login screen	661
Installing the RMX Manager on Your Workstation	661
Installing the RMX Manager for Multi-User Capability	663
Starting the RMX Manager Application	665
Connecting to the MCU	667
RMX Manager Main Screen	668
MCUs Pane	668
Use Other RMX Manager UI Components	670
Adding MCUs to the MCUs List	670
Grouping the Participants by MCU	672
Start Monitoring/Stop Monitoring	672
Modifying the MCU Properties	673
Disconnecting an MCU	673
Removing an MCU from the MCUs Pane	674
Changing the RMX Manager Language	674
Import/Export RMX Manager Configuration	675

Installing RMX Manager in Secure Communication Mode	676
Using an Internal Certificate Authority	681
Use the RMX Web Client	684
Starting the RMX Web Client	684
RMX Web Client Screen Components	685
Viewing and System Functionality Permissions	686
Conferences List	687
List Pane	688
RMX Management Pane	688
Status Bar	688
System Alerts	689
Participant Alerts	689
Port Usage Gauges	690
MCU State	691
Address Book	691
Displaying and Hiding the Address Book	692
Conference Templates	692
Displaying and Hiding Conference Templates	693
Customizing the Main Screen	693
Increasing and Decreasing the Text Size	694
Customizing the RMX Management Pane	694
Accessing the Management Console When Security Policy is Stringent	696
Administration and Utilities	697
System and Participant Alerts	697
System Alerts	698
Participant Alerts	700
RMX Time	701
Altering the clock	701
Resource Management	703
Resource Capacity	703
Flexible Resource Capacity	704
Forcing Video Resource Allocation to CIF Resolution	704
Resource Reports	705
Displaying the Resource Report	706
Resource Reports for Collaboration Server 1800 and 2000/4000 with MPMRx	706
ISDN/PSTN	708
MCU Resource Management by RealPresence Resource Manager, and Polycom RealPresence DMA System	708
Guidelines	709

Port Usage Threshold	709
Setting the Port Usage Threshold	709
SIP Dial-in Busy Notification	710
Port Usage Gauges	711
System Information	712
SNMP (Simple Network Management Protocol)	712
MIBs (Management Information Base)	713
Traps	713
Guidelines	713
MIB Files	713
Private MIBs	713
Support for MIB-II Sections	714
The Alarm-MIB	714
H.341-MIB (H.341 – H.323)	714
Standard MIBs	714
Unified MIB	715
Traps	717
Status Trap	718
RMX MIB entities that do not generate traps.	718
Defining the SNMP Parameters in the Collaboration Server	720
Audible Alarms	727
Using Audible Alarms	727
Audible Alarm Permissions	728
Stop Repeating Message	728
Configuring the Audible Alarms	728
User Customization	728
Replacing the Audible Alarm File	729
Multilingual Setting	730
Customizing the Multilingual Setting	730
Banner Display and Customization	731
Guidelines	732
Non-Modifiable Banner Text	732
Sample 1 Banner	732
Sample 2 Banner	733
Sample 3 Banner	733
Sample 4 Banner	733
Customizing Banners	734
Banner Display	735
Login Screen Banner	735
Main Screen Banner	736

Software Management	737
Backup and Restore Guidelines	737
Using Software Management	738
Ping the Collaboration Server	739
Guidelines	739
Using Ping	739
Notification Settings	740
Logger Diagnostic Files	741
Information Collector	743
Standard Security Mode	743
Ultra Secure Mode	744
Network Intrusion Detection System (NIDS)	744
Using the Information Collector	745
Step 1: Creating the Information Collector Compressed File	745
Step 2: Saving the Compressed File	746
Step 3: Viewing the Compressed File	747
Auditor	747
Auditor Files	747
Retrieving Auditor Files	748
Auditor File Viewer	749
Audit Events	752
Alerts and Faults	752
Transactions	754
ActiveX Bypass	755
Installing ActiveX	755
Resetting the Collaboration Server	756
System Configuration Flags	758
Controlling System Flag Values	758
Modifying System Flags	758
Manually Adding a System Flag	759
Deleting a System Flag	759
The System Flags	760
The MCMS System Flags	760
The CS System Flags	804
Special System Flags	807
Auto Layout Configuration Flags	807
Content Related Flags	810
Automatic Password Generation Flags	810
Flags Specific to Maximum Security Environments - Ultra Secure Mode	812

Ultra Secure Mode	814
Enable Ultra Secure Mode	816
ULTRA_SECURE_MODE System Flag	817
Guidelines	817
Modifying the Ultra Secure Mode System Flag Value	817
System Flags affected by Ultra Secure Mode	818
Certificate Management	821
(PKI) Public Key Infrastructure	821
Adding Certificates to the Certificate Repository	822
Trusted Certificates	823
Personal Certificates	826
Certificate Validation	828
CRL (Certificate Revocation List)	829
Adding a CRL	831
Removing a CRL	834
Certificate Revocation	834
Revocation Method	834
Self-signed Certificate	835
Self-signed Certificate Creation	835
Emergency CRL (Certificate Revocation List) Update	837
SIP TCP Keep-Alive	841
Keep Alive Frequency	843
User and Connection Management	843
Managing the System Users	844
Disabling/Enabling Users	844
Renaming Users	844
Disabling Inactive Users	844
Managing the User Login Process	844
Implementing Strong Passwords	844
Password Length	846
Implementing Password Re-Use / History Rules	846
Defining Password Aging	846
Maximum Repeating Characters	847
Defining Password Change Frequency	847
Forcing Password Change	847
Temporary User Lockout	848
User Lockout	848
User Login Record	848
Controlling User Sessions	849
Management Sessions per System	849

Sessions per User	849
Connection Timeout	849
Session Timeout	849
Erase Session History After Logout	850
Banner Display and Customization	850
Guidelines for Customizing the Login Page Banner	850
Non-Modifiable Banner Text	851
Sample 1 Banner	851
Sample 2 Banner	851
Sample 3 Banner	851
Sample 4 Banner	852
Customizing Banners	852
Banner Display	854
Login Screen Banner	854
Main Screen Banner	855
Securing an External Database	855
MS Active Directory Integration	856
Directory and Database Options	856
Ultra Secure Mode	856
Standard Security Mode	856
Guidelines	857
Enabling Active Directory Integration	858
Restoring the Collaboration Server Using the USB Port	859
MLPP (Multi Level Precedence and Preemption)	860
Enabling Precedence	861
SIP Message	861
Dial-in calls	861
Dial-out calls	864
Precedence Level Change	864
Configuring and Modifying Precedence Domains and DSCP Values	865
System Flags	866
Monitoring Precedence Level	866
IEEE 802.1X Authentication	867
Certificate Repository	867
Enabling and Configuring 802.1X Authentication	868
System Flags	869
Disabling 802.1X Authentication	870
Ethernet Monitoring	870
White List Access	870
Guidelines	870

Enabling, Disabling and Modifying the White List	871
Alternative Network Address Types (ANAT)	873
Guidelines	873
System Flag	873
BFCP Over UDP – AS-SIP Content	874
Guidelines	874
Enabling AS-SIP Content	875
System Flag	875
Internet Control Message Protocol (ICMP)	876
Guidelines	876
System Flag: ENABLE_ACCEPTING_ICMP_REDIRECT	876
System Flag: ENABLE_SENDING_ICMP_DESTINATION_UNREACHABLE	876
Password Encryption	877
Upgrade / Downgrade Guidelines	877
Non-hashed Passwords	879
Self-signed Certificate Creation	879
Media Encryption and Authentication	881
System Flags	881
Collaboration Server Hardware Monitoring	882
Viewing the Status of the Hardware Components	882
HW Monitor Pane Toolbar	884
Viewing the Properties of Hardware Components	884
Temperature Thresholds	892
Diagnostic Mode	893
Appendix A - Disconnection Causes	896
IP Disconnection Causes	896
ISDN Disconnection Causes	901
Appendix B - Active Alarms	906
Appendix C - CDR Fields Unformatted File	918
The Conference Summary Record	918
Event Records	920
Standard Event Record Fields	920
Event Types	920
Event Specific Fields	921
Disconnection Cause Values	952

Appendix D - Ad Hoc Conferencing and External Database Authentication	956
Ad Hoc Conferencing without Authentication	956
Ad Hoc Conferencing with Authentication	957
Entry Queue Level - Conference Initiation Validation with an External Database Application	958
Conference Access with External Database Authentication	959
Conference Access Validation - All Participants (Always)	960
Conference Access Validation - Chairperson Only (Upon Request)	961
System Settings for Ad Hoc Conferencing and External Database Authentication	962
Ad Hoc Settings	962
Authentication Settings	963
MCU Configuration to Communicate with an External Database Application	963
Enabling External Database Validation for Starting New Ongoing Conferences	964
Enabling External Database Validation for Conferences Access	965
Appendix E - Participant Properties Advanced Channel Information	967
Appendix F - Secure Communication Mode	969
Certificate Configuration and Management	969
Certificate Template Requirements	969
Certificate Requirements	970
Configure Certificate Management	970
Switching to Secure Mode	970
Purchasing and Installing a Certificate	970
Creating/Modifying System Flags	971
Enabling Secure Communication Mode	971
Alternate Management Network	973
Restoring Defaults	973
Appendix G - Configuring Direct Connections to the Collaboration Server	974
Management Network (Primary)	974
Alternate Management Network (2000/4000)	974
Configure the Workstation	974
Connect to the Management Network	978
Connect to the Alternate Management Network (2000/4000)	980
Connect to the Collaboration Server using a Modem (2000/4000)	982
Procedure 1: Install the RMX Manager	982
Procedure 2: Configure the Modem	982
Procedure 3: Create a Dial-up Connection	982
Procedure 4: Connect to the Collaboration Server	987

Appendix H - Deployment Into Microsoft Environments	988
Overview	988
Lync 2013 SVC Connectivity to RealPresence Collaboration Servers	989
Deployment Architectures	989
Single Premise Deployment	989
RealPresence Hosted Conferences	991
RealConnect Cascaded Conferences	992
Remote Premise Deployment - RealConnect via Service Provider	994
Organization Identification	995
Process Guidelines	995
Supported Deployment Topology	996
Backward Compatibility to Lync 2010	997
Video Resource Requirements and Implications	997
Support for HD1080p Resolution	998
Limit Maximum Resolution for MS SVC Using a System flag	998
FEC (Forward Error Correction)	998
IPv6 Support	998
DHCPv6 Support for Auto IPv6 Address Assignment	999
System Flags for Cropping Control	999
Sharing Content During a Conference	1000
RealPresence Polycom® ContentConnect™ Gateway	1000
RealPresence Polycom® ContentConnect™ Plug in	1001
Cisco TIP Support	1004
Lync 2013 Participant Monitoring	1004
Monitoring Participant Properties - Channel Status Tab	1005
Monitoring Participant Properties - Channel Status - Advanced Tab	1006
DNS Load Balancing on Lync Front End Pool	1006
Video Resource Requirement Selection in Lync 2013 AVMCU Cascade	1009
Video Forcing and Changing Layout in Lync 2013 AVMCU Cascade	1010
Handle Low Bit Rate Calls From the AVMCU	1010
Remove Empty Cells From the Video Layout	1010
Initiate and Connect to a Conference	1011
Meet Now Lync Conference	1011
RealConnect for Lync 2013	1012
Cascading Conference Reestablishment Process	1012
Reestablished Cascading Conference Termination	1012
Call Admission Control	1013
Conferencing Behavior	1013
Monitoring Participant Connections	1014
Collaboration Server Chairperson vs. AVMCU Meeting Organizer	1015

Active Alarms and Troubleshooting	1016
Active Alarms	1016
ICE Active Alarms	1017
Troubleshooting	1019
Known Issues	1019
Appendix I - Polycom Open Collaboration Network (POCN)	1020
Collaboration With Cisco's Telepresence Interoperability Protocol (TIP)	1020
Deployment Architectures	1021
Single Company Model - Polycom and Cisco Infrastructure	1021
Call Flows	1025
Multipoint call with DMA	1025
Multipoint call without DMA	1026
Company to Company Models Using a Service Provider	1027
Model 1	1027
Call Flow	1029
Multipoint call via Service Provider - Model 1	1029
Multipoint call via Service Provider - Model 2	1030
Call Flow	1032
Multipoint call via Service Provider - Model 2	1032
Administration	1033
Gatekeepers	1033
Standalone Polycom DMA System as a Gatekeeper	1033
Standalone Cisco IOS Gatekeeper	1033
Neighbored Cisco IOS and Polycom DMA Gatekeeper	1033
CUCM	1033
Configuring the Cisco and Polycom Equipment	1033
Cisco Equipment	1034
CUCM	1034
IOS Gatekeeper	1034
IOS and DMA Gatekeepers (Neighbored)	1034
Polycom Equipment	1034
Configuring the Collaboration Server	1035
Configuring DMA	1035
Configuring Endpoints	1035
Configuring Entry Queues and IVR Services	1036
Guidelines	1036
Content	1036
Procedure 1: Set the MIN_TIP_COMPATIBILITY_LINE_RATE System Flag	1037

Procedure 2: Configuring Collaboration Server to statically route outbound SIP calls to DMA or CUCM	1038
Procedure 3: Configuring the Collaboration Server's H.323 Network Service to register with DMA gatekeeper	1039
Procedure 4: Configuring a TIP Enabled Profile on the Collaboration Server	1040
Content Sharing Behavior	1045
Procedure 5: Configuring an Ad Hoc Entry Queue on the Collaboration Server if DMA is not used	1046
Procedure 6: Configuring a Meeting Room on the Collaboration Server	1046
Procedure 7: Configuring Participant Properties for dial out calls	1046
Collaboration with Microsoft and Cisco	1047
Deployment Architecture:	1048
Call Flow	1051
Multipoint Calls using DMA	1051
Administration	1052
DMA	1052
Microsoft Lync Server	1052
CUCM	1052
Solution Interoperability Table	1052
TIP Layout Support & Resource Usage	1054
Supported TIP Resolutions and Resource Allocation	1054
Supported Resolutions	1054
Resource Allocation	1054
Configuring the Microsoft, Cisco and Polycom Components	1055
Content Sharing Behavior	1060
Encryption	1061
Guidelines	1061
Resolution Configuration	1064
Endpoints	1065
Content	1065
Operations During Ongoing Conferences	1066
Monitoring	1066
CTS Participants	1066
Lync Participants (RTV)	1068
Known Limitations	1069
Appendix J - Restore Defaults	1071
Perform a Standard Restore	1071
Perform a Comprehensive Restore	1073

Appendix K - SIP RFC Support	1077
Appendix L - Media Traffic Shaping	1079
Traffic Shaping Guidelines	1079
System Flags	1079
Capacity Reduction During Traffic Shaping	1080
System Limitation	1080
Appendix M - Homologation for Brazil	1081
H.323 & SIP Protocol Flag Options	1081
H.323 & SIP Flag Settings	1081
Flag name: SIP_TIMERS_SET_INDEX	1081
Flag name: H323_TIMERS_SET_INDEX	1082
Flag name: DISABLE_DUMMY_REGISTRATION	1082

Overview

About RealPresence Collaboration Server (RMX) Administrator Guide

RealPresence Collaboration Server (RMX) Administrator Guide provides instructions for configuring, deploying, and administering Polycom Multipoint Control Units (MCUs) for video conferencing. This guide will help you understand the Polycom video conferencing components, and provides descriptions of all available conferencing features.

This guide will help you perform the following tasks:

- Customize the Collaboration Server conferencing entities such as conference Profiles, IVR Services, Meeting Rooms, Entry Queues, etc., to your organization's needs (optional).
- Define Collaboration Server Users. Further customize the Collaboration Server IP Network Settings for IPv6 environments.
- Further customize the Collaboration Server Network Settings for ISDN networks and IP networks for Ultra Secure Mode environments.
- Define video protocols and resolution configuration for CP conferencing.
- Configure Templates, the Address Book and schedule Reservations (optional).
- Record conferences.
- Configure the Collaboration Server to support special call flows and conferencing requirements, such as Cascading Conferences.
- Configure the Collaboration Server to act as a gateway and manage gateway calls.
- Configure the Collaboration Server to support Polycom third-party and partner environments, such as Microsoft, IBM, Cisco, Avaya, Broadsoft and Siemens.
- Configure the Collaboration Server for special needs by setting various system flags.
- Manage and troubleshoot the Collaboration Server's performance.

The [RealPresence Collaboration Server \(RMX\) 1800/2000/4000 Getting Started Guide](#) provides a description of basic conferencing operations. It will help you perform the following tasks:

- First time installation and configuration, including unpacking, installing, power up and initial setup.
- Selecting a language.
- Starting a conference using default profiles.
- Troubleshooting.
- Using the RMX Web Client

For information about Resource Capacities and other operational specifications, see the [RealPresence® Collaboration Server \(RMX\) Hardware Guide](#) specific to your system.

The [RealPresence Collaboration Server \(RMX\) 1800/2000/4000 Deployment Guide for Maximum Security Environments](#) provides a deployment methodology for system administrators implementing Maximum Security Environments.



Note: Not supported on Collaboration Server (RMX) 1800 with no DSP cards

- Integration into partner and third-party environments (Microsoft, IBM, Cisco, Avaya, Broadsoft, Siemens).
- Gateway functionality.
- Cascading Conferences.

Who Should Read This Guide?

System administrators and network engineers should read this guide to learn how to properly set up Polycom Collaboration Server systems. This guide describes administration-level tasks.

For a detailed description of first time installation and configuration, description of the Collaboration Server (RMX) Web Client, and basic operation of your Collaboration Server system, see *RealPresence Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*.

Prerequisites

This guide assumes the user has the following knowledge:

- Familiarity with Windows® XP or Windows 7 operating systems and interface.
- Familiarity with 32-bit Microsoft® Internet Explorer® Version 7, 8, 9 or 10.
- Basic knowledge of video conferencing concepts and terminology.

How This Guide is Organized

The following typographic conventions are used in this guide to distinguish types of in-text information.

Typographic Conventions

Convention	Description
Bold	Highlights interface items such as menus, soft keys, flag names, and directories. Also used to represent menu selections and text entry to the phone.
<i>Italics</i>	Used to emphasize text, to show example values or inputs, file names and to show titles of reference documents available from the Polycom Support Web site and other reference sites.
<u>Underlined Blue</u>	Used for URL links to external Web pages or documents. If you click on text in this style, you will be linked to an external document or Web page.
Blue Text	Used for cross referenced page numbers in the same or other chapters or documents. If you click on blue text, you will be taken to the referenced section. Also used for cross references. If you click the italic cross reference text, you will be taken to the referenced section.
<variable name>	Indicates a variable for which you must enter information specific to your installation, endpoint, or network. For example, when you see <IP address>, enter the IP address of the described device.
>	Indicates that you need to select an item from a menu. For example, Administration > System Information indicates that you need to select System Information from the Administration menu.

About the RealPresence Collaboration Server System

The RealPresence Collaboration Server system is a high performance, scalable, IP-network (H.323 and SIP) ISDN/PSTN MCU that provides feature-rich and easy-to-use multipoint voice and video conferencing.


The Collaboration Server 2000/4000 meets International Telecommunication Union - Telecommunication Standardization Sector, (ITU-T, formerly CCITT) standards for multipoint multimedia bridging devices, and meets ETSI standards for telecommunication products. In addition, it has been designed in compliance with IETF (Internet Engineering Task Force).

The MCU can be used as a standalone device to run voice and video conferences or it can be used as part of a solution provided by Polycom. This solution may include the following components:

- Polycom® Distributed Media Application™ (DMA™) system - Provides call control and MCU virtualization with carrier-grade redundancy, resiliency and scalability.
Connection to RealPresence DMA MCU Pools and DMA Cascading are not supported on Collaboration Server (RMX) 1800 with no DSP cards.
- Polycom RealPresence Resource Manager - Centrally manages, monitors and delivers Cloud based Video as a Service (VaaS) and enterprise video collaboration.
- Polycom® RealPresence® Access Director™ - Removes communication barriers and enables internal and external teams to collaborate more easily and effectively over video.
- Polycom® RealPresence® Media Suite - Provides one-touch recording and secure playback on telepresence and video conferencing systems, tablets and smart phones, or from your Web browser.

The following diagram describes the multipoint video conferencing configuration with the Collaboration Server as a standalone system.

Multipoint Video Conferencing using a RealPresence Collaboration Server (RMX) 1800/2000/4000

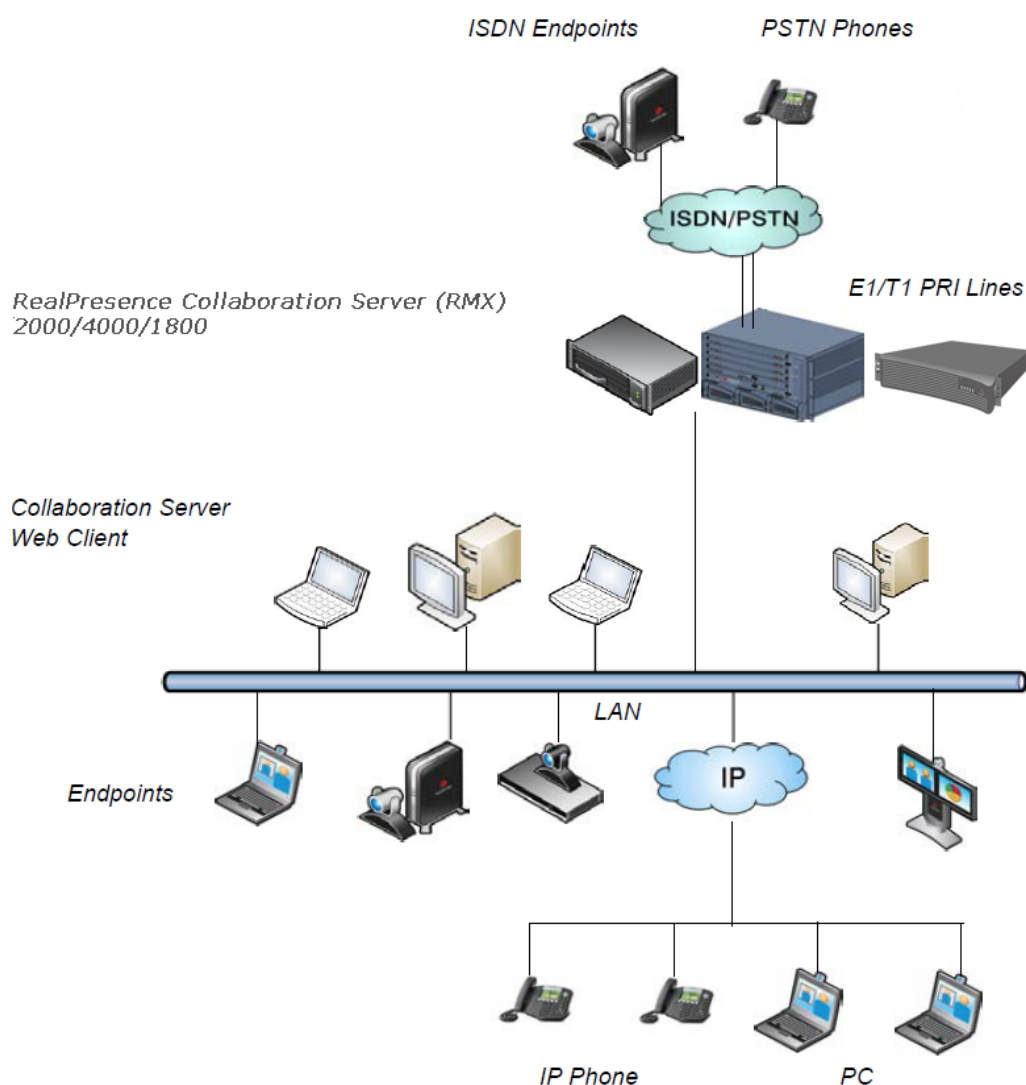

The RealPresence Collaboration Server system can be controlled via the LAN by the Collaboration Server Web Client application using Internet Explorer installed on the user's workstation or the RMX Manager application. The RMX Manager can control several MCU units. For more information about the RMX Manager, see [RMX Manager Application](#).

Network Services Guidelines

IP Networks

In Collaboration Server 2000 system management and IP conferencing are performed via a single LAN port. In Collaboration Server 1800/4000 system management and IP conferencing are performed on separate LAN ports.

In Collaboration Server 2000/4000 the networks can be separated in Maximum Security Environments.

ISDN Networks

RealPresence Collaboration Server (RMX) 1800 with 3 DSP cards with built-in ISDN module, supports one ISDN card with up to 4 E1/T1 PRI lines.

RealPresence Collaboration Server (RMX) 2000/4000 support a maximum of two RTM ISDN cards, each providing connection for up to either 7 E1 or 9 T1 PRI lines.

On all Collaboration Servers, E1 and T1 connections cannot be used simultaneously.

RealPresence Collaboration Server (RMX) 1800 with no DSP cards does not support ISDN/PSTN connections.

For more detailed information about Collaboration Server abilities, see [Hardware Description](#) in the *RealPresence Collaboration Server (RMX) Hardware Guides*.

Card Configuration Modes



Note: Media Cards

This section is applicable only for MCUs with MPM media card(s), meaning Collaboration Servers 2000/4000 only.

The media card installed in the system determines the Card Configuration Mode. The Card Configuration Mode represents different generations of the media card. Each new generation provides additional functionality, higher video resolutions and higher resource capacity.


Only one Media Card type can be installed in any Collaboration Server, which sets the Card Configuration Mode for that Collaboration Server.

Viewing the Card Configuration Mode

The Card Configuration Mode is determined according to the installed media card.

The Licensing Mode and the Card Configuration Mode for your MCU can be viewed in the System Information dialog box (**Administration > System Information**).

In the example shown here, the Card Configuration Mode is MPMRx.

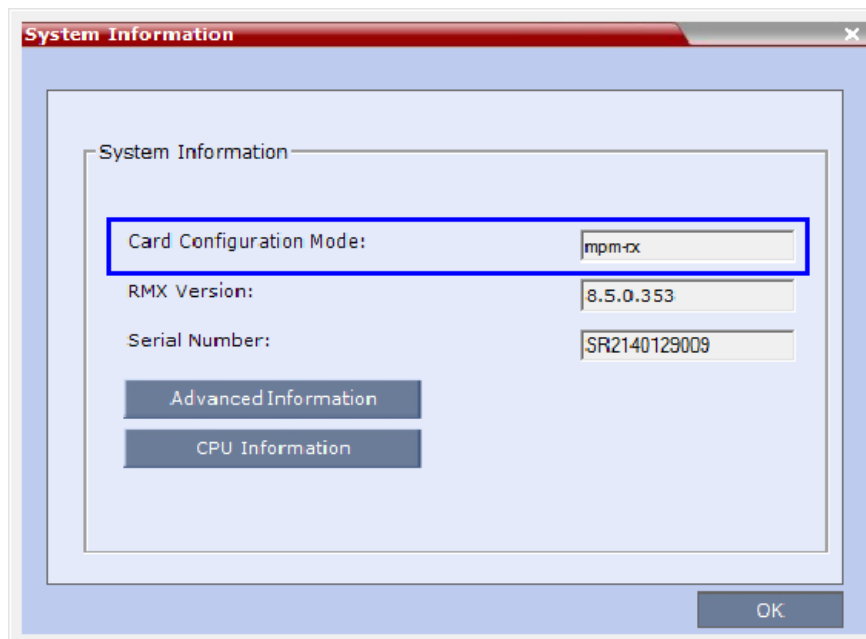

RealPresence Collaboration Server Supported Features

Features Supported in RealPresence Collaboration Server

Feature Name	Description
Scalable Video Coding (SVC)	Scalable Video Coding (SVC) Conferencing, based on the SVC video protocol and SAC audio protocol. SVC Conferencing offers high resolution video conferencing with low end-to-end latency, improved Error Resiliency and higher system capacities.
w448 Resolution support	Improves interoperability with Tandberg MXP 990/3000 endpoints providing these endpoints the resolution of W448p (768x448 pixels) at 25fps.
HD H.264 Content and H.264 Content for Cascading links	Enables conference participants to receive higher quality Content in both standard conferences and cascaded conferences.
Site Names	Additional controls over the display of site names in the conference Profile.
Interactive Video Forcing	Participants in ongoing conferences can be interactively forced to a Video Window in the conference layout by using Drag and Drop.
Video Preview	H.264 High Profile is supported with Video Preview.
Recording indication	A Recording Indication can be displayed to all conference participants informing them that the conference is being recorded. Note: Only in non-TIP conferences.

Features Supported in RealPresence Collaboration Server

Feature Name	Description
Network Quality Indication	A Network Quality Indicator is displayed for each participant in the CP layout indicating the quality of the participants' video channels. Note: Only in non-TIP conferences.
Auto scan and Customized Polling	A single cell in the conference layout is used to cycle the display of participants that are not in the conference layout. The order of the cyclic display can be predefined.
SirenLPR	Prevents audio degradation and maintains high audio (CD) quality if packet loss occurs.
Speaker Change Threshold	The option to configure the amount of time a participant must speak continuously until becoming the speaker.
Integration with Cisco Telepresence Systems (CTS)	The MCU natively inter-operate with Cisco TelePresence Systems and Polycom TelePresence and vide conferencing endpoints, ensuring optimum quality multi-screen, multipoint calls. Telepresence Mode is not supported by Collaboration Server (RMX) 1800 with no DSP cards.
POCN - Collaboration with Microsoft and Cisco in the same environment	The POCN solution, enables Polycom, Microsoft and Cisco users, each within their own environment, to participate in the same conference running on a Collaboration Server.
Additional Chinese Font Types	Additional Chinese fonts may be selected for several features when using the Collaboration Server in Chinese.
Support for Microsoft Protocols, algorithms and workflows	
RTV Video Protocol	Microsoft RTV Video protocol is supported.
RTV B-Frame Support	B-frame encoding and decoding are supported to enhance the viewing experience of Microsoft Lync clients. It provides higher video quality at the same bit-rate with better scalability on the decoder side.
Conferencing Entities Presence in Microsoft Office Communications Server Client or Lync Server Client	Registration & Presence enables the OCS or LYNC client users to see the availability status (Available, Busy or Offline) of Meeting Rooms, Entry Queues and SIP Factories and connect to them directly from the buddy list.
Cascading between Collaboration Server Meeting room / Microsoft A/V MCU	Microsoft Lync users can connect a <i>Collaboration Server Meeting Room</i> to a conference running on the Microsoft A/V MCU. Microsoft Lync is not supported by Collaboration Server (RMX) 1800 with no DSP cards.
FEC Support	Support of Microsoft RTV FEC (Forward Error Correction) that controls and correct packet loss when receiving and sending video streams using the Microsoft Lync Server 2010.
ICE Over TCP	Enables the automatic usage of the ICE connection through the TCP port instead of UDP when the UDP port in the firewall is blocked.

Features Supported in RealPresence Collaboration Server

Feature Name	Description
Media Over TCP	Media is automatically transmitted using TCP when UDP, the default transport protocol, is not available.
Error Recovery	The Collaboration Server can automatically recover from short duration network errors (5 seconds), enabling calls in Microsoft Lync to continue video or audio conferences without disconnecting.

The RMX Web Client and RMX Manager applications can be installed in an environment that meets the following requirements:

- Minimum Hardware – Intel® Pentium® III, 1 GHz or higher, 1024 MB RAM, 500 MB free disk space.
- Workstation Operating System – Microsoft® Windows® XP, Windows® 7, and Windows® 8.
- Network Card – 10/100/1000 Mbps.
- Web Browser - Microsoft® Internet Explorer® Version 7, 8, 9, and 10.
- Collaboration Server Web client and RMX Manager are optimized for display at a resolution of 1280 x 800 pixels and a magnification of 100%

The following table lists the environments (Web Browsers and Operating Systems) with which the *Collaboration Server Web Client* and *RMX Manager* applications are supported.


Collaboration Server Web Client/RMX Manager Environment Interoperability Table

Web Browser	Operating System
Internet Explorer 7	Windows Vista™
	Windows 7
Internet Explorer 8	Windows 7
Internet Explorer 9	Windows 7 and Windows 8
Internet Explorer 10*	Windows 8

Software Prerequisites and Guidelines

- .Net Framework 3.5 SP1 is required and installed automatically. Internet Explorer must be enabled to allow running Signed ActiveX.
If ActiveX installation is blocked, see the [ActiveX Bypass](#).
- Collaboration Server Web Client does not support larger Windows text or font sizes. It is recommended to set the text size to 100% (default) or Normal in the Display settings in Windows Control Panel on all workstations. Otherwise, some dialog boxes might not appear properly aligned. To change the text size, select **Control Panel > Display**. For Windows XP, click the **Appearance** tab, select **Normal** for the Font size, and click **OK**. For Windows 7, click the **Smaller - 100%** option, and click **OK**.
- When installing the *Collaboration Server* Web Client, Windows Explorer **>Internet Options> Security Settings** must be set to **Medium** or less.
- It is not recommended to run RMX Web Client and Polycom CMAD applications simultaneously on the same workstation.

- If you have problems getting the Collaboration Server Web Client to work with Windows 8, it is recommended to run Internet Explorer as an administrator by holding the shift key and right-clicking on the IE icon, and then select **Run as Administrator**.

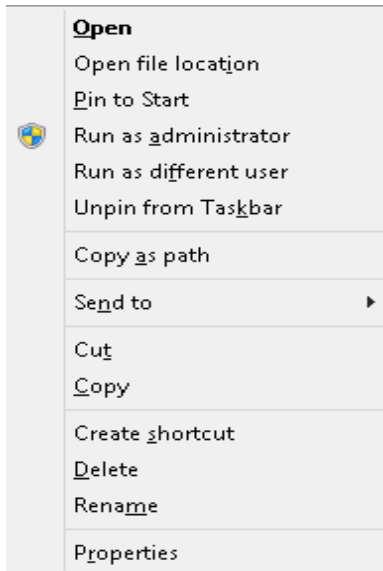

For Windows 7™ Security Settings and Internet Explorer 8 configuration, refer to Windows 7™ Security Settings and Internet Explorer 8 configuration sections in *RealPresence Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*.

Conferencing Modes Overview

The MCU system offers the following types of conferences (Conferencing Modes), based on the video protocol and the video display during the conference:

- AVC-based Conferencing - CP Only (Video Transcoding)
- AVC-based Conferencing - Video Switching
- SVC-based Conferencing (Media Relay) - SVC Only
- Mixed AVC and SVC Conferencing - CP and SVC



Note: Resource Capacities and Operational Specifications

For information about Resource Capacities and other operational specifications, see the *RealPresence® Collaboration Server (RMX) Hardware Guide* specific to your system.

AVC Conferencing

AVC-based Conferences allow endpoints that support AVC video to connect to these conferences. AVC (Advanced Video Coding) video refers to the H.264 video protocols used to send and receive video. On the Collaboration Server system it also includes all the standard video protocols such as H.261, H.263, and RTV.

All endpoints (including SVC-enabled endpoints) have AVC capabilities and can connect to AVC conferences running on the MCU. AVC-based endpoints can connect using different signaling protocols and different video protocols.

Based on the video processing required during the conference, the Collaboration Server offers the Continuous Presence Conferencing Mode for AVC-based conferencing.

The MCU also offers the Video Switching conferencing Mode.

The Conferencing Mode determines the video display options (full screen or split screen with all participants viewed simultaneously) and the method in which the video is processed by the MCU (with or without using the MCU's video resources).

Continuous Presence (CP) Conferencing

The dynamic Continuous Presence (CP) capability of the Collaboration Server system enables viewing flexibility by offering multiple viewing options and window layouts for video conferencing. It enables several participants to be viewed simultaneously and each connected endpoint uses its highest video, audio and data capabilities up to the maximum line rate set for the conference.

AVC-based endpoints can connect to the conference using any:

- Signaling protocol: H.323, SIP, ISDN/PSTN and RTV line rate, up to a maximum line rate defined for the conference
- Video Protocol: H.261, H.263, H.264 Base Profile and H.264 High Profile) and at any resolution and frame rate, provided they meet the minimum requirements set for the conference:
 - Video Resolutions: from QCIF, CIF and up to 1080p60

- Frame rates up to 60fps


In Continuous Presence conferences, the MCU receives the video stream from each endpoint at the video rate, video resolution and frame rate that it is capable of sending, and it superimposes all the received streams into one video stream that includes the input from the other endpoints arranged in the selected video layout.

Participants do not see themselves in the video layout. By Default, the speaker is shown in the top left layout cell in symmetric layouts, in the larger cell in asymmetric layouts, or in full screen. The speaker sees the previous speakers (their number depends on the number of cells on the speaker's layout).

The Continuous Presence video session offers layouts to accommodate different numbers of participants and conference settings including support of the VUI annex to the H.264 protocol for endpoints that transmit wide video instead of 4CIF resolution. Each participant can select his/her layout for viewing during the conference, as can be seen in [AVC Continuous Presence \(CP\) video streams and built layouts](#).

For conferences with more participants than display squares, the RealPresence Collaboration Server dynamic video mix capability allows the viewed sites to be modified throughout the conference. The displayed layout can be changed during an ongoing conference, allowing a participant to view different screen layouts of the other conference participants. These layout options allow conferences to have greater flexibility when displaying a large number of participants and maximizes the screen's effectiveness.

AVC Continuous Presence (CP) video streams and built layouts

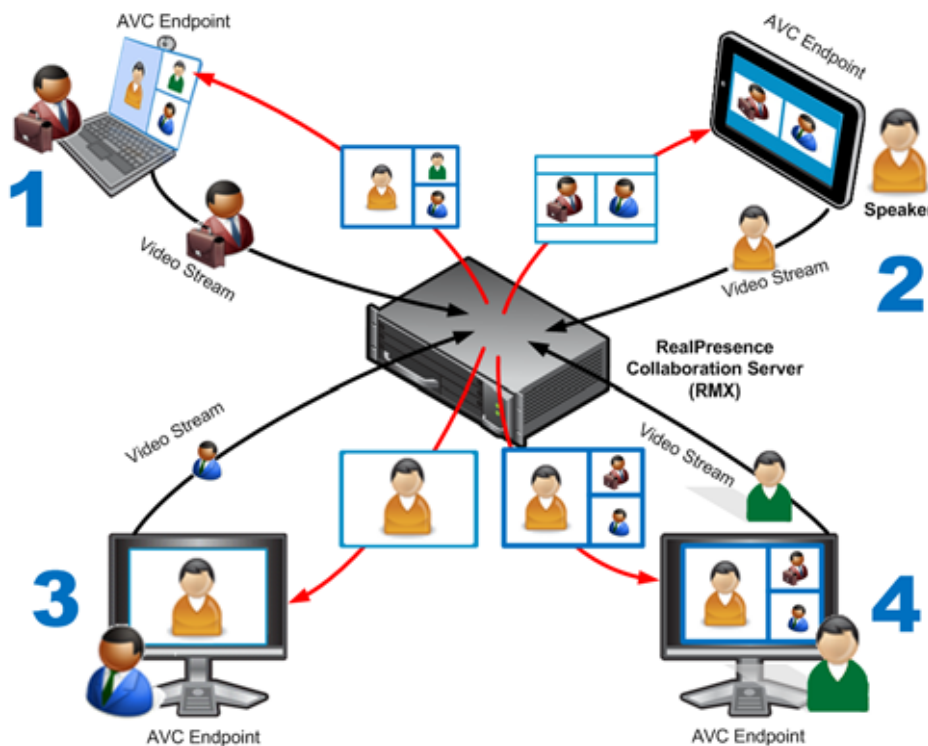

Video quality in Continuous Presence conferences is affected by the conference line rate (that determines the maximum line rate to be used by the connecting endpoints), and the video capabilities of the endpoints

such as the video protocol, video resolution and frame rate. Content sharing is available in all CP conferences.

This requires extensive processing of the video sent to each participant in the conference. The higher the video rate and resolution, the more processing power is required.

By default every conference, Entry Queue and Meeting Room has the ability to declare the maximum CP resolution as defined for the system. This includes conferences launched by the Collaboration Server Web Client and conferences started via the API.

CP conferencing is defined in the Conference profile by setting the following main features:

- Setting the Conferencing Mode to CP only
- Conference Line Rate
- Video Quality – Motion or Sharpness
- Video Layout

Video Protocol Support in CP Conferences

The video protocol selected by the system determines the video compression standard used by the endpoints. In Continuous Presence conferences, the system selects the best video protocol for each of the endpoint according to the endpoint's capabilities.


The following Video protocols are supported in CP conferences:

- **H.261** - The legacy video compression algorithm mandatory to all endpoints. It is used by endpoints that do not support other protocols.
- **H.263** - A video compression algorithm that provides a better video quality than H.261. This standard is not supported by all endpoints.
- **H.264 Base Profile** - A video compression standard that offers improved video quality, especially at line rates lower than 384 Kbps.
H.264 High Profile - Allows higher quality video to be transmitted at lower line rates.
- **RTV** - A video protocol that provides high quality video conferencing capability to Microsoft OCS (Office Communicator Server) endpoints at resolutions up to HD720p30. (SIP only).

Video Switching (VSW) Conferencing

In Video Switching mode all participants see the same video picture (full screen). The current speaker is displayed in full screen on all the participants' endpoints, while the speaker sees the previous speaker. Switching between participants is voice-activated; whenever a participant starts to speak, he or she becomes the conference speaker and is viewed on all screens. All conference participants must use the same line rate and video parameters such as video protocol, frame rate, annexes and interlaced video mode as no video processing is performed. Endpoints that are unable to meet these requirements connect as Secondary (audio only).

AVC Video Switching (VSW) video streams and Full Screen Layout

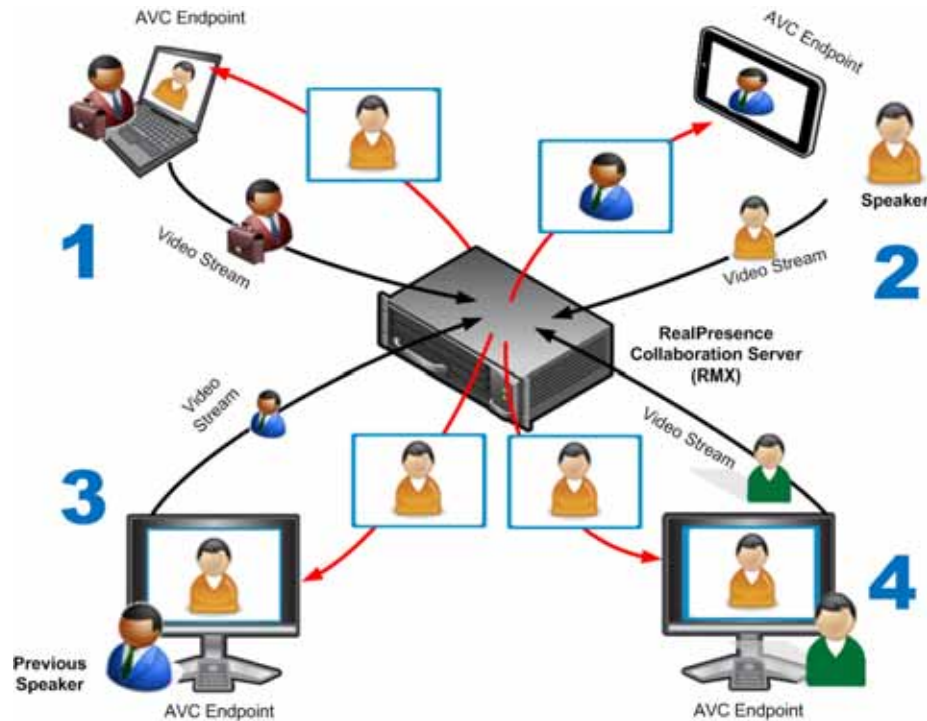

Video Switching (VSW) Conferencing Guidelines

You can run VSW conferences according to the following the guidelines:

- Video Switching conferences can be set to one of the following resolutions, depending on the capabilities of the endpoints connecting to the conference:
 - H.264 1080p60 (Symmetrically, at bit rates of up to 6Mbps).
 - HD1080p60
 - H.264 1080p30
 - H.264 720p30
 - H.264 720p60
 - H.264 SD 30
 - H.264 CIF
 - H.263 CIF
 - H.261 CIF
- Both H.264 Base and High Profile video protocols are supported.
- Video Switching conferencing mode is unavailable to ISDN participants.
- Video Switching uses fewer system resources than CP: only one CIF video resource per participant for any resolution (including HD).

- The display aspect ratio is 4x3 or 16x9.
- Site (endpoint) names, skins, message overlay etc. are not supported in Video Switching.
- Video forcing is enabled at the conference and participant levels.
- To connect to a Video Switching conference via Entry Queue, the Profile assigned to the Entry Queue must be set to Video Switching. It is recommended to use the same profile for both the destination conference and Entry Queue.
- Telepresence Mode is unavailable in Video Switching conferences.
- In RealPresence Collaboration Server (RMX) 2000/4000 with MPMRx media cards, each participant connecting to a VSW conference consumes one HD720 port.
- The HD_THRESHOLD_BITRATE flag must be set in the System Configuration. The value of this flag is the system minimum threshold bit rate for HD resolutions. The line rate selected in the conference Profile must be the same as or higher than that specified by the HD_THRESHOLD_BITRATE flag.



Note: Threshold bit rate

The HD_THRESHOLD_BIT RATE flag is responsible for negotiation only, It does not guarantee that the endpoint will open an HD channel or transmit on an opened HD channel.

The HD_THRESHOLD_BITRATE flag line rate value ranges from 384kbps to 4Mbps, default is 768kbps. For more information, see [Modifying System Flags](#).

AVC Basic Conferencing Parameters

The main parameters that define the quality of an AVC-based video conference and its display are:

- **Line (Bit) Rate** - The transfer rate of video and audio streams. The higher the line (bit) rate, the better the video quality. The MCU supports the following line rates:
 - Collaboration Server 2000/4000 with MPMRx card - 64kbps to 6144kbps
 - Collaboration Server 1800 - 64kbps to 6144kbps
- **Audio Algorithm** - The audio compression algorithm determines the quality of the conference audio.
- **Video protocol, video format, frame rate, annexes, and interlaced video mode** - These parameters define the quality of the video images. The RealPresence Collaboration Server will send video at the best possible resolution supported by endpoints regardless of the resolution received from the endpoints.
 - When Sharpness is selected as the Video Quality setting in the Conference Profile, the RealPresence Collaboration Server will send 4CIF (H.263) at 15fps instead of CIF (H.264) at 30fps.
 - H.264 High Profile protocol provides better compression of video images in line rates lower than 384 Kbps and it will be automatically selected for the endpoint if it supports H.264 High Profile. If the endpoint does not support H.264 High Profile, the RealPresence Collaboration Server will try H.264 Base Profile which provides good compression of video images in line rates lower than 384 Kbps (better than H.263 and not as good as H.264 High Profile).
 - When working with RealPresence Collaboration Servers at low bit rates (128, 256, or 384Kbps), HDX endpoints will transmit SD15 resolution instead of 2CIF resolution.

When using a full screen (1x1) conference layout, the RealPresence Collaboration Server transmits the same resolution it receives from the endpoint.

- **Video resolution:**

- **H.261 CIF/QCIF** – Supported in Continuous Presence (CP) conferences at resolutions of 288 x 352 pixels (CIF) and 144 x 176 pixels (QCIF). Both resolutions are supported at frame rates of up to 30 frames per second.
- **H.263 4CIF** - A high video resolution available to H.263 endpoints that do not support H.264. It is only supported for conferences in which the video quality is set to sharpness and for lines rates of 384kbps to 1920kbps.
- **Standard Definition (SD)** - A high quality video protocol which uses the H.264 and H.264 High Profile video algorithms. It enables compliant endpoints to connect to Continuous Presence conferences at resolutions of 720 x 576 pixels for PAL systems and 720 x 480 pixels for NTSC systems.
- **High Definition (HD)** – HD is an ultra-high quality video resolution that uses the H.264 and H.264 High Profile video algorithms. Depending on the RealPresence Collaboration Server's type, compliant endpoints are able to connect to conferences at the following resolutions:
 - ◆ **720p** - 1280 x 720 pixels
 - ◆ **1080p** - 1920 x 1080 pixels
- **Lost Packet Recovery (LPR)** - LPR creates additional packets that contain recovery information used to reconstruct packets that are lost during transmission.

Supplemental Conferencing Features

In addition to basic parameters that determine the quality of the video, additional features can be enabled, adding capabilities to the conference, or enabling special conferencing modes:

- **Content Sharing (H.239)** – Allows compliant endpoints to transmit and receive two simultaneous streams of conference data to enable Content sharing. H.239 is also supported in cascading conferences. Both H.263 and H.264 Content sharing protocols are supported. If all endpoints connected to the conference have H.264 capability, Content is shared using H.264, otherwise Content is shared using H.263.
For more information, see [Sharing Content During Conferences](#).
- **Video Clarity (CP Conferences only)** - Video Clarity applies video enhancing algorithms to incoming video streams of resolutions up to and including SD.
Video Clarity is not supported by Collaboration Server (RMX) 1800 with no DSP cards.
- **Encryption** – Used to enhance media security at conference and participant levels.
For more information, see [Implementing Media Encryption for Secured Conferencing](#).
- **Conference Recording and Webcasting** - The Collaboration Server enables audio and video recording, streaming, and webcasting of conferences using the Polycom® RealPresence® Media Suite.
- **Lecture Mode (CP Conferences only)** – The lecturer is seen by all participants in full screen while the lecturer views all conference participants in the selected video layout.
For more information, see [Lecture Mode](#).
- **Presentation Mode (CP Conferences only)** – When the current speaker's speech exceeds a predefined time (30 seconds), the conference layout automatically changes to full screen, displaying the current speaker as the conference lecturer on all the participants' endpoints. During this time the speaker's endpoint displays the previous conference layout. When another participant starts talking, the Presentation Mode is cancelled and the conference returns to its predefined video layout. Presentation mode is available with Auto Layout and Same Layout.

- If the speaker in a video conference is an Audio Only participant, the Presentation Mode is disabled for that participant.
- Video forcing works in the same way as in Lecture Mode when Presentation Mode is activated, that is, forcing is only enabled at the conference level, and it only applies to the video layout viewed by the lecturer.
- **Telepresence Mode (CP Conferences only)** - Enables the connection of numerous high definition telepresence rooms and of different models (such as TPX and RPX) into one conference maintaining the telepresence experience. This mode is enabled by a special license.
Telepresence Mode is not supported by Collaboration Server (RMX) 1800 with no DSP cards.
- **TIP Support (CP Conferences only)** - TIP is a proprietary protocol created by Cisco for deployment in Cisco TelePresence systems (CTS). Polycom's solution is to allow the Collaboration Server to natively inter-operate with Cisco TelePresence Systems, ensuring optimum quality multi-screen, multipoint calls.

SVC-based Conferencing


The SVC-Based conferencing mode provides video without transcoding by the MCU, hence requiring less video resources while providing better error resiliency and lower latency.

Using the SVC video protocol, SVC conferences provide video bit streams at different resolutions, frame rates and line rates to SVC-enabled endpoints with various display capabilities and layout configurations.

In the SVC-based conference, each SVC-enabled endpoint transmits multiple bit streams, called simulcasting, to the RealPresence® Collaboration Server. Simulcasting enables each endpoint to transmit at different resolutions and frame rates such as 720p at 30fps, 15fps, and 7.5fps, 360p at 15fps and 7.5fps, and 180p at 7.5fps.

The Polycom SVC-enabled endpoints (such as Polycom® RealPresence® Desktop and Polycom® RealPresence® Mobile) compose the layout according to their layout settings and video capabilities. This enables the MCU to send or relay the selected video streams to each endpoint without processing the video streams and sending the composite video layout to the endpoints.

SVC video streams and Layouts

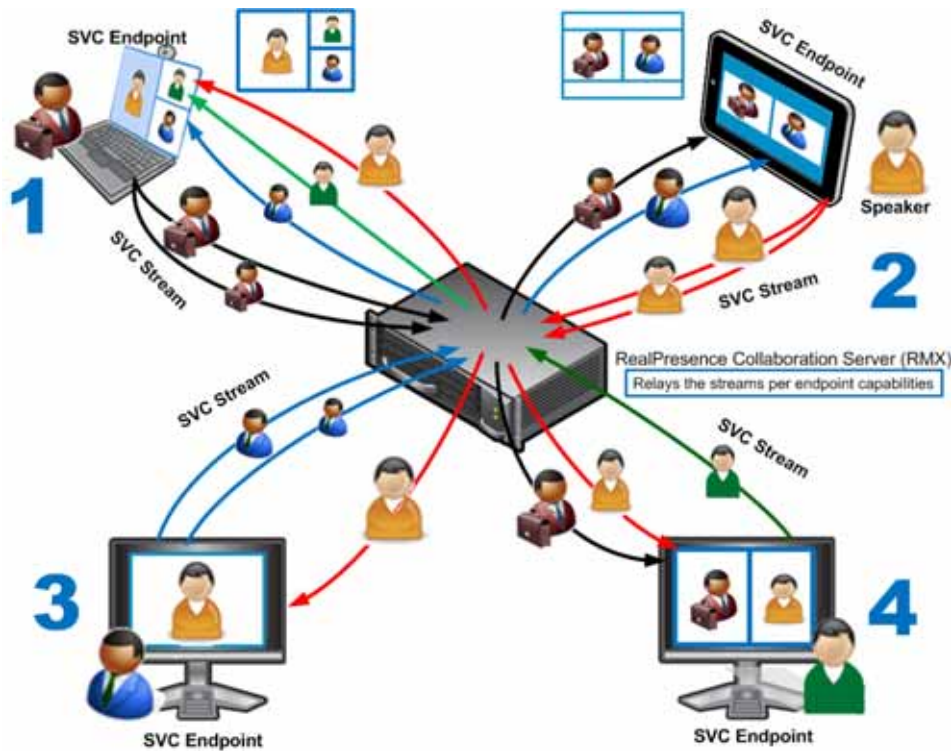

The video streams displayed in the conference layout on each endpoint is obtained from the different streams received from each of the endpoints displayed in the layout. Depending on the size of the video cell in the configured layout, the endpoint requests the video stream in the required resolution from the RealPresence Collaboration Server. The higher the display quality and size, the higher the requested resolution will be sent to the endpoint. The endpoint creates the displayed layout from the different video streams it receives.

For instance, an SVC endpoint might want to receive three video streams at different frame rates and resolutions, and create a conference layout with the received video streams. Each SVC-enabled endpoint sends encoded SVC bit streams to the MCU to relay to the other SVC-enabled endpoints in the conference.

The endpoints encode the video in multiple resolutions and decodes the multiple video input streams.

For example:

RealPresence mobile client (2) will transmit two resolutions; one that is suited for RealPresence Desktop client (3) and a second that is suited for two other endpoints: RealPresence Desktop client (4) and (1).

RealPresence Desktop client (1) transmits two resolutions; one that is suited for RealPresence Mobile client (2) and a second that is suited for RealPresence Desktop client (4).

The MCU determines which of the incoming resolutions to send to each endpoint. It does not perform any SVC encoding and decoding, or any transcoding of the video streams. The RealPresence Collaboration Server functions as the multipoint media relay to the endpoints. For voice activated selection of the video streams, the RealPresence Collaboration Server determines which of the incoming bit streams to send to each endpoint.

Advantages of SVC Conferencing

SVC increases the scalability of video networks and enables mass desktop video deployments. Some of the advantages of SVC conferencing are:

- Offers high-resolution video conferencing with low end-to-end latency, improved error resiliency and higher system capacities.
- Allows the SVC-enabled video endpoints to manage display layouts, supporting multiple line rates, resolutions and frame rates.
- The RealPresence Collaboration Server functions as a media relay server providing low cost production benefits. The RealPresence Collaboration Server reduces bandwidth usage by only selecting the necessary video stream to be sent to the endpoints.

SVC Conferencing Guidelines

You can run SVC-based conferences when following the guidelines listed below.

- SVC conferences are supported only with the following:
 - SVC Licensing
 - SIP over UDP signaling
 - SIP over TLS Signaling
 - Polycom SVC-enabled endpoints (Polycom® RealPresence® Desktop, Polycom® RealPresence® Mobile)
 - Ad Hoc conferencing via Meeting Rooms and ongoing conferences
- SVC Only conferences can run on the same MCU as AVC Only conferences.
- On RealPresence Collaboration Server (RMX) 2000/4000, all the endpoints participating in a single SVC Only conference must be connected to the same media card and cannot be handled by different media cards as the SVC media streams cannot be shared between them.
- End-to-end latency on a local network (same site), is around 200msec to ensure AV sync (also known as Lip-sync).
- Dial-out is not available in SVC Only conference.
- Dial-in is available as follows:
 - AVC endpoints (participants) can only connect to an AVC conference or Mixed CP and SVC conference. When dialing into SVC Only conferences they will be disconnected and the calls fail.
 - SVC endpoints support both AVC and SVC video protocols:
 - ◆ When dialing into SVC Only conferences, they connect as SVC endpoints.
 - ◆ When dialing into AVC Only conferences, they connect as AVC endpoints. They cannot connect to an AVC conference using the SVC capabilities.
- SVC endpoints can connect to conferences via Entry Queues, however:
 - The Entry Queue and Conference Modes must match - both SVC Only or both Mixed.
 - Both the Entry Queue and the Conference must have the same line rate.
- SVC endpoints cannot be moved between conferences.
- Content is supported in H.264 (AVC).
 - Only the H.264 Cascade and SVC Optimized option is supported.
 - LPR and DBA are not supported for SVC content sharing.

- In SVC Only conferences and Mixed CP and SVC conferences, Auto Layout is the default and the layout display for SVC endpoints is controlled from the endpoint application.
- Site names display on SVC endpoints is controlled from the SVC endpoints.
- When Hot backup is enabled, all the conferences are created on the Slave MCU. Hot Backup is not supported by Collaboration Server (RMX) 1800 with no DSP cards.
- When Hot Backup is activated and the Slave MCU becomes the Master MCU:
 - All AVC endpoints will be reconnected to the AVC (CP and VSW) conferences. SVC endpoints connected to AVC conferences using their AVC capabilities will be reconnected to their AVC conferences.
 - SVC endpoints cannot be reconnected to their SVC Only conferences as dial-out is not supported for SVC endpoints. These endpoints will have to manually reconnect to their SVC conferences.
- Cascading between SVC Only conferences or between AVC and SVC Only conferences is not supported.
- Gateway sessions are not supported for SVC calls.
- Reservations cannot be scheduled for SVC Only conferences.
- The following functionality and features are not supported during SVC Only conferences:
 - FECC
 - Skins. The video cells are displayed on the endpoint's default background.
 - IVR functionality
 - Conference Gathering phase
 - All DTMF enabled features during the conference
 - Manual selection of video layout
 - Chairperson functionality
 - Media Encryption
 - Recording of SVC Only conferences
 - Text messaging using Message Overlay

MCU Supported Resolutions for SVC Conferencing

The MCU automatically selects the resolution and frame rate according to the conference line rate. The table below details the maximum resolution and frame rates supported by the MCU for each conference line rate. The actual video rate, resolution and frame rates displayed on each endpoints is determined by the endpoint's capabilities.

SVC Conferencing - Maximum Supported Resolutions per Simulcast Stream

Conference Line Rate (kbps)	Profile	Maximum Resolution	Max. Frame Rate (fps)	Audio Rate (kbps)
2048 - 4096	High Profile	1080p	30fps	48
1472 - 2048	High Profile	720p	30fps	48
1024 - 1472	High Profile	720p	15fps	48
768 - 1024	High Profile	720p	15fps	48

SVC Conferencing - Maximum Supported Resolutions per Simulcast Stream


Conference Line Rate (kbps)	Profile	Maximum Resolution	Max. Frame Rate (fps)	Audio Rate (kbps)
512 - 768	High Profile	360p	30fps	48
256 - 512	Base Profile	180p	15fps	48
192 - 256	Base Profile	180p	30fps	48
128 - 192	Base Profile	180p	15fps	48

Mixed CP and SVC Conferencing

In a mixed CP (AVC) and SVC conference, AVC-based endpoints and SVC-enabled endpoints can be supported in the same conference.

In a mixed CP (AVC) and SVC conference, SVC endpoints transmit multiple resolutions and temporal layers to the RealPresence Collaboration Server like the SVC-based conferences, while AVC endpoints, for example, send only one AVC video stream to the Collaboration Server. AVC endpoints can send different video protocols, such as H.263, and H.264. The Collaboration Server relays SVC-encoded video bit streams to the SVC-enabled endpoints in the conference according to their request. This enables the video conference layouts to be automatically assembled by the endpoint. AVC endpoints connected to the conference send a single AVC video bit stream to the Collaboration Server, which is then transcoded to SVC video streams. SVC-enabled endpoints receive the AVC converted video bit streams through the Collaboration Server from the AVC endpoints as a single SVC video bit stream. Alternatively, AVC endpoints receive a single video bit stream with the defined video conference layout from the Collaboration Server.

The following diagram illustrates an example of a mixed CP and SVC conferencing mode:

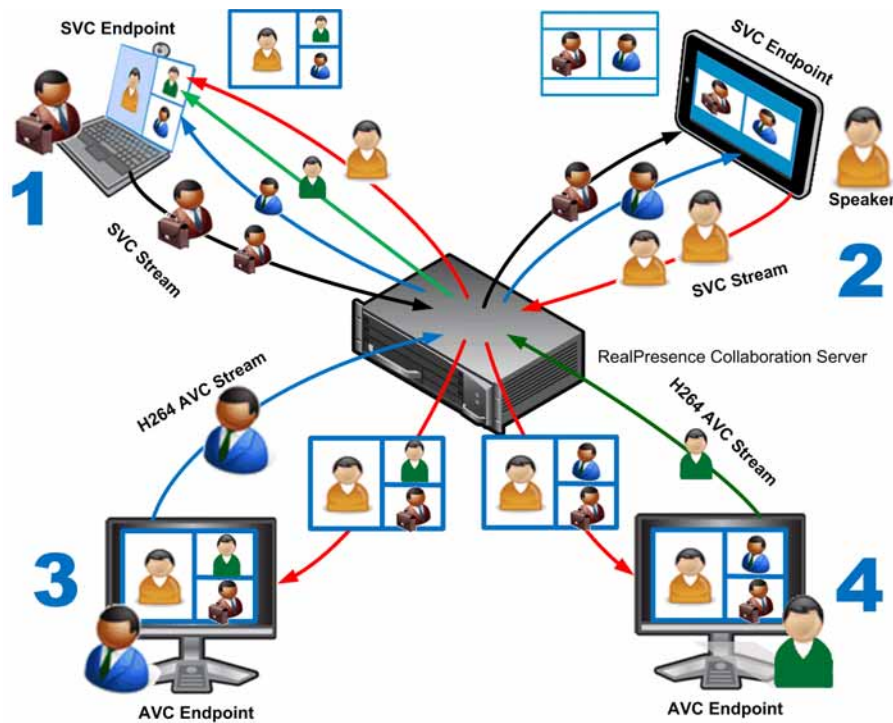

In this example, an SVC endpoint (1) receives three video streams at different frame rates and resolutions, and creates the conference layout with the received video streams. The video bit stream that the SVC endpoint receives from the AVC endpoint (3) is decoded in the Collaboration Server and then encoded into an SVC bit stream in the required resolution.

Alternatively, an AVC endpoint (4) sends a single resolution video stream to the Collaboration Server. The Collaboration Server first decodes the SVC bit streams and AVC bit streams, then the Collaboration Server composes the video layout for the AVC endpoint and sends a single resolution video stream with the video layout to the participant. In the displayed example, the Collaboration Server creates different video layouts for each AVC endpoint.



Note: DMA configuration

When a DMA system is part of the solution, both dial-in and dial-out, should originate from the DMA. SVC endpoints receive a participant count from the DMA in order to decide on layout and how many media streams they wish to receive. If participants are dialed out from the conference, the call flow is not routed through the DMA resulting in the participant count and layout information not being received.

MCU Resource Capacities for Mixed CP and SVC Conferences

In a mixed CP and SVC conference, video resources are allocated according to the MCU type and the translation pools (AVC to SVC and SVC to AVC) used to convert video streams. Translation pools are dynamically allocated, when the conference becomes a mixed CP and SVC conference; resources are not released when the conference stops being a mixed CP and SVC conference. The translation pools send one SVC to AVC stream with a resolution of 360p, two AVC to SVC streams with a resolution of 360p and 180p for AVC HD endpoints, and one video stream with a resolution of 180p for AVC SD endpoints. When a video stream with a resolution of 360p is not available, a video stream with a resolution of 180p is sent instead.

Translations between different endpoints can be done without using the highest resolution, thus saving translation resources. CP video layouts in mixed CP and SVC conferences support the standard resolutions as in normal CP conferences.

Taking these factors into consideration and the type of MCU deployed in the environment, the resource capacities for a mixed CP and SVC conference can vary.



Note: Resource Units

System Resources are now reported in terms of HD720p30 CP ports. One HD video port equals 3 CIF video ports.

For information on resource capacity allocations for the RealPresence Collaboration Server see [Resource Capacities for Full Capacity Collaboration Server per Resolution in Mixed CP and SVC Conferencing](#).

In a mixed CP and SVC conference, video resources are used according to the amount of both AVC and SVC participants in the conference and according to the actual type of the conference - mixed CP and SVC conferences or CP only conferences. The ratio of resources in a mixed conference is one AVC HD (720p30) video resource to three SVC video resources, meaning for each AVC HD video resource, three SVC video resources can be allocated.

Using Conference Profiles

Conference Profiles include conference parameters such as Conferencing Mode, conference line rate, video and content sharing resolutions and settings, video layout, encryption, Lost Packet Recovery (LPR), etc. Profiles eliminate the need to define these parameters for each new conference created on the MCU. They are stored on the Collaboration Server and they enable you to define all types of conferences.

Conference Profiles are assigned to Conferences, Meeting Rooms, Reservations and Entry Queues. The same Profile can be assigned to different conferencing entities. When modifying the Profile parameters, the changes will be applied to all the conferencing entities to which the profile is assigned.

Conference Profile options differ according to the selected Conferencing Mode. Profiles can be defined for AVC (Advanced Video Codec) CP and VSW, SVC (Scalable Video Codec), or Mixed CP and SVC conferencing modes.

Conference Profiles can be saved to Conference Templates along with all participant parameters, including their Personal Layout and Video Forcing settings. It enables administrators and operators to create, save, schedule and activate identical conferences quickly and easily.



Note: RealPresence® Distributed Media Application™ (DMA®)

In the Polycom® RealPresence® *Web Suite* solution (Collaboration Servers 1800/2000/4000) and CloudAxis® Suite (Collaboration Server Virtual Edition), conference Profiles are defined in the RealPresence Distributed Media Application (DMA) system component and should not be defined directly in the MCU component.



Note: Resource Capacities and Operational Specifications

For information about Resource Capacities and other operational specifications, see the *RealPresence® Collaboration Server (RMX) Hardware Guide* specific to your system.



Note: Using Profiles with RealPresence DMA

In the *Polycom® RealPresence® Web Suite* solution, the Conference Profiles are defined in the RealPresence DMA system component and should not be defined directly in the RealPresence Collaboration Server (RMX) 1800/2000/4000 component.

Conferencing Parameters Defined in a Profile

When defining a new video Profile, you select the parameters that determine the video display on the participant's endpoint and the quality of the video, according to the selected Conferencing Mode. When defining a new conference Profile, the system uses default values for the selected conferencing Mode.

Conferencing Capabilities in the Various Conferencing Modes

The following table summarizes the conferencing capabilities and options available in the different Conferencing Modes.

Conferencing Capabilities in the Different Conferencing Modes

Feature	CP Only	Mixed CP & SVC	SVC Only	VSW
Conference Type				
Reservations	✓	✓	✓	✓
Operator Conferences	✓	✗	✗	✓
Entry Queues	✓*	✓*	✓*	✓*
Permanent Conference	✓	✓	✓	✓
Cascading ‡	✓	✓	✗	✓
Conferencing Feature				
IVR	✓	✓	✓ Reduced IVR set for SVC endpoints	✓
Dial Out	✓	✗	✗	✓
Auto Redial	✓	✓	✗	✓
LPR	✓	✓***	✓***	✓
Content	✓	✓	✓	✓
Presentation Mode	✓	✗	✗	✗
Lecture Mode	✓	✗	✗	✓
Same Layout	✓	✓	✗	✗
Layout Selection	✓	✓ AVC endpoints only	Layout set to Auto Layout and defined on the endpoint	✗
Skins	✓	✓ AVC endpoints only	✗	✗
Encryption	✓	✓	✓	✓

Conferencing Capabilities in the Different Conferencing Modes

Feature	CP Only	Mixed CP & SVC	SVC Only	VSW
Recording	✓	✓ AVC recording only	✗	✓
Site Names	✓	✓ AVC endpoints only	Managed by the endpoint (not via MCU)	✗
Message Overlay	✓	✓ AVC endpoints only	✗	✗

* Entry Queue & Destination Conference must have the same profile (i.e. SVC only to SVC only, Mixed CP and SVC to Mixed CP and SVC)

*** For AVC, the LPR error resiliency is used, however for SVC endpoints, new error resiliency methods are used.

‡ Cascading is not supported on Collaboration Server (RMX) 1800 with no DSP cards.

Default Profile Settings in CP Conferencing Mode

The Collaboration Server is shipped with a default Conference Profile for CP conferences which allows users to immediately start standard ongoing CP conferences. These are also the default settings when creating a new Profile. The default settings are as follows:

Default CP Only Conference Profile Settings

Setting	Value
Profile Name	Factory_Video_Profile
Line Rate	384Kbps
Video Switching	Disabled
Operator Conference	Disabled
Encryption	Disabled
Packet Loss Compensation (LPR and DBA)	Enabled for CP Conferences
Auto Terminate	<ul style="list-style-type: none"> • After last participant quits - Enabled • When last participant remains - Disabled
Auto Redialing	Disabled
Exclusive Content Mode	Disabled
TIP Compatibility	Disabled
Enable FECC	Enabled
Enabled Gathering Phase	Enabled

Default CP Only Conference Profile Settings

Setting	Value
Display Language	English
Video Quality	Sharpness
Maximum Resolution	Auto
Video Clarity *	Enabled
Auto Brightness *	Enabled
Content Settings	HiResGraphics (High Res Graphics)
Content Protocol	H.264 HD
Send Content to legacy endpoints	Enabled
Presentation Mode	Disabled
Same Layout	Disabled
Lecturer View Switching	Disabled
Telepresence Mode *	Auto
Telepresence Layout Mode	Continuous Presence
Auto Scan Interval	Disabled (10)
Auto Layout	Enabled
<i>Echo Suppression</i>	Enabled
Keyboard Noise Suppression	Disabled
Audio Clarity	Enabled
Mute participants except the lecturer	Disabled
Skin	Polycom
IVR Name	Conference IVR Service
Recording	Disabled
Site Names display	Disabled
Message Overlay	Disabled
Network Services - SIP Registration	Disabled
Network Services - Accept Calls	Enabled

* Video Clarity, Auto Brightness, and Telepresence Mode are not support by Collaboration Server (RMX) 1800 with no DSP cards.

This Profile is automatically assigned to the following conferencing entities:

Name	ID
Meeting Rooms	
Maple_Room	1001
Oak_Room	1002
Juniper_Room	1003
Fig_Room	1004
Entry Queue	
Default EQ	1000

Default Profile Settings in SVC Only Conferencing Mode

The Collaboration Server is shipped with a default Conference Profile for SVC Only conferences which allows users to immediately start standard ongoing SVC Only conferences. These are also the default settings when creating a new Profile. The default settings are as follows:

Default SVC Only Conference Profile Settings

Setting	Value
Profile Name	Factory_SVC_Video_Profile
Line Rate	1920Kbps
Video Switching	Disabled
Operator Conference	Not supported
Encryption	Disabled
Packet Loss Compensation (LPR and DBA)	Not supported
Auto Terminate	<ul style="list-style-type: none"> After last participant quits - Enabled When last participant remains - Disabled
Auto Redialing	Not supported
Exclusive Content Mode	Disabled
TIP Compatibility	Disabled
Enable FECC	Disabled
Enabled Gathering Phase	Enabled
Display Language	English
Video Quality	Sharpness

Default SVC Only Conference Profile Settings

Setting	Value
Maximum Resolution	Auto
Video Clarity *	Enabled
Auto Brightness *	Enabled
Content Settings	Graphics
Content Protocol	H.264 Cascading and SVC Optimized
Presentation Mode	Not applicable
Send Content to legacy endpoints	Disabled
Same Layout	Not applicable
Lecturer View Switching	Not applicable
Telepresence Mode *	Auto
Telepresence Layout Mode	Continuous Presence
Auto Scan Interval	Not applicable
Auto Layout	Enabled (Only available option)
<i>Echo Suppression</i>	Enabled
Keyboard Noise Suppression	Disabled
Audio Clarity	Enabled
Mute participants except the lecturer	Not applicable
IVR Name	Conference IVR Service
Message Overlay	Disabled
Network Services - SIP Registration	Disabled
Network Services - Accept Calls	Enabled

* Video Clarity, Auto Brightness, and Telepresence Mode are not support by Collaboration Server (RMX) 1800 with no DSP cards.

Default Profile Settings in a Mixed CP and SVC Conferencing Mode

The Collaboration Server is shipped with a default Conference Profile (CP and SVC) for mixed CP and SVC conferences which enables users to immediately start a standard ongoing mixed CP and SVC conference. These are also the default settings when creating a new Profile. (During mixed SVC & CP conferences, PSTN (Audio Only) calls are supported.) Dial-out is not available in Mixed CP and SVC conferences.

The default settings are as follows:

Default Mixed CP and SVC Conference Profile Settings

Setting	Value
Profile Name	Factory_Mix_SVC_CP_Video_Profile
Line Rate	1920Kbps
Video Switching	Disabled
Operator Conference	Disabled
Encryption	Enabled
Packet Loss Compensation (LPR and DBA)	Enabled for AVC participants only
Auto Terminate	<ul style="list-style-type: none"> • After last participant quits - Enabled • When last participant remains - Disabled
Auto Redialing	Disabled
Font for text over video	Enabled for AVC participants only
Exclusive Content Mode	Disabled
TIP Compatibility	Disabled
Enable FECC	Enabled
Enabled Gathering Phase	Enabled
Display Language	English
Video Quality	Sharpness
Maximum Resolution	Auto
Video Clarity *	Disabled
Auto Brightness *	Disabled
Content Settings	Graphics
Content Protocol	H.264 Cascade and SVC Optimized (only)
Presentation Mode	Disabled
Send Content to legacy endpoints	Disabled
Same Layout	Enabled
Lecturer View Switching	Disabled
Telepresence Mode *	Off
Telepresence Layout Mode	Continuous Presence
Auto Scan Interval	Disabled

Default Mixed CP and SVC Conference Profile Settings

Setting	Value
Auto Layout	Enabled
<i>Echo Suppression</i>	Enabled for AVC participants only
Keyboard Noise Suppression	Enabled for AVC participants only
Audio Clarity	Enabled for AVC participants only
Mute participants except the lecturer	Disabled
Skin	Classic (for AVC participants)
IVR Name	Conference IVR Service
Recording	Enabled
Site Names display	Enabled for AVC participants only
Message Overlay	Disabled
Network Services - SIP Registration	Disabled
Network Services - Accept Calls	Enabled
Network quality indication	Enabled for AVC participants only

* Video Clarity, Auto Brightness, and Telepresence Mode are not support by Collaboration Server (RMX) 1800 with no DSP cards.

This Profile is automatically assigned to the following conferencing entities:

Name	ID
Meeting Rooms	
Maple_Room	1001
Oak_Room	1002
Juniper_Room	1003
Fig_Room	1004
Entry Queue	
Default EQ	1000


Viewing the List of Conference Profiles

Existing Conference Profiles are listed in the Conference Profiles list pane.

To list Conference Profiles:

- 1 In the **RMX Management** pane, expand the **Rarely Used** list.
- 2 In the **RMX Management** pane, click the **Conference Profiles** button.

The Conference Profiles are displayed in the **Conference Profiles** list pane.

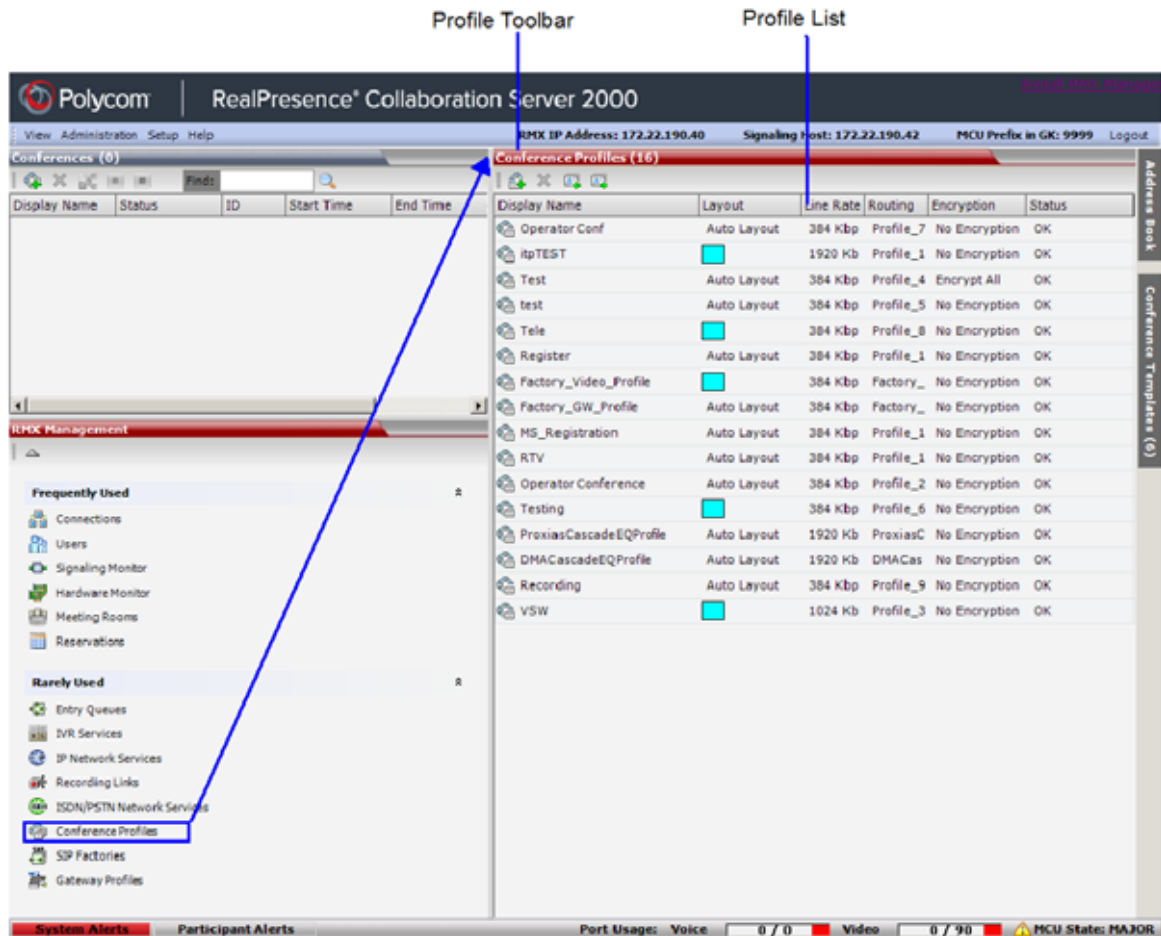

The number of the currently defined conference profiles appears in the title of the list pane.

The following Conference Profile properties are displayed in the List pane:

Conference Profiles Pane Columns

Field	Description
Name	The name of the Conference Profile.
Layout	Displays either Auto Layout or an icon of the layout selected for the profile.
Line Rate	The maximum bit rate in kbps at which endpoints can connect to the conference.
Routing Name	Displays the Routing Name defined by the user or automatically generated by the system.





Conference Profiles Pane Columns

Field	Description
Encryption	Displays if media encryption is enabled for the Profile. For more information see Packet Loss Compensation - LPR and DBA .

Profiles Toolbar

The Profile toolbar provides quick access to the Profile functions:

Profile Toolbar buttons


Button	Button Name	Description
	New Profile	To create a new Profile.
	Delete Profile	To delete a Profile, click the Profile name and then click this button.
	Import Profile	To import Conference Profiles from another MCU in your environment.
	Export Profile	To export Conference Profiles to a single XML file that can be used to import the Conference Profiles on multiple MCUs.

Modifying an Existing Profile

You can modify any of the Profile's parameters but you cannot rename the Profile.

To modify the Profile properties:

- 1 In the **Conference Profiles List**, double-click the **Profile** icon, or right-click the **Profile** icon, and select **Profile Properties**.

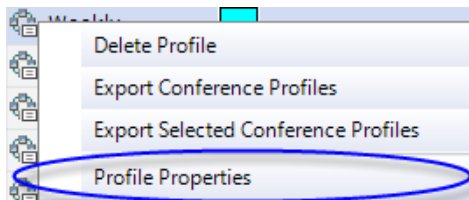

The Profile **Properties - General** dialog box opens.

- 2 Modify the required Profile parameter(s).
- 3 Click **OK**.

Deleting a Conference Profile

You can delete profiles from the Profiles list.



Note: Deleting Profiles

A Conference Profile cannot be deleted if it is being used by Meeting Rooms, Reservations, Entry Queues, and SIP Factories. A Profile that is assigned to only one ongoing conference and no other conferencing entity can be deleted.

To delete a Conference Profile:

- 1 List the profiles that are currently defined in the system. For details, see [Viewing the List of Conference Profiles](#).
- 2 In the **Conference Profiles** list, select the Conference Profile you want to delete.
- 3 Click the **Delete Profile** (✖) button.
or
Right-click the Conference Profile you wish to delete, and select **Delete Profile** from the menu.
- 4 In the confirmation dialog box, click **OK**.
The Conference Profile is deleted.

Defining New Profiles



Note: RealPresence Distributed Media Application (DMA)

In the *Polycom® RealPresence® Web Suite* solution, the Conference Profiles are defined in the RealPresence DMA system component and should not be defined directly in the RealPresence Collaboration Server (RMX) 1800/2000/4000 component.

Profiles are the basis for the definition of all ongoing conferences, Reservations, Meeting Rooms, Entry Queues, and Conference Templates and they contain only conference properties.

Profiles can be defined for the following Conferencing Modes: AVC (Advanced Video Codec) CP and VSW, SVC (Scalable Video Codec) or Mixed CP and SVC. The Profile tabs and options change according to the selected Conferencing Mode and only supported options are available for selection. Unsupported options are disabled (grayed out).

CP Conferencing Mode also offers a special functional conference - Operator Conference.

To facilitate the definition process of a new Profile, the system displays default values for each parameter so you need only to modify the required settings.

To define a new Profile:

- 1 In the **RMX Management** pane, expand the **Rarely Used** list.
- 2 In the **RMX Management** pane, click **Conference Profiles**.
- 3 In the **Conference Profiles** pane, click the **New Profile** button.
The **New Profile – General** dialog box opens.
- 4 In the **Display Name** field, enter the profile name.

- 5 Select the appropriate **Conferencing Mode**: **CP**, **VSW**, **SVC Only** or **CP and SVC**.
The **New Profile** tabs and options change according to the selected Conferencing Mode and only supported options are available for selection.
- 6 Define the profile parameters as described in:
 - [Defining AVC CP Conferencing Profiles](#)
 - [Defining an AVC Video Switching Conference Profile](#)
 - [Defining SVC Conference Profiles](#)
 - [Defining Mixed CP and SVC Conferencing Profiles](#)

Exporting and Importing Conference Profiles

Conference Profiles can be exported from one MCU and imported to multiple MCUs in your environment, enabling you to copy the Conference Profiles definitions to other systems. This can save configuration time and ensures that identical settings are used for conferences running on different MCUs. This is especially important in environments using cascading conferences that are running on different MCUs.

Guidelines for Exporting and Importing Conference Profiles


- Only Collaboration Server system administrators can export and import Conference Profiles. Operators are only allowed to export Conference Profiles.
- You can select a single, multiple, or all Conference Profiles to be exported.
- Conference Templates and their related Conference Profiles can be exported and imported simultaneously using the Conference Templates export and import function. For more information, see [Exporting and Importing Conference Templates](#).

Exporting Conference Profiles

Conference Profiles are exported to a single XML file that can be used to import the Conference Profiles on multiple MCUs. Using the Export Conference Profile feature, you can export all or selected Conference Profiles from an MCU.


Exporting All Conference Profiles from an MCU

To export all Conference Profiles from an MCU:

- 1 List the profiles that are currently defined in the system. For details, see [Viewing the List of Conference Profiles](#).
- 2 In the **Conference Profiles List** toolbar, click the **Export Conference Profiles**  button, or right-click anywhere in the **Conference Profiles** pane, and then click **Export Conference Profiles**.




The **Conference Profile - Export** dialog box is displayed.

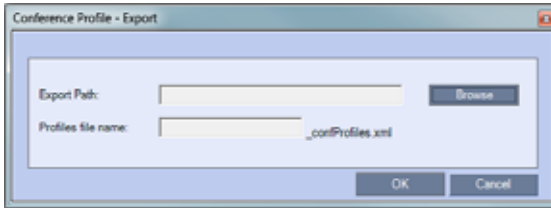

- 3 In the **Export Path** field, click **Browse** to navigate to the location of the desired path where you want to save the exported file.
- 4 In the **Profiles file name** field, type the file name prefix. The file name suffix (**_confProfiles.xml**) is predefined by the system. For example, if you type `Profiles01`, the exported file name is defined as `Profiles01_confProfiles.xml`.
- 5 Click **OK** to export the Conference Profiles to a file.

If the export file with the same file name already exists, a prompt is displayed.

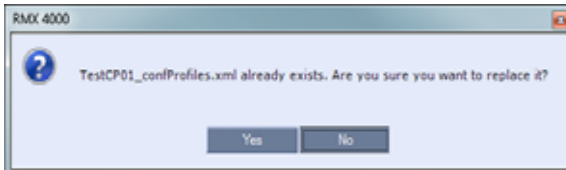


- 6 Click **Yes** to replace the exported file, or click **No** to cancel the export operation and return to the Conference Profiles list. You can modify the export file name and restart the export operation.

Exporting Selected Conference Profiles


You can select a single Conference Profile or multiple Conference Profiles and export them to a file to be imported to other MCUs in your environment.

To export selected Conference Profiles:

- 1 List the Profile that are currently defined in the system. For details, see [Viewing the List of Conference Profiles](#).
- 2 In the **Conference Profiles** pane, select the profiles you want to export.
- 3 In the **Conference Profiles List** toolbar, click the **Export Conference Profiles**  button, or right-click the selected Conference Profiles, and then click **Export Selected Conference Profiles**.




The **Conference Profile - Export** dialog box is displayed.

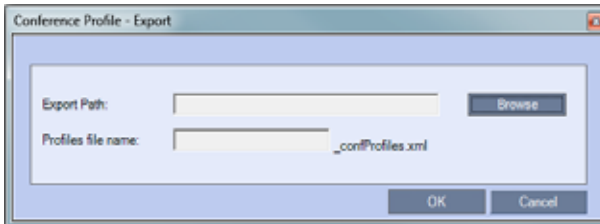

- 4 In the **Export Path** field, click **Browse** to navigate to the location of the desired path where you want to save the exported file.
- 5 In the **Profiles file name** field, type the file name prefix. The file name suffix (**_confProfiles.xml**) is predefined by the system. For example, if you type `Profiles01`, the exported file name is defined as `Profiles01_confProfiles.xml`.
- 6 Click **OK** to export the Conference Profiles to a file.

If the export file with the same file name already exists, a prompt is displayed.

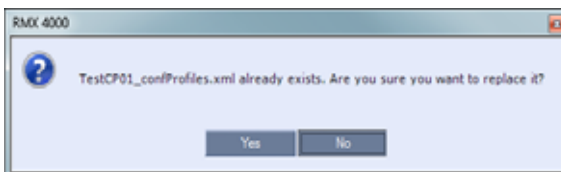

- 7 Click **Yes** to replace the exported file, or click **No** to cancel the export operation and return to the *Conference Profiles* list. You can modify the export file name, and restart the export operation.

Importing Conference Profiles

If your environment includes two or more MCUs, import previously exported Conference Profiles to your MCU to save configuration time and ensure that all MCUs use the same conferencing parameters.




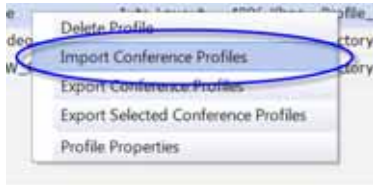
Note: Imported Profile

Conference Profiles are not imported when a Conference Profile with that name already exists or if an IVR Service which is assigned to any of the imported Profile does not exist in the MCU.


Conference Profiles are not imported when a Conference Profile with that name already exists or if an IVR Service which is assigned to any of the imported profiles does not exist in the MCU.

To import Conference Profiles:

- 1 Display the Conference Profiles List. For details, see [Viewing the List of Conference Profiles](#).
- 2 In the Conference Profiles List toolbar, click the **Import Conference Profiles**  button, or right-click the **Conference Profiles** pane, and then click **Import Conference Profiles**.




The **Conference Profile - Import** dialog box is displayed.

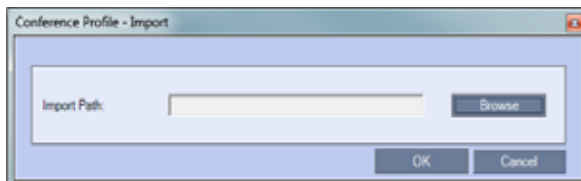

- 3 In the **Import Path** field, click **Browse** to navigate to the path and file name of the exported Conference Profiles you want to import.
- 4 Click **OK** to import the Conference Profiles.

When Conference Profiles cannot be imported, a **Message Alert** window is displayed with the profiles that were not imported.

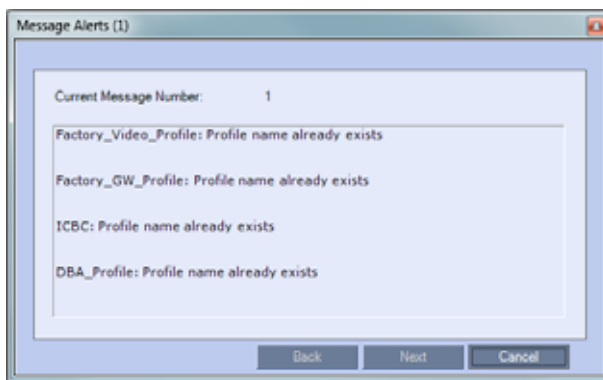

Conference Profiles that are not problematic are imported.

- 5 Click **Cancel** to exit the **Message Alerts** window.

The imported Conference Profiles appear in the **Conference Profiles** list.

Defining AVC-Based Conference Profiles

AVC-based Conference Profile options differ according to the selected Conferencing Mode CP and VSW. To facilitate the definition process of a new Profile, the system displays default values for each parameter so you need only to modify the required settings.



Note: Conference Profiles Definition Location

In RealPresence® Platform, Conference Profiles should be defined in Polycom® RealPresence® DMA® instead of in RealPresence Collaboration Server (RMX) 1500/1800/2000/4000.

Defining AVC CP Conferencing Profiles

When defining a new Profile, you select the parameters that determine the video display on the participant's endpoint, the quality of the video, content sharing parameters, whether the conference will be recorded, encryption, Telepresence mode and other conferencing parameters.


The following parameters are defined:

- [New AVC CP Profile - General Parameters](#)
- [New AVC CP Profile - Advanced Parameters](#)
- [New AVC CP Profile - Gathering Settings Parameters](#)
- [New AVC CP Profile - Video Quality Parameters](#)
- [New AVC CP Profile - Video Settings Parameters](#)
- [New AVC CP Profile - Audio Settings Parameters](#)
- [New AVC CP Profile - IVR Parameters](#)
- [New AVC CP Profile - Recording Parameters](#)
- [New AVC CP Profile - Site Names Parameters](#)
- [New AVC CP Profile - Message Overlay Parameters](#)
- [New AVC CP Profile - Network Services Parameters](#)
- [New AVC CP Profile - Layout Indications Parameters](#)

To define a new CP Profile:

- 1 In the **RMX Management** pane, click **Conference Profiles**.

- In the **Conference Profiles** pane, click the **New Profile** button.
The **New Profile – General** dialog box opens.

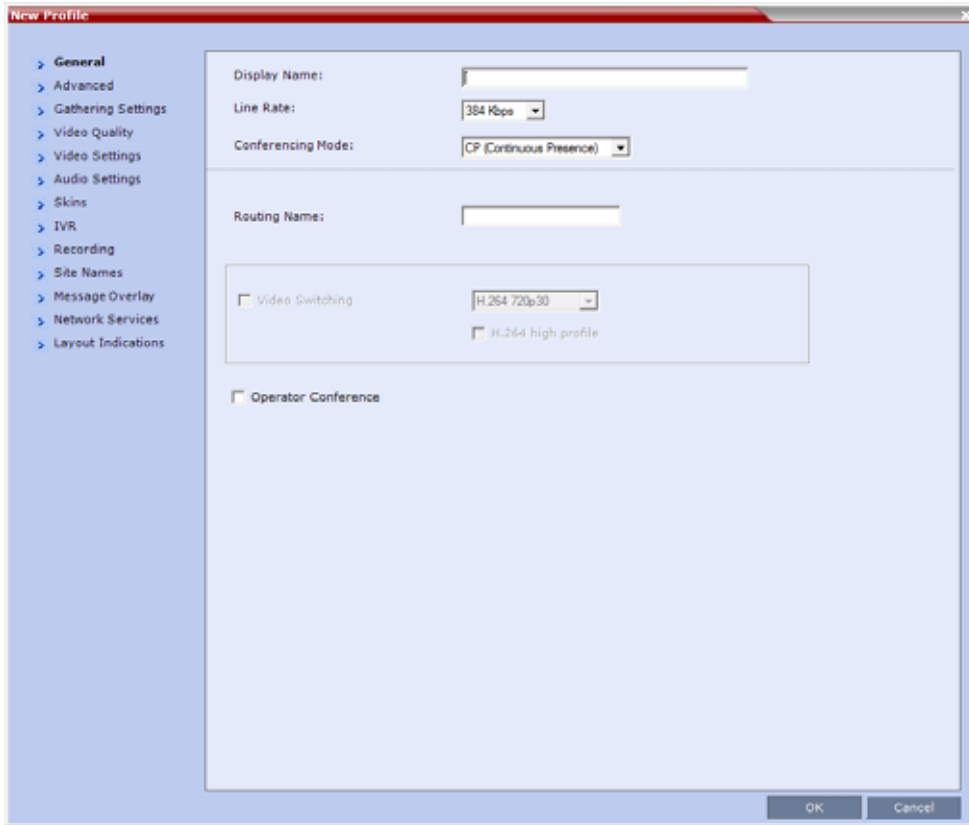

- Define the Profile name and, if required, the Profile - General parameters:

New AVC CP Profile - General Parameters

Field/Option	Description
Display Name	<p>Enter a unique Profile name, as follows:</p> <ul style="list-style-type: none"> English text uses ASCII encoding and can contain the most characters (length varies according to the field). European and Latin text length is approximately half the length of the maximum. Asian text length is approximately one third of the length of the maximum. <p>It is recommended to use a name that indicates the Profile type, such as CP or Operator conference.</p> <p>Notes:</p> <ul style="list-style-type: none"> This is the only parameter that must be defined when creating a new profile. This field is displayed in all tabs.

New AVC CP Profile - General Parameters


Field/Option	Description
Line Rate	<p>Select the conference bit rate. The line rate represents the combined video, audio and Content rate.</p> <p>The default setting is 384 Kbps.</p> <p>Notes:</p> <ul style="list-style-type: none"> This field is displayed in all tabs. The maximum line rate at which ISDN endpoints can connect to a conference is 768 kbps. <p>Downspeeding is not supported. As a result, ISDN calls will consume bandwidth resources according to the Line Rate specified in the conference Profile. For example, if the conference Line Rate is 512kbps, ISDN calls connecting at lower line rates (256kbps) will still consume the bandwidth resources of 512kbps calls. As a result, if bandwidth resources are fully consumed, ISDN calls may be rejected before media card resources are exhausted.</p> <ul style="list-style-type: none"> The Collaboration Server supports AVC-CP conferences at line rates of up to 6Mbps: <ul style="list-style-type: none"> ▲ For Dial-in calls only. ▲ For use with HD1080p30/60 and HD720p60 resolutions. <p>To prevent excessive bandwidth usage and resource consumption, the system will ignore a Line Rate of 6Mbps, substituting line rates appropriate to the Maximum Resolution defined.</p> <ul style="list-style-type: none"> ▲ Up to 1Mbps for SD30, CIF60 and below ▲ Up to 4Mbps for SD60, HD720p30 ▲ Up to 6Mbps for HD720p60, HD1080p30, HD1080p60 <p>(RMX 1800 with no DSP cards maximum AVC-CP conferencing line rate: 4Mbps.)</p> If 'Maximum Resolution' is specified in 'Video Quality Parameters', the line rate might be modified automatically according to table 'Maximum negotiated line rate for resolutions'. If 'Maximum Resolution' is specified in 'Video Quality Parameters', the line rate might be modified automatically according to the Maximum Negotiated Line Rate for Resolutions table.
Conferencing Mode	<p>Select the required Conferencing Mode. The selection affects the available tabs and their fields.</p> <p>Notes:</p> <ul style="list-style-type: none"> This field is displayed in all tabs. If the selected Line Rate is higher than 4Mbps, and Conferencing Mode is modified to SVC Only or CP and SVC, the line rate is dropped to match SVC-enabled conferencing rates.
Routing Name	<p>Enter the Profile name using ASCII characters set.</p> <p>The Routing Name can be defined by the user or automatically generated by the system if no Routing Name is entered as follows:</p> <ul style="list-style-type: none"> If an all ASCII text is entered in Display Name, it is used also as the Routing Name. If any combination of Unicode and ASCII text (or full Unicode text) is entered in Display Name, the ID (such as Conference ID) is used as the Routing Name.

New AVC CP Profile - General Parameters

Field/Option	Description
Video Switching	Disabled. Applicable for VSW conferencing. For more information, see Defining an AVC Video Switching Conference Profile .
H.264 High Profile	Disabled. Applicable for VSW conferencing. For more information, see H.264 High Profile Support in Video Switching Conferences .
Operator Conference (CP Only)	Select this option to define the profile of an Operator conference. An Operator conference can only be a Continuous Presence conference, therefore when selected, the Video Switching option is disabled and cleared. When defining an Operator Conference, the Send Content to Legacy Endpoints option in the Video Quality tab is cleared and disabled. For more information, see Operator Assistance & Participant Move .

- 4 Click the **Advanced** tab.

The **New Profile – Advanced** dialog box opens.

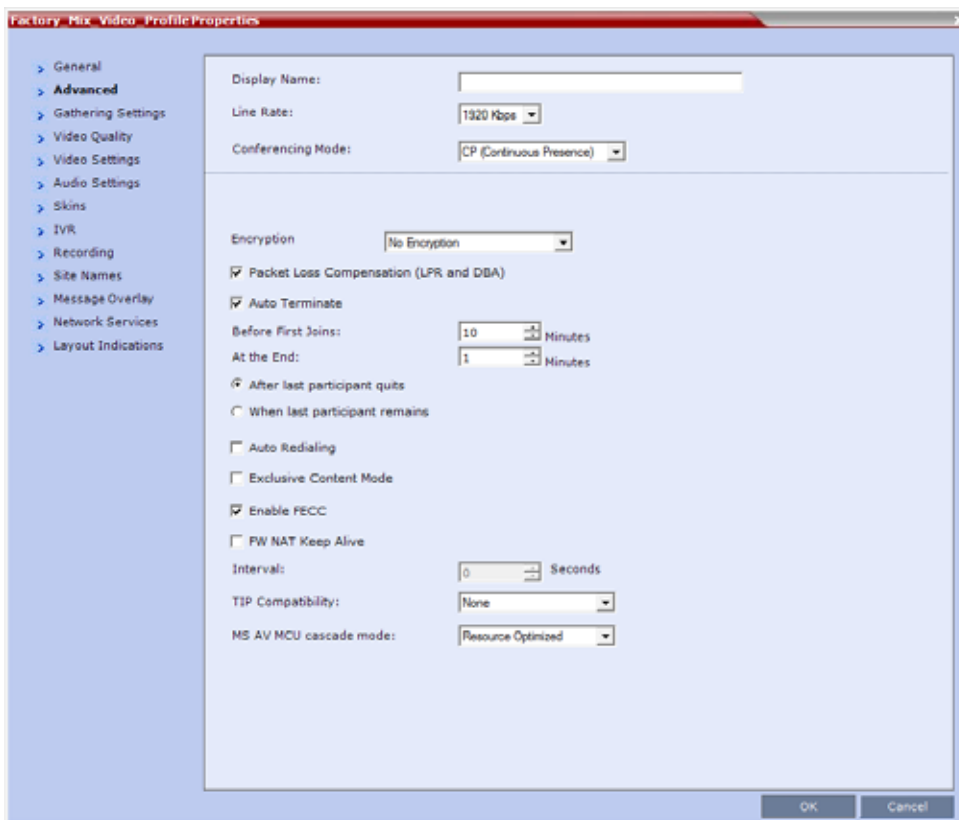

- 5 Define the following parameters:


New AVC CP Profile - Advanced Parameters

Field/Option	Description
Encryption	<p>Select the Encryption option for the conference:</p> <ul style="list-style-type: none"> • Encrypt All - Encryption is enabled for the conference and all conference participants must be encrypted. • No Encryption - Encryption is disabled for the conference. • Encrypt when Possible - Enables the negotiation between the MCU and the endpoints and let the MCU connect the participants according to their capabilities, where encryption is the preferred setting. For connection guidelines see Mixing Encrypted and Non-encrypted Endpoints in one Conference. <p>For more information, see Packet Loss Compensation - LPR and DBA.</p>
LPR	<p>When selected (default for CP conferences), Lost Packet Recovery creates additional packets that contain recovery information used to reconstruct packets that are lost during transmission.</p> <p>The LPR check box is automatically cleared if Video Switching is selected as the Conferencing Mode, but can be selected if required.</p> <p>For more information, see Packet Loss Compensation - LPR and DBA.</p>
Auto Terminate	<p>When selected (default), the conference automatically ends when the termination conditions are met:</p> <ul style="list-style-type: none"> • Before First Joins — No participant has connected to a conference during the n minutes after it started. Default idle time is 10 minutes. • At the End - After Last Quits — All the participants disconnected from the conference, and the conference is idle (empty) for the predefined time period. Default idle time is 1 minute. • At the End - When Last Participant Remains — Only one participant is connected to the conference for the predefined time period (excluding the recording link which is not considered a participant when this option is selected). This option should be selected when defining a Profile that will be used for Gateway Calls, and wishing to ensure the call is automatically terminated when only one participant is connected. Default idle time is 1 minute. <p>Note: The selection of this option is automatically cleared and disabled when the Operator Conference option is selected. The Operator conference cannot automatically end unless it is terminated by the Collaboration Server User.</p>
Auto Redialing	<p>The Auto Redialing option instructs the Collaboration Server to automatically redial H.323 and SIP participants that have been abnormally disconnected from the conference.</p> <ul style="list-style-type: none"> • Auto Redialing is disabled by default. • Auto Redialing can be enabled or disabled during an ongoing conference using the Conference Properties – Advanced dialog box. • The Collaboration Server will not redial an endpoint that has been disconnected from the conference by the participant. • The Collaboration Server will not redial an endpoint that has been disconnected or deleted from the conference by an operator or administrator.

New AVC CP Profile - Advanced Parameters

Field/Option	Description
Exclusive Content Mode	Select this option to limit the Content broadcasting to one participant, preventing other participants from interrupting the Content broadcasting while it is active.
TIP Compatibility	<p>Select the TIP Compatibility mode when implementing a Collaboration Server and Cisco Telepresence Systems (CTS) Integration solution. The TIP Compatibility mode affects the user video and content experience.</p> <p>The following TIP Compatibility modes are available:</p> <ul style="list-style-type: none"> • None • Prefer TIP <p>From Version 8.1.1, Polycom endpoints can also connect to Entry Queues, Meeting Rooms and conferences using the TIP protocol.</p> <p>The connection of the Polycom endpoints with TIP protocol to a TIP Compatible Entry Queues, Meeting Rooms and conferences using the TIP protocol is enabled when the Polycom endpoints are registered to the CUCM and the Prefer TIP option is selected in the conference Profile.</p> <p>When the Prefer TIP option is selected, conferencing entities can include endpoints connected using all protocols, including TIP and SIP protocols.</p> <p>When Prefer TIP is selected, Gathering Settings, content settings, Message Overlay, Site Names and Network Indication(s) cannot be enabled.</p> <p>Note: If an option other than None is selected in this field, the Gathering Settings options are disabled.</p> <p>For more information, see .</p>
Enable FECC	This option is enabled by default, allowing participants in the conference to control the zoom and PAN of other endpoints in the conference via the FECC channel. Clear this check box to disable this option for all conference participants.
FW NAT Keep Alive	<p>The MCU can be configured to send a FW NAT Keep Alive message at specific Intervals for the RTP, UDP and BFCP channels.</p> <p>For more information see FW (Firewall) NAT Keep Alive.</p>
Interval	If needed, modify the NAT Keep Alive Interval field within the range of 1 - 86400 seconds. For more information see FW (Firewall) NAT Keep Alive .
MS AV MCU Cascade Mode	<p>This enables you to set Cascade Mode as either Resource Optimized or Video Optimized.</p> <ul style="list-style-type: none"> • Resource Optimized System resource usage is optimized by allowing high resolution connections only at high line rates and may result in lower video resolutions for some line rates. This option allows you to save MCU resources and increase the number of participant connections. • Video Quality Optimized Video is optimized through higher resolution connections at lower line rates increasing the resource usage at lower line rates. This may decrease the number of participant connections. <p>For more information, see H.264 Base Profile and High Profile Comparison.</p>

6 For CP Conferences only: Click the **Gathering Settings** tab.

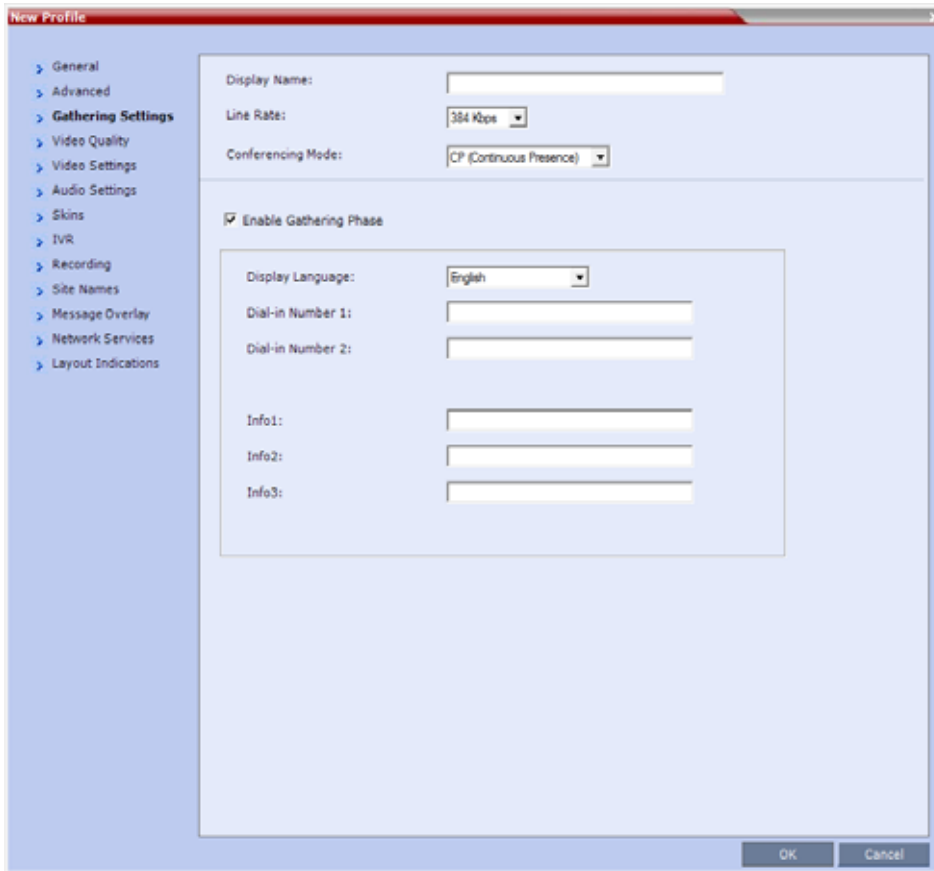

7 Optional. Define the following fields if the conference is not launched by the Polycom Conferencing Add-in for Microsoft Outlook:



Note: Polycom Conferencing Add-in for Microsoft Outlook


If the conference is launched by the Polycom Conferencing Add-in for Microsoft Outlook, the field information is received from the meeting invitation and existing field value are overridden. For more information see [Polycom Conferencing for Microsoft Outlook®](#).

- Gathering is disabled in gateway calls.
- Gathering is not supported in Cascading Conferences.
- Cascading is not supported by Collaboration Server (RMX) 1800 with no DSP cards.

New AVC CP Profile - Gathering Settings Parameters

Field	Description
Display Name	This field is defined when the Profile is created. For more information see the Defining New Profiles .
Enable Gathering	Select this check box to enable the Gathering Phase feature. Default: Selected.
Displayed Language	Select the Gathering Phase slide language: Gathering Phase slide field headings are displayed in the language selected. The Gathering Phase slide can be in a different language to the Collaboration Server Web Client. Default: English Note: When working with the Polycom Conferencing Add-in for Microsoft Outlook, the language selected should match the language selected for the conference in the Polycom Conferencing Add-in for Microsoft Outlook to ensure that the Gathering Phase slide displays correctly.
Dial-in Number 1	Enter the ISDN or PSTN number(s) to call to connect to the conference.
Dial-in Number 2	Note: The numbers entered must be verified as the actual Access Numbers.


New AVC CP Profile - Gathering Settings Parameters

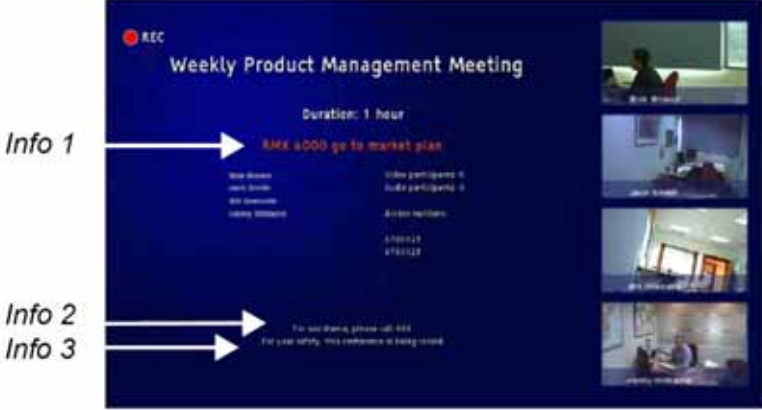Field	Description
Info 1	<p>Optionally, enter any additional information to be displayed during the Gathering Phase.</p> <p>These fields are not limited in the Collaboration Server Web Client but only 96 characters can be displayed in the Gathering Slide on a 16:9 monitor.</p> <p>If the Gathering slide is displayed on a 4:3 endpoint: the slide is cropped on both sides:</p>
Info 2	<ul style="list-style-type: none"> • The left most characters of the information fields are not displayed. • The live video is cropped on the right side of the display.
Info 3	 <p>The screenshot shows a video conference interface with a dark blue background. At the top left is a red 'REC' icon. The main title is 'Weekly Product Management Meeting'. Below the title, it says 'Duration: 1 hour'. A red line of text reads 'RMX 4000 go to market plan'. There are two columns of smaller text, likely participant names and roles. At the bottom, there is a line of text: 'To see this, please call 800' and 'For your safety, this conference is being recorded'. On the right side, there are four small video thumbnails showing participants. Three white arrows labeled 'Info 1', 'Info 2', and 'Info 3' point from the left towards the text on the slide. 'Info 1' points to the red text line, 'Info 2' points to the bottom text line, and 'Info 3' points to the bottom text line.</p>

For more information see [Auto Scan and Customized Polling in Video Layout](#).

8 Click the **Video Quality** tab.

The **New Profile – Video Quality** dialog box opens.

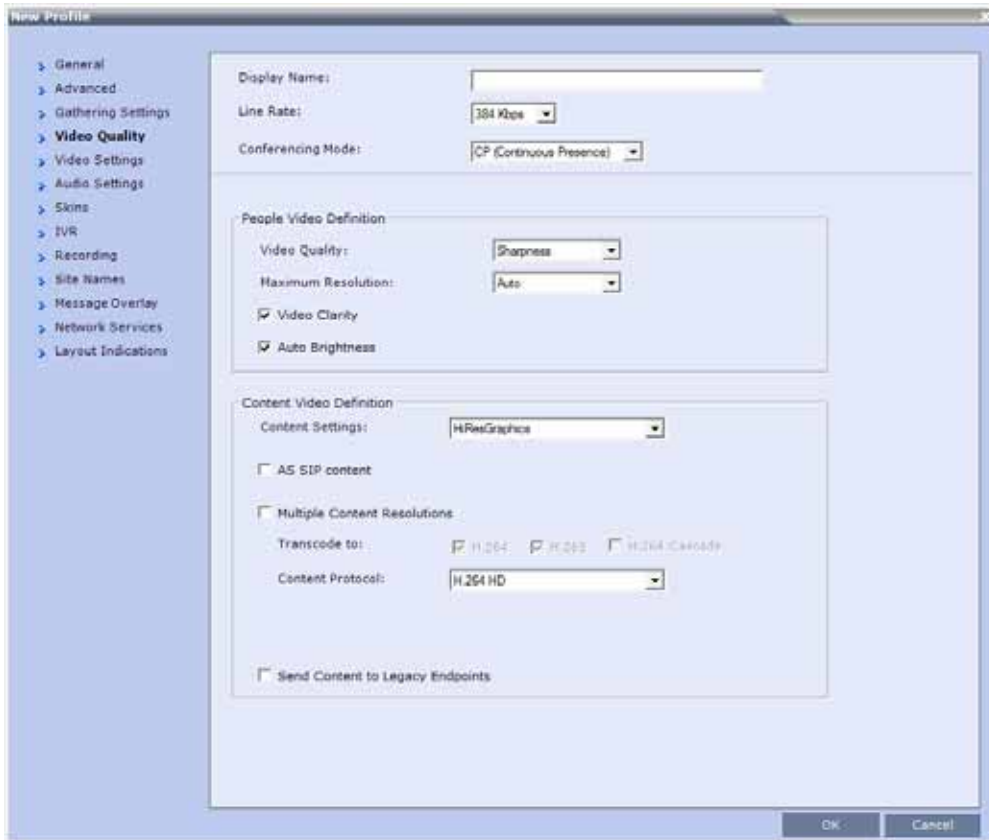

9 Define the following parameters:

New AVC CP Profile - Video Quality Parameters

Field/Option	Description
People Video Definition	
Video Quality	<p>Sharpness is the only supported content format that supports higher video resolutions.</p> <p>Depending on the amount of movement contained in the conference video, select either:</p> <ul style="list-style-type: none"> • Motion – For a higher frame rate without increased resolution. When selected, Video Clarity is disabled. • Sharpness – For higher video resolution and requires more system resources. <p>Note: When Sharpness is selected as the Video Quality setting in the conference Profile, the Collaboration Server will send 4CIF (H.263) at 15fps instead of CIF (H.264) at 30fps.</p>

New AVC CP Profile - Video Quality Parameters

Field/Option	Description
Maximum Resolution	<p>This setting overrides the Maximum Resolution setting of the Resolution Configuration dialog box.</p> <p>The administrator can select one of the following Maximum Resolution options:</p> <ul style="list-style-type: none"> • Auto (default) - The Maximum Resolution remains as selected in the Resolution Configuration dialog box. • CIF • SD • HD720 • HD1080 <p>Maximum Resolution settings can be monitored in the Profile Properties - Video Quality and Participant Properties - Advanced dialog boxes.</p> <p>Notes:</p> <ul style="list-style-type: none"> • The Resolution field in the New Participant - Advanced dialog box allows Maximum Resolution to be further limited per participant endpoint. • The Maximum Resolution settings for conferences and participants cannot be changed during an ongoing conference.
Video Clarity™	<p>When enabled (default), video enhancing algorithms is applied to incoming video streams of resolutions up to and including SD. Clearer images with sharper edges and higher contrast are sent back to all endpoints at the highest possible resolution supported by each endpoint.</p> <p>All layouts, including 1x1, are supported.</p> <p>Notes:</p> <p>Video Clarity is enabled only when Video Quality is set to Sharpness (default setting) and is disabled when Video Quality is set to Motion.</p> <p>Video Clarity is not supported by Collaboration Server (RMX) 1800 with no DSP cards.</p>
Auto Brightness	<p>Auto Brightness detects and automatically adjusts the brightness of video windows that are dimmer than other video windows in the conference layout.</p> <ul style="list-style-type: none"> • Auto Brightness only increases brightness and does not darken video windows. • Auto Brightness is selected by default. • Auto Brightness cannot be selected and deselected during an ongoing conference. • When Auto Brightness is enabled, color changes may be observed in computer-based VGA Content sent by HDX endpoints through the People video channel. <p>Default: On</p> <p>Auto Brightness is not supported by Collaboration Server (RMX) 1800 with no DSP cards.</p>

New AVC CP Profile - Video Quality Parameters

Field/Option	Description
Content Video Definition	
Content Settings	<p>Select the transmission mode for the Content channel:</p> <ul style="list-style-type: none"> • Graphics — Basic mode, intended for normal graphics • Hi-res Graphics — Higher bit rate intended for high resolution graphic display • Live Video — Content channel displays live video • Customized Content Rate — Manual definition of the Conference Content Rate, mainly for cascading conferences. <p>Selection of a higher bit rate for the Content results in a lower bit rate for the people channel.</p> <p>For a detailed description of each of these options, see Content Sharing Parameters in Content Highest Common (Content Video Switching) Mode.</p>
AS SIP Content	<p>AS-SIP is an implementation of SIP that utilizes SIP's built in security features. When selected, content is shared using the Multiple Resolutions mode and is not supported in any other Content sharing mode.</p> <p>For more information, see Enabling AS-SIP Content.</p>
Multiple Content Resolutions	<p>Click this check box to enable the Multiple Content Resolutions mode, in which content is shared in multiple streams, one for each video protocol: H.263 and H.264. This allows endpoints with different protocols to connect and disconnect without having to restart Content sharing in the middle of a conference. For more information, see Multiple Content Resolutions.</p> <p>When enabled, the H.264 is always selected and can not be deselected.</p> <p>Note: If Multiple Content Resolutions is selected in a Cascading environment, the Content Protocol must be set to H.264 Cascade Optimized, and the Transcode to field must be set (checked) to H.264 Cascade.</p> <p>Optional. Select additional protocols:</p> <ul style="list-style-type: none"> • H.263 - if the conference will include H.263-capable endpoints that do not support H.264 protocol for content sharing. • H.264 Cascade - if the conference will include cascading links that should use a fixed video format for content sharing. <p>Optional. If H.264 Cascade is selected, select the desired Content Resolution.</p>

New AVC CP Profile - Video Quality Parameters


Field/Option	Description
Content Protocol	<p>Select the Content Protocol to be used for content sharing in Highest Common Content Sharing Mode.</p> <ul style="list-style-type: none"> • H.263 Content is shared using the H.263 protocol. Use this option when most of the endpoints support H.263 and some endpoints support H.264. • H.263 & H.264 Auto Selection When selected, content is shared using H.263 if a mix of H.263-supporting and H.264-supporting endpoints are connected, or H.264 if all connected endpoints have H.264 capability. • H.264 Cascade Optimized All Content is shared using the H.264 content protocol and is optimized for use in cascaded conferences. • H.264 HD (default) Ensures high quality Content when most endpoints support H.264 and HD resolutions. <p>Note: When Multiple Content Resolutions is selected, the Content Protocol field is hidden.</p> <p>For more information, see Content Protocols and Defining Content Sharing Parameters for a Conference</p>
H.264 High Profile	<p>The H.264 High Profile check box is un-checked by default and is displayed next to the Content Protocol drop-down menu if all the following conditions are met:</p> <ul style="list-style-type: none"> • The MCU is a RealPresence Collaboration Server 1800, or 2000/4000 containing MPMRx cards. • Conferencing mode is VSW (Video Switching). • Multiple Resolutions (Content Transcoding) is not selected. • The selected Content Protocol is H.264 Cascade Optimized. If H.264 HD, H.264 Cascade Optimized is selected, the Content Resolution is set according to the line rate. • TIP Compatibility (in the Profile - Advanced dialog box) is selected as None.
Content Resolution	<p>Select the Content Resolution and frame rate according to the selected Content Sharing Mode (Highest common Content or Multiple Resolution Contents) and the video protocol. For more information, see Defining Content Sharing Parameters for a Conference.</p>
Content Rate	<p>The Content Rate drop-down menu is displayed next to the Content Resolution drop-down menu when:</p> <ul style="list-style-type: none"> • H.264 Cascade Optimized is the selected Content Protocol and • CustomizedContentRate is the selected Content Setting. <p>When used with the Collaboration Server 1800 the Content Rate is limited to 4096 kbps.</p>

New AVC CP Profile - Video Quality Parameters

Field/Option	Description
Send Content to Legacy Endpoints (CP / mixed CP and SVC)	<p>When enabled (default) Content can be sent to H.323/SIP/ISDN endpoints that do not support H.239 Content (legacy endpoints) over the video (people) channel. For more information see Sending Content to Legacy Endpoints.</p> <p>Notes:</p> <ul style="list-style-type: none"> • When enabled, an additional HD video resource is allocated to the conference. • This option is valid when sending Content as a separate stream is enabled by setting the System Flag ENABLE_H239 to YES. • Select this option when Avaya IP Softphone will be connecting to the conference. • In Video Switching Conferencing Mode the Send Content to Legacy Endpoints option is disabled. • If the Same Layout option is selected, the Send Content to Legacy Endpoints selection is cleared and disabled. • Once an endpoint is categorized as Legacy, it will not be able to restore its content to the Content channel and will receive content only in the video channel.
H.264 High Profile	<p>Displayed only when the Conferencing Mode is VSW (Video Switching) and H.263 & H.264 Auto Selection or H.264 HD is the selected in Content Protocol, Base Profile or High Profile will be auto selected based on the endpoint's capability (up to HD1080p60).</p>

10 Click the **Video Settings** tab.

The **New Profile - Video Settings** dialog box opens.

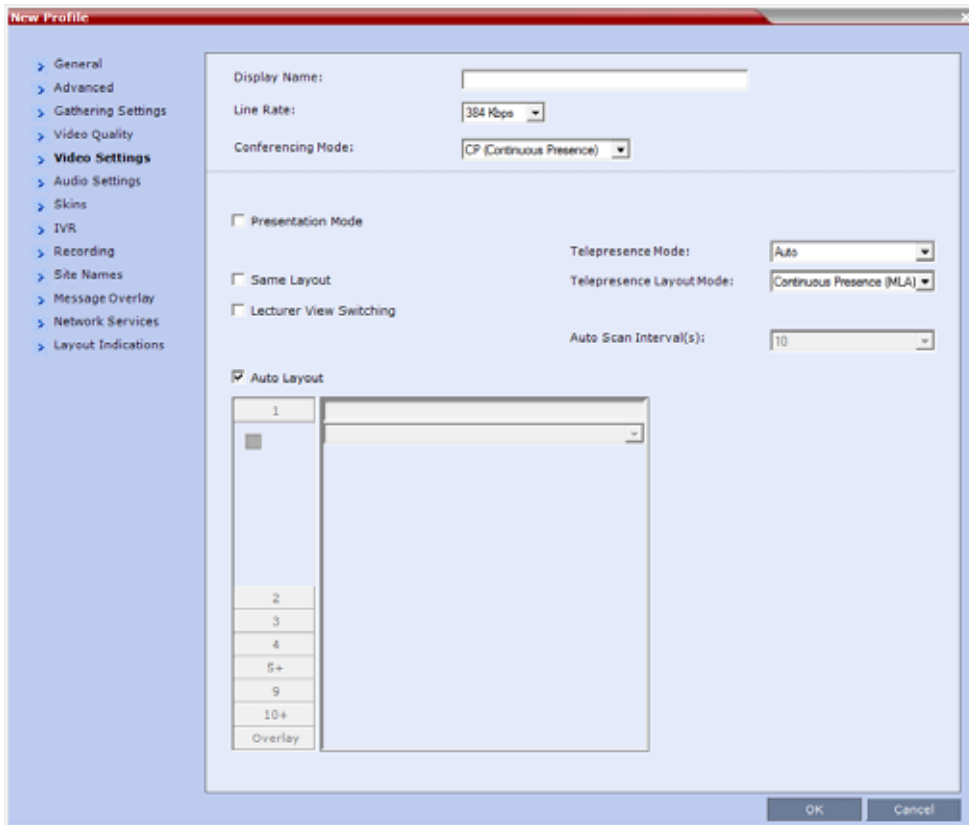

In AVC-based CP and Mixed CP and SVC conferences, while the conference is running, you can change the video layout and select one of the video layouts supported by the MCU.

Video Layout selection can be done in two levels:

- **Conference Level** – Applies to all conference participants. All participants have the same video layout.
- **Participant Level** – The participant’s video layout is changed. The video layout of all other conference participants is unaffected.

Participant level video layout selection overrides conference level video layout settings. Participants cannot change their Personal Layouts when **Lecturer Mode** is enabled.

11 Define the video display mode and layout using the following parameters:

New AVC CP Profile - Video Settings Parameters

Field/Option	Description
Presentation Mode (CP only)	Select this option to activate the Presentation Mode. In this mode, when the current speaker speaks for a predefined time (30 seconds), the conference changes to Lecture Mode. When another participant starts talking, the Presentation Mode is cancelled and the conference returns to the previous video layout.


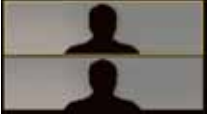





New AVC CP Profile - Video Settings Parameters

Field/Option	Description
Same Layout (CP only)	Select this option to force the selected layout on all participants in a conference. Displays the same video stream to all participants and personal selection of the video layout is disabled. In addition, if participants are forced to a video layout window, they can see themselves.
Lecture View Switching	Select this option to enable automatic switching of participants on the Lecturer's screen when Lecture Mode is enabled for the conference. The automatic switching is enabled when the number of participants exceeds the number of video windows displayed on the Lecturer's screen. Note: Lecture Mode is enabled in the Conference Properties – Participants tab. For more information, see Lecture Mode .
Telepresence Mode (CP only)	Select the Telepresence Mode from the drop-down menu: <ul style="list-style-type: none"> • Off - Normal conference video is sent by the Collaboration Server. • Auto (Default) - If any ITP (Immersive Telepresence) endpoints are detected, ITP features are applied to the conference video for all participants. When Auto is selected, the ITP features are dynamic. If all ITP endpoints disconnect from the conference, normal conference video is resumed for all participants. ITP features are resumed for all participants should an ITP endpoint re-connects to the conference. • On - ITP features are applied to the conference video for all participants regardless of whether there are ITP endpoints connected or not. Notes: <ul style="list-style-type: none"> • This field is enabled only if the Collaboration Server system is licensed for Telepresence Mode. • Telepresence Mode is unavailable in Video Switching conferences. • Telepresence Mode is not supported by Collaboration Server (RMX) 1800 with no DSP cards.
Telepresence Layout Mode (CP only)	The Telepresence Layout Mode drop-down menu enables VNOG operators and Polycom Multi Layout Applications to retrieve Telepresence Layout Mode information from the Collaboration Server. The following modes can be selected: <ul style="list-style-type: none"> • Manual • Continuous Presence (MLA) - Room Continuous Presence (Default) • Speaker Priority For more information see Speaker Priority in CP Video Layouts. • Room Switch - Voice Activated Room Switching. For more information see Room Switch Telepresence Layouts. Note: This field is enabled only if the Collaboration Server system is licensed for Telepresence Mode.
Auto Scan Interval(s) (CP only)	Select the time interval, 5 - 300 seconds, that Auto Scan uses to cycle the display of participants that are not in the conference layout in the selected cell. Auto Scan is often used in conjunction with Customized Polling which allows the cyclic display to be set to a predefined order for a predefined time period.

New AVC CP Profile - Video Settings Parameters

Field/Option	Description
Auto Layout (CP only)	<p>When selected (default), the system automatically selects the conference layout based on the number of participants currently connected to the conference. When a new video participant connects or disconnects, the conference layout automatically changes to reflect the new number of video participants.</p> <p>For more information, see Auto Layout – Default Layouts in CP Conferences.</p> <p>Clear this selection to manually select a layout for the conference.</p> <p>The default Auto Layout settings can be customized by modifying default Auto Layout system flags in the System Configuration file. For more information see Auto Layout Configuration Flags.</p> <p>Note: In some cases, the default layout automatically selected for the conference contains more cells than the number of connected participants, resulting in an empty cell. For example, if the number of connected participants is 4, the default layout is 2x2, but as only 3 participants are displayed in the layout (the participants do not see themselves), one cell is empty.</p>

Auto Layout – Default Layouts in CP Conferences

Number of Video Participants	Auto Layout Default Settings
0-2	
3	
4-5	
6-7	
8-10	
11	
12+	

In layout 2+8, the two central windows display the last two speakers in the conference: the current speaker and the “previous” speaker. To minimize the changes in the layout, when a new speaker is identified the “previous” speaker is replaced by the new speaker while the current speaker remains in his/her window.



Note: Support for VUI addition to the H.264 protocol

- The Collaboration Server supports the VUI addition to the H.264 protocol for endpoints that transmit wide video (16:9) in standard 4SIF resolution.
- When there is a change of speaker in a Continuous Presence conference, the transition is set by default to fade in the current speaker while fading out the previous speaker. To make this transition visually pleasant, fading in the current speaker while fading out the previous speaker is done over a period of 500 milliseconds. The Fade In/Out feature can be disabled by adding FADE_IN_FADE_OUT as a new flag to the System Configuration, and setting its value to NO. For more information about System Flags, see [Modifying System Flags](#).


12 Optional. To select the Video Layout for the conference, deselect the **Auto Layout**, and click the required number of windows from the layouts bar and then select the windows array. The selected layout is displayed in the **Video Layout** pane.

Video Layout Options

Number of Video Windows	Available Video Layouts
1	
2	
3	
4	
5+	
9	
10+	
Overlay	

For more information see [Overlay Layouts](#).

13 Optional. To video force a participant in a window, select the participant's name from the drop-down list of conference participants.

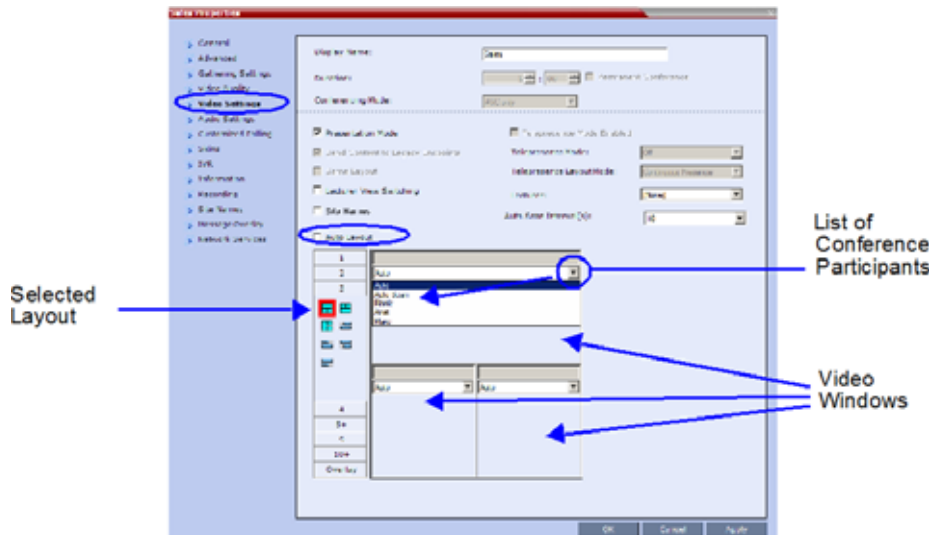

When a participant is forced to a layout window, switching between participants is suspended for that window and only the assigned participant is viewed. Video Forcing works on Conference Level or Participant Level:

- **Conference Level** – When forcing a participant to a window, all conference participants will see that participant in the selected window.
- **Participant Level** – When forcing a participant to a window, only the participant's video layout display is affected. All other participants see the conference layout.

Video Forcing Guidelines:


- A participant cannot appear in two or more windows at the same time.
- Participant level video forcing overrides conference level video forcing.
- In Same Layout mode, participant can view him/herself in a layout window.
- When different size video windows are used in video layouts such as 1+2, 1+3, 1+4, etc., a participant can only be forced, in Personal Layout, to a video window of the same size as that selected for him/her in Conference Layout.
- When changing the Video Layout at the conference level, the video forcing settings are not applied to a new layout, and switching between participants is audio-activated. The video forcing setting is saved and applied the next time that layout is selected.
- Windows that are not assigned any participant display the current speaker and last speakers, but appear at random.
- Video Forcing doesn't change the conference profile.

Video Forcing can be implemented through Media Sources Tab when adding a new Conference or a new Meeting Room.

For information about preventing the MCU from reassigning cells in a forced layout that were assigned to endpoints that have disconnected through a system flag named **PRESERVE_PARTY_CELL_ON_FORCE_LAYOUT**, see [System Configuration Flags](#).

14 Click the **Audio Settings** tab.

The **New Profile - Audio Settings** dialog box opens.

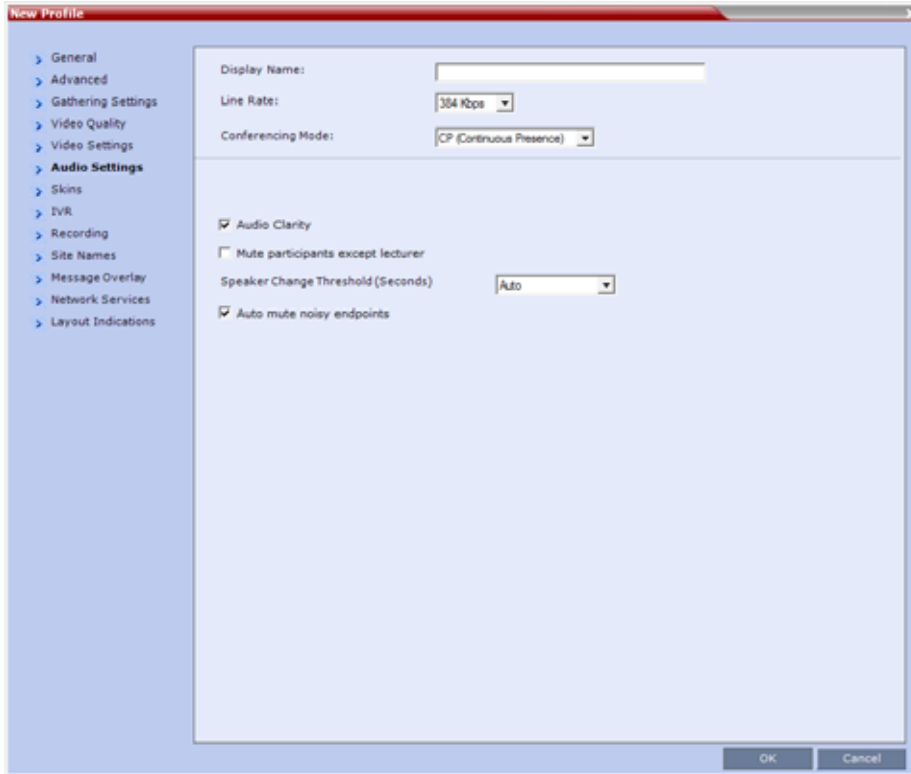

15 Define the following parameters:

New AVC CP Profile - Audio Settings Parameters

Field/Option	Description
Audio Clarity	<p>When selected, improves received audio from participants connected via low audio bandwidth connections, by stretching the fidelity of the narrowband telephone connection to improve call clarity.</p> <ul style="list-style-type: none"> The enhancement is applied to the following low bandwidth (8kHz) audio algorithms: G.729a and G.711 Note that when ENABLE_G729 value is NO, G.729 audio codec is disabled in favor of G.711. Audio Clarity is selected by default. Audio Clarity cannot be selected and deselected during an ongoing conference.

New AVC CP Profile - Audio Settings Parameters


Field/Option	Description
Mute participant except lecturer	<p>When the Mute Participants Except Lecturer option is enabled, the audio of all participants in the conference except for the lecturer can be automatically muted upon connection to the conference. This prevents other conference participants from accidentally interrupting the lecture, or from a noisy participant affecting the audio quality of the entire conference. Muted participants cannot unmute themselves unless they are unmuted from the Collaboration Server Web Client/RMX Manager.</p> <p>You can enable or disable this option during the ongoing conference.</p> <p>Notes:</p> <ul style="list-style-type: none"> • When enabled, the mute indicator on the participant endpoints are not visible because the mute participants was initiated by the MCU. Therefore, it is recommended to inform the participants that their audio is muted by using the Closed Caption or Message Overlay functions. • In the Collaboration Server Web Client/RMX Manager the mute by MCU indicator is listed for each muted participant in the Audio column in the Participants pane. • This option can be disabled during an ongoing conference, thereby unmuting all the participants in the conference. • If the endpoint of the designated lecturer is muted when the lecturer connects to the conference, the lecturer remains muted until the endpoint has been unmuted. • When you replace a lecturer, the MCU automatically mutes the previous lecturer and unmutes the new lecturer. • When you disconnect a lecturer from the conference or the lecturer leaves the conference, all participants remain muted but are able to view participants in regular video layout until the you disable the Mute Participants Except Lecturer option. • A participant can override the Mute Participants Except Lecturer option by activating the Mute All Except Me option using the appropriate DTMF code, provided the participant has authorization for this operation in the IVR Services. The lecturer audio is muted and the participant audio is unmuted. You can reactivate the Mute Participants Except Lecturer option after a participant has previously activated the Mute All Except Me option. The participant is muted and the lecturer, if designated, is unmuted. • In cascaded conferences, all participants (including the link participant) are muted. Only the lecturer is not muted.
Speaker Change Threshold	<p>Indicates the amount of time a participant must speak continuously before becoming the speaker.</p> <p>Select the desired threshold:</p> <ul style="list-style-type: none"> • Auto (Default, 3 seconds) • 1.5 seconds • 3 seconds • 5 seconds

New AVC CP Profile - Audio Settings Parameters

Field/Option	Description
Auto mute noisy endpoints	<p>This option is automatically enabled in new Profiles. When enabled, the RMX can detect AVC endpoints with a noisy audio channel and automatically mute them, reducing the noise heard by other conference participants. When the auto muted endpoint becomes the “speaker” the endpoint is automatically un-muted by the system. If the speaker halts his/her conversation and the line still emits noises, the endpoint will be automatically muted again.</p> <p>Clear this check box to disable the feature.</p> <p>For more details, see Automatic Muting of Noisy Endpoints.</p>

16 Click the **Skins** tab to modify the background and frames.

The **New Profile - Skins** dialog box opens.

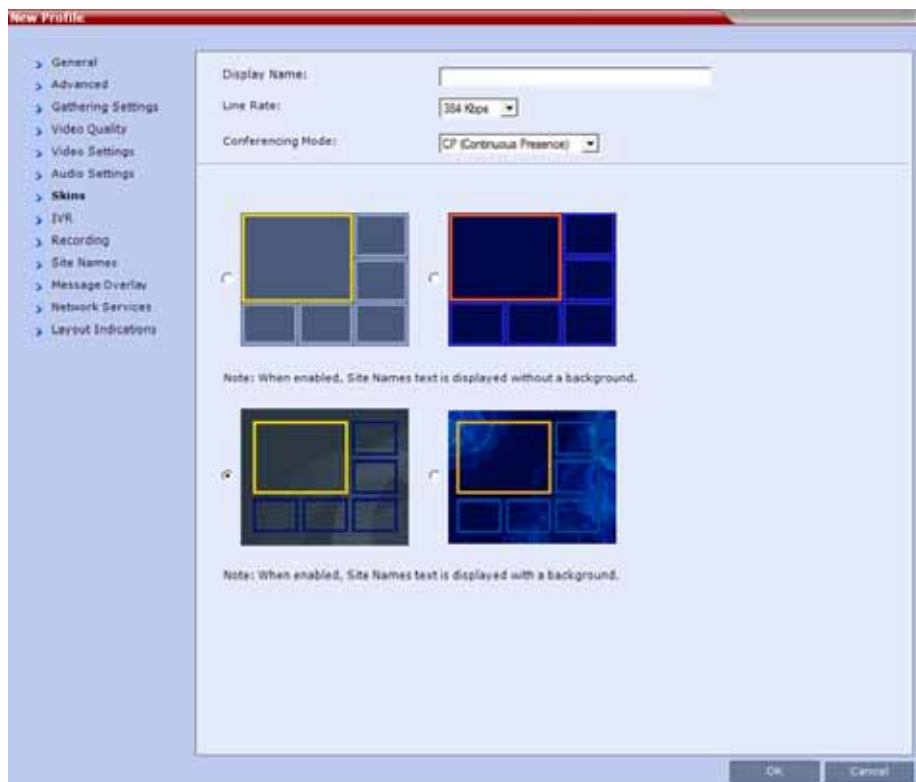

17 Select one of the Skin options.




Note: Skins - Description and Limitation

- In Classic View (for the first two skin options) the frames fill the screen with their borders touching.
- When Telepresence Mode is enabled, the Skin options are disabled as the system uses a black background and the frames and speaker indication are disabled.

18 Click the **IVR** tab.

The **New Profile - IVR** dialog box opens.

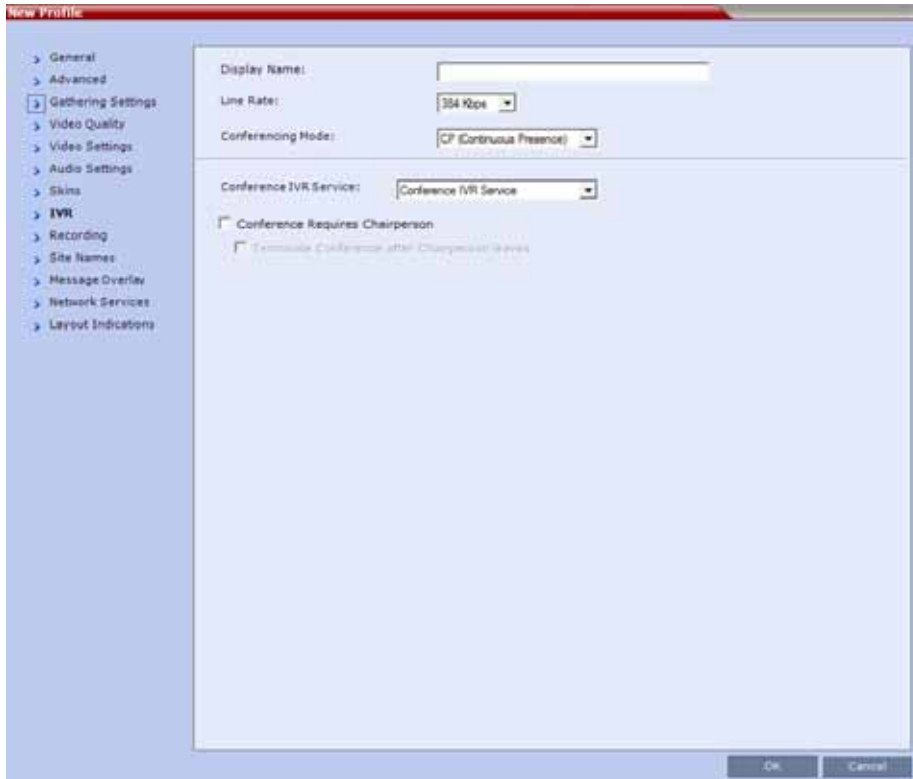

19 If required, set the following parameters:

New AVC CP Profile - IVR Parameters

Field/Option	Description
Conference IVR Service	The default conference IVR Service is selected. You can select another conference IVR Service if required.
Conference Requires Chairperson	Select this option to allow the conference to start only when the chairperson connects to the conference and to automatically terminate the conference when the chairperson exits. Participants who connect to the conference before the chairperson are placed on Hold and hear background music (and see the Welcome video slide). Once the conference is activated, the participants are automatically connected to the conference. When the check box is cleared, the conference starts when the first participant connects to it and ends at the predefined time or according to the Auto Terminate rules when enabled.

New AVC CP Profile - IVR Parameters


Field/Option	Description
Terminate conference after chairperson leaves	<p>Select this check box to automatically terminate the conference after the chairperson leaves. When the chairperson leaves, the <i>Chairperson Has Left</i> IVR message is played to (heard by) all participants, at which point the conference terminates. This way an operator does not need to monitor a conference to know when to terminate it manually.</p> <p>If there is a single chairperson in the conference who is changed to a regular participant the conference will be terminated as if the chairperson left. If there is more than one chairperson, then changing one chairperson to a regular participant will not terminate the conference. It is therefore recommended that before changing a single chairperson to regular participant, another participant first be changed to chairperson.</p>

**Note: Applicability to Cascading Conferences**

This applies to cascaded conferences, so long as the Collaboration Server version is 8.6 and up, and all MCUs in the topology are set in a require a chairperson for the conference duration.

20 Optional. Click the **Recording** tab to enable conference recording with the Polycom® RealPresence® Media Suite.

The **New Profile - Recording** dialog box opens.

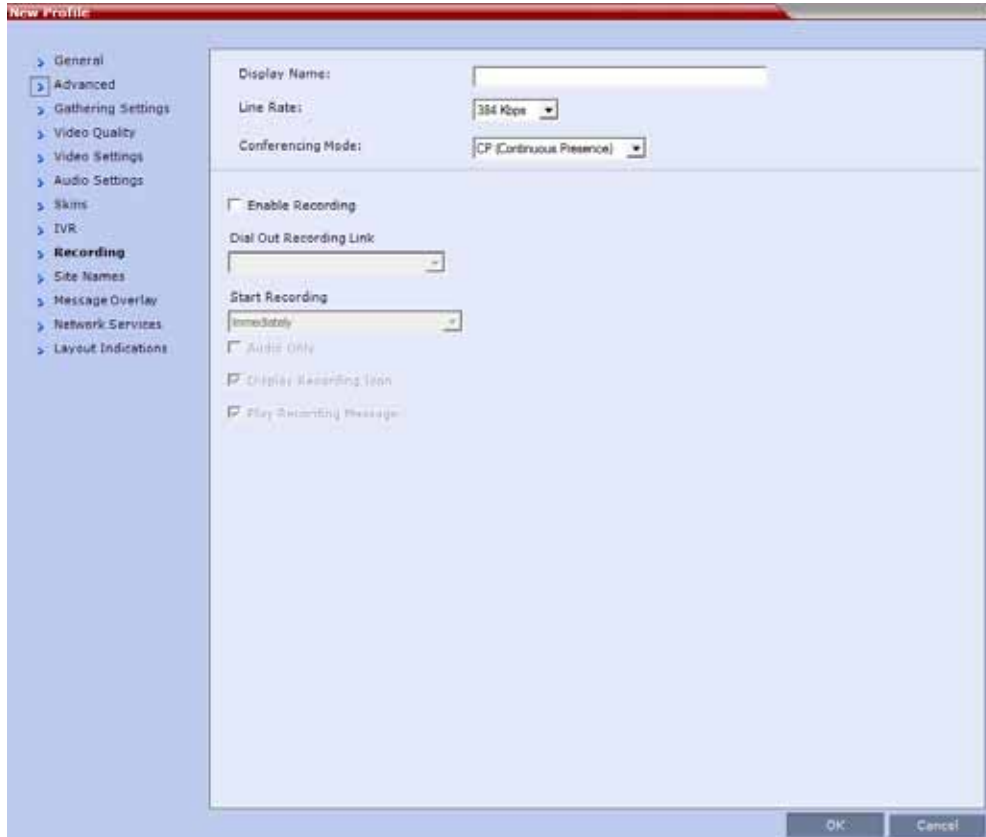

21 Define the following parameters:

New AVC CP Profile - Recording Parameters

Parameter	Description
Enable Recording	Select this check box to enable the Recording of the conference. If no Recording Links are found, an error message is displayed.
Dial Out Recording Link	Select the Recording Link to be used for conference recording. Recording Links defined on the Collaboration Server can be given a descriptive name and can be associated with a Virtual Recording Room (VRR) saved on the Polycom® RealPresence® Media Suite. For more information see Recording and Streaming Conferences
Start Recording	Select when to start the recording: <ul style="list-style-type: none"> • Immediately – Conference recording is automatically started upon connection of the first participant. • Upon Request – The operator or chairperson must initiate the recording (manual).

New AVC CP Profile - Recording Parameters

Parameter	Description
Audio Only	Select this option to record only the audio channel of the conference.
Display Recording Icon	This option is automatically selected to display a Recording Indication to all conference participants informing them that the conference is being recorded. Clear the selection to prevent the display of the recording icon.




Note: Recording Link

The Recording link (which is listed as a participant in the conference) does not support H.264 High Profile. If recording a conference that is set to H.264 High Profile, the Recording participant connects as Audio Only and records only the conference Audio.

22 Click the **Site Names** tab.

The **New Profile - Site Names** dialog box opens.

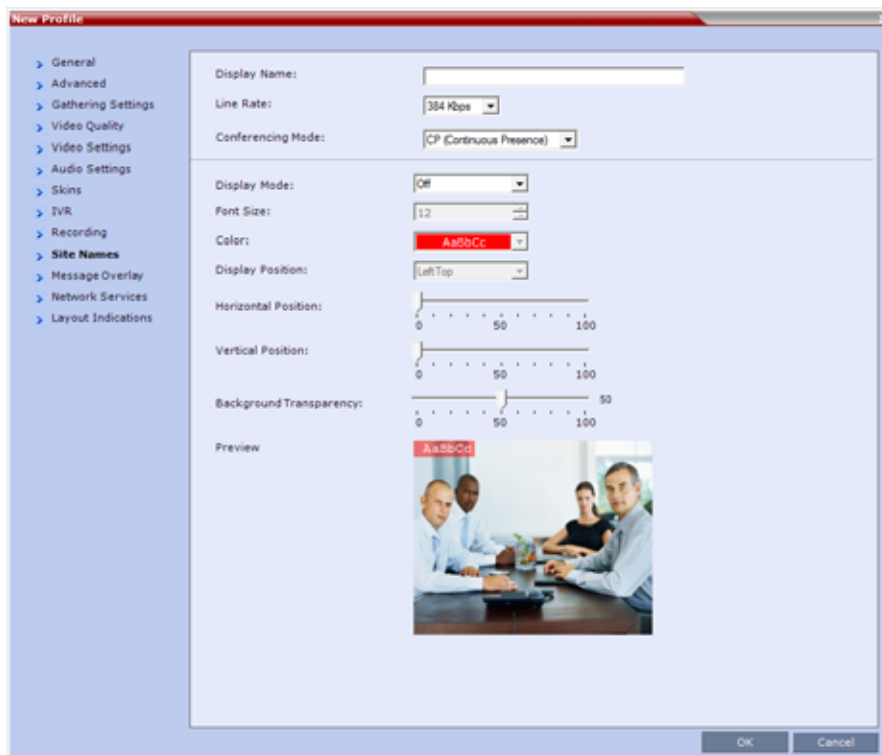

Using the **Site Name** dialog box, you can control the display of the site names by defining the font, size, color, background color and transparency and position within the Video Window. For a detailed description of the site names options see [Site Names Definition](#).

23 Define the following parameters:

New AVC CP Profile - Site Names Parameters

Field	Description
<i>Display Mode</i>	<p>Select the display mode for the site names:</p> <ul style="list-style-type: none"> • Auto - Display the Site Names for 10 seconds whenever the Video Layout changes. • On - Display the Site Names for the duration of the conference. • Off (default) - Do not display the Site Names and all other fields in this tab are grayed and disabled
Font Size	<p>Click the arrows to adjust the font size (in points) for the display of Site Names. Choose a Font Size that is suitable for viewing at the conference's video resolution. For example, if the resolution is CIF, a larger Font Size should be selected for easier viewing.</p> <p>Range: 9 - 32 points Default: 12 points</p>

Background Color Select the color of the Site Names display text. The color and background for Site Names display text is dependent on whether a Plain Skin or a Picture Skin was selected for the conference in the Profile - Skins tab. The choices are:

Plain Skin (Classic)



Default:
White Text
No Background
(For contrast, no background is shown as black when the text is white.)











Picture Skin






Default:
White Text
Red Background

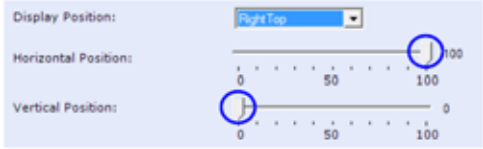Note: Choose a Background Color combination that is suitable for viewing at the conference's video resolution. At low resolutions, it is recommended to select brighter colors as dark colors may not provide for optimal viewing.

New AVC CP Profile - Site Names Parameters

Field	Description
Display Position	Select the pre-set position for the display of the Site (endpoint) Names.
	<div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"> <p>Selection</p> <p>LeftTop (Default)</p>  </div> <div style="width: 45%;"> <p>Site Names Position</p>  </div> </div> <p>Top</p>   <p>RightTop</p>   <p>LeftMiddle</p>   <p>RightMiddle</p>  

New AVC CP Profile - Site Names Parameters

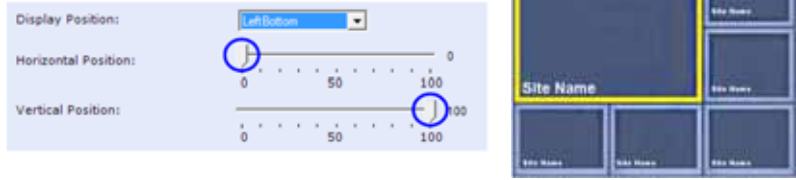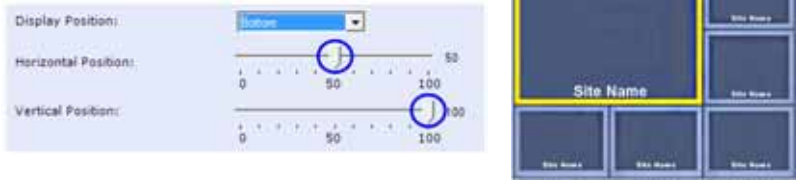
Field	Description
Display Position (cont.)	<p>LeftBottom</p>  <p>Bottom</p>  <p>RightBottom</p>  <p>Custom</p> <p>The current endpoint (site) names display position becomes the initial position for Site Names position adjustments using the Horizontal and Vertical Position sliders.</p>
Horizontal Position	<p>Move the slider to the left to move the horizontal position of the endpoint (site) names to the left within the video windows.</p> <p>Move the slider to the right to adjust the horizontal position of the endpoint (site) names to the right within the video windows.</p>
Vertical Position	<p>Move the slider to the left to move the vertical position of the Site names upward within the Video Windows.</p> <p>Move the slider to the right to move the vertical position of the endpoint (site) names downward within the video windows.</p>

New AVC CP Profile - Site Names Parameters

Field	Description
Background Transparency	<p>Move the slider to the left to decrease the transparency of the background of the endpoint (site) names text. 0 = No transparency (solid background color).</p> <p>Move the slider to the right to increase the transparency of the background of the endpoint (site) names text. 100 = Full transparency (no background color).</p> <p>Default: 50</p> <p>Note: This slider is only displayed if a Picture Skin is selected.</p>

24 Click the **Message Overlay** tab.

The **New Profile - Message Overlay** dialog box opens.

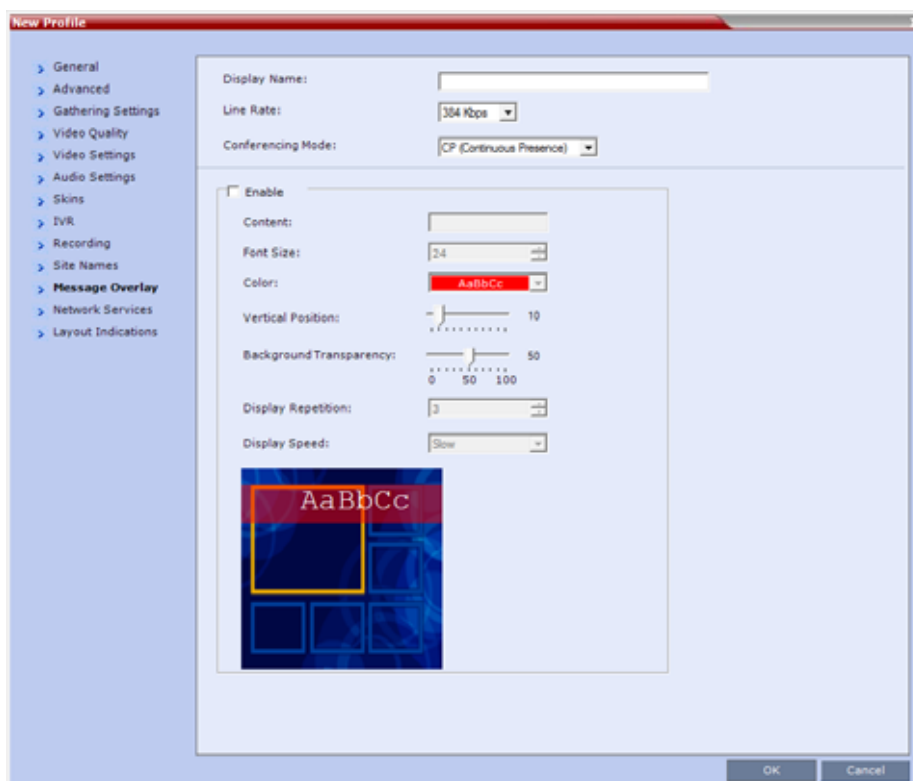


Message Overlay enables you to send text messages to all participants during ongoing Continuous Presence conferences.

The text message is seen as part of the in the participant's video layout on the endpoint screen or desktop display.


For more details, see [Sending Text Messages During a Conference Using Message Overlay](#).

25 Define the following fields:

New AVC CP Profile - Message Overlay Parameters


Field	Description
Enable	This option is disabled by default. Select this check box to enable Message Overlay or clear it to disable it.
Content	Enter the message text. The message text can be up to 50 Chinese characters.
Font Size	Click the arrows to adjust the font size (points) for the display of the message text. Font size range: 9 - 32 points, default: 24 points Note: In some languages, for example Russian, when a large font size is selected, both rolling and static messages may be truncated if the message length exceeds the resolution width.
Color	From the drop-down menu select the color and background of the displayed text. The choices are:  Default: White text on red background.
Vertical Position	Move the slider to the right to move the vertical position of the displayed text downward within the Video Layout. Move the slider to the left to move the vertical position of the displayed text upward within the Video Layout. Default: Top Left (10)
Background Transparency	Move the slider to the left to decrease the transparency of the background of the message text. 0 = No transparency (solid background color). Move the slider to the right to increase the transparency of the background of the message text. 100 = Full transparency (no background color). Default: 50
Display Repetition	Click the arrows to increase or decrease the number of times that the text message display is to be repeated. Default: 3
Display Speed	Select whether the text message display is static or moving across the screen, the speed in which the text message moves: Static, Slow, Fast Default: Slow

As the fields are modified the Preview changes to show the effect of the changes.
 For example:

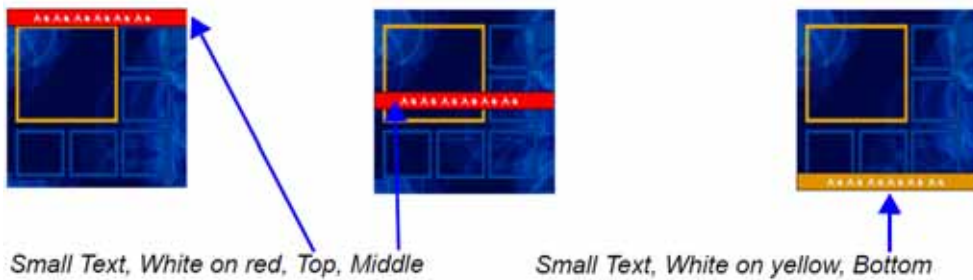

26 Click the **Network Services** tab.

The **New Profile - Network Services** dialog box opens.

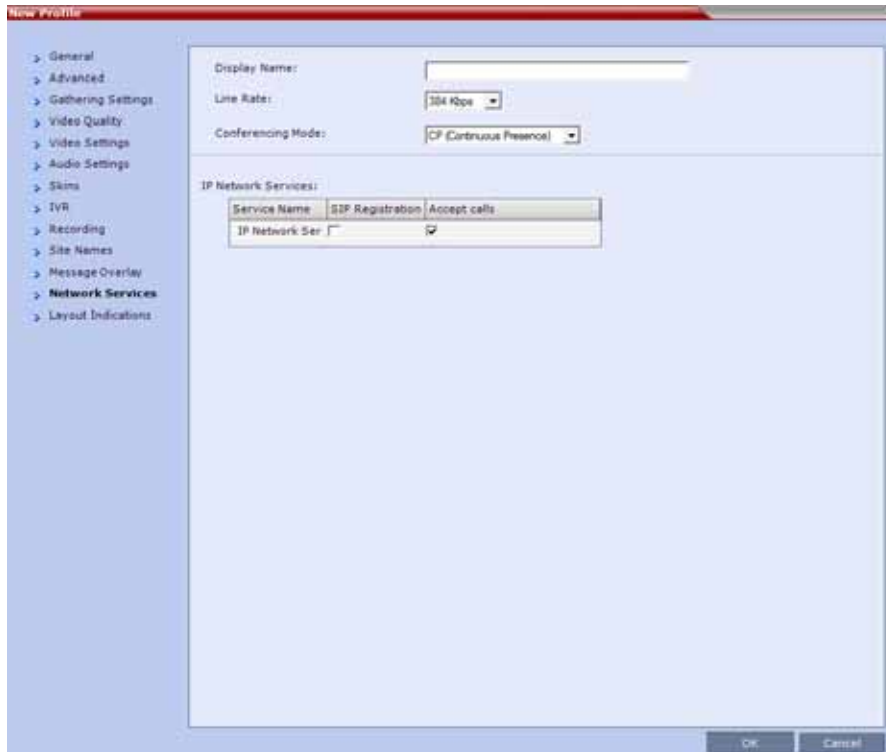

Registration of conferencing entities such as ongoing conferences, Meeting Rooms, Entry Queues, SIP Factories, and Gateway Sessions with SIP servers is done per conferencing entity. This allows better control on the number of entities that register with each SIP server.

Selective registration is enabled by assigning a conference Profile in which registration is configured to the required conferencing entities. Assigning a conference Profile in which registration is not configure to conferencing entities will prevent them from registering.


By default, Registration is disabled in the Conference Profile, and must be enabled in Profiles assigned to conferencing entities that require registration.

27 Define the following parameters:

New AVC CP Profile - Network Services Parameters


Parameter	Description
IP Network Services	
Service Name	This column lists all the defined Network Services, one or several depending on the system configuration.
SIP Registration	To register the conferencing entity to which this profile is assigned with the SIP Server of the selected Network Service, click the check box of that Network Service in this column. When SIP registration is not enabled in the conference profile, the Collaboration Server's registering to SIP Servers will each register with an URL derived from its own signaling address. This unique URL replaces the non-unique URL, dummy_tester, used in previous versions.
Accept Calls	To prevent dial in participants from connecting to a conferencing entity when connecting via a Network Service, clear the check box of the Network Service from which calls cannot connect to the conference.

- 28 Click the **Layout Indications** tab.
 The **Layout Indications** dialog is displayed.

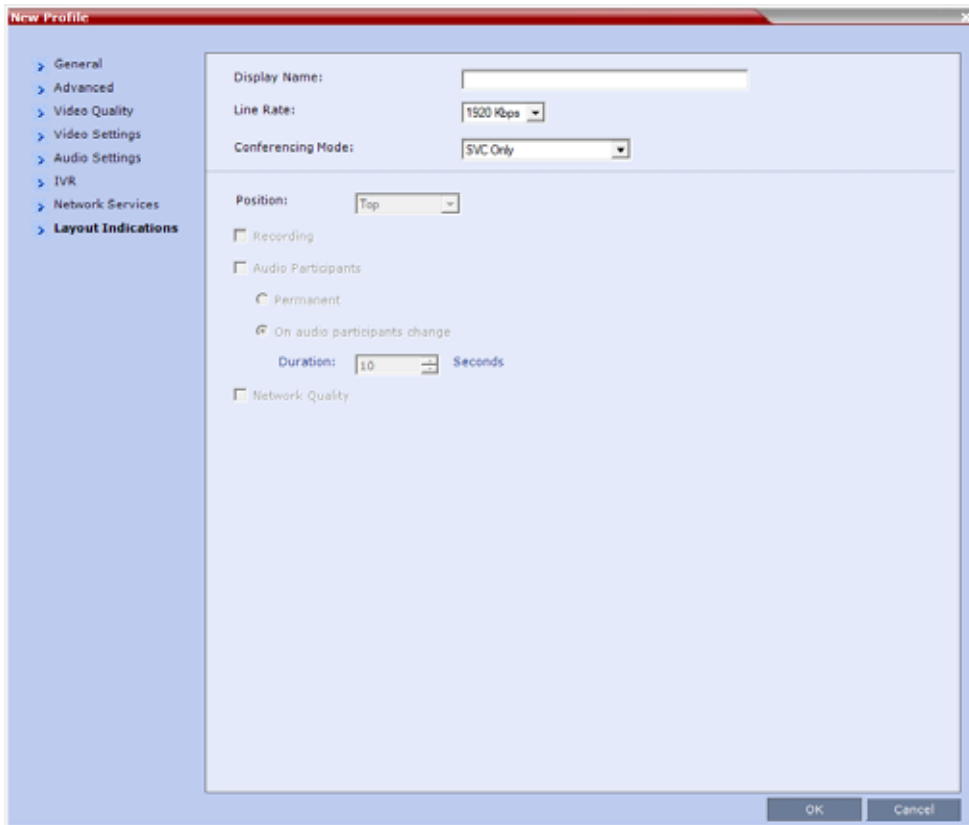

The Layout Indications are displayed in the conference video layout as an icon group that includes:

- Recording
- Audio Participants
- Network Quality

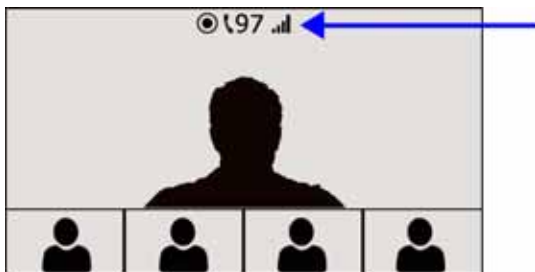

**Note: Layout Indications tab**

- The Layout Indications tab is only displayed in either CP or CP and SVC (mixed) conferencing modes.
- Beginning with version 8.4, the configuration options of the Layout Indications tab have replaced the following system flags:
 - ▲ DISABLE_SELF_NETWORK_IND
 - ▲ SELF_IND_LOCATION

For further information on layout indications see [Layout Indications](#).

- 29** Modify the following parameters to configure the display, position, and duration of the indication icons.

New AVC CP Profile - Layout Indications Parameters

Field	Description
Position	Use the Position drop-down menu to configure the display position of the indication icons group. Icons can be displayed in the following positions: <ul style="list-style-type: none"> • Top-left • Bottom-left • Top center (default) • Bottom • Top-right • Bottom-right
Recording	Select the check box to display the Recording icon. The Recording indication icon is a duplicate of the Display Recording Icon field in the Recording tab of the Profile dialog. For more information, see Recording and Streaming Conferences .
Audio Participants	Select the check box to display the Audio Participants icon. <ul style="list-style-type: none"> • Permanent - Sets the Audio Participant Indication to display permanently. In this setting it is only displayed when audio participants are connected. • On audio participants change - Sets the Audio Participant Indication to display for a short period only when the number of audio participants changes. <ul style="list-style-type: none"> ▲ Duration - Sets the amount of time the Audio Participant icon displays. For more information see Audio and Video Participants Indication .
Network Quality	To display the Network Quality icon, select the check box. For more information see Network Quality Indication .

- 30** Click **OK** to complete the Profile definition.

A new Profile is created and added to the Conference Profiles list.


Additional Information for Setting CP Profiles

This section includes detailed explanation of various CP Profile settings:

- [Gathering Phase](#)
- [Overlay Layouts](#)
- [Site Names Definition](#)
- [Sending Text Messages During a Conference Using Message Overlay](#)
- [Selecting the Chinese Font for Text Display](#)

Gathering Phase

The Gathering Phase of an AVC (CP only) conference is the time period during which participants are connecting to a conference. During the *Gathering Phase*, a mix of live video from connected endpoints is combined with both static and variable textual information about the conference into a slide which is displayed on all connected endpoints.

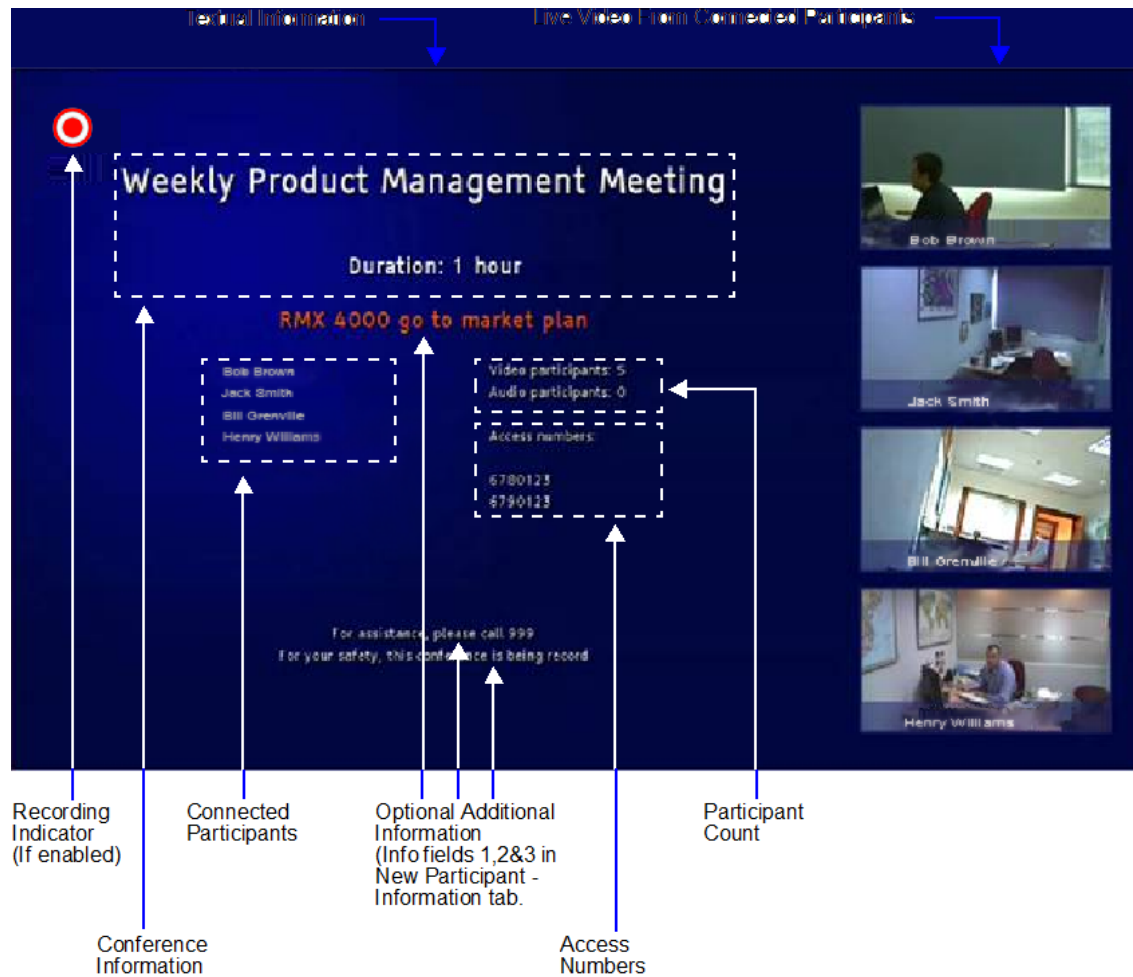

During the Gathering Phase, the audio of all participants can be heard, and the video of active speakers is displayed in the video windows as they begin talking.

All connected participants are kept informed about the current conference status including names of connected participants, participant count, participant type (video/audio) etc.

Gathering Phase Guidelines

- Gathering Phase is only available in AVC only (CP only) conferences. It is not supported in Video Switching conferences and SVC Only conferences.
- The Gathering Phase slide can be displayed at any time during the conference by entering the Show Participants DTMF code, *88.
Note: When the display of the Gathering Phase slide is removed, the message overlay text is also removed.
- The names of the first eight participants to connect are displayed. If eight or more participants connect, the 8th row displays "...".
- Static text in the Gathering Phase slide such as the field headings: Organizer, Duration, Video/Audio Participants, Access Number, IP are always displayed in the language as configured in the Polycom Virtual Meeting Rooms Add-in for Microsoft Outlook. The following languages are supported:
 - English
 - French
 - German
 - International Spanish
 - Korean
 - Japanese
 - Simplified Chinese
- Dynamic text in the Gathering Phase slide such as the meeting name, participants' names, access numbers and the additional information entered in the Info1/2/3 fields of the Gathering Settings tab of the conference Profile are displayed in the language of the meeting invitation.
- The language of a Gathering Phase slide of a conference configured to include a Gathering Phase that is not launched by the Polycom Conferencing Add-in for Microsoft Outlook is configured by the administrator. Using the Collaboration Server Web Client, the administrator selects the language for the Gathering Phase slide. The language selected can be different to that of the Collaboration Server Web Client used by the administrator to perform the configuration.

- Content can be sent during the Gathering Phase. The content is displayed in the large video window of the participant's layout while the Gathering slide is displayed in a smaller video window in the layout.



- Gathering is not supported in Cascading Conferences.

Gathering Phase Duration

The duration of the Gathering Phase can be customized by the administrator so that it is long enough to be viewed by most connected participants yet short enough so as not to over extend into the scheduled conferencing time.

The Gathering Phase duration is configured for the Collaboration Server, by the following System Flags in system.cfg in the **Setup > System Configuration**:

- **CONF_GATHERING_DURATION_SECONDS**

Range: 0 - 3600 seconds

Default: 180 seconds

The Gathering Phase duration of the conference is measured from the scheduled start time of the conference.

Example: If the value of the flag is set to 180, the Gathering slide is displayed for three minutes to all participants starting at the conference Start Time, and ending three minutes after the conference Start Time.

For participants who connect before Start Time, the Gathering slide is displayed from the time of connection until the end of the Gathering duration period.

- **PARTY_GATHERING_DURATION_SECONDS**

Range: 0 - 3600 seconds

Default: 15 seconds

The value of this flag determines the duration of the display of the Gathering slide for participants that connect to the conference after the conference Start Time.

Participants connecting to the conference very close to of the end of the Gathering Phase (when there are fewer seconds left to the end of the Gathering Phase than specified by the value of the flag) have the Gathering slide displayed for the time specified by the value of the flag.

Example: If the value of the flag is set to 15, the Gathering Phase slide is displayed to the participant for 15 seconds.

Enabling the Gathering Phase Display

The Gathering Phase is enabled for per conference in the Conference Profile. The profile also includes the dial-in numbers and the optional additional information to display on the slide.

Conferences that are configured to include a Gathering Phase that are not launched by the Polycom Conferencing Add-in for Microsoft Outlook need the following information to be entered via the **New Profile** or **Profile Properties — Gathering Settings** dialog box:

- Display Name (Optional, the Meeting Name is used if left blank.)
- Displayed Language
- Access Number 1 / 2 (Optional.)
- Additional Information (Optional free text)
 - Info 1
 - Info 2
 - Info 3

Conferences launched by the Polycom Conferencing Add-in for Microsoft Outlook receive this information from the meeting invitation.

For more information see [Defining New Profiles](#).

Overlay Layouts

In Overlay Layouts additional participant endpoints can be displayed over the full screen display of the conference speaker.

The following Overlay Layouts are available for use in CP Conferences:

1 Standalone Endpoint



2 Standalone Endpoints



3 Standalone Endpoints



Although the following Overlay Layout is included in the **Profiles - Video Settings** dialog box, it is not available for use in any Conferencing Mode and is only available when included in the Polycom® Multipoint Layout (MLA) application:

Single Overlay Cell: 2-4 Screens



**Note: Overlay Layouts Availability**


These Overlay Layouts will only be available in ITP (Telepresence) conferences when support for Overlay Layouts is included in the Multipoint Layout (MLA) application.

Guidelines for using the Overlay Layouts

- The Overlay Layouts are supported:
 - In CP Conferencing Mode only.
 - With ITP, non-ITP and CTS endpoints used only as standard endpoints.
 - With both new and classic Skins in Collaboration Server CP mode.
- Overlay Layouts are not supported in ITP conferences as they are not supported by the MLA application.
- The Overlay Layouts are 20% of the height of the endpoint display and are supported on endpoints of both 16:9 and 4:3 aspect ratios.
- Overlay Layouts are recommended for use with high resolution endpoints.
- Overlay Layouts are not selected as defaults by the system and are not included in the Auto Layout settings.
- Message Overlay is not affected by the use of Overlay Layouts and is displayed on top of the video layouts.
- Site Names are displayed for all cells. Because the smaller cells are located at the bottom of the large cell, when enabling Site Names it is advisable not to locate the Site Name at the bottom of the cells.
- Standalone Endpoint Cells are displayed each with a border. For all Overlay Layouts, border color is dependent on the selected Skin.
- System behavior for Video Forcing and Personal Layout Control when using the Overlay Layouts during an ongoing conference is the same as for other video layouts.
- Overlay Layouts are only available for selection for the Conference Layout and are not available for selection for Personal Layout.
- During an ongoing conference you cannot select the Overlay Layouts via PCM or Click&View.
- PCM menus can be used when the Overlay Layouts are active, and they are displayed as the top layer.

Selecting the Overlay Layouts

The Overlay Layouts are selected in the **New Profile - Video Settings** dialog box, in the **Overlay** tab of the Video Layout tree.

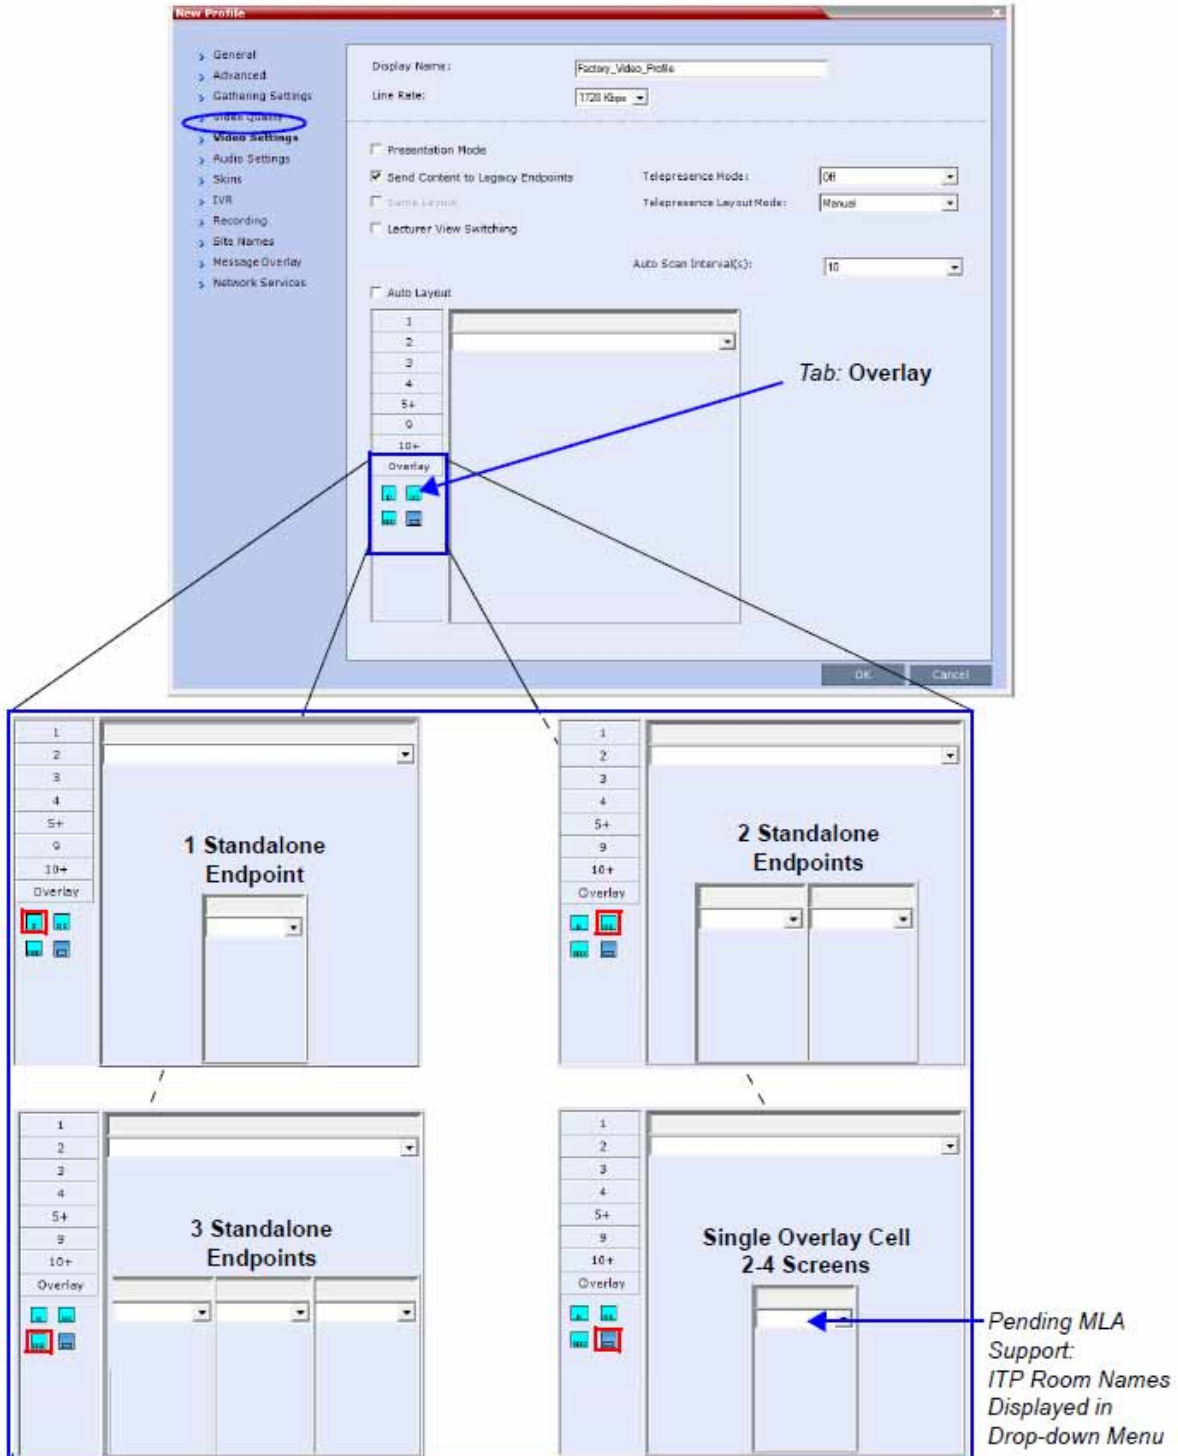

Site Names Definition



Note: Site Names Definition

The Site Names feature is not supported on the Collaboration Server (RMX) 1800.

During conferences you can view the names of the endpoints that are connected to the conference in your endpoint video layout windows. The MCU can display up to 33 characters of the endpoint name, depending on the window layout (size).

The following is an example of endpoint name display in the endpoint screen:



The display of the site names is enabled or disabled in the conference Profile for CP Only or Mixed CP and AVC conferences for AVC-based endpoints.

SVC-based endpoints handle the display of the site names themselves and are not dependant on the conference Profile. The Site Names option is not supported in Video Switching conferences.

The displayed name is determined as follows:

- The system displays the name that is defined at the endpoint.
- If the endpoint does not send its name:
 - For a defined H.323 or SIP participant:
 - ◆ The system displays the name from the participant definition.
 - For an undefined H.323 participant:
 - ◆ Display the H.323 ID alias.
 - or
 - Display the E.164 alias.
 - or
 - Display nothing if all the fields are empty.
 - For a SIP undefined participant:

- ◆ Display the SIP DisplayName field.
- or
- Display the SIP Address (SIP application server).
- or
- Display the SIP ContactDisplay field.
- or
- Display nothing if all the fields are empty.
- For a defined H.320 participant (Collaboration Server 2000/4000):
 - ◆ The system displays the name from the participant definition.
- For an undefined H.320 participant:
 - ◆ Display the Terminal Command String (TCS-2) to identify the participant.
 - or
 - Display nothing if the string is not received or empty.
- If the endpoint Display Name is changed in the Collaboration Server Web Client, it overrides all the above.

You can control the display of the site names by defining the font, size, color, background color and transparency and position within the video window in the **Profile - Site Name** dialog box.

Guidelines

- Site Names display is Off by default in a new profile.
- Site Names can be enabled to function in one of two modes:
 - **Auto** – Site names are displayed for 10 seconds whenever the conference layout changes.
 - **On** – Site names are displayed for the duration of the conference.
- During the display of the site names, the video frame rate is slightly reduced
- Site Names display is not available for Video Switching (VSW) conferences.
- Site Names display characteristics (position, size, color) can be modified during an ongoing conference using the **Conference Properties - Site Names** dialog box. Changes are immediately visible to all participants.
- Site Names display text and background color is dependent on the Skin selected for the conference:
 - **Plain Skins** - Site Names text is displayed without a background.
 - **Picture Skins** - Site Names text is displayed with a background.


Shorten the Site Name Display

The **SIP_OMIT_DOMAIN_FROM_PARTY_NAME** System Flag can be used to remove Domain Names from SIP dial-in participants' Site Names. This prevents long domain names being appended to SIP participant names, as frequently happens when the Collaboration Server is used with a DMA.

The flag must be manually added to the System Configuration and its value modified as follows:

- **YES** (Default) - The domain name is omitted from SIP dial-in participant names.
- **NO** - The domain name remains as part of SIP dial-in participant names.

For more information, see [Modifying System Flags](#).

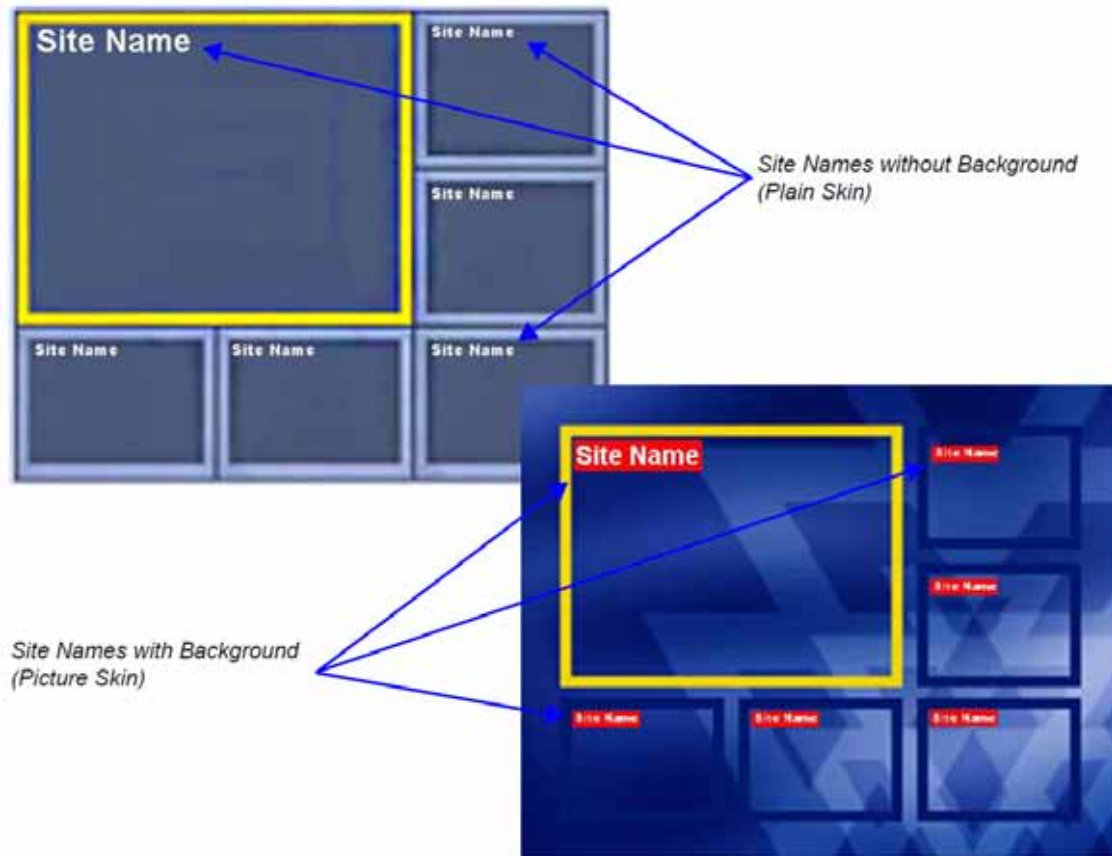



Site Names Display Position

The position of the Site Names displayed during the conference is controlled in the **Profile - Site Names** tab.

The following options can be used to define the display position:

- **Display Position** drop-down menu - To select a preset position.
- **Horizontal Position** and **Vertical Position** sliders - To move them to customize the preset position. Dragging the sliders sets the **Display Position** drop-down menu field value to **Custom**.

- Selecting **Custom** in Display Position drop-down menu. When selected, the current position becomes the initial position for position adjustments and then using the Horizontal and Vertical Position sliders to define the exact position.

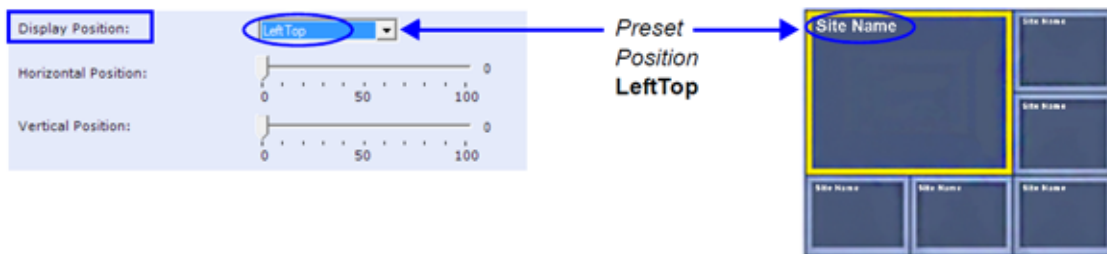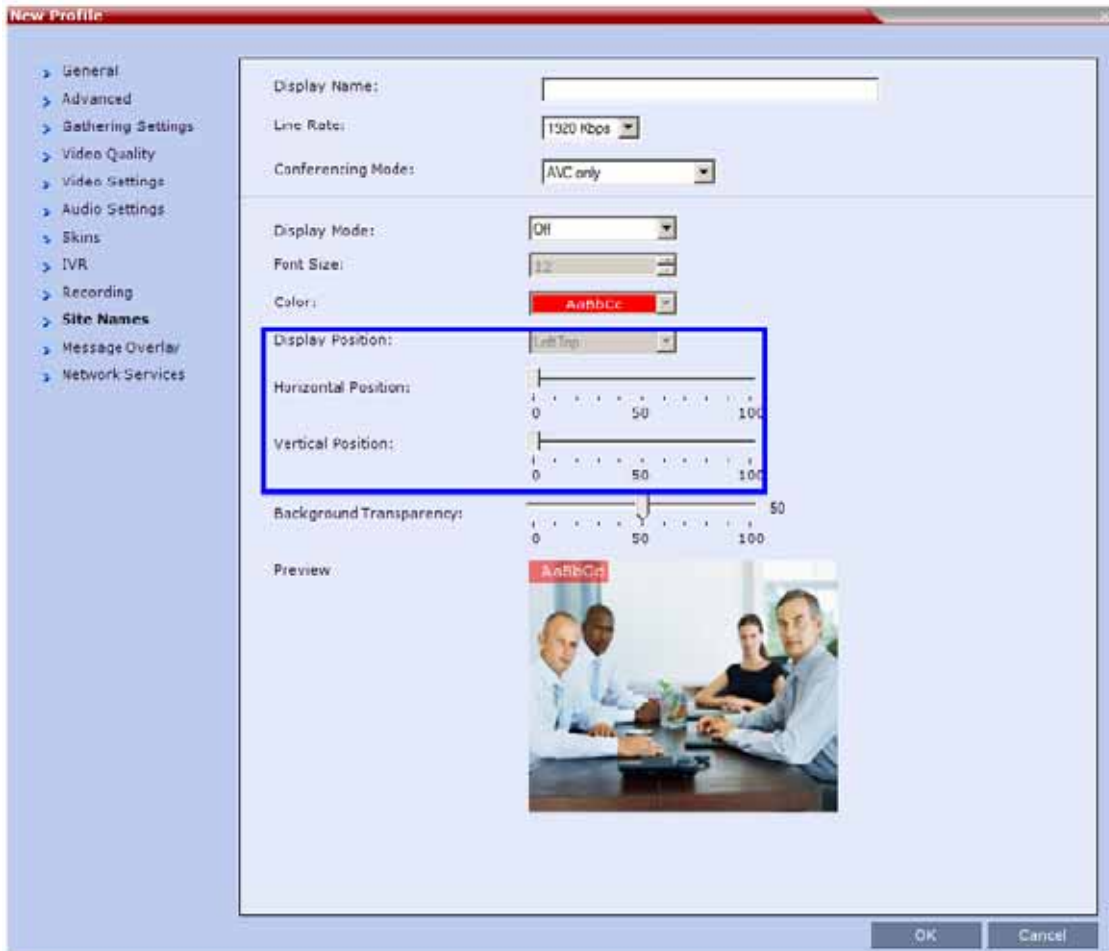

The adjusted position of the Site Names can be viewed in the **Preview**.

Sending Text Messages During a Conference Using Message Overlay

The Message Overlay option in the Conference Profile allows the operator or administrator to send text messages to a single participant, a number of selected participants or all participants during an ongoing conference.


The number of characters that can be included in a message varies according to the language and can differ due to the type of font used. For example, the available number of characters in Chinese is 50 (32 for Collaboration Server 1800) for English and 50 (48 for Collaboration Server 1800) and for Russian.



Note: Language Dependency

In some languages, for example Russian, when a large font size is selected, both rolling and static messages may be truncated if the message length exceeds the resolution width.

The message can be set to be displayed at various positions on the screen in different colors, static or scrolling.

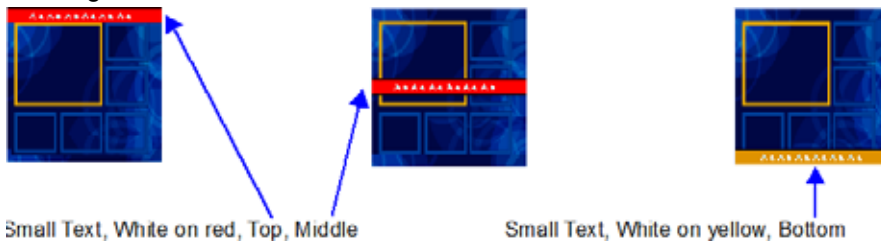

Guidelines

- Text messaging using Message Overlay is supported in:
 - Continuous Presence (CP) conferences
 - *Same Layout* mode
 - Encrypted conferences
 - Unicode or ASCII characters
- Text messages using Message Overlay cannot be displayed:
 - In Video Switching (VSW) conferences.
 - In Lecture Mode
 - When the PCM menu is active
 - On endpoints that have their video suspended
- Text messaging using Messages Overlay can be enabled, disabled or modified (content and display parameters) during the ongoing conference.
- The number of characters for each language can vary due to the type of font used, for example, the available number of characters for Chinese is 18, while for English and Russian it is 48.
 - In some languages, for example Russian, when large font size is selected, both rolling and static messages may be truncated if the message length exceeds the resolution width.
- Changes to the Message Overlay Content or display characteristics (position, size, color and speed) are immediately visible to all participants. When there is a current Message Overlay:
 - The current message is stopped immediately, even it has not completed all of its repetitions.

- The Display Repetition count is reset to 1.
- The new message content is displayed *<Display Repetition>* times or until it is stopped and replaced by another content change.
- If during the ongoing conference the **Show Number of Participants** DTMF option (default DTMF *88) is used, when the displayed number of participants is removed, the message overlay text is also removed.
- The text messages cannot be sent via the Content channel.
- Message Overlay text settings are not saved in the *Conference Template* when saving an ongoing conference as a Conference Template.


For a detailed description of all the Message Overlay parameters, see [New AVC CP Profile - Message Overlay Parameters](#).

Sending Messages to All Conference Participants using Message Overlay

To send messages to all conference participants Using Message Overlay:

- 1 In the Conferences List pane, double click the name of the conference to have Message Overlay enabled or right-click the conference name and then click **Conference Properties**.
- 2 Click the **Message Overlay** tab.
- 3 Select the **Enable** check box.

The **Send Text Message to Participant** dialog box is displayed.

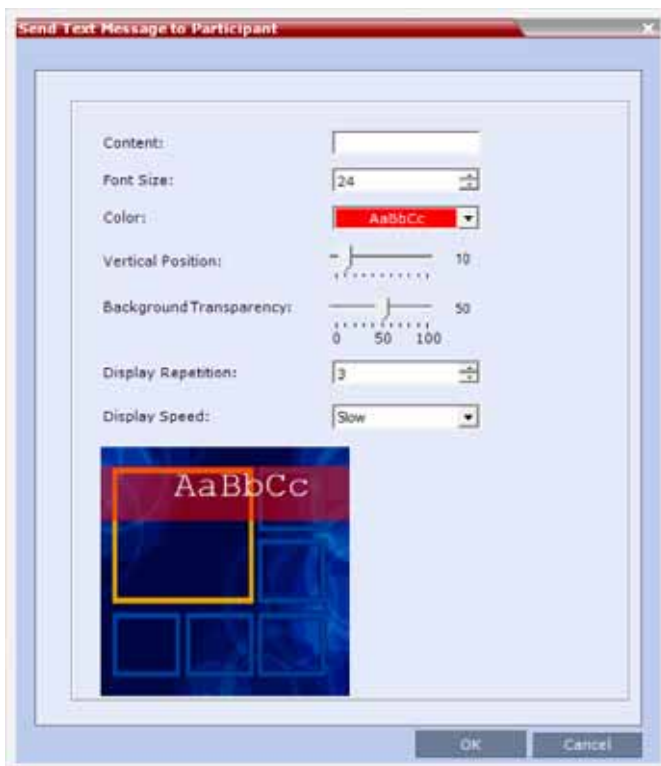

- 4 In the **Content** field, enter the text to be displayed to all the conference participants.

- 5 Modify the remaining fields in the dialog box to display the message as required.
- 6 Click **OK**



Note: Resuming Overlay Messaging

When sending text messages using Message Overlay and stopping, you must artificially change (and cancel the change) one of the message overlay properties in the **Conference Properties - Message Overlay** dialog box before you can resume sending the same message.

To cancel the Message Overlay display:

- 1 In the Conferences List pane, double click the name of the conference to have Message Overlay enabled or right-click the conference name and then click **Conference Properties**.
- 2 Click the **Message Overlay** tab.
- 3 Clear the **Enable** check box.
- 4 Click **OK**.

Sending Messages to Selected Participants Using Message Overlay

To send text to selected participants:

- 1 In the Participant List pane, choose a participant or a number of participants.
- 2 In the Participant List pane, right-click a participant or a number of participants and then select **Send Text Message to Participant**.

The rest of configuration steps are the same with what in sending messages to all conference participants, see [Sending Messages to All Conference Participants using Message Overlay](#).

Selecting the Chinese Font for Text Display

When using the RMX Web Client or the RMX Manager in Chinese (either Simplified Chinese or Traditional Chinese is selected as an available language in the **Setup > Customize Display Settings > Multilingual Setting**, you can select one of several Chinese fonts for use when sending text over video. The font is used to display text for the following:

- Display of Site Names
- Text messages sent using Message Overlay
- Text displayed on the Gathering slide when Chinese is selected as the display language

Selecting the Chinese Font

The Chinese fonts can be selected in the CP Conference **Profile - Advanced** dialog box only.



The following Chinese fonts are available for selection:

- Heiti (Default)
- Songti
- Kaiti
- Weibei

The Chinese font cannot be changed during an existing conference. It can only be modified in the conference profile.

A participant moved to another conference will be shown the font used by the new conference.

Defining an AVC Video Switching Conference Profile

**Note: VSW Conferencing Mode Platform Limitation**

- VSW conferencing mode is not supported in Collaboration Server Virtual Edition.
- Video Switching conferencing mode is unavailable to ISDN participants.

An AVC Video Switching-enabled Profile must be created prior to running Video Switching conferences. This profile can be assigned to Meeting Rooms, conferences, reservations and Entry Queues


To connect to a Video Switching conference via an Entry Queue, the Entry Queue must be Video Switching enabled and must be set to the same line rate as the target conference. It is recommended to use the same Profile for both the target conference and Entry Queue.

Video Switching conferencing mode is unavailable to ISDN participants.

When the Conferencing Mode is set to Video Switching, only the tabs and fields relevant to Video Switching conferences are displayed and enabled.

To Create a Video Switching Profile:

- 1 In the **RMX Management** pane, click **Conference Profiles**.
- 2 In the **Conference Profiles** pane, click the **New Profile** button.
The **New Profile – General** dialog box opens.

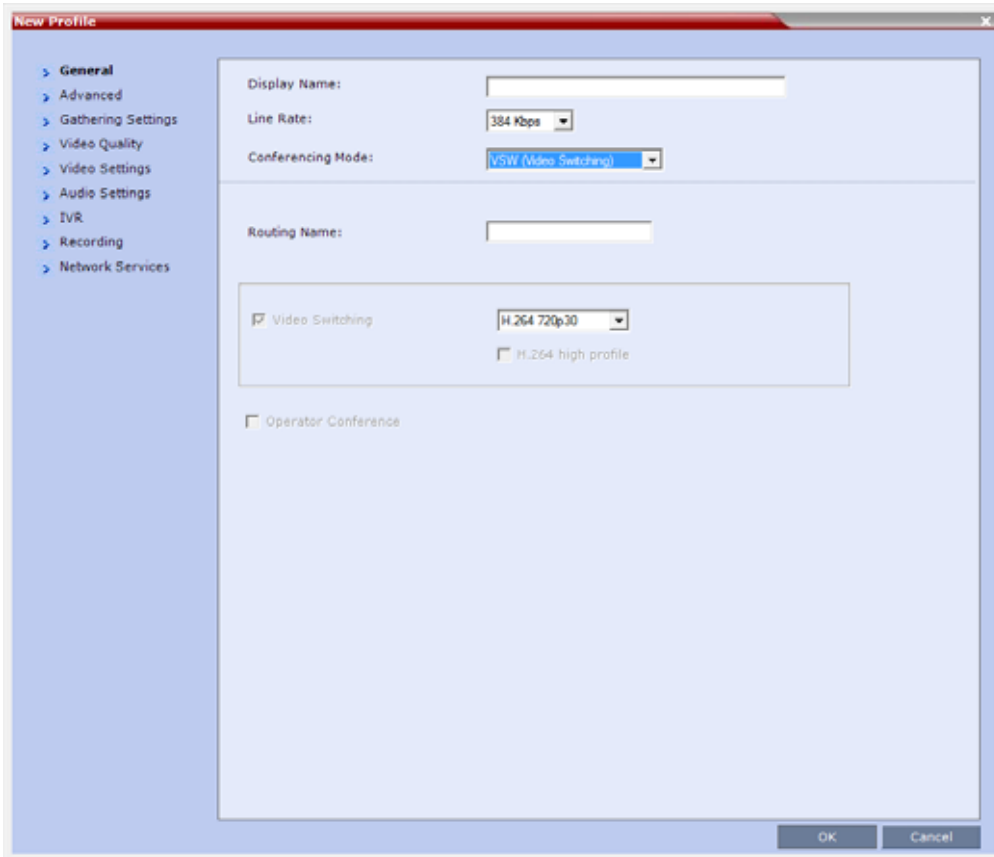

3 Define the New Profile - General parameters:

New AVC VSW Profile - General Parameters

Field/Option	Description
Display Name	<p>Enter a unique Profile name, as follows:</p> <ul style="list-style-type: none"> English text uses ASCII encoding and can contain the most characters (length varies according to the field). European and Latin text length is approximately half the length of the maximum. Asian text length is approximately one third of the length of the maximum. <p>It is recommended to use a name that includes the Profile type, such as Weekly Video Switching conference.</p> <p>Note: This field is displayed in all tabs.</p>

New AVC VSW Profile - General Parameters

Field/Option	Description
Line Rate	<p>Select the conference bit rate. The line rate represents the combined video, audio and Content rate.</p> <p>When defining a VSW profile, select a line rate that all connecting participants can use. Participants that their endpoint or network that do not support this line rate cannot connect to the conference or will connect as Audio Only (if resources were designated as Voice ports).</p> <p>If a high definition resolution will be selected for the conference video, make sure that the selected line rate is higher than the minimum line rate threshold defined in the flag HD_THRESHOLD_BITRATE for Video Switching conferences.</p> <p>The default setting is 384 Kbps.</p> <p>Note: This field is displayed in all tabs.</p>
Conferencing Mode	<p>Select VSW (Video Switching) to define a VSW conference Profile.</p> <p>Note: This field is displayed in all tabs.</p>
Routing Name	<p>Enter the Profile name using ASCII characters set.</p> <p>The Routing Name can be defined by the user or automatically generated by the system if no Routing Name is entered as follows:</p> <ul style="list-style-type: none"> • If an all ASCII text is entered in Display Name, it is used also as the Routing Name. • If any combination of Unicode and ASCII text (or full Unicode text) is entered in Display Name, the ID (such as Conference ID) is used as the Routing Name.
Video Switching	<p>This check box is automatically selected when the Conferencing Mode is set to Video Switching.</p> <p>Select the video protocol and resolution for the conference:</p> <ul style="list-style-type: none"> • H.264 1080p60 • H.264 1080p30 • H.264 720p60 • H.264 720p30 • H.264 SD 30 • H.264 CIF • H.263 CIF • H.261 CIF <p>All participants must connect at the same line rate and use the same video resolution. Participants with endpoints that do not support the selected line rate and resolution will connect as secondary (audio only).</p> <p>For more information, see Video Switching (VSW) Conferencing.</p>
H.264 High Profile	<p>Select this check box to enable the use of H.264 High Profile in Video Switching conferences.</p> <p>By default the High Profile check box is not selected.</p> <p>If H.264 is not the selected video protocol the check box is inactive (grayed out).</p> <p>For more information, see H.264 High Profile Support in Video Switching Conferences.</p>
Operator Conference	<p>This option is unavailable and disabled in VSW Conferencing Mode.</p>



Note: Conference Line Rate reduction Impact on Resolution

Reducing the conference line rate may result in the system reverting to the default resolution for that line rate (for example, 720p instead of 1080p). You may need to select the required resolution again, provided the selected line rate is higher than the minimum threshold line rate defined for that resolution in the system configuration. For more details, see [Minimum Threshold Line Rate System Flags](#) below.

- 4 Define the various Profile parameters for a Video Switching conference. As it is an AVC -bases conferencing mode, many of the fields and options are identical to the CP Profile. For more information, see [Defining AVC CP Conferencing Profiles](#).

The following AVC-based conferencing options are **not available** in VSW conferences:

- Operator Conference
- Gathering Phase
- Video Quality - Send Content To Legacy Endpoints
- Video Settings:
 - ◆ Presentation Mode
 - ◆ Auto Layout/Same Layout (only full screen, 1x1 layout display is available)
 - ◆ Auto Scan
- Skins
- Site Names
- Message Overlay

- 5 Click **OK**.

H.264 High Profile Support in Video Switching Conferences

Beginning with Version 7.6, the H.264 High Profile video protocol is supported in Video Switching (VSW) conferences.

Guidelines

- H.264 High Profile is supported in VSW conferences in H.323 and SIP networking environments only
- For H.264 High Profile-enabled VSW conferences, all endpoints connecting to the conference must support High Profile and connect to the VSW conference at the exact line rate and exact resolution defined for the conference. Endpoints that do not meet these requirements are connected as Secondary (audio only).
- For H.264 Base Profile VSW conferences, both High Profile and Base Profile supporting endpoints connect using the H.264 Base Profile.
 - Endpoints that do not support the exact conference line rate are disconnected.
 - Endpoints that do not support the exact video settings such as protocol and resolution defined for the conference will be connected as Secondary (audio only).

Minimum Threshold Line Rate System Flags

The following table lists the System Flags that control the minimum line rate threshold for the various resolutions available for High Profile-enabled VSW conferences.

These system flags must be manually added to the **Setup menu > System Configuration** before you can update their values. For more information see the [Modifying System Flags](#).

System Flags - Minimum Threshold Line Rates

Flag Name	Minimum Threshold Line Rate (Kbps)
VSW_CIF_HP_THRESHOLD_BITRATE	64
VSW_SD_HP_THRESHOLD_BITRATE	128
VSW_HD_720p30_HP_THRESHOLD_BITRATE	512
VSW_HD_720p50_60_HP_THRESHOLD_BITRATE	832
VSW_HD_1080p_HP_THRESHOLD_BITRATE	1024
VSW_HD_1080p60_HP_THRESHOLD_BITRATE	1024
VSW_HD_1080p60_BL_THRESHOLD_BITRATE	1728

Line rate and resolution combinations are checked for validity. If the selected line rate is below the minimum line rate threshold required for the selected resolution, the line rate is automatically adjusted to the minimum line rate threshold value for the selected resolution.

The value of the SUPPORT_HIGH_PROFILE system flag (used for CP conferences) has no effect on VSW conferences.

Defining SVC and Mixed CP and SVC Conference Profiles



Note: Using Conference Profiles in Version 8.1.4.J.

Although SVC Conferencing Mode options are available in Conference Profiles, it is advised that they not be used with Version 8.1.4.J.



Note: Recommendations and Limitations

When using Polycom® RealPresence® Platform, the Conference Profiles are defined in the RealPresence DMA system component and not directly in RealPresence Collaboration Server (RMX) 1500/1800/2000/4000.

Defining SVC Conference Profiles

The SVC conference Profile definition is started by selecting SVC as the Conferencing Mode. The dialog boxes and their options change as the conference behavior and the MCU video processing change. For example, site name display is performed and controlled by the SVC endpoint and not by the MCU as in CP conferences.


To define SVC Only Profile:

- 1 In the **RMX Management** pane, click **Conference Profiles**.
- 2 In the **Conference Profiles** pane, click the **New Profile** button.

The **New Profile – General** dialog box opens.

By default, the **Conferencing Mode** is set to **CP**.

3 Select **SVC Only** to define the SVC Profile.

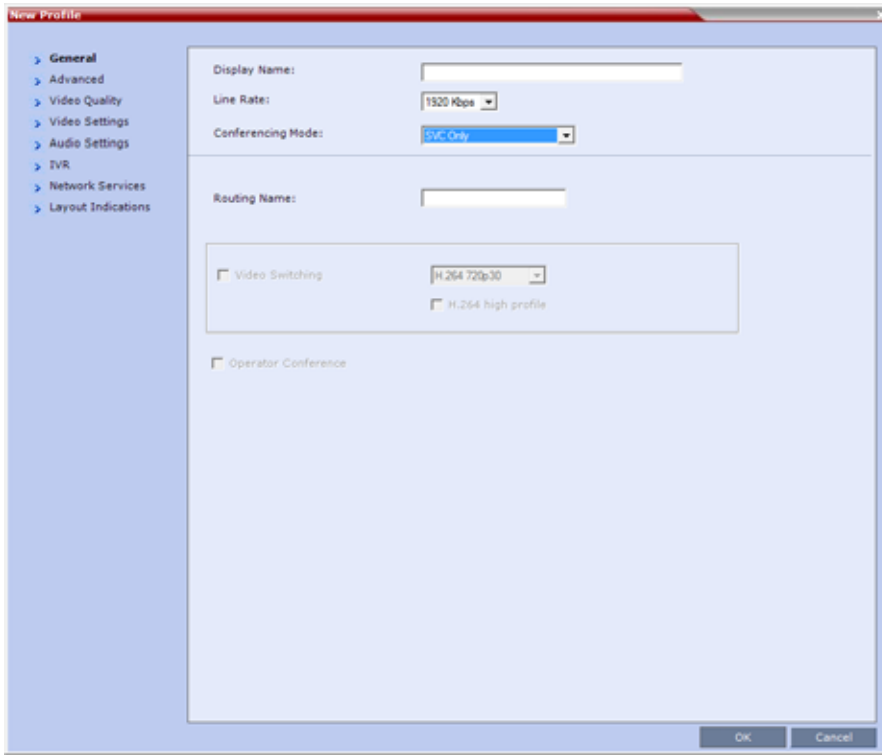

The profile tabs and options change accordingly and only supported options are available for selection. Unsupported options are disabled (grayed out).

4 Define the Profile name and, if required, the **Profile - General** parameters:

New SVC Profile - General Parameters


Field/Option	Description
Display Name	<p>Enter a unique Profile name, as follows:</p> <ul style="list-style-type: none"> English text uses ASCII encoding and can contain the most characters (length varies according to the field). European and Latin text length is approximately half the length of the maximum. Asian text length is approximately one third of the length of the maximum. <p>This is the only parameter that must be defined when creating a new profile. Note: This field is displayed in all tabs.</p>
Line Rate	<p>Select the conference bit rate. The line rate represents the combined video, audio and Content rate.</p> <p>The default setting for SVC Only conferences is 1920kbps. Note: This field is displayed in all tabs.</p>

New SVC Profile - General Parameters

Field/Option	Description
Routing Name	<p>Enter the Profile name using ASCII characters set. You can define the Routing Name or it can be automatically generated by the system if no Routing Name is entered as follows:</p> <ul style="list-style-type: none"> • If an all ASCII text is entered in Display Name, it is used also as the Routing Name. • If any combination of Unicode and ASCII text (or full Unicode text) is entered in Display Name, the ID (such as Conference ID) is used as the Routing Name.

5 Click the **Advanced** tab.

The **New Profile – Advanced** dialog box opens.

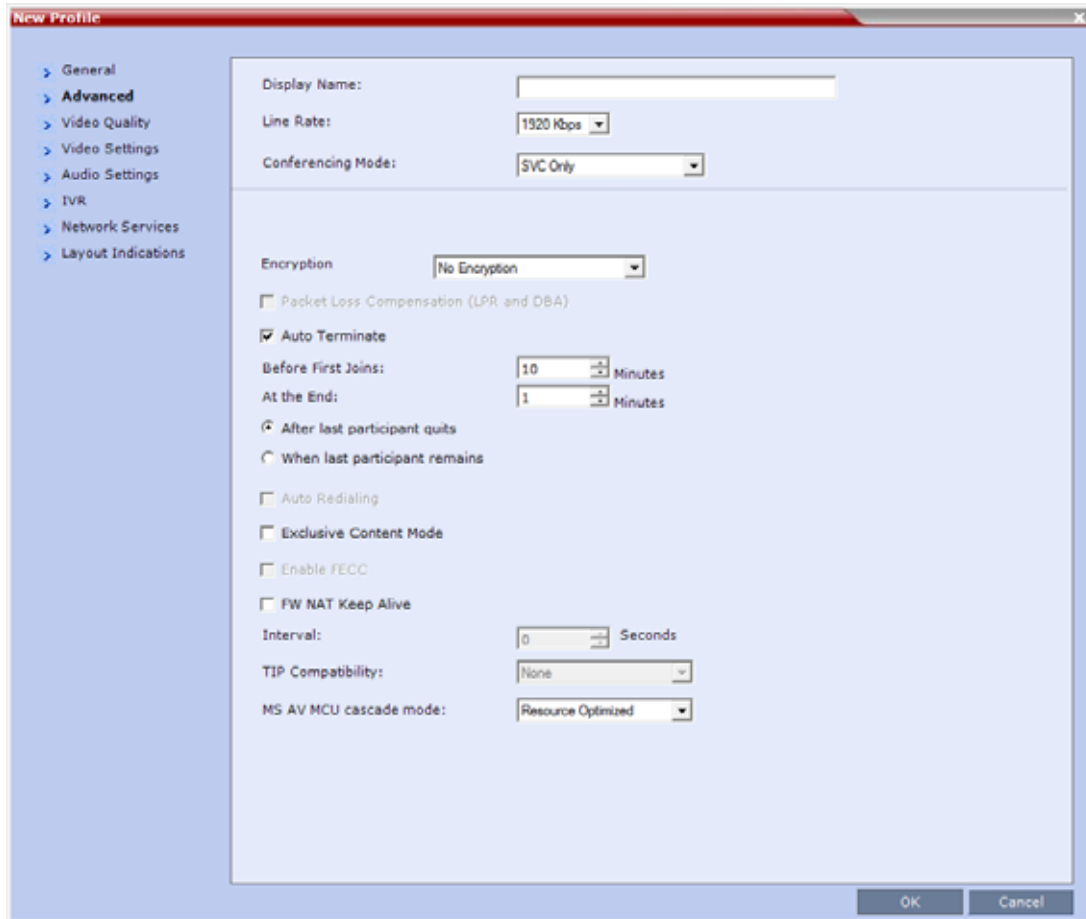


6 Define the following supported parameters:

New SVC Profile - Advanced Parameters

Field/Option	Description
Encryption	<p>Select the Encryption option for the conference:</p> <ul style="list-style-type: none"> • Encrypt All - Encryption is enabled for the conference and all conference participants must be encrypted. • No Encryption - Encryption is disabled for the conference. • Encrypt when Possible - enables the negotiation between the MCU and the endpoints and let the MCU connect the participants according to their capabilities, where encryption is the preferred setting. For connection guidelines see Mixing Encrypted and Non-encrypted Endpoints in one Conference. <p>For more information, see Packet Loss Compensation - LPR and DBA.</p>
Auto Terminate	<p>When selected (default), the conference automatically ends when the termination conditions are met:</p> <ul style="list-style-type: none"> • Before First Joins — No participant has connected to a conference during the n minutes after it started. Default idle time is 10 minutes. • At the End - After Last participant Quits — All the participants have disconnected from the conference and the conference is idle (empty) for the predefined time period. Default idle time is 1 minute. • At the End - When Last Participant Remains — Only one participant is still connected to the conference for the predefined time period (excluding the recording link which is not considered a participant when this option is selected). It is not recommended to select this option for SVC Conferences. Default idle time is 1 minute.
Exclusive Content Mode	<p>When selected, Content broadcasting is limited to one participant preventing other participants from interrupting the Content broadcasting while it is active. For more details, see</p>
FW NAT Keep Alive	<p>When selected, a FW NAT Keep Alive message is sent at an interval defined in the field below the check box.</p>
Interval	<p>The time in seconds between FW NAT Keep Alive messages.</p>

7 Click the **Video Quality** tab.

The **New Profile – Video Quality** dialog box opens.

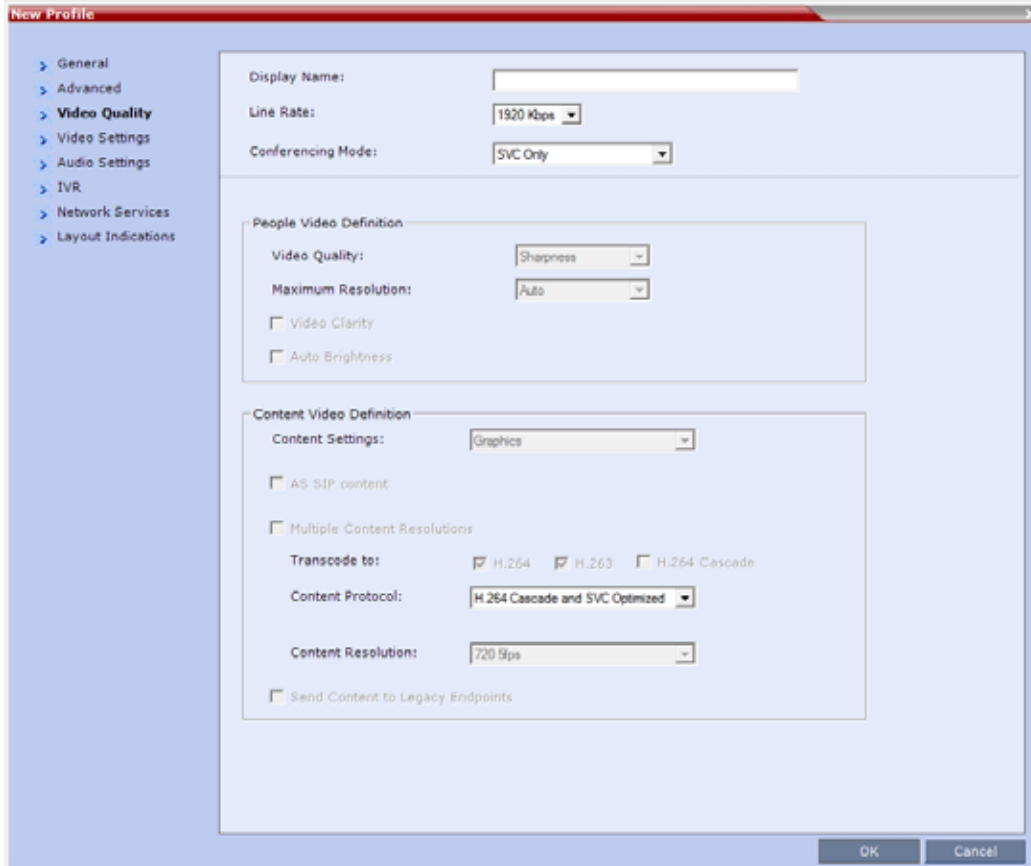

8 In SVC Conferencing Mode, the video and Content sharing parameters cannot be modified and they are set to the following parameters:


New SVC Profile - Video Quality Parameters

Field/Option	Description
People Video Definition	
Video Quality	Only Sharpness is available in SVC Conferencing Mode. The MCU sends the video stream in the resolution required by the endpoint.
Maximum Resolution	Only Auto is available in SVC Conferencing Mode. The MCU sends the video stream in the resolution required by the endpoint.

New SVC Profile - Video Quality Parameters


Field/Option	Description
Content Video Definition	
Content Settings	<p>Select the transmission mode for the Content channel:</p> <ul style="list-style-type: none"> • Graphics — basic mode, intended for normal graphics • Hi-res Graphics — a higher bit rate intended for high resolution graphic display • Live Video — Content channel displays live video • Customized Content Rate — manual definition of the Conference Content Rate, mainly for cascading conferences. <p>Selection of a higher bit rate for the <i>Content</i> results in a lower bit rate for the people channel.</p>
Content Protocol	<p>Select the Content Protocol to be used for content sharing in Highest Common Content Sharing Mode.</p> <ul style="list-style-type: none"> • H.263 Content is shared using the H.263 protocol. Use this option when most of the endpoints support H.263 and some endpoints support H.264. • H.263 & H.264 Auto Selection When selected, content is shared using H.263 if a mix of H.263-supporting and H.264-supporting endpoints are connected, or H.264 if all connected endpoints have H.264 capability. • H.264 Cascade Optimized All Content is shared using the H.264 content protocol and is optimized for use in cascaded conferences. • H.264 HD (default) Ensures high quality Content when most endpoints support H.264 and HD resolutions. <p>Note: When Multiple Content Resolutions is selected, the Content Protocol field is hidden.</p> <p>For more information, see Content Protocols and Defining Content Sharing Parameters for a Conference</p>

9 Click the **Video Settings** tab.

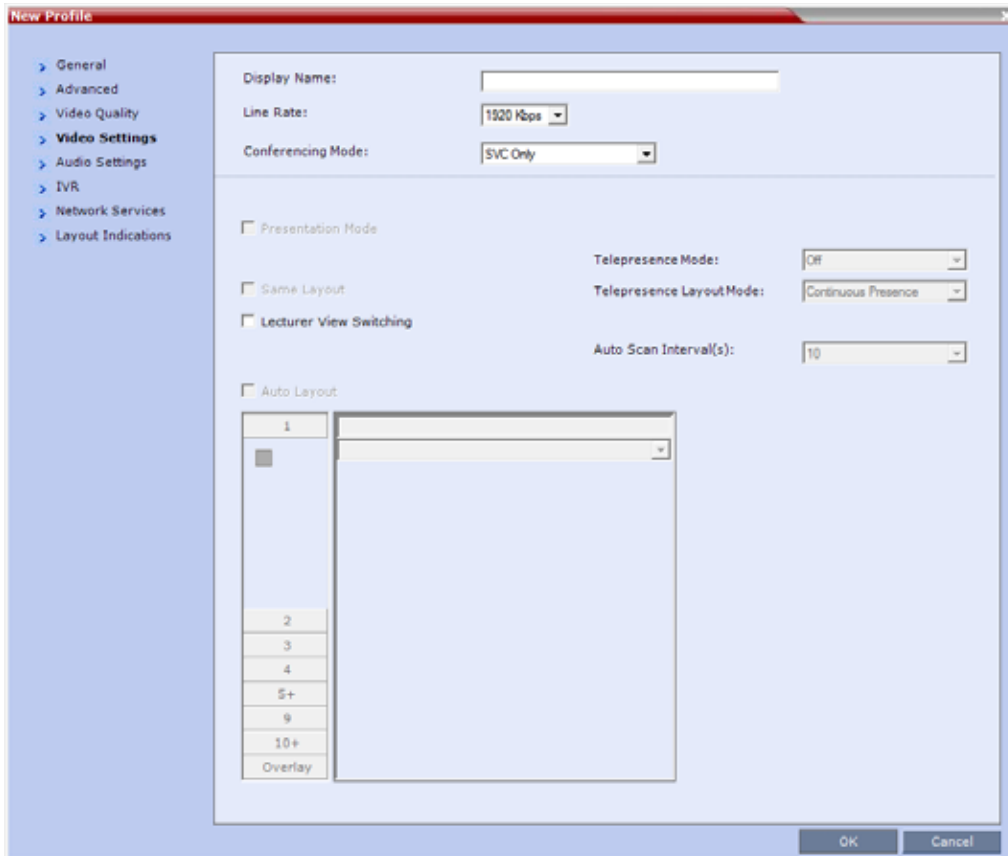


In SVC conferences, each endpoint determines its own video layout and there is no conference level layout selected. Therefore, all the Video Settings parameters are disabled.

10 Click the **Audio Settings** tab.

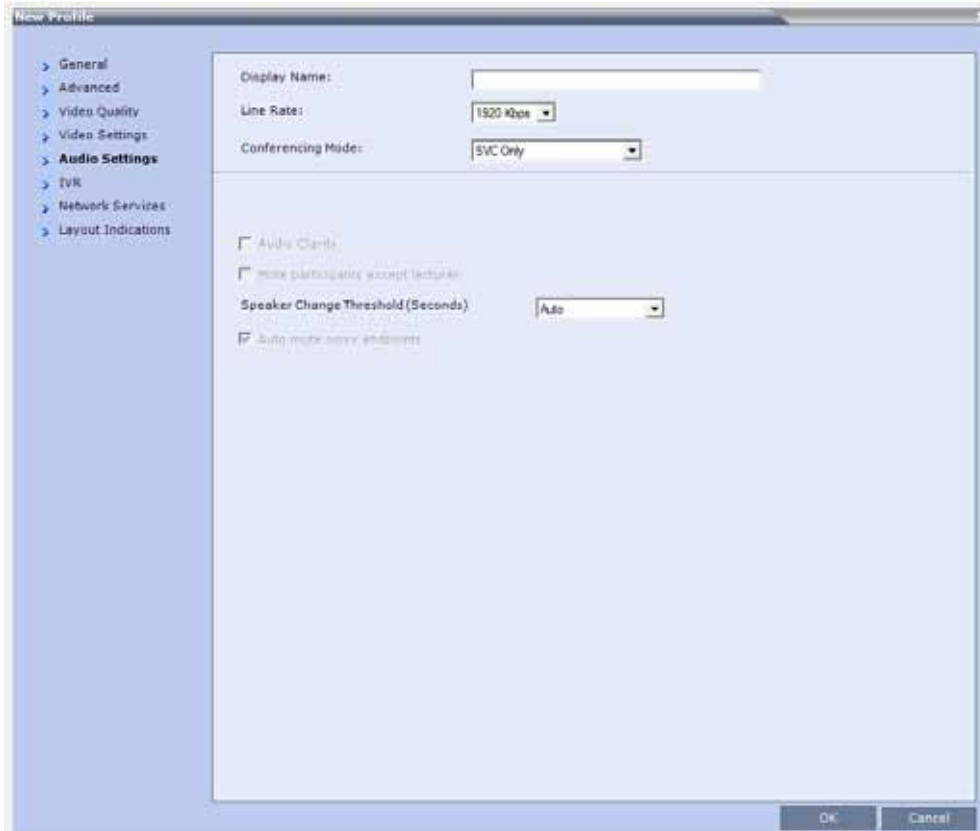

11 If required, define the **Speaker Change Threshold: Auto** (Default, 3 seconds), **1.5**, **3**, or **5**. It indicates the amount of time a participant must speak continuously before becoming the speaker.

12 Click the **IVR** tab.

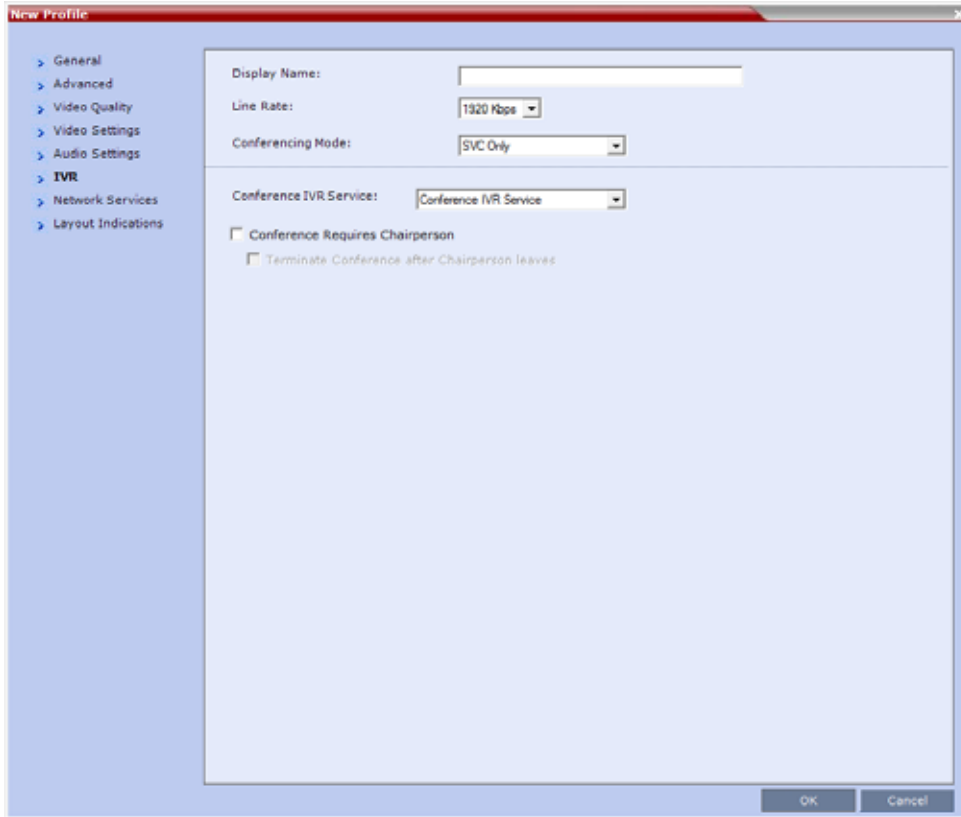

13 If required, set the following parameters:

New SVC Profile - IVR Parameters

Field/Option	Description
Conference IVR Service	The default conference IVR Service is selected. You can select another conference IVR Service if required.
Conference Requires Chairperson	Select this option to allow the conference to start only when the chairperson connects to the conference and to automatically terminate the conference when the chairperson exits. Participants who connect to the conference before the chairperson are placed on Hold and hear background music (and see the Welcome video slide). Once the conference is activated, the participants are automatically connected to the conference. When the check box is cleared, the conference starts when the first participant connects to it and ends at the predefined time or according to the Auto Terminate rules when enabled.

New SVC Profile - IVR Parameters

Field/Option	Description
Terminate conference after chairperson leaves	Select this check box to automatically terminate the conference after the chairperson leaves. When the chairperson leaves, the “Chairperson Has Left” IVR message is played to all participants, at which point the conference terminates. This way an operator does not need to monitor a conference to know when to terminate it manually. If there is a single chairperson in the conference who is changed to a regular participant the conference will be terminated as if the chairperson left. If there is more than one chairperson, then changing one chairperson to a regular participant will not terminate the conference. It is therefore recommended that before changing a single chairperson to regular participant, another participant first be changed to chairperson.



Applicability to Cascading Conferences

This applies to cascaded conferences, so long as the Collaboration Server version is 8.6 and up, and all MCUs in the topology are set in a require a chairperson for the conference duration.

The following IVR features are not supported during SVC conferences:

- Roll Call
- Invite Participants
- Entry and Exit tones
- Click & View
- PCM




Note: Features applicability in SVC conferences

On Collaboration Server1800, Roll Call, Entry and Exit tones are supported in SVC-only conferences.

14 Click the **Network Services** tab.

The **New Profile - Network Services** tab opens.

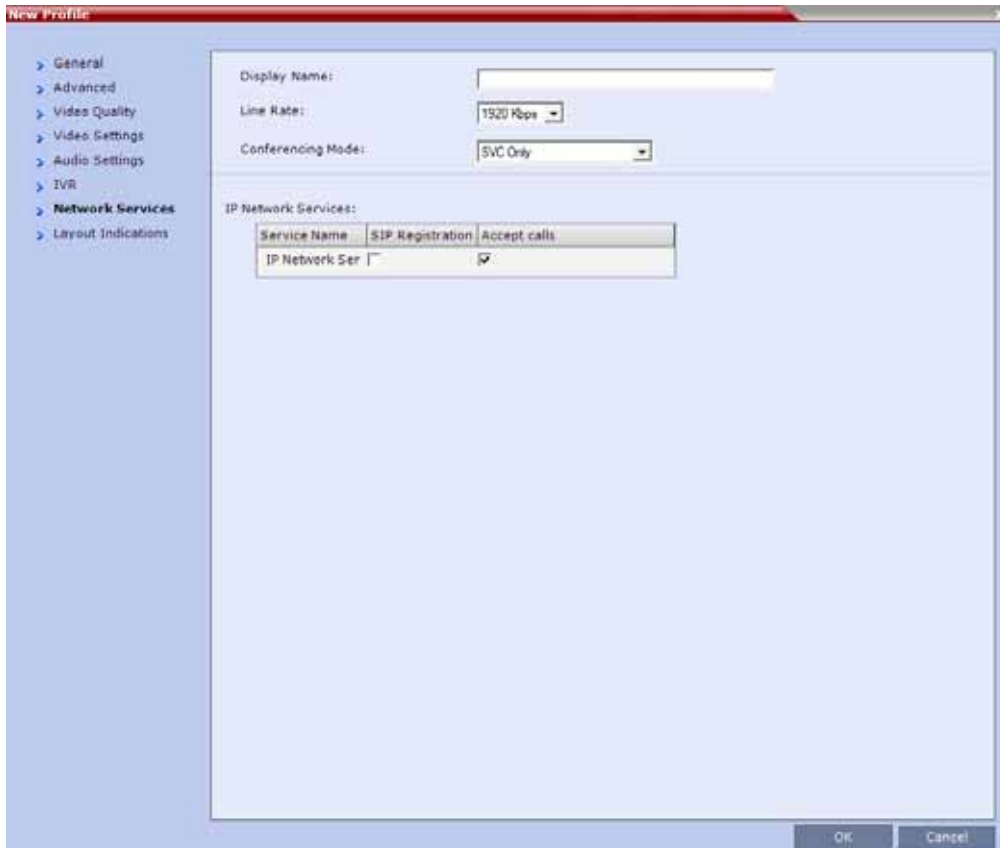

Registration of conferencing entities such as ongoing conferences, Meeting Rooms, and SIP Factories with SIP servers is done per conferencing entity. This allows better control of the number of entities that register with each SIP server. Selective registration is enabled by assigning a conference Profile in which registration is configured for the required conferencing entities. Assigning a conference Profile in which registration is not configure for conferencing entities will prevent them from registering. By default, Registration is disabled in the Conference Profile, and must be enabled in Profiles assigned to conferencing entities that require registration.

15 Define the following parameters:

New SVC Profile - Network Services Parameters

Parameter	Description
IP Network Services	
Service Name	This column lists all the defined Network Services, one or several depending on the system configuration.

New SVC Profile - Network Services Parameters

Parameter	Description
SIP Registration	To register the conferencing entity to which this profile is assigned with the SIP Server of the selected Network Service, click the check box of that Network Service in this column. When SIP registration is not enabled in the conference profile, the Collaboration Server's registering to SIP Servers will each register with an URL derived from its own signaling address.
Accept Calls	To prevent dial in participants from connecting to a conferencing entity when connecting via a Network Service, clear the check box of the Network Service from which calls cannot connect to the conference.

16 Click **OK** to complete the Profile definition.

A new Profile is created and added to the Conference Profiles list.



Note: Layout Indications inapplicability to SVC Only Conferences

The **Layout Indications** tab is relevant only to AVC only or Mixed CP and SVC conferencing modes, therefore though visible in SVC only conferencing mode, it is completely disabled and irrelevant.

Defining Mixed CP and SVC Conferencing Profiles

The mixed CP and SVC Profile is based on the CP Profile with a few of the CP options disabled for compatibility between AVC and SVC protocols and to enable the media conversion between these two modes. The **Gathering Settings** and the **Message Overlay** options are unavailable in this Conferencing Mode.

In a mixed CP and SVC conference, the Chairperson can be either an AVC-enabled or SVC-enabled endpoint.

To configure a mixed AVC and SVC conference:

- 1 In the **RMX Management** pane, click **Conference Profiles**.
- 2 In the **Conference Profiles** pane, click the **New Profile** button.
The **New Profile - General** dialog box is displayed.
- 3 In the **Conferencing Mode** list, select **CP and SVC** to define a mixed AVC and SVC conference.

The screenshot shows the 'New Profile' dialog box with the 'General' tab selected. The sidebar on the left lists various configuration categories, with 'General' being the active one. The main configuration area includes fields for 'Display Name', 'Line Rate' (set to 1920 Kbps), 'Conferencing Mode' (set to CP and SVC), and 'Routing Name'. Under the 'Video Switching' section, there are checkboxes for 'Video Switching' and 'Operator Conference', and a dropdown menu currently showing 'H.264 720p30'. The 'H.264 high profile' checkbox is also present but unchecked. The dialog box concludes with 'OK' and 'Cancel' buttons at the bottom right.

Using the various Profile tabs, you can define the following profile parameters:

- **CP and SVC Profile - Advanced** parameters - these parameters are the same as for CP conferences. For details, see [New AVC CP Profile - Advanced Parameters](#).
- **CP and SVC Profile - Video Quality** parameters - to enable the sharing of video between SVC and AVC, the common denominator parameters (in this conference, the SVC parameters) are selected for the conference. For more details, see [New SVC Profile - Video Quality Parameters](#).
- **CP and SVC Profile - Video Settings** parameters - the video layout parameters apply only to the AVC-enabled endpoints and do not apply to SVC-enabled endpoints as the SVC endpoints generate their own layout. Options that are not supported in SVC conferencing are disabled in this dialog box, for example, Telepresence Mode. For more details, see [New AVC CP Profile - Video Settings Parameters](#).
- **CP and SVC Profile - Audio Settings** parameters - options that are not supported in SVC conferencing are disabled in this dialog box. For more details, see [New AVC CP Profile - Audio Settings Parameters](#).
- **CP and SVC Profile - Skins** parameters - the display of a video skin applies only to the AVC-enabled endpoints and do not apply to SVC-enabled endpoints as the SVC endpoints generate their own layout.
- **CP and SVC Profile - IVR** parameters - to enable the same IVR behavior and DTMF usage for SVC and AVC, the common denominator parameters (in this conference, the SVC parameters) are selected for the conference. For more details, see [New SVC Profile - IVR Parameters](#).
- **CP and SVC Profile - Recording** parameters - these parameters are the same as for CP conferences as the recording is done in AVC format. For details, see [New AVC CP Profile - Recording Parameters](#).
- **CP and SVC Profile - Site Names** parameters - these parameters are the same as for CP conferences as they apply the AVC-enabled endpoints. SVC-enabled endpoints generate the site name display independent of the MCU. For details, see [New AVC CP Profile - Site Names Parameters](#).
- **CP and SVC Profile - Network Services** parameters - these parameters are the same as for CP and SVC conferences. For details, see [New AVC CP Profile - Network Services Parameters](#).
- **CP and SVC Profile - Layout Indications** parameters - these parameters are the same as for CP conferences. For details, see [New AVC CP Profile - Layout Indications Parameters](#).

Video Protocols and Resolution Configuration for CP Conferencing

Video Resolutions in AVC CP Conferencing



Note: Chapter Relevancy

For a description of resolutions for SVC Conferencing Mode see [Defining SVC and Mixed CP and SVC Conference Profiles](#).

The RealPresence Collaboration Server always attempts to connect to endpoints at the highest line rate defined for the conference. If the connection cannot be established using the conference line rate, the Collaboration Server attempts to connect at the next highest line rate at its highest supported resolution.

Depending on the line rate, the Collaboration Server sends video at the best possible resolution supported by the endpoint regardless of the resolution received from the endpoint.

The video resolution is also defined by the Video Quality settings in the Profile.

- **Motion**, when selected, results in lower video resolution at higher frame rates (30 fps to 60 fps).
- **Sharpness**, when selected, results in higher video resolution at lower frame rate (30 fps and lower). However, it can also be sent in 1080p 60fps.

The combination of frame rate and resolution affects the number of video resources required on the MCU to support the call.

The following resolutions are supported:

Supported Resolutions

Resolution Name	Resolution in Pixels	Frames per Second	Symmetric/Asymmetric
CIF	352 x 288	30, 60	Symmetric
SD	720 x 576	30, 60	Symmetric
HD 720p	1280 x 720	30, 60	Symmetric
HD 1080p	1920 x 1080	30	Symmetric
HD 1080p	1920 x 1080	60	Symmetric in Motion, Asymmetric in Sharpness

Video Display with CIF, SD and HD Video Connections

Although any combination of CIF, SD and HD connections is supported in all CP conferences, the following rules apply:

- In a 1X1 Video Layout:
 - **SD:** If the speaker transmits CIF, the MCU will send CIF to all participants, including the SD participants. In any other layout the MCU will transmit to each participant at the participant's sending resolution.
 - **HD:** The MCU transmits speaker resolution (including input from HD participants) at up to SD resolution. If 1x1 is the requested layout for the entire duration of the conference, set the conference to HD Video Switching mode.
- In asymmetrical Video Layouts:
 - **SD:** A participant in the large frame that sends CIF is displayed in CIF.
 - **HD:** Where participants' video windows are different sizes, the Collaboration Server transmits HD and receives SD or lower resolutions.
- In panoramic Video Layouts:
 - **SD:** Participants that send CIF also receive CIF.
 - **HD:** the Collaboration Server transmits HD and receives SD or lower resolutions, the Collaboration Server scales images from SD to HD resolution.

H.264 High Profile Support in CP Conferences

The H.264 High Profile is a new addition to the H.264 video protocol suite. It uses the most efficient video data compression algorithms to even further reduce bandwidth requirements for video data streams.

Video quality is maintained at bit rates that are up to 50% lower than previously required. For example, a 512Kbps call will have the video quality of a 1Mbps HD call while a 1Mbps HD call has higher video quality at the same (1Mbps) bit rate.



Note: H.264 HD Recommendation

H.264 High-Profile should be used when all or most endpoints support it.

H.264 High Profile Guidelines

- H.264 High Profile is supported in H.323, and SIP and ISDN networking environments.
- H.264 High Profile is supported in all conference modes, all bit rates, video resolutions and layouts.
- H.264 High Profile is the first protocol declared by the Collaboration Server, to ensure that endpoints that support the protocol will connect using it.

Setting minimum bit rate thresholds that are lower than the default may affect the video quality of endpoints that do not support the H.264 High Profile.

- For monitoring purposes, the Collaboration Server and endpoint H.264 High Profile capability is listed in the Participant Properties - H.245 and SDP tabs for H.323 participants and SIP participants respectively.

For more information see [Monitoring IP Participants](#).

- H.264 High Profile is not supported with Video Preview

HD1080p60 Resolution Guidelines

HD1080p60 resolution is supported in Continuous Presence (CP) mode:

- Symmetrically: The Collaboration Server receives and sends HD1080p60.
- With **Video Quality** mode set to **Motion**.
- For H.323 and SIP participants.
- At line rates up to 4Mbps.
RMX 1800 with no DSP cards only supports HD1080p60 symmetric video when Video Quality is set as Motion in the conference Profile.

HD1080p60 resolution is supported in Video Switching (VSW) mode:

- At bit rates of up to 6Mbps.
- HD1080p60 is supported symmetrically: The RMX receives and sends HD1080p60.

HD1080p60 resolution is not supported:

- For ISDN participants.
- With RTV video protocol.

HD1080p60 resolution is not supported symmetrically:

- In 1X1 layouts, including 1X1 layouts in Telepresence Mode. Instead, the Collaboration Server transmits the current speaker endpoint's video resolution and frames per second.
- In TIP environments.

In Telepresence environments the RMX receives HD720p60 and sends HD1080p60 to all endpoints except for those with 1x1 Video Layouts, which receive the same resolution and frame rate from the RMX as they send. TIP endpoints are not supported.

PAL endpoints are supported at a frame rate of 50 fps.

CP Conferencing with H.263 4CIF

The video resolution of 4CIF in H.263 endpoints is only supported for conferences in which the video quality is set to sharpness and for line rates of 384 Kbps to 1920 Kbps as shown in the following table.

Video Quality vs. Line Rate

Endpoint Line Rate Kbps	Video Quality			
	Motion		Sharpness	
	Resolution	Frame Rate	Resolution	Frame Rate
128	QCIF	30	CIF	30
256	CIF	30	CIF	30
384 - 1920+	CIF	30	4CIF	15
128			CIF	30
256			CIF	30
384 - 1920+			4CIF	15

The Collaboration Server Web Client supports monitoring of H.263 4CIF information. The H.245 or SDP tab includes the additional information.

The creation of a new H.263 4CIF slide is supported in the IVR Service in addition to the current H.263 IVR slide. If users utilize the default Polycom slides that are delivered with the Collaboration Server, the slide's resolution will be as defined in the profile, i.e. SD, HD, CIF, etc.

For more information see [Accessing the Resolution Configuration Dialog Box](#).

H.263 4CIF Guidelines

- H.263 4CIF is supported with H.323, and SIP and ISDN connection endpoints.
- H.263 4CIF is supported in CP mode only.
- Click&View is supported in H.263 4CIF.
- AES encryption is supported with H.263 4CIF.
- Recording of H.263 4CIF conferences is supported by the Polycom® RealPresence® Media Suite and other devices.
- All video layouts are supported in H.263 4CIF, except 1x1 layout. In a 1x1 layout, the resolution will be CIF.
- H.239 is supported in H.263 4CIF and is based on the same bandwidth decision matrix as for HD.



Note: Resource Reference

For information about Resource Usage see [Resource Capacity](#)

The CP Resolution Decision Matrix

All the CP resolution options and settings are based on a decision matrix which matches video resolutions to connection line rates, with the aim of providing the best balance between resource usage and video quality at any given line rate.

The following factors affect the decision matrices:

- The Media card(s) installed in the system affect the number of video resources used for each video resolution and frame rate, the supported video protocols and the maximum resolution that can be used by the Collaboration Server.
- The used video protocol: H.264 base Profile or H.264 High Profile. The H.264 High Profile maintains the Video quality at bit rates that are up to 50% lower than previously required. For example, a 512 kbps call will have the video quality of a 1Mbps HD call while a 1Mbps HD call has higher video quality at the same (1Mbps) bit rate.
- A different decision matrix is used for Motion and Sharpness as the quality requirements are different.

The system is shipped with three pre-defined settings of the decision matrix for H.264 Base Profile and three pre-defined settings of the decision matrix for H.264 High Profile with Motion and Sharpness video quality for each of the following resource management schemes:

- **Resource-Quality Balanced** (default)
A balance between video quality and resource usage. This is the only available resolution configuration in version 6.0.x and earlier.
- **Resource Optimized**
System resource usage is optimized by allowing high resolution connections only at high line rates and may result in lower video resolutions (in comparison to other resolution configurations) for some line rates. This option allows to save MCU resources and increase the number of participant connections.
- **Video Quality Optimized**
Video is optimized through higher resolution connections at lower line rates increasing the resource usage at lower line rates. This may decrease the number of participant connections.

Video Resource Usage

Video resource usage is dependent on the participant's line rate, resolution and Video Quality settings.

Default Minimum Threshold Line Rates and Resource Usage Summary

The following Table summarizes the Default Minimum Threshold Line Rates and Video Resource usage for each of the pre-defined optimization settings for each Resolution, H.264 Profile, Video Quality setting (Sharpness and Motion).

Default Minimum Threshold Line Rates and Video Resource Usage

Resolution		Profile	Optimization Mode					
			Balanced		Resource		Video Quality	
			Sharpness	Motion	Sharpness	Motion	Sharpness	Motion
HD1080p60	Default kbps	High	2560	2560	3584	3584	2048	1728
		Base	3584	3584	4096	4096	3584	3072
HD1080p30	Default kbps	High	1536		2560		1024	
		Base	2048		2560		1728	
HD720p60	Default kbps	High		1280		2560		832
		Base		1920		1920		1280
HD720p30	Default kbps	High	832		1280		512	
		Base	1024		1536		832	
SD 60	Default kbps	High		768		1024		512
		Base		1024		1024		768
SD 30	Default kbps	High	256		384		256	
		Base	256		384		256	
CIF 60	Default kbps	High		256		384		256
		Base		384		384		256
CIF 30	Default kbps	High	64	64	64	64	64	64
		Base	64	64	64	64	64	64

Maximum Negotiated Line Rate for Resolutions

Line Rate	Resolution
Up to 1M	CIF60, SD30 and below
Up to 4M	SD60, HD720p30
Up to 6M	HD720p60, HD1080p30, HD1080p60

Resolution Configuration for CP Conferences

The **Resolution Configuration** dialog box enables you to override the default video resolution decision matrix, effectively creating your own decision matrix. The minimum threshold line rates at which endpoints are connected at the various video resolutions can be optimized by adjusting the resolution sliders.

System resource usage is also affected by the Resolution Configuration settings.

For more information see [Video Resource Usage](#) and [Default Minimum Threshold Line Rates and Resource Usage Summary](#).

Guidelines

- Resolution Slider settings affect all Continuous Presence (CP) conferences running on the Collaboration Server. Video Switched conferences are not affected.
- A system restart is not needed after changing the Resolution Slider settings.
- Resolution Slider settings cannot be changed if there are ongoing conferences running on the Collaboration Server. The displayed sliders and the resolutions change according the MCU type.


Modifying the Resolution Configuration

The **Resolution Configuration** dialog box is accessed by clicking **Setup > Resolution Configuration** in the Collaboration Server **Setup** menu.

Clicking the **Detailed Configuration** button toggles the display of the **Detailed Configuration** pane, which displays sliders for modifying minimum connection threshold line rates for endpoints that support H.264 Base Profile or High Profile. The **Detailed Configuration** pane can also be opened by clicking the **Manual** radio button in the **Resolution Configuration** pane.

Sharpness and **Motion** settings are accessed by clicking the **Sharpness** and **Motion** tabs when the **Detailed Configuration** is open.

Resolution Configuration

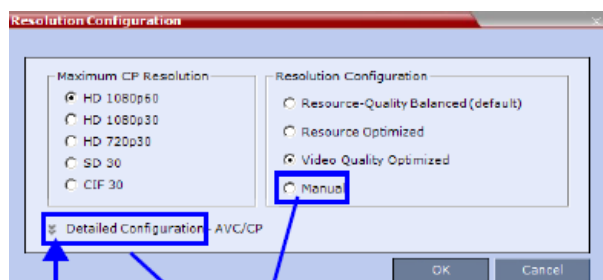

Basic Configuration

Detailed Configuration

Minimum Connection Threshold Line Rate Sliders


Sharpness / Motion

Profile	Resolution	Line Rate (kbps)
Base Profile	CIF 30	64
	SDp30	256
	HD 720p30	832
	HD 1080p30	1728
High Profile	CIF 30	64
	SDp30	256
	HD 720p30	512
	HD 1080p30	1024

Resolution Configuration - Basic

The **Resolution Configuration** basic dialog box contains the following panes:

- Max CP Resolution Pane
- Resolution Configuration Pane

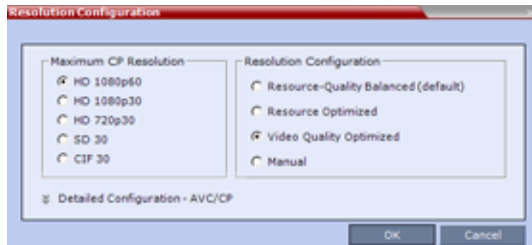

Maximum CP Resolution Pane

The Collaboration Server can be set to one of the following **Maximum CP Resolutions**:

- HD 1080p60
- HD 1080p30
- HD 720p30
- SD 30
- CIF 30

Limiting Maximum Resolution

Before a selection is made in this pane, the Maximum CP Resolution of the system is determined by the **MAX_CP_RESOLUTION** System Flag.

The **MAX_CP_RESOLUTION** flag value is applied to the system during First Time Power-on and after a system upgrade.

The default flag value is **HD1080** setting the **Maximum CP Resolution** value in the **Resolution Configuration** dialog box to **1080p60**.

All subsequent changes to the Maximum CP Resolution of the system are made by selections in this pane.

The Maximum Resolution can further be limited per **conference** or per **participant endpoint**.

The Maximum Conference Resolution, can be limited via the **Profile - Video Quality** dialog box. For more information see [New AVC CP Profile - Video Quality Parameters](#) and [New SVC Profile - Video Quality Parameters](#).

The Maximum Resolution can further be limited per participant endpoint via the **Participant - Properties** dialog box. For more information see [New Participant - Advanced](#).

Resolution Configuration Pane

The user can select from 3 pre-defined Resolution Configurations or select a manual Resolution Slider adjustment mode. The pre-defined settings can be accepted without modification or be used as the basis for manual fine tuning of resolution settings by the administrator.

The **Manual** radio button is automatically selected if any changes are made to the Resolution Sliders.

The Resolution Configurations are:

- **Resource-Quality Balanced (default)**

A balance between the optimized video quality and optimized resource usage.



Use this option:

- When the priority is to maintain a balance between resource usage and video quality.
- When it is necessary to maintain backward compatibility with previous versions.
- When working with Polycom DMA/RealPresence Resource Manager.

The **Balanced** settings are described in the section: [Default Minimum Threshold Line Rates and Resource Usage Summary](#).

- **Resource Optimized**

System resource usage is optimized by allowing high resolution connections only at high line rates and may result in lower video resolutions (in comparison to other resolution configurations) for some line rates.



Use this option when the priority is to save MCU resources and increase the number of participant connections.

The **Resource Optimized** settings are described in the section: [Default Minimum Threshold Line Rates and Resource Usage Summary](#).

- **Video Quality Optimized**

Video is optimized through higher resolution connections at lower line rates increasing the resource usage at lower line rates. This may decrease the number of participant connections.



Use this option when the priority is to use higher video resolutions while decreasing the number of participant connections.

The **Video Quality Optimized** settings are described in the section: [Default Minimum Threshold Line Rates and Resource Usage Summary](#).

- **Manual**

Manually adjusting the sliders to accommodate local conferencing requirements.

Resolution Configuration - Detailed

The **Resolution Configuration -Detailed** dialog box contains the following panes:

- **Sharpness Resolution** sliders
- **Motion Resolution** sliders

Sharpness and Motion

Sharpness and Motion are Video Quality settings that are selected per conference and are defined in the conference Profile. A conference with Sharpness selected in its Profile uses the Sharpness settings of the

Resolution Configuration and a conference with Motion selected in its Profile uses the Motion settings of the Resolution Configuration dialog box.

The **Sharpness** and **Motion** tabs in the **Resolution Configuration** dialog box allow you to view and modify **Resolution Configuration** settings for conferences with either Video Quality setting.

The **Sharpness** and **Motion** tabs include separate settings for Base Profile and High Profile as the Collaboration Server uses two decision matrices (Base Profile, High Profile) to enable endpoints to connect according to their capabilities.

H.264 High Profile allows higher quality video to be transmitted at lower bit rates. However, setting minimum bit rate thresholds that are lower than the default may affect the video quality of endpoints that do not support the H.264 High Profile.

Resolution Configuration Sliders


The **Detailed Configuration** dialog box allows you to configure minimum connection threshold bit rates for endpoints that support H.264 High Profile and those that do not support H.264 High Profile by using the following slider panes:

- **Base Profile** - Endpoints that do not support **H.264 High Profile** connect at these minimum threshold bit rates.

In Sharpness mode




In Motion mode

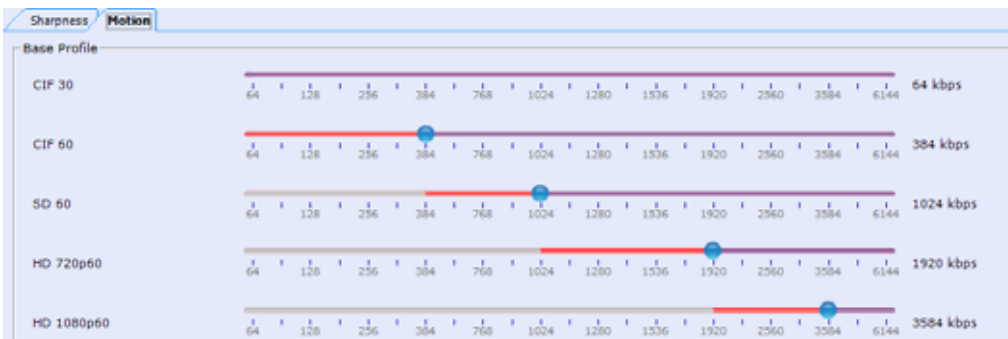


- **High Profile** - Endpoints that support **H.264 High Profile** connect at these minimum threshold bit rates.

In Sharpness mode

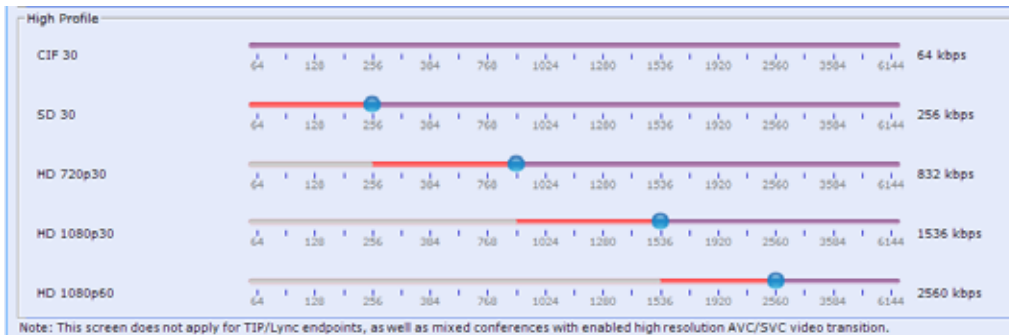

In Motion mode

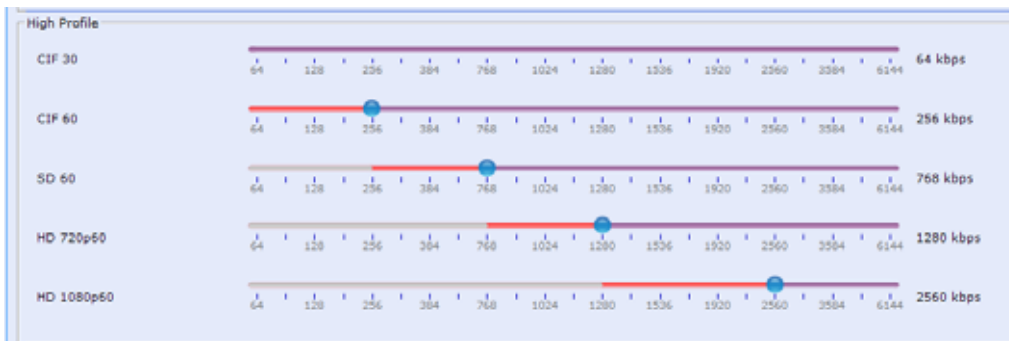

Although the default minimum threshold bit rates provide acceptable video quality, the use of higher bit rates usually results in better video quality but will require more resources.

The **Base Profile** and **High Profile** sliders operate in the same manner in Sharpness and in Motion.

Video Resource usage is affected by the Resolution Configuration settings. The lower the line rate threshold set for a certain resolution the more resources will be used to connect that participant (as a higher resolution will be used).

Flag Settings

Setting the Maximum CP Resolution for Conferencing

The MAX_CP_RESOLUTION flag value is applied to the system during First-time Power-up and after a system upgrade. The default value is HD1080.

All subsequent changes to the Maximum CP Resolution of the system are made by selections in the Max CP Resolution pane of the Resolution Configuration dialog box.

The Maximum CP Resolution of the Collaboration Server can be set to one of the following resolutions:

- HD 1080p60
- HD 1080p30
- HD 720p30
- SD 30
- CIF 30

Minimum Frame Rate Threshold for SD Resolution

The MINIMUM_FRAME_RATE_THRESHOLD_FOR_SD System Flag can be added and set to prevent low quality, low frame rate video from being sent to endpoints by ensuring that an SD channel is not opened at frame rates below the specified value. For more information see [Modifying System Flags](#).

Additional Video Resolutions

The following higher video quality resolutions are available:

MPMRx Supported Resolutions

Resolution Name	Resolution in Pixels	Frames per Second
CIF	352 x 288	50
WCIF	512 x 288	50
WSD	848 x 480	50
W4CIF	1024 x 576	30
HD 720p	1280 x 720	60
HD 1080p	1920 x 1080	30
HD 1080p	1920 x 1080	60



The video resolution transmitted to any endpoint is determined by the endpoint's capabilities, the conference line rate, the Conference Profile's Motion and Sharpness setting.

w448p Resolution

For improved interoperability with Tandberg MXP 990/3000 endpoints, the appropriate System Flag settings will force the Collaboration Server to send w448p (768x448 pixels) at 25fps as a replacement resolution for WSD15 (848x480) and SD15 (720x576 pixels).

Guidelines

- The w448p resolution is supported:
 - In CP mode.
 - At conference line rates of 384kbps and 512kbps.
 - With H.323, SIP, and ISDN endpoints.
 - H.323 endpoints must identify themselves as Tandberg MXP during capabilities exchange.
 - In all Video Layouts.
 - In 1x1 Layout:
 - ◆ When Video Clarity is **Off**, the Collaboration Server transmits the same resolution as it receives.
 - ◆ When Video Clarity is **On**, the Collaboration Server changes the transmitted resolution to w448p.

For more information see [Video Clarity™](#).

- Resource consumption for the w448p resolution is the same as for SD and WSD resolutions.

The following table lists the video outputs from the Collaboration Server to the Tandberg Endpoints for both 16:9 Aspect Ratio when the w448p resolution is enabled.

Video Output to Tandberg Endpoints- Aspect Ratio 16:9

Network Environment	Video Quality		Line Rate Kbps	Resolution	Frame Rate fps	Resolution	Frame Rate fps
	Tandberg	Collaboration Server		Tandberg to Collaboration Server		Collaboration Server to Tandberg	
H.323 SIP	Motion	Sharpness	384	512x288	30	768x448	25
			512	768x448	30	768x448	25
H.323 SIP	Sharpness *	Sharpness	384	1024x576	15	768x448	25
			512	1024x576	15	768x448	25

* It is recommend to set the endpoint to **Motion** to ensure the transmission of the higher frame rates of 25fps/30fps to the Collaboration Server.

The following table list the video outputs from the Collaboration Server to the Tandberg Endpoints for 4:3 Aspect Ratio when the w448p resolution is enabled.

Video Output to Tandberg Endpoints - Aspect Ratio 4:3

Network Environment	Video Quality		Line Rate Kbps	Resolution	Frame Rate fps	Resolution	Frame Rate fps
	Tandberg	Collaboration Server		Tandberg to Collaboration Server		Collaboration Server to Tandberg	
H.323 SIP ISDN	Motion	Sharpness	384	576x448 ‡	25	768x448	25
			512	576x448 ‡	25	768x448	25
H.323 SIP ISDN	Sharpness*	Sharpness	384	4CIF	15	768x448	25
			512	4CIF	15	768x448	25

* It is recommend to set the endpoint to **Motion** to ensure the transmission of the higher frame rates of 25fps/30fps to the Collaboration Server.

‡ MXP 990/3000 endpoints transmit 576x448 pixels. Other MXP endpoints may transmit other resolutions eg. CIF.

Content

Sharing and receiving Content is supported.

Bandwidth allocated to the Content channel during Content sharing may cause the video resolution to be decreased as from w448p to w288p.

When Content sharing stops and the full bandwidth becomes available, video resumes at the previous w448p resolution.

For more information see the [Additional Conferencing Information](#).

Packet Loss Compensation

If there is Packet Loss in the network and Dynamic Bandwidth Allocation (DBA) is activated, allocating bandwidth for Lost Packet Recovery, video resolution decreases from w448p to w288p.

When Packet Loss ceases and DBA no longer needs to allocate bandwidth for Lost Packet Recovery, the full bandwidth becomes available and video resumes at the previous w448p resolution.

For more information see the [Packet Loss Compensation - LPR and DBA](#).

Enabling Support of the w448p Resolution

w448p resolution support for Tandberg endpoints requires setting of the following entities:

- Tandberg endpoint
- Collaboration Server flags
- Collaboration Server Conference Profile

Collaboration Server System Flag Settings

On the Collaboration Server, the **Video Quality** field in the **New Profile - Video Quality** dialog box must be set to **Sharpness**.

For more information see [Defining New Profiles](#).

Additional Intermediate Video Resolutions

Two higher quality, intermediate video resolutions replace the transmission of CIF (352 x 288 pixels) or SIF (352 x 240 pixels) resolutions to endpoints that have capabilities between:

- CIF (352 x 288 pixels) and 4CIF (704 x 576 pixels) – the resolution transmitted to these endpoints is 432 x 336 pixels.
- SIF (352 x 240 pixels) and 4SIF (704 x 480 pixels) – the resolution transmitted to these endpoints is 480 x 352 pixels.

The frame rates (depending on the endpoint's capability) for both intermediate resolutions are 25 or 30 fps.

Sharing Content During Conferences

Content such as graphics, presentations, documents, or live video can be shared with conference participants.

Content sharing architecture is comprised of various aspects:

- **Content Control Protocols** - H.239 (for H.323 / ISDN), BFCP (for SIP), or People+Content (Polycom's protocol used for CP conferences prior to H.239 creation)
- **Content Media Protocols** - H.263 (AVC only), H.264 (all conferencing modes), or TIP (Cisco's proprietary protocol for TelePresence endpoints).
- **Content Transmission Methods** - Content Video Switching and Multiple Content Resolutions.
- **Content Settings** - Graphics, Hi-res Graphics, Live Video, or Customized Content Rate.



Note: Legacy Content

Endpoints without the content capabilities matching the conference content sharing requirements, can connect to the conference but cannot share or view content in the content channel. Depending on Legacy definitions, they can view content in the people video layout (see [Sending Content to Legacy Endpoints](#)).

Content Control Protocols

Endpoints wishing to share content, request the Content Token from the MCU (in cascaded environments, the Master MCU). The MCU uses the control protocol to grant the Content Token to the requesting endpoint (unless in [Exclusive Content Mode](#)).

Guidelines for Controlling Content

- Only the Content Token owner may send content.
- Content Token ownership is valid until:
 - A new endpoint requests token ownership (unless in [Exclusive Content Mode](#)), even when the endpoint is connected via a cascaded MCU. For more information see [Guidelines for Content Snatching in Cascaded Conferences](#).
 - The owner relinquishes it.
 - The Content Token owner endpoint disconnects from the conference.
 - It is canceled by the MCU user.

Supported Content Control Protocols

Polycom supports content sharing using one of the following content control protocols:

- **H.239** - For H.323 or ISDN participants
- **BFCP** - For SIP participants (over TCP or UDP)
- **TIP Auto-Collaboration** (CISCO TIP participants) - TIP Auto-Collaboration for H.264 content sharing (see [TIP Compatibility - Prefer TIP](#))

- **People+Content** - Polycom's proprietary content control protocol; for H.323 and ISDN participants. Endpoints supporting the content control protocols above can share content within the same conference.



Note: Content Sharing with Endpoints Limited to H.263 in TIP Scenarios

Since TIP compatible conferences (see [TIP Compatibility - Prefer TIP](#)) use H.264 as content media protocol, endpoints supporting only H.263 are considered Legacy content endpoints (see [Sending Content to Legacy Endpoints](#)), regardless of the control protocol they are using.

Content Sharing Using H.239 Protocol

This protocol is used by H.323 and ISDN endpoints.

The H.239 protocol allows compliant endpoints to share content stream simultaneously with video.

Cascaded links declare H.239 capabilities, and are supported in Star and MIH cascading topologies. For more details, see [Cascading Conferences - H.239-enabled MIH Topology](#).

Content sharing is supported only during conferencing (not while in Entry Queue).

Content Sharing Using BFCP Protocol

This protocol is used by SIP endpoints.

The MCU supports BFCP over either TCP or UDP, which enables the MCU to share content with both SIP client types.

Guidelines for Using SIP BFCP Content

For SIP clients supporting BFCP/TCP or BFCP/UDP:

- BFCP content is not supported over SIP links (in Gateway and cascading scenarios). Therefore, in cascading environment, the cascaded link must be defined as H.323 for content to be shared.
- BFCP/UDP is supported in both IPv4 and IPv6 addressing modes. BFCP/TCP is supported only in IPv4 addressing mode.
- Note that Lync endpoints, though considered as SIP endpoints, do not use BFCP to share content, and use a Microsoft proprietary protocol for that purpose. There are two options to bypass that limitation:
 - Polycom® ContentConnect™ plug-in (see [Content Sharing via Polycom® ContentConnect™ Plug-in for Microsoft Lync Clients](#)). This is the preferred option, and is used whenever the Polycom® ContentConnect™ plug-in is currently used.
 - Treating Lync endpoints as Legacy, thus viewing content via the people video layout (see [Sending Content to Legacy Endpoints](#)).
- BFCP utilizes an unsecured channel (port 60002/TCP) even when SIP TLS is enabled. If security is of higher priority than SIP content sharing, SIP/BFCP can be disabled by manually adding the ENABLE_SIP_PEOPLE_PLUS_CONTENT system flag, and setting its value to NO.
- SIP and BFCP capabilities are by default declared to all endpoints.

Capabilities declaration is controlled by the ENABLE_SIP_PPC_FOR_ALL_USER_AGENT system flag, whose default value is YES, meaning BFCP capability is declared to all vendors' endpoints. When set to NO, the MCU declares SIP over BFCP capabilities only to Polycom and Avaya endpoints. Note that a SIP proxy might remove the agent information, thus preventing the capability declaration to Polycom and Avaya endpoints as well.

- Set ENABLE_FLOW_CONTROL_REINVITE system flag to NO when SIP BFCP is enabled.
- If the system flags mentioned above do not exist in the system, they must be manually added (see [Modifying System Flags](#)).

Content Sharing via Polycom® ContentConnect™ Plug-in for Microsoft Lync Clients

From version 8.1, Polycom® ContentConnect™ (Content Sharing Suite) plug-in for Lync clients allows Lync clients to receive and send content via SIP BFCP, without having to use the people video layout.

The Polycom® ContentConnect™ plug-in invokes a separate call for content with or without video. This call may be invoked per a Lync client.

Microsoft Lync is not supported by Collaboration Server (RMX) 1800 with no DSP cards.

Dial-in / Dial-out Connections

For dial-out and dial-in connections to and from SIP Clients, BFCP/UDP or BFCP/TCP protocol can be given priority by adding the adding the SIP_BFCP_DIAL_OUT_MODE and SIP_BFCP_DIAL_IN_MODE System Flag to system.cfg and setting their values to UDP, TCP or AUTO.

The Collaboration Server's content sharing, as determined by the system flags settings and SIP client capabilities, is summarized in the following table:

System Flags - SIP_BFCP_DIAL_OUT_MODE / SIP_BFCP_DIAL_IN_MODE

Flag Value	SIP Client: BFCP Support		
	UDP	TCP	UDP and TCP
AUTO (Default)	BFCP/UDP selected as content sharing protocol	BFCP/TCP selected as content sharing protocol	BFCP/UDP selected as content sharing protocol
UDP		Cannot share content	
TCP	Cannot share content	BFCP/TCP selected as content sharing protocol	

BFCP support in dial-in Connections

- The MCU shares content with dial-in SIP clients according to their preferred BFCP protocol.
- SIP clients connected as audio-only cannot share content.

Content Sharing Using People+Content Protocol

People+Content utilizes a different content control protocol, and is Polycom's proprietary protocol used prior to H.239. This protocol is supported in CP conferences, and is applicable for H.323 and ISDN endpoints.

Guidelines for Content Sharing Using People+Content Protocol

- If an endpoint supports both H.239 and People+Content protocols, H.239 is selected as the preferred communication protocol.
- **H.263** and **H.263 and H.264 Auto-selection** are the only supported content media protocols usage modes (see [MCU Usage Modes of Content Protocols](#)).
- People+Content is enabled by default. It can be disabled for all conferences and endpoints by manually adding the ENABLE_EPC System Flag, and setting its value to NO (default value is YES).

- Endpoints supporting People+Content (for example, FX endpoints) may require a different signaling protocol. For these endpoints, manually add the System Flag CS_ENABLE_EPC, and set its value to YES (default value is NO).

Content Media Protocols

The RealPresence Collaboration Server transmits content using the following content media protocols:

- **H.263 (Annex T)** - Base profile only.
H.263 is the only media protocol supported by the MCU for content sharing in ISDN endpoints.
- **H.264** - Base and high profiles support is according to the table below:



High Profile is Dependence on Platform

High profile is not supported on Collaboration Server 1800 with no DSP cards.

H.264 AVC (non-TIP) conferences

Content Profile	1800	RMX 2000/4000
Base profile	✓	✓
High profile	✓	✓

For single MCU conferences, the MCU determines the media protocol and high/base profile by applying the Highest Common principle (see [Highest Common](#)). In cascaded environments, high/base profile requires user configuration (see [Sharing Content in Cascaded Environments](#)).

H.264 Supported Resolutions for AVC (non-TIP) Conferences

Conference Resolution	1800	RMX 2000/4000	Multiple Content Resolution
720p5	✓	✓	✓
720p30	✓	✓	✓
1080p15	✓	✓	✓
1080p30 *	✓	✓	✗
1080p60	✓	✓	✗

- **TIP** content - The supported TIP content rate is XGA, 5 fps, 512 Kbps, base profile (see [Appendix I - Polycom Open Collaboration Network \(POCN\)](#)).

Should the minimal TIP content allocation be less than 512 Kbps, content channel will not be opened.

Content Transmission Methods

There are two methods used for content transmission:

- Content Video Switching
- Multiple Content Resolutions - Content Transcoding

Content Transcoding is not supported by Collaboration Server (RMX) 1800 with no DSP cards.



Note: Content in RealConnect Environments

In conferences using Polycom® RealConnect™ technology between remotes premises, content is shared using Polycom® ContentConnect for Microsoft environments.

In this scenario, content sharing requires one of the following:

- Content transmission method is set to Multiple Content Resolutions, with the H.263 check-box selected.
- H.264 Cascade Optimized (see [MCU Usage Modes of Content Protocols](#))
- H.264 HD (likewise)

Content Video Switching

When using this method, content sent by endpoints is transmitted as-is to all content-capable participants.

The content rate is determined using one of the following methods:

- Highest Common
- Fixed Rate



Note: LPR

LPR has no effect on content rate, though due to the increased number of frames, video rate is decreased.

Highest Common



Note: Method for single MCU conferences only

This method is applied for single MCU conferences.

The Highest Common method is applied in a few levels:

- Within the same protocol - The highest common content rate
- Between protocols - H.263 and H.264
- In H.264 - Base and high profile

In this method, the content rate is negotiated to highest common capabilities supported by the endpoints connected to the conference. Therefore, if the conference includes participants supporting both lower and higher content capabilities, the content is sent to all endpoints using the lowest endpoint capabilities.

Note, that for H.263 content, the MCU negotiates the content rate, and the endpoint sharing the content determines the resolution and frame rate. However, for H.264 content, the MCU negotiates profile type, content rate, resolution and frame rate, and the endpoint sharing the content may use lower content parameters.

When a new endpoint with lower content capabilities joins while content is shared, content sharing parameters are downgraded to this endpoint capabilities:

- If downgrade affects the protocol (from H.264 to H.263) or profile type (from high to base), content sharing is terminated, protocol automatically downgrades to H.263, or in H.264, profile downgrades to base profile, and content sharing should be manually resumed.
- If downgrade affects only the content rate, resolution or frame rate (in H.264), the relevant content parameters automatically downgrade during content sharing.

Once this endpoint leaves the conference during content sharing, no change occurs in the content parameters.

Highest Common Calculation Depending on Content Settings

For Graphics, Hi-res Graphics and Live Video (see [Content Settings](#)), the highest common content is calculated for the conference each time an endpoint connects. Highest Common content bit rate is calculated using:

- For H.263 - Line rate
- For H.264 - Line rate, resolution, and frame rate.

Therefore, when endpoints with lower capabilities connect to an ongoing conference, content parameters are re-calculated and decreased accordingly.

During content sharing, the MCU does not permit endpoints to increase their content bit rate, only their content resolution.

For more information, see [H.264 Highest Common Content Rates Tables](#). For information on minimum content rates as determined by system flags, see [H.264 HD System Flags](#).

Fixed Rate



Note: Fixed Content Rates as Applied in Cascading Scenarios

This method must be used for cascaded conferences.

In this method the content rate is fixed, and endpoints not supporting this rate do not receive content over the content channel. Endpoints whose capabilities are too low, can **only view** content over the people video layout (see [Sending Content to Legacy Endpoints](#)).

For H.263 cascaded conferences, the MCU automatically uses a **fixed rate** (once a cascaded link is detected) according to the content rates described in [Highest Common and Fixed Content Bit Rate Allocation for H.263](#).

For H.264 cascaded conferences, the MCU uses a **fixed rate** according to the content rates described in [H.264 Cascade Optimized \(Fixed\) Content Rates Tables](#), and the high/base profile configured by the user.

Multiple Content Resolutions



Note: Naming Convention

This method is often related to as content transcoding.

In this method, the content is shared in multiple streams, one for each video protocol: H.263 (optional) and H.264HD (mandatory). Separate video resources are used for processing the content for each of the required content streams. The MCU then applies the Highest-Common principle for sharing content with each group of endpoints.

In cascading conferences, an additional resource is dedicated for the cascading link(s), the H.264 Cascade option must be selected, and content is shared over the cascaded link(s) using fixed rates.

As a consequence, using this method allows endpoints with different capabilities to connect/disconnect without having to repeatedly restart content sharing process.

Guidelines for Sharing Contents using Multiple Content Resolutions

- Content is always provided to H.264 HD endpoints.
- The Send Content to Legacy Endpoints option is set, and cannot be modified.
- Additional resources are allocated to the conference (in addition to resources for the conference participants) for content processing:
 - Resources are allocated only upon first content sharing initiation, but once allocated, they remain unchanged until conference ends.
 - H.264 basic operation requires 1.5 HD video resources for HD720p30 (defined) resolution conferences, and 2HD video resources for HD1080p15.
 - An additional content stream can be sent to H.263 endpoints, in which case a separate resource (1 HD) is allocated. H.263 supported resolutions are CIF, 4CIF, XGA.
 - Content can be sent to cascaded links, in which case, the **H.264 Cascade** option must be selected, and an additional video resource (1 HD) is allocated. The links in both MCUs **must** use the same content parameters (meaning content rate, resolution, and frame rate).
- When resources are insufficient, Multiple Content Resolutions mode is disabled, and content sharing reverts to Content Video Switching mode.
 - If **H.264 Cascade** was selected for the conference, the conference uses **H.264 Cascade Optimized** as the content protocol.
 - If **H.264 Cascade** was not selected for the conference, **H.264 HD** protocol is used.
 - Endpoints supporting only H.263, are considered as Legacy content endpoints (see [Sending Content to Legacy Endpoints](#)) due to insufficient resources.
- TIP endpoints cannot share content, only view it over the people video layout.
- When **AS SIP** is enabled for the conference, **Multiple Resolutions** is selected and cannot be modified, **H.264** is enabled, and both **H.263** and **H.264 Cascade** are disabled. Resources are allocated on conference beginning. All this enables AS SIP performance in high-traffic environments.
- In the event of a media card malfunction (and reset), all Multiple Content Resolution conferences will be terminated.



Note: Support Limitations in Content Transcoding Scenarios

When using the Multiple Content Resolutions method, the following are not supported:

- High profile
- 1080p30/60 content resolutions. Only resolutions up to 1080p15 are supported.
- If there is a resource deficiency when creating a conference with Multiple Content Resolutions, the Collaboration Server will downgrade Content to HD H.264 Video Switched Content. If Multiple Content Resolutions is configured to support cascaded conferences, the Content setting will downgrade to H.264 Cascade Optimized, otherwise it will downgrade to HD H.264.

Content Settings

The Content channel can transmit in one of the following modes:

- **Graphics** (default) – For standard graphics.
- **Hi-res Graphics** – Requiring a higher bit rate to increase display quality or highly detailed graphics.
- **Live Video** – Highest bit rate, for video clips or live video display.
- **Customized Content Rate** - Allowing manual definition of the Conference Content Rate.

Content sharing consumes a quota of the video rate, depending on the content required quality; the better the content required quality (such as in Live Video) the less bit rate remains for the video.

For each of the settings, the MCU allocates an approximate percentage (determined by the table in [Content Sharing Reference Tables](#)) of the conference video capability towards content sharing: for Graphics - 33%, for Hi-res Graphics - 50%, and for Live Video - 66%. However, in actuality this percentage might be lower, since the endpoint capabilities are also taken into account when making this calculation.

Customized Content Rate

Customized Content Rate functionality may be implemented (see [Selecting a Customized Content Rate](#)) when the content rate automatically calculated by the MCU is unsuitable.

For example, in a cascaded environment, the conference rate must be identical for all links. Yet, capabilities may vary widely between the cascading conferences (such as one conference supporting 2 Mbps, while the other - 512kbps).

The rates listed by the MCU are up to 66% of the conference maximum line rate.

Customized Content rate list comprised of single value of 0, means the conference bit rate capability is too low to share content.

Customized content rate is not applicable to TIP content (when **TIP compatibility** is defined as **Prefer TIP**).

MCU Usage Modes of Content Protocols

Depending on the endpoints capabilities, you can determine the content sharing experience by selecting the appropriate protocol and system behavior from the Content Protocol list:

- **H.263**
- **H.263 & H.264 Auto Selection**
- **H.264 Cascade Optimized**
- **H.264 HD**

H.263



Note: Content for ISDN Endpoints Protocol Limitation

Collaboration Servers 2000/4000/1800 support content sharing with ISDN endpoints only over H.263 content media protocol.

In this mode, all endpoints share content using H.263 protocol. Select this option when either most endpoints support H.263, or to share content over a cascading conference, in which case, the cascading link should be created prior to participants joining the conference.

The Highest Common principle (see [Highest Common](#)) is applied for determination of content parameters in single MCU scenarios, and a fixed rate (see [Fixed Rate](#)) in cascading environments.

H.263 & H.264 Auto Selection

Select this option to share content using a mix of H.263 and H.264 capable endpoints. Until version 7.6 (including), this option is named **Up to H.264**.

For single MCU scenario, the Highest Common principle (see [Highest Common](#)) is applied to determine content parameters. In cascading environments, an H.263 fixed rate is used (see [Fixed Rate](#)) regardless of endpoint capabilities.

H.264 Cascade Optimized

This content sharing option applies for H.264 content media protocol, and provides fixed content rate (see [Fixed Rate](#)) and resolution according to the conference line rate. It must be used for cascading conferences.

The **H.264 Cascade Optimized** option maintains content quality, and prevents content refreshes upon participants connect/disconnect from the conference.

In cascading environments using this option, the cascade link signaling must be H.323.

The **H.264 Cascade Optimized** option must be used for cascaded conferences sharing H.264 content. The selected content is defined by the conference parameters:

- Line rate
- Content settings (Graphics, Hi-res Graphics, or Live Video)
- Resolution configuration
- Base / High profile content

For more information see [H.264 Cascade Optimized \(Fixed\) Content Rates Tables](#).

H.264 HD



Note: H.264 HD Usage

- This is the default mode for AVC CP conferences.
- H.264 HD may be used for content sharing only for a single MCU, but not in cascading conferences.

H.264 Content Sharing Properties

The **H.264 HD** option should be selected if most endpoints in the conference support H.264 to ensure high quality content.

When this protocol option is selected, content minimal bit rate is determined. For more information, see [Setting the Minimum Content Rate for Each Content Quality Setting for H.264 HD](#).

Content parameters are determined by the Collaboration Server applying the Highest Common principle (see [Highest Common](#)), for H.264 media content protocol only.

Guidelines for Sharing Content Using H.264 HD

- Only endpoints supporting HD H.264 content (at least HD720p5) can share content.
- Base or high profiles are auto-selected based on endpoints and MCU capabilities (see table [H.264 AVC \(non-TIP\) conferences](#)).

Setting the Minimum Content Rate for Each Content Quality Setting for H.264 HD

System flags determine the minimum line rate required for endpoints to share H.264 high quality content for each of the Content Settings: Graphics, Hi Resolution Graphics and Live Video.

H.264 HD System Flags

Content Settings	Flag Name	Range	Default
Graphics	H264_HD_GRAPHICS_MIN_CONTENT_RATE	0-1536	128
Hi Resolution Graphics	H264_HD_HIGHRES_MIN_CONTENT_RATE	0-1536	256
Live Video	H264_HD_LIVEVIDEO_MIN_CONTENT_RATE	0-1536	384

To change the system flag value, the flag must be first manually added to the System Configuration (see [Modifying System Flags](#)).

Content Sharing Related Issues

Sharing Content in Cascaded Environments

In cascaded environments, content must be shared using the same content rate, and in H.264 conferences, the same resolution and frame rate as well.

Sharing content has different constraints and guidelines over each of the signaling protocols:

- **Over H.323** cascaded links -
 - Fixed content rate is used.
 - In cascading environments with non-Polycom MCUs, the Polycom MCU must be defined as Master
 - **For H.263** cascading links:
 - ◆ The cascading link must be created before connecting the participants.
 - ◆ The cascaded link's Master/Slave role must be determined, in topologies including more than two MCUs.
 - ◆ The value of the content-related system flag H263_ANNEX_T must be identical in both Master and Slave MCUs.
 - **For H.264** cascading links, the following should be determined in advance:
 - ◆ The cascaded link's Master/Slave role must be configured for the link's participants.
 - ◆ The **H.264 Cascade Optimized** content protocol must be selected.
 - ◆ High/Base profile must be configured identically between Master and Slave. Endpoints with lower capabilities cannot share content, and can only view content on the people video layout (see [Sending Content to Legacy Endpoints](#)).
- **Over ISDN** - For information on sharing content over ISDN cascaded links, see [Basic Cascading Using ISDN Cascaded Link](#).
- **Over SIP** - No content sharing is supported over SIP cascaded links.

From version 8.6 and on, content can be snatched in cascaded environments, that is the content token ownership can be taken/snatched by another participant wishing to share content where content is currently shared by another participant.

This capability depends on the conference configuration (Exclusive Content Mode is off), and the ENABLE_CONTENT_SNATCH_OVER_CASCADE system flag (see [ENABLE_CONTENT_SNATCH_OVER_CASCADE](#)).

Guidelines for Content Snatching in Cascaded Conferences

- Content Snatching is available only over anH.323 cascaded link. It is not applicable to either SIP (BFCP) or PSTN.
- All the MCUs within the (H.323) cascading topology should:
 - Use RealPresence Collaboration Server version 8.6 and up.
 - Have Exclusive Content Mode turned off (meaning, **Exclusive Content Mode** check-box in conference profile **Properties > Advanced** tab should be cleared).
 - Have the system flag **ENABLE_CONTENT_SNATCH_OVER_CASCADE** value set to **YES**.

- Gateway calls are implemented as cascaded links, typically SIP, in which case, content cannot be shared via the content channel. It may be viewed over the people video layout, depending on Legacy configuration (see [Sending Content to Legacy Endpoints](#)).



Note: Snatching Content Token Limitations Inapplicability Scenario

When a Master MCU is not in Exclusive Content Mode, another participant in the same MCU may snatch the content, even if the value of the **ENABLE_CONTENT_SNATCH_OVER_CASCADE** system flag is **NO**.

Sending Content to Legacy Endpoints



Note: Legacy Content Limitation to AVC Endpoints


The Content to Legacy feature is applicable for CP conferences, and in mixed CP and SVC conferences, for AVC endpoints only.

The Collaboration Server can be configured to send content to endpoints not supporting the conference content parameters (legacy endpoints) over the people video layout, thus allowing the participants to view content. However, these endpoints cannot share content.

Guidelines for Sending Content to Legacy Endpoints

- A separate HD video resource is allocated to the conference for content sending to legacy endpoints. Allocation is performed only once a legacy content endpoint is connected to the conference, and a content session is initiated and transmitted via the people video layout. Once the resource is allocated, it remains allocated to the conference until its end.
If the system cannot allocate the resource required for sending the content, the conference status changes to Content Resource Deficiency, and content cannot be sent to the legacy endpoints.
- Endpoints receiving content via the people video layout, use the same video protocol and resolution they use for receiving video.
- Content cannot be sent to Legacy endpoints when Same Layout mode is selected for the conference.
- This option is not supported in Video Switching conferences.
- Content can be sent to Legacy endpoints in gateway calls, depending on content configuration on Master/Slave MCUs (for example, if the gateway conference is using H.263 content media protocol, and the conference MCU is using H.264 content media protocol).
- FX endpoints dialing into the MCU, share content via the content channel (People+Content), whereas FX endpoints dialing out to the MCU, view content via the people video layout.

Content Display on Legacy Endpoints

When content is sent to content legacy endpoints, their video layout automatically changes to the content layout defined by the system flag `LEGACY_EP_CONTENT_DEFAULT_LAYOUT` (default layout is  - `CP_LAYOUT_1P4VER`), and the content is shown in the larger/top-left cell. The video layouts of the other conference participants do not change. (To modify the default layout, see [LEGACY_EP_CONTENT_DEFAULT_LAYOUT Flag](#).)

The switch to the content layout occurs in Auto Layout, Presentation Mode, Lecture Mode, and when a layout is selected for the conference.

In Lecture Mode, when content is sent to legacy endpoints, switching to the content layout, results in the content shown in the lecturer/speaker window, while the lecturer is shown in the second window. If the layout

contains more than two windows, all other windows are empty. The non-lecturer legacy content participants see the lecturer in full screen.

When content is stopped, the layout of the legacy participants terminates as well.

Legacy participants can change their layout using Click&View. In such a case, the content is forced to the larger/top-left cell.

The Collaboration Server user can also change the layout for the legacy content endpoints participants (selecting personal layout).

When forcing a video participant to the Content window (instead of Content), the Content display can be restored only by selecting any other video layout.

Sending Content to Legacy Endpoints in Telepresence Mode

To ignore personal layouts during Telepresence conferences (while working with MLA), set the value of the flag `FORCE_LEGACY_EP_CONTENT_LAYOUT_ON_TELEPRESENCE` to YES.

If the layout for displaying content in Legacy endpoints include multiples cells, MCU may populate Telepresence room streams sources in remote cells.


Exclusive Content Mode

In this mode, the MCU prevents participants other than the current content sharer, from sharing content. Exclusive content may be limited to the lecturer, as described below.

To modify exclusive content mode by granting (or canceling) of token ownership, see [Giving and Canceling Token Ownership \(AVC Participants\)](#).

Guidelines for Sharing Content in Exclusive Content Mode

- Exclusive Content Mode is available in all conferencing modes.
- Exclusive Content Mode is enabled or disabled (system default) by a check box in the **Conference Profile - Advanced** tab, or during an ongoing conference using the **Conference Properties - Advanced** tab.

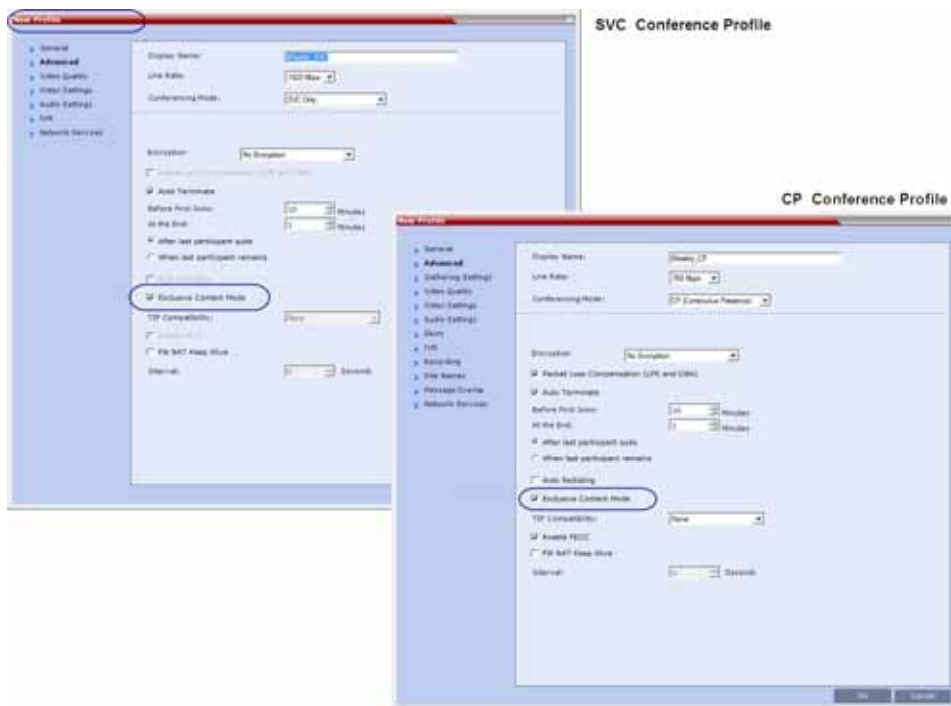

- In Exclusive Content Mode, when the `RESTRICT_CONTENT_BROADCAST_TO_LECTURER` system flag is set to:
 - **NO** - The first participant to send content becomes the Content Token holder, and releasing the Content Token allows other participants to acquire the token, and begin transmitting content.
 - **YES** - Only the designated Lecturer can be the Content Token holder.
- The Exclusive Content Mode check box replaces the `EXCLUSIVE_CONTENT_MODE` system flag used in previous versions to control exclusive content mode for the system.
- In Exclusive Content Mode, an endpoint attempting to send content after another endpoint starts sending content, is rejected with a momentary content interruption.

Forcing Other Content Capabilities

The H239_FORCE_CAPABILITIES system flag allows additional control of content sharing:

- **When set to NO (default)** - The MCU merely verifies the endpoint supports the content protocols: H.263 or H.264.
- **When set to YES** - The MCU verifies frame rate, bit rate, resolution, annexes, and all other parameters of content as declared by an endpoint during the capabilities negotiation phase. If the endpoint does not support the content capabilities of the MCU, the participant cannot share content over a dedicated content channel.

Managing Noisy Content Connections

The system can identify participants sending frequent content display refresh requests (usually as a result of a problematic network connection), which cause frequent refreshing of content display, and degrading of viewing quality.

When the system identifies such “noisy” participants, it marks them (in the Conference Participants list, **Status** column) as **Noisy**, and automatically suspends these requests to avoid affecting the quality of the content viewed by the other conference participants.

This process is controlled by the following system flags:

- **MAX_INTRA_REQUESTS_PER_INTERVAL_CONTENT** -
The maximum number of refresh (intra) requests per 10-second intervals allowed for an endpoint. Beyond that number, content sent by this participant is identified as “noisy”, and its refresh requests are suspended.
Default setting: 3
- **MAX_INTRA_SUPPRESSION_DURATION_IN_SECONDS_CONTENT** -
The duration, in seconds, for ignoring the participant’s content display refresh requests.
Default setting: 10
- **CONTENT_SPEAKER_INTRA_SUPPRESSION_IN_SECONDS** -
The interval, in seconds, between content refresh (intra) requests sent from the MCU to the content sender due to refresh requests initiated by other conference participants. Additional refresh requests received within that interval are deferred to the next interval.
Default setting: 5

Useful Procedures in Content Sharing

For all MCUs, content sharing parameters are defined in the conference profile **Video Quality** dialog box.

Defining Content Sharing Parameters for a Conference

The available content options change according to the selected conferencing mode.

To set the content sharing parameters:

- » In the **Content Video Definition** section, set the values for the **Content Settings** and **Protocol** as follows:

Content sharing Options

Field	Description
Content Settings	<p>Select the transmission mode for the Content channel:</p> <ul style="list-style-type: none"> • Graphics — Basic mode, intended for normal graphics • Hi-res Graphics — A higher bit rate intended for high resolution graphic display • Live Video — Content channel displays live video • Customized Content Rate - Manual definition of the Conference Content Rate, mainly for cascading conferences. <p>For a description of each of these options, see Content Settings.</p>
AS-SIP Content	<p>AS-SIP is a SIP implementation utilizing SIP's built-in security features. When selected, content is shared using the Multiple Resolutions mode, and is not supported in any other content sharing mode.</p>
Multiple Resolutions	<p>Select this check box to enable Multiple Content Resolutions mode, for both H.263 and H.264 content protocols. When enabled, H.264 is always selected and cannot be modified.</p> <p>Optional. Select additional protocols:</p> <ul style="list-style-type: none"> • H.263 - If the conference includes endpoints with H.263 capabilities. • H.264 Cascade - If the conference includes cascading links and you want to define the video settings for content sharing. <p>For more information, see Sharing Content Using Multiple Content Resolutions Mode.</p>
Content Protocol	<ul style="list-style-type: none"> • H.263 - Content is shared using the H.263 protocol. • H.263 & H.264 Auto Selection - Content is shared according to conference participants capabilities. • H.264 HD (default) - Content is shared using the H.264 HD protocol. • H.264 Cascade Optimized - Content is shared using the H.264 content protocol (fixed), and optimized for use in cascaded conferences. <p>For a detailed description of each of these settings, see Content Media Protocols.</p>

Content sharing Options


Field	Description
Content Resolution	<p>Select a Content Resolution from the pull-down menu.</p> <p>The Content Resolutions available for selection are dependent on the content sharing mode (Highest Common or Multiple Content Resolutions), Line Rate and Content Settings selected for the conference.</p> <p>For a full list of Content Resolutions see H.264 Supported Resolutions for AVC (non-TIP) Conferences.</p> <p>Note: This field is displayed only when H.264 Cascade Optimized is selected.</p>
Send Content to Legacy Endpoints	<p>When enabled (default), content is sent to H.323/SIP/ISDN endpoints not supporting current MCU content control protocol (legacy endpoints) over the people video layout (see Sending Content to Legacy Endpoints).</p>
H.264 High Profile <i>(RMX 1800 / MPMRx only)</i>	<p>This field is displayed only when conferencing mode is VSW (Video Switching), or the selected Content Protocol is H.264 Cascade Optimized.</p> <p>In scenarios where endpoints not supporting high profile (such as HDX) are connected to the conference, it is recommended to clear this check-box to enable them to share content.</p>

H.264 Cascade Optimized Content Sharing

When **H.264 Cascade Optimized** is selected in conferences as the **Content Protocol**, an additional field, **Content Resolution** is displayed in the **Content Video Definition** pane.

The **Content Resolution** value determines the fixed resolution and frame rate to be used for content sharing in cascaded conferences.

The **Content Resolutions** available for selection are dependent on the **Line Rate** and **Content Settings** selected for the conference.

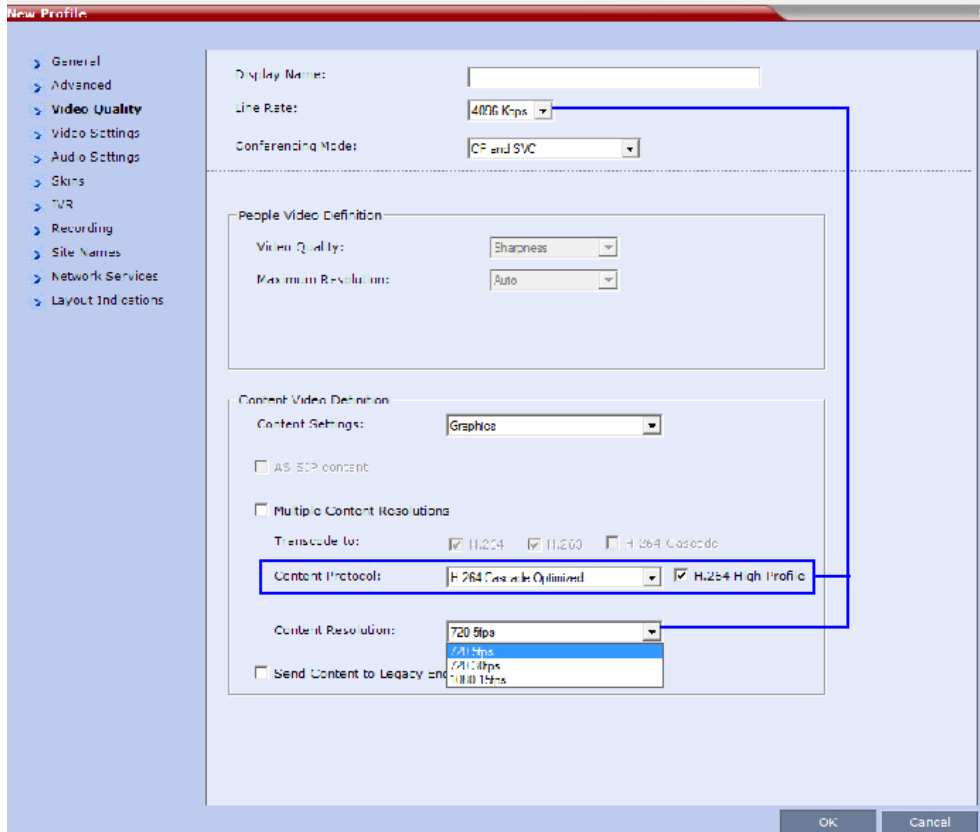

An additional check box **H.264 High Profile** (unchecked by default) is displayed in the **Video Quality** dialog box provided:

- The MCU is a RealPresence Collaboration Server 1800, or 2000/4000 containing MPMRx cards.
- **TIP Compatibility** (in the profile's **Advanced** tab) is set to **None**.

The **Content Rate** drop-down menu list depends on **Customized Content Rate** being selected as the **Content Setting**, and cannot exceed 66% of the conference line rate capability.


For information on the interaction of these parameters for Base Profile and High Profile settings, see [H.264 Cascade Optimized \(Fixed\) Content Rates Tables](#).

Selecting a Customized Content Rate

To Select the Customized Content Rate:

- 1 In the **Content Settings** list, select **Customized Content Rate**.

When selected, a drop-down menu of the available conference content rates is displayed. These content rates vary according to the selected conference **Line Rate**.

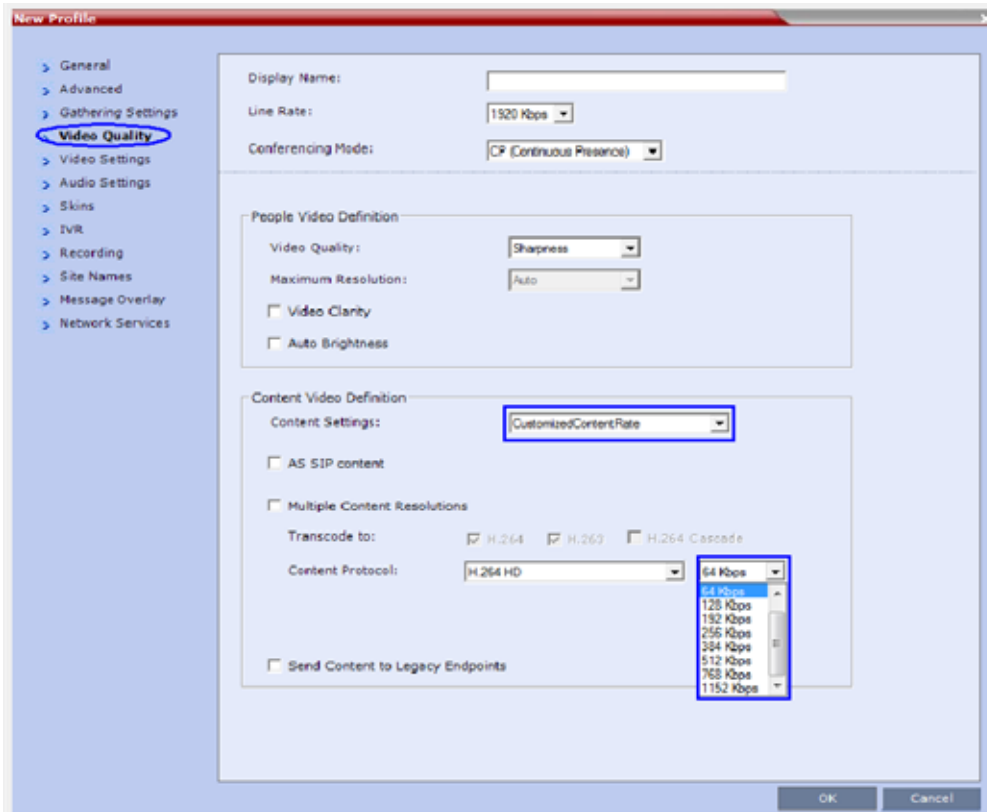

- 2 Select the required content rate.



Note: Modifying Conference Rate in Discord from Current Customized Content Rate

If Customized Content Rate is already selected along with the content rate, and you attempt to modify the conference line rate to a value that does not support the selected customized content rate, an error message is displayed.

Modify the Content Line Rate or Conference Line Rate, or modify the Content Setting.

Sharing Content in Multiple Content Resolutions Mode


For information on this content sharing mode see [Multiple Content Resolutions](#).

The Multiple Content Resolutions mode can be modified in the conference Profile, in the **Video Quality** Tab.

To enable Multiple Content Resolutions:

- 1 Select the **Multiple Resolutions** check box.

By default, **H.264** is always selected, and cannot be modified.

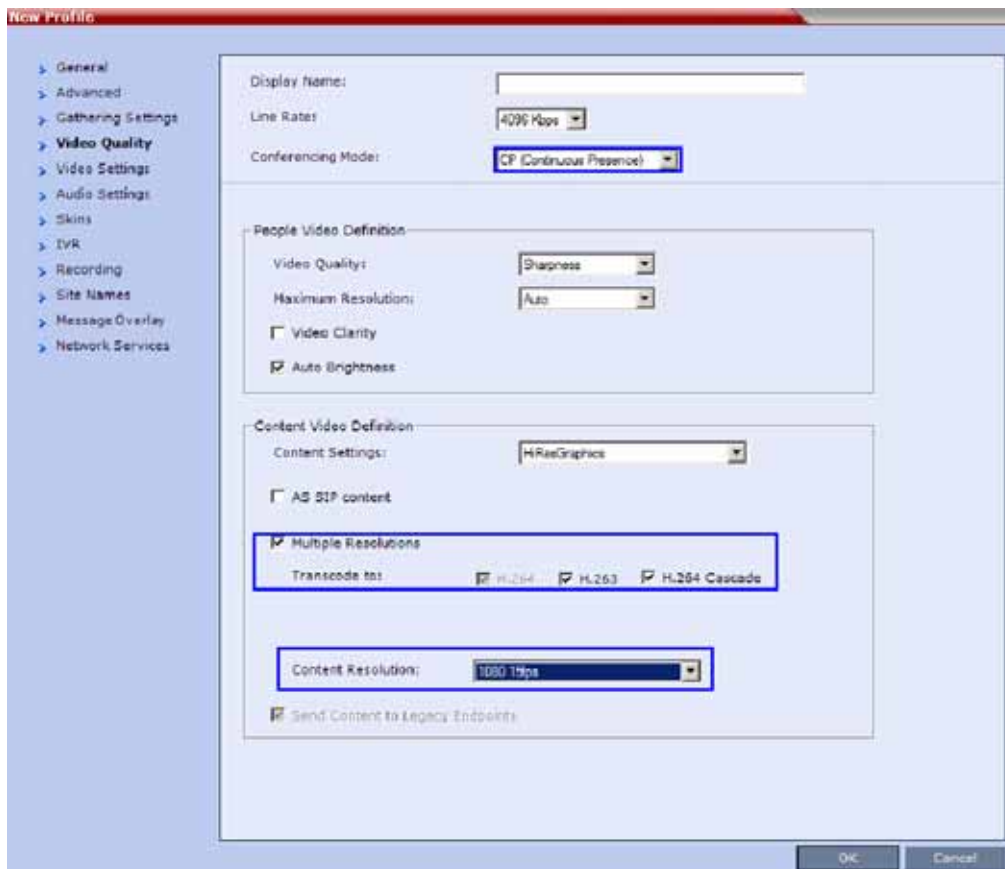

- 2 Select additional protocols:

- **H.263** - If the conference includes H.263 (only) capable endpoints.
- **H.264 Cascade** - If the conference includes cascading links.
If **H.264 Cascade** is selected, select the **Content Resolution**.


- 3 Click **OK**.

Giving and Canceling Token Ownership (AVC Participants)

For information on exclusive content ownership, see [Exclusive Content Mode](#).


To give token ownership:

- 1 In the **Participants** list, right-click the AVC-enabled endpoint you wish to define as the exclusive Content Token owner.

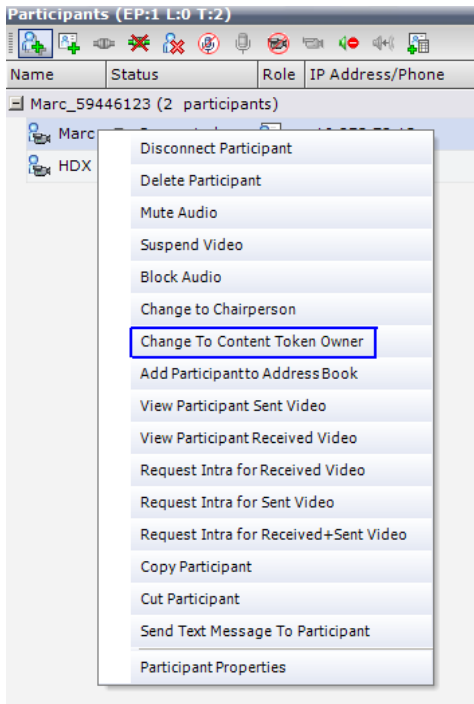

- 2 Select **Change To Content Token Owner** in the drop-down menu.

The endpoint receives exclusive ownership of the Content Token, and an indication icon is displayed in the **Role** column of the participant's entry in the **Participants** list.

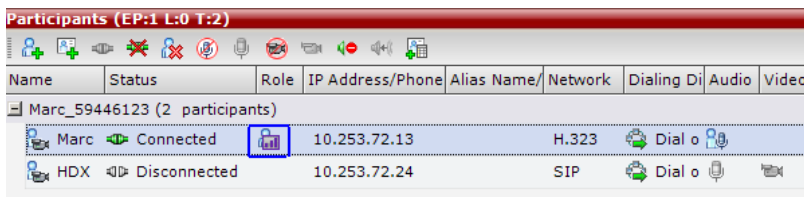


Note: Designating Content Sharer during Ongoing Content Sharing

If another participant is currently sharing content, he is requested to release the token, and the participant selected as the token owner is marked as exclusive. Once that participant shares content, it cannot be snatched by other participants.

To cancel token ownership:

- 1 In the **Participants** list, right-click the endpoint that currently has Content Token ownership.

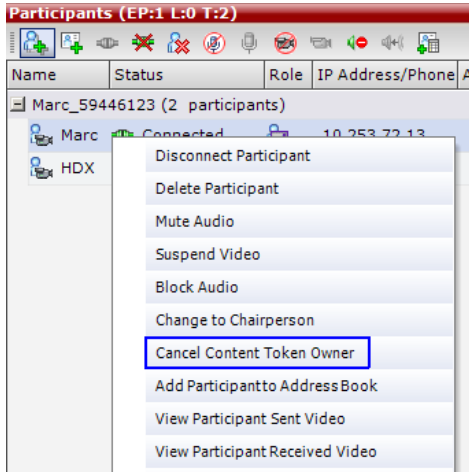


- 2 Select **Cancel Content Token Owner** in the drop-down menu.
Content Token ownership is cancelled for the endpoint.

Stopping a Content Session

The Collaboration Server user can withdraw the content token from the current holder.

To end the current Content session:

- » In the **Conferences** list pane, right-click the conference icon, and select **Abort H.239 Session**.

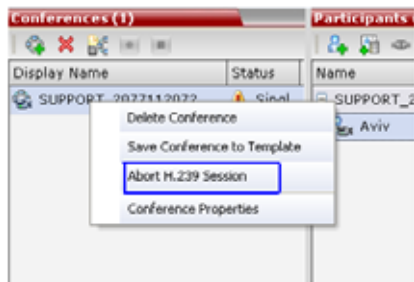

Content Sharing Reference Tables

Resolutions and Content Rate Reference Tables



Note: Content Rates Clarification

The values in the tables below indicate the **maximum** negotiated content rate (for both H.263 and H.264) and resolution/frame rate (only for H.264).

When using Highest Common, endpoints may lower the content parameters, whereas when using fixed rate, endpoints must comply with the content parameters as determined by the MCU.

The **actual** content parameters used by the content sharing endpoint are determined by that endpoint, and may be lower.

H.263 Content Rate Table

The table below describes the content rates for both Highest Common and Fixed content bit rates.

Highest Common and Fixed Content Bit Rate Allocation for H.263

Content Settings / MCU	64	128	256	384	512	768	1024	1152	1536	1920	2048	2560	3072	4096	6144 *
	96	192	320			832		1472					1728		
Graphics 33%															
All		64	64	128	128	256	256	384	512	512	512	768	768	1280	1280
Hi-res Graphics 50%															
All		64	128	192	256	384	512	512	768	1024	1024	1280	1536		
Live Video 66%															
All		64	128	256	384	512	512	768	1024	1280	1280	1536	1536		

* This line rate is applicable only for RealPresence Collaboration Server 1800 with 1 or 3 DSP cards, or with MPMRx card(s). In addition, it is applicable only for non-SVC-enabled conferencing

H.264 Resolution per Content Rate Tables

The tables below describe the resolution as negotiated by the MCU according to the content rate, for both base and high profiles.

Maximum Negotiated Resolution and Frame Rate per Content Rate for H.264 Base Profile

Bit Rate Allocated to Content Channel (Kbps)	Maximum Negotiated Content	
	Resolution	Frames/Second
64-512	H.264 HD720	5
512-768	H.264 HD720	30
768-1536	H.264 HD1080	15
1536-3072	H.264 HD1080	30 *
3072-4096	H.264 HD1080	60

Maximum Negotiated Resolution and Frame Rate per Content Rate for H.264 High Profile

Bit Rate Allocated to Content Channel (Kbps)	Maximum Negotiated Content	
	Resolution	Frames/Second
64-384	H.264 HD720	5
384-512	H.264 HD720	30
512-768	H.264 HD1080	15
768-2048	H.264 HD1080	30 *
2048-4096	H.264 HD1080	60

* For Collaboration Server 1800 with no DSP cards and Collaboration Server 1800 Entry Level, maximum content resolution is HD1080p30.

H.264 Highest Common Content Rates Tables

The tables below summarize the Highest Common maximum content rates as negotiated by the MCU. These tables apply only to single MCU (non-cascading) and non-SVC enabled conferences.



Note: Platforms and Content Transcoding Resolution Limitations

- For Collaboration Server 1800 with no DSP cards and Collaboration Server 1800 Entry Level, maximum content resolution is HD1080p30.
- For Transcoding, maximum content resolution is HD1080p15

Highest Common Content Bit Rate for H.264 Base Profile

Content Settings / MCU	64	128	256	384	512	768	1024	1152	1536	1920	2048	2560	3072	4096	6144 *		
	96	192	320			832		1280					1472			1728	3584
	Graphics 33%																
≤1080p15 [^]		64	64	128	128	256	256	384	512	512	512	768	768	1280	1280		
1080p30 **															2048		
Hi-res Graphics 50%																	
≤1080p15 [^]		64	128	192	256	384	512	512	768	1024	1024	1280	1536	1536			
1080p30 **														2048	2048		
1080p60 †															3072		
Live Video 66%																	
≤1080p15 [^]		64	128	256	384	512	512	768	1024	1280	1280	1536	1536				
1080p30 **													2048	2560	3072		
1080p60 †															4096		

* This line rate is applicable only for RealPresence Collaboration Server 1800 with 1 or 3 DSP cards, or with MPMRx card(s). In addition, it is applicable only for non-SVC-enabled conferencing

** This resolution is applicable only for RealPresence Collaboration Server 1800 with no DSP cards, or for Entry Level.

† This resolution is applicable only for RealPresence Collaboration Server 1800 with 1 or 3 DSP cards, or with MPMRx card(s).

[^] This limitation applies to content transcoding scenarios.



Note: High Profile Applicability

- High Profile is not applicable for Collaboration Server 1800 with no DSP cards.
- High profile is not applicable in content transcoding scenarios.

Highest Common Content Bit Rate for H.264 High Profile

Content Settings / MCU	64	128	256	384	512	768	1024	1152	1472	1536	1728	1920	2560	3072	4096	6144 *
	96	192	320			832		1280				2048		3584		
Graphics 33%																
≤1080p15 [^]		64	64	128	128	256	256	384	384	512	512	512	768	768	1280	
1080p30 **													768	768	1280	2048
1080p60 †																
Hi-res Graphics 50%																
≤1080p15 [^]		64	128	192	256	384	512	512	512	768	768	1024	1280	1280	1280	1280
1080p30 **										768	768	1024	1280	1536	2048	
1080p60 †															2048	3072
Live Video 66%																
≤1080p15-AVC only [^]		64	128	256	384	512	512	768	768	1024	1024	1280	1280	1280	1280	1280
≤1080p15-SVC/Mixed [^]					256			512		768						N/A
1080p30 **					384			768		1024	1024	1280	1536	2048	2048	
1080p60 †															2560	4096

* This line rate is applicable only for non-SVC-enabled conferencing

** This resolution is applicable only for RealPresence Collaboration Server 1800 with no DSP cards, or for Entry Level.

† This resolution is applicable only for RealPresence Collaboration Server 1800 with 1 or 3 DSP cards, or with MPMRx card(s).

[^] This limitation applies to content transcoding.

H.264 Cascade Optimized (Fixed) Content Rates Tables

The tables below summarize the content rates as they are determined by the MCU.

For information on the supported resolutions for each of the MCU types see [H.264 Resolution per Content Rate Tables](#).

H.264 Cascade Optimized Content Bit Rate for H.264 Base Profile

Cascade Resolution	64	128	256				832			1472		2048				6144 *	
	96	192	320	384	512	768	1024	1152	1280	1728	1920	2560	3072	3584	4096		
	Graphics 33%																
720p5		64	64	128	128	256	256	256	256	256	256	512	512	512	512	512	
720p30										512	512	512	512	512	512	768	
1080p15 ^											768	768	768	1152	1152	1152	
1080p30 **																2048	
1080p60 **																	
Hi-res Graphics 50%																	
720p5		64	128	192	256	384	384	384	512	512	512	512	512	512	512	512	
720p30								512	512	512	512	768	768	768	768	768	
1080p15 ^									768	768	768	768	768	1152	1152		
1080p30 **																2048	3072
1080p60 **																	3072
Live Video 66%																	
720p5		64	128	256	384	512	512	768	768	768	768	768	768	768	768	768	
720p30							512	768	768	768	768	768	768	768	768	768	
1080p15 ^								768	768	768	768	1152	1152	1152	1152		
1080p30 **													2048	2048	2560	3072	
1080p60 **																	4096

* This line rate is applicable only for RealPresence Collaboration Server 1800 or one with MPMRx card(s), and for non-SVC-enabled conferencing
 ** These resolutions are applicable only for RealPresence Collaboration Server 1800 or one with MPMRx card(s). For RMX 1800 with no DSP cards or for Entry Level, maximum content resolution is HD1080p30



Note: High Profile support

High profile is supported only by RealPresence Collaboration Server 2000/4000, or 1800 with 1 or 3 DSP cards.

H.264 Cascade Optimized Content Bit Rate for H.264 High Profile

Cascade Resolution	64	128	256	384	512	768	832	1024	1152	1536	1728	1920	2048	2560	4096	6144 *
	96	192	320						1280					3072		
	1472	3584														
Graphics 33%																
720p5		64	64	128	128	256	256	256	384	384	512	512	512	512	512	512
720p30									384	512	512	512	512	768	768	768
1080p15										512	512	512	512	768	1280	1280
1080p30													768	1280	2048	
1080p60															2048	
Hi-res Graphics 50%																
720p5		64	128	192	256	384	384	384	512	512	512	512	512	512	512	512
720p30						384	384	512	512	512	768	768	768	768	768	768
1080p15								512	512	768	768	768	768	1280	1280	1280
1080p30										768	768	768	1024	1024	2048	2048
1080p60														2048	3072	
Live Video 66%																
720p5		64	128	256	256	384	512	512	512	512	512	512	512	512	512	512
720p30						512	512	512	768	768	768	768	768	768	768	768
1080p15						512	512	512	768	768	768	1280	1280	1280	1280	1280
1080p30									768	1024	1024	1280	1280	1280	2048	2048
1080p60														2560	4096	

* This line rate is applicable only for non-SVC enabled conferencing

Implementing Media Encryption for Secured Conferencing

Encryption is available at the conference and participant levels, based on AES 128 (Advanced Encryption Standard) and is fully H.233/H.234 compliant and the Encryption Key exchange DH 1024-bit (Diffie-Hellman) standards.

Media Encryption Guidelines

- Encryption is not available in all countries and it is enabled in the MCU license. Contact Polycom Support to enable it.
- Media encryption is supported in CP, SVC Only and mixed CP and SVC Conferencing Modes.
- Endpoints must support both AES 128 encryption and DH 1024 key exchange standards which are compliant with H.235 (H.323) to encrypt and to join an encrypted conference.
- The encryption mode of the endpoints is not automatically recognized, therefore the encryption mode must be set for the conference or the participants (when defined).
- Media Encryption for ISDN/PSTN participants is not supported in cascaded conferences.
- Conference level encryption must be set in the Profile, and cannot be changed once the conference is running.
- If an endpoint connected to an encrypted conference stops encrypting its media, it is disconnected from the conference.
- In Cascaded conferences, the link between the cascaded conferences must be encrypted in order to encrypt the conferences.
- The recording link can be encrypted when recording from an encrypted conference to the Polycom® RealPresence® Media Suite that is set to encryption. For more information, see [Dial Out Recording Link Encryption](#).
- Encryption of SIP Media is supported using SRTP (Secured Real-time Transport Protocol) and the AES key exchange method.
- Encryption of SIP Media requires the encryption of SIP signaling - TLS Transport Layer must be used.
- Encryption of SIP Media is supported in conferences as follows:
 - All media channels are encrypted: video, audio and FECC.
 - Collaboration Server SRTP implementation complies with Microsoft SRTP implementation.
 - LPR is not supported with SRTP.
 - The ENABLE_SIRENLPR_SIP_ENCRYPTION System Flag enables the SirenLPR audio algorithm when using encryption with the SIP protocol. The default value of this flag is NO meaning SirenLPR is disabled by default for SIP participants in an encrypted conference. To enable SirenLPR the System Flag must be added to system.cfg and its value set to YES.
 - The SEND_SRTP_MKI System Flag enables or disables the inclusion of the MKI field in SRTP packets sent by the Collaboration Server. The default value of the flag is YES.

Add the flag to system.cfg and set its value set to NO to disable the inclusion of the MKI field in SRTP packets sent by the Collaboration Server when using endpoints that cannot decrypt SRTP-based audio and video streams if the MKI (Master Key Identifier) field is included in SRTP packets sent by

the Collaboration Server. When all conferences on the RMX will not have MS-Lync clients participating and will have 3rd party endpoints participating. This setting is recommended for Maximum Security Environments.

Add the flag to system.cfg and set its value set to YES when Microsoft Office Communicator and Lync Clients. When any conferences on the RMX will have both MS-Lync clients and Polycom endpoints participating. Some 3rd party endpoints may be unsuccessful in participating in conferences with this setting.

Polycom endpoints function normally regardless of the setting of this flag.

For more information, see [Modifying System Flags](#).

- In compliance with UC_APL_SEC_0013, the Collaboration Server 2000/4000 supports an additional Privacy Protocol AES_CM_128_HMAC_SHA1_32, in addition to AES_CM_128_HMAC_SHA1_80. For more information see [Media Encryption and Authentication](#).



Note: ISDN/PSTN

ISDN/PSTN connections are not supported by Collaboration Server Virtual Edition.

Mixing Encrypted and Non-encrypted Endpoints in one Conference

Mixing encrypted and non-encrypted endpoints in one conference is possible, based on the Encryption option Encrypt When Possible in the Conference Profile - Advance dialog box. The behavior is different for H.323/SIP and ISDN participants.

The option **Encrypt When Possible** enables the negotiation between the MCU and the endpoints and let the MCU connect the participants according to their capabilities, where encryption is the preferred setting. Defined participants that cannot connect encrypted are connected non-encrypted, with the exception of dial-out SIP participants.



Note: Encrypt when possible

- When the conference encryption is set to **Encrypt when possible**, SIP dial out participants whose encryption is set to AUTO can only connect with encryption, otherwise they are disconnected from the conference.
- In CISCO TIP environments, dial in endpoints that are registered to CUCM can only connect as non-encrypted when the conference encryption is set to **Encrypt when possible** as the CUCM server sends the Invite command without SDP.
- When the conference encryption is set to **Encrypt when possible**, SIP dial out participants whose encryption is set to AUTO can only connect with encryption, otherwise they are disconnected from the conference.

The same system behavior can be applied to undefined participants, depending on the setting of the System Flag FORCE_ENCRYPTION_FOR_UNDEFINED_PARTICIPANT_IN_WHEN_AVAILABLE_MODE:

- When set to **NO** and the conference encryption in the Profile is set to **Encrypt when possible**, both Encrypted and Non-encrypted undefined participants can connect to the same conferences, where encryption is the preferred setting.
- When set to **YES** (default), undefined participants must connect encrypted, otherwise they are disconnected.

For defined participants, connection to the conference is decided according to the encryption settings in the conference Profile, the Defined Participant's encryption settings.

For undefined participants, connection to the conference is decided according to the encryption settings in the conference Profile, the System Flag setting and the connecting endpoint's Media Encryption capabilities.

Direct Connection to the Conference

The following table summarizes the connection status of participants, based on the encryption settings in the conference Profile, the Defined Participant's encryption settings or the System Flag setting for undefined participants and the connecting endpoint's Media Encryption capabilities.

Connection of Participants to the Conference based on Encryption Settings

Conference Encryption Setting	Defined Participant		Undefined Participant	
	Encryption Setting	Connection status	Connection Status *Flag = No	Connection Status *Flag = YES
No Encryption	Auto	Connected, non-encrypted	Connected non-encrypted (Encryption is not declared by the Collaboration Server, therefore the endpoint does not use encryption)	Connected non-encrypted (Encryption is not declared by the Collaboration Server, therefore the endpoint does not use encryption)
	No	Connected, non-encrypted		
	Yes	Connected only if encrypted. Non-encrypted endpoints are disconnected as encryption is forced for the participant.		
Encrypt All	Auto	Connected, encrypted. Non-encrypted endpoints are disconnected	Connect only if encrypted. Non-encrypted endpoints are disconnected	Connect only if encrypted. Non-encrypted endpoints are disconnected
	No	Disconnected (cannot be added to the conference)		
	Yes	Connected, encrypted		

Connection of Participants to the Conference based on Encryption Settings

Conference Encryption Setting	Defined Participant		Undefined Participant	
	Encryption Setting	Connection status	Connection Status *Flag = No	Connection Status *Flag = YES
Encrypt When Possible	Auto	All defined participants except dial-out SIP participants: <ul style="list-style-type: none"> Connect encrypted - Endpoints with encryption capabilities. Connect non-encrypted - endpoints without encryption capabilities. Defined dial-out SIP participant: <ul style="list-style-type: none"> Connect only if encrypted. Non-encrypted endpoints are disconnected. 	Connect encrypted - Endpoints with encryption capabilities. Connect non-encrypted - endpoints without encryption capabilities	Connect only if encrypted. Non-encrypted endpoints are disconnected.
	No	Connected, non-encrypted		
	Yes	Connected, encrypted		

* Flag = FORCE_ENCRYPTION_FOR_UNDEFINED_PARTICIPANT_IN_WHEN_AVAILABLE_MODE

Connection to the Entry Queue

An undefined participant connecting to an Entry Queue inherits the encryption characteristics of the Entry Queue as defined in the Entry Queue's profile.

Participants can be moved from the Entry Queue and the destination conference if both conferencing entities have the same Profile settings, i.e. from SVC Only Entry Queue to SVC Only conference and from mixed CP and SVC Entry Queue to a mixed CP and SVC conference, etc.

The following table summarizes the connection possibilities for a participant that is to be moved from an Entry Queue to a destination conference for each of the conference Profile and Entry Queue encryption options.

Connection of Undefined Participants to the Entry Queue Based on Encryption Settings

Entry Queue Encryption Setting	Undefined Participant Connection to the Entry Queue	
	*Flag = No	*Flag = YES
No Encryption	Connected, non-encrypted (Encryption is not declared by the Collaboration Server, therefore endpoint does not use encryption)	Connected, non-encrypted (Encryption is not declared by the Collaboration Server, therefore endpoint does not use encryption)
Encrypt All	Connected only if encrypted. Non-encrypted endpoints are disconnected	Connected only if encrypted. Non-encrypted endpoints are disconnected

Connection of Undefined Participants to the Entry Queue Based on Encryption Settings

Entry Queue Encryption Setting	Undefined Participant Connection to the Entry Queue	
	*Flag = No	*Flag = YES
Encrypt When Possible	Connected encrypted - Endpoints with encryption capabilities. Connected non-encrypted - endpoints without encryption capabilities	Connected only if encrypted. Non-encrypted endpoints are disconnected.

* Flag = FORCE_ENCRYPTION_FOR_UNDEFINED_PARTICIPANT_IN_WHEN_AVAILABLE_MODE

Moving from the Entry Queue to Conferences or Between Conferences

Participants can be moved from the Entry Queue and the destination conference if both conferencing entities have the same Profile settings, i.e. from SVC Only Entry Queue to SVC Only conference and from mixed CP and SVC Entry Queue to a mixed CP and SVC conference, etc.

When moving participants from the Entry Queue to the destination conference, or when the Collaboration Server user moves AVC participants from one conference to another (SVC participants cannot be moved between conferences), the connection rules are similar and they are summarized in the table below:

Moving participants from entry queue to conference / between conferences depending on encryption settings

Destination Conference Encryption Setting	Current Participant Encryption Status			
	Encrypted		Non-Encrypted	
	*Flag = NO	*Flag = YES	*Flag = NO	*Flag = YES
No Encryption	Move succeeds, connected encrypted		Move succeeds, connected non-encrypted	
Encrypt All	Move succeeds, connected encrypted.		Move fails, disconnected.	
Encrypt When Possible	Move succeeds, connected encrypted	Move succeeds, connected encrypted	Move succeeds, connected non-encrypted	Connected only if endpoint was a defined participant in the source conference. Otherwise, move fails.

* Flag = FORCE_ENCRYPTION_FOR_UNDEFINED_PARTICIPANT_IN_WHEN_AVAILABLE_MODE

Recording Link Encryption

Recording Links are treated as regular participants, however the system flag ALLOW_NON_ENCRYPT_RECORDING_LINK_IN_ENCRYPT_CONF must be set to YES if a non-encrypted Recording Link is to be allowed to connect to an encrypted conference.

The following table summarizes the connection possibilities for a Recording Link that is to be connected to a conference for each of the conference profile and Entry Queue encryption options.

Connections by Recording Link and Conference Encryption Settings

Conference Profile Setting	Recording Link Connection Status according to flag: ALLOW_NON_ENCRYPT_RECORDING_LINK_IN_ENCRYPT_CONF	
	YES	NO
Encrypt All	Connected encrypted if possible, otherwise connected non-encrypted.	Connected only if encrypted, otherwise disconnected
No Encryption	Connected non-encrypted	Connected non-encrypted
Encrypt when possible	Connected encrypted if possible, otherwise connected non-encrypted.	Connected encrypted if possible, otherwise connected non-encrypted.

Enabling Media Encryption for a Conference

Media encryption is enabled at three levels:

- MCU level - [Setting the Encryption Flags](#)
- Conference level - [Enabling Encryption in the Profile](#)
- Participant level - [Enabling Encryption at the Participant Level](#)

You must first set the system flags for the MCU before media encryption can be enabled for the conference and participants.

Setting the Encryption Flags

Enabling the media encryption for the MCU is usually performed once an it is applicable to all conferences running on the MCU.

To modify the Encryption flags:


- 1 Click **Setup>System Configuration**.
The **System Flags** dialog box opens.
- 2 Set the **FORCE_ENCRYPTION_FOR_UNDEFINED_PARTICIPANT_IN_WHEN_AVAILABLE_MODE** flag to **YES** or **NO**.
- 3 If recording will be used in encrypted conferences, set the **ALLOW_NON_ENCRYPT_RECORDING_LINK_IN_ENCRYPT_CONF** flag to **YES** or **NO**.
- 4 Click **OK**.
For more information, see [Modifying System Flags](#).
- 5 Reset the MCU for flag changes to take effect.

Enabling Encryption in the Profile

Encryption for the conference is in the Profile and cannot be changed once the conference is running.

To enable encryption at the conference level:

- » In the **Conference Profile Properties – Advanced** dialog box, select one of the following Encryption options:

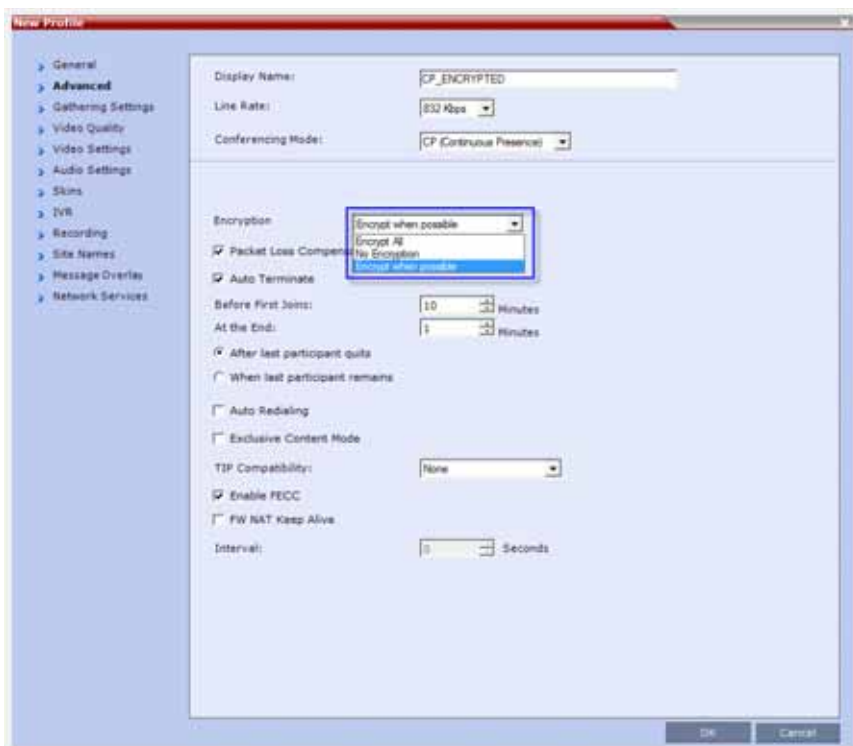

- **Encrypt All** - Encryption is enabled for the conference and all conference participants must be encrypted.
- **No Encryption** - Encryption is disabled for the conference.
- **Encrypt when possible** - Enables the negotiation between the MCU and the endpoints and let the MCU connect the participants according to their capabilities, where encryption is the preferred setting. For connection guidelines see [Mixing Encrypted and Non-encrypted Endpoints in one Conference](#).


For more information about recording encrypted conferences, see [Dial Out Recording Link Encryption](#).

Enabling Encryption at the Participant Level

You can select the encryption mode for each of the defined participants. Encryption options are affected by the settings of the flag in the system configuration. Undefined participants are connected with the Participant Encryption option set to Auto, inheriting the conference/Entry Queue encryption setting.

To enable encryption at the participant level:

- » In the **Participant Properties – Advanced** dialog box, in the Encryption list, select one of the following options: **Auto**, **On**, or **Off**.

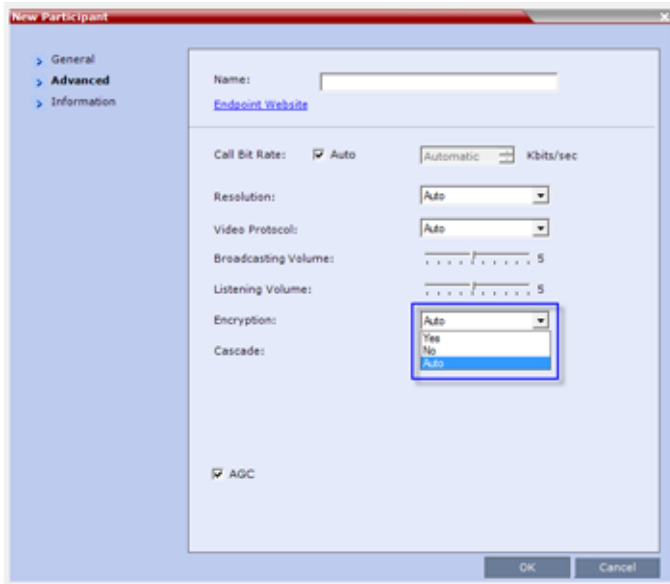


- **Auto** - The participant inherits the conference/Entry Queue encryption setting. The participant connects as encrypted only if the conference is defined as encrypted.
- **Yes** - The participant joins the conference/Entry Queue as encrypted.
- **No** - The participant joins the conference/Entry Queue as non-encrypted.


Monitoring the Encryption Status

The conference encryption status is indicated in the Conference Properties - General dialog box.

The participant encryption status is indicated by a check mark in the Encryption column in the Participants list pane.

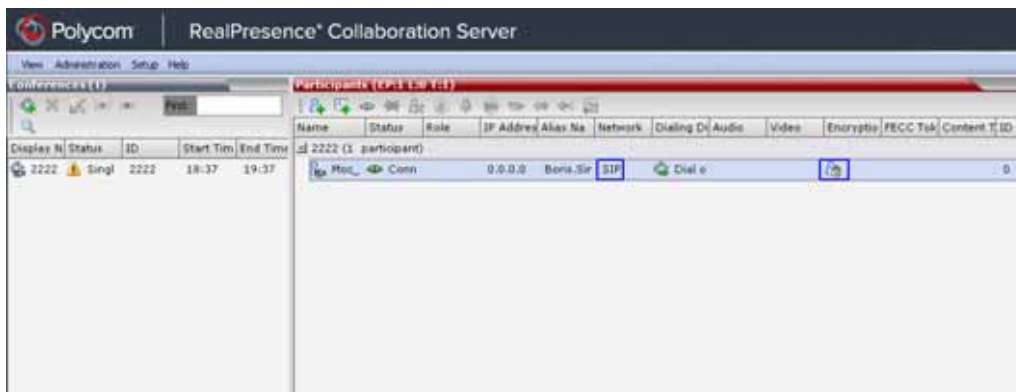

The participant encryption status is also indicated in the Participant Properties – SDP tab, where SRTP indication is listed for each encrypted channel (for example, audio and video).

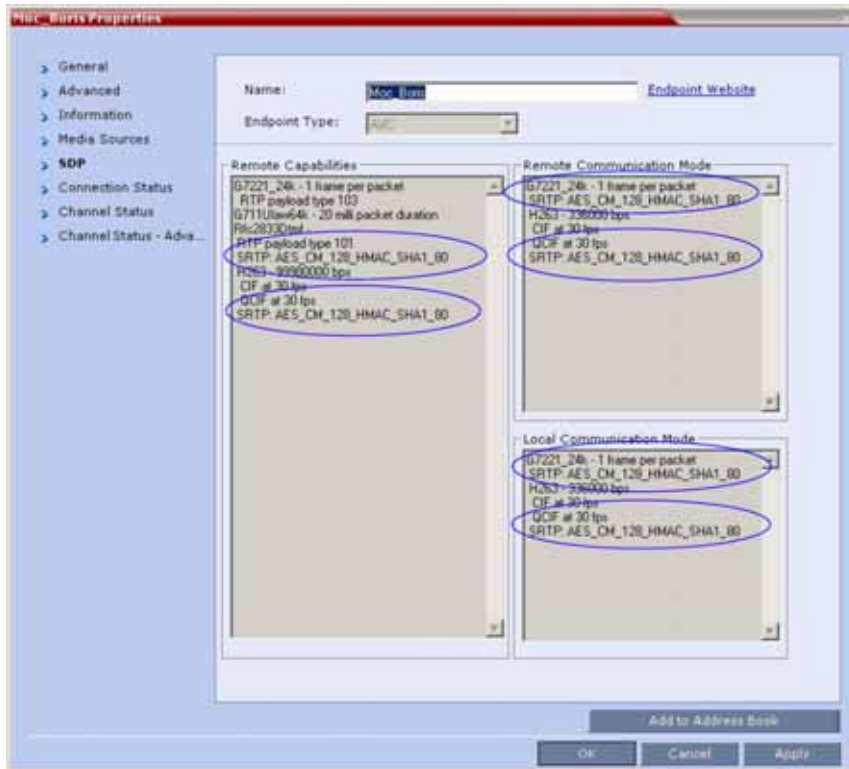

An encrypted participant who is unable to join a conference is disconnected from the conference. The disconnection cause is displayed in the Participant Properties – Connection Status dialog box, Security Failure indication, and the Cause box identifies the encryption related situation.

For more information about monitoring, see [Conference and Participant Monitoring](#).

Setting Conferences for Telepresence Mode (AVC CP)

Collaboration Server supports the Telepresence Mode in AVC CP conferences allowing multiple participants to join a telepresence conference from RPX and OTX high definition rooms as well as traditional, standard definition video conferencing systems.



Note: Irrelevancy of Chapter to a Platform

Telepresence Mode and its associated layouts are not supported by Polycom RealPresence Collaboration Server (RMX) 1800 with no DSP cards.

OTX (Telepresence) and RPX (RealPresence) room systems are configured with high definition cameras and displays that are set up to ensure that all participants share a sense of being in the same room.

Participants using two RealPresence RPX HD 400 Room Systems



The following are examples of situations where an Collaboration Server is needed for Telepresence configurations:

- RPX to OTX
- RPX 2-cameras/screens to RPX 4-cameras/screens
- 3 or more RPXs
- 3 or more OTXs

Collaboration Server Telepresence Mode Guidelines

System Level

- The Collaboration Server system must be licensed for Telepresence Mode.
- The system must be activated with a Telepresence enabled license key.

Conference Level

- The Telepresence Mode and Telepresence Layout Mode fields are only displayed in the Conference Profile dialog box if the Collaboration Server has a Telepresence license installed.
- A Telepresence conference must have Telepresence Mode enabled in its profile.
- In Telepresence Mode, ITP sites are automatically detected.
- When Telepresence Mode is selected in a conference profile, the following options are disabled:
 - Borders
 - Site Names
 - Speaker Indication
 - Skins
 - Same Layout
 - Presentation Mode
 - Auto Layout
 - Lecture Mode
- The master (center) camera is used for video, audio and content.
- Conference Templates can be used to simplify the setting up Telepresence conferences where precise participant layout and video forcing settings are crucial. Conference Templates:
 - Save the conference Profile.
 - Save all participant parameters including their Personal Layout and Video Forcing settings.
- An ongoing Telepresence conference can be saved to a Conference Template for later re-use. For more information see [Conference Templates](#).
- Telepresence Mode and its associated layouts are not supported by Collaboration Server (RMX) 1800 with no DSP cards.

Automatic Detection of Immersive Telepresence (ITP) Sites

When the conference Telepresence Mode is set to Auto (Default) ITP endpoints are automatically detected.

If an ITP endpoint is detected in such conference, ITP features are applied to all endpoints and the Collaboration Server sends conference video with the following options disabled:

- Borders
- Site names
- Speaker indication
- Skins
- Same Layout
- Presentation Mode
- Auto Layout
- Lecture Mode

The ITP features are dynamic, and if all ITP endpoints disconnect from the conference, normal conference video is resumed for the remaining all participants. ITP features are re-applied to all participants should an ITP endpoint re-connects to that conference.

Horizontal Striping

Horizontal Striping is used by the Collaboration Server in order to prevent cropping and preserve the aspect ratio of video for all Telepresence Modes.




Cropping

Cropping is used by the Collaboration Server in order to preserve the aspect ratio of video for all Telepresence Modes.

Cropping is controlled by the ITP_CROPPING system flag in the system configuration, providing different cropping options according to the endpoints participating in the Telepresence conference:

- **ITP** (default) - In this mode, the area is cropped symmetrically from both top and bottom.

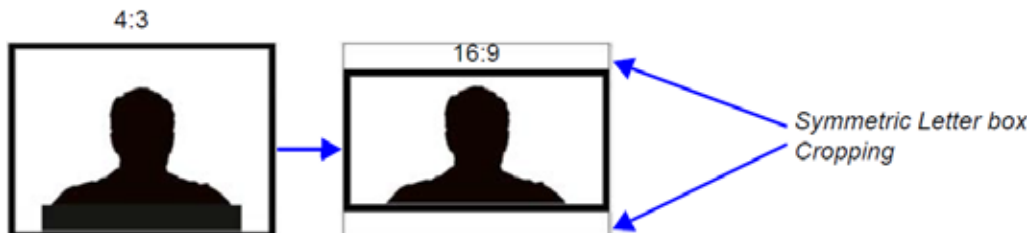

- **CP** - In this mode, the area is cropped symmetrically from both top-bottom and right-left, where the width of the cropped area is calculated separately.



- **Mixed** - In this mode, the area to be stripped is cropped symmetrically from right-left areas, and asymmetrically from top-bottom areas (16% from top, 84% from bottom).



Gathering Phase with ITP Room Systems

When a conference is configured to include a Gathering Phase, only one endpoint name is displayed for the ITP room in the connected participant list of the Gathering slide. The ITP room endpoint with the suffix **1** in its name receives the Gathering slide.

Aspect ratio for standard endpoints

Standard endpoints (non-ITP) receive video from the Collaboration Server with the same aspect ratio as that which they transmitted to the Collaboration Server.


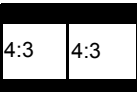
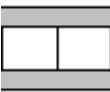
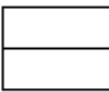
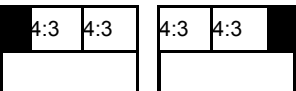
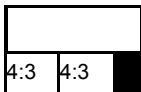
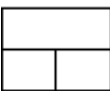
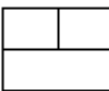
Skins and Frames

When Telepresence Mode is enabled, no Skin is displayed and the system uses a black background. Frames around individual layout windows and the speaker indication are disabled.

RPX and OTX Video Layouts

Additional video layouts have been created to give Telepresence operators more video layout options when configuring OTX and RPX room systems. These additional video layout options are available to all endpoints on both conference layout and Personal Layout levels.

OTX / RPX – Additional Video Layouts

Number of Endpoints	Layouts
1	
2	  
3	   


OTX / RPX – Additional Video Layouts

Number of Endpoints	Layouts
4	
5	
9	
10+	

The following example illustrates the use of standard and additional Collaboration Server Telepresence layouts when connecting four Room Systems as follows:

- Two OTX Room Systems
 - 2 active cameras
 - 6 screens
- Two RPX Room Systems
 - 8 cameras
 - 8 screens

RPX and OTX Room System connected using the RealPresence Collaboration Server

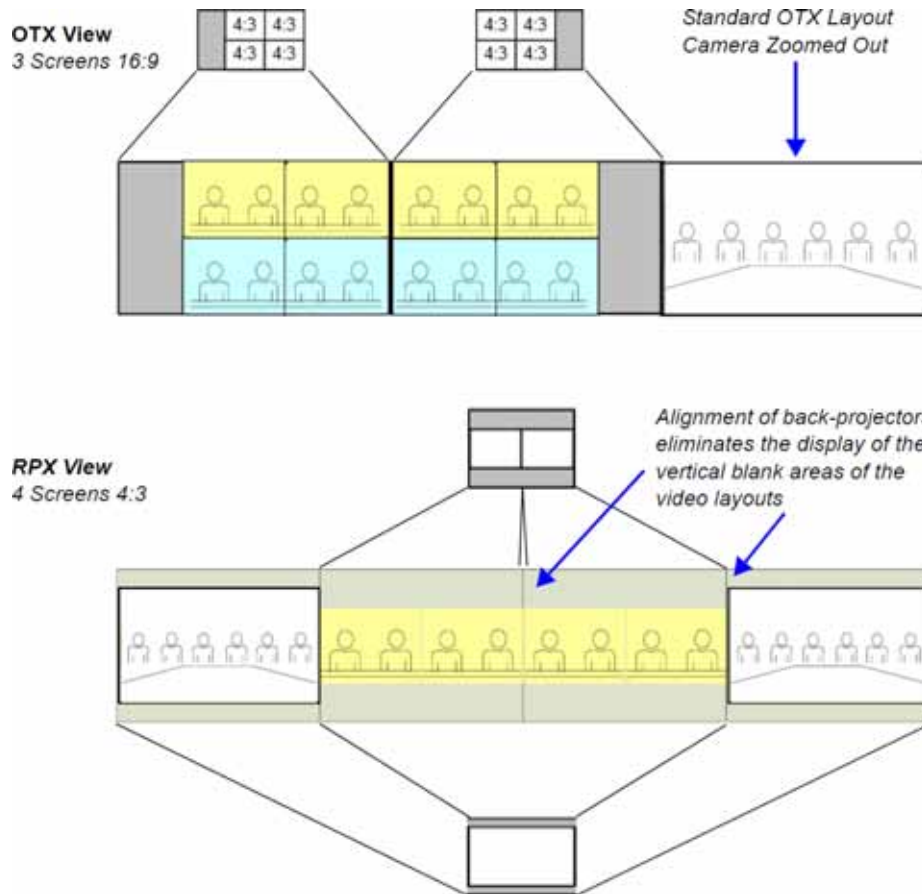

Room Switch Telepresence Layouts

The Room Switch Telepresence layouts normally controlled by the MLA can be managed by the MCU to speed updating the conference layouts in large conferences with many endpoints.

Whether the MLA or the MCU controls the Room Switch Telepresence layouts is determined by the `MANAGE_TELEPRESENCE_ROOM_SWITCH_LAYOUTS` flag. This flag must be manually added before changing its value. No system reset is required.

The values are:

- NO (Default) - The MCU does not manage Telepresence Room Switch Layouts and they continue to be managed by the MLA.
- YES - The MCU manages Telepresence Room Switch Layouts.

When the MCU controls the Telepresence Room Switch layouts (`MANAGE_TELEPRESENCE_ROOM_SWITCH_LAYOUTS = YES`) the display is affected according to the Telepresence Mode Settings in the Conference Profile as follows:

- If the Telepresence Mode = ON
 - If no ITP endpoints are connected to the conference, the RMX Room Switch layout applies, in which case only the speaker is seen.
 - When a single participant using an ITP endpoint with either single or multiple screens connects to the conference, the participant will see black screens.
- If the Telepresence Mode = AUTO
 - If no ITP endpoints are connected to the conference, the RMX CP layout applies (unless the conference layout is defined).
 - When a single participant using an ITP endpoint with multiple screens connects to the conference, the participant will see black screens.
 - When a single participant using an ITP endpoint with a single screen connects to the conference, the MCU will display a self-view of the participant.
- When a TIP system with 3 screens joins a conference, the layout is updated on all screen simultaneously.
- When a Polycom ITP system with 2, 3, or 4 screens joins the conference, the layout is updated on all screens simultaneously.

Telepresence Display Decision Matrix

How the speaker video is displayed on the screens of the conference participants is dependent on the relationship between the number of screens the speaker endpoint contains and the number of screens of the endpoints of the other conference participants.

The following Telepresence Display Decision Matrix table below indicates how the speaker video will be displayed on the various participant endpoints, when the MCU is managing Telepresence Room Switch conference layouts.

Number of Screens	Speaker Endpoint				
	1	2	3	4	
Participant Endpoint	1	Speaker EP: 1 Displaying EP (mirror): 1 EP1	Speaker EP: 2 1 Displaying EP (mirror): 2 1 EP1	Speaker EP: 2 1 3 Displaying EP (mirror): 2 1 3 EP1	Speaker EP: 4 2 1 3 Displaying EP (mirror): 4 2 1 3 EP1
	2	Speaker EP: 1 Displaying EP (mirror): EP-2 1 EP2 EP1	Speaker EP: 2 1 Displaying EP (mirror): 2 1 EP2 EP1	Speaker EP: 2 1 3 Displaying EP (mirror): 2 1 3 EP2 EP1	Speaker EP: 4 2 1 3 Displaying EP (mirror): 4 2 1 3 EP2 EP1
	3	Speaker EP: 1 Displaying EP (mirror): EP2 1 EP3	Speaker EP: 2 1 Displaying EP (mirror): 2 1 EP3	Speaker EP: 2 1 3 Displaying EP (mirror): 2 1 3 EP2 EP1 EP3	Speaker EP: 4 2 1 3 Displaying EP (mirror): 4 2 1 3 EP2 EP1 EP3
	4	Speaker EP: 1 Displaying EP (mirror): EP4 EP2 EP1 EP3	Speaker EP: 2 1 Displaying EP (mirror): EP4 2 1 EP3	Speaker EP: 2 1 3 Displaying EP (mirror): 2 1 3 EP4 EP2 EP1 EP3	Speaker EP: 4 2 1 3 Displaying EP (mirror): 4 2 1 3 EP4 EP2 EP1 EP3

For example, if the speaker’s endpoints has two screens and the participant’s endpoint only one, the participant’s display is divided into two video layout cells with each video layout cell showing the input of one of the speaker’s screens (endpoint).

If the participant endpoint has two screens, and the speaker endpoint only one, the speaker’s video will be displayed on one of the participant’s screens, while the second screen remains black.

Guidelines for Managing the Room Switch Telepresence Layouts by the MCU

- Only Room Switch layouts can be managed by the MCU. CP (Continuous Presence) layouts continue to be managed by the MLA.
- Only CP-AVC conferences are supported.
- Lync Clients (with Polycom® ContentConnect™ add-in) are supported. Microsoft Lync is not supported by Collaboration Server (RMX) 1800 with no DSP cards.
- SVC endpoints are not supported.
- It is recommended that the **Speaker Change Threshold** be set to 3 seconds.
- Telepresence endpoints are named using a text name followed by a number. For example, if an OTX Telepresence room is named **Oak**, the three endpoint names would be Oak1, Oak2, and Oak3.
- Lecture mode is not supported in Telepresence Room Switch conferences managed by the MCU. (This is because in Lecture mode, unlike Room Switch mode, the lecturer receives the CP layout of conference participants.)

- Personal layouts are disabled. Therefore, any features that use personal layouts like Click&View can not be used to change the layout, and Click&View DTMF digits will be ignored.
- Changing the flag affects only future conferences. Conferences currently running are not affected.
- The Send Content To Legacy Endpoints feature is enabled by default when Telepresence mode is enabled.
- Layout attributes (no skins, no site names and no borders) should continue for Telepresence layouts managed by the RMX.

Speaker Priority in CP Video Layouts

The purpose of Speaker Priority Mode is to provide high visibility to the speaker's room and to ensure that the active speaker in the conference is always displayed in the video layout, and displayed in the best way possible. If there is space in the layout while the active speaker is displayed, previous speakers are also displayed.

Reserved Screens

When Speaker Priority mode is selected each Room System reserves screens to provide high visibility according to maximum number of room-screens in the conference, displaying the active speaker in the largest video layout cell available.

The Speaker Priority option is selected in the Video Settings tab of the Profile dialog. For more information see [Selecting Speaker Priority](#)

The number of reserved screens depends on the maximum number of room-cameras connected to the conference. Typically, two room-cameras are displayed one screen, three room-cameras on three screens, and four room-cameras on two screens.



Reserved screens include an Overlay Layout (Filmstrip) that may be populated with other conference participants after the Grid Screen(s) have been fully populated with additional conference participants. See [Video Layout Examples](#).

Grid Screens

Grid screens are symmetric video layouts (2x2, 3x3, 4x4) that are populated with other conference participants after the Reserved Screens are populated with the current and previous speakers. Grid screens are only available when the room system has more screens than the number of reserved screens—grid screens typically exist within 2 or 4 screen systems. See [Video Layout Examples](#).

Video Layout Examples

- A three-screen Room System will reserve three screens if another three-camera Room System participates in the conference. If the active speaker is using a single camera endpoint, the active speaker is displayed on a full screen while the two previous speakers are displayed on the other two screens.
- Irrespective of whether the receiving Room System has more screens than the active speaker's Room System:

- An active speaker's two-camera room is displayed on one screen. 
- An active speaker's four-camera room is displayed on two screens. 
- Three-screen Room Systems (e.g. OTX / TIP) will not zoom out when Speaker Priority is selected. The layout below is used when the active speaker is using a 3-screen room system and the viewing endpoint is single-screen endpoint.

Single Screen



Active speaker is displayed in 3 cells.

The layout below is used when the active speaker is using a single-screen endpoint and the viewing endpoint is single-screen endpoint.

Single Screen



Active speaker is displayed in 1x1
Filmstrip displays the most recent speakers.

The layout below is used when the active speaker is using a single-screen endpoint and the viewing endpoint is 3-screen endpoint.

Room System - 3 Reserved Screens



Active speaker can be displayed in the left, right, or center screen.
Filmstrip displays most recent active speakers not already displayed.

- A: Displays 3-screens (e.g. OTX/TIP) of recent active speakers.
- B: Active Speaker and filmstrip.
- C: Displays single-screen recent active speaker and filmstrip.

The layout below is used when the active speaker is using a 3-screen room system and the viewing endpoint is 3-screen endpoint.

Room System - 3 Reserved Screens



Filmstrip displays most recent active speakers.

Active speaker's Room System is displayed in all 3 screens.

- If a two-screen Room System is displaying a active speaker using a one-camera endpoint, and a previous speaker also using a one-camera endpoint, the following layouts will be displayed on the Room System's two screens.

The layout below is used when the conference includes 4-screen rooms where both the active speaker and the previous active speaker are using single-screen endpoints.

Room System - 2 Reserved Screens

Screen 1 - Reserved Screen 2 - Reserved



Active Speaker
+ Participants Filmstrip

Previous Speaker
+ Participants Filmstrip

Active speaker can be displayed in either the left or right screen.

The layout below is used when the conference includes 1, 2, and 3-screen rooms where the active speaker is using a single-screen endpoint.

Room System - 1 Reserved Screen

Screen 1 - Reserved Screen 2 - Grid (3x3)




Active Speaker
+ Participants Filmstrip

Participants

Selecting Speaker Priority

Speaker Priority is selected in the Telepresence Layout Mode menu in the Video Settings tab of the Profile dialog. For more information see [Defining AVC CP Conferencing Profiles](#).

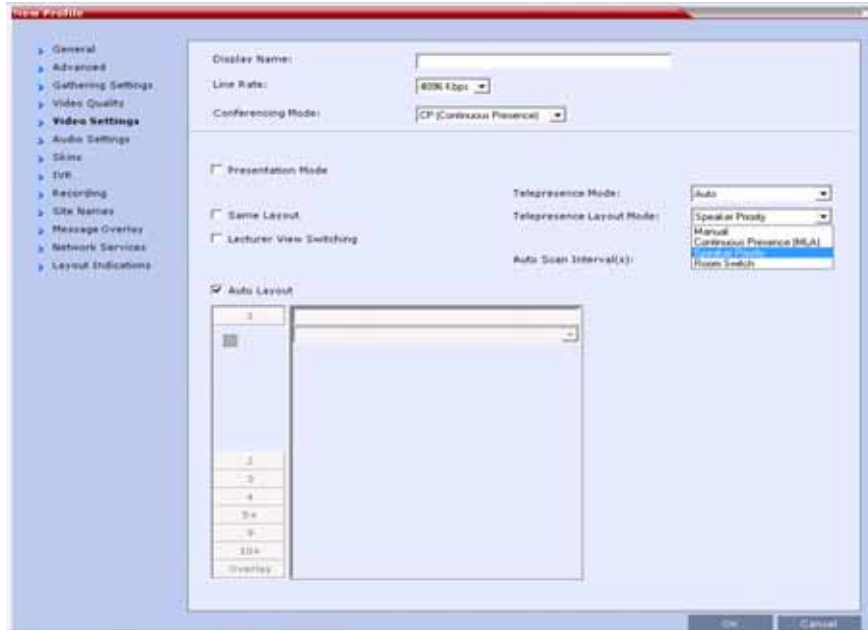

Telepresence Mode License

The Telepresence Layout Mode field is enabled only if the Collaboration Server system is licensed for Telepresence Mode.



AVC endpoints only

Telepresence features are currently only supported in AVC-CP conferences. SVC or SVC and CP Mixed Mode conferences are not supported.

Sending Content to Legacy Endpoints in Telepresence Conferences

The Collaboration Server can be configured to manage the layouts of to H.323/SIP/ISDN endpoints that do not support H.239 Content (legacy endpoints) over the video (people) channel in Telepresence conferences when Content is being sent. This feature is controlled using the `FORCE_LEGACY_EP_CONTENT_LAYOUT_ON_TELEPRESENCE` flag. This flag must be added to change the value.

The values of the flag are:

- NO (Default) - The MCU does not manage the layouts while Content is sent. Personal layout changes, for example, by MLA, override the default MCU layout. Legacy endpoints may not display Content in Telepresence conferences due to layout changes.

- YES - The MCU manages the layouts while *Content* is sent. Personal layout changes, for example, by MLA, are ignored. The layouts for legacy endpoints are managed by the MCU.

Guidelines for Sending Content to Legacy Endpoints in Telepresence Conferences

- MLA layout change requests for legacy endpoints will be ignored until Content is stopped. At that point, MLA can be used again.
- Click&View can not be used to change the layout while Content is being sent.
- The Polycom Touch Control can not be used to change the layout while Content is being sent.

Content Display on Legacy Endpoints in Telepresence Conferences

When Content is sent to legacy endpoints in Telepresence conferences, their video layout automatically changes to the Content layout which is defined by the system flag `LEGACY_EP_CONTENT_DEFAULT_LAYOUT`. If MLA is managing the Telepresence layout prior to Content being sent, the MCU takes over managing the layout of Legacy endpoints once Content is started. The video layouts of the other conference participants continue to be managed by MLA.


If MLA was managing the Telepresence layouts, when Content ends, control of the layouts for legacy endpoints goes back to the MLA after a short time.

Enabling Telepresence Mode

Telepresence Mode must be configured in a new or existing Conference Profile.

To enable Telepresence in a new or existing Conference Profile:

- 1 In the **RMX Management** pane, click **Conference Profiles**.
- 2 Click the **New Profiles** button or open an existing Conference Profile.
- 3 Define the various profile **General**, **Advanced**, **Gathering Settings** and **Video Quality** parameters. For more information on defining Profiles, see [Defining New Profiles](#).
- 4 Click the **Video Settings** tab.

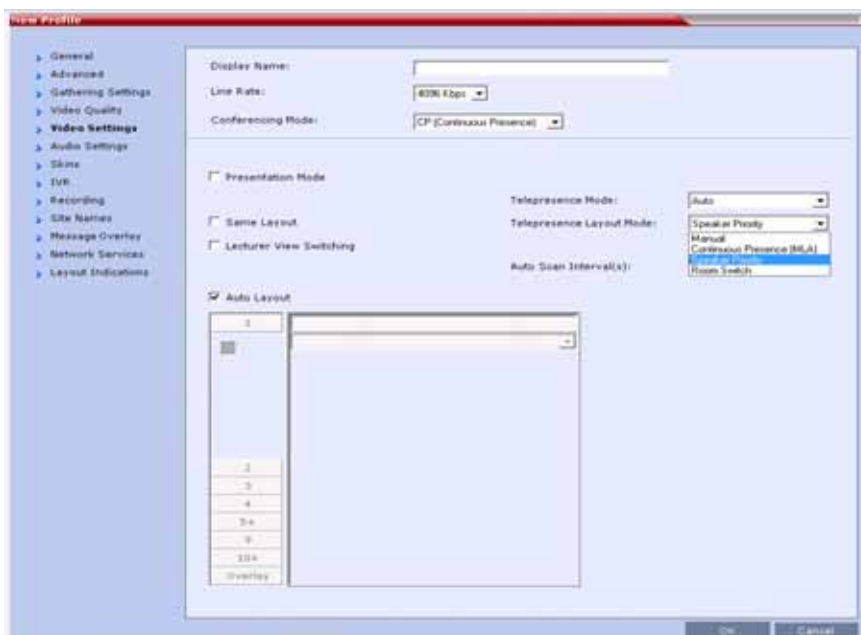

- 5 In the **Telepresence Mode** field, select one of the following options:
 - **OFF** - When OFF is selected, normal conference video is sent by the Collaboration Server.
 - **AUTO** (Default) - The ITP features are dynamic. When AUTO is selected and an ITP endpoint is detected, ITP features are applied to the conference video for all participants. If all ITP endpoints disconnect from the conference, normal conference video is resumed for all remaining participants. ITP features are re-applied for all participants should an ITP endpoint re-connect to the conference.

When Telepresence Mode is set to **Auto** and a one-screen Telepresence unit is in use, the Collaboration Server controls layouts instead of the *MLA*. For more information see *Polycom Multipoint Layout Application (MLA) User's Guide for Use with Polycom Telepresence Solutions*.
 - **ON** - ITP features are always applied to the conference video for all participants regardless of whether there are ITP endpoints connected or not.

- 6 In the **Telepresence Layout Mode** field, select the Telepresence Layout Mode to be used in the conference. This field is used by VNOC operators and Polycom Multi Layout Applications to retrieve Telepresence Layout Mode information from the Collaboration Server.

The following modes can be selected (as required by the VNOC and Polycom Multi Layout Applications):

- **Manual**
 - **Continuous presence (MLA)** - Room Continuous Presence (default for API backward compatibility)
 - **Speaker Priority** - Speaker always displayed using the best quality (default)
 - **Room Switch** - Voice Activated Room Switching
- 7 Select the required video layout.
 - 8 Click **OK**.




Note: Skins and System Flags in Telepresence Mode

- When Telepresence Mode is enabled, the **Skins** options are disabled as the system uses a black background and the frames and speaker indication are disabled.
- It is recommended that the **PRESERVE_PARTY_CELL_ON_FORCE_LAYOUT** System Flag be set to **YES** if the Collaboration Server is used primarily for ITP conferences with MLA.
- For more information see the flag description in [System Configuration Flags](#).

Monitoring Telepresence Mode

Monitoring Ongoing Conferences

An additional status indicator, Telepresence Mode Enabled, is displayed in the Conference Properties - Video Settings tab when monitoring ongoing conferences.

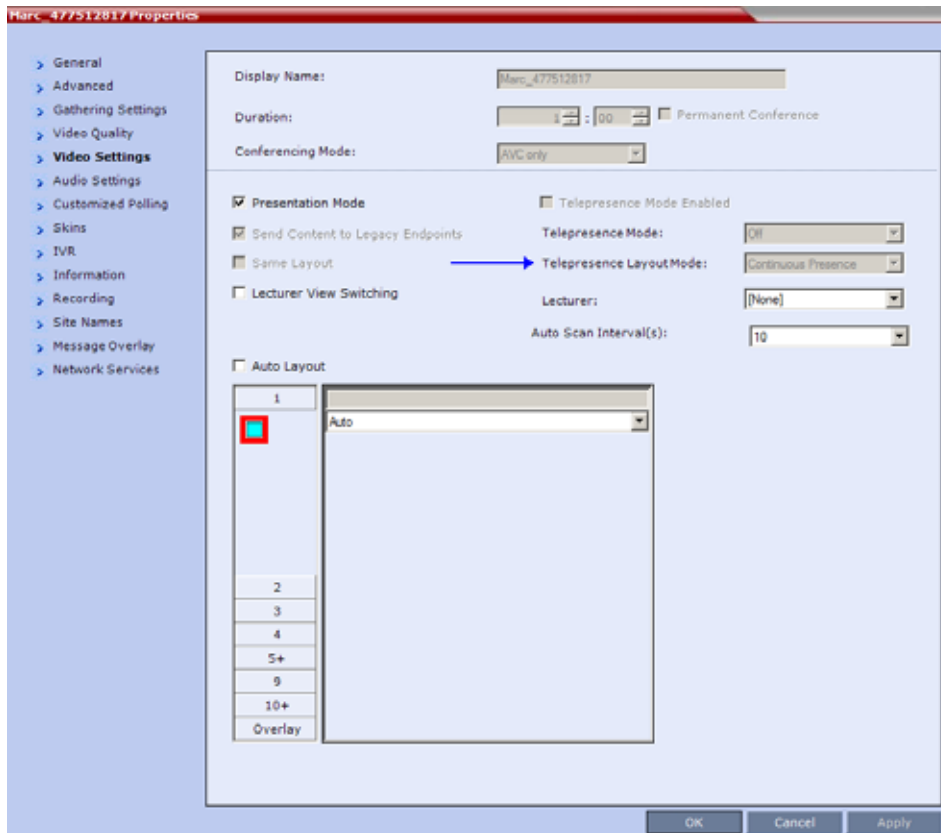

Note: Telepresence Mode License Requirement

The **Telepresence Mode Enabled**, **Telepresence Mode** and **Telepresence Layout Mode** fields are only enabled if the Collaboration Server has a **Telepresence** license installed.

If Telepresence Mode is enabled, a check mark is displayed in the check box. This option is grayed as this is a status indicator and cannot be used to enable or disable Telepresence Mode.

Monitoring Participant Properties

An additional status indicator, Telepresence, is displayed in the Participant Properties - Advanced tab when monitoring conference participants.



The Telepresence mode of the participant is indicated:

- **RPX** - the participant's endpoint is transmitting 4:3 video format.
- **OTX** - the participant's endpoint is transmitting 16:9 video format.
- **None**.

Creating Multiple Cascade Links Between Telepresence Conferences

You can create multiple Cascading links between Collaboration Servers hosting conferences that include Immersive Telepresence Rooms (ITP) such as Polycom's OTX and RPX Room Systems.

Guidelines for Creating Multiple Cascading Links between Conferences

- Basic Cascading topology is used. For more information see [Basic Cascading Using IP Cascaded Link](#).
- Multiple Cascade Links between conferences are implemented by creating a Link Participant which consists of a main link and sub-links which are automatically generated and sequentially numbered. For more information see [Creating a Link Participant](#), [Creating a Link Participant](#).
- All cascaded links must use H.323 protocol.
- Multiple Cascade Links are supported in CP conferencing mode.
- The number of cascading links is defined manually according to the maximum number of Room System cameras in the cascaded conference.
- When the active speaker is in an Immersive Telepresence Room, Multiple Cascade Links are used, one link for each of the Room System's cameras.
 - An RPX 4xx Room System requires 4 Cascaded Links to carry the video of its 4 cameras.
 - An RPX 2xx Room System requires 2 Cascaded Links to carry the video of its 2 cameras.
 - An OTX 3xx Room System requires 3 Cascaded Links to carry the video of its 3 cameras. The OTX Room System must be configured as Room Switch in order to send multiple streams. When configured in CP Mode, its cameras zoom out and all 3 screens are sent as one stream.
- The number of links is defined when creating the Link Participant. Each conference in the cascade must have a Link Participant with the same number of Multiple Cascade Links defined. Calls from Link Participants not defined with the same number of links are rejected. Number of cascading links is not identical for all conferences is listed as the Call Disconnection Cause. For more information see [Creating a Link Participant](#) and [Monitoring Multiple Cascade Links](#).
- Although it is possible to disconnect and reconnect specific Multiple Cascade Links using the RealPresence Collaboration Server Web Client / RealPresence Collaboration Server Manager it not advisable to do so.
 - If the main link is disconnected all sub-links are disconnected and deleted.
Reconnecting the main link reconnects all sub-links.
 - If a sub-link is disconnected it remains disconnected until it is manually reconnected.
 - The number of Multiple Cascade Links cannot be modified while any of the links are in a disconnected state. All previous links must be deleted before modification is possible.
For more information see [Monitoring Multiple Cascade Links](#).
- A Link Participant can be dragged from the address book into a conference.
 - If it is the first Link Participant in the conference, the number of Multiple Cascade Links defined for the participant are created and connected.
 - If it is not the first Link Participant in the conference, the number of Multiple Cascade Links defined for the participant is ignored.

- If there are insufficient resources to connect all Multiple Cascade Links in either of the RMXs, none of the links are connected and resources deficiency -0 is listed as the Call Disconnection Cause. For more information see [Monitoring Multiple Cascade Links](#).
- Multiple Cascade Links that are not used by MLA are inactive but continue to consume resources.
- All RMXs participating in the cascade must have the same Telepresence Mode definitions, either all defined as CP or all defined as Room Switch.
- When Multiple Cascade Links are defined in the Conference Profile, the Layout Type field of the Link Participant's Participant Properties - Media Sources dialog box is set to Conference and cannot be modified.
- TIP Telepresence Rooms (CTS) are supported without Content.
For more information see [Appendix I - Polycom Open Collaboration Network \(POCN\)](#).

Enabling and Using Multiple Cascade Links

The settings required to enable Multiple Cascade Links on the RMX are minimal and are described in [Creating a Link Participant](#).

Most of the layout configuration is performed using Polycom's Multipoint Layout Application (MLA).


The figures [RMX Telepresence Layout Mode - Room Switch](#) and [RMX Telepresence Layout Mode - Continuous Presence](#) show example layouts and media flows when MLA is configured for a cascading conference between two RMXs.

In the figure [RMX Telepresence Layout Mode - Room Switch](#):

- The OTX Room System connects to RMX A.
- The RPX Room System connects to RMX B.
- This layout requires the Telepresence Layout Mode to be set to **Room Switch** in the Conference Profiles of the Cascading Conferences in each RMX.
- The current speaker is a participant in the RPX ITP Room.

- Directional media flows, A ↔ B, are shown separately for readability purposes.


RMX Telepresence Layout Mode - Room Switch

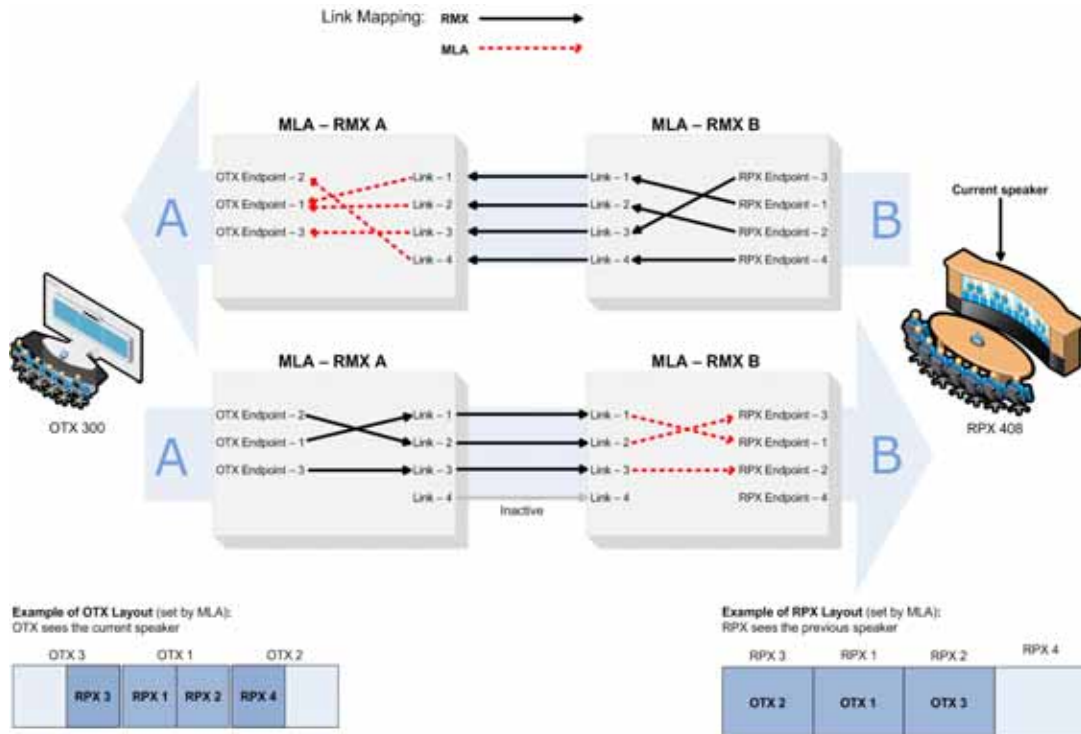

In the [RMX Telepresence Layout Mode - Continuous Presence](#) figure:

- An HDX endpoint and an OTX Room System connects to RMX A.
- An HDX endpoint and an RPX Room System connects to RMX B.
- This layout requires that the Telepresence Layout Mode to be set to Continuous Presence in the Conference Profiles of the Cascading Conferences in each RMX.
- The current speaker is the HDX endpoint connected to RMX A.

RMX Telepresence Layout Mode - Continuous Presence

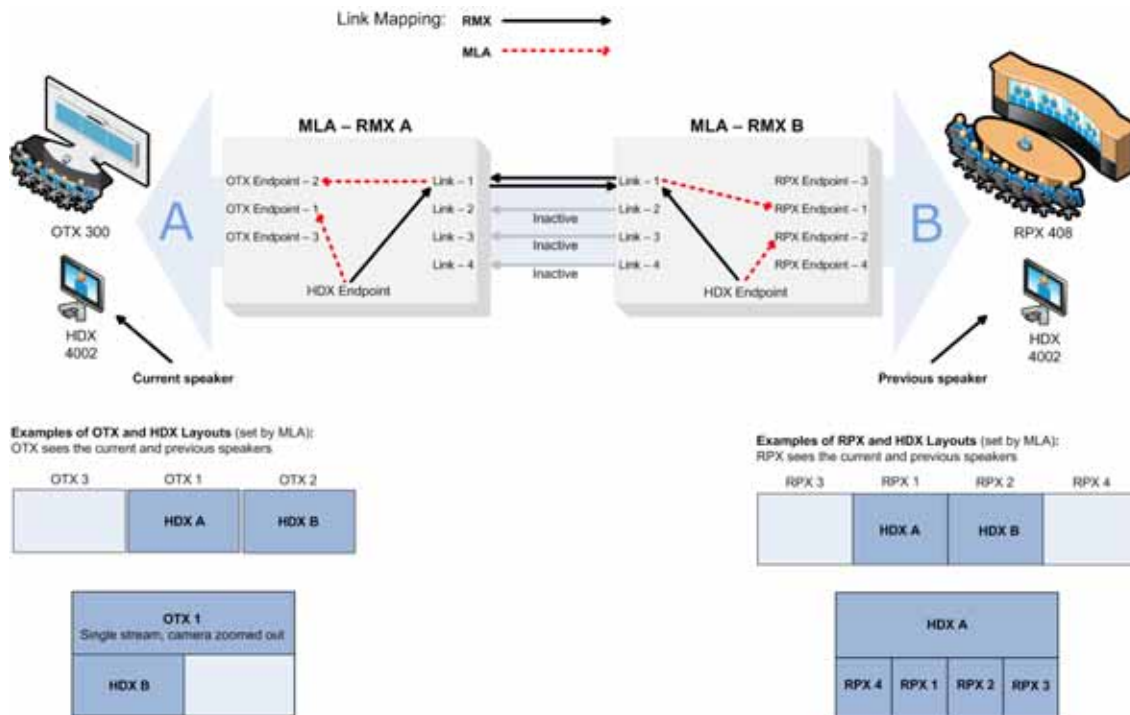

For more information see:

- [Setting Conferences for Telepresence Mode \(AVC CP\)](#).
- *Polycom® Multipoint Layout Application (MLA) User's Guide for Use with Polycom Telepresence Solutions.*
- *Polycom® Immersive Telepresence (ITP) Deployment Guide*

Creating a Link Participant

Link Participant in the Dial Out RMX

The Link Participant is defined in the New Participant dialog box.

To create a Link Participant in the dial-out RMX:

1 In the **General** tab:

The screenshot shows the 'New Participant' dialog box with the following fields and values:

- Name: CascadeLink
- Endpoint Website: (empty)
- Dialing Direction: Dial out
- Type: H.323
- IP Address: 0.0.0.0
- Alias Name / Type: 192.86.75.309 (H.323 ID selected)
- Website IP Address: 1115
- Audio Only:
- Extension/Identifier String: (empty)

- In the **Dialing Direction** drop-down menu, select **Dial out**.
- In the **Type** drop-down menu, select **H.323**.

For more information see the [Creating a Cascade Enabled Dial-out/Dial-in Participant Link](#).


2 In the **Advanced** tab:

(This field is only enabled if the RMX system is licensed for Telepresence Mode.)

- The Cascade dial-out participant must be defined as **Slave**. (The dial-in undefined participant should be defined as the **Master**.)
- In the **Number of cascaded links (for ITP)** drop-down menu, select the maximum number of **Multiple Cascade Links** required according to the number of Room System endpoints in the cascaded conference.

This field enables the administrator to select the maximum number of Multiple Cascade Links required according to the number of Room System endpoints in the cascaded conference.

For example if an RPX 4xx is included, the number of links required is 4.

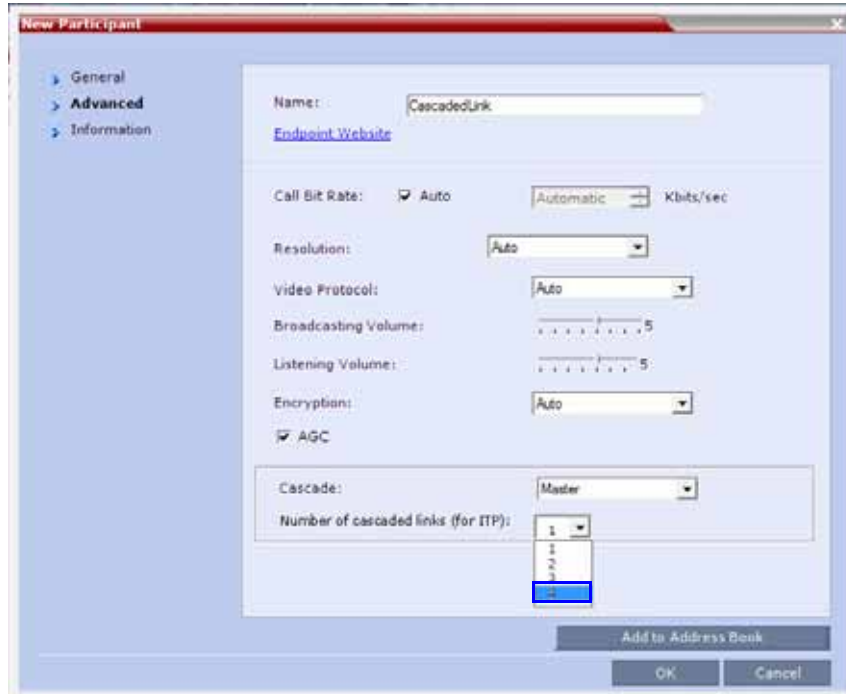

The RMX automatically adds a number suffix to the name of the **Link Participant**, for example if the **Participant Link Name** is **CascadeLink** and the **Number of cascaded links (for ITP)** field is set to **4**, the following **Multiple Cascade Links** are created:

- ◆ **CascadeLink-1**
- ◆ **CascadeLink-2**
- ◆ **CascadeLink-3**
- ◆ **CascadeLink-4**

Participant Link in the Dial In RMX

The call from Participant Link defined in the Dial-out RMX is identified by the Dial-in RMX as having been initiated by a Participant Link.

Suffixes are appended to the Multiple Cascade Links according to the **Number of cascaded links (for ITP)** field depending on whether the Dial -In Participant Link is defined or un-defined:

An Undefined Participant Link

The Multiple Cascade Link names are automatically assigned by the RMX.

For example on a RMX 2000 the names of the links are:

- POLYCOM RMX 2000-1
- POLYCOM RMX 2000-2
- POLYCOM RMX 2000-3, etc.

A Defined Participant Link


The Multiple Cascade Link names are assigned according to the name of the defined participant that is to function as the cascade link and the Number of cascaded links (for ITP) information sent by the calling Dial-Out Participant Link.

For example if the defined participant that is to function as the cascade link is named Cascade_Link_From_B the names of the links are:

- Cascade_Link_From_B-1
- Cascade_Link_From_B-2
- Cascade_Link_From_B-3, etc.

Monitoring Multiple Cascade Links


Multiple Cascade Links connections can be monitored in the Participants list of the RMX Web Client / RMX Manager main screen:

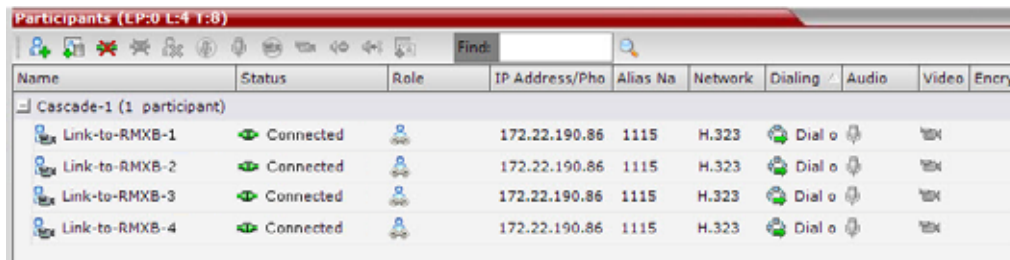

Name	Status	Role	IP Address/Pho	Alias Na	Network	Dialing	Audio	Video	Encry
Cascade-1 (1 participant)									
Link-to-RMXB-1	Connected		172.22.190.86	1115	H.323	Dial o			Encry
Link-to-RMXB-2	Connected		172.22.190.86	1115	H.323	Dial o			Encry
Link-to-RMXB-3	Connected		172.22.190.86	1115	H.323	Dial o			Encry
Link-to-RMXB-4	Connected		172.22.190.86	1115	H.323	Dial o			Encry


Disconnection Causes

- If there are insufficient resources to connect all the required links:
 - None of the links are connected.
 - The first link is listed as Disconnected in the Participants list of the RMX Web Client / RMX Manager main screen.

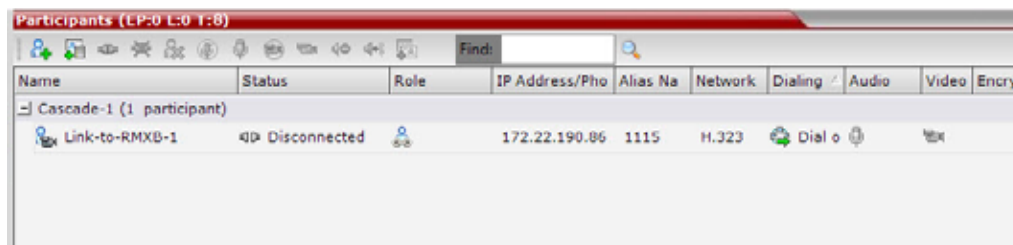

Name	Status	Role	IP Address/Pho	Alias Na	Network	Dialing	Audio	Video	Encry
Cascade-1 (1 participant)									
Link-to-RMXB-1	Disconnected		172.22.190.86	1115	H.323	Dial o			Encry

- Resource deficiency is listed as the Call Disconnection Cause in the Participant Properties - Connection Status dialog box.

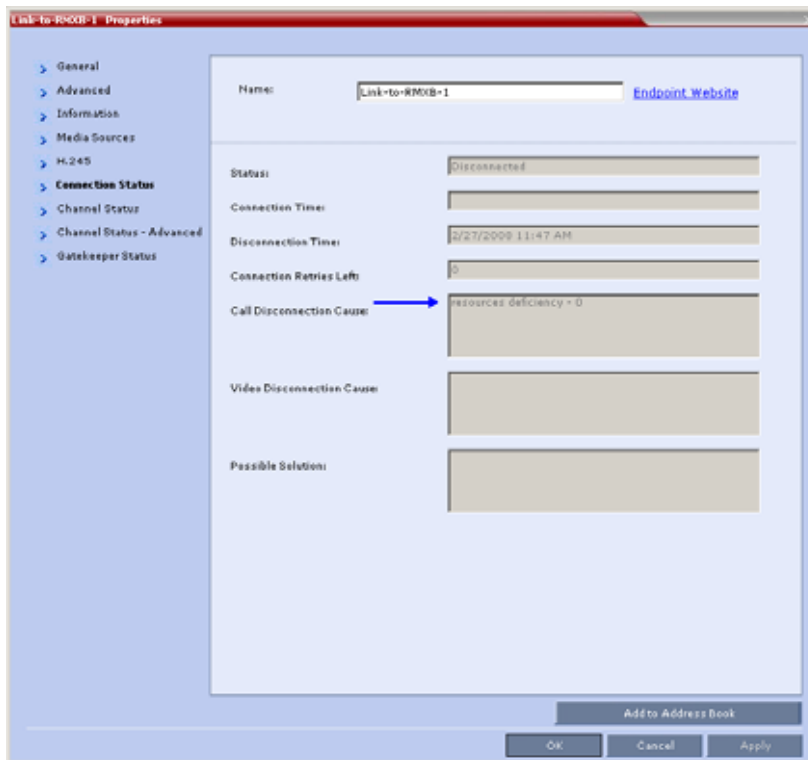

- If a calling Link Participant is not defined with same number of links as all the other Link Participants in the cascaded conferences:
 - The call is rejected.
 - The Call Disconnection Cause is: Number of cascading links is not identical for all conferences.

Additional Conferencing Information



Note: Virtual Platform Requirement

When using RealPresence Platform, the conferencing parameters should be defined in the RealPresence DMA system component and not directly in the RealPresence Collaboration Server (RMX) 1500/1800/2000/4000 component.

Various conferencing modes and video features require additional settings, such as system flag settings, conference parameters and other settings. In depth explanations of these additional settings are described in the following sections:

- [Video Preview](#)
- [Auto Scan and Customized Polling in Video Layout](#)
- [Packet Loss Compensation - LPR and DBA](#)
- [Layout Indications](#)
- [Lecture Mode](#)
- [Audio Algorithm Support](#)
- [Automatic Muting of Noisy Endpoints](#)
- [Permanent Conference](#)
- [Closed Captions](#)

Video Preview



Note: Feature Applicability

Video Preview is applicable for AVC endpoints only.

Collaboration Server users can preview the video sent from the participant to the conference (MCU) and the video sent from the conference to the participant. It enables the Collaboration Server users to monitor the quality of the video sent and received by the participant and identify possible quality degradation.

The video preview is displayed in a separate window independent to the Collaboration Server Web Client. All Web Client functionality is enabled and conference and participant monitoring as well as all other user actions can be performed while the video preview window is open and active. Live video is shown in the preview window as long as the window is open. The preview window closes automatically when the conference ends or when participant disconnects from the conference. It can also be closed manually by the Collaboration Server user.

Video Preview Guidelines

- Video Preview is supported in CP Conferencing Mode only.
- Video preview is available for AVC participants. It is not available for SVC participants.

- Video preview window size and resolution are adjusted to the resolution of the PC that displays the preview.
- Video Preview of the video sent from the conference to the participant is shown according to the line rate and video parameters of the level threshold to which the participant is connected.
- All users can view a video preview.
- Only one preview window can be displayed for each Collaboration Server Web Client connection (workstation).
- Only one preview window can be displayed for a single conference and up to four preview windows can be displayed for each media card on different workstations (one per workstation and one per conference). For example, if the Collaboration Server contains two media cards, and there are 5 conferences running on the Collaboration Server, if five conferences are running on the same media card, only four conferences can be previewed from four different workstations. If four or less conferences are running on one media card and the remaining conferences are running on the other media card, all five conferences can be previewed.
- Live video that is shown in the preview window does not include the Content when it is sent by the participant.
- Video Preview is supported in cascaded conferences.
- If the video preview window is opened when the IVR slide is displayed to the participant, it will also be displayed in the video preview window.
- Video Preview is supported with H.264 High Profile.
- Video Preview is not supported for endpoints using the RTV protocol.
- Video Preview is disabled in encrypted conferences.
- Video preview cannot be displayed when the participant's video is suspended.
- Participant's video preview and the Polycom Desktop application (such as CMAD) window cannot be open and running simultaneously on the same PC as both require the same DirectDraw resource.

Workstation Requirements to Display Video Preview


To be able to display the video preview window, the following minimum requirements must be met:

- Windows XP, Windows Vista and Windows 7
- Internet Explorer 7 and later
- DirectX is installed
- DirectDraw Acceleration must be enabled and no other application is using the video resource
- Hardware acceleration must be enabled

Testing your Workstation

To ensure that your workstation can display the video preview window:


- 1 In Windows, click **Start > Run**.
The **Run** dialog box opens.
- 2 In the **Open** field, type **dxdiag**, and press **Enter** or click **OK**.

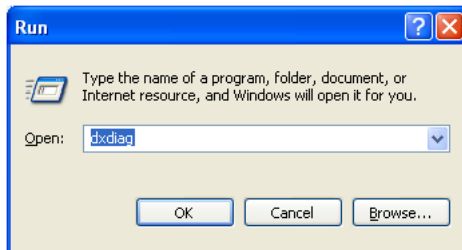

A confirmation message is displayed.

- 3 Click **Yes** to run the diagnostics.
The **DirectX Diagnostic Tool** dialog box opens.
- 4 Click the **Display** tab.

To be able to display the video preview window, the **DirectDraw Acceleration** and **Direct3D Acceleration** options must be **Enabled**.

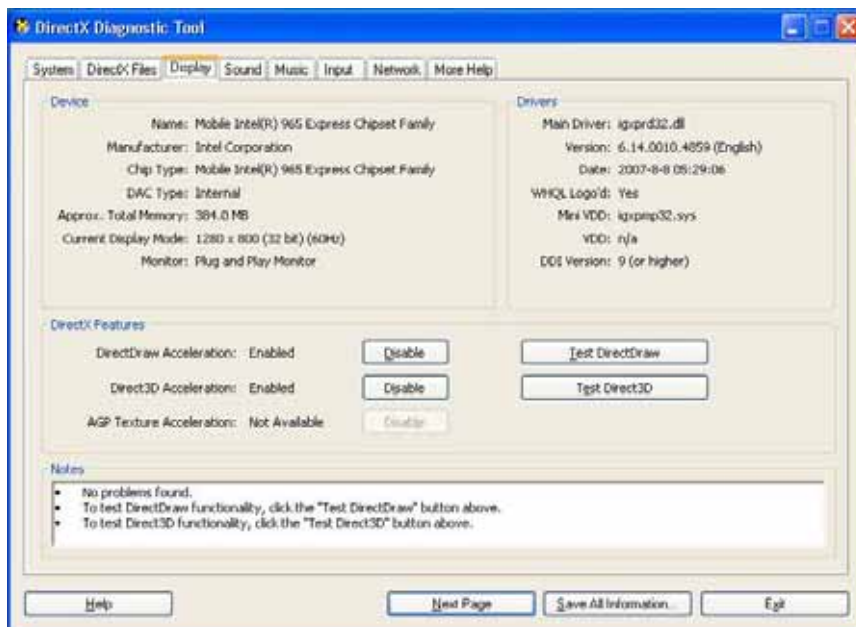

If the video card installed in the PC does not support DirectDraw Acceleration, a black window may be viewed in the Video Preview window.


- 5 Click the **Exit** button.

Previewing the Participant Video

You can preview the video sent from the participant to the conference (MCU) and the video sent from the conference to the participant by selecting the appropriate option from the Participant's pop-up menu.

To preview the participant video:

- 1 List the conference participants in the **Participants** pane.
- 2 Right-click the participant whose video you want to preview, and select one of the following options:

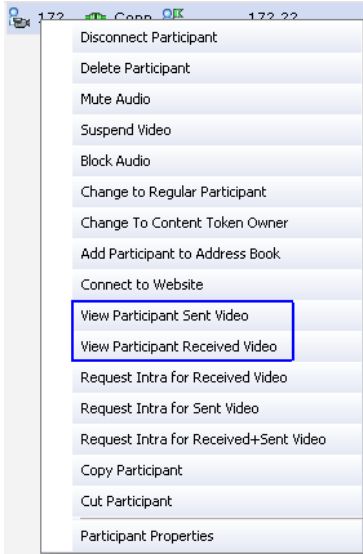

- **View Participant Sent Video** - To display the video sent from the participant to the conference.
- **View Participant Received Video** - To display the video sent from the conference to the participant.

The **Video Preview** window opens.



If the video card installed in the PC does not support DirectDraw Acceleration, a black window may be viewed.

Auto Scan and Customized Polling in Video Layout

**Note: Feature Applicability**

Auto scan and customized polling in video layout is applicable for AVC CP conferences only.

Auto Scan enables you to define a single cell in the conference layout to cycle the display of participants that are not in the conference layout.

Customized Polling allows the cyclic display to be set to a predefined order for a predefined time period. The cyclic display only occurs when the number of participants is larger than the number of cells in the layout.

Guidelines for Using Auto Scan and Customized Polling

- Auto Scan and Customized Polling are supported in AVC CP conferences only.
- Participants that are in the conference layout will not appear in the Auto Scan enabled cell.
- If Customized Polling is not used to define the order of the Auto Scan it will proceed according to order in which the participants connected to the conference.
- If the user changes the conference layout, the Auto Scan settings are not exported to the new layout. If the user changes the conference layout back to the layout in which Auto Scan was enabled, Auto Scan with the previous settings will be resumed.

Enabling the Auto Scan and Customized Polling

Auto Scan and Customized Polling are enabled during the ongoing conference, in the Conference Properties - Video Settings dialog box.


Enabling the Auto Scan

You enable the Auto Scan feature by selecting it in the Video Layout cell.

To enable Auto Scan:

- 1 In the Collaboration Server Web Client Main Screen - Conference list pane, double-click the conference or right-click the conference and then click **Conference Properties**.

- 2 In the **Conference Properties - General** dialog box, click **Video Settings**.
The **Video Settings** dialog box is displayed.

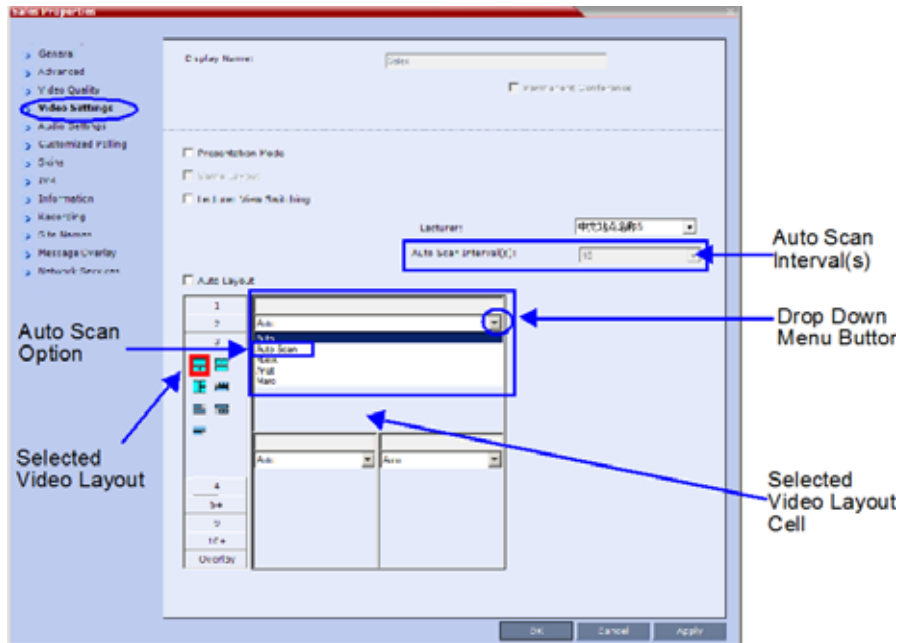


- 3 If **Auto Layout** check box is selected, clear it.
- 4 In the video layout cell to be designated for Auto Scan, select from the drop-down menu **Auto Scan**.
- 5 Select from the **Auto Scan Interval(s)** list the scanning interval in seconds.
- 6 Click the **Apply** button to confirm and keep the dialog box open, or Click **OK**.

Customized Polling

The order in which the Auto Scanned participants are displayed in the Auto Scan enabled cell of the video layout can be customized.

To define the scanning order in the Customized Polling tab:

- 1 Open the **Conference Properties** dialog box.
- 2 Click the **Customized Polling** tab.
The Customized Polling dialog box is displayed.

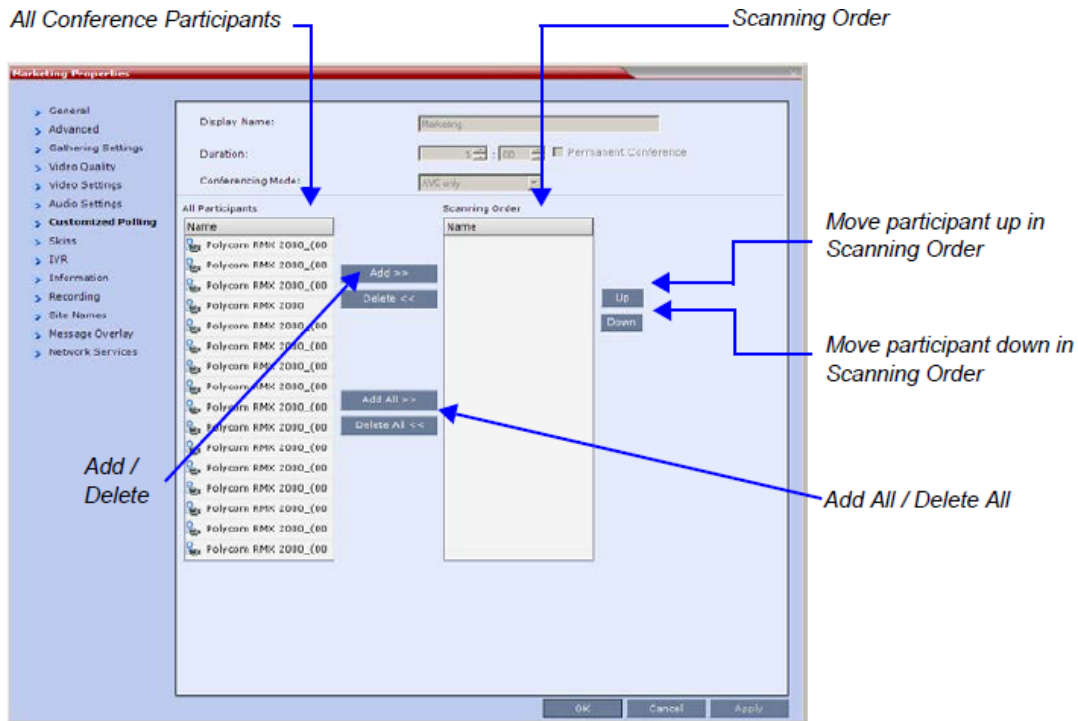

All conference participants are listed in the left pane (**All Participants**) whereas the participants to be displayed in the Auto Scan enabled cell are listed in the right pane (**Scanning Order**).

The dialog box buttons are summarized in the following table:

Customized Polling Dialog Box Command Buttons

Button	Description
Add	Select a participant and click this button to add the participant to the list of participants to be Auto Scanned. The participants name is removed from the All Participants pane.
Delete	Select a participant and click this button to delete the participant from the list of participants to be Auto Scanned. The participants name is moved back to the All Participants pane.
Add All	Add all participants to the list of participants to be Auto Scanned. All participants' names are removed from the All Participants pane.
Delete All	Delete all participants from the list of participants to be Auto Scanned. All participants' names are moved back to the All Participants pane.
Up	Select a participant and click this button to move the participant up in the Scanning Order.
Down	Select a participant and click this button to move the participant down in the Scanning Order.

3 Click the **Apply** button to confirm and keep the dialog box open, or click **OK**.

Packet Loss Compensation - LPR and DBA



Note: Feature Applicability

LPR and DBA are applicable for AVC conferencing only.

Lost Packet Recovery (LPR) and Dynamic Bandwidth Allocation (DBA) help minimize media quality degradation that can result from packet loss in the network. Packet loss Compensation is available in AVC CP Conferencing Mode only and is not supported in SVC Conferencing Mode or CP and SVC Conferencing Mode.

Packet Loss

Packet Loss refers to the failure of data packets, transmitted over an IP network, to arrive at their destination. Packet Loss is described as a percentage of the total packets transmitted.

Causes of Packet Loss

Network congestion within a LAN or WAN, faulty or incorrectly configured network equipment or faulty cabling are among the many causes of Packet Loss.

Effects of Packet Loss on Conferences

Packet Loss affects the quality of:

- Video – frozen images, decreased frame rate, flickering, tiling, distortion, smearing, loss of lip sync
- Audio – drop-outs, chirping, audio distortion
- Content – frozen images, blurring, distortion, slow screen refresh rate

Lost Packet Recovery

The Lost Packet Recovery (LPR) algorithm uses Forward Error Correction (FEC) to create additional packets that contain recovery information. These additional packets are used to reconstruct packets that are lost, for whatever reason, during transmission. Dynamic Bandwidth Allocation (DBA) is used to allocate the bandwidth needed to transmit the additional packets.

Lost Packet Recovery Guidelines

- If packet loss is detected in the packet transmissions of either the video or Content streams:
 - LPR is applied to both the video and Content streams.
 - DBA allocates bandwidth from the video stream for the insertion of additional packets containing recovery information.

- Due to the LPR increasing the required bandwidth, content rate might be reduced (to no less than 64K) to preserve it.

When this reduction is insufficient, either the video rate or the LPR strength are reduced as well, depending on the value of the system flag `LPR_CONTENT_RATE_ADJUST_WEAK_LPR`. For more information on that flag see [LPR_CONTENT_RATE_ADJUST_WEAK_LPR](#).

- LPR is supported in H.323 and SIP networking environments only.

- In LPR-enabled Continuous Presence conferences:
 - Both LPR-enabled and non-LPR-enabled endpoints are supported.
 - The LPR process is not applied to packet transmissions from non-LPR-enabled IP (H.323 and SIP) and ISDN endpoints.
 - Non-LPR-enabled endpoints can be moved to LPR-enabled conferences.
 - LPR-enabled endpoints cannot be moved to non-LPR-enabled conferences.
- In LPR-enabled Video Switched conferences:
 - H.323 and SIP endpoints are supported.
 - When cascading between conferences running on Collaboration Server and MGC (Polycom legacy MCU), LPR is not supported over the link between the two conferences.
 - Non-H.323 participants cannot be created, added or moved to LPR-enabled Video Switched conferences.
- When connecting via an Entry Queue:
 - A participant using an LPR-enabled endpoint can be moved to a non-LPR-enabled conference. The participant is connected with LPR enabled.
 - SIP and ISDN/PSTN participants cannot be moved to LPR-enabled Video Switched conferences.

Enabling Lost Packet Recovery


LPR is enabled or disabled in the **Conference** Profile dialog box.

- CP Conferences – LPR is enabled by default in the New Profile – Advanced dialog box.
- VSW Conferences – If Video Switching is selected, the LPR check box is automatically cleared and LPR is disabled. LPR can be enabled for VSW conferences but H.320 and SIP participants will not be able to connect.


For more information, see [Defining New Profiles](#).

Monitoring Lost Packet Recovery

In the **Participant Properties – H.245** tab, LPR activity is displayed in all three panes.

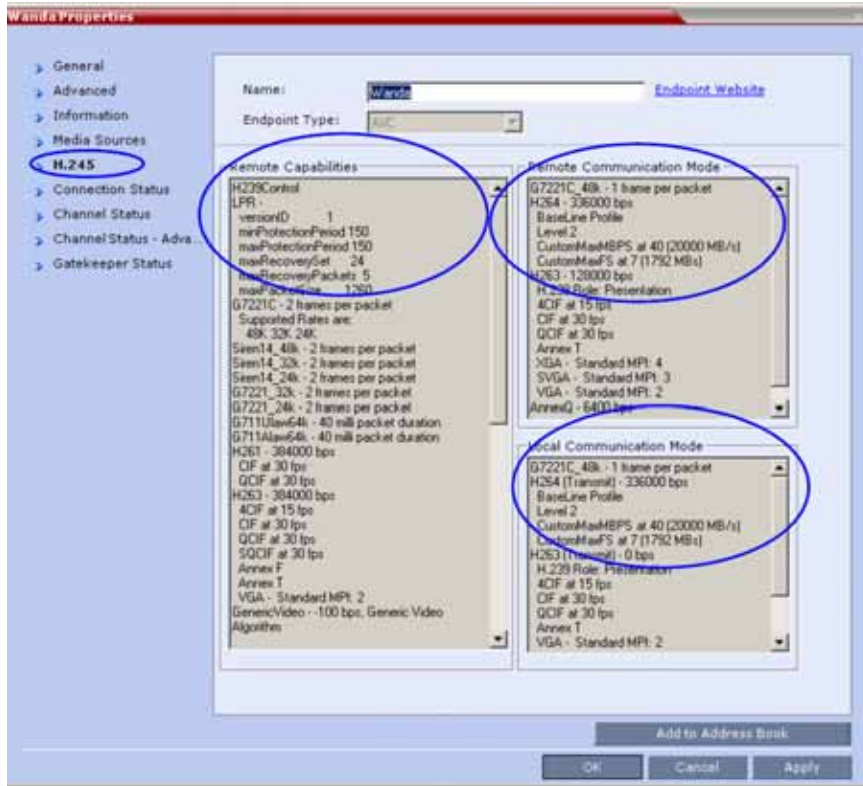

In the **Participant Properties – Channel Status** tab, check box indicators show LPR activation in the local and remote (transmit and receive) channels.

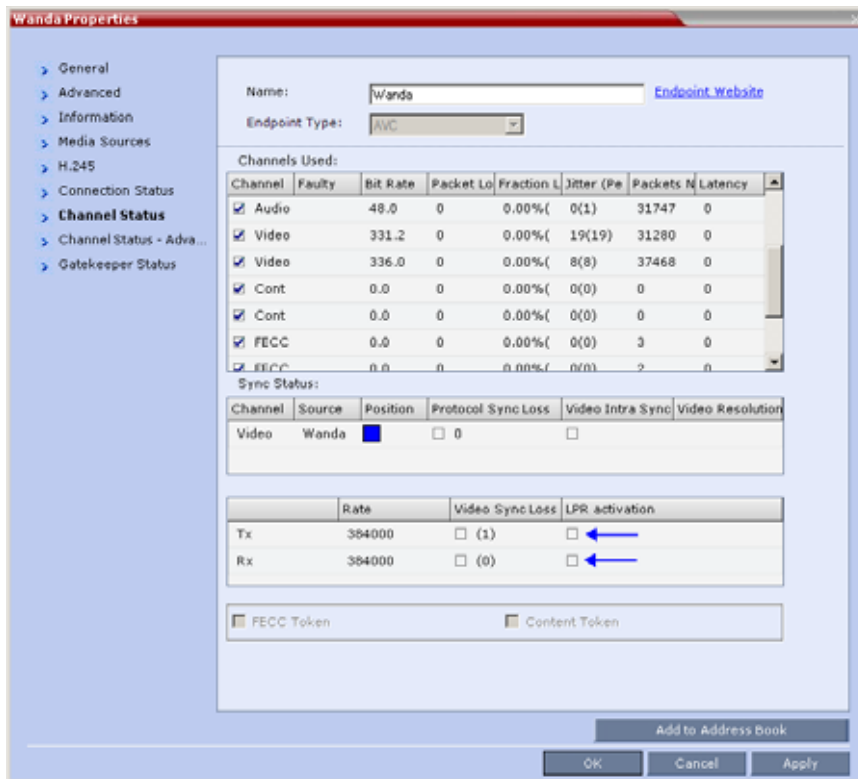

Layout Indications




Note: Layout Indications Applicability

- Layout Indications are applicable to AVC endpoints only.
- Layout Indications are not supported on Collaboration Server 1800, Entry Level.

Network Quality Indication

If network quality issues occur, the Network Quality icon provide information to participants about their own network quality and that of other participants displayed in the cells of the conference Video Layout.

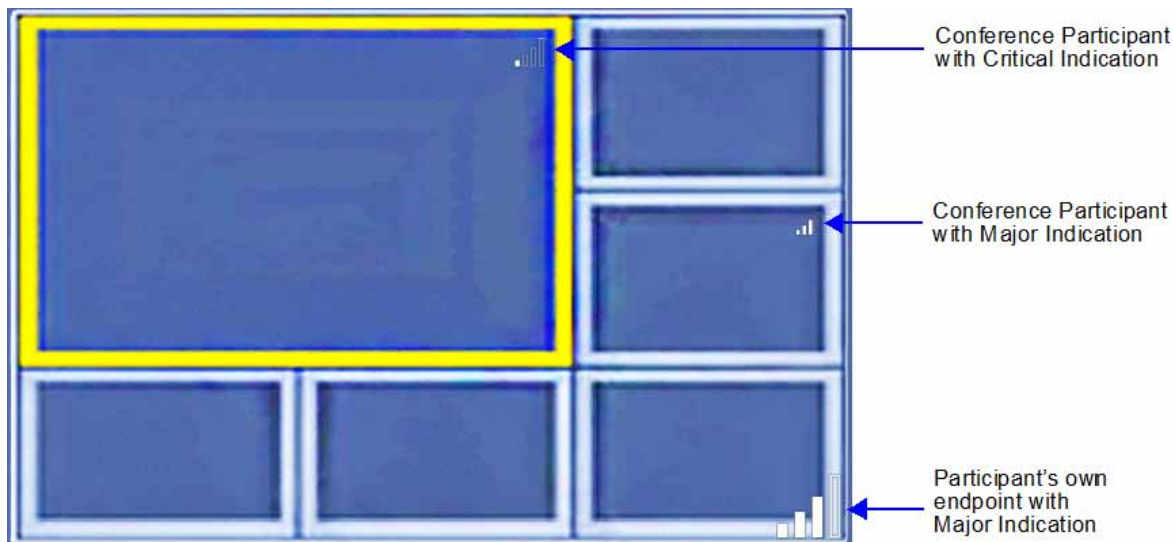


Network Quality Levels

Network quality is determined by the percentage of packet loss according to the following default threshold values:

- Packet loss less than 1% is considered Normal
- Packet loss in the range of 1% - 5% is considered Major
- Packet loss above 5% is considered Critical.

Major and Critical states are indicated by the following icons:

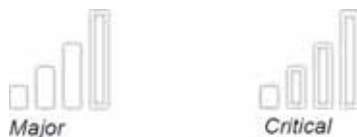

When network quality improves from Critical to Major remaining stable for 5 seconds, the Network Quality Indicator is changed accordingly and when network quality improves from Major to Normal, remaining stable for 5 seconds, the Network Quality Indicator is no longer displayed.

Indication Threshold Values

The default Major and Critical indication threshold values can be modified by manually adding the following System Flags and modifying their values as required.

Network Quality Icon - Indication Threshold Flags

Flag	Description
NETWORK_IND_MAJOR_PERCENTAGE	The percentage degradation due to packet loss required to change the indicator from Normal to Major. Default: 1
NETWORK_IND_CRITICAL_PERCENTAGE	The percentage degradation due to packet loss required to change the indicator from Major to Critical. Default: 5

For more information see .

Displaying the Network Quality icons

Network Quality icons are not supported in SVC Conferencing Mode and AVC - Video switched conferences.

Network Quality icons are displayed for:

- The video channel only in AVC Conferencing Mode.
Content, audio and FECC channel quality issues are not indicated.
- The participant's own endpoint:
 - Network Quality icons are displayed by default and can be disabled
 - For media transmitted to and received from the Collaboration Server (Video in / Video out).
- Participants displayed in the cells of the conference video layout:
 - Network Quality icons are not displayed by default and can be enabled
 - The media transmitted from the endpoint to the Collaboration Server (Video in).

Customizing the Network Quality Icon Display

Display of the Network Quality icon can be customized for the participant's own endpoint or for the Participants displayed in the cells of the conference Video Layout.

The display of Network Quality icon (showing or hiding the icon) and the position of the icon in the video layout cell can be customized by manually adding the following System Flags and modifying their values as required.

Network Quality Icon - Display Customization Flags

Flag	Description
DISABLE_SELF_NETWORK_IND	<p>Disable the display of the Network Quality icon of the participant's own endpoint.</p> <p>Default: NO</p> <p>Range: YES / NO</p> <p>NOTE: This flag's function has been replaced by the Network Quality check box in the Layout Indications tab of the New Profile / Profile Properties dialog.</p> <p>For more information see New AVC CP Profile - Layout Indications Parameters.</p>
DISABLE_CELLS_NETWORK_IND	<p>Disable the display of Network Quality icons displayed in the cells of the conference Video Layout.</p> <p>Default: YES</p> <p>Range: YES / NO</p>
SELF_IND_LOCATION	<p>Change the location of the display of the Network Quality icon of the participant's own endpoint.</p> <p>Default: BOTTOM_RIGHT</p> <p>Range:</p> <ul style="list-style-type: none"> • TOP_LEFT • TOP • TOP_RIGHT • BOTTOM_LEFT • BOTTOM • BOTTOM_RIGHT <p>NOTE: This flag's function has been replaced by the Network Quality check box in the Layout Indications tab of the New Profile or Profile Properties dialog.</p> <p>For more information see New AVC CP Profile - Layout Indications Parameters.</p>
CELL_IND_LOCATION	<p>Change the location of the display of Network Quality icon displayed in the cells of the conference Video Layout.</p> <p>Default: TOP_RIGHT</p> <p>Range:</p> <ul style="list-style-type: none"> • BOTTOM_LEFT • BOTTOM_RIGHT • TOP_LEFT • TOP_RIGHT

For more information see the .

Recording Indications

When **Display Recording Icon** is selected in either the **Recording** or **Layout Indications** tab of the **New Profile** or **Profile Properties** dialog, the recording status is indicated by the following icons:



Recording

For more information, see [Recording and Streaming Conferences](#) and [New AVC CP Profile - Layout Indications Parameters](#).



Recording Paused

For more information, see [Recording and Streaming Conferences](#) and [New AVC CP Profile - Layout Indications Parameters](#).



Note: Recording Indication Duplication

The Recording Indication icon is a duplicate of the Display Recording icon of the Recording tab of the Profile dialog. For more information, see [Recording and Streaming Conferences](#) and [New AVC CP Profile - Layout Indications Parameters](#).

Audio and Video Participants Indication

During an ongoing conference, Audio Participants Indication icon provides an indication to all participants that audio-only endpoints and secondary video devices are connected to the conference.




Similarly, video participant(s) presence is indicated by a Video Participant Indication icon, which is useful when not all the connected participants can be displayed over the used layout. The icon indicating video participant presence is:



The Audio/Video Participant indication icon is displayed in the conference video screen along with the an adjacent number (to the right) of the connected endpoints of this type. Up to 99 participants of each type can be indicated; when more than 99 participants are in the conference, the number is indicated as 99+.

These icons are displayed as part of a group that includes a network quality indication and a recording indication displayed when recording is active. The icon group is displayed for AVC endpoints only.

In the example below, all indication types are selected, and indicate 10 audio and 14 video participants.

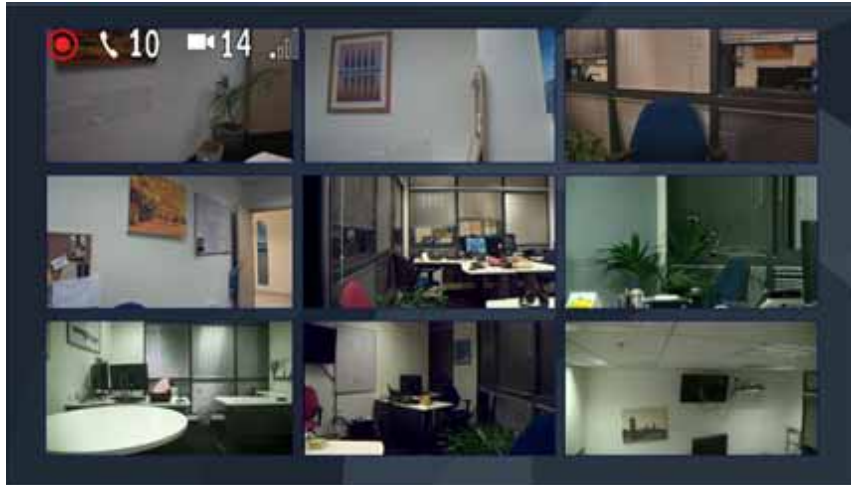

In addition this figure demonstrates the order of the Layout Indications, which are ordered from the outside, towards the inside as follows:

- Recording indication
- Audio participant indication
- Video participant indication
- Network quality indication

Setting Layout Indication via User Interface

- Audio/video participants indication appearance, is dependent on selecting the appropriate check-boxes in the **Conference Profile Properties > Layout Indications** tab.




Backwards Compatibility

Conferences launched using Profiles that were defined in versions that do not include the Layout Indications tab will behave as if all the parameters in the tab are unchecked.

- Indications may appear permanently, or for a short duration upon an endpoint joining or disconnecting the conference, for the specified duration, all depending on the Collaboration Server user configuration in that tab.

Note that when the audio participant indication is set to display permanently, it is displayed only if audio participants are connected to the conference.

- The position of the icon can be customized, as shown in the figure below:

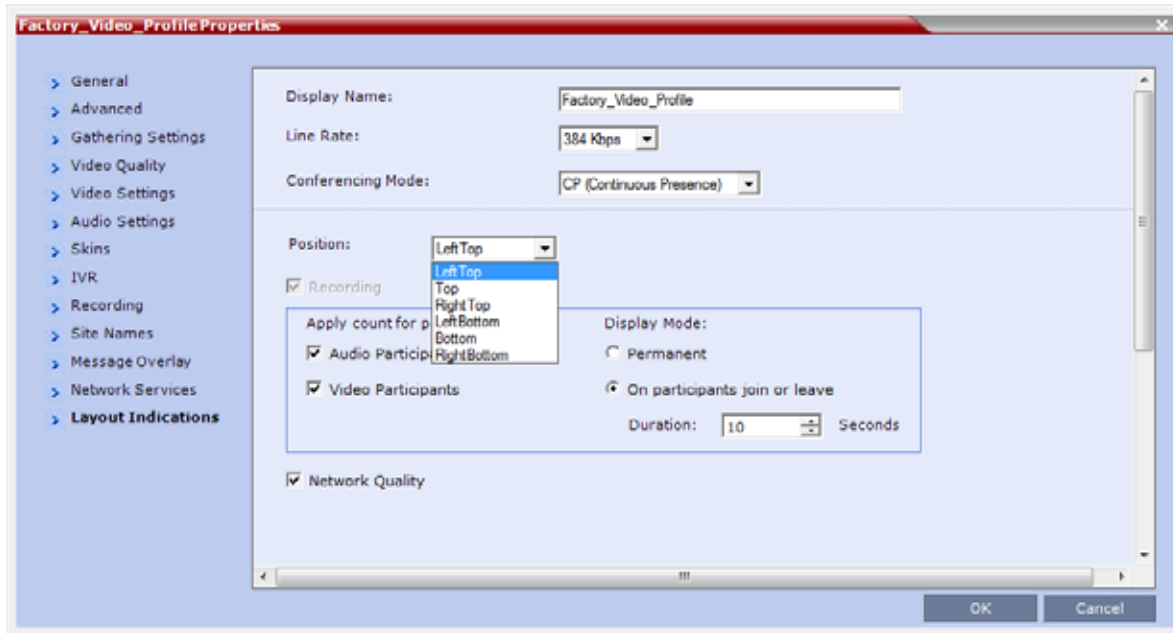


Layout Indications Icon Display Positions

Following are examples of the Indication Icons display positions (97 audio participants are connected to the conference).


Top-center (default) with all indication icons enabled, except video




Top-left, with all indication icons enabled, except video

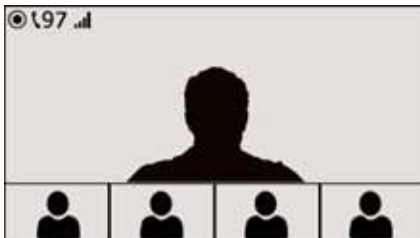


Top-left, with all indication icons enabled, except video, recording enabled but not active

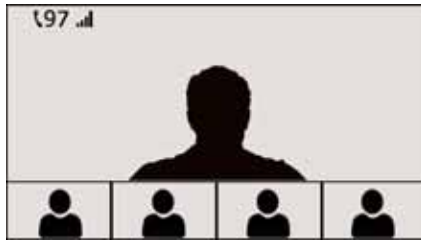

Top-left, audio participants, network quality enabled, recording not enabled

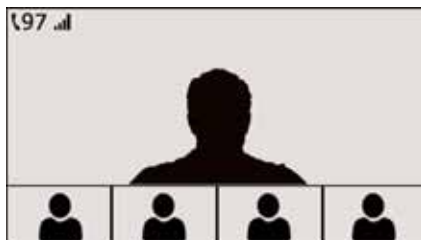

Top-right with all indication icons enabled, except video, recording active

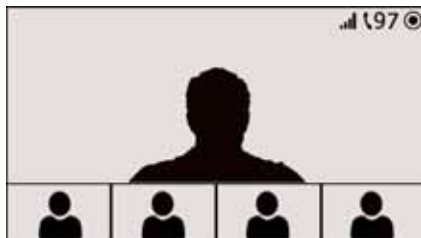

Layout Indications Guidelines

- Layout indications appear only on the video display of AVC endpoints, and are applicable for AVC CP Only (Continuous Presence) and Mixed CP and AVC conferencing modes.
- Lync users can view layout indications provided the video sent to the Lync endpoint is transcoded. However, layout indications are not embedded in the link towards the AV MCU, to preserve the Lync user experience.
- When indications are set to appear upon a change in connected participants, all selected indications appear together, even when the change occurred only in one type of participants.
However, when the change occurs in participants whose type is unselected, and the indication display is not permanent, no indications appear.
- Layout indications are displayed only in endpoints with resolutions of CIF and up.
- Layout indications are not displayed during the gathering phase.

- Remote participants (that is, connected to a cascaded conference) are not included in the count, as well as the cascading link itself. Layout indications are displayed within each Collaboration Server participants independently, thus no layout indications are embedded in the video sent towards the cascading link.

In that context, Lync endpoints connected via the AV MCU are included in the count, although other video participants connected to the AV MCU conference are not included.

- The **Layout Indications** tab is hidden in SVC, VSW, and TIP-enabled conferences.
- Layout indications can be set only in conference profiles, and not for ongoing conferences.
- The same indication display duration is applicable for all indications.
- For TelePresence endpoints:
 - The layout indications appear only on the main screen.
 - Only non-TIP endpoints can view the layout indications.
 - TelePresence rooms with three screens are considered as a single endpoint in the video endpoints count.
- Upgrade of endpoints from audio to video, or downgrade from video to audio, is reflected in the layout indications count.
- PSTN/H.323 audio participants calling the Collaboration Server Gateway profile, and dialing-out a VMR on the DMA via SIP/H.323, are counted as either an audio or a video endpoint, regardless of the Collaboration Server they are connected to.
- AVC endpoints connected to a Polycom® RealPresence® WebSuite™ client, can view layout indications, depending on the conference profile configuration.

1x1 Layout Scenario Adaptation

To display indications according to the local endpoint's capability (4CIF and up), Collaboration Servers (2000/4000) should disable the system's 1x1 layout functionality that includes sending the current speaker's resolution.

For example, in a conference between two video endpoints the layout is 1x1 by default. If the resolution of one of the endpoints is lower than 4CIF and the other higher than 4CIF, RealPresence Collaboration Servers 2000/4000 will follow the speaker and not transmit the Indication Icons when the lower resolution endpoint is the active speaker. (RealPresence Collaboration Servers 1800 never follow the speaker.) As a result, the endpoint capable of higher resolution will not receive the Indication Icons.

For further details on how to determine the layout indications position, see [New AVC CP Profile - Layout Indications Parameters](#).

This behavior can be modified by manually adding the `HW_FOLLOW_SPEAKER_RESOLUTION_ON_1X1_LAYOUT` flag to the System Configuration and modifying its value.

For more information, see [HW_FOLLOW_SPEAKER_RESOLUTION_ON_1X1_LAYOUT](#).

Lecture Mode

Lecture Mode enables all participants to view the lecturer in full screen while the conference lecturer sees all the other conference participants in the selected layout while he/she is speaking. When the number of sites/endpoints exceeds the number of video windows in the layout, switching between participants occurs

every 15 seconds. Conference participants cannot change their Personal Layouts while Lecture Mode is enabled.

Automatic switching is suspended when one of the participants begins talking, and it is resumed automatically when the lecturer resumes talking.



Note: Feature applicability

Lecture mode is applicable for AVC CP conferencing only.

Enabling Lecture Mode

Lecture Mode is enabled at the conference level by selecting the lecturer. Conference participants cannot change their Personal Layouts while Lecture Mode is enabled.

Automatic switching between participants viewed on the lecturer's screen is enabled in the conference Profile.

Selecting the Conference Lecturer

Selecting a lecturer for the ongoing conference, enables the Lecture Mode. You can select the lecturer:

- during the definition of the ongoing conference
- after the conference has started and the participants have connected to the conference.

To select the lecturer and enable the Lecture Mode while starting the conference:

- » In the **Conference Properties - Participant** dialog box, enable the Lecture Mode using one of the following methods:


To automatically select a defined participant:

- 1 Add participants to the conference either from the Address book or by defining new participants.
- 2 In the **Lecturer** field, select the lecturer from the list of the defined participants.

To automatically select the lecturer:


- » In the **Lecturer** field, select **[Auto]**.

In this mode, the conference speaker becomes the lecturer.

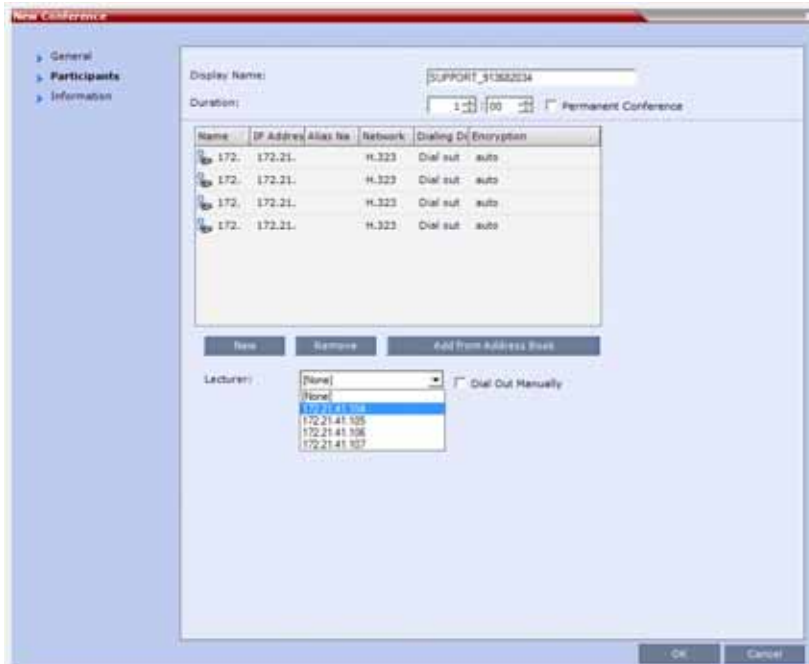**To select the lecturer and enable the Lecture Mode during the ongoing conference:**

- 1 Make sure that the participant you want to designate as the lecturer has connected to the conference.

- 2 In the **Conference Properties - Video Settings** dialog box, in the **Lecturer** field, select the lecturer from the list of the connected participants.

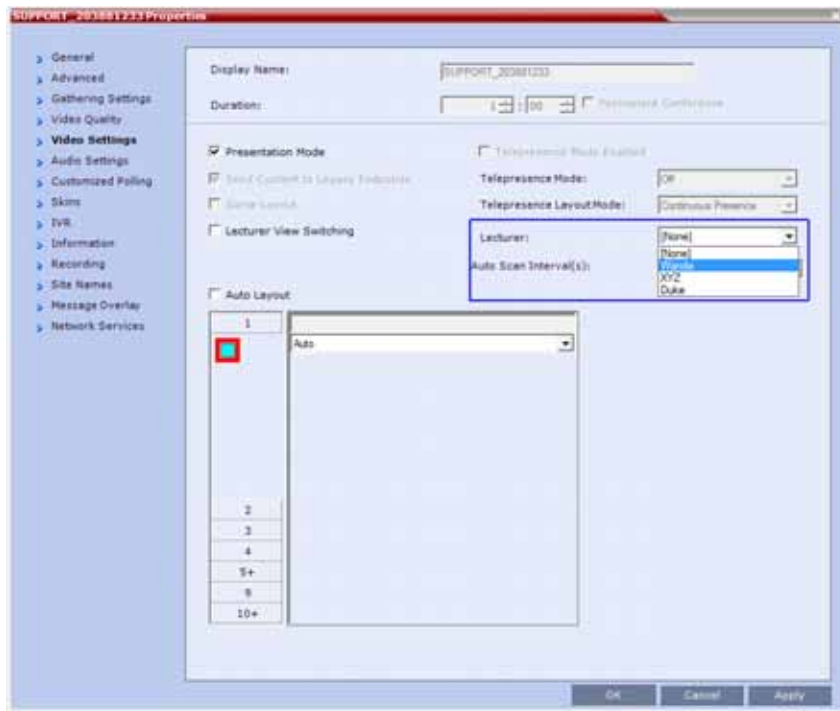


Note: Dial-in/out Participants

Defined dial out and dial in participants are considered to be two separate participants even if they have the same IP address/number. Therefore, if a defined dial-out participant is added to the conference and the same participant then dials in (before the system dialed out to that participant) the system creates a second participant in the Participants list and tries to call the dial-out participant. If the dial-out participant was designated as the conference lecturer, the system will not be able to replace that participant with the dial-in participant that is connected to the conference.

Enabling the Automatic Switching

Automatic switching between participants viewed on the lecturer's screen is enabled in the conference Profile, or during the ongoing conference, in the Conference Properties.

- In the **Profile Properties - Video Settings** tab, select the **Lecturer View Switching** check box.

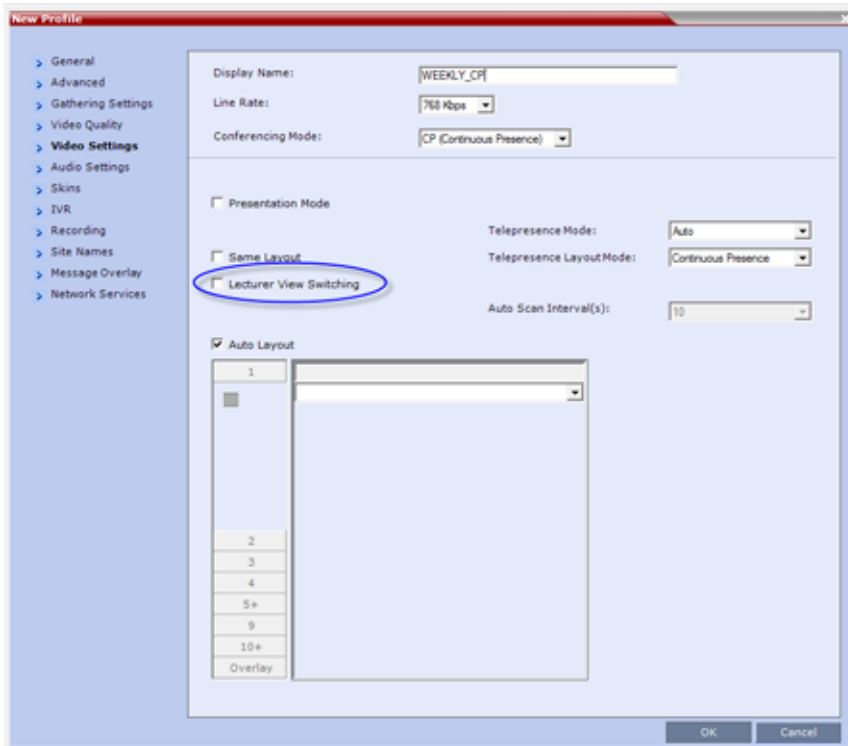

This option is activated when the conference includes more sites than windows in the selected layout. If this option is disabled, the participants will be displayed in the selected video layout without switching.

For more information about Profile definition, see [Defining AVC-Based Conference Profiles](#).

- Once the conference is running, in the **Conference Properties - Video Settings** dialog box, select the **Lecturer View Switching** check box.

Lecture Mode Monitoring

A conference in which the Lecture Mode is enabled is started as any other conference. The conference runs as an audio activated Continuous Presence conference until the lecturer connects to the conference. The selected video layout is the one that is activated when the conference starts. Once the lecturer is connected, the conference switches to the Lecture Mode.

When Lecturer View Switching is activated, it enables automatic switching between the conference participants in the lecturer's video window. The switching in this mode is not determined by voice activation and is initiated when the number of participants exceeds the number of windows in the selected video layout. In this case, when the switching is performed, the system refreshes the display and replaces the last active speaker with the current speaker.

When one of the participants is talking, the automatic switching is suspended, showing the current speaker, and it is resumed when the lecturer resumes talking.

If the lecturer is disconnected during an Ongoing Conference, the conference resumes standard conferencing.

Forcing is enabled at the Conference level only. It applies only to the video layout viewed by the lecturer as all the other conference participants see only the lecturer in full screen.

If an asymmetrical video layout is selected for the lecturer (i.e. 3+1, 4+1, 8+1), each video window contains a different participant (i.e. one cannot be forced to a large frame and to a small frame simultaneously).


When Lecture Mode is enabled for the conference, the lecturer is indicated by an icon in the Role column of the Participants list.

Name	Status	Role	IP Address/Phone	Alias Name/Network	Dialing Di	Audio	Video	E
Marc_59446123 (2 participants)								
Marc	Connected		10.253.72.13	H.323	Dial o			
HDX	Connected		10.253.72.24	SIP	Dial o			

Participant designated as the Lecturer

To control the Lecture Mode during an Ongoing Conference:

- 1 During the Ongoing Conference, in the **Conference Properties - Video Settings** dialog box you can:
 - Enable or disable the Lecture Mode and designate the conference lecturer in the Lecturer list; select **None** to disable the Lecture Mode or select a participant to become the lecturer to enable it.
 - Designate a new lecturer.
 - Enable or disable the Lecturer View Switching between participants displayed on the lecturer monitor by selecting or clearing the **Lecturer View Switching** check box.

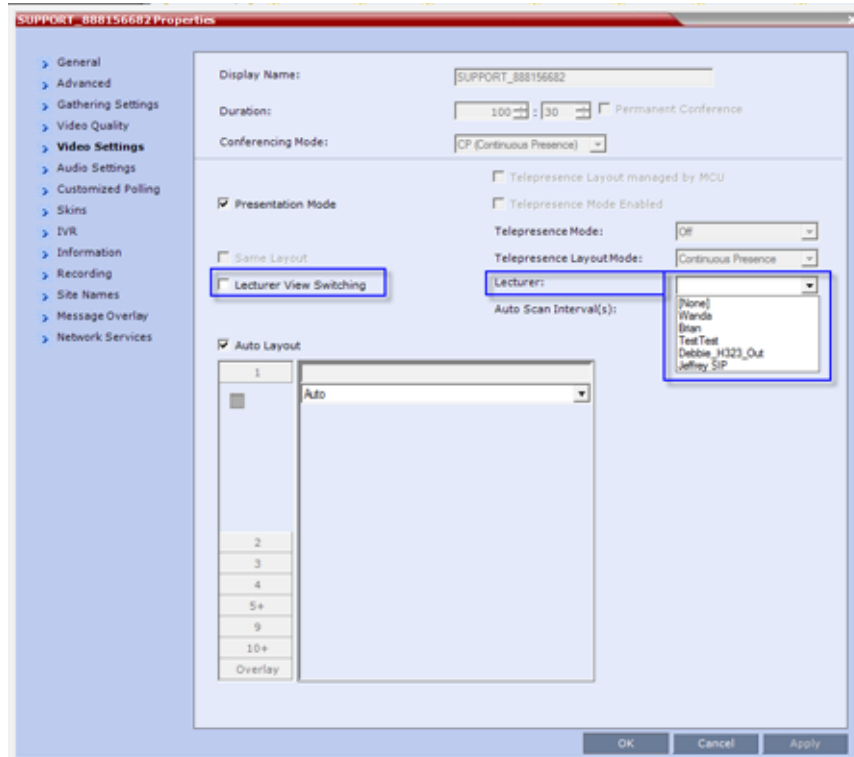

- Change the video layout for the lecturer by selecting another video layout.

Restricting Content Broadcast to Lecturer

Content broadcasting can be restricted to the conference lecturer only, when one of the conference participants is set as the lecturer (and not automatically selected by the system). Restricting the Content Broadcast prevents the accidental interruption or termination of H.239 Content that is being shared in a conference.

Content Broadcast restriction is enabled by setting the `RESTRICT_CONTENT_BROADCAST_TO_LECTURER` system flag to ON. When set to OFF (default) it enables all users to send Content.

When enabled, the following rules apply:

- Content can only be sent by the designated lecturer. When any other participant tries to send Content, the request is rejected.
- If the Collaboration Server user changes the designated lecturer (in the Conference Properties - Video Settings dialog box), the Content of the current lecturer is stopped immediately and cannot be renewed.
- The Collaboration Server User can abort the H.239 Session of the lecturer.
- Content Broadcasting is not implemented in conferences that do not include a designated lecturer and the lecturer is automatically selected by the system (for example, in Presentation Mode).

Muting Participants Except the Lecturer

**Note: Feature Applicability**

Muting participant except the lecturer is possible in AVC CP conferencing only.


When the Mute Participants Except Lecturer option in the Conference Profile is enabled, the audio of all participants in the conference except for the lecturer can be automatically muted upon connection to the conference. This prevents other conference participants from accidentally interrupting the lecture, or from a noisy participant affecting the audio quality of the entire conference. Muted participants cannot unmute themselves unless they are unmuted from the Collaboration Server Web Client/RMX Manager.

Guidelines for Muting all the Participants Except the Lecturer

- Both administrators and operators (users) are allowed to set the Mute Participants Except Lecturer option.
- When the Mute Participants Except Lecturer option is enabled, the mute indicator on the participant endpoints are not visible because the mute participants was initiated by the MCU. Therefore, it is recommended to inform the participants that their audio is muted by using the Message Overlay functions.
- When the Mute Participants Except Lecturer option is enabled in the Conference Profile settings, all conferences to which this profile is assigned will start with this option enabled. All participants, except for the designated lecturer, are muted.
- The Mute Participants Except Lecturer option can be enabled or disabled at any time after the start of the conference. When enabled, it allows all the conference participants to converse before the lecturer joins the conference or before they are muted. When disabled, it unmutes all the participants in the conference.
- If the endpoint of the designated lecturer is muted when the lecturer connects to the conference, the lecturer remains muted until the endpoint has been unmuted.
- When you replace a lecturer, the MCU automatically mutes the previous lecturer and unmutes the new lecturer.
- When you disconnect a lecturer from the conference or the lecturer leaves the conference, all participants remain muted but are able to view participants in regular video layout until the you disable the Mute Participants Except Lecturer option.
- A participant can override the Mute Participants Except Lecturer option by activating the Mute All Except Me option using the appropriate DTMF code, provided the participant has authorization for this operation in the IVR Services properties. The lecturer audio is muted and the participant audio is unmuted. You can reactivate the Mute Participants Except Lecturer option after a participant has previously activated the Mute All Except Me option. The participant is muted and the lecturer, if designated, is unmuted.
- In cascaded conferences, all participants (including the link participants) except the lecturer are muted. Only the lecturer is not muted.

Enabling the Mute Participants Except Lecturer Option


The Mute Participants Except Lecturer option is enabled or disabled (default) in the Conference Profile or in an ongoing conference in the Profile Properties - Audio Settings tab.

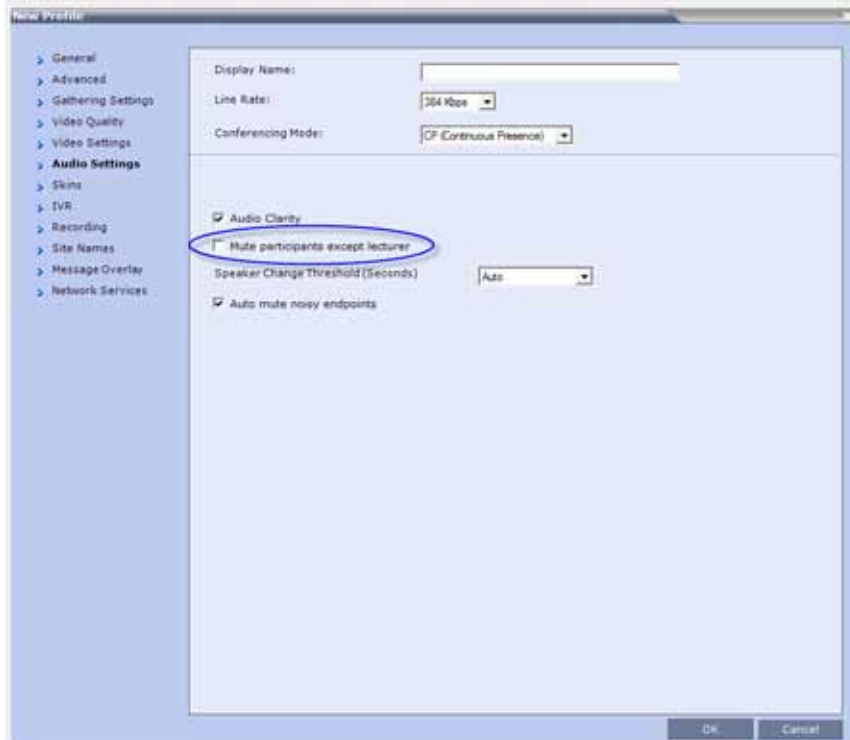

Note: Audio Clarity In Capture

The Audio Clarity features is not applicable for Collaboration Servers 1800 and Virtual Edition, thus the relevant check-box does not appear in this tab.

When the Mute Participants Except Lecturer option is enabled and a conference has started, the Mute by MCU icon is displayed in the Audio column in the Participants pane of each participant that is muted.

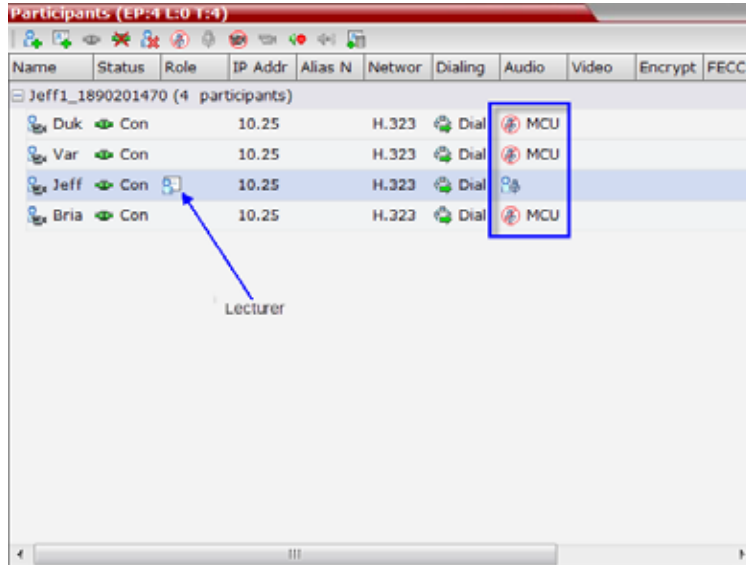

Audio Algorithm Support

The Collaboration Server supports the following audio algorithms in AVC conferences: G.711, G.722, G.722.1, G.722.1C, G.729A, G.719, G.728, G.723.1, siren 7, Siren14, Siren 22 (in mono or stereo) and SirenLPR.

Polycom's proprietary Siren 22 and industry standard G.719 audio algorithms are supported for participants connecting with Polycom endpoints.

The Siren 22 audio algorithm provides CD-quality audio for better clarity and less listener fatigue with audio and visual communication applications. Siren 22 requires less computing power and has much lower latency than alternative wideband audio technologies.

The Siren 7 audio codec is the preferred codec for SIP/Lync calls, depending on the value of the system flag `ALLOW_SIREN7_CODEC`. This preference is aimed at preventing disconnection of Lync clients using audio rates smaller than 42Kbps, when the Lync server is configured to allow 33Kbps audio rate. For more information see [ALLOW_SIREN7_CODEC](#).

The SirenLPR audio algorithm provides CD-quality audio for better clarity and less listener fatigue with audio and visual communication applications.

In SVC conferences, the system supports SAC (Scalable Audio Coding) audio algorithm.

Audio Algorithm Support Guidelines

- Siren 22 and G.719 are supported in both mono and stereo.
- Stereo is supported in H.323 calls only.
- Siren 22 is supported by Polycom HDX and Group series endpoints, version 2.0 and later.
- Siren 7 is the preferred audio codec for SIP/Lync clients, provided the system flag `ALLOW_SIREN7_CODEC` is set to **YES**.
- Where low line rates affect audio quality, it is possible to disable G.729 codec in favor of G.711 by modifying the `ENABLE_G729` system flag value to **NO**.

- G.728 is supported in H.323, SIP and ISDN environments.
- SirenLPR is disabled by default and can be enabled by setting the system flag ENABLE_SIRENLPR to YES
- SirenLPR is supported:
 - In IP (H.323, SIP) calls only.
 - In CP and VSW conferences.
 - With Polycom CMAD and HDX 3.0.1 and later and Group series endpoints.
 - For mono audio at audio line rates of 32Kbps, 48Kbps and 64Kbps.
 - For stereo audio at audio line rates of 64Kbps, 96Kbps and 128Kbps.

SIP Encryption

The ENABLE_SIRENLPR_SIP_ENCRYPTION System Flag enables the SirenLPR audio algorithm when using encryption with the SIP protocol.

The default value of this flag is NO meaning SirenLPR is disabled by default for SIP participants in an encrypted conference. To enable SirenLPR the System Flag must be added to system.cfg and its value set to YES.

Mono

The Siren 22, G.719, and SirenLPR mono audio algorithms are supported at the following bit rates.

Siren22, G.719, and SirenLPR Mono vs Bitrate

Audio Algorithm	Minimum Bitrate (kbps)
Siren22 64k	
Siren22 48K	
Siren22_32k	
G.719_64k	384
G.719_48k	
G.719_32k	
G.728 16K	
G.719_64k	384
SirenLPR_48k	256
Siren22_48K	
G.719_48k	
G.7221C_48k	
Siren14_48k	

Siren22, G.719, and SirenLPR Mono vs Bitrate

Audio Algorithm	Minimum Bitrate (kbps)
SirenLPR_32k	128
Siren22_32k	
G.719_32k	
G.7221C_32k	
Siren14_32k	
SirenLPR	64
SirenLPR	48
SirenLPR	32
Siren7	16

Stereo

The Siren 22Stereo, G.719Stereo, and SirenLPR audio algorithms are supported at the following bit rates.

Siren22Stereo, G.719Stereo, and SirenLPR vs Bitrate

Audio Algorithm	Minimum Bitrate (kbps)
Siren22Stereo_128k	1024
SirenLPRStereo_128k	
G.719Stereo_128k	
Siren22Stereo_96k	512
SirenLPRStereo_96k	
G.719Stereo_96k	
Siren14Stereo_96k	
SirenLPRStereo_64k	384
G.719Stereo_64k	
Siren22Stereo_64k	
Siren14Stereo_64k	

Audio algorithms supported for ISDN

Supported Audio Algorithm vs Bitrate

Audio Algorithm	Minimum Bitrate (kbps)	
G.722.1C 48K	256	
G.722.1C 32K		
G.722.1C 24K		
Siren14 48K		
Siren14 32K		
Siren14 24K		
G.722.1 32K		
G.722.1 24K		
G.722.1 16K		
G.722 48K		256
G.722 56K		
G.722 64K		
G.711 56K		
G.711 64K		
G.728 16K		
G.722.1C 32K	128	
G.722.1C 24K		
Siren14 32K		
Siren14 24K		
G.722.1 32K		
G.722.1 24K		
G.722 48K		
G.722 56K		
G.722 64K		
G.711 56K		
G.711 64K		
G.728 16K		

Supported Audio Algorithm vs Bitrate

Audio Algorithm	Minimum Bitrate (kbps)
G.722.1 16K	96
G.722.1C 24K	
Siren14 24K	
G.722 48K	
G.722 56K	
G.722 64K	
G.711 56K	
G.711 64K	
G.728 16K	
G.728 16K	

Monitoring Participant Audio Properties

The audio algorithm used by the participant's endpoint can be verified in the **Participant Properties - Channel Status** dialog box.

To view the participant's properties during a conference:

- 1 In the **Participants** list, right click the desired participant and select **Participant Properties**.
- 2 Click the **Channel Status - Advanced** tab.
The **Participant Properties - Channel Status - Advanced** dialog box is displayed.

- 3 In the **Channel Info** field, select **Audio In** or **Audio Out** to display the audio parameters.

The screenshot shows the 'minoff HDX4000 Properties' dialog box. The 'Channel Info' dropdown menu is set to 'Audio In', indicated by a blue arrow. The 'Media Info' section shows 'Algorithm: siren225_128k' and 'Frame Per: 2'. The 'RTP Statistics' table shows zero values for Actual, Out Of, and Frags. Buttons for 'Add to Address Book', 'OK', 'Cancel', and 'Apply' are visible at the bottom.

	N - Accu	% - Accu	N - Inter	% - Inter	Peak - Int
RTP pa					
Actual	0	0.00	0	0.00	0
Out Of	0	0.00	0	0.00	0
Fragm	0	0.00	0	0.00	0
Jitter M					

- 4 Click the **OK** button.

Automatic Muting of Noisy Endpoints



Note: Feature Applicability

- Automatic muting of noisy endpoint is not applicable for Collaboration Servers 1800 / Virtual Edition.
- Automatic muting of noisy endpoints is applicable only in AVC video conferences and audio-only (non-SAC) conferences.

The Collaboration Server can detect AVC-enabled endpoints with a noisy audio channel and automatically mute them, reducing the noise heard by other conference participants. When the auto muted endpoint becomes the speaker the endpoint is automatically un-muted by the system. If the speaker halts his/her conversation and the line still emits noises, the endpoint will be automatically muted again.

When the endpoints are automatically muted by the MCU, no indication is displayed in the Collaboration Server Web Client or RMX Manager as the system does not consider it as a deliberate mute.

Guidelines for Automatically Muting Noisy Endpoints

The automatic muting of noisy AVC-enabled endpoints can be used according to the following guidelines:

- The Auto mute noisy endpoints check box in the Profile Properties - Audio Settings dialog box is enabled only when the ENABLE_SELECTIVE_MIXING flag is set to YES (default).
- It affects only AVC-based and audio only endpoints (non-SAC endpoints)
- It does not affect SVC-based endpoints
- It is supported in CP conferences and in Mixed CP and SVC conferences.
- In a mixed CP and SVC conferences, only the AVC-based endpoints can be automatically muted. If the noisy endpoint is SVC-based, its audio channel will not be sent to the AVC-based endpoints, but it will be sent to the other SVC-based endpoints.
- MCU reset is not required when changing the ENABLE_SELECTIVE_MIXING flag setting.
- When upgrading from a version prior to 8.1, the Auto mute noisy endpoints option is not automatically enabled in the existing Profiles and it has to be manually enabled, if required.
In new Profiles that are created after the upgrade, the Auto mute noisy endpoints option is automatically enabled.
- If your conferencing environment includes the Polycom DMA, the conferences that are started from the DMA will not include the Auto mute noisy endpoints parameter as it is not part of the DMA Profiles. In such a case, when the parameter setting is unknown, the system will enable or disable the automatic muting of noisy endpoints according to the flag setting - if the flag is set to YES, it will be enabled in the conference.
- Sounds with the frequency of noise, such as applause and certain background music, may be also be muted.

The following table summarizes the state (enabled or disabled) of the Automatic muting of noisy endpoints feature depending on the ENABLE_SELECTIVE_MIXING flag setting and the Auto mute noisy endpoints setting in the Profile Properties - Audio Settings:

Conditions for enabling/disabling the automatic muting of noisy endpoints

ENABLE_SELECTIVE_MIXING flag Setting	Auto mute noisy endpoints setting	Automatic muting of noisy endpoints State
YES	Yes (check box selected)	Enabled
YES	No (check box cleared)	Disabled
YES	Unknown (for example, the conference is started from the DMA)	Enabled
NO	Yes (check box selected)	Disabled
NO	No (check box cleared)	Disabled
NO	Unknown (for example, the conference is started from the DMA)	Disabled

Automatic Muting of Noisy Endpoints

The automatic muting of noisy endpoints can be enabled or disabled at the conference level (in the Conference Profile) or at the system level, by changing the ENABLE_SELECTIVE_MIXING flag setting.

In new MCU installations, the automatic muting of noisy endpoints is automatically enabled on the MCU as the ENABLE_SELECTIVE_MIXING flag is set to YES and the Auto mute noisy endpoints check box in the Profile Properties - Audio Settings tab is selected.

You can disable the automatic muting of noisy endpoints by either setting the system flag to NO or clearing the Auto mute noisy endpoints check box in the Profile Properties - Audio Settings tab.

If required, it is recommended to disabled the automatic muting of noisy endpoints at the conference level, in the conference Profile without changing the flag settings.

In existing MCU sites, following the software upgrade the automatic muting of noisy endpoints is disabled at the conference level in the existing conference Profile and has to be manually enabled in these profiles. This option is automatically enabled when creating a new Profile.


Automatic Muting of Noisy Endpoints at the Conference Level

If the ENABLE_SELECTIVE_MIXING flag is set to YES, the automatic muting of noisy endpoints can be enabled or disabled at the conference level in the Conference Profile - Audio Settings dialog box.

If the ENABLE_SELECTIVE_MIXING flag is set to NO, the automatic muting of noisy endpoints is disabled at the conference level and cannot be enabled in the Conference Profile - Audio Settings dialog box.

To disable/enable the automatic muting of noisy endpoints in the Conference Profile:

- 1 In a new or existing Conference Profile, click the **Audio Settings** tab.

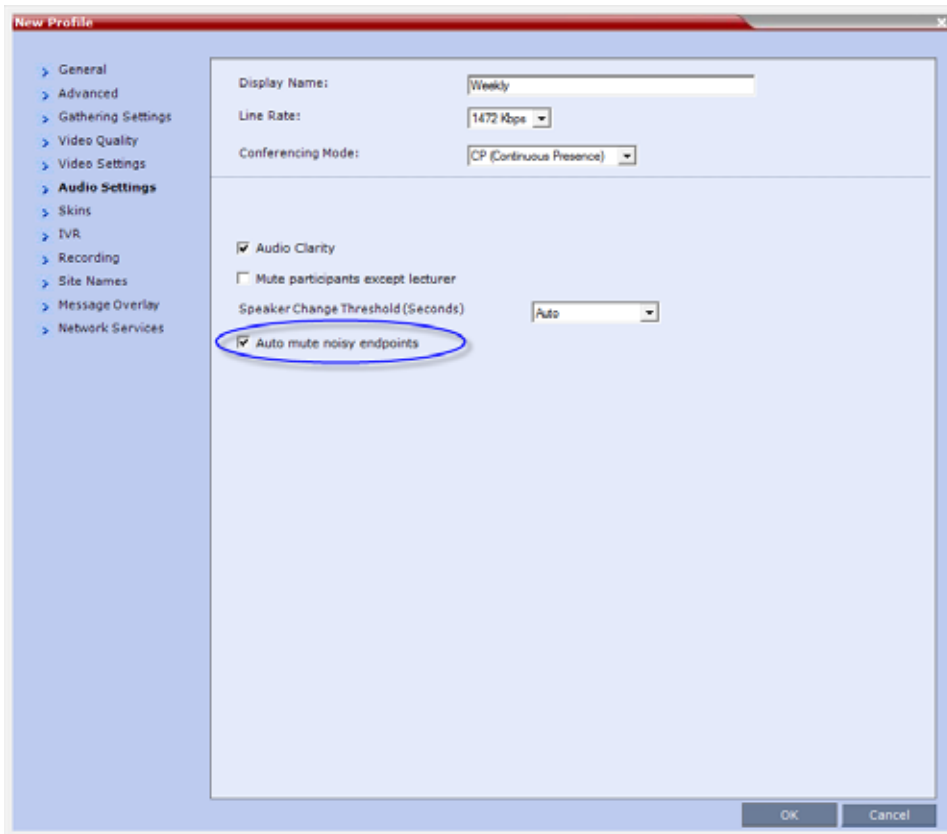

- In new Profiles, the **Auto mute noisy endpoints** check box is selected by default.
 - In existing profiles (after software upgrade from a version prior to 8.1), the **Auto mute noisy endpoints** check box is cleared.
- 2 To enable the automatic muting of noisy endpoints, click the **Auto mute noisy endpoints** check box.
 - 3 Click **OK**.

Automatic Muting of Noisy Endpoints at the MCU Level

You can disable the automatic muting of noisy endpoints at the MCU level by changing the ENABLE_SELECTIVE_MIXING flag setting to NO.

In such a case, the automatic muting of noisy endpoints at the conference level (in the Conference Profile - Audio Settings dialog box) is disabled.

To modify the system flag setting:

- To modify ENABLE_SELECTIVE_MIXING flag setting to NO, manually add it to system.cfg file and set its value to NO.

For more details, see the [Modifying System Flags](#).

Permanent Conference


A Permanent Conference is any ongoing conference with no pre-determined End Time continuing until it is terminated by an administrator, operator or chairperson.

Guidelines

- Resources are reserved for a Permanent Conference only when the conference has become ongoing.
- Resources are allocated to a Permanent Conference according to the Reserve Resources for Video Participants field. If the number of defined dial-out participants exceeds the value of this field, the Collaboration Server automatically replaces the number in the Reserve Resources for Video Participants field with the number of defined dial-out participants in the Permanent Conference.
- Auto Terminate is disabled in Permanent Conferences.
- If participants disconnect from the Permanent Conference, resources that were reserved for its video and audio participants are released.
- Entry Queues, Conference Reservations and SIP Factories cannot be defined as Permanent Conferences.
- Additional participants can connect to the conference, or be added by the operator, if sufficient resources are available.
- The maximum size of the Call Detail Record (CDR) for a Permanent Conference is 1MB.

Enabling a Permanent Conference

The Permanent Conference option is selected in the New Conference, New Meeting Room or New Conference Templates dialog boxes.

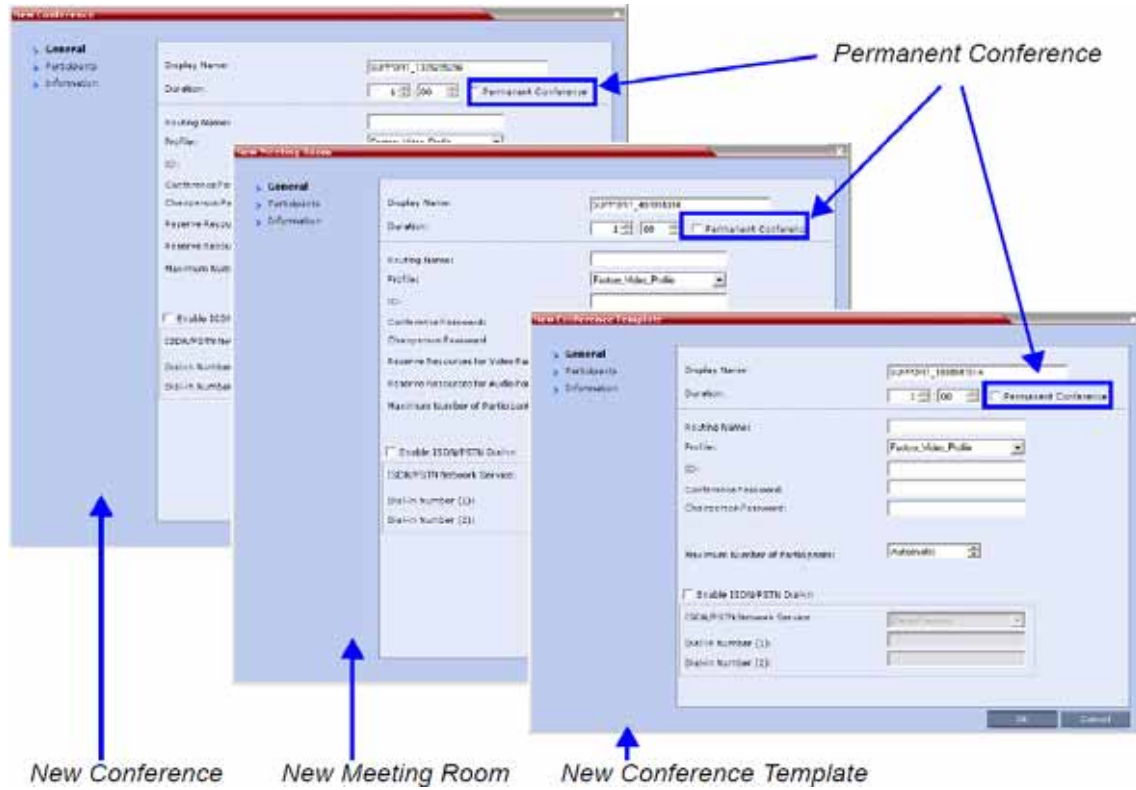

Closed Captions



Note: Feature Applicability

- This option is not supported for Collaboration Servers 1800 / Virtual; Edition.
- This feature is applicable only for AVC endpoints.

Endpoints can provide real-time text transcriptions or language translations of the video conference by displaying captions. The captions for a conference may be provided by the captioner who is present in the conference, or the captioner may use a telephone or web browser to listen to the conference audio. When the captioner sends a unit of text, all conference participants see it on the main monitor for 15 seconds. The text then disappears automatically.

The captioner may enter caption text using one of the following methods:

- Remotely, via a dial-up connection to the system's serial RS-232 port.
- In the room using equipment connected directly to the serial port.
- In the room or remotely, using the Polycom HDX web interface.

Closed Captions Guidelines

- The captions display properties are configured on the endpoint sending the captions.
- Closed Captions content is defined from the endpoint. The Collaboration Server only transmits it to the endpoints.
- When enabled, captions are available to all endpoints supporting FECC.
- Captions are supported in H.323 and SIP connections.
- The FECC indications during ongoing conferences are used when sending captions.
- When Closed Captions option is enabled for the MCU, muting an endpoint may cause the display of the Far Mute indication on all the screens of the endpoints connected to the conference.
- The Closed Captions option is not supported in cascading conferences (captions they can only be viewed in the local conference) as FECC is not supported in cascading links.
- Site name display is not affected by captions display.
- Captions are supported by the Collaboration Server in the following configurations and conferencing modes:
 - CP Conferencing Mode.
 - Encrypted and non-encrypted conferences.
 - Conferences with content sharing.

Enabling Closed Captions

Captions are enabled by a system flag. By default, Closed Captions are disabled.

To change the flag value:

- 1 On the Collaboration Server menu, click **Setup > System Configuration**.
The **System Flags** dialog box opens.

- 2 In the **MCMS_PARAMETERS** tab, click the **New Flag** button.
The **New Flag** dialog box is displayed.
- 3 In the **New Flag** field enter **ENABLE_CLOSED_CAPTION**.
- 4 In the **Value** field enter **YES** to enable or **NO** to disable Closed Captions display.
- 5 Click **OK** to close the **New Flag** dialog box.
The new flag is added to the flags list.
- 6 Click **OK** to close the **System Flags** dialog box.



Note: System Restart Requirement

For flag changes (including deletion) to take effect, reset the MCU. For more information, see [Resetting the Collaboration Server](#).

Defining Cascading Conferences

Cascading enables administrators to connect one conference directly to one or several conferences, depending on the topology, creating one large conference. The conferences can run on the same MCU or different MCUs.

There are many reasons for cascading conferences, the most common are:

- Connecting two conferences on different MCUs at different sites.
- Utilizing the connection abilities of different MCUs, for example, different communication protocols, such as, serial connections and ISDN, etc.

Conferences are Cascaded when a link is created between two conferences, usually running on two different MCUs.



Note: Cascading support

- Cascading information applies to AVC Conferencing Mode (CP and mixed CP and SVC) only.
- Cascading Conferences are not supported by Collaboration Server (RMX) 1800 with no DSP cards, and Collaboration Server 1800, Entry Level.

Cascading Link Properties

Cascade links are treated as endpoints in CP conferences. They are allocated resources as any other endpoint according to [Default Minimum Threshold Line Rates and Resource Usage Summary](#).

They transmit audio, video and content between conferences as well as DTMF codes input from other endpoints in the conference.


Setting the Video Layout in Cascading conferences require additional consideration.

Setting the Video Layout in Cascading conferences

When cascading two conferences, the video layout displayed in the cascaded conference is determined by the selected layout in each of the two conferences. Each of the two conferences will inherit the video layout of the other conference in one of their windows.

In order to avoid cluttering in the cascaded window, it is advised to select appropriate video layouts in each conference before cascading them.

Video Layouts in Cascaded Conferences

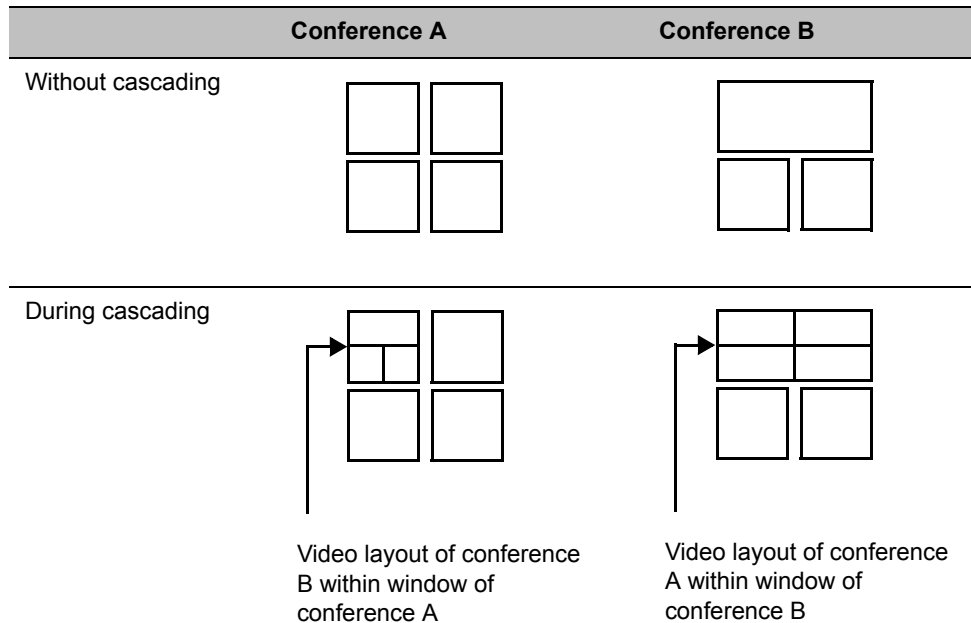

Guidelines for Setting the Video Layout in Cascading Conferences

To ensure that conferences can be cascaded and video can be viewed in all conferences the following guidelines are recommended:

- The same version installed on all MCUs participating the cascading topology
- The same license installed on all MCUs participating the cascading topology
- Same Conference Parameters are defined in the Profile of the conferences participating in the cascading topology
 - Conference line rates should be identical
 - Content rate should be identical
 - Same encryption settings
- DTMF codes should be defined with the same numeric codes in the IVR services assigned to the cascading conferences
- DTMF forwarding is suppressed
- The video layout of the link is set to 1x1 by the appropriate system flag.
- Cascaded links in 1x1 video layout are in SD resolution.
- When the Mute Participants Except Lecturer option is enabled in the Conference Profile, all participants (including the link participants) except the lecturer are muted. Only the lecturer is not muted.
- Gathering is not supported in Cascading Conferences.

Flags Controlling Cascading Layouts

- Setting the `FORCE_1X1_LAYOUT_ON_CASCADED_LINK_CONNECTION` System Flag to YES (default) automatically forces the cascading link to Full Screen (1x1) in CP conferences, hence displaying the speaker of one conference to a full window in the video layout of the other conference.

Set this flag to NO when cascading between an RealPresence Collaboration Server and an MCU that is functioning as a Gateway, if the participant layouts on the MCU are not to be forced to 1X1.

- Setting the `AVOID_VIDEO_LOOP_BACK_IN_CASCADE` System Flag to YES (default) prevents the speaker's image from being sent back through the participant link from the cascaded conference. This can occur in cascaded conferences with conference layouts other than 1x1. It results in the speaker's own video image being displayed in the speaker's video layout.

This option is supported with:

- In IP (H.323, SIP) and ISDN environments.
- Basic Cascading of Continuous Presence and Video Switched conferences. If a Master MCU has two slave MCUs, participants connected to the slave, MCUs will not receive video from each other until a video end point connects to the Master MCU.
- Video resolution will be according to the Resolution Configuration, or VSW profile.

For more details on defining system flags, see [Modifying System Flags](#).

DTMF Forwarding

When two conferences are connected over an IP link, DTMF codes from one conference are not forwarded to the second conference with the exception of the following operations that are available throughout the conference and the forwarding of their DTMF codes is not suppressed (i.e. they will apply to both conferences):

- Terminate conference.
- Mute all but me.
- Unmute all but me.
- Secure conference.
- Unsecure conference.



Note: DTMF Codes Forwarding

During cascading between a gateway and a conference all DTMF codes are forwarded from the gateway to the conference and vice versa.

Play Tone Upon Cascading Link Connection

The RealPresence Collaboration Server can be configured to play a tone when a cascading link between conferences is established. The tone is played in both conferences.

This tone is not played when the cascading link disconnects from the conferences.

The tone used to notify that the cascading link connection has been established cannot be customized.

The option to play a tone when the cascading link is established is enabled by setting the System Flag `CASCADE_LINK_PLAY_TONE_ON_CONNECTION` to YES.

Default value: NO.

The tone volume is controlled by the same flag as the IVR messages and tones:
IVR_MESSAGE_VOLUME.

Possible Cascading Topologies

The following cascading topologies are available for setting cascading conferences:

- **Basic Cascading** - only two conferences are connected (usually running on two different RealPresence Collaboration Servers). The cascaded MCUs reside on the same network.
- **Star Cascading** - one or several conferences are connected to one master conference. Conferences are usually running on separate MCUs. The cascaded MCUs reside on the same network.
- **MIH (Multi-Hierarchy) Cascading** - several conferences are connected to each other in Master-Slave relationship. The cascaded MCUs can reside on different networks.

System configuration and feature availability change according to the selected cascading topology.



Note: Sharing Content in Cascaded Conferences

For properly sharing content in cascaded conferences, predefined dial in and out link participants must be defined with Master/Slave settings in the conferences.

When Cascading between the Collaboration Server and third party MCUs, the participant defined in the Collaboration Server conference must be defined as Master.

When cascading between the Collaboration Server and a Codian MCU, set the system flag ENABLE_CODIAN_CASCADE to YES to ensure that the Collaboration Server is defined as a Master in cascading conferences at all times.

Basic Cascading


In this topology, a link is created between two conferences, usually running on two different MCUs. The MCUs are usually installed at different locations (states/countries) to save long distance charges by connecting each participant to their local MCU, while only the link between the two conferences is billed as long distance call.

- This is the only topology that enables both IP and ISDN cascading links.
- Cascading between Collaboration Server Virtual Edition and Collaboration Servers (RMX) 2000/1800/4000 is supported.
- When linking two conferences using an IP cascading link:
 - The destination MCU can be indicated by:
 - ◆ IP address
 - ◆ H.323 Alias
 - Both MCUs must be located in the same network.
- The MCU can be used as a gateway.
- The configuration can include two RealPresence Collaboration Servers or one RealPresence Collaboration Server and one MGC.
- Multiple Cascade Links enabling Cascading between RMXs hosting conferences that include Immersive Telepresence Rooms (ITP) such as Polycom's OTX and RPX Room Systems can be defined. For more information see [Creating Multiple Cascade Links Between Telepresence Conferences](#).

Basic Cascading Using IP Cascaded Link

In this topology, both MCUs can be registered with the same gatekeeper or the IP addresses of both MCUs can be used for the cascading link. Content can be sent across the Cascading Link.

Basic Cascading Topology - IP Cascading Link

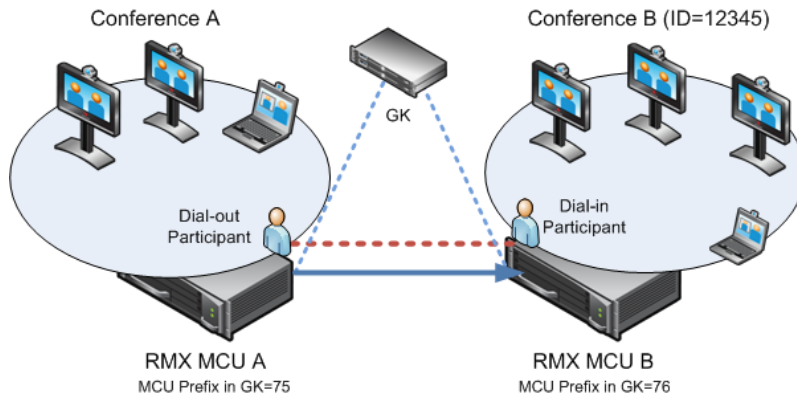

For example, MCU B is registered with the gatekeeper using 76 as the MCU prefix.

The connection between the two conferences is created when a dial out IP participant is defined (added) to conference A whose dial out number is the dial-in number of the conference or Entry Queue running on MCU B.

Dialing Directly to a Conference

Dial out IP participant in conference A dials out to the conference running on MCU B entering the number in the format:

```
[MCU B Prefix/IP address][conference B ID].
```

For example, if MCU B prefix is 76 and the conference ID is 12345, the dial number is 7612345.

Dialing to an Entry Queue

When dialing to an Entry Queue, the dial out participant dials the MCU B prefix or IP address of MCU B and the Entry Queue ID in the format:

```
[MCU B Prefix/IP address][EQ B ID]
```

For example, if MCU B prefix is 76 and the Entry Queue ID is 22558, the dial number is 7622558.


When the participant from conference A connects to the Entry Queue, the system plays to all the participants in Conference A the IVR message requesting the participant to enter the destination conference ID.

At this point, the Conference A organizer or any other participant in the conference can enter the required information for the IVR session using DTMF codes. For example, the meeting organizer enters the destination conference ID - 12345.

Any DTMF input from conference A is forwarded to the Entry Queue on MCU B to complete the IVR session and enable the move of the participant to the destination conference B.

Once the DTMF codes are entered and forwarded to the Entry Queue on MCU B, the IVR session is completed, the participant moved to the destination conference and the connection between the two conferences is established.

Automatic Identification of the Cascading Link

In both dialing methods, the system automatically identifies that the dial in participant is an MCU and creates a Cascading Link and displays the link icon for the participant (). The master-slave relationship is randomly defined by the MCUs during the negotiation process of the connection phase.

Basic Cascading Using ISDN Cascaded Link


ISDN connection can be used to link between two MCUs or MCU and gateway and create a cascading conference. Content can be sent across the ISDN Cascading Link.

Network Topologies Enabling Content Sharing Over ISDN Cascaded Links

ISDN Cascaded links that support content sharing can be created between two gateways, gateway-to-MCU or between two MCUs in the following network topologies:

- Gateway to Gateway


Gateway to Gateway Topology

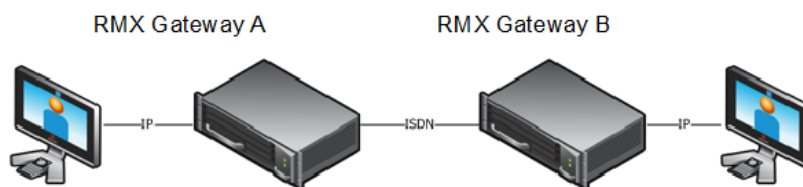

In this topology, an IP participant calls another IP participant over an ISDN link between two gateways.

- Gateway to MCU


Gateway to MCU/ MCU to Gateway Topology

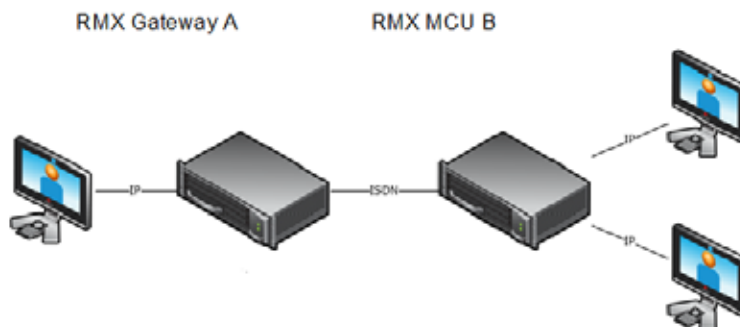

In this topology, an IP participant calls a conference running on an MCU via a gateway and over an ISDN link.

- MCU to MCU

Cascading Between Two MCUs Using an ISDN Link

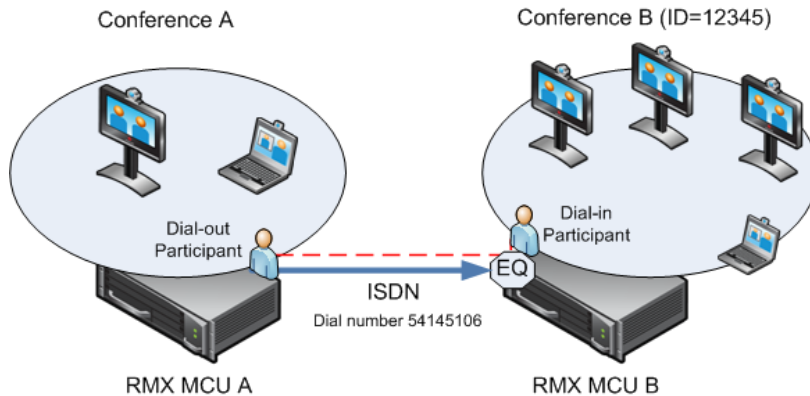

In this topology, an ISDN participant from conference running on MCU A calls a conference running on MCU B over an ISDN link.

Guidelines

- In Collaboration Servers with versions prior to 8.6, content is restricted, in the sense that when another endpoint wants to send content, the first endpoint must stop sending content before the second endpoint can initiate or send content.
- Endpoints that do not support H.239 can receive the Content using the Send Content to Legacy Endpoints option.
- When a participant joins a conference with active Content, content cannot be viewed by the new participant. Restart the Content.
- Cascaded MCUs/Gateways must be registered with the same Gatekeeper or neighboring Gatekeepers. MCUs and endpoints must also be registered with Gatekeepers.
- Gateway/MCU calls require definition of IVR Services. For more information see [Defining the IVR Service for Gateway Calls](#).



Note: Content Protocol over ISDN Cascaded link

The content sharing protocol is H.263 when sent over ISDN Cascading link.

Gateway to Gateway Calls via ISDN Cascading Link

When H.323 participants connects to another IP participants via a Gateway to Gateway call over an ISDN link, the dialing string includes the following components:

[GW A prefix in GK] - The prefix with which the RealPresence Collaboration Server (gateway) is registered to the gatekeeper.

[GW Profile ID] - The ID of the Gateway Profile defined on Gateway A to be used for routing the call to the Gateway B.

[GW Profile ISDN/PSTN number] - The dial-in number assigned to the Gateway Profile defined on Gateway B, including the required country and area codes.

Information required that is not part of the dialing string:

[Destination number] - The destination number as alias, IPv4 address or ISDN/PSTN number of participant B.

The dialing string format:

H.323 Participants connecting to another IP participant via a Gateway to Gateway call over an ISDN link enter a dial string using the format:

```
<GW A Prefix in GK><Gateway Profile_ID on GW A>*<Destination ISDN Dial-in number assigned to the Gateway Session Profile GW B>*<Destination Number, participant>
```

For example:

GW A prefix in Gatekeeper - (not used with SIP)	22
Gateway Profile ID in GW A	9999
ISDN Dial-in Number assigned to the Gateway Session Profile GW B	4444103
IP Participant Alias	3456

H.323 participant dials: 229999*4444103, and when prompted for the Destination number enters 3456 followed by the pound key (#) using DTMF codes

SIP Participants connecting to another IP participant via a Gateway to Gateway call over an ISDN link enter a dial string using the format:

```
<Gateway Profile_ID on GW A>@<Central Signaling IP GW A>*<Destination ISDN Dial-in number assigned to the Gateway Session Profile GW B>*<Destination Number, participant>
```

For example:

If Central Signaling IP address of Gateway A is 172.22.177.89, SIP participant dials: 9999@172.22.177.89* 4444103 and when prompted for the Destination number enters 3456 followed by the pound key (#) using DTMF codes.

Gateway to MCU Calls via ISDN Cascading Link

When H.323 participants connects to a conference/Meeting Room via a Gateway to MCU call over an ISDN link, the dialing string includes the following components:

[GW A prefix in GK] - The prefix with which Gateway A is registered to the gatekeeper.

[GW Profile ID on GW A] - The ID of the Gateway Profile on GW A to be used for routing the call to the Meeting Room/conference running on MCU B.

[Conference/Meeting Room/Entry Queue ISDN/PSTN number] - The dial-in number assigned to the Entry Queue/Meeting Room/Conference defined on MCU B, including the required country and area codes.

Information required that is not part of the dialing string:

[Destination Conference ID] - Only if using the Entry Queue on MCU B for routing calls or creating new ad hoc conferences. The ID of the destination conference on MCU B.

The dialing string format:

```
<GW A Prefix in GK><Gateway Profile_ID on GW A>*<ISDN Number assigned to the Meeting Room/Conference/Entry Queue>
```


For Example:

GW A prefix in Gatekeeper - (not used with SIP)	22
Gateway Profile ID in GW A	9999
ISDN Dial-in Number assigned to the Entry Queue/MR/conference	4444100
H.323 participant dials	229999*4444100

SIP participant dials (if Central Signaling IP address of Gateway A is 172.22.177.89) 9999@172.22.177.89 IP* 4444100

If dialing an Entry Queue, when prompted for the Destination number enters 3456 followed by the pound key (#) using DTMF codes to create a new conference or join an ongoing conference with that ID.

MCU to MCU Calls via ISDN Cascading Link


A dial out ISDN participant is defined (added) to conference A running on MCU A. The participant's dial out number is the dial-in number of the Entry Queue or conference running on MCU B (for example 54145106).

MCU A dials out to an Entry Queue or conference B running on MCU B using the Entry Queue number (for example 54145106) or the conference number.

When the participant, who is a dial-in participant in conference B, connects to the Entry Queue, the system plays to all the participants in Conference A the IVR message requesting the participant to enter the destination conference ID (or if connecting to a conference directly, the participant is requested to enter the conference password).

At this point the Conference A organizer or any other participant in the conference can enter the required information for the IVR session using DTMF codes. For example, the meeting organizer enters the destination conference ID - 12345.

Any DTMF input from conference A is forwarded to the Entry Queue on MCU B to complete the IVR session and enable the move of the participant to the destination conference B.

Once the DTMF codes are entered and the IVR session is completed, the participant is connected to the conference and the connection between the conferences is established. The system automatically identifies the calling participant as an MCU and the connection is identified as a cascading link and the cascading link icon is displayed for the participant ().

RealPresence Collaboration Server Configuration Enabling ISDN Cascading Links

To enable Gateway-to-Gateway, Gateway-to-MCU and MCU-to-MCU calls over ISDN Cascading links, the following configurations are required:

- Modifying the IP Network Service to include the MCU Prefix in the Gatekeeper (in the Gatekeepers dialog box). For more details, see [Modifying the Default IP Network Service](#).
- ISDN Network Service is configured in both MCUs. For more details, [Modifying an ISDN/PSTN Network Service](#).
- Configuring a Gateway Profile and assigning dial-in ISDN/PSTN numbers. For details, see [Defining the Gateway Profile](#).
- Configure the Entry Queue or conference (for direct dial-in) as enabled for ISDN connection and a dial-in number is assigned (for example 54145106).

The screenshot shows the 'New Entry Queue' dialog box. The 'Display Name' is 'EQ1'. The 'Profile' is 'Factory_Video_Profile'. The 'Entry Queue IVR Service' is 'Entry Queue IVR Service'. The 'Enable ISDN/PSTN Dial-in' checkbox is checked and highlighted with a blue box. Below it, the 'ISDN/PSTN Network Service' is set to '[Default Service]', 'Dial-in Number (1)' is '54145106', and 'Dial-in Number (2)' is empty.

- Defining the dial-in ISDN participant in MCU B and Dial-out ISDN participant in MCU A (for MCU-to-MCU cascading conferences).

A dial out ISDN participant is defined (added) to conference A. The participant's dial out number is the dial-in number of the Entry Queue or conference running on MCU B (for example 54145106).

The screenshot shows the 'New Participant' dialog box. The 'Name' is 'Link 20'. The 'Dialing Direction' is 'Dial out', 'Type' is 'ISDN/PSTN', and 'Participant Number' is '8675309'. These three fields are highlighted with a blue box. The 'Audio Only' checkbox is unchecked, and the 'Extension/Identifier String' is empty.

MCU A dials out to an Entry Queue or conference B running on MCU B using the Entry Queue number (for example 54145106) or the conference number.

Conference Profile Definition

The following table lists the recommended Meeting Room/Conference Profile parameters setting when routing ISDN cascaded calls.

Recommended Conference Profile Options Setting

Line Rate	Motion	Sharpness	Encryption	LPR
128	✓			
128		✓		
128	✓			✓
128	✓		✓	✓
256	✓			
256		✓		
256	✓			✓
256	✓		✓	✓
384	✓			
384		✓		
384	✓			✓
384	✓		✓	✓
512	✓			
512		✓		
512	✓			✓
512	✓		✓	✓
768	✓			
768		✓		
768	✓			✓
768	✓		✓	✓



Note: Line Rate Recommendation

Since the remote participant settings are unknown, it is recommended that the gateway or endpoint be configured to support a higher line rate (for example, 768 Kbps) to allow flexibility during endpoint capability negotiations.

MCU Interoperability Table

The following table lists the different MCU and Gateway configurations that are supported or implemented when routing Cascaded ISDN calls.

MCU Interoperability Table

Source	Destination	Scenario	Version(s)
RealPresence Collaboration Server Gateway	RealPresence Collaboration Server MCU	User calls via a Gateway to a Remote Conference (user to conference)	RealPresence Collaboration Server v. 7.1 or later
RealPresence Collaboration Server Gateway	RealPresence Collaboration Server Gateway	User calls via a Gateway to a Remote User behind Gateway (user to user)	RealPresence Collaboration Server v. 7.1 or later
RealPresence Collaboration Server MCU	RealPresence Collaboration Server MCU	A dial out participants calls to a remote conference (conference to conference)	RealPresence Collaboration Server v. 7.1 or later
RealPresence Collaboration Server MCU	RealPresence Collaboration Server Gateway	A dial out participants calls to a remote User behind a Gateway (Conference to User)	RealPresence Collaboration Server v. 7.1 or later
Endpoint	RealPresence Collaboration Server Gateway	User calls directly to a remote user behind a Gateway (User to User)	RealPresence Collaboration Server v. 7.1
RealPresence Collaboration Server MCU	Codian Gateway	Dial out participants use a fixed rule behind the Codian Gateway.	RealPresence Collaboration Server v. 7.1 Latest Codian version
RealPresence Collaboration Server Gateway	Codian Gateway	Dial out participants use a fixed rule behind the Codian Gateway.	RealPresence Collaboration Server v. 7.1 Latest Codian version
Codian Gateway	RealPresence Collaboration Server MCU	User calls via a Codian Gateway to a Remote Conference (user to conference)	RealPresence Collaboration Server v. 7.1 Latest Codian version
Codian Gateway	RealPresence Collaboration Server Gateway	User calls via a Codian Gateway to a Remote User behind RealPresence Collaboration Server Gateway (user to user)	RealPresence Collaboration Server v. 7.1 Latest Codian version
RealPresence Collaboration Server MCU	Radvision Gateway	User calls via a Radvision Gateway to a Remote User behind RealPresence Collaboration Server Gateway (user to user)	RealPresence Collaboration Server v. 7.1 Latest Radvision version
RealPresence Collaboration Server Gateway	Radvision Gateway	User calls via a Radvision Gateway to a Remote User behind RealPresence Collaboration Server Gateway (user to user)	RealPresence Collaboration Server v. 7.1 Latest Radvision version


MCU Interoperability Table

Source	Destination	Scenario	Version(s)
Radvision Gateway	RealPresence Collaboration Server MCU	User calls via a Radvision Gateway to a Remote Conference (user to conference)	RealPresence Collaboration Server v. 7.1 Latest Radvision version
Radvision Gateway	RealPresence Collaboration Server Gateway	User calls via a Radvision Gateway to a Remote User behind RealPresence Collaboration Server Gateway (user to user)	RealPresence Collaboration Server v. 7.1 Latest Radvision version
Endpoint	RealPresence Collaboration Server Gateway	User calls directly to a DMA controlled environment	RealPresence Collaboration Server v. 7.1
RealPresence Collaboration Server MCU	RealPresence Collaboration Server Gateway	A dial out participants calls to a remote conference on a DMA controlled environment	RealPresence Collaboration Server v. 7.1



Notes:

- On the Codian gateway Content is not supported with line rates of 128Kbps and below.
- To send Content from a participant over Radvision Gateway to a conference/participant, the GWP20 patch must be installed in the RadVision gateway:
On the Radvision gateway, open the GWP20 User Interface.
Select **Settings > Advanced Commands**.
In the **Command** box, enter **H239OlcPatch**.
In the **Parameters** box, enter **Enable** and click **Send**.

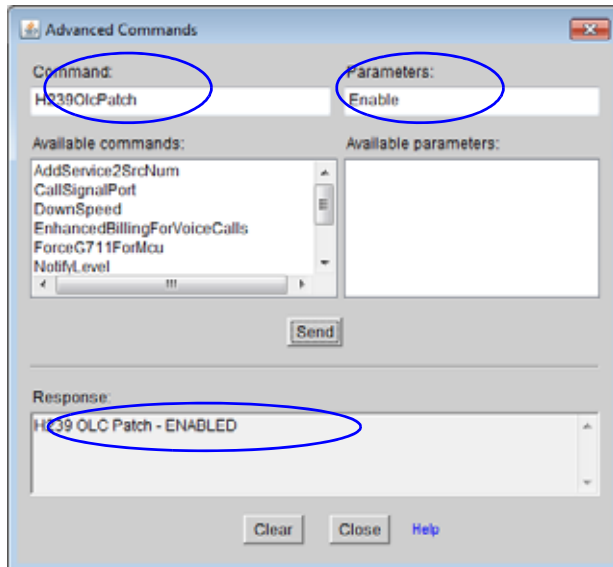

Suppression of DTMF Forwarding

Forwarding of the DTMF codes from one conference to another over an ISDN cascading link is not automatically suppressed as with IP cascading link and it can be limited to basic operations while suppressing all other operations by a system flag `DTMF_FORWARD_ANY_DIGIT_TIMER_SECONDS`.

System Flag Settings

The `DTMF_FORWARD_ANY_DIGIT_TIMER_SECONDS` flag determines the time period (in seconds) that MCU A will forward DTMF inputs from conference A participants to MCU B.

Once the timer expires, most of the DTMF codes (excluding five operations as for IP links) entered in conference A will not be forwarded to conference B. This is done to prevent an operation requested by a participant individually (for example, mute my line) to be applied to all the participants in conference B.

Flag range (in seconds): 0 - 360000

This flag is defined on MCU A (the calling MCU).

If a flag is not listed in the System Flags list it must be added to the `system.cfg` file before it can be modified. For more details on defining system flags, see [Modifying System Flags](#).

Star Cascading Topology

In the Star topology (as well as in the Basic topology), the MCUs are usually installed at different locations (states/countries) and participants connect to their local MCU to facilitate the connection and save long distance call costs. Star Topology Cascading requires that all cascaded MCUs reside on the same network.



Note: H.323 Cascaded Link Requirement

Although participants in Star Cascading conferences can connect to their local conference using IP (H.323, SIP, and ISDN), the Cascading Links between conferences must connect via H.323.

Content sharing is available to all conferences over the H.323 Cascading Link. Snatching content token between different Collaboration Servers is supported over an H.323 cascading link, provided all RealPresence Collaboration Servers are:

- Version 8.6 and up.
- Configured with **Exclusive Content Mode** set to off.
- The system flag **ENABLE_CONTENT_SNATCH_OVER_CASCADE** is set to **YES**.

Note that when a Master MCU is not in **Exclusive Content Mode**, another participant in the same MCU may snatch the content, even if the value of the **ENABLE_CONTENT_SNATCH_OVER_CASCADE** system flag is **NO**.

In this topology, the MCUs are networked together using two modes:

- Master-Slave Cascading
- Cascading via Entry Queue


Master-Slave Cascading

It is similar to MIH (Multi Hierarchy) cascading, with only two levels: one Master MCU on level 1 and several Slave MCUs on level 2.

The cascading hierarchy topology can extend to four levels ([MIH Cascade - a Sample 3-Level Cascading Configuration](#)) and should be deployed according to the following guidelines:

- If an RealPresence Collaboration Server is deployed on level 1:
 - RealPresence Collaboration Server systems can be used on level 2
 - MGC with version 9.0.4 can be used on level 2 if RealPresence Collaboration Server version 7.0.2 and higher is deployed in level 1
- If an MGC is deployed on level 1:
 - MGC or RealPresence Collaboration Server can be used on level 2.

Master-Slave Star Cascading Topology

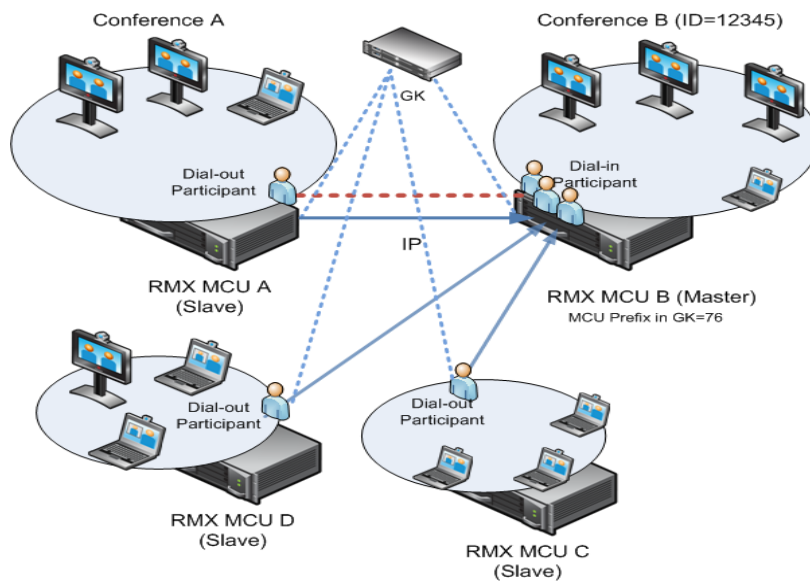

- When creating a cascading link between two RealPresence Collaboration Servers:
 - The RealPresence Collaboration Servers operate in CP (Continuous Presence) mode.
- When creating a cascading link between MGCs and RealPresence Collaboration Servers:
 - The MGCs can only operate in VSW mode.

The following table summarizes Video Session Modes line rate options that need to be selected for each conference in the cascading hierarchy according to the cascading topology:

MIH Cascading – Video Session Mode and Line Rate

Topology	MCU Type	Video Session Mode	Line Rate	Endpoint
Level 1	RealPresence Collaboration Server	CP - HD	1.5Mb/s, 1Mb/s, 2Mb/s	HDX
Level 2	RealPresence Collaboration Server			

MIH Cascading – Video Session Mode and Line Rate

Topology	MCU Type	Video Session Mode	Line Rate	Endpoint
Level 1	RealPresence Collaboration Server	CP - CIF	768Kb/s, 2Mb/s	VSX
Level 2	RealPresence Collaboration Server			
Level 1	MGC	CP - CIF 263	768Kb/s, 2Mb/s	HDX, VSX
Level 2	RealPresence Collaboration Server	CP - CIF 264		
Level 1	MGC	VSW - HD	1.5Mb/s	HDX
Level 2	RealPresence Collaboration Server	VSW - HD		

To establish the links between two RealPresence Collaboration Servers requires the following procedures be performed:

- Establish the Master-Slave relationships between the cascaded conferences by defining the dialing direction.
- Create the Master and Slave conferences, defining the appropriate line rate.
- Create a cascade-enabled Dial-out Participant link in the Master conference
- Create a cascade-enabled Dial-in Participant link in the Slave conference.

Creating a Cascade Enabled Dial-out/Dial-in Participant Link

The connection between two cascaded conferences is established by a cascade enabled dial-out and dial-in participants, acting as a cascades link.


The dialing direction determines whether the dial-out participant is defined in the conference running on the Master MCU or the Slave MCU. For example, if the dialing direction is from the Master conference on level 1 to the Slave conference on level 2, the dial-out participant is defined in the Master conference on level 1 and a dial-in participant is defined in the Slave conference running on the MCU on level 2.

If the cascade-enabled dial-out participant always connects to the same destination conference on the other (second) MCU, the participant properties can be saved in the Address Book of the MCU for future repeated use of the cascaded link.

To define the dial-out cascade participant link:

- 1 In the **Conferences** pane, select the conference.

- In the **Participants** pane, click **New Participant** (🌐).
The **New Participant - General** dialog box is displayed.

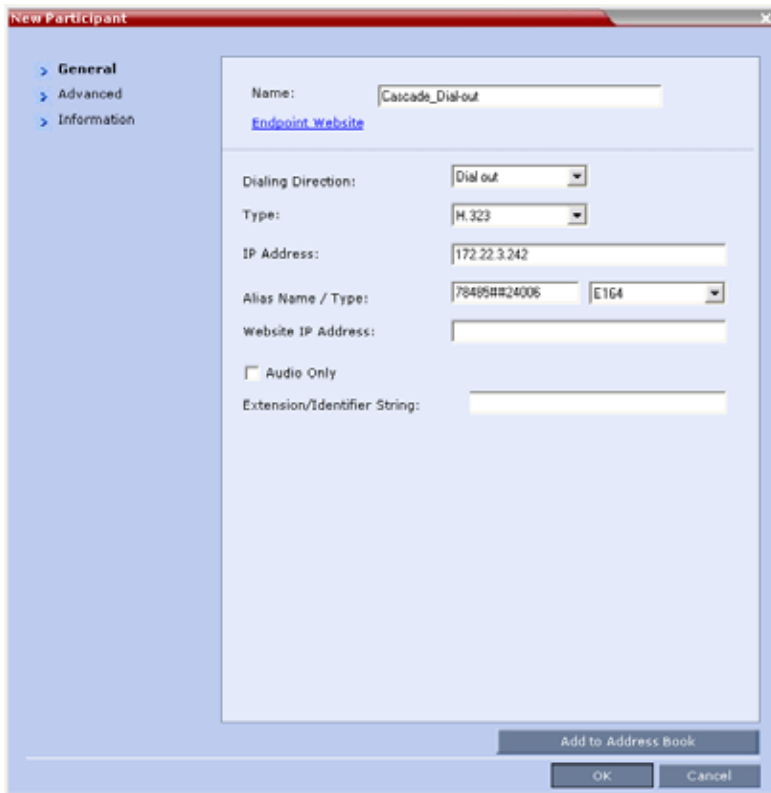

- Define the following parameters:


New Participant – Dial-out Cascade Link

Field	Description
Name	Enter the participant's name. This field may not be left blank. Duplicate participant names, comma, and semi-colon characters may not be used in this field.
Dialing Direction	Select Dial-out .
Type	Select H.323 .
IP Address	Enter the IP address of the Signaling Host of the MCU running the other (second) conference, where the cascade enabled Entry Queue is defined.

New Participant – Dial-out Cascade Link


Field	Description
Alias Name	<p>If you are using the target MCU IP address, enter the Conference ID of the target conference. For example: 24006</p> <p>If a gatekeeper is used, instead of the IP address, you can enter the prefix of the target MCU as registered with the gatekeeper, as part of the dialing string and the conference ID in the format: <Target MCU Prefix><Conference_ID> For example: 92524006</p> <p>If the conference has a password and you want to include the password in the dial string, append the password to in the dial string after the Conference ID. For example: 92524006##1234</p> <p>If the conference has a password and you do not want to include the password in the dial string, set the ENABLE_CASCADED_LINK_TO_JOIN_WITHOUT_PASSWORD flag to YES. For more information see Modifying System Flags.</p>
Alias Type	Select E.164 (digits 0-9, *, #).

4 Click the **Advanced** tab.

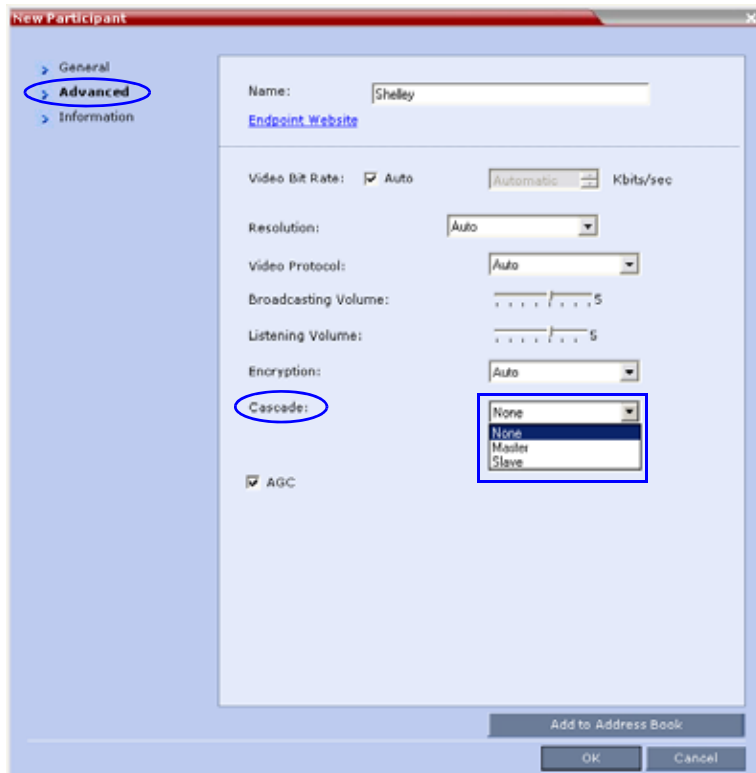

- 5 In the **Cascade** field, select:
 - **Slave** (if the participant is defined in a conference running on a Slave MCU).
 - **Master** (if the participant is defined in a conference running on the Master MCU).
- 6 Click **OK**.

To define a Dial-in Participant as the cascade link:

- 1 In the **Participants** list, click the **New Participant** button().
The **New Participant - General** dialog box opens.



- 2 Define the following parameters:

New Participant – Dial-in Cascade Link


Field	Description
Display Name	Enter the participant's name. This field may not be left blank. Duplicate participant names, comma, and semi-colon characters may not be used in this field.
Dialing Direction	Select Dial-in .
Type	Select H.323 .

New Participant – Dial-in Cascade Link (Continued)

Field	Description
IP Address	If a gatekeeper is used: This field is left empty. If a gatekeeper is not used: Enter the IP address of the Signaling Host of the MCU running the other conference.
Alias Name	If a gatekeeper is used: Enter the name of the other (second) conference. If a gatekeeper is not used: Enter the ID of the MCU running the other (second) conference.
Alias Type	If a gatekeeper is used: H.323 ID If a gatekeeper is not used: Select E.164 (digits 0-9, *, #).

3 Click the **Advanced** tab.

The **Advanced** dialog box opens.

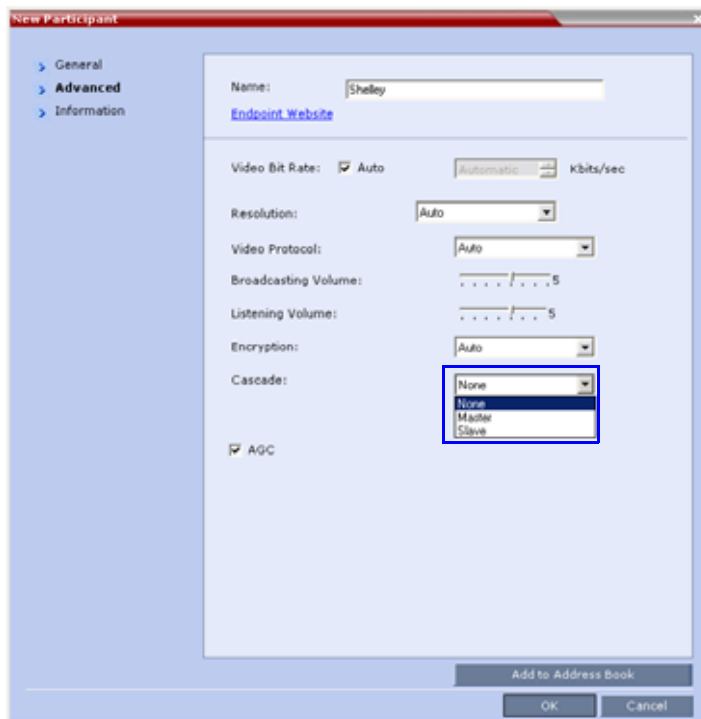**4** In the **Cascaded Link** field, select:

- **Slave**, if the participant is defined in a conference running on a Slave MCU.
- **Master**, if the participant is defined in a conference running on the Master MCU.

5 Click the **OK** button.

Cascading via Entry Queue

The link between the two conferences is created when a participant that is defined as a dial-out cascaded link in one conference (Conference A) connects to the second conference (Conference B) via a special cascaded Entry Queue (EQ). When MCU A dials out to the cascaded link to connect it to conference A, it actually dials out to the cascaded Entry Queue defined on MCU B.

Cascaded Conferences - Star Topology



Though the process of cascading conferences mentioned in this section refers to conferences running on two different RealPresence Collaboration Server units, it is possible to cascade conferences running between RealPresence Collaboration Server units and other MCUs.

The following features are not supported by the cascaded link and therefore are not supported in the combined conference:

- **DTMF** codes are enabled in cascaded conference, but only in their local conference. The operations executed via DTMF codes are not forwarded between linked conferences.
- **FECC** (Far End Camera Control) will only apply to conferences running in their local MCU).

Enabling Cascading

Cascading two conferences requires that the following procedures are implemented:

- Creating the cascade-enabled Entry Queue
A cascade-enabled Entry Queue must be created in the MCU hosting the destination conference (Conference B). The cascade-enabled Entry Queue is used to establish the dial-in link between the destination conference and the linked conference and bypassing standard Entry Queue, IVR prompt and video slide display.
- Creating a cascade-enabled Dial-out link
The creation of a cascade-enabled dial-out link (participant) in the linked conference (Conference A). This dial-out participant functions as the link between the two conferences.
- (Optional) Enabling the cascaded linked participant to connect to the linked conference (Conference A) without entering the conference password. This can be done by modifying the default settings of the relevant system flag.

Creating the Cascade-enabled Entry Queue




Note: Limitation on Cascade-Enabled Entry Queue

The cascade-enabled Entry Queue should be used only to connect cascaded links and should not be used to connect standard participants to conferences.

The cascade-enabled Entry Queue maintains the correct behavior of the cascaded link when it dials into it. When cascading High Definition (HD) conferences, the cascade-enabled Entry Queue must have the same settings as both cascaded conferences and the participants in both conferences must use the same line rate and HD capabilities as set for the conferences and Entry Queue.

To Define a Cascade-Enabled Entry Queue:

- 1 In the **RealPresence Collaboration Server Management** pane, click the **Entry Queues** button. The **Entry Queues** list pane is displayed.
- 2 Click the **New Entry Queue**  button. The **New Entry Queue** dialog box is displayed.
- 3 Define the standard Entry Queue parameters (as described in [Defining a New Entry Queue](#)).
- 4 In the **Cascade** field, select **Master** or **Slave** depending on the Master/Slave relationship.
 - Set this field to **Master** if the Entry Queue is defined on the MCU that is at the center of the topology and other conferences dial into it (acting as the Master).
 - Set this field to **Slave** if the Entry Queue is defined on the MCU acting as a Slave, that is, to which the link from the Master MCU (MCU at the center of the topology) is dialing.

If you are defining an HD cascaded Entry Queue, it is recommended to select the same Profile that is selected for both conferences.


- 5 Click **OK**.

The new Entry Queue enabling cascading is created.


Creating the Dial-out Cascaded Link

The dial-out link (participant) is created or added in the linked conference (Conference A). The dial-out string defined for the participant is the dialing string required to connect to the destination conference (Conference B) Entry Queue defined on the MCU hosting the destination cascaded conference. The dial-out participant can be defined in the Address Book and added to the conference whenever using the same cascade-enabled Entry Queue and a destination conference (with the same ID and Password).

To define the Dial-out Cascaded Link:

- 1 Display the list of participants in the linked conference (Conference A).
- 2 In the **Participant List** pane, click the **New Participant**  button.

The **New Participant - General** dialog box is displayed.



- 3 In the **Name** field, enter a participant name.
- 4 In the **Dialing Direction** field, select **Dial-out**.
- 5 In the **Type** list field, verify that **H.323** is selected.
- 6 There are two methods to define the dialing string:
 - a Using the MCU's IP Address and the Alias string - see [Method A](#).

b Using only the Alias string (requires a gatekeeper) - see [Method B](#).

Method A

In this method no gatekeeper is used.

In the **IP Address** field, enter the IP address of the **Signaling Host** of the MCU hosting the destination conference (in the example, MCU B).

In the **Alias Name/Type** field, enter the ID of the cascade-enabled Entry Queue (EQ), the Conference ID and Password of the destination conference (MCU B) as follows:

<EQ ID>#<Destination Conference ID>#<Password> (Password is optional).

For Example: 78485#24006#1234




Method B

In this method a gatekeeper is used:

In the **Alias Name** field, enter the Prefix of MCU B, EQ ID, Destination Conference ID, and Password, as follows:

<MCU Prefix EQ ID>#<Conference ID>#<Password> (Password is optional)

For Example: 92578485#24006#1234

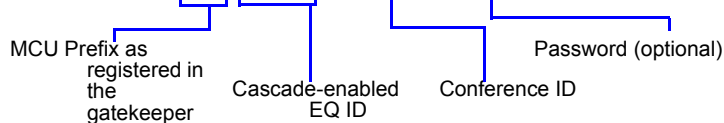

7 Click the **Advanced** tab.

8 In the **Cascade** field, select:

- **Slave**, if the participant is defined in a conference running on a Slave MCU and will connect to the Master MCU (in the center of the topology).
- **Master**, if the participant is defined in a conference running on the Master MCU (in the center of the topology) dialing from the Master MCU to the Slave MCU.



9 Click **OK**.

The cascade-enabled dial-out link is created and the system automatically dials out to connect the participant to the linked conference, as well as the destination conference.

Enabling Cascaded Conferences without Password

If a password is assigned to the linked conference, cascaded links will be prompted for a password when connecting to it (Conference A). Administrators have the option of altering the MCU settings to enable cascaded links to connect without a password.

To enable cascaded links to connect without a password:


- 1 In the RealPresence Collaboration Server web client connected to MCU A (where the linked conference is running), click **Setup >System Configuration**.
The **System Flags** dialog box opens.
- 2 Set the **ENABLE_CASCADED_LINK_TO_JOIN_WITHOUT_PASSWORD** flag to **YES**.
- 3 Click **OK**.

For more information, see [Modifying System Flags](#).

Reset the MCU for flag changes to take effect.

Monitoring Star Cascaded Conferences


To monitor both conferences at the same time, two instances of the RealPresence Collaboration Server Web Clients must be opened (one for each MCU) by entering the IP Address of each MCU. If both conferences are running on the same MCU, only one RealPresence Collaboration Server Web Client window is required.

When conferences are cascaded, the Participant List pane of each of the two conferences will display a linked icon (); a dial-in linked icon in the destination conference (Conference B) and a dial-out linked icon in the linked conference (Conference A).

The Conferences List panes in each of the two conferences will display a cascaded conference icon (🔗) indicating that a conference running on the MCU is presently cascading with another conference running on the same or another MCU. The cascaded conference icon will be displayed for a short period of time and then disappear.

Conference A (Linked Conference)

Dial-out Linked Participant

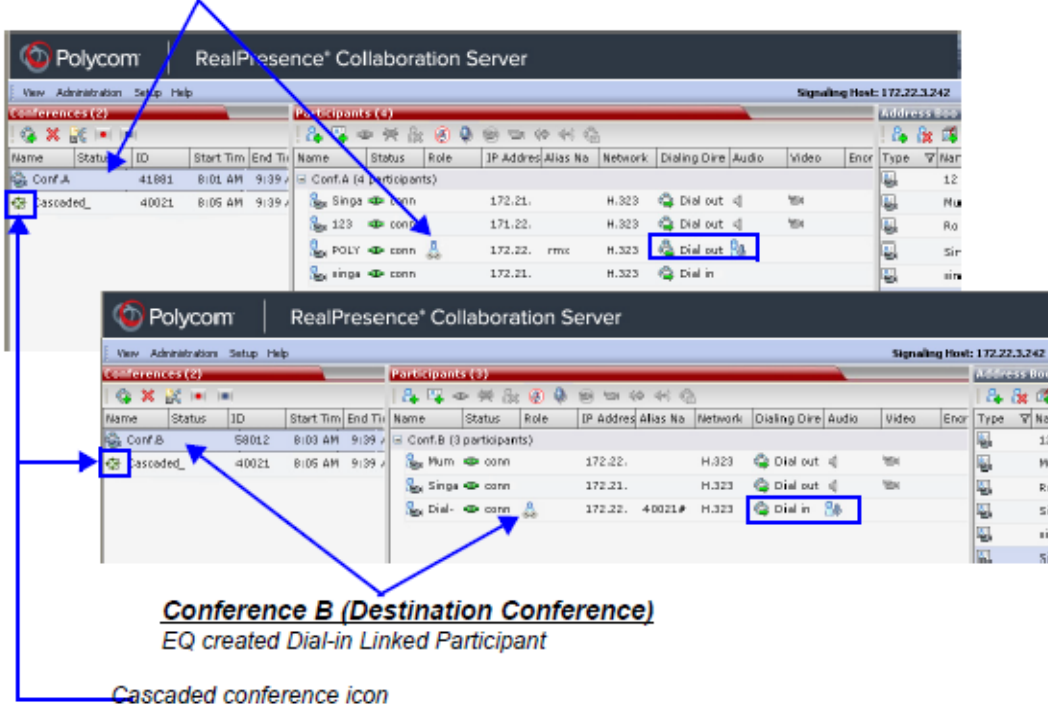

Conference B (Destination Conference)

EQ created Dial-in Linked Participant

Creating the Dial-out Link from a Conference Running on the MGC to the Conference Running on the RealPresence Collaboration Server

In the same way that the dial-out cascaded link is created in the RealPresence Collaboration Server, you can create a dial-out participant in the MGC.

In the MGC Manager application, define a new participant as follows:

- 1 In the **Participant Properties** dialog box, enter a **Participant Name**, select **Dial-out** and **H.323**.
- 2 Define the **dialing string** as described in step 6 in the procedure for defining the dial-out cascaded link.

- 3 In the **Advanced** tab, in the **Node Type** field, select **MCU**.

The image shows two screenshots of the 'Default Participant Properties' dialog box. The left screenshot shows the 'Identification' tab with fields for Name, Connection Type, Interface Type, Participant IP, Signaling Port, Alias Name, Alias Type, Extension/Identifier, and four User Defined fields. The right screenshot shows the 'Advanced' tab with fields for Video Bit Rate, Service Name, Video Protocol, Recording, Encryption, Node Type (set to MCU), and checkboxes for Enhanced Video and Enable PSTN Dial-in.

- 4 Click **OK**.

Cascading Conferences - H.239-enabled MIH Topology



Note: Cascading Topology Applicability for Platform

MIH cascading topology is not applicable for Collaboration Server Virtual Edition.

H.239 Multi-Hierarchy (MIH) cascading is available to RealPresence Collaboration Server users enabling them to run very large conferences on different MCUs in multiple levels of Master-Slave relationships using an H.323 connection.

Multi-Hierarchy (MIH) Cascading is implemented where the cascaded MCUs reside on different networks, whereas Star Topology Cascading requires that all cascaded MCUs reside on the same network.

MIH Cascading allows:

- Opening and using a content channel (H.239) during conferences.
- Full management of extremely large, distributed conferences.
- Connecting conferences on different MCUs at different sites.

- Utilizing the connection abilities of different MCUs, for example, different communication protocols, such as, serial connections, ISDN, etc.
- Significant call cost savings to be realized by having participants call local MCUs which in turn call remote MCUs, long distance.




Note: H.323 Cascading Link Requirement

Although participants in MIH Cascading conferences can connect using IP (H.323, SIP) and ISDN, the MIH Cascading Links must connect via H.323.

MIH Cascading Levels

The cascading hierarchy topology can extend to up to four levels (as shown below), where the most common configuration includes up to three levels.

MIH Cascade - a Sample 3-Level Cascading Configuration

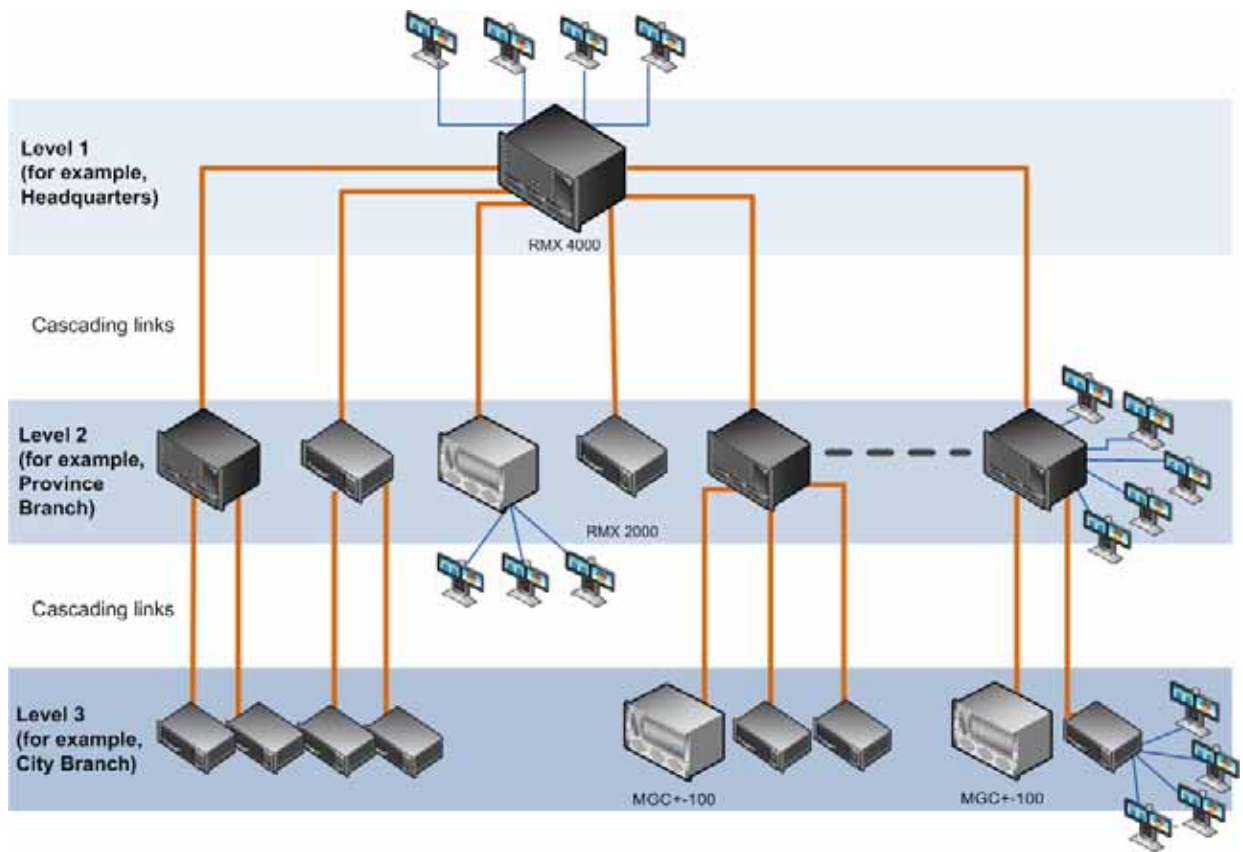


Cascading Topologies

The cascading hierarchy topology should be deployed according to the following guidelines:

- If an RMX is deployed on level 1 (recommended deployment):
 - Any RMX can be used on level 2, 3 and 4 (recommended deployment),
 - MGC version 9.0.4 can be used on level 2 and level 3,

- DST MCS 4000 and other MCUs can be deployed on levels 3 and 4.
- If an MGC is deployed on level 1:
 - MGC or RMX can be used on level 2.
 - DST MCS 4000 and other MCUs can be deployed on levels 3 and 4.
- DST MCS 4000 MCUs connect as endpoints to the RMXs or MGCs on higher levels.

MIH Cascade Levels

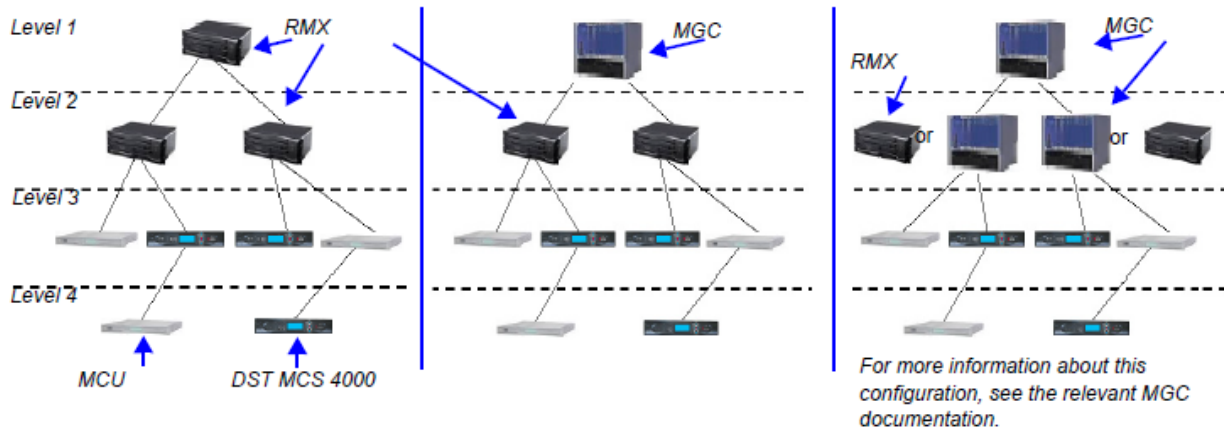


MIH Cascading Guidelines in CP Licensing

Master - Slave Conferences

- It is recommended to have RMX systems at all levels to leverage the high quality video and content offered by the RMX.
- In MIH Cascading conferences, although there are multiple levels of Master and Slave relationships between conferences, the conference that runs on the MCU on level 1 of the hierarchy must be the Master for the entire cascading session. When an MGC is part of the cascading topology, it can be configured at any level if MGC Version 9.0.4 is installed, otherwise, it must be set as Level 1 MCU.
- Conferences running on MCUs on levels 2 and 3 and can be both Masters and Slaves to conferences running on MCUs on levels above and below them.
- All conferences running on MCUs on the lowest level in the configuration (for example, level 3 in a 3-level hierarchy configuration) are Slave conferences.
- When the DST MCS 4000 is on level 3 and acting as slave to level 2, the RMX on level 2 must dial out to it in order for the DST MCS 4000 to be identified as slave. The link between the two MCU (dial out participant) is defined as a standard participant and not as a cascading link.

MIH Cascading – Master-Slave Relationship

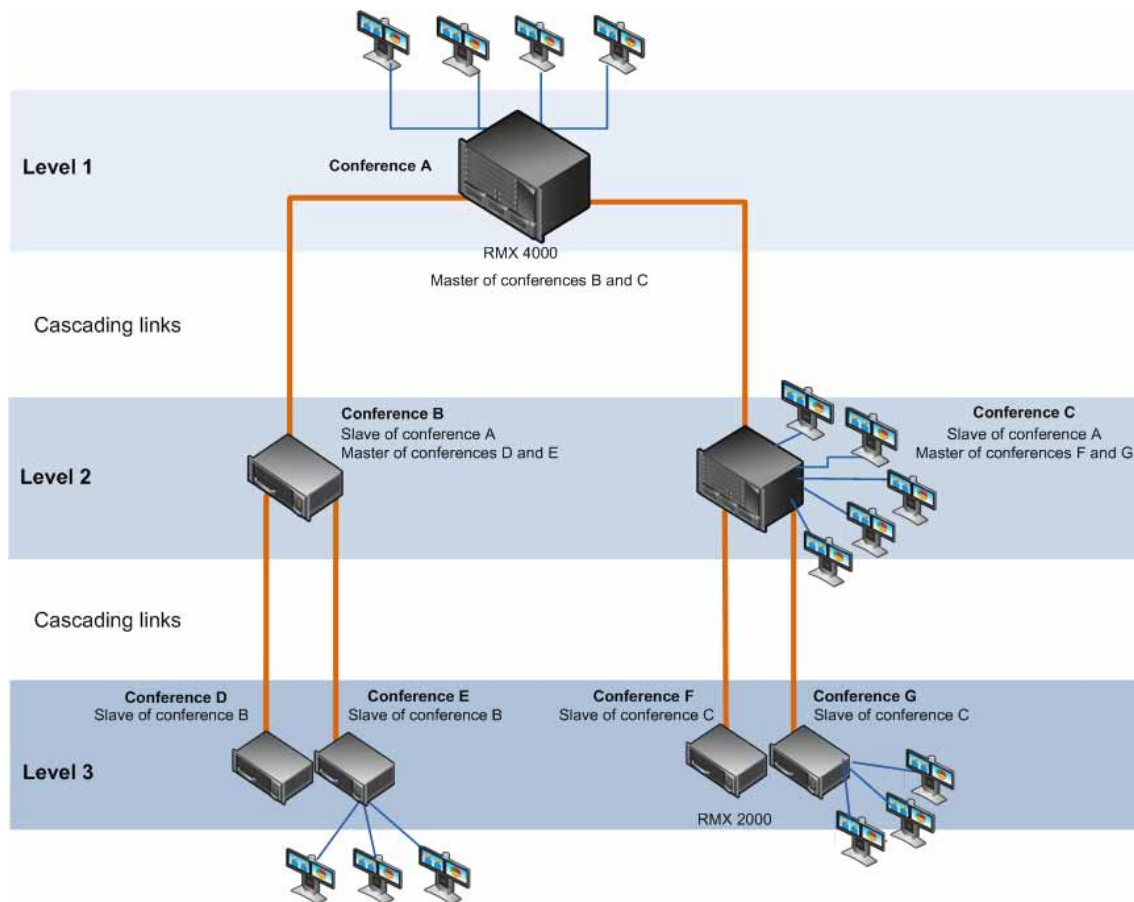

Video Session Mode, Line Rate and Video Settings

The types of MCUs, their position in the cascade topology and the endpoint capabilities (HD/CIF and H.263/H.264) determine the Video Session Type of the MIH Cascading conference.

- When creating a cascading link between two RMXs:
 - The RMXs operate in CP (Continuous Presence) mode.
 - DTMF codes should be defined with the same numeric codes in the IVR services assigned to the cascading conferences.
- When creating a cascading link between MGCs and RMXs:
 - If there are no MGCs on level 2, the MGCs can operate in either in CP or VSW (Video Switching) mode.
 - If there are MGCs on level 2, the MGCs can only operate in VSW mode.
 - MGC does not support H.264 High Profile, therefore when MGC is part of the Cascading topology, do not select High Profile on the RMX system.
 - DTMF codes should be defined with the same numeric codes in the IVR services assigned to the cascading conferences.

- When creating a cascading link between two MGCs the MGCs must be configured to operate in VSW mode.

For more details about the MGC to MGC connection, see the *MGC Manager User's Guide, Volume II, Chapter 1, Ad Hoc Auto Cascading and Cascading Links*.

- To enable the connection of the links between cascaded conferences, they must run at the same line rate.
- To enable Content sharing between the RMX and the MGC, the rate allocated to the content must be identical in both conferences. Make sure that the line rate set for both conferences, and the Content Settings (Graphics, Hi-res Graphics or Live video) are selected correctly to ensure the compatible rate allocation. For more details on the RMX rate allocation to the Content channel, see [SIP BFCP Content Capabilities](#).


The following table summarizes Video Session Modes line rate options that need to be selected for each conference in the cascading hierarchy according to the cascading topology:

MIH Cascading – Video Session Mode and Line Rate

Topology	MCU Type	Video Session Type	Line Rate
Level 1	RMX	CP - HD	1.5Mb/s, 1Mb/s, 2Mb/s
Level 2	RMX		
Level 1	RMX	CP - CIF	768Kb/s, 2Mb/s
Level 2	RMX		
Level 1	RMX	CP	768Kb/s, 2Mb/s
Level 2	MGC	CP or VSW	
Level 1	MGC	CP - CIF 263	768 kb/s, 2Mb/s
Level 2	RMX	CP - CIF 264	
Level 1	MGC	VSW - HD	1.5Mb/s
Level 2	RMX	VSW HD	
Level 2	RMX	CP - HD	1.5Mb/s, 1Mb/s, 2Mb/s
Level 3	RMX		
Level 2	MGC	VSW*	384 kbps, 768 kbps
Level 3	MGC		
Level 2	RMX	CP/VSW -HD	1.5Mb/s, 1Mb/s, 2Mb/s
Level 3	MCS 4000		
Level 2	RMX	CP - CIF	768kb/s, 2Mb/s
Level 3	MCS 4000		

* When MGC is on Level 3, Content cannot be shared between Level 2 and Level 3.

MGC to RealPresence Collaboration Server Cascading

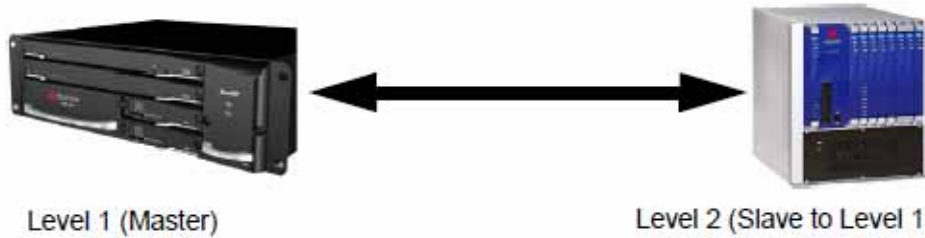

If MGC is running version 9.0.4, and RealPresence Collaboration Server is running version 7.0.2 and higher, the RealPresence Collaboration Server can be set as Master on level 1 and MGC as Slave on level 2.

MGC running versions other than 9.0.4 is always on level 1 and must be set as the Master MCU.

If the cascading topology includes additional MGCs as well as RealPresence Collaboration Servers it is recommended to define Video Switching conferences for all the cascading conferences running on the MGC in the topology.

Two methods can be used to create the Cascading links between conferences running on the RealPresence Collaboration Server and MGC:

- **Method I** - Establish the links by defining a dial-in and a dial-out participant in the Slave and Master conference (where the Master conference is created on the MCU on Level 1 and the Slave conference is created on the MCU on Level 2).
- **Method II** - Using a Cascading Entry Queue on either the MGC or the RealPresence Collaboration Server depending on the dialing direction and the MCU Level. This is recommended when the RealPresence Collaboration Server is on Level 1.

Method I

Depending on the dialing direction, the following procedures must be performed:

Set up Procedures according to the Dialing Direction

Dialing Direction	RealPresence Collaboration Server - Level 1	MGC - Level 2
MGC to RealPresence Collaboration Server	<p>Set the appropriate flags (done once only).</p> <hr/> <p>Define the conference setting and its line rate to be the same as the one set on the RealPresence Collaboration Server.</p> <hr/> <p>Define the dial-in participant (Cascaded Link) with the calling number from the MGC.</p> <p>The alias that will be used to identify the dial-in participant can be the name of the calling slave conference.</p> <p>Set the Cascading option as Master.</p>	<p>Set the appropriate flags (done once only).</p> <hr/> <p>Define the conference setting and its line rate to be the same as the one set on the MGC.</p> <hr/> <p>Define the dial-out participant (Cascaded Link) to the conference running on the RealPresence Collaboration Server. Set the dial-out alias to be the prefix of the MCU and the name of the master conference running on the RealPresence Collaboration Server.</p>

Set up Procedures according to the Dialing Direction

Dialing Direction	RealPresence Collaboration Server - Level 1	MGC - Level 2
RealPresence Collaboration Server to MGC	Set the appropriate flags (done once only)	Set the appropriate flags (done once only)
	Define the conference setting and its line rate to be the same as the one set on the RealPresence Collaboration Server.	Define the conference setting and its line rate to be the same as the one set on the MGC.
	Define the dial-out participant (Cascaded Link). Set the dial-out alias to be the prefix of the MGC and the name of the slave conference running on the MGC. Set the Cascading option as Master.	Define the dial-in participant (Cascaded Link) to the conference running on the RealPresence Collaboration Server. The alias that will be used to identify the dial-in participant can be the name of the calling slave conference.

For details on the participant definition on the RealPresence Collaboration Server, see [Creating a Cascade Enabled Dial-out/Dial-in Participant Link](#).

For a detailed description of the participant definition in the MGC, see the *MGC Manager User’s Guide, Volume II, Chapter 1, Cascading Conferences*.



Note: Content Sharing between MGC and Collaboration Server

To enable Content sharing between the Collaboration Server and the MGC, the rate allocated to the content must be identical in both conferences. Make sure that the line rate set for both conferences, and the Content Settings (Graphics, Hi-res Graphics or Live video) are selected correctly to ensure the compatible rate allocation. For more details on the Collaboration Server rate allocation to the Content channel, see [SIP BFCP Content Capabilities](#).

Method II

Depending on the dialing direction, the following procedures must be performed:

Set up Procedures according to the Dialing Direction

Dialing Direction	MGC Level 1	RealPresence Collaboration Server (RMX) 1800/2000/4000 Level 2
MGC to RealPresence Collaboration Server	Set the appropriate flags (done once only).	Set the appropriate flags (done once only).
	Define the conference setting and its line rate to be the same as the one set on the RealPresence Collaboration Server.	Define the cascade-enabled Entry Queue, setting it as Slave .
	Define the dial-out participant (Cascaded Link) to the conference running on the RealPresence Collaboration Server.	Define the conference setting and its line rate to be the same as the one set on the MGC.

Set up Procedures according to the Dialing Direction

Dialing Direction	MGC Level 1	RealPresence Collaboration Server (RMX) 1800/2000/4000 Level 2
RealPresence Collaboration Server to MGC	Set the appropriate flags (done once only)	Set the appropriate flags (done once only)
	Define the cascade-enabled Entry Queue.	
	Define the conference setting and its line rate to be the same as the one set on the RealPresence Collaboration Server.	Define the conference setting and its line rate to be the same as the one set on the MGC.
		Define the dial-out participant (Cascaded Link) to the conference running on the MGC, setting the participant Cascade parameter to Slave .

Setting Flags on the RealPresence Collaboration Server

When running conferences in mixed environment (RealPresence Collaboration Server and MGC) there may be small differences between the line rates each MCU is sending. In the RealPresence Collaboration Server, several flags must be set to ensure that these differences will not cause the cascaded link to connect as Secondary and that Content flows correctly between the cascaded conferences. This procedure is performed once per RealPresence Collaboration Server.

To modify the flags:

- 1 In the RealPresence Collaboration Server Web Client menu, click **Setup > System Configuration**.
- 2 In the **System Flags** dialog box, add the following new flags and values:

➤ **MIX_LINK_ENVIRONMENT=YES**

Setting this flag to YES will adjust the line rate of HD Video Switching conferences run on the RealPresence Collaboration Server 1800 from 1920Kbps to 18432 Kbps to match the actual rate of the HD Video Switching conference running on the MGC. In such case, the conference can include IP and ISDN participants.

➤ **IP_ENVIRONMENT_LINK=NO**



Note: Required System Flags Settings

The values (YES/NO) of the **MIX_LINK_ENVIRONMENT** and **IP_LINK_ENVIRONMENT** system flags should be opposite.

➤ **H263_ANNEX_T=YES** (default)

This flag enables/disables the use of Annex T with H263. Set it to **NO** if the endpoints connecting to the conference do not support this mode. In such a case, you must also change the MGC flag **ENABLE_H239_ANNEX_T** setting to **NO**.

➤ **FORCE_1X1_LAYOUT_ON_CASCADED_LINK_CONNECTION=YES** (default).

Set this flag to **NO** If the MGC is functioning as a Gateway and participant layouts on the other network are not to be forced to 1X1.

- 3 If the MGC is dialing the RealPresence Collaboration Server and the cascaded link connects to the conference via the Cascade-enabled Entry Queue without being prompted for the conference password, set the flag to **YES** as follows:
ENABLE_CASCADED_LINK_TO_JOIN_WITHOUT_PASSWORD=YES
- 4 Click **OK**.
- 5 Reset the MCU to apply the changes.

Setting Flags in the MGC

Flag setting is required to ensure the correct MCU behavior for cascading conferences. It is performed once per MCU.

To modify the flags:

- 1 In the MGC Manager, right-click the **MCU icon** and then select **MCU Utils > Edit "system.cfg"**.
- 2 In the **H264 Section**, ensure that the following flags are set to:
 - **ENABLE_HD_SD_IN_FIXED_MODE=YES**
Setting this flag to YES enables H.264 Standard Definition (SD), High Definition (HD) and VSX 8000 (Version 8.0) support in Video Switching conferences.
 - **H264_VSW_AUTO=NO**
Setting this flag to NO disables the highest common mechanism in H.264 and enables the selection of H.264 Video Protocol in fixed mode in Dual Stream Video Switching cascading conferences.
 - **ENABLE_H239_ANNEX_T=YES**
This flag should be set to the same value (**YES/NO**) as the settings of the RealPresence Collaboration Server flag **H263_ANNEX_T**.



Note: MIH Cascading with MGC Requirement

To use MIH Cascade in the MGC, the Conference Numeric ID routing mode must be used. It is determined when the **system.cfg** flag in the **GREET AND GUIDE/IVR** section is set to **QUICK_LOGIN_VIA_ENTRY_QUEUE=NO**.

- 3 Click **OK**.
- 4 If you changed the flags, reset the MCU.


Method II - Defining the Cascading Entry Queue in the MGC

The Entry Queue definition on the MGC is required if the dialing is done from the RealPresence Collaboration Server to the MGC.

To define the Cascading Entry Queue in the MGC:

- 1 In the MGC Manager, expand the MCU tree.
- 2 Right-click the **Meeting Rooms, Entry Queues and SIP Factories** icon and click **New Entry Queue**.

- 3 In the **New Entry Queue** dialog box, set the Entry Queue parameters and select the **Cascade** check box.

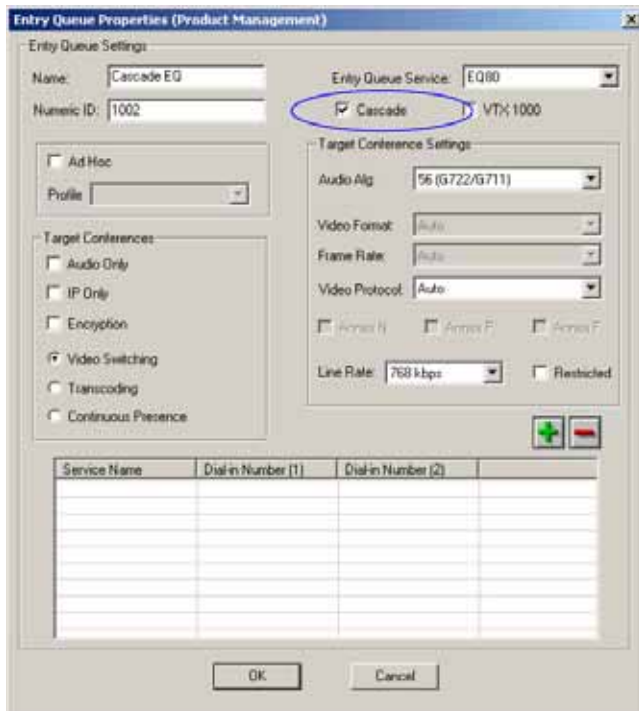

For more details on the definition of new Entry Queues refer to the *MGC Manager User's Guide, Volume II, Chapter 1, Ad Hoc Auto Cascading and Cascading Links*.

- 4 Click **OK**.

Creating the Dial-out Link between the Conference Running on the MGC and the Conference Running on the RealPresence Collaboration Server

If the dialing is done from the MGC to the RealPresence Collaboration Server, you need to define the cascaded link (dial-out participant) in the conference running on the MGC.

The dial-out string defined for the participant is the dialing string required to connect to the destination conference via the Cascade-enabled Entry Queue defined on the RealPresence Collaboration Server hosting the destination cascaded conference. The dial-out participant can be defined on the MGC as template or assigned to the Meeting Room.

In the MGC Manager application, define a new participant as follows:

- 1 In the **Participant Properties - Identification** dialog box, enter a **Participant Name**
- 2 In the **Connection Type** field, select **Dial-out**.
- 3 In the **Interface Type** list field, select **H.323**.
- 4 There are two methods to define the dialing string to the other conference:
 - a Using the MCU's IP Address and the Alias string - [Method A](#)

b Using only the Alias string (requires a gatekeeper) - [Method B](#)

Method A

This method does not use any gatekeepers.

In the **IP Address** field, enter the IP address of the **Signaling Host** of the RealPresence Collaboration Server hosting the destination conference.

In the **Alias Name/Type** field, enter the ID of the cascade-enabled Entry Queue (EQ), the Conference ID and Password of the destination conference as follows:

<EQ ID>##<Destination Conference ID>##<Password> (Password is optional).

For Example: 1002##12001##1234

Method B


This method uses a gatekeeper.

In the **Alias Name** field, enter the Prefix of MCU B, EQ ID, Destination Conference ID, and Password, as follows:

<MCU Prefix EQ ID>##<Conference ID>##<Password> (Password is optional)

For Example: 9251002##12001##1234


- 5 Click the **Advanced** tab and in the **Node Type** field, select **Terminal**.

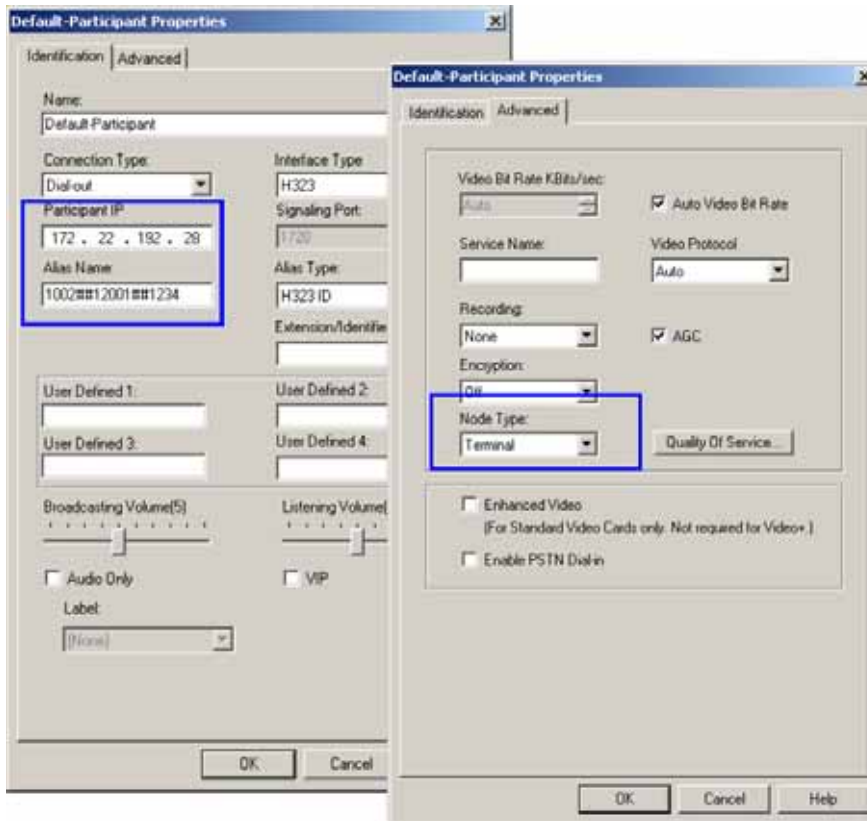

6 Click **OK**.

Defining the Cascade Enabled Entry Queue on the RealPresence Collaboration Server

If the dialing is done from the conference running on the MGC that is the Master MCU, a Cascade-enabled Entry Queue must be defined on the RealPresence Collaboration Server setting it as Slave.

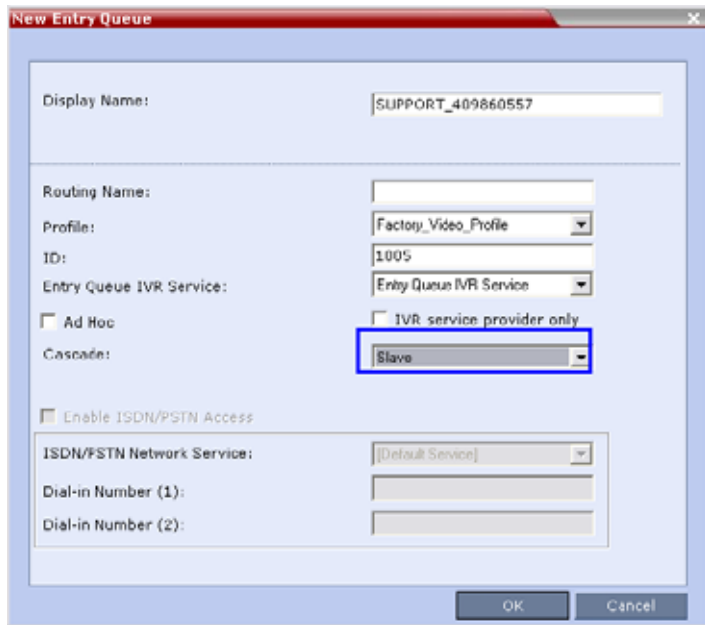

For more details, see [MGC to RealPresence Collaboration Server Cascading](#).

Defining the Cascading Conferences

The table below lists the line rates and the video settings that should be used when defining the conferences on the MGC. The same line rates should be selected when defining the Conference Profiles on the RealPresence Collaboration Server, as well as whether the conference is HD Video Switching. However, the video settings will be automatically selected by the system.

Recommended Conference Line Rates for Cascaded Conferences

Topology	Video Session Mode	Conference Line Rate
MGC	MGC - CIF 263	768Kb/s, 2Mb/s
↓	RealPresence Collaboration Server - CIF 264 CP	
RealPresence Collaboration Server	MGC - HD VSW	1.5Mb/s
	RealPresence Collaboration Server - HD VSW	


In addition, the conference running on the MGC should be set as Meet Me Per Conference and select the H.239 option in the Dual Stream Mode field. For more details on conference definition on the MGC, refer to the *MGC Manager User's Guide, Volume I, Chapter 5*.


Defining the Dial-out Participant on the RealPresence Collaboration Server

If the dialing is done from a conference running on the RealPresence Collaboration Server to the conference running on the MGC, the dial-out participant is defined in the conference running on the RealPresence

Collaboration Server, setting the Cascade field to Slave. This participant dials the Cascade-enabled Entry Queue defined on the MGC.

To define the Dial-out Participant:

- 1 Display the list of participants in the linked conference (Slave conference).
- 2 In the **Participant List** pane, click the **New Participant** () button.
The **New Participant - General** dialog box is displayed.

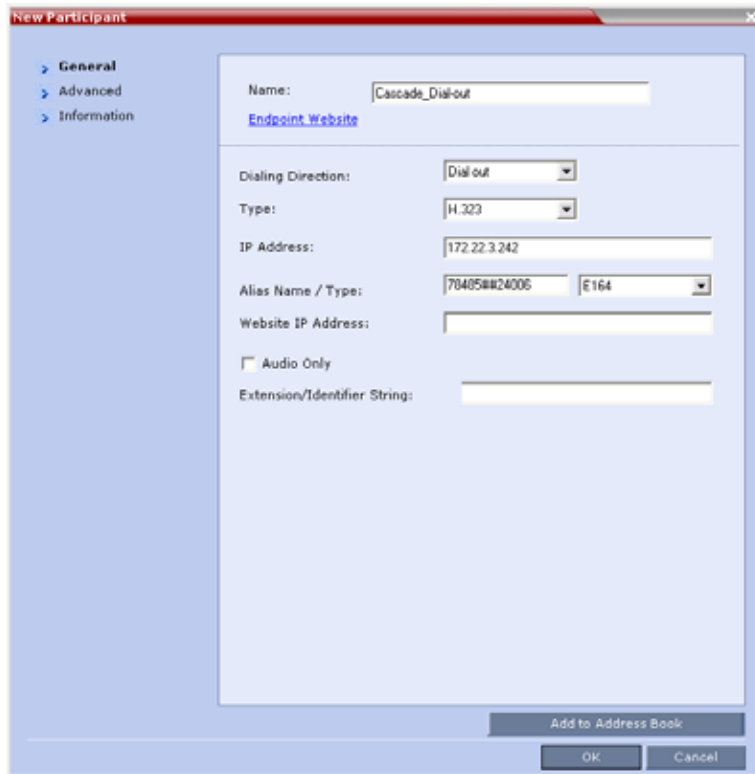

The screenshot shows the 'New Participant' dialog box with the following fields and values:

- Name:** Cascade_Dial-out
- Dialing Direction:** Dial-out
- Type:** H.323
- IP Address:** 172.22.3.242
- Alias Name / Type:** 70405##24006 (Type: E164)
- Website IP Address:** (empty)
- Audio Only:**
- Extension/Identifier String:** (empty)

- 3 In the **Name** field, enter a participant name.
- 4 In the **Dialing Direction** field, select **Dial-out**.
- 5 In the **Type** list field, verify that **H.323** is selected.
- 6 There are two methods to define the dialing string:
 - a Using the MCU's IP Address and the Alias string - [Method A](#)

b Using only the Alias string (requires a gatekeeper) - [Method B](#)

Method A


This method does not use a gatekeeper.

In the **IP Address** field, enter the IP address of the MGC hosting the destination conference (Master conference).

In the **Alias Name/Type** field, enter the ID of the cascade-enabled Entry Queue (EQ), the Conference ID and Password of the destination conference (Master Conference) as follows:

<EQ ID>##<Destination Conference ID>##<Password> (Password is optional).

For Example: 1005##20006##1234




Method B

This method uses a gatekeeper.


In the **Alias Name** field, enter the MGC Prefix as registered in the gatekeeper, EQ ID, Destination Conference ID, and Password, as follows:

<MGC Prefix EQ ID>##<Conference ID>##<Password> (Password is optional)

For Example: 9251005##20006##1234

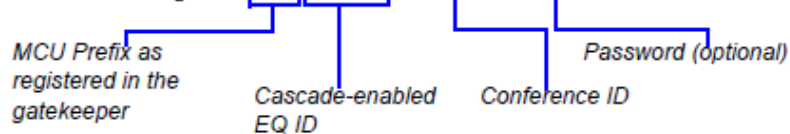

- 7 Click the **Advanced** tab and in the **Cascade** field, select the **Slave** option.

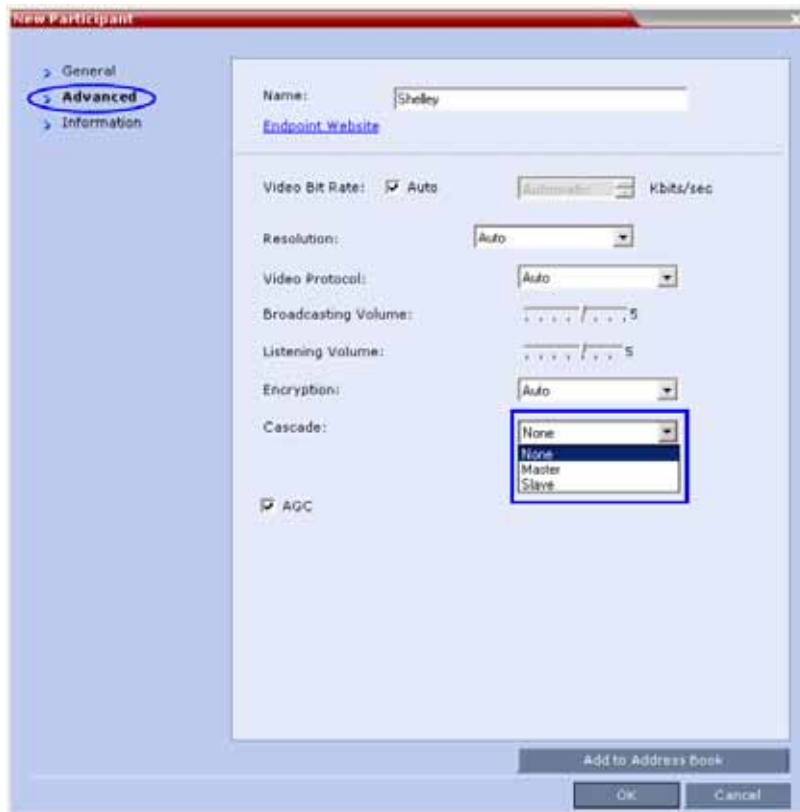

8 Click **OK**.

The cascade-enabled dial-out link is created and the system automatically dials out to connect the participant to the local conference, as well as the destination conference on the MGC.

Meeting Rooms

A Meeting Room is a conference saved on the MCU in passive mode, without using any of the system resources. A Meeting Room is automatically activated when the first participant dials into it. Meeting Rooms can be activated as many times as required. Once activated, a Meeting Room functions as any ongoing conference.

The conferencing Mode of the Meeting Room is determined by the Profile assigned to it.

In SVC Conferencing Mode, dial-in is available as follows:

- AVC-capable endpoints (participants) can only connect to an AVC CP Meeting Room. When dialing into SVC Only Meeting Room the calls fail.
- SVC-capable endpoints support both AVC and SVC video protocols. When dialing into SVC Only conferences, they connect as SVC endpoints. When dialing into AVC CP Only conferences, they connect as AVC endpoints.
- Both AVC and SVC endpoints can connect to a mixed CP and SVC conference.

In AVC Conferencing Mode, ISDN/PSTN participants can dial-in directly to a Meeting Room without connection through an Entry Queue. Up to two numbers can be defined per conference provided that they are from the same ISDN/PSTN Network Service. When a dial-in number is allocated to a Meeting Room, the number cannot be deleted nor can the ISDN/PSTN Network Service be removed. The dial-in number must be communicated to the ISDN or PSTN dial-in participants.

In AVC CP Conferences, dial-out participants can be connected to the conference automatically, or manually. In the automatic mode the system calls all the participants one after the other. In the manual mode, the Collaboration Server user or meeting organizer instructs the conferencing system to call the participant. Dial-out participants must be defined (mainly their name and telephone number) and added to the conference. This mode can only be selected at the conference/Meeting Room definition stage and cannot be changed once the conference is ongoing.

A Meeting Room can be designated as a Permanent Conference.

The system is shipped with four default Meeting Rooms:

Default Meeting Rooms List

Meeting Room Name	ID	Default Line Rate
Maple_Room	1001	384 Kbps
Oak_Room	1002	384 Kbps
Juniper_Room	1003	384 Kbps
Fig_Room	1004	384 Kbps



Note: Resource Capacities and Operational Specifications

For information about Resource Capacities and other operational specifications, see the **RealPresence® Collaboration Server (RMX) Hardware Guide** specific to your system.

Use Time Out as DTMF Delimiter

Users are able to change the behavior of the policy of number collection for VMR Entry Queues, Conference-IDs and Passwords, allowing a time-out to be used as a stop indicator for the input string.

In previous versions, a # input at the end of the input string indicated completion of the input.

The administrator can configure the system, using the `ENABLE_DTMF_NUMBER_WO_DELIMITER` system flag to change the previous system behavior, allowing a time-out to be used as a stop indicator for the string input for the local IVR, when the MCU collects the Conference-ID in the local Entry Queue or the Password (chairperson or participant) while routed to the conference.

The flag must be manually added to the System Configuration and its value modified as follows:

Flag Name	Value / Description	
	YES	NO
<code>ENABLE_DTMF_NUMBER_WO_DELIMITER</code>	<p>If the timer expires, the received digits validated even if there is no delimiter.</p> <p>If the received number is not valid, the system will prompt again for the number according to number of retries. that are configured.</p>	<p>This is the default setting for backward compatibility.</p> <p>If the timer expires because no delimiter is received, the number input is not valid.</p> <p>The system will prompt again for the number according to number of retries. that are configured.</p>

A System Reset is not required for the flag setting to take effect.


For more information see, [Modifying System Flags](#).

Meeting Rooms List

Meeting Rooms are listed in the Meeting Room list pane.

To list Meeting Rooms:

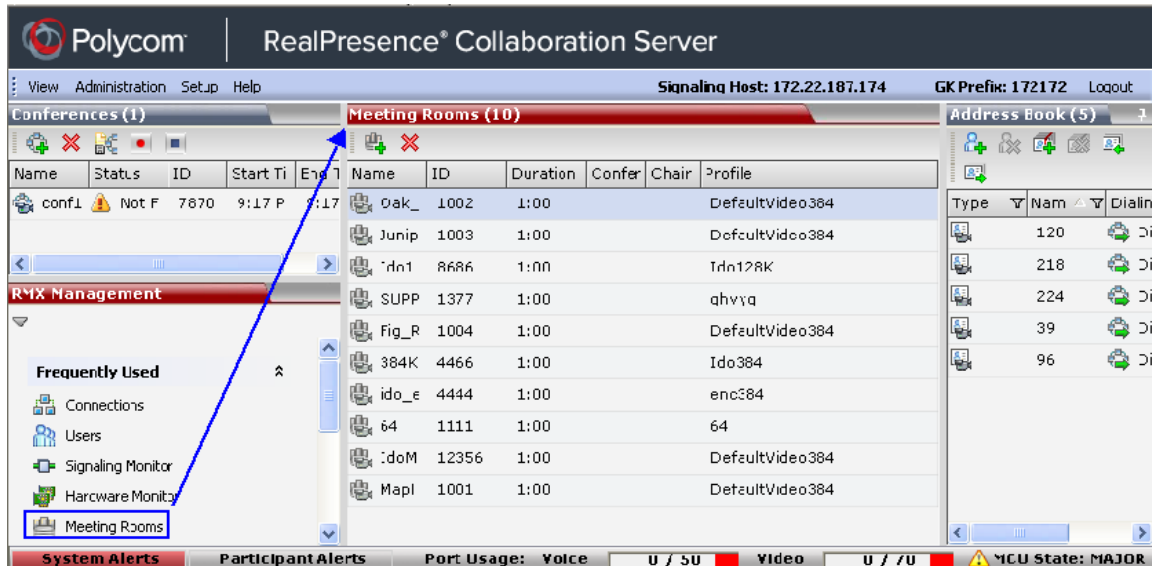

- » In the **RMX Management** pane, in the **Frequently Used** list, click the **Meeting Rooms** button . The **Meeting Rooms** list is displayed.



An active Meeting Room becomes an ongoing conference and is monitored in the same way as any other conference.

The Meeting Room List columns include:

Meeting Rooms List Columns

Field	Description	
Display Name	Displays the name and the icon of the Meeting Room in the Collaboration Server Web Client.	
	 (green)	An active video Meeting Room that was activated when the first participant connected to it.
	 (gray)	A passive video Meeting Room that is waiting to be activated.
Routing Name	The ASCII name that registers conferences, Meeting Rooms, Entry Queues and SIP Factories in the various gatekeepers and SIP Servers. In addition, the Routing Name is also: <ul style="list-style-type: none"> • The name that endpoints use to connect to conferences. • The name used by all conferencing devices to connect to conferences that must be registered with the gatekeeper and SIP Servers. 	
ID	Displays the Meeting Room ID. This number must be communicated to H.323 conference participants to enable them to dial in.	
Duration	Displays the duration of the Meeting Room in hours using the format HH:MM (default 01:00).	

Meeting Rooms List Columns

Field	Description
Conference Password	The password to be used by participants to access the Meeting Room. If blank, no password is assigned to the conference. This password is valid only in conferences that are configured to prompt for a conference password in the IVR Service.
Chairperson Password	Displays the password to be used by the users to identify themselves as Chairpersons. They are granted additional privileges. If left blank, no chairperson password is assigned to the conference. This password is valid only in conferences that are configured to prompt for a chairperson password.
Profile	Displays the name of the Profile assigned to the Meeting Room. For more information, see Defining New Profiles .
SIP Registration	<p>The status of registration with the SIP server:</p> <ul style="list-style-type: none"> • Not configured - Registration with the SIP Server was not enabled in the Conference Profile assigned to this conferencing Entity. In Multiple Networks configuration, If one service is not configured while others are configured and registered, the status reflects the registration with the configured Network Services. The registration status with each SIP Server can be viewed in the Properties - Network Services dialog box of each conferencing entity. When SIP registration is not enabled in the conference profile, the Collaboration Server's registering to SIP Servers will each register with a URL derived from its own signaling address. In Collaboration Server 2000/4000, this unique URL replaces the non-unique URL, dummy_tester, used in previous versions. • Failed - Registration with the SIP Server failed. This may be due to incorrect definition of the SIP server in the IP Network Service, or the SIP server may be down, or any other reason that affects the connection between the Collaboration Server or the SIP Server to the network. • Registered - the conferencing entity is registered with the SIP Server. • Partially Registered - This status is available only in Multiple Networks configuration, when the conferencing entity failed to register to all the required Network Services if more than one Network Service was selected.

Use Time Out as DTMF Delimiter

Users are able to change the behavior of the policy of number collection for VMR Entry Queues, Conference-IDs and Passwords, allowing a time-out to be used as a stop indicator for the input string.

In previous versions, a # input at the end of the input string indicated completion of the input.

The administrator can configure the system, using the ENABLE_DTMF_NUMBER_WO_DELIMITER system flag to change the previous system behavior, allowing a time-out to be used as a stop indicator for the string input for the local IVR, when the MCU collects the Conference-ID in the local Entry Queue or the Password (chairperson or participant) while routed to the conference.

The flag must be manually added to the System Configuration and its value modified as follows:

Flag Name	Value / Description	
	YES	NO
ENABLE_DTMF_NUMBER_WO_DELIMITER	If the timer expires, the received digits validated even if there is no delimiter. If the received number is not valid, the system will prompt again for the number according to number of retries. that are configured.	This is the default setting for backward compatibility. If the timer expires because no delimiter is received, the number input is not valid. The system will prompt again for the number according to number of retries. that are configured.



A System Reset is not required for the flag setting to take effect.

For more information see [Modifying System Flags](#).

Meeting Room Toolbar & Right-click Menu

The Meeting Room toolbar and right-click menus provide the following functionality:

Meeting Room Toolbar and Right-click Menus


Toolbar button	Right-click menu	Description
	New Meeting Room	Select this button to create a new Meeting Room.
	Delete Meeting Room	Select any Meeting Room and then click this button to delete the Meeting Room.




Dial out to AVC participants assigned to a Meeting Room will only start when the dial in participant who has activated it has completed the connection process and the Meeting Room has become an ongoing conference.

Creating a New Meeting Room

To create a new meeting room:

- In the **Meeting Rooms** pane, click the **New Meeting Room**  button or right-click an empty area in the pane, and select **New Meeting Room**.

The **New Meeting Room** dialog box is displayed.

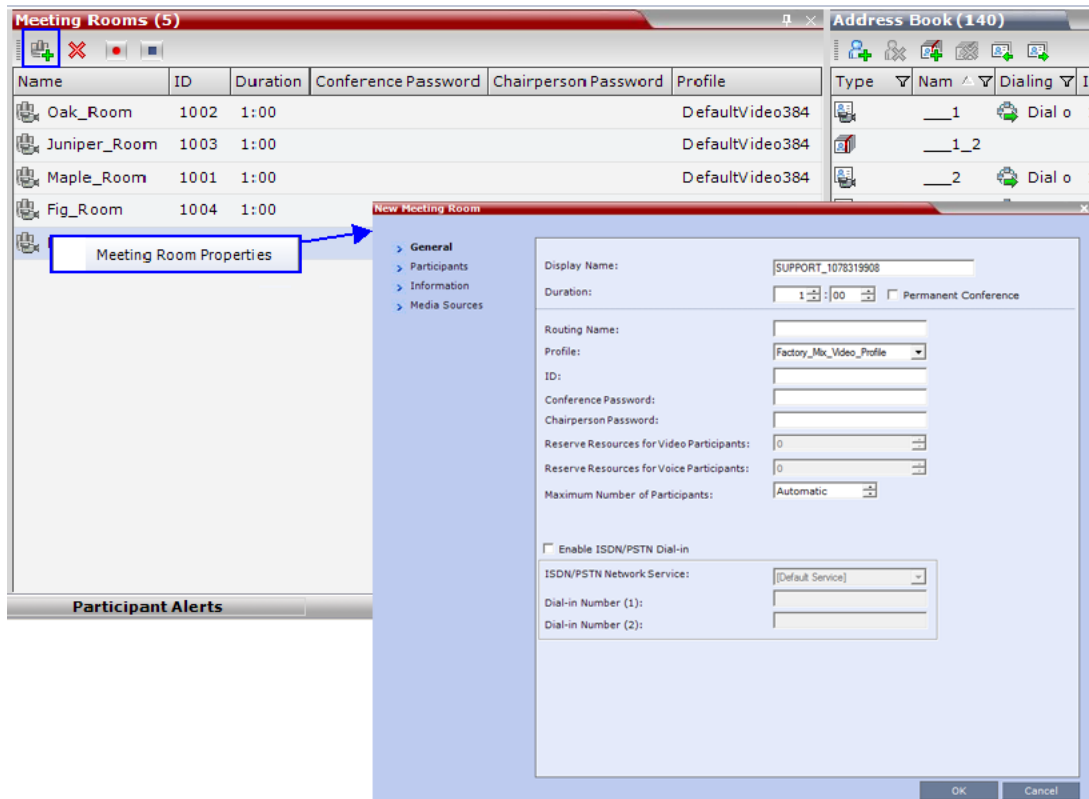

The definition procedure is the same as for the new conference (with the exception of Reserved Resources for Audio and Video participants in Collaboration Server 2000/4000 only).



If SIP Factories are being used do not assign a Meeting Room the ID 7001. This ID is reserved for the default SIP Factory.

Microsoft Lync users can connect a Collaboration Server Meeting Room to a conference running on the Microsoft A/V MCU. This allows Collaboration Server Lync users to connect with a conference in progress on the A/V MCU and be an active participant in the conference.

Microsoft Lync is not supported by Collaboration Server (RMX) 1800 with no DSP cards.

For more information, see [Connecting a Collaboration Server Meeting Room to a Microsoft AV-MCU Conference](#).

Entry Queues, Ad Hoc Conferences and SIP Factories

Entry Queues

An Entry Queue (EQ) is a special routing lobby to access conferences. Participants connect to a single-dial lobby and are routed to their destination conference according to the Conference ID they enter. The Entry Queue remains in a passive state when there are no callers in the queue (in between connections) and is automatically activated once a caller dials its dial-in number.

Participants can be moved from the Entry Queue and the destination conference if both conferencing entities are set to the same conferencing parameters: Conferencing Mode, Line rate and video parameters. For example, participants can be moved from SVC Only Entry Queue to SVC Only conference, or from a mixed CP and SVC Entry Queue to a mix CP and SVC conference, from CP only Entry Queue to CP only conference.

The parameters (bit rate and video properties) with which the participants connect to the Entry Queue and later to their destination conference are defined in the Conference Profile that is assigned to the Entry Queue. For example, if the Profile Bit Rate is set to 384kbps, all endpoints connect to the Entry Queue and later to their destination conference using this bit rate even if they are capable of connecting at higher bit rates.

An Entry Queue IVR Service must be assigned to the Entry Queue to enable the voice prompts guiding the participants through the connection process. The Entry Queue IVR Service also includes a video slide that is displayed to the participants while staying in the Entry Queue (during their connection process).

Different Entry Queues can be created to accommodate different conferencing modes, conferencing parameters (by assigning different Profiles) and prompts in different languages (by assigning different Entry Queue IVR Services).

For more information, see [IVR Services List](#).

The Entry Queue can also be used for Ad Hoc conferencing. If the Ad Hoc option is enabled for the Entry Queue, when the participant enters the target conference ID the system checks whether a conference with that ID is already running on the MCU. If not, the system automatically creates a new ongoing conference with that ID. For more information about Ad Hoc conferencing, see [Ad Hoc Conferencing](#).

An Entry Queue can be designated as Transit Entry Queue to which calls with dial strings containing incomplete or incorrect conference routing information are transferred. For more information, see [Transit Entry Queue](#).

To enable ISDN/PSTN participants to dial in to the Entry Queue, an ISDN/PSTN dial-in number must be assigned to the Entry Queue. Up to two dial-in numbers can be assigned to each Entry Queue. The dial-in numbers must be allocated from the dial-in number range defined in the ISDN/PSTN Network Service. You can allocate the two dial-in numbers from the same ISDN/PSTN Network Service or from two different ISDN/PSTN Network Services. The dial-in number must be communicated to the ISDN or PSTN dial-in participants.

The Entry Queue can also be used as part of the Gateway to Polycom® RealPresence DMA solution for connecting Audio only PSTN, ISDN, SIP and H.323 endpoints to RealPresence DMA™ system.

Gateway functionality is not supported by Collaboration Server (RMX) 1800 with no DSP cards.

For more information, see [Dialing to Polycom® RealPresence DMA System](#).

Default Entry Queue properties

The system is shipped with a default Entry Queue whose properties are shown in the following table.

Default Entry Queue Properties

Parameter	Value
Display Name	DefaultEQ The user can change the name if required.
Routing Name	DefaultEQ The default Routing Name cannot be changed.
ID	1000
Profile name	Factory_Video_Profile. Profile Bit Rate is set to 384 Kbps.
Entry Queue Service	Entry Queue IVR Service. This is default Entry Queue IVR Service shipped with the system and includes default voice messages and prompts in English.
Ad Hoc	Enabled
Cascade	None (Disabled)
Enable ISDN/PSTN Access	Disabled. You can modify the properties of this Entry Queue to enable ISDN/PSTN participants to dial-in to a conference. Up to two dial-in numbers can be assigned.



Note: Resource Capacities and Operational Specifications


For information about Resource Capacities and other operational specifications, see the *RealPresence® Collaboration Server (RMX) Hardware Guide* specific to your system.

Defining a New Entry Queue

You can modify the properties of the default Entry Queue and define additional Entry Queues to suit different conferencing requirements.

To define a new Entry Queue:

- 1 In the **RMX Management** pane, In the **Rarely Used** menu, click **Entry Queues**.

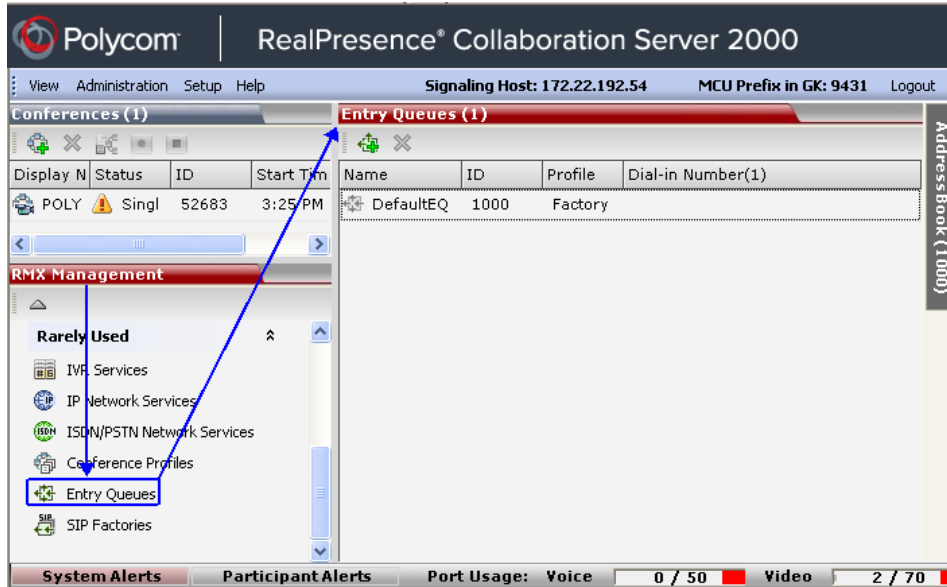

- 2 In the **Entry Queues** list pane, click the **New Entry Queue** button.
The **New Entry Queue** dialog box opens.

Display Name: SUPPORT_1365896837

Routing Name: [Empty]

Profile: Factory_Mix_Video_Profile

ID: [Empty]

Entry Queue Mode: Standard Lobby

Entry Queue IVR Service: Entry Queue IVR Service

Cascade: None

Enable ISDN/PSTN Dial-in

ISDN/PSTN Network Service: [Default Service]

Dial-in Number (1): [Empty]

Dial-in Number (2): [Empty]

OK Cancel

3 Define the following parameters:

Entry Queue Definitions Parameters

Option	Description
Display Name	<p>The Display Name is the conferencing entity name in native language character sets to be displayed in the Collaboration Server Web Client.</p> <p>In conferences, Meeting Rooms, Entry Queues and SIP factories the system automatically generates an ASCII name for the Display Name field that can be modified using Unicode encoding.</p> <ul style="list-style-type: none"> English text uses ASCII encoding and can contain the most characters (length varies according to the field). European and Latin text length is approximately half the length of the maximum. Asian text length is approximately one third of the length of the maximum. <p>The maximum length of text fields also varies according to the mixture of character sets (Unicode and ASCII).</p> <p>Maximum field length in ASCII is 80 characters. If the same name is already used by another conference, Meeting Room or Entry Queue, the Collaboration Server displays an error message requesting you to enter a different name.</p>
Routing Name	<p>Enter a name using ASCII text only. If no Routing Name is entered, the system automatically assigns a new name as follows:</p> <ul style="list-style-type: none"> If an all ASCII text is entered in Display Name, it is used also as the Routing Name. If any combination of Unicode and ASCII text (or full Unicode text) is entered in Display Name, the ID (such as Conference ID) is used as the Routing Name.
Profile	<p>Select the Profile to be used by the Entry Queue.</p> <p>The default Profile is selected by default. This Profile determines the Bit Rate and the video properties with which participants connect to the Entry Queue and destination conference.</p> <p>To connect to a Video Switching conference via Entry Queue, the Profile assigned to the Entry Queue must be set to Video Switching. It is recommended to use the same profile for both the destination conference and Entry Queue.</p> <p>In Ad Hoc conferencing, it is used to define the new conference properties.</p>
ID	<p>Enter a unique number identifying this conferencing entity for dial in. Default string length is 4 digits.</p> <p>If you do not manually assign the ID, the MCU assigns one after the completion of the definition. The ID String Length is defined by the flag NUMERIC_CONF_ID_LEN in the System Configuration.</p>

Entry Queue Definitions Parameters

Option	Description
Entry Queue Mode	<p>Select the mode for the Entry Queue</p> <hr/> <p>Standard Lobby (default) - When selected, the Entry Queue is used as a routing lobby to access conferences. Participants connect to a single-dial lobby and are routed to their destination conference according to the Conference ID they enter.</p> <hr/> <p>Ad Hoc - Select this option to enable the Ad Hoc option for this Entry Queue. In this mode, when the participant enters the target conference ID the system checks whether a conference with that ID is already running on the MCU. If not, the system automatically creates a new ongoing conference with that ID.</p> <hr/> <p>IVR Only Service Provider - When selected, designates this Entry Queue as a special Entry Queue that provides IVR Services to SIP calls on behalf of the RealPresence DMA system. The IVR Only Service Provider Entry Queue does not route the SIP calls to a target conference. Instead the RealPresence DMA system handles the call. For more details, see IVR Provider Entry Queue (Shared Number Dialing).</p> <hr/> <p>External IVR Control - IVR Services can be controlled externally from an application server (such as the DMA) supporting the MCCF-IVR (Media Control Channel Framework-Interactive Voice Response) package. When selected, the connection process of the participant to the conference via the Virtual Entry Queue is controlled and managed by an external IVR service of an application server (for example, DMA).</p>
Entry Queue IVR Service	<p>The default Entry Queue IVR Service is selected. If required, select an alternate Entry Queue IVR Service, which includes the required voice prompts, to guide participants during their connection to the Entry Queue.</p>
Cascade	<p>Set this field to None for all Entry Queues other than cascading.</p> <p>If this Entry Queue is used to connect dial-in cascaded links, select Master or Slave depending on the Master/Slave relationship in the Cascading topology.</p> <p>Set this field to Master if:</p> <ul style="list-style-type: none"> • The Entry Queue is defined on the MCU on level 1 and the dialing is done from level 2 to level 1. • The Entry Queue is defined on the MCU on level 2 and the dialing is done from level 3 to level 2. <p>Set this field to Slave if the Entry Queue is defined on the MCU on level 2 (Slave) and the dialing is done from MCU level 1 to level 2.</p>
Enable ISDN/PSTN Access	<p>Select this check box to allocate dial-in numbers for ISDN/PSTN connections. To define the first dial-in number using the default ISDN/PSTN Network Service, leave the default selection. When the Entry Queue is saved on the MCU, the dial-in number will be automatically assigned to the Entry Queue. This number is taken from the dial-in numbers range in the default ISDN/PSTN Network Service.</p>
ISDN/PSTN Network Service	<p>The default Network Service is automatically selected. To select a different ISDN/PSTN Network Service in the service list, select the name of the Network Service.</p>

Entry Queue Definitions Parameters

Option	Description
Dial-in Number (1)	Leave this field blank to let the system automatically assign a number from the selected ISDN/PSTN Network Service. To manually define a dial-in number, enter a required number from the dial-in number range defined for the selected Network Service.
Dial-in Number (2)	By default, the second dial-in number is not defined. To define a second-dial-in number, enter a required number from the dial-in number range defined for the selected Network Service.


4 Click OK.

The new Entry Queue is added to the **Entry Queues** list.

Listing Entry Queues**To view the list of Entry Queues:**

- » In the **RMX Management** pane- **Rarely Used** menu, click **Entry Queues**.

The Entry Queues are listed in the **Entry Queues** pane.

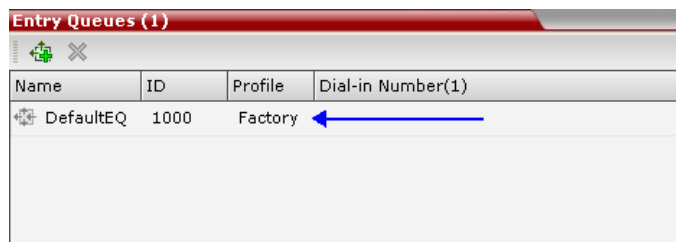

You can double-click an Entry Queue to view its properties.

Modifying the EQ Properties**To modify the EQ:**

- » In the **Entry Queues** pane, either double-click or right-click, and select **Entry Queue Properties** of the selected Entry Queue in the list.

The **Entry Queue Properties** dialog box is displayed. All the fields may be modified except Routing Name.

Transit Entry Queue

A Transit Entry Queue is an Entry Queue to which calls with dial strings containing incomplete or incorrect conference routing information are transferred.

IP Calls are routed to the Transit Entry Queue when:

- A gatekeeper is not used, or where calls are made directly to the Collaboration Server's Signaling IP Address, with incorrect or without a Conference ID.
- When a gatekeeper is used and only the prefix of the Collaboration Server is dialed, with incorrect or without a Conference ID.
- When the dialed prefix is followed by an incorrect conference ID.

When no Transit Entry Queue is defined, all calls containing incomplete or incorrect conference routing information are rejected by the Collaboration Server.

In the Transit Entry Queue, the Entry Queue IVR Service prompts the participant for a destination conference ID. Once the correct information is entered, the participant is transferred to the destination conference.


Setting a Transit Entry Queue

The Collaboration Server factory default settings define the Default Entry Queue also as the Transit Entry Queue. You can designate another Entry Queue as the Transit Entry Queue.

Only one Transit Entry Queue may be defined per Collaboration Server and selecting another Entry Queue as the Transit Entry Queue automatically cancels the previous selection.

To designate an Entry Queue as Transit Entry Queue:

- 1 In the **RMX Management** pane, **Rarely Used** list, click **Entry Queues**.
- 2 In the **Entry Queues** list, right-click the **Entry Queue** entry, and then click **Set Transit Entry Queue**.

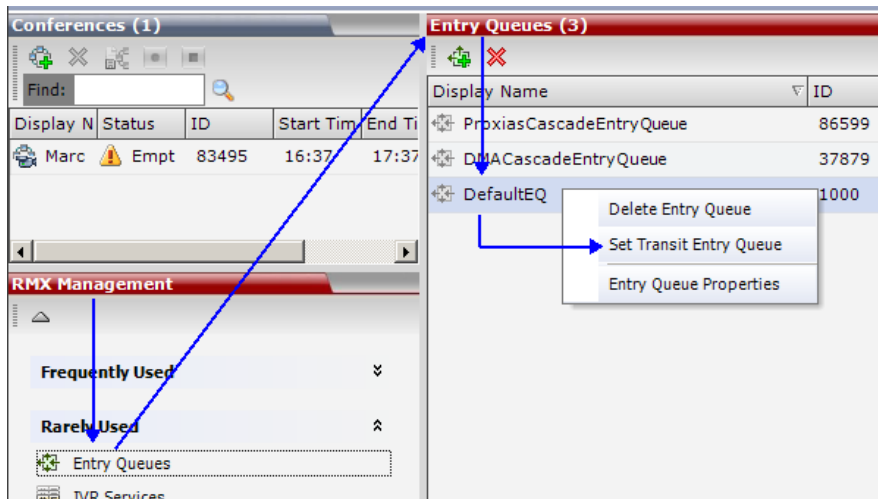

The Entry Queue selected as Transit Entry Queue is displayed in bold.

To cancel the Transit Entry Queue setting:

- 1 In the **RMX Management** pane, **Rarely Used** list, click **Entry Queues**.
- 2 In the **Entry Queues** list, right-click the **Transit Entry Queue** entry, and then click **Cancel Transit Entry Queue**.

IVR Provider Entry Queue (Shared Number Dialing)

In an environment that includes a RealPresence DMA system, the Collaboration Server Entry Queue can be configured to provide the IVR Services on behalf of the RealPresence DMA system to SIP endpoints. It displays the Welcome Slide, plays the welcome message and retrieves the destination conference ID that is entered by the participant using DTMF codes.

To enable this feature, a special Entry Queue that is defined as IVR Only Service Provider is created. This Entry Queue does not forward calls to conferences running on the Collaboration Server and its main functionality is to provide IVR services.

Call Flow

The SIP participant dials the DMA Virtual Entry Queue number, for example 1000@dma.polycom.com.

The DMA forwards the SIP call to the Collaboration Server, to a special Entry Queue that is configured as IVR Only Service Provider. The participant is prompted to enter the conference ID using DTMF codes.

Once the participant enters the conference ID, the conference ID is forwarded to the DMA, enabling the DMA to connect the SIP endpoint to the destination conference or create a new conference and connect the participant to that conference.

Guidelines for setting the Entry Queue as IVR Provider

- An Entry Queue defined as IVR Only Service Provider does not route the SIP call to a target conference and it cannot be used to route calls on the Collaboration Server. In such a configuration, the DMA handles the calls. Therefore, normal Entry Queues must be defined separately.
- Operator Assistance must be disabled in the IVR Service assigned to this Entry Queue.
- Only the conference ID prompts should be configured. Other prompts are not supported in IVR Only Service Provider configuration.
- PSTN, ISDN, and H.323 calls to this Entry Queue are rejected.
- The DMA must be configured to locate the IVR Only Service Provider Entry Queue on the Collaboration Server. To locate the Entry Queue the DMA requires the Entry Queue's ID number and the Collaboration Server Signaling IP address (xxx.xx.xxx.xx).

Configuring the Collaboration Server as IVR Provider

Entry Queue IVR Service

If required, create a special Entry Queue IVR Service in which the Operator Assistance option is disabled, and only the Conference ID prompts are enabled.

Entry Queue

- » In the **New Entry Queue** dialog box, **Entry Queue Mode** list, select **IVR Only Service Provider**.

The screenshot shows the 'New Entry Queue' dialog box with the following configuration:

- Display Name: SUPPORT_272710764
- Routing Name: (empty)
- Profile: Factory_Mix_Video_Profile
- ID: (empty)
- Entry Queue Mode: IVR Only Service Provider
- Entry Queue IVR Service: Entry Queue IVR Service
- Cascade: None
- Enable ISDN/PSTN Dial-in
- ISDN/PSTN Network Service: [Default Service]
- Dial-in Number (1): (empty)
- Dial-in Number (2): (empty)

- Enter the Entry Queue ID to be used by the DMA for forwarding the SIP calls to this Entry Queue.
- Select the special **Entry Queue IVR Service** if one was created.
- The **Cascade** and **Enable ISDN/PSTN Dial-in** options should not be enabled with this type of Entry Queue.

Using External IVR Services via the MCCF-IVR Package

IVR Services can be controlled externally from an application server supporting the MCCF-IVR (Media Control Channel Framework-Interactive Voice Response) package. The external IVR service is currently being implemented with the integration of the Polycom RealPresence Virtualization Manager (DMA) as the application server. When the application server is deployed in the enterprise environment and the Polycom RealPresence Collaboration Server (MCU) is deployed as a media server, the external IVR service can be used to play audio messages, display slides, and collect DTMF input from the participant. The external IVR service is managed by the application server at the pre-conference phase when the participant is placed into a special external IVR-controlled Entry Queue in the Collaboration Server (MCU), collecting information before connecting to the conference.

The external IVR-controlled Entry Queue plays recorded voice messages or sends video slides such as splash screens to the participant and collects DTMF input from the participant such as conference ID and conference password for various functions.

IVR media files, WAV for voice messages and JPG for video slides, are stored on the application server. In order to provide external IVR control, a TCP-based MCCF channel is created between the application server and the media server. Because of real-time considerations, when the MCCF channel is established, the application server notifies the media server about the media files. The media server downloads the media files. The media server is notified by the application server when to download new or updated media files.

When the call has completed the pre-conference phase in the external IVR-controlled Entry Queue, the application server disconnects the call from the Entry Queue and routes the call to an ongoing conference or creates a new VMR.

Call Flows

The external IVR-controlled Entry Queue can be initiated for various types of calls from SIP endpoints such as standalone endpoints and Cisco TIP endpoints. Standalone endpoints are SIP or H.264 TIP endpoints. These endpoints can include HDX systems, multiple Telepresence (ITP) screens, and RealPresence Desktop client applications.

Call Flow for Standalone SIP Endpoints

The following describes how a standalone SIP endpoint call is placed into the IVR-controlled Entry Queue and is then connected to a conference:

- 1 A SIP call is routed through the application server to the IVR-controlled Entry Queue.
- 2 The MCU answers the call and waits for the IVR media file requests from the application server. The MCU does not control the call while the call is in the Entry Queue.
- 3 The application server may request, through the MCCF channel - IVR package, to play an audio file and display a slide. When the audio file has finished playing, the MCU notifies the application server that the audio file has been played for the call.
- 4 The application server may request, through the MCCF channel - IVR package, to collect DTMF input such as a conference ID or password, from the caller. The DTMF input is transferred from the MCU to the application server. When the application server receives the DTMF input, it validates the input for the required conference ID or password. If the input is incorrect, the application server will request the MCU to replay the audio file and collect the DTMF input again. The MCU transfers the DTMF input to the application server for revalidation.
- 5 When the application server has completed the pre-conference IVR, the application server routes the call to a VMR with the collected password appended to the following dial string:

```
<conf-id>**<password>@mcu-sig-ip.
```

The call is disconnected from the application server. The MCU now has control of the call.

- 6 The call is transferred to a conference, which can reside on another MCU.

Call Flow for Standalone TIP Endpoints

The following describes how a standalone TIP endpoint call is placed into the IVR-controlled Entry Queue and is then connected to a conference:

- 1 A TIP call is routed through the application server to the IVR-controlled Entry Queue. TIP endpoints can either have a single screen or multiple screens.
- 2 The MCU answers the call and waits for the IVR media file requests from the application server. The MCU does not control the call while the call is in the Entry Queue.

- 3 The application server may request, through the MCCF channel - IVR package, to play an audio file and display a video slide. When the TIP endpoint uses multiple screens, the video slide is displayed on the main screen only. When the audio file has finished playing, the MCU notifies the application server that the audio file has been played for the call.
- 4 The application server may request, through the MCCF channel - IVR package, to collect DTMF input such as a conference ID or password, from the caller. When the TIP endpoint uses multiple screens, the DTMF input is collected only once from the main screen. The DTMF input is transferred from the MCU to the application server. When the application server receives the DTMF input, it validates the input for the required conference ID or password. Because TIP uses DTLS, it can optionally enable re-keying of DTMF input and the calls to the Entry Queue and the conference can be encrypted.
- 5 When the application server has completed the pre-conference IVR, the application server routes the call to a VMR with the collected password appended to the following dial string:
`<conf-id>**<password>@mcu-sig-ip.`
 The call is disconnected from the application server. The MCU now has control of the call.
- 6 The call is transferred to a conference, which can reside on another MCU.

Call Flow for TIP Endpoints from a Polycom ITP System

The following describes how a TIP call from Cisco TPS endpoints or TIP calls from a Polycom ITP system working as a TIP call is placed into the IVR-controlled Entry Queue and is then connected to a conference:

- 1 A TIP call is routed through the application server to the IVR-controlled Entry Queue.
- 2 The MCU answers the call and waits for the IVR media file requests from the application server. The MCU does not control the call while the call is in the Entry Queue.
- 3 While the call is in the Entry Queue, video is only displayed on the main screen.
- 4 DTMF input is collected only once from the main screen. Because TIP uses DTLS, it can optionally enable re-keying of DTMF input and the calls to the Entry Queue and the conference can be encrypted.
- 5 When the application server has completed the pre-conference IVR, the application server routes the call to a VMR with the collected password appended to the following dial string:
`<conf-id>**<password>@mcu-sig-ip.` The MCU now has control of the call.
 The call is transferred to a conference, which can reside on another MCU.

Guidelines for Using External IVR Services via the MCCF-IVR Package

- Only AVC SIP and TIP protocols are supported.
- MCCF channels support both IPV4 and IPV6.
- When the MCCF channel is disconnected, an alarm is displayed and all external IVR files are deleted. When the MCCF channel is reconnected, the external IVR files are sent to the MCU.
- When the Collaboration Server (MCU) is restarted, all existing external IVR files are deleted. When the MCCF channel connects to the Collaboration Server, the external IVR file are sent to the Collaboration Server.
- H.323 and ISDN protocols are not supported.
- Video Switching conferences do not support the TIP protocol
- TIP-based conferencing does not support the following features during conferences:
 - Gathering phase

- Skin display
- Text messaging using Message Overlay
- Site Name display
- PCM
- Click&View
- To play audio messages and display the welcome slide during the participant connection to the conference via the Virtual Entry Queue, the Media files have to meet the following requirements (as defined in the Entry Queue IVR Service):
 - Audio messages: WAV files - PCM, 16 KHz, 16 bit, Mono
 - Video slides: JPG files - 1920 x 1088 resolution

Configuring the MCU to Support External IVR Services via the MCCF-IVR

The support of External IVR Services via the MCCF-IVR package is enabled by default in the Collaboration Server (RMX) systems, by the flag `ENABLE_MCCF` which is set to YES.

However, in Ultra Secure Mode and in secured environments where the External IVR Services via the MCCF-IVR package is not required and unused ports should be closed, this flag should be set to NO.

To change this flag value from YES to No, you must first add it to the System Configuration. For more details, see .

Configuring the Entry Queue to Use External IVR Services

The Entry Queue can be configured to place a call in the external IVR-controlled Entry Queue.

To configure the Entry Queue for External IVR Services:

- 1** In the **RMX Management** pane, click **Entry Queues**.
- 2** In the **Entry Queues** pane, click the **New Entry Queue** icon.
The **New Entry Queue** dialog box is displayed.
- 3** In the **Display Name** field, type an appropriate display name for the Entry Queue.

- 4 In the **Entry Queue Mode** field, select **External IVR Control** from the available options.

When **External IVR Control** is selected, the connection process of the participant to the conference via the Virtual Entry Queue is controlled and managed by an external IVR service of an application server (for example, DMA).

- 5 Click **OK**.

SIP Factories

A SIP Factory is a conferencing entity that enables SIP endpoints to create Ad Hoc conferences. The system is shipped with a default SIP Factory, named DefaultFactory.



The default SIP Factory uses the conferencing ID 7001. If a SIP Factory is being used do not assign this ID to any conferencing entity, including conferences, reservations, and meeting rooms.

When a SIP endpoint calls the SIP Factory URI, a new conference is automatically created based on the Profile parameters, and the endpoint joins the conference.

The SIP Factory URI must be registered with the SIP server to enable routing of calls to the SIP Factory. To ensure that the SIP factory is registered, the option to register Factories must be selected in the Default IP Network Service.

Creating SIP Factories

To create a new SIP Factory:

- 1 In the **RMX Management** pane, **Rarely Used** list, click **SIP Factories**.

- 2 In the **SIP Factories** list pane, click the **New SIP Factory** button.
The **New Factory** dialog box opens.

- 3 Define the following parameters:

New Factory Properties

Option	Description
Display Name	<p>Enter the SIP Factory name that will be displayed.</p> <p>The Display Name is the conferencing entity name in native language character sets to be displayed in the Collaboration Server Web Client.</p> <p>In conferences, Meeting Rooms, Entry Queues and SIP factories the system automatically generates an ASCII name for the Display Name field that can be modified using Unicode encoding.</p> <ul style="list-style-type: none"> English text uses ASCII encoding and can contain the most characters (length varies according to the field). European and Latin text length is approximately half the length of the maximum. Asian text length is approximately one third of the length of the maximum. <p>The maximum length of text fields also varies according to the mixture of character sets (Unicode and ASCII).</p> <p>Maximum field length in ASCII is 80 characters. If the same name is already used by another conference, Meeting Room or Entry Queue, the Collaboration Server displays an error message requesting you to enter a different name.</p>
Routing Name	<p>The Routing Name is defined by the user, however if no Routing Name is entered, the system will automatically assign a new name when the Profile is saved as follows:</p> <ul style="list-style-type: none"> If an all ASCII text is entered in Display Name, it is used also as the Routing Name. If any combination of Unicode and ASCII text (or full Unicode text) is entered in Display Name, the ID (such as Conference ID) is used as the Routing Name.
Profile	<p>The default Profile is selected by default. If required, select the conference Profile from the list of Profiles defined in the MCU.</p> <p>A new conference is created using the parameters defined in the Profile.</p>

New Factory Properties


Option	Description
Automatic Connection	Select this check box to immediately accept the conference creator endpoint to the conference. If the check box is cleared, the endpoint is redirected to the conference and then connected.

4 Click OK.

The new SIP Factory is added to the list.

SIP Registration & Presence for Entry Queues and SIP Factories with SIP Servers

Entry Queues and SIP Factories can be registered with SIP servers. This enables Office Communication Server or Lync server client users to see the availability status (Available, Offline, or Busy) of these conferencing entities, and to connect to them directly from the Buddy List.

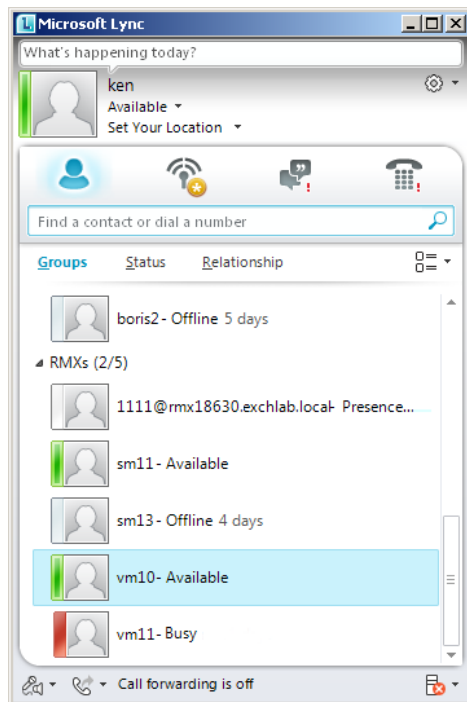

Guidelines for registering Entry Queues and SIP Factories with SIP Servers

- The Entry Queue or SIP Factory must be added to the Active Directory as a User.
- SIP Registration must be enabled in the Profile assigned to the Entry Queue or SIP Factory. For more information see [Defining New Profiles](#).

Monitoring Registration Status

The SIP registration status can be viewed in the **Entry Queue** or **SIP Factory** list panes.

Entry Queues (1)				
Display Name	ID	Profile	Dial-in N	SIP Registration
EQ1	61421	Register		Registered ←

SIP Factories (1)		
Display Name	Profile	SIP Registration
DefaultFactory	RTV	Registered ←

The following statuses are displayed:

- Not configured** - Registration with the SIP Server was not enabled in the Conference Profile assigned to the Entry Queue or SIP Factory.
 When SIP registration is not enabled in the conference profile, the Collaboration Server's registering to SIP Servers will each register with an URL derived from its own signaling address. In Collaboration Server 2000/4000, this unique URL replaces the non-unique URL, dummy_tester, used in previous versions.
- Failed** - Registration with the SIP Server failed.
 This may be due to incorrect definition of the SIP server in the IP Network Service, or the SIP Server may be down, or any other reason that affects the connection between the Collaboration Server or the SIP Server to the network.
- Registered** - The conferencing entity is registered with the SIP Server.
- Partially Registered** - This status is available only in Multiple Networks configuration, when the conferencing entity failed to register to all the required Network Services, if more than one Network Service was selected for Registration.

Ad Hoc Conferencing

The Entry Queue can also be used for Ad Hoc conferencing. If the **Ad Hoc** option is enabled for the Entry Queue, when the participant enters the target conference ID the system checks whether a conference with that ID is already running on the MCU. If not, the system automatically creates a new ongoing conference with that ID. The conference parameters are based on the Profile linked to the Entry Queue. As opposed to Meeting Rooms, that are predefined conferences saved on the MCU, Ad Hoc conferences are not stored on the MCU. Once an Ad Hoc conference is started, it becomes an ongoing conference, and is monitored and controlled as any standard ongoing conference.

An external database application can be used for authentication with Ad Hoc conferences. The authentication can be done at the Entry Queue level and at the conference level. At the Entry Queue level, the MCU queries the external database server whether the participant has the right to create a new conference. At the conference level the MCU verifies whether the participant can join the conference and if

the participant is the conference chairperson. The external database can populate certain conference parameters.

For more information about Ad Hoc conferencing, see [Appendix D - Ad Hoc Conferencing and External Database Authentication](#).

Gateway to Polycom® Distributed Media Application™ (DMA™) 7000

Gateway to Polycom® Distributed Media Application™ (DMA™) 7000 enables audio only PSTN, ISDN (video endpoints using only their audio channels), SIP and H.323 calls to connect to the Polycom DMA 7000 via gateway sessions running on the Collaboration Server. Each Collaboration Server conference acting as a gateway session includes one connection to the endpoint and another connection to the DMA. The DMA 7000 enables load balancing and the distribution of multipoint calls on up to 10 Polycom Collaboration Server media servers.

As part of this solution, the Collaboration Server acts as a gateway for the DMA that supports H.323 calls. The PSTN, ISDN or SIP endpoint dials the virtual Meeting Room on the DMA via a special Entry Queue on the Collaboration Server.

Gateway functionality is not supported by Collaboration Server (RMX) 1800 with no DSP cards.

For more information, see [Dialing to Polycom® RealPresence DMA System](#).

Address Book

The Address Book stores information about the people and businesses you communicate with. The Address Book stores, among many other fields, IP addresses, phone numbers and network communication protocols used by the participant's endpoint. By utilizing the Address Book you can quickly and efficiently assign or designate participants to conferences. Groups defined in the Address Book help facilitate the creation of conferences. Participants can be added to the Address Book individually or in Groups.

When using the Polycom® RealPresence® Resource Manager® Global Address Book, all entries are listed.

The Address Book can be organized into a multi-level hierarchical structure. It can be used to mirror the organizational layout of the enterprises and it is especially suitable for large-scale enterprises with a considerable number of conference participants and organizational departments and divisions. Groups in the Address Book can contain sub-groups or sub-trees, and individual address book participant entities.

The Address Book provides flexibility in arranging conference participants into groups in multiple levels and the capabilities to add groups or participants, move or copy participants to multiple groups within the address book, and use the address book to add groups and participants to a conference or Conference Template.

Importing and exporting of Address Books enables organizations to seamlessly distribute up-to-date Address Books to multiple Collaboration Server units. It is not possible to distribute Address Books to external databases running on applications, such as the RealPresence Resource Manager. External databases can run in conjunction with Collaboration Server units, but must be managed from the external application. For example, new participants cannot be added to the external database from the Collaboration Server Web Client. To enable the Collaboration Server to run with an external database such as RealPresence Resource Manager, the appropriate system configuration flags must be set.

For more information, see [Modifying System Flags](#).



Note: Resource Capacities and Operational Specifications

For information about Resource Capacities and other operational specifications, see the *RealPresence® Collaboration Server (RMX) Hardware Guide* specific to your system.



Note: Defining Conference Profiles in the Polycom® RealPresence® Web Suite

In the *Polycom® RealPresence® Web Suite* solution, the Conference Profiles are defined in the RealPresence DMA system component and should not be defined directly in the RealPresence Collaboration Server (RMX) 1800/2000/4000 component.




Note: Global Address Book

- Integration with the Global Address Book of the RealPresence Resource Manager is supported. For more information, see [Integrating the Global Address Book \(GAB\) with the Collaboration Server](#). Integration with the SE200 GAB (Global Address Book) is not supported.
- Integration with the Global Address Book is not supported by Collaboration Server (RMX) 1800 with no DSP cards.


Viewing the Address Book

You can view the participants currently defined in the Address Book. The first time the Collaboration Server Web Client is accessed, the **Address Book** pane is displayed.

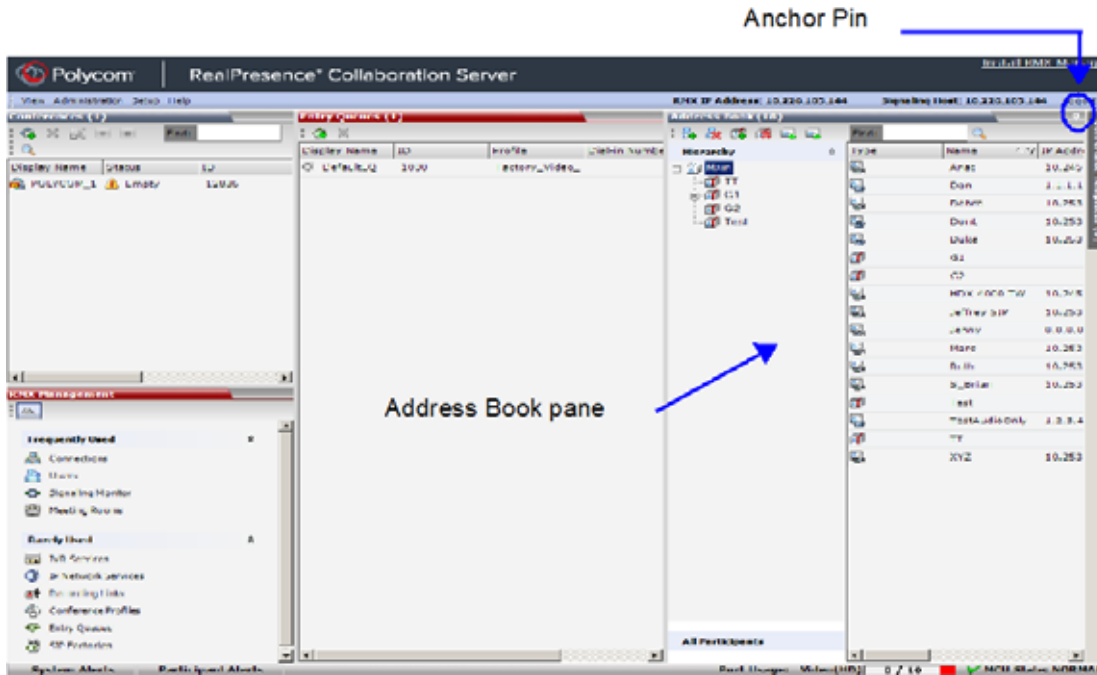

The Address Book contains two panes:


- **Navigation pane** - Contains the hierarchical tree and All Participants list.
- **List pane** - Displays the list of all the members of the selected group and sub-groups.

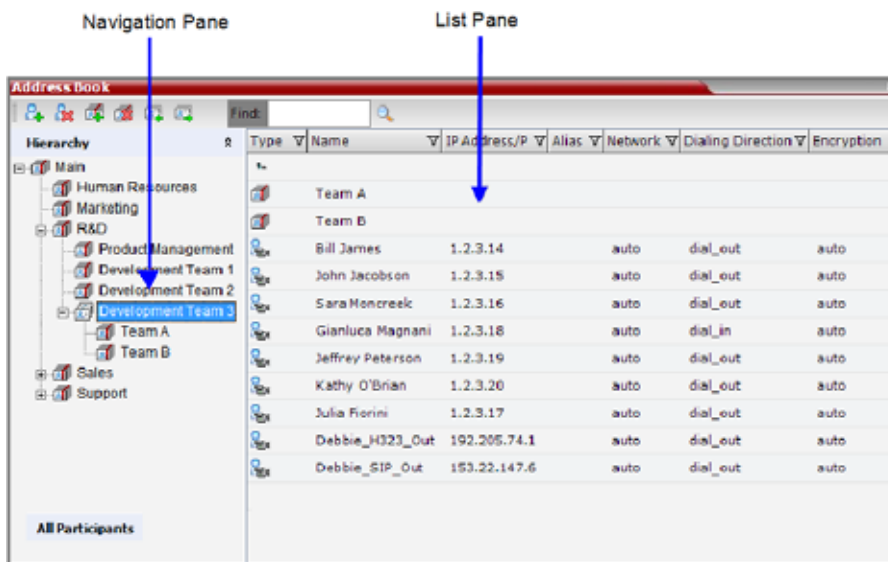


The Navigation pane of the Address Book contains the following types of lists:

- **Hierarchical** — Displays a multi-level hierarchical tree of groups and participants. Double-clicking a group on the navigation pane displays the group participants and sub-groups in the List pane.
- **All Participants** — Double-clicking this selection displays the single unique entity of all the participants in a single level. When adding a participant to a group, the system adds a link to the participant's unique entity that is stored in the All Participants list. The same participant may be added to many groups at different levels, and all these participant links are associated with the same definition of the participant in the All Participants list. If the participant properties are changed in one group, they will be changed in all the groups accordingly.

Displaying and Hiding the Group Members in the Navigation Pane

The currently selected group, whose group members are displayed in the Address Book **List** pane is identified by a special icon .

To expand the group to view the group members:


- » Double-click the group name or click the **Expand**  button.

The address book entities and sub-groups of the group is displayed in the right group list pane. You can drill down the sub-group to view address book entities in the sub-group.

To move up to the next level and view the members in the upper level:

- » Double-click the **navigation arrow**  button in the group members pane.

To collapse a group:

- » Double-click the group name or click the **Collapse**  button.



Participants List Pane Information

The Participants List pane displays the following information for each participant:



Type	Name	IP Address/Phone	Alias Name/SIP	Network	Dialing Direction	Encryption
	G1-1					
	P1	0.0.0.1		H.323	Dial out	auto
	P2	0.0.0.2		H.323	Dial out	auto
	172.21.41.1	172.21.41.104		H.323	Dial out	auto

Participants List Pane

Field/Option	Description
Type	Indicates whether the participant is a video () or voice () .
Name	Displays the name of the participant.

Participants List Pane

Field/Option	Description
IP Address/Phone	Enter the IP address of the participant's endpoint. <ul style="list-style-type: none"> For H.323 participant define either the endpoint IP address or alias. For SIP participant define either the endpoint IP address or the SIP address. Note: This field is removed from the dialog box when the ISDN/PSTN protocol is selected.
Network	The network communication protocol used by the endpoint to connect to the conference: H.323 or SIP or ISDN/PSTN.
Dialing Direction	Dial-in – The participant dials in to the conference. Dial-out – The Collaboration Server dials out to the participant.
Encryption	Displays whether the endpoint uses encryption for its media. The default setting is Auto , indicating that the endpoint must connect according to the conference encryption setting.

For information on adding and modifying participants in the Address Book, see [Managing the Address Book](#).

Displaying and Hiding the Address Book

The Address Book can be hidden by clicking the anchor pin (📌) button in the pane header. The Address Book pane closes and a tab is displayed at the right edge of the screen.

- » Click the tab to re-open the **Address Book**.



Adding Participants from the Address Book

You can add individual participants or a group of participants from the Address Book to a conference.

Adding Individual Participants from the Address Book to Conferences

You can add a participant or multiple participants to a new conference, ongoing conferences, or to Conference Templates by using the drag-and-drop operation.

In SVC-based conferences, only dial-in participants can be added from the address book.




Multiple selection of group levels is not available.

To add a participant to a new conference or an ongoing conference:

- 1 In the **Address Book Navigation** pane, select the group from which to add participants.
- 2 In the **Address Book List** pane, select the participant or participants you want to add to the conference.
- 3 Click and hold the left mouse button and drag the selection to the Participants pane of the conference.

The participants are added to the conference.

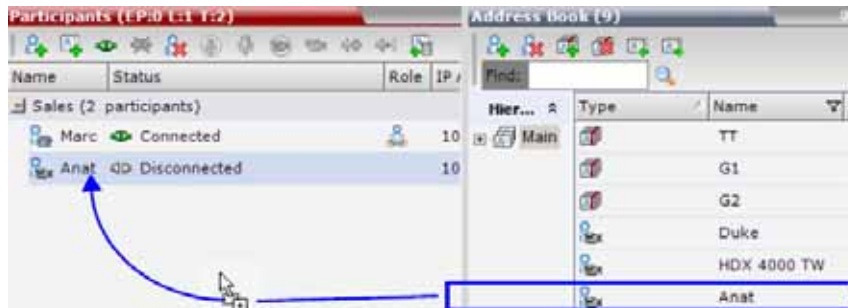

Adding a Group from the Address Book to Conferences

You can add a group of participants to a new conference, ongoing conferences, or to Conference Templates by using the drag-and-drop operation.

To add a group to a new conference or an ongoing conference:

- 1 In the **Address Book Navigation** pane, select the group you want to add to the conference.
- 2 Click and hold the left mouse button and drag the selection to the **Participants** pane of the conference.

The participants in the group level and all sub-levels are added to the conference.

Participant Groups


A group is a predefined collection of participants. A group provides an easy way to manage clusters of participants that are in the same organizational structure and to connect a combination of endpoints to a conference. For example, if you frequently conduct conferences with the marketing department, you can create a group called “Marketing Team” that contains the endpoints of all members of the marketing team.

Groups can contain participants and sub-groups. You can define up to ten levels in the Main group.

Managing Groups in the Address Book

To manage the groups in the Address Book:

- 1 In the **Address Book Navigation** pane, right-click the group you want to manage.
The **Groups** menu is displayed.

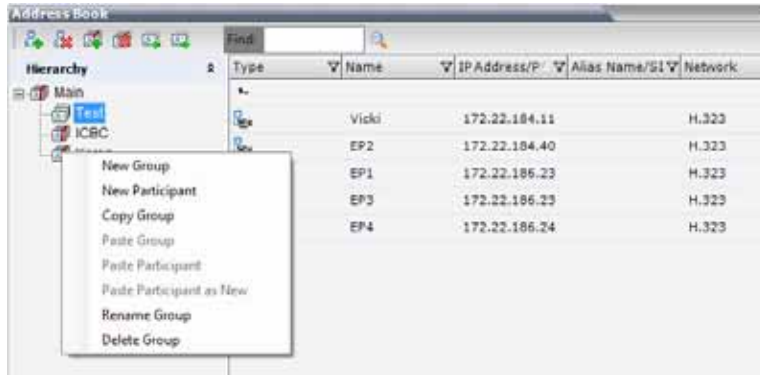

- 2 Select one of the following actions:

Address Book Navigation

Action	Description
New Group	Creates a new group within the current group.
New Participant	Adds a new participant within the current group.
Copy Group	Copies the current group to be pasted as an additional group.
Paste Group	Places the copied group into the current group. The group name of the copied group is defined with "Copy" at the end of the group name. This action is only available after a Copy Group action has been implemented.
Paste Participant	Places the copied participant into the current selected group. This action is available after a Copy or Cut action was activated when selecting a single participant or multiple participants.
Paste Participant as New	Pastes as a new participant into the selected group. This paste action adds "Copy" at the end of the participant name. This action is only available after a Copy action was activated for a single participant.
Rename Group	Renames the group name.
Delete Group	Deletes the group and all of its members. This action displays a message requesting confirmation to delete the group and all members connected with the group.

Additionally, you can drag a group from one location in the Address Book to another location, moving the group and all its members, including sub-groups, to its new location using the drag-and-drop operation. Moving a group to a new location can be done in the navigation pane or the list pane.

To drag a group from a location in the address book to another location:

- 1 Select the group you want to move.
- 2 Click and hold the left mouse button and drag the selection to the new location. The new location can be either the Main root level or another group level.

The group and all its members (participants and groups) are moved to the new address book location.

Managing the Address Book

Guidelines

- The multi-level Address Book can only be used in a local configuration on the Collaboration Server. The hierarchical structure cannot be implemented with the Global Address Book (GAB).
- Up to ten levels can be defined in the hierarchical structure of the Address Book.
- The default name of the root level is Main. The Main root level cannot be deleted but the root level name can be modified.
- Address Book names support multilingual characters.
- Participants in the Address Book can be copied to multiple groups. However, only one participant exists in the Address Book. Groups that contain the same participants refer to the same definition of the participant entity.

Adding a Participant to the Address Book

Adding participants to the Address Book can be performed by the following methods:

- Directly in the Address Book.
- Moving or saving a participant from an ongoing conference to the Address Book.


Only defined dial-out ISDN/PSTN participants can be added to the Address Book or ongoing conferences. ISDN/PSTN participants are added to the Address Book in the same manner that H.323 and SIP participants are added.

When adding dial-out participants to the ongoing conference, the system automatically dials out to the participants using the Network Service (ISDN/PSTN or IP) defined for the connection in the participant properties.


Adding a New participant to the Address Book Directly

You can add a new participant to the Main group or to a group in the Address Book. Additionally, you can add a participant from a new conference, ongoing conference, or Conference Template.

To add a new participant to the Address Book:

- 1 In the **Address Book - Navigation** pane, select the group to where you want to add the new participant.
- 2 Click the **New Participant** button () or right-click the group to where you want to add the participant and select the **New Participant** option.

- Alternatively, click anywhere in the **List** pane and select the **New Participant** option. The **New Participant - General** dialog box opens.

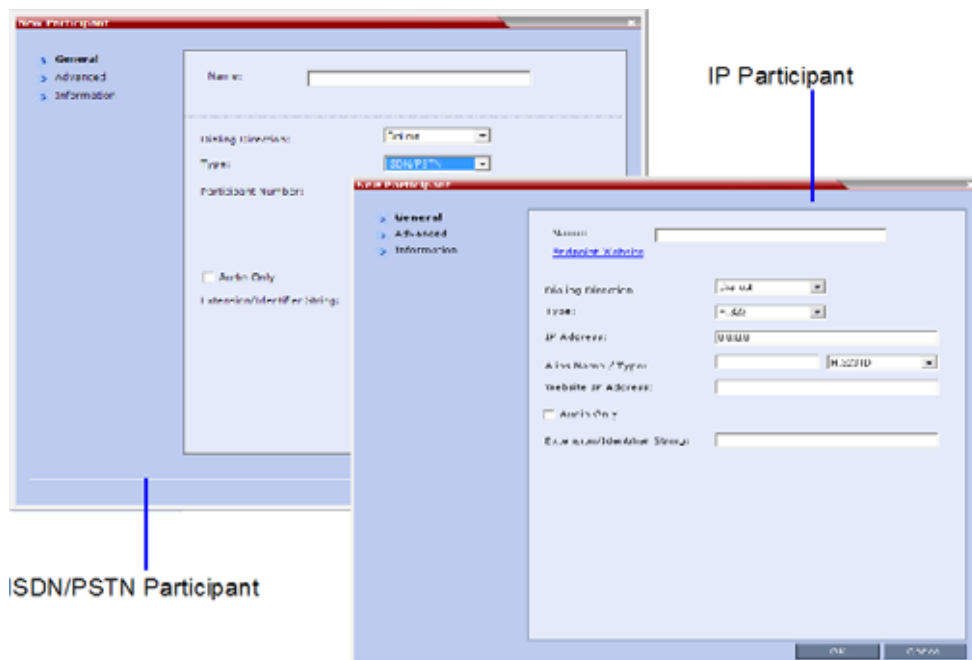

- 3 Define the following fields:

New Participant - General

Field	Description
Name	<p>Enter the name of the participant or the endpoint as it will be displayed in the Collaboration Server Web Client.</p> <p>The Name field can be modified using Unicode encoding.</p> <ul style="list-style-type: none"> English text uses ASCII encoding and can contain the most characters (length varies according to the field). European and Latin text length is approximately half the length of the maximum. Asian text length is approximately one third of the length of the maximum. <p>Maximum field length in ASCII is 80 characters.</p> <p>The maximum length of text fields varies according to the mixture of character sets used (Unicode and ASCII).</p> <p>This field may not be left blank. Duplicate participant names, comma, and semi-colon characters may not be used in this field.</p> <p>This name can also become the endpoint name that is displayed in the video layout. For more details about endpoint (site) names, see Site Names Definition</p> <p>Note: This field is displayed in all tabs.</p>
Endpoint Website (IP only)	<p>Click the Endpoint Website hyperlink to connect to the internal website of the participant's endpoint. It enables you to perform administrative, configuration and troubleshooting activities on the endpoint.</p> <p>The connection is available only if the IP address of the endpoint's internal site is defined in the Website IP Address field.</p>

New Participant - General

Field	Description
Dialing Direction	<p>Select the dialing direction:</p> <ul style="list-style-type: none"> • Dial-in – The participant dials in to the conference. This field applies to IP participants only. • Dial-out – The MCU dials out to the participant. <p>Note:</p> <ul style="list-style-type: none"> • Dial-out is forced when defining an ISDN/PSTN participant.
Type	<p>The network communication protocol used by the endpoint to connect to the conference: H.323, or SIP or ISDN/PSTN.</p> <p>The fields in the dialog box change according to the selected network type.</p>
IP Address (H.323 and SIP)	<p>Enter the IP address of the participant's endpoint.</p> <ul style="list-style-type: none"> • For H.323 participant define either the endpoint IP address or alias. • For SIP participant define either the endpoint IP address or the SIP address. <p>For Collaboration Servers registered to a gatekeeper, the Collaboration Server can be configured to dial and receive calls to and from H.323 endpoints using the IP address in the event that the Gatekeeper is not functioning.</p> <p>Note: This field is hidden for ISDN/PSTN participants.</p>
Participant Number (ISDN/PSTN Only)	<p>Enter the phone number of the ISDN/PSTN participant.</p> <p>Note: This field is only displayed when the ISDN/PSTN protocol is selected.</p>
Alias Name/Type (H.323 Only)	<p>If you are using the endpoint's alias and not the IP address, first select the type of alias and then enter the endpoint's alias:</p> <ul style="list-style-type: none"> • H.323 ID (alphanumeric ID) • E.164 (digits 0-9, * and #) • Email ID (email address format, e.g. abc@example.com) • Participant Number (digits 0-9, * and #) <p>Notes:</p> <ul style="list-style-type: none"> • Although all types are supported, the type of alias is dependent on the gatekeeper's capabilities. The most commonly supported alias types are H.323 ID and E.164. • This field is used to enter the Entry Queue ID, target Conference ID and Conference Password when defining a cascaded link. • Use of the E.164 Number is dependent on the setting of the REMOVE_IP_IF_NUMBER_EXISTS System Flag. For more information see Substituting E.164 Number in Dial String. • This field is removed from the dialog box when the ISDN/PSTN protocol is selected.


New Participant - General

Field	Description
SIP Address/Type (SIP Only)	<p>Select the format in which the SIP address is written:</p> <ul style="list-style-type: none"> SIP URI - Uses the format of an E-mail address, typically containing a user name and a host name: sip:[user]@[host]. For example, sip:dan@polycom.com. Note: If the SIP Address field contains an IPv6 address, it must be surrounded by square brackets, for example, [::1]. TEL URI - Used when the endpoint does not specify the domain that should interpret a telephone number that has been input by the user. Rather, each domain through which the request passes would be given that opportunity. <p>For example, a user in an airport might log in and send requests through an outbound proxy in the airport. If the users enters 411 (this is the phone number for local directory assistance in the United States), this number needs to be interpreted and processed by the outbound proxy in the airport, and not by the user's home domain. In this case, tel: 411 is the correct choice.</p> <p>Note: This field is removed from the dialog box when the ISDN/PSTN protocol is selected.</p>
Endpoint Website IP Address (IP only)	<p>Enter the IP address of the endpoint's internal site to enable connection to it for management and configuration purposes.</p> <p>This field is automatically completed the first time that the endpoint connects to the Collaboration Server. If the field is blank it can be manually completed by the system administrator. The field can be modified while the endpoint is connected</p>
Audio Only	Select this check box to define the participant as a voice participant, with no video capabilities.
Extension/Identifier String	<p>Dial-out participants that connect to an external device such as Cascaded Links or Recording Links may be required to enter a conference password or an identifying string to connect. Enter the required string as follows:</p> <p>[p]...[p] [string] For example: pp4566#</p> <p>p (optional) - Indicates a pause of one second before sending the DTMF string. Enter several concatenated [p]s to increase the delay before sending the string. The required delay depends on the configuration of the external device or conference IVR system.</p> <p>String - Enter the required string using the digits 0-9 and the characters * and #. The maximum number of characters that can be entered is identical to the H.323 alias length.</p> <p>If the information required to access the device/conference is composed of several strings, for example, the conference ID and the conference password, this information can be entered as one string, where pauses [p] are added between the strings for the required delays, as follows:</p> <p>[p]...[p] [string] [p]...[p] [string] . . . For example: p23pp*34p4566#</p>
Extension/Identifier String	The Collaboration Server automatically sends this information upon connection to the destination device/conference. The information is sent by the Collaboration Server as DTMF code to the destination device/conference, simulating the standard IVR procedure.

- 4 Usually, additional definitions are not required and you can use the system defaults for the remaining parameters. In such a case, click **OK**.

To modify the default settings for advanced parameters, click the **Advanced** tab.

- 5 Define the following **Advanced** parameters:

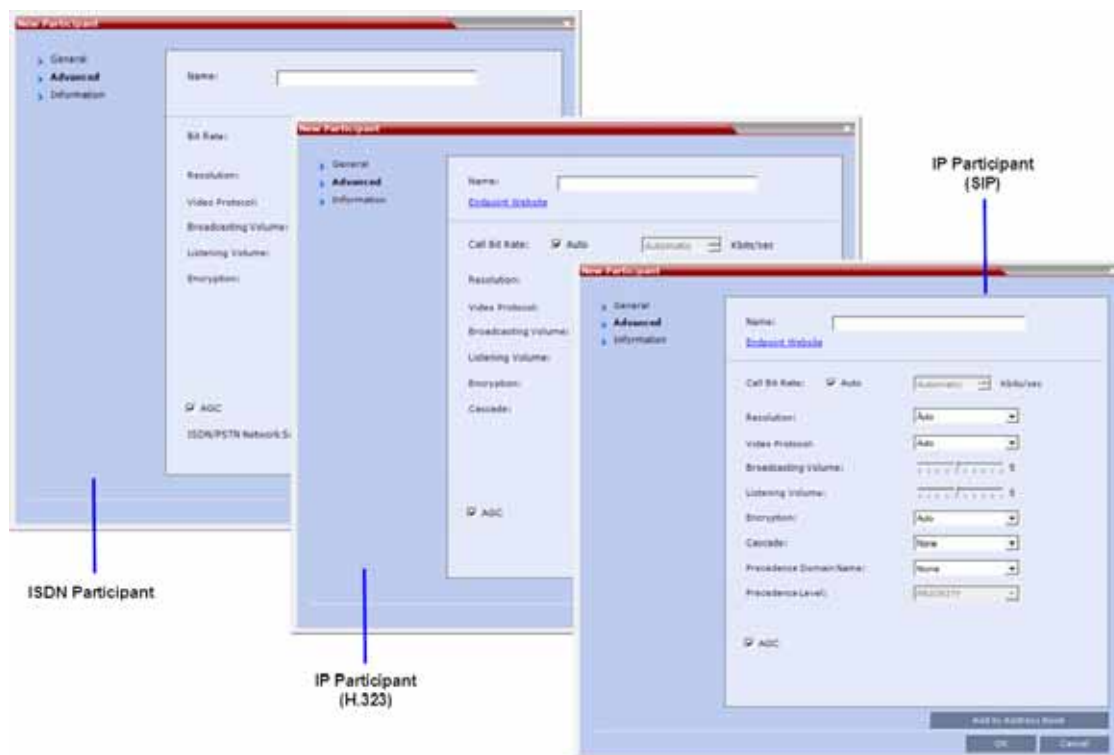

New Participant - Advanced

Field	Description
Video Bit Rate / Auto (IP Only)	<p>The Auto check box is automatically selected to use the Line Rate defined for the conference.</p> <p>Note: This check box cannot be cleared when defining a new participant during an ongoing conference.</p> <p>To specify the video rate for the endpoint, clear this check box, and then select the required video rate.</p>
Video Protocol	<p>Select the video compression standard that will be forced by the MCU on the endpoint when connecting to the conference: H.261, H.263, H.264 or RTV.</p> <p>Select Auto to let the MCU select the video protocol according to the endpoint's capabilities.</p>
Resolution	<p>The Auto check box is automatically selected to use the Resolution defined for the conference.</p> <p>To specify the Resolution for the participant, select the required resolution from the drop-down menu.</p>

New Participant - Advanced

Field	Description
Broadcasting Volume + Listening Volume	To adjust the volume the participant broadcasts to the conference or the volume the participant hears the conference, move the slider; each unit represents an increase or decrease of 3 dB (decibel). The volume scale is from 1 to 10, where 1 is the weakest and 10 is the strongest. The default connection value is 5.
Encryption	Select whether the endpoint uses encryption for its connection to the conference. Auto (default setting) indicates that the endpoint will connect according to the conference encryption setting.
AGC	AGC (Auto Gain Control) mechanism regulates noise and audio volume by keeping the received audio signals of all participants balanced. Select this check box to enable the AGC mechanism for participants with weaker audio signals. Notes: <ul style="list-style-type: none"> To be enable AGC, set the value of the ENABLE_AGC System Flag in system.cfg to YES. The flag's default value is NO. If the System Flag does not exist in the system, it must be manually added to the System Configuration. For more information see Modifying System Flags. Enabling AGC may result in amplification of background noise.
Cascaded (IP Only)	If this participant is used as a link between conferences select: <ul style="list-style-type: none"> Slave, if the participant is defined in a conference running on a Slave MCU. Master, if the participant is defined in a conference running on the Master MCU. It enables the connection of one conference directly to another conference using an H.323 connection only. The conferences can run on the same MCU or different MCU's. For more information, see Basic Cascading Using IP Cascaded Link .
Precedence Domain Name (Dial-out SIP Only)	When Multi Level Precedence and Preemption is used, this is the Precedence Domain Name for the participant. For more information see MLPP (Multi Level Precedence and Preemption) .
Precedence Level (Dial-out SIP Only)	When Multi Level Precedence and Preemption is used, this is the Precedence Level for the participant For more information see MLPP (Multi Level Precedence and Preemption) .
AGC	The Audio Gain Control (AGC) protocol that reduces noises is enabled by default for the participants. Clear this check box to disable the AGC feature.
ISDN/PSTN Network Service	Enables you to select the ISDN/PSTN network service.

6 To add general information about the participant, such as e-mail, company name, and so on, click the **Information** tab and type the necessary details in the **Info 1-4** fields. Text in the **info** fields can be added in Unicode format (length: 31 characters).

7 Click **OK**.

The new participant is added to the selected group in the address book.

Substituting E.164 Number in Dial String

Between the time a conference is scheduled and when it becomes active, the IP of an endpoint may change, especially in an environment that uses DHCP. The MCU can be set to ignore the IP address of a participant when the conference starts. Instead, the alternative E.164 number will be used.

The flag, REMOVE_IP_IF_NUMBER_EXISTS controls this option. This flag must be manually added to change its value. The values of this flag are:

- **YES** (default) - The IP address of an endpoint will be ignored if an E.164 number (or other) exists.
- **NO** - The IP address of an endpoint will be used.

Guidelines for Substituting E.164 Number in Dial String

- When this feature is enabled, the IP address field of participants in scheduled conferences and conference templates will be empty.
- In order for the MCU to ignore the IP of H.323 participants, the following requirements must be met:
 - A gatekeeper must be defined.
 - The alias of the participant must be defined.
 - The alias type must be defined (not set to None).
- If an H.323 gatekeeper is defined but is not connected, the MCU will fail to connect to H.323 dial-out participants.
- In order for the MCU to ignore the IP of SIP participants, the following requirements must be met:
 - A SIP proxy must be defined.
 - The SIP address must be defined.
- If a SIP proxy is defined but is not connected, the MCU will fail to connect to SIP dial-out participants.


Adding a Participant from an Ongoing Conference to the Address Book

You can add a participant to the Address Book directly from an ongoing conference.



When adding a participant to the address book from a new conference, Participants list of an ongoing conference or Conference Template, the participant is always added to the “Main” group.

To add a participant from the conference to the Address Book:


- 1 During an ongoing conference, select the participant in the *Participant* pane, and either click the **Add Participant to Address Book** button () , or right-click and select **Add Participant to Address Book**.

The participant is added to the Address Book.

Alternatively, you could:

- a Double-click the participant’s icon, or right-click the participant icon and select **Participant Properties**.

The **Participant Properties** window opens.

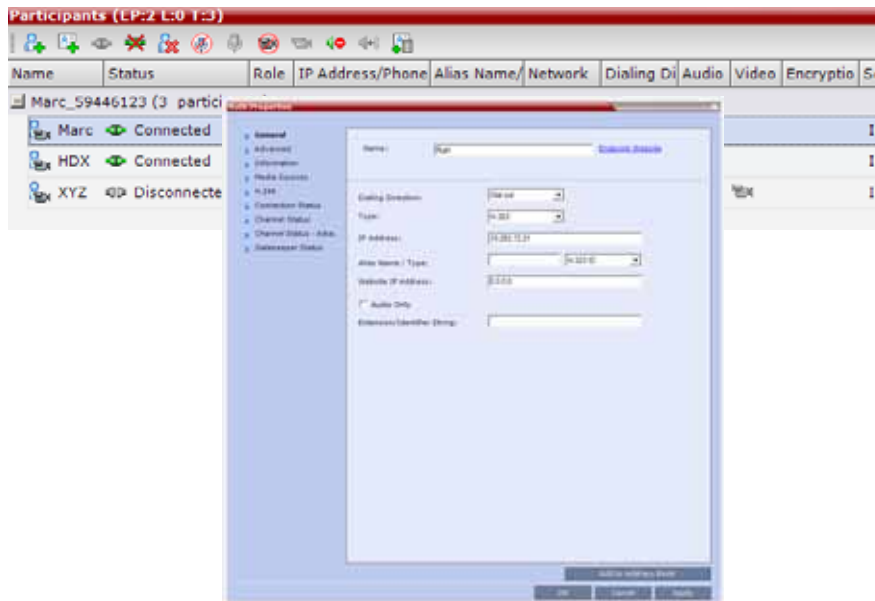

- b** Click the **Add to Address Book** button.



If the participant name is already listed in the All Participants list, an error message is displayed. In such a case, change the name of the participant before adding the participant to the address book.


Modifying Participants in the Address Book

When required, you can modify the participant's properties.

To modify participant properties in the Address Book:

- 1 In the **Address Book - Navigation** pane, select the group to where the participant to modify is listed.


- 2 In the **Address Book - List** pane, double-click the participant's icon. The **Participant's Properties** window is displayed.

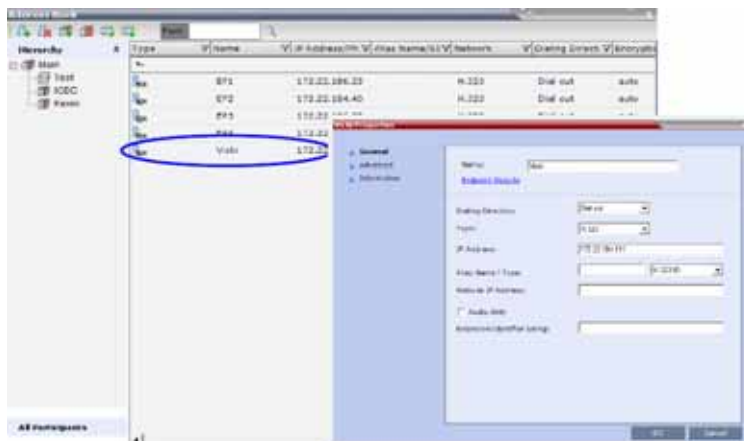


- 3 Modify the necessary properties in the window, such as dialing direction, communication protocol type, and so on. You can modify any property in any of the three tabs: **General**, **Advanced** and **Info**.
- 4 Click **OK**.
The changes to the participant's properties are updated.

Deleting Participants from the Address Book

To delete participants from the Address Book:

- 1 In the **Address Book - Navigation** pane, select the group where the participant to delete is listed.
- 2 In the **Address Book - List** pane, either select the participant to delete, and then select the **Delete Participant** () button, or right-click the participant icon and then select the **Delete Participant** option.

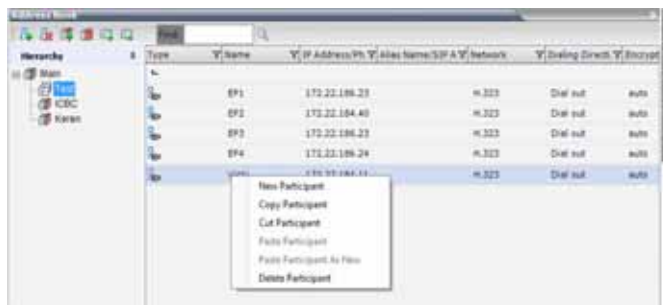

- 3 A confirmation message is displayed depending on the participant's assignment to groups in the address book:
 - a When the participant belongs to only one group: click **Yes** to permanently delete the participant from the address book.
 - b When the participant belongs to multiple groups, a message is displayed requesting whether to delete the participant from the Address Book or from the current selected group. Select:
 - ◆ **Current group** to delete the participant from the selected group

- ◆ **Address Book** to permanently delete the participant from the address book (all groups).
Click **OK** to perform the delete operation, or **Cancel** to exit the delete operation.

Copying or Moving a Participant


You can copy or move a participant from one group to another group using the Copy, Cut, and Paste options. A participant can belong to multiple groups. However, there is only one entity per participant. Groups that contain the same participants refer to the same definition of the participant entity. Alternatively, you can drag a participant from one location in the Address Book to another location, moving the participant to its new location using the drag-and-drop operation.



The cut and copy actions are not available when selecting multiple participants.

To copy or move a participant to another group:

- 1 In the **Address Book - Navigation** pane, select the group from where to copy the participant.
- 2 In the **Address Book - List** pane, select the participant you want to copy.
- 3 Right-click the selected participant, and select one of the following functions from the drop-down menu:

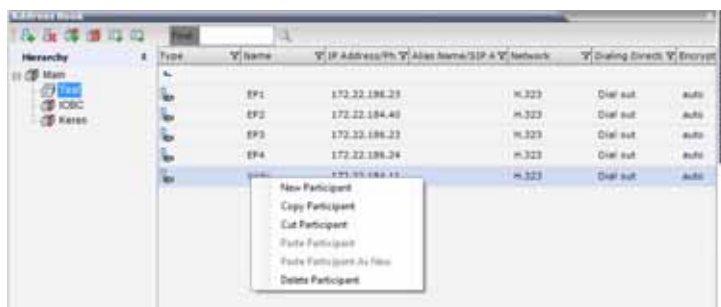

Copy / Move Participant

Function	Description
Copy Participant	Copies the participant to be pasted into an additional group.
Cut Participant	Moves the participant from the current group to a different group. Alternatively, you can move a participant to another location by dragging the participant to the new location.

- 4 In the **Address Book - Navigation** pane, navigate and select the group in which you want to paste the participant.
- 5 Right-click the selected group, and click one of the following **Paste** functions from the drop-down menu:

Paste Participant

Function	Description
Paste Participant	Creates a link to the participant entity in the pasted location.
Paste Participant as New	Pastes as a new participant into the selected group. This paste action adds “Copy” to the end of the participant name.

To drag a participant from an address book group to another group:

- 1 Select the participant or participants you want to move.
- 2 Click and hold the left mouse button and drag the selection to the new group.
The participants are moved to the new address book group.

Searching the Address Book


You can search the Address Book for a participant's name or a group name only on the currently selected group/level.

To search for participants or groups in the current selected level:

- 1 In the **Address Book - Navigation** pane, select the group/level within to run the search.
- 2 In the Address Book toolbar, activate the search option by clicking the **Find** field.
The field clears and a cursor appears indicating that the field is active.



- 3 Type all or part of the participant's name or group name and click the search button.

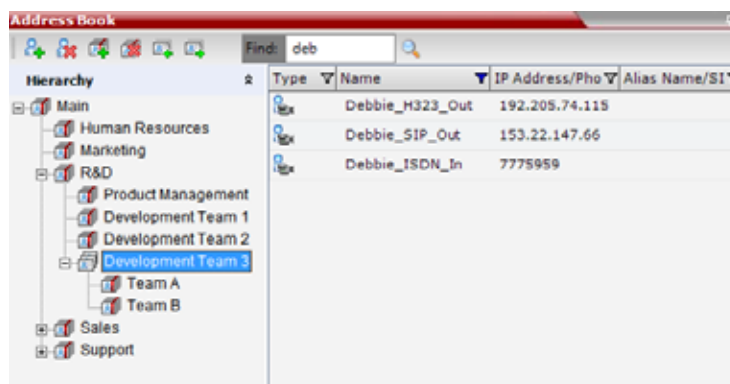

The closest matching participant entries are displayed and the Active Filter indicator turns on.

Filtering the Address Book

The entries in an address book group can be filtered to display only the entries (participants or groups) that meet criteria that you specify and hides entries that you do not want displayed. It enables you to select and work with a subset of Address Book entries.

You can filter by more than one column, by adding additional filters (columns).

The filter applies to the displayed group. If All Participants option is selected, it applies to all the listed participants.

Filtering can be done using:

- A predefined pattern
- Customized pattern


When you use the Find dialog box to search filtered data, only the data that is displayed is searched; data that is not displayed is not searched. To search all the data, clear all filters.

Filtering Address Book Data Using a Predefined Pattern

To filter the data in an address book group:

- 1 In the **Address Book - Navigation** pane, select the group to filter.
- 2 In the **Address Book - List** pane, in the column that you want to use for filtering, click the **filter** (▼) button.


A drop-down menu is displayed containing all the matching patterns that can be applied to the selected field.

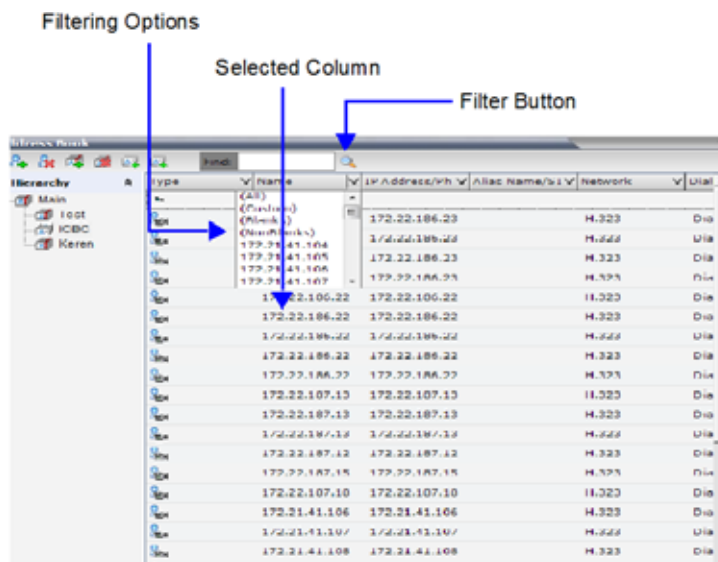

- 3 Click the matching pattern to be applied.

The filtered list is displayed with a filter indicator (▼) displayed in the selected column heading.

Example: If the user selects **172.21.41.104** as the matching pattern, the filtered group in the Address Book is displayed as follows:

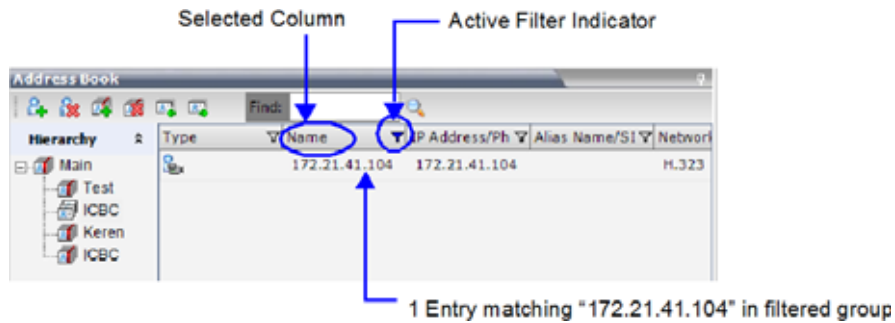


Filtering Address Book Data Using a Custom Pattern

To filter the data in an address book group:


- 1 In the **Address Book - Navigation** pane, select the group to filter.
- 2 In the **Address Book - List** pane, in the column that you want to use for filtering, click the **filter** (▼) button.

- 3 Select the **(Custom)** option from the drop-down list.

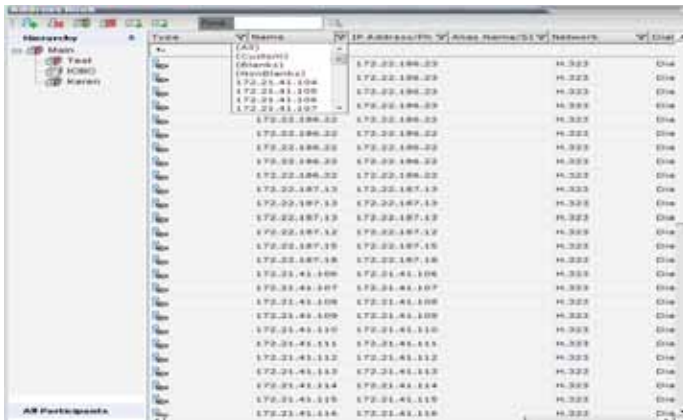

Name	IP Address/Port	Access Name	Network	Dialog
(All)				
Custom	172.22.100.23	H.323	172.22.100.23	Disa
Handshake	172.22.100.23	H.323	172.22.100.23	Disa
172.22.41.100	172.22.41.100	H.323	172.22.41.100	Disa
172.22.41.107	172.22.41.107	H.323	172.22.41.107	Disa
172.22.100.22	172.22.100.22	H.323	172.22.100.22	Disa
172.22.100.22	172.22.100.22	H.323	172.22.100.22	Disa
172.22.100.22	172.22.100.22	H.323	172.22.100.22	Disa
172.22.100.22	172.22.100.22	H.323	172.22.100.22	Disa
172.22.100.22	172.22.100.22	H.323	172.22.100.22	Disa
172.22.100.22	172.22.100.22	H.323	172.22.100.22	Disa
172.22.100.22	172.22.100.22	H.323	172.22.100.22	Disa
172.22.107.13	172.22.107.13	H.323	172.22.107.13	Disa
172.22.107.13	172.22.107.13	H.323	172.22.107.13	Disa
172.22.107.13	172.22.107.13	H.323	172.22.107.13	Disa
172.22.107.13	172.22.107.13	H.323	172.22.107.13	Disa
172.22.107.13	172.22.107.13	H.323	172.22.107.13	Disa
172.22.107.13	172.22.107.13	H.323	172.22.107.13	Disa
172.22.107.13	172.22.107.13	H.323	172.22.107.13	Disa
172.21.41.100	172.21.41.100	H.323	172.21.41.100	Disa
172.21.41.100	172.21.41.100	H.323	172.21.41.100	Disa
172.21.41.100	172.21.41.100	H.323	172.21.41.100	Disa
172.21.41.100	172.21.41.100	H.323	172.21.41.100	Disa
172.21.41.100	172.21.41.100	H.323	172.21.41.100	Disa
172.21.41.100	172.21.41.100	H.323	172.21.41.100	Disa
172.21.41.112	172.21.41.112	H.323	172.21.41.112	Disa
172.21.41.112	172.21.41.112	H.323	172.21.41.112	Disa
172.21.41.112	172.21.41.112	H.323	172.21.41.112	Disa
172.21.41.114	172.21.41.114	H.323	172.21.41.114	Disa
172.21.41.114	172.21.41.114	H.323	172.21.41.114	Disa
172.21.41.115	172.21.41.115	H.323	172.21.41.115	Disa
172.21.41.116	172.21.41.116	H.323	172.21.41.116	Disa

The **Custom Filtering** dialog box opens.

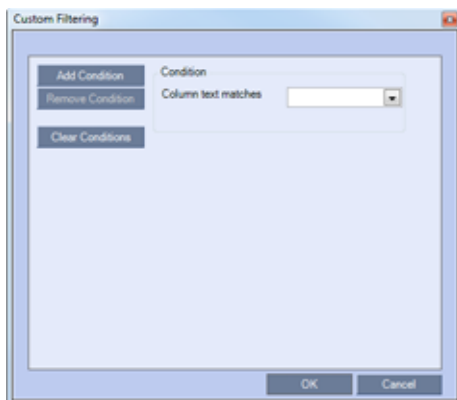

- 4 In the **Condition - Column text matches** field, enter the filtering pattern.
For example, to list only endpoints that include the numerals 41 in their name, enter 41.
- 5 To add filtering patterns to further filter the list or fine tune your search, click **Add Condition**.

- To clear a filtering pattern, click **Clear Condition**.

The filtered list is displayed with an active filter (blue) indicator (▼) displayed in the selected column heading.

For example, if the filtering pattern is 41, the participants list includes all the endpoints that contain the numerals 41 in their name.

Type	Name	IP Address/P	Alias Name/SI	Network
Host	172.21.41.104	172.21.41.104		H.323
Host	172.21.41.105	172.21.41.105		H.323
Host	172.21.41.106	172.21.41.106		H.323
Host	172.21.41.107	172.21.41.107		H.323
Host	172.21.41.108	172.21.41.108		H.323
Host	172.21.41.109	172.21.41.109		H.323
Host	172.21.41.110	172.21.41.110		H.323
Host	172.21.41.111	172.21.41.111		H.323
Host	172.21.41.112	172.21.41.112		H.323
Host	172.21.41.113	172.21.41.113		H.323
Host	172.21.41.114	172.21.41.114		H.323
Host	172.21.41.115	172.21.41.115		H.323
Host	172.21.41.116	172.21.41.116		H.323
Host	172.21.41.117	172.21.41.117		H.323
Host	172.21.41.118	172.21.41.118		H.323

Clearing the Filter

To clear the filter and display all entries:

- In the filtered Address Book column heading, click the **Active Filter** indicator. The pattern matching options menu is displayed.
- Click **(All)**.

Type	Name	IP Address/P	Alias Name/SI	Network
Host	(All)	172.21.41.104		H.323
Host	(Custom)	172.21.41.105		H.323
Host	(Blanks)	172.21.41.106		H.323
Host	(NonBlanks)	172.21.41.107		H.323
Host	172.21.41.104	172.21.41.108		H.323
Host	172.21.41.105	172.21.41.109		H.323
Host	172.21.41.106	172.21.41.110		H.323
Host	172.21.41.107	172.21.41.111		H.323
Host	172.21.41.109	172.21.41.112		H.323
Host	172.21.41.110	172.21.41.113		H.323
Host	172.21.41.111	172.21.41.114		H.323
Host	172.21.41.112	172.21.41.115		H.323
Host	172.21.41.113	172.21.41.116		H.323
Host	172.21.41.114	172.21.41.117		H.323
Host	172.21.41.115	172.21.41.118		H.323
Host	172.21.41.116			H.323
Host	172.21.41.117			H.323
Host	172.21.41.118			H.323

The filter is deactivated and all the group/level entries are displayed.

Obtaining the Display Name from the Address Book

The MCU can be configured to replace the name of the dial-in participant as defined in the endpoint (site name) with the name defined in the Address Book.

In this process, the system retrieves the data (name, alias, number or IP address) of the dial-in participant and compares it first with the conference defined dial-in participants and if the endpoint is not found, it then searches for the endpoint with entries in the address book. After a match is found, the system displays the participant name as defined in the address book instead of the site name, in both the video layout and the Collaboration Server Web Client/Manager.

The system compares the following endpoint data with the address book entries:

- For H.323 participants, the system compares the IP address, Alias, or H.323 number.
- For SIP participants, the system compares the IP address or the SIP URI.

Guidelines for Obtaining the Display Name from the Address Book

- Only Users with Administrator and Operator Authorization Levels are allowed to enable and disable the Obtain Display Name from Address Book feature.
- This feature is supported for IPv4 participants only.


Enabling and Disabling the Obtain Display Name from Address Book Feature

The Obtain Display Name from Address Book option can be enabled for all participants connecting to the MCU if the name of the participants are defined in the Address Book.

To enable or disable the Obtain Display Name from Address Book option:

- 1 On the Collaboration Server main menu bar, select **Setup > Customize Display Settings > Ongoing Conferences**.

The **Ongoing Conferences** dialog box is displayed.

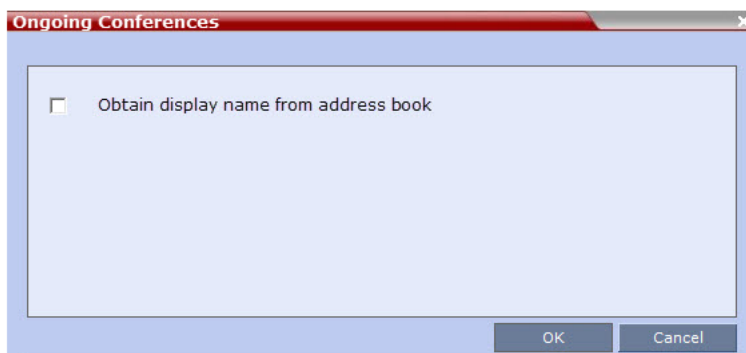

- 2 Select the **Obtain display name from address book** check box to enable the feature or clear the check box to disable the feature.
- 3 Click **OK**.

Importing and Exporting Address Books

Address Books are proprietary Polycom data files that can only be distributed among Collaboration Server units. The Address Books are exported in XML format, which are editable offline. If no name is assigned to the exported Address Book, the default file name is:


```
EMA.DataObjects.OfflineTemplates.AddressbookContent_.xml
```

Exporting an Address Book

To Export an Address Book:

- 1 In the Address Book pane, click the **Export Address Book** () button, or right-click an empty area in the pane, and click **Export Address Book**.

The **Export Address Book** dialog box is displayed.

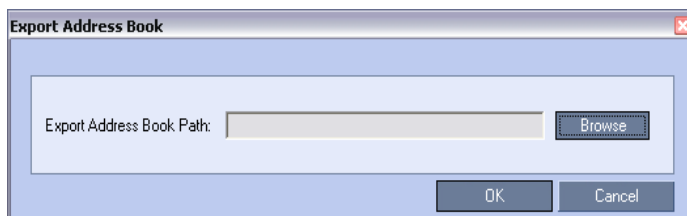

- 2 Enter the desired path, or click the **Browse** button.
- 3 In the **Save Address Book** dialog box, select the directory to save the file. You may also rename the file in the File Name field.
- 4 Click **Save**.
You will return to the **Export File** dialog box.
- 5 Click **OK**.


The exported Address Book is saved in the selected folder in XML format.

Importing an Address Book

To Import and Address Book:

- 1 In the **Address Book** pane, click the **Import Address Book** () button, or right-click an empty area in the pane, and then click **Import Address Book**.

The **Import Address Book** dialog box is displayed.

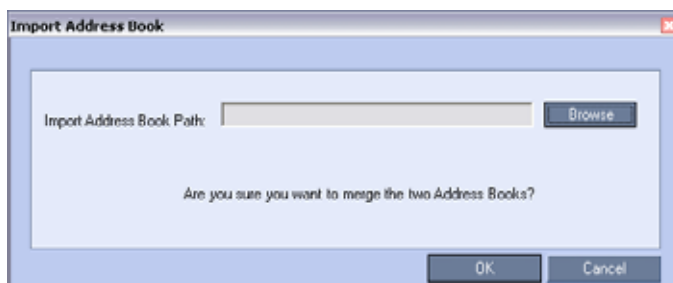

- 2 Enter the path from which to import the Address Book, or click the **Browse** button.

- 3 In the **Open** dialog box navigate to the desired Address Book file (in XML format) to import.



When importing an Address Book, participants with exact names in the current Address Book will be overwritten by participants defined in the imported Address Book.

- 4 Click **Open**.

You will return to the **Import File** dialog box.

- 5 Click **OK**.

The Address Book is imported and a confirmation message is displayed at the end of the process.

- 6 Click **Close**.

Upgrading and Downgrading Considerations

When upgrading to a multi-level address book version from a single-level address book, the following factors have to be taken into consideration:

- The system automatically creates a new address book with a different name and modifies the new address book to a multi-level hierarchical address book.
- By default, the address book contains two levels:
 - The top level (root) named Main.
 - Second level - All address book groups from the single-level address book are placed under the Main group with their associated participants.
- Participants that were not previously associated with any group in the Address Book are placed in the Main group.
- All participants in the Address Book appear in the All Participants group.
- During the upgrade process, the single-level address book file is save in the system to enable a future the downgrade of the version to a previous, single-level address book version (if required).

When downgrading from a multi-level address book version to a single-level address book version, the multi-level address book is replaced during the downgrade process by the single-level address book that was saved during the upgrade process.

Integrating the Global Address Book (GAB) with the Collaboration Server

The RealPresence Resource Manager includes a Global Address Book (GAB) with all registered endpoints. This address book can be used by the RealPresence Collaboration Server users to add participants to conferences.

Integration with Resource Manager

- The RealPresence Collaboration Server can use only one address book at a time.

- The Collaboration Server uses the RealPresence Resource Manager address book in read-only mode. You can only add or modify the address book entries from the RealPresence Resource Manager.

To Integrate the RealPresence Resource Manager Global Address Book (GAB) with the Collaboration Server:


- 1 In the RealPresence Resource Manager, manually add the Polycom Collaboration Server system to the RealPresence Resource Manager as directed in the *RealPresence Resource Manager Operations Guide*.
- 2 In the RealPresence Resource Manager, add a user or use an existing user for Collaboration Server login as directed in the *RealPresence Resource Manager Operations Guide*.

Write down the User Name and Password as they will be used later to define the Collaboration Server connection to the RealPresence Resource Manager Address Book.

RealPresence Collaboration Server Side

- 1 On the **RealPresence Collaboration Server** menu, click **Setup > System Configuration**.

The **System Flags - MCMS_PARAMETERS_USER** dialog box opens.

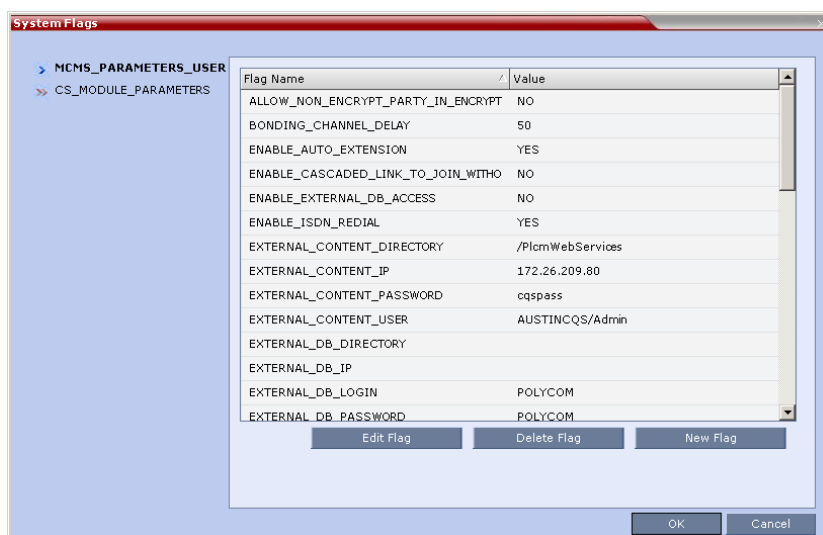

- 2 Modify the values of the flags in the table below.

For more information, see [Modifying System Flags](#).

System Flags for CMA Address Book Integration

Flag	Description
EXTERNAL_CONTENT_DIRECTORY	The Web Server folder name. Change this name if you have changed the default names used by the RealPresence Resource Manager or Polycom CMA application. Default: /PlcmWebServices

System Flags for CMA Address Book Integration

Flag	Description
EXTERNAL_CONTENT_IP	Enter the IP address of the RealPresence Resource Manager or Polycom CMA server. For example: 172.22.185.89. This flag is also the trigger for replacing the internal Collaboration Server address book with the RealPresence Resource Manager or Polycom CMA Global Address Book (GAB). Leave this flag blank to disable address book integration with the RealPresence Resource Manager or Polycom CMA server.
EXTERNAL_CONTENT_PASSWORD	The password associated with the user name defined for the Collaboration Server in the RealPresence Resource Manager or Polycom CMA server.
EXTERNAL_CONTENT_USER	The login name defined for the Collaboration Server in the RealPresence Resource Manager or Polycom CMA server defined in the format: domain name/user name.

- 3 Click **OK** to complete the definitions.
- 4 When prompted, click **Yes** to reset the MCU and implement the changes to the system configuration.

Scheduling Reservations

The Reservations option enables users to schedule conferences. These conferences can be launched immediately or become ongoing, at a specified time on a specified date.

Scheduling a conference reservation requires definition of conference parameters such as the date and time at which the conference is to start, the participants and the duration of the conference.

Scheduled conferences (Reservations) can occur once or repeatedly, and the recurrence pattern can vary.

By default, the *Scheduler* is enabled by a System Flag. The flag prevents potential scheduling conflicts from occurring as a result of system calls from external scheduling applications such as RealPresence Resource Manager, ReadManager®, SE200, and others via the API.

If an external scheduling application is used, the flag INTERNAL_SCHEDULER must be manually added to the System Configuration and its value must be set to NO.

For more information see [Modifying System Flags](#).



Note: Resource Capacities and Operational Specifications

For information about Resource Capacities and other operational specifications, see the *RealPresence® Collaboration Server (RMX) Hardware Guide* specific to your system.



Note: Using Reservations with RealPresence DMA

In the *Polycom® RealPresence® Web Suite* solution, Reservations are defined in the RealPresence DMA system component and should not be defined directly in the RealPresence Collaboration Server (RMX) 1800/2000/4000 component.

System resources are calculated according to the Collaboration Server's license. For more information, see [Forcing Video Resource Allocation to CIF Resolution](#).

System resource availability is partially checked when reservations are created:

- If a conference duration extension request is received from an ongoing conference, the request is rejected if it would cause a resource conflict.
- If several reservations are scheduled to be activated at the same time and there are not enough resources for all participants to be connected:
 - The conferences are activated.
 - Participants are connected to all the ongoing conferences until all system resources are used up.

If sufficient resources are not available in the system and a scheduled Reservation cannot be activated, the Reservation is deleted from the schedule.

In RealPresence Collaboration Server (RMX) 1800/2000/4000 resources for Reservations are also calculated using the Reserve Resources for Audio/Video Participants fields of the New Reservation dialog box.

Resources are reserved for participants at the highest video resolution supported by the Line Rate specified in the conference Profile and up to the maximum system video resolution specified by the Resolution Configuration dialog box.

When a new Reservation is created in the Reservation Calendar, the effect of the new Reservation (including its recurrences) on available resources is checked. If resource deficiencies are found an error message is displayed.

Defined dial-in or dial-out participants, Meeting Rooms, Entry Queues and new connections to Ongoing conferences are not included in the resources calculation.

A Reservation that has been activated and becomes an ongoing conference is deleted from the Reservation Calendar list.

The maximum number of concurrent reservations is 80. Reservations with durations that overlap (for any amount of time) are considered to be concurrent.

System resource availability is partially checked when reservations are created:

- If a conference duration extension request is received from an ongoing conference, the request is rejected if it would cause a resource conflict.
- If several reservations are scheduled to be activated at the same time and there are not enough resources for all participants to be connected:
 - The conferences are activated.
 - Participants are connected to all the ongoing conferences until all system resources are used up.

A scheduled Reservation cannot be activated and is deleted from the schedule if:

- An Ongoing conference has the same Numeric ID.
- Sufficient resources are not available in the system.

If a problem prevents a Reservation from being activated at its schedule time, the Reservation will not be activated at all. This applies even if the problem is resolved during the Reservation's scheduled time slot.

A Profile that is assigned to a Reservation cannot be deleted.


Reservations are backed up and restored during **Setup > Software Management > Backup / Restore Configuration** operations. For more information see [Software Management](#).


All existing reservations are erased by the **Standard Restore** option of the **Administration > Tools > Restore Factory Defaults** procedure.

Reservations can also be scheduled from Conference Templates. For more information see [Scheduling a Reservation From a Conference Template](#).

Using the Reservation Calendar

To open the Reservation Calendar:



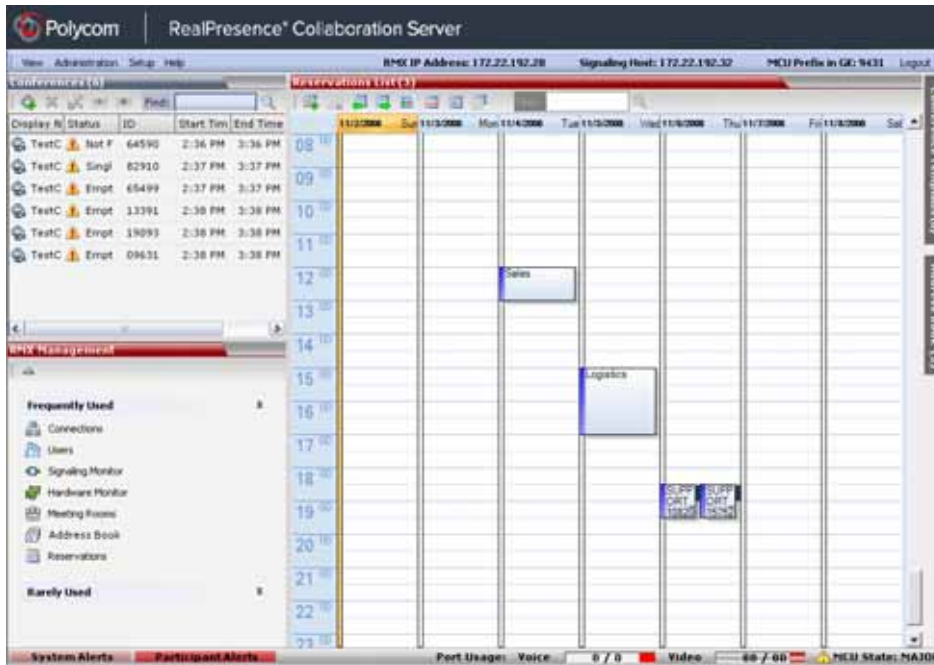


- In the **RMX Management** pane, click the **Reservation Calendar** button ().






Toolbar Buttons

The toolbar buttons functions are described in the table below.

Reservations – Toolbar Buttons

Button	Description
 New Reservation	Create a new reservation. The date and time of the new reservation is set according to the highlighted blocks on the Reservation Calendar .
 Delete Reservation	Click to delete the selected reservation.
 Back	Click to show the previous day or week, depending on whether Show Day or Show Week is the selected.
 Next	Click to show the next day or week, depending on whether Show Day or Show Week is the selected.
 Today	Click to show the current date in the Reservation Calendar in either Show Day or Show Week view.

Button	Description
 Show Week	Change the calendar view to weekly display, showing a calendar week: Sunday through Saturday
 Show Day	Click this button to show the day containing the selected time slot.
 Reservations List	Click to change to List View and display a list of all reservations.
<input data-bbox="207 604 456 642" type="text" value="Find:"/>	Used to search for reservations by Display Name. (Available in Reservations List view only).

Reservations Views

The *Reservation Calendar* list has the following views available:


- Week
- Day
- Today
- List

In all views the Main Window List Pane header displays the total number of reservations in the system.

Reservations List (6)


Week View

By default the Reservation Calendar is displayed in Week view with the current date highlighted in orange.

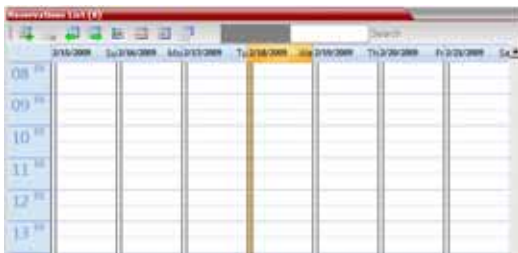


Day View

A single day is displayed.

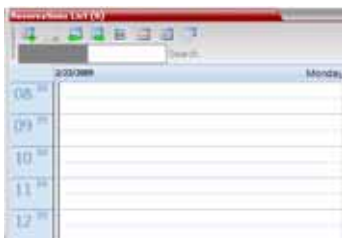

Today View

The current date (Today), highlighted in orange, can be viewed in both Week View and Day View.

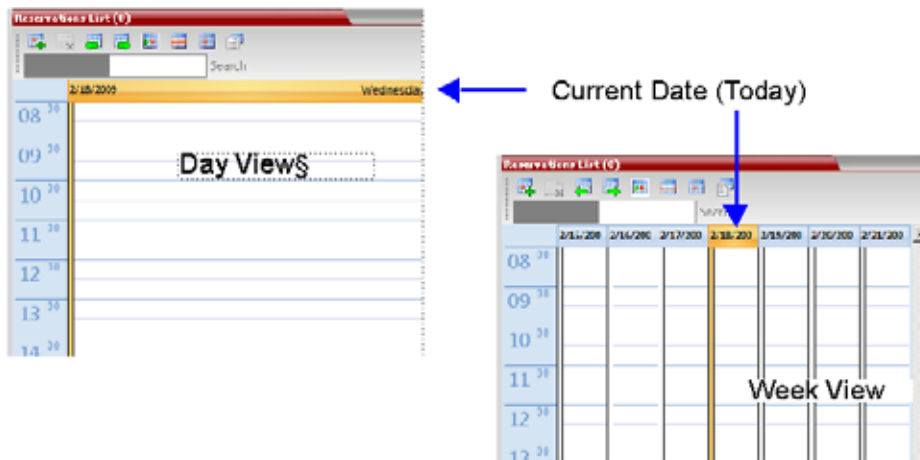

List View

List View does not have a calendar based format.

Reservations List (6)									
Display Name	ID	Start Time	End Time	Internal ID	Status	Conference Passw	Profile		
SUPPORT_180	17989	07/11/2008 05:00	07/11/2008 05:30	183	ok	987654	Factory_Video_Profile		
SUPPORT_157	91272	06/11/2008 18:30	06/11/2008 19:30	169	ok		Factory_Video_Profile		
SUPPORT_108	97493	06/11/2008 18:30	06/11/2008 19:30	170	ok		Factory_Video_Profile		
Logistics	00582	05/11/2008 15:00	05/11/2008 17:00	168	ok		Factory_Video_Profile		
Sales	12295	04/11/2008 12:00	04/11/2008 13:00	167	ok		Factory_Video_Profile		
deb_template1	20940	02/11/2008 23:45	03/11/2008 00:45	127	ok		Factory_Video_Profile		


All Reservations are listed by:

• Display Name	• End Time
• ID	• Status
• Internal ID	• Conference Password
• Start Time	• Profile


The Reservations can be sorted, searched and browsed by any of the listed fields.


Changing the Calendar View

To change between Week and Day views:

1 In Week View: In the **Reservation Calendar** toolbar, click **Show Day** () to change to Day View.

or


In Day View: In the **Reservation Calendar** toolbar, click **Show Week** () to change to Week View.

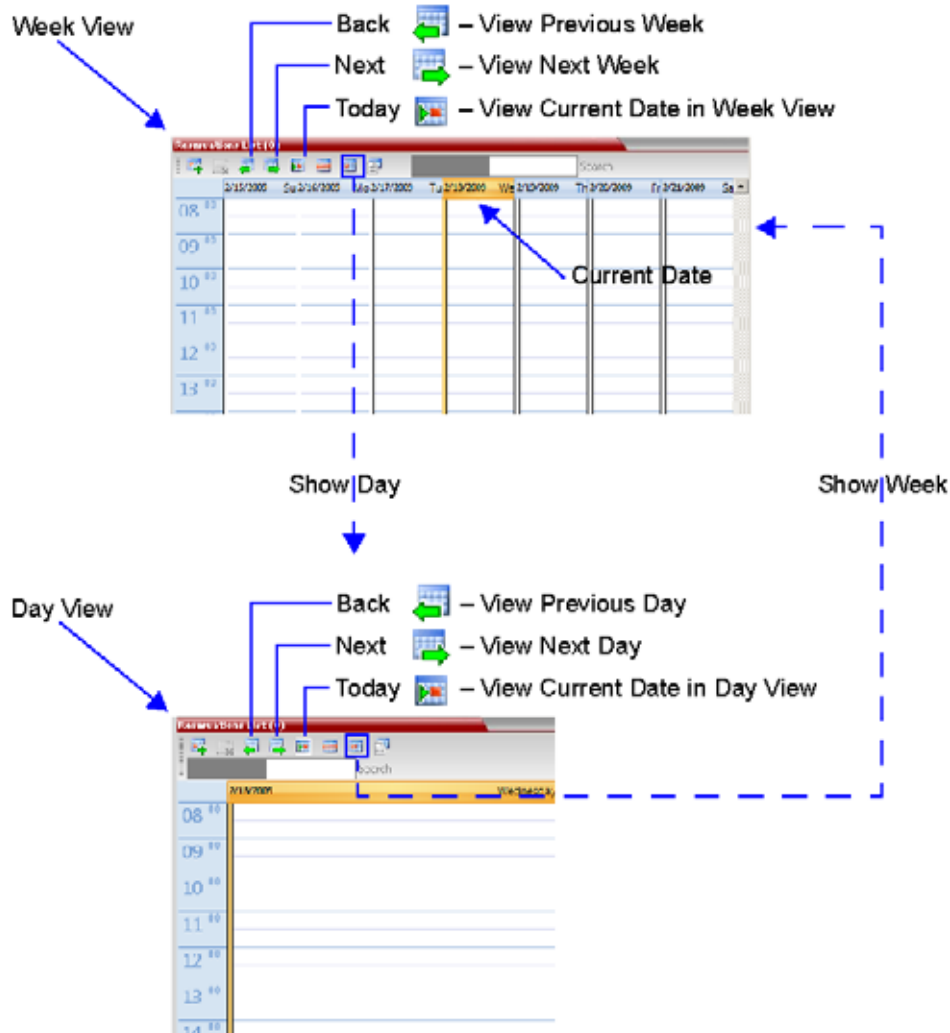


To view Today (the current date):

- In Week View or Day View, in the Reservation Calendar toolbar, click the **Today** (📅) button to have the current date displayed within the selected view.

Week View

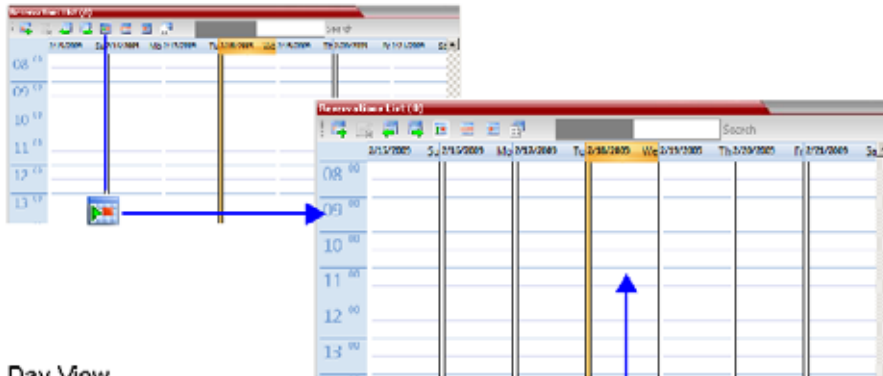

Day View

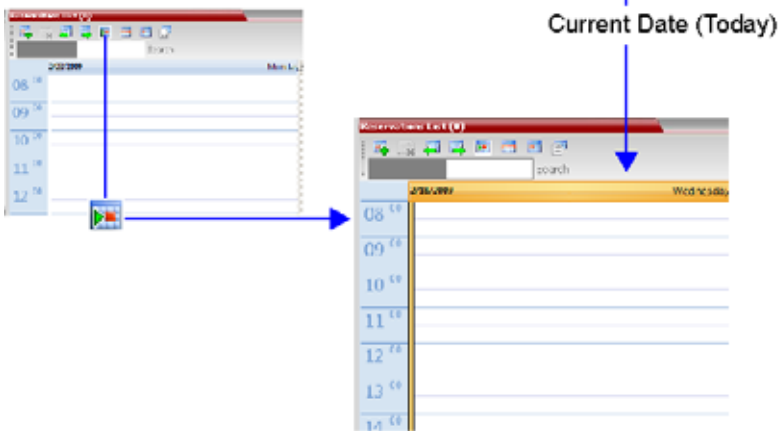

To change to List View:

- In the **Reservation Calendar** toolbar, click, the **Reservations List** (📄) button. The **Reservations List** is displayed.

Display Name	ID	Start Time	End Time	Internal ID	Status	Conference Passw	Profile
SUPPORT_100	17989	07/11/2008 05:00	07/11/2008 05:30	103	ok	987654	Factory_Video_Profile
SUPPORT_157	91272	06/11/2008 18:30	06/11/2008 19:30	169	ok		Factory_Video_Profile
SUPPORT_108	97493	06/11/2008 18:30	06/11/2008 19:30	170	ok		Factory_Video_Profile
Logistics	00582	05/11/2008 15:00	05/11/2008 17:00	160	ok		Factory_Video_Profile
Sales	12295	04/11/2008 12:00	04/11/2008 13:00	167	ok		Factory_Video_Profile
deb_template1	20940	02/11/2008 23:45	03/11/2008 00:45	127	ok		Factory_Video_Profile

- To sort the data by any field (column heading), click on the column heading. A ▾ or ▲ symbol is displayed in the column heading indicating that the list is sorted by this field, as well as the sort order.
- To toggle the column's sort order, click on the column heading.

To return to Calendar View:

- In the Reservation Calendar toolbar, click any of the buttons (**Show Week/Show Day/Today**) to return to the required Reservation Calendar view.


Scheduling Conferences Using the Reservation Calendar


Creating a New Reservation

There are three methods of creating a new reservation:

- **Method I** – Creating a reservation with default duration of 1 hour
- **Method II** – Creating a reservation with default duration of ½ hour
- **Method III** – Interactively define the reservation duration

Each method requires the selection of a starting time slot in the Reservation Calendar. The default time slot is the current half-hour period of local time.

In all views, if the New Reservation () button is clicked without selecting a starting time slot, or if a time slot is selected that is in the past, the Reservation becomes an Ongoing conference immediately and is not added to the Reservations calendar.

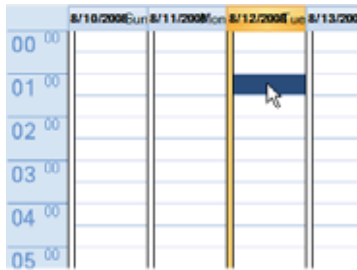

After selecting a starting time slot in the Reservation Calendar you can create a reservation with a default duration derived from the creation method used or by interactively defining the duration of the reservation.

Method I – To create a reservation with default duration of 1 hour:


- » In the Reservation Calendar toolbar, click the **New Reservation** () button to create a reservation of 1 hour duration.

Method II – To create a reservation with default duration of ½ hour:


- » Right-click and select **New Reservation** to create a reservation of ½ hour default duration.

Method III – To interactively define the duration:

- 1 In the calendar, click & drag to expand the time slot to select the required **Date**, **Start Time** and **Duration** for the reservation.

- 2 In the **Reservation Calendar** toolbar, click the **New Reservation** () button or right-click and select **New Reservation**.

Example: The following click & drag sequence would select a reservation for Tuesday, August 12, 2008, starting at 01:00 with a duration of 4 hours.

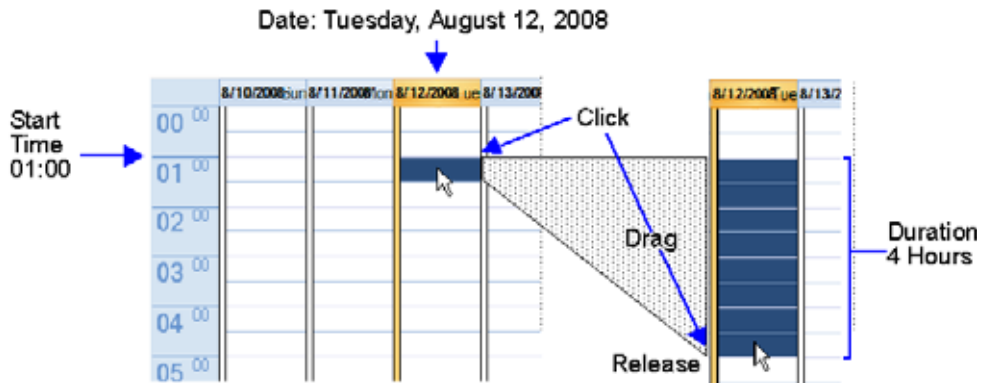

The duration of reservations created by any of the above methods can be modified in the Scheduler tab of the New Reservation dialog box.

To create a new reservation:

- 1 Open the **Reservation Calendar**.
- 2 Select a starting time slot.

- 3 Create the reservation using one of the three methods described above. The **New Reservation – General** tab dialog box opens.

All the fields are the same as for the **New Conference – General** dialog box. For more information, refer to [General Tab](#).

New Reservation – Reserved Resources

Field	Description
Reserve Resources for Video Participants	Enter the number of video participants for which the system must reserve resources. Default: 0 participants.
Reserve Resources for Audio Participants	Enter the number of audio participants for which the system must reserve resources. Default: 0 participants.




Note: Changes before activation

When a Conference Profile is assigned to a Meeting Room or a Reservation, the Profile's parameters are not embedded in the Reservation, and are taken from the Profile when the reservation becomes an ongoing conference. Therefore, any changes to the Profile parameters between the time the Reservation or Meeting Room was created and the time that it is activated (and becomes an ongoing conference) will be applied to the conference.

If the user wants to save the current parameters, a different Profile with these parameters must be assigned, or a different Profile with the new parameters must be created.

4 Click the **Schedule** tab.

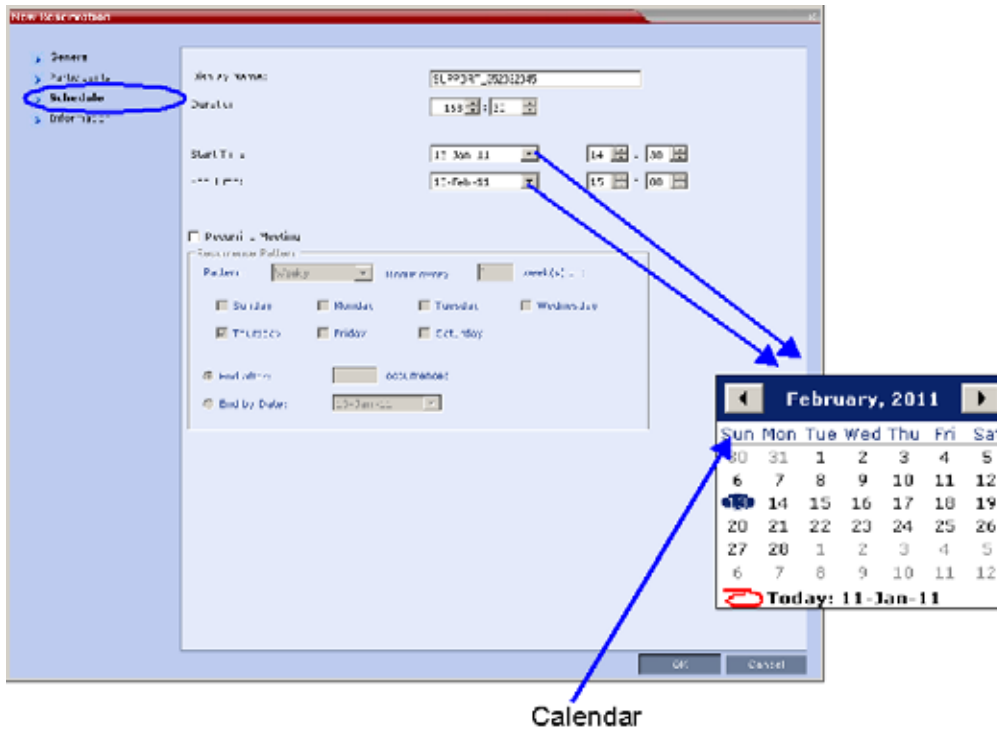

Calendar

5 Adjust the new reservation's schedule by modifying the fields as described in the table below.

New Reservation – Schedule Tab

Field	Description
Start Time	<p>Select the Start Time of the Reservation.</p> <ul style="list-style-type: none"> The Start/End Times of the Reservation are initially taken from the time slot selected in the Reservation Calendar. The Start/End Times can be adjusted by typing in the hours and minutes fields or by clicking the arrow buttons. The Start/End dates can be adjusted by typing in the date field or by clicking the arrow buttons or using the calendar.
End Time	<p>Select the End Time of the Reservation.</p> <ul style="list-style-type: none"> The start time of all the reservations can be manually adjusted in one operation. For more information see Adjusting the Start Times of all Reservations. End Time settings are initially calculated as Start Time + Duration. End Time settings are recalculated if Start Time settings are changed. <p>Changes to End Time settings do not affect Start Time settings. However, the Duration of the Reservation is recalculated.</p>
Recurring Meeting	<p>Select this option to set up a Recurring Reservation - a series of Reservations to be repeated on a regular basis.</p> <p>To create a recurring reservation, you must define a time period and a recurrence pattern of how often the Reservation should occur: Daily, Weekly or Monthly.</p>

New Reservation – Schedule Tab

Field	Description	
Recurrence Pattern	Daily <hr/>	If Daily is selected, the system automatically selects all the days of the week. To de-select days (for example, weekends) clear their check boxes.
	Weekly <hr/>	If Weekly is selected, the system automatically selects the day of the week for the Reservation from the day selected in the Reservation Calendar. You can also define the recurrence interval in weeks. For example, if you want the reservation to occur every second week, enter 2 in the Recur every _ week(s) field. To define a twice-weekly recurring Reservation, select the check box of the additional day of the week on which the Reservation is to be scheduled and set the recurrence interval to 1.
	Monthly	If Monthly is selected, the system automatically selects the day of the month as selected in the Reservation Calendar. You are required to choose a recurrence pattern: <ul style="list-style-type: none"> • Day (1-31) of every (1-12) month(s) - Repeats a conference on a specified day of the month at a specified monthly interval. For example, if the first Reservation is scheduled for the 6th day of the current month and the monthly interval is set to 1, the monthly Reservation will occur on the 6th day of each of the following months. • The (first, second, ..., last) (Sun-Sat) of x month(s) - Repeats a Reservation in a particular week, on a specified day of the week at the specified monthly interval. For example, a recurrent meeting on the third Monday every second month.
<p>A series of Reservations can be set to end after a specified number of occurrences or by a specific date. Select one of the following methods of terminating the series of Reservations:</p>		
End After	End After: x Occurrences - Ends a recurring series of Reservations after a specific number (x) of occurrences. Default: 1 (Leaving the field blank defaults to 1 occurrence.)	
End by Date	End By Date: mm/dd/yyyy - Specifies a date for the last occurrence of the recurring series of Reservations. The End By Date value can be adjusted by typing in the date field or by clicking the arrow button and using the calendar utility. Default: Current date.	

6 Click the **Participants** tab.

The fields are the same as for the **New Conference – Participants** dialog box. For more information, see [Participants Tab](#).



Participant properties are embedded in the conferencing entity and therefore, if the participant properties are modified in the Address Book (or Meeting Rooms) after the Reservation has been created they are not applied to the participant when the Reservation is activated.

7 You can add participants from the Participants Address Book.

For more information see [Adding Participants from the Address Book](#).



Between the time a conference is scheduled and when it becomes active, the IP of an endpoint may change, especially in an environment that uses DHCP. The MCU can be set to ignore the IP address of a participant when the conference starts. Instead, the alternative E.164 number will be used instead of the IP address. For more information see [Substituting E.164 Number in Dial String](#).

8 **Optional.** Add information to the reservation.

Information entered in the **Information** tab is written to the Call Detail Record (CDR) when the reservation is activated. Changes made to this information before it becomes an ongoing conference will be saved to the CDR.

For more information see [Information Tab](#).

9 Click OK.

The New Reservation is created and is displayed in the **Reservation Calendar**.

If you create a recurring reservation all occurrences have the same ID. A recurring Reservation is assigned the same ISDN/PSTN dial-in number for all recurrences.

If a dial in number conflict occurs prior to the conference's start time, an alert is displayed: `ISDN dial-in number is already assigned to another conferencing entity` and the conference cannot start.

The series number (`_0000n`) of each reservation is appended to its **Display Name**.

Example:

Conference Template name: `Sales`

Display Name for single scheduled occurrence: `Sales`

If 3 recurrences of the reservation are created:

Display Name for occurrence 1: `Sales_00001`

Display Name for occurrence 2: `Sales_00002`

Display Name for occurrence 3: `Sales_00003`

Managing Reservations

Reservations can be accessed and managed via all the views of the Reservations List.

Guidelines

- The **Recurrence Pattern** fields in the **Schedule** tab that are used to create multiple occurrences of a Reservation are only displayed when the Reservation and its multiple occurrences are initially created.
- As with single occurrence Reservations, only the **Duration**, **Start Time** and **End Time** parameters of multiple occurrence reservations can be modified after the Reservation has been created.
- A single occurrence Reservation cannot be modified to become a multiple occurrence reservation.
- Reservations can only be modified one at a time and not as a group.
- If Reservations were created as a recurring series, the system gives the option to delete them individually, or all as series.

Viewing and Modifying Reservations


Reservations can be viewed and modified by using the Week and Day views of the Reservations Calendar or by using the Reservation Properties dialog box.

Using the Week and Day views of the Reservations Calendar

In the Week and Day views each Reservation is represented by a shaded square on the Reservation Calendar. Clicking on a Reservation selects the Reservation. A dark blue border is displayed around the edges of the Reservation indicating that it has been selected.

The Start Time of the Reservation is represented by the top edge of the square while the End Time is represented by the bottom edge.

The cursor changes to a vertical double arrow (⇅) when it is moved over the top and bottom sides of the square.

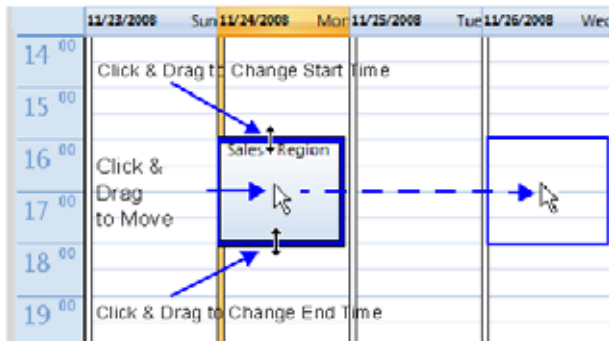

To move the Reservation to another time slot:

- 1 Select the Reservation.
- 2 Hold the mouse button down and drag the Reservation to the desired time slot.
- 3 Release the mouse button.

To change the Reservation's Start time:

- 1 Select the Reservation.
- 2 Move the mouse over the top edge of the Reservation's square.
- 3 When the cursor changes to a vertical double arrow (⇅) hold the mouse button down and drag the edge to the desired **Start Time**.
- 4 Release the mouse button.

To change the Reservation's End time:

- 1 Select the Reservation.
- 2 Move the mouse over the bottom edge of the Reservation's square.
- 3 When the cursor changes to a vertical double arrow (⇅) hold the mouse button down and drag the edge to the desired **End Time**.
- 4 Release the mouse button.

To View or Modify Reservations using the Reservation Properties dialog box:

- 1 In the Reservations List, navigate to the reservation (or its recurrences) you want to view, using the **Show Day, Show Week, Today, Back, Next** or **List** buttons.
- 2 Double-click, or right-click and select **Reservation Properties**, to select the reservation to be viewed or modified.
The **Reservation Properties – General** dialog box opens.
- 3 Select the tab(s) of the properties you want to view or modify.
- 4 **Optional.** Modify the Reservation Properties.

5 Click OK.

The dialog box closes and modifications (if any) are saved.

Adjusting the Start Times of all Reservations

When utilizing GMT offset (for example, Daylight Saving Time change), the start time of the reoccurring reservations scheduled before the Collaboration Server time change are not updated accordingly (although their start times appear correctly in the Reservations list, when checking the reservation properties the start time is incorrect).

Following the Collaboration Server time change, the start time of all reoccurring reservations must be manually adjusted in one operation.

Using this option, the start times of **all** reservations currently scheduled on the Collaboration Server are adjusted with the same offset.

To adjust the reoccurring reservations start time after the GMT Offset has been changed for Daylight Saving Time (DST) or a physical move:.


**Note: Adjustment of Reservation Time**

Adjustment of **Reservation Time** should only be performed after adjustment of Collaboration Server Time is completed as a separate procedure.


1 On the Collaboration Server menu, click Setup > RMX Time.

The **RMX Time** dialog box opens.

- Click the **Adjust Reservations Time** button.

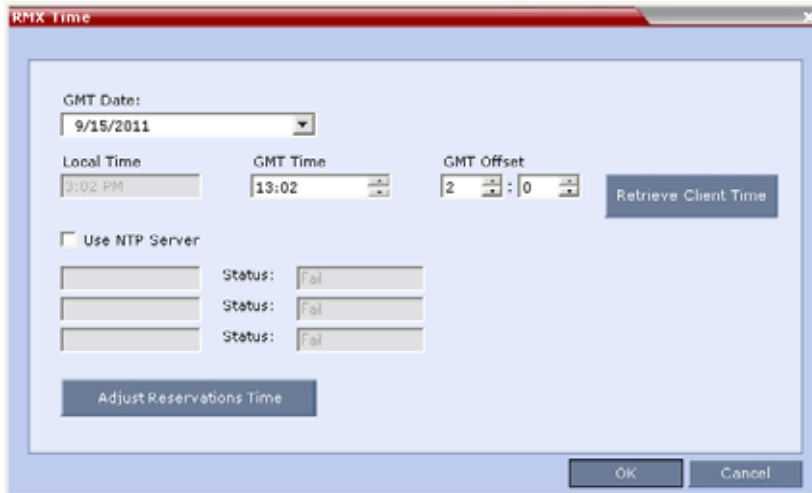

The **Adjust Reservations Time** dialog box opens.

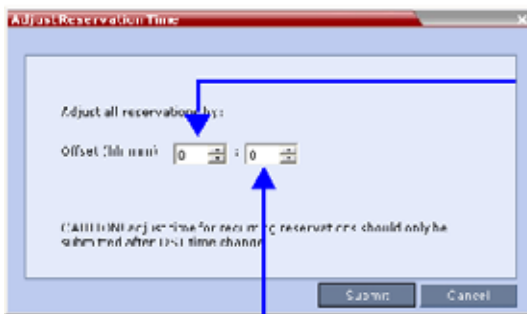

Click the arrows to adjust the start time by hours. Range is between 12 hours and -12 hours

A positive value indicates adding to the start time

Click the arrows to adjust the start time by minutes. Range is between 45 minutes and -45 minutes.

- Click the arrows of the **Offset - Hours** box to indicate the number of hours to add or subtract from the current start time; a positive value indicates adding time, while minus (-) indicates subtracting time.
- Click the arrows of the **Offset - minutes** box to indicate the number of minutes to add or subtract from the current start time of the reservations. Increments or decrements are by 15 minutes.
For example, to subtract 30 minutes from the start time of all the reservation, enter 0 in the **hours** box, and -30 in the **minutes** box.
To add one hour and 30 minutes to the start time, enter 1 in the hours box and 30 in the **minutes** box.
- Click the **Adjust** button to apply the change to all the reoccurring reservations currently scheduled on the Collaboration Server.



Note: Internal communication error message

When adjusting the start time of 1000 - 2000 reservations, an `Internal communication error` message may appear. Ignore this message as the process completes successfully.


Deleting Reservations

To delete a single reservation:

- 1 In the Reservations List, navigate to the reservation you want to delete, using the **Show Day, Show Week, Today, Back, Next** or **List** buttons.
- 2 Click to select the reservation to be deleted.
- 3 Click the **Delete Reservation** (✖) button.
or
Place the mouse pointer within the Reservation block, right-click and select **Delete Reservation**.
- 4 Click **OK** in the confirmation dialog box.
The Reservation is deleted.

To delete all recurrences of a reservation:

- 1 In the Reservations List, navigate to the Reservation or any of its recurrences, using the **Show Day, Show Week, Today, Back, Next** or **List** buttons.
- 2 Click the **Delete Reservation** (✖) button.
or
Place the mouse pointer within the Reservation or any of its recurrences, right-click and select **Delete Reservation**.
A confirmation dialog box is displayed.

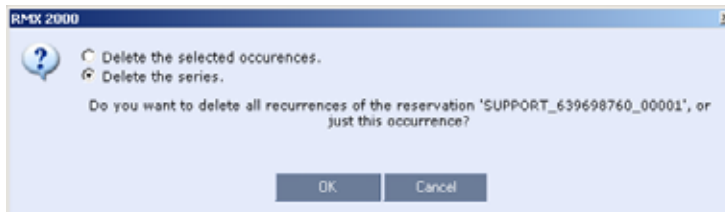

- 3 Select **Delete the series**.
- 4 Click **OK**.
All occurrences of the Reservation are deleted.

Searching for Reservations using Quick Search

Quick Search is available only in List View. It enables you to search for Reservations by **Display Name**.

To search for reservations:

- 1 In the **Reservation Calendar** toolbar, click in the **Quick Search** field.
The field clears and a cursor is displayed indicating that the field is active.



- 2 Type all or part of the reservation's **Display Name** into the field and click **Search**.
The closest matching Reservation entries are displayed.



- 3 To view or modify the Reservation:

Double-click the Reservation's entry in the list to open the **Reservations Properties** dialog box.
or

Right-click the Reservation's entry in the list and select a menu option to view, modify or delete the Reservation.

To clear the search and display all reservations:

- 1 Clear the **Quick Search** field.
- 2 Click **Search**.
All Reservations are displayed.

Operator Assistance & Participant Move



In the *Polycom® RealPresence® Web Suite* solution, the Conference Profiles are defined in the RealPresence DMA system component and should not be defined directly in the RealPresence Collaboration Server (RMX) 1800/2000/4000 component.



Operator conferences and participant move are supported in AVC CP Conferencing Mode only.

Users (operators) assistance to participants is available when:

- Participants have requested individual help (using *0 DTMF code) during the conference.
- Participants have requested help for the conference (using 00 DTMF code) during the conference.
- Participants have problems connecting to conferences, for example, when they enter the wrong conference ID or password.

In addition, the user (operator) can join the ongoing conference and assist all conference participants.

Operator assistance is available only when an Operator conference is running on the MCU.

The Operator conference offers additional conference management capabilities to the Collaboration Server users, enabling them to attend to participants with special requirements and acquire participant details for billing and statistics. This service is designed usually for large conferences that require the personal touch.

Operator Conferences

An Operator conference is a special conference that enables the Collaboration Server user acting as an operator to assist participants without disturbing the ongoing conferences and without being heard by other conference participants. The operator can move a participant from the Entry Queue or ongoing conference to a private, one-on-one conversation in the Operator conference.

In attended mode, the Collaboration Server user (operator) can perform one of the following actions:

- Participants connected to the Entry Queue who fail to enter the correct destination ID or conference password can be moved by the user to the Operator conference for assistance.
- After a short conversation, the operator can move the participant from the Operator conference to the appropriate destination conference (Home conference).
- The operator can connect participants belonging to the same destination conference to their conference simultaneously by selecting the appropriate participants and moving them to the Home conference (interactively or using the right-click menu).
- The operator can move one or several participants from an ongoing conference to the Operator conference for a private conversation.
- The operator can move participants between ongoing Continuous Presence conferences.

Operator Conference Guidelines

- An Operator conference can only run in Continuous Presence mode.
- Operator conference is defined in the Conference Profile. When enabled in Conference Profile, High Definition Video Switching option is disabled.
- An Operator conference can only be created by a User with Operator or Administrator Authorization level.
- Operator conference name is derived from the User Login Name and it cannot be modified.
- Only one Operator conference per User Login Name can be created.
- When created, the Operator conference must include one and only one participant - the Operator participant.
- Only a defined dial-out participant can be added to an Operator conference as an Operator participant
- Once running, the Collaboration Server user can add new participants or move participants from other conferences to this conference. The maximum number of participants in an Operator conference is the same as in standard conferences.
- Special icons are used to indicate an Operator conference in the Ongoing Conferences list and the operator participant in the Participants list.
- An Operator conference cannot be defined as a Reservation.
- An Operator conference can be saved to a Conference Template. An ongoing Operator conference can be started from a Conference Template.
- The Operator participant cannot be deleted from the Operator conference or from any other conference to which she/he was moved to, but it can be disconnected from the conference.
- When deleting or terminating the Operator conference, the operator participant is automatically disconnected from the MCU, even if participating in a conference other than the Operator conference.
- Participants in Telepresence conferences cannot be moved from their conference, but an operator can join their conference and help them if assistance is required.
- Moving participants from/to an Operator conference follows the same guidelines as moving participants between conferences. For move guidelines, see [Move Guidelines](#).
- When a participant is moved from the Entry Queue to the Operator conference, the option to move back to the source (Home) conference is disabled as the Entry Queue is not considered as a source conference.
- The conference chairperson cannot be moved to the Operator conference following the individual help request if the Auto Terminate When Chairperson Exits option is enabled, to prevent the conference from automatically ending prematurely. In such a case, the assistance request is treated by the system as a conference assistance request, and the operator can join the conference.

Defining the Components Enabling Operator Assistance

To enable operator assistance for conferences, the following conferencing entities must be adjusted or created:

- IVR Service (Entry Queue and Conference) in which Operator Assistance options are enabled.
- A Conference Profile with the Operator Conference option enabled.
- An active Operator conference with a connected Operator participant.

To define a Conference IVR Service with Operator Assistance Options

- 1 In the **RMX Management** pane, expand the **Rarely Used** list.
- 2 Click the **IVR Services** (📁) entry.
- 3 On the IVR Services toolbar, click the **New Conference IVR Service** (📄+) button.
The **New Conference IVR Service - Global** dialog box opens.



- 4 Enter the Conference IVR Service **Name**.
- 5 Define the **Conference IVR Service - Global** parameters. For more information, see [Conference IVR Service Properties - Global Parameters](#).
- 6 Click the **Welcome** tab.
The **New Conference IVR Service - Welcome** dialog box opens.
- 7 Define the system behavior when the participant enters the Conference IVR queue. For more information, see [Defining a New Conference IVR Service](#).
- 8 Click the **Conference Chairperson** tab.
The **New Conference IVR Service - Conference Chairperson** dialog box opens.
- 9 If required, enable the chairperson functionality and select the various voice messages and options for the chairperson connection. For more information, see [New Conference IVR Service Properties - Conference Chairperson Options and Messages](#).
- 10 Click the **Conference Password** tab.
The **New Conference IVR Service - Conference Password** dialog box opens.
- 11 If required, enable the request for conference password before moving the participant from the conference IVR queue to the conference and set the MCU behavior for password request for *Dial-in* and *Dial-out* participant connections. For more information, see [New Conference IVR Service Properties - Conference Password Parameters](#).
- 12 Select the various audio messages that will be played in each case. For more information, see [New Conference IVR Service Properties - Conference Password Parameters](#).
- 13 Click the **General** tab.
The **New Conference IVR Service - General** dialog box opens.
- 14 Select the messages that will be played during the conference. For more information, see [Conference IVR Service Properties - General Voice Messages](#).

15 Click the **Roll Call/Notifications** tab.

The **New Conference IVR Service - Roll Call** dialog box opens.

16 Enable the Roll Call feature and assign the appropriate audio file to each message type. For more information, see [Conference IVR Service Properties - Roll Call Messages](#).**17** Click the **Video Services** tab.

The **New Conference IVR Service - Video Services** dialog box opens.

18 Define the **Video Services** parameters. For more information, see [New Conference IVR Service Properties - Video Services Parameters](#).**19** Click the **DTMF Codes** tab.

The **New Conference IVR Service - DTMF Codes** dialog box opens.



The default DTMF codes for the various functions that can be performed during the conference by all participants or by the chairperson are listed. For the full list of the available DTMF codes, see [New Conference IVR Service Properties - DTMF Codes](#).

20 If required, modify the default DTMF codes and the permissions for various operations including Operator Assistance options:

- ***0** for individual help - the participant requested help for himself or herself. In such a case, the participant requesting help is moved to the Operator conference for one-on-one conversation. By default, all participants can use this code.
- **00** for conference recording help - the conference chairperson (default) can request help for the conference. In such a case, the operator joins the conference.

- 21 Click the **Operator Assistance** tab.

The **Operator Assistance** dialog box opens.



- 22 Select **Enable Operator Assistance** to enable operator assistance when the participant requires or requests help during the connection process to the conference or during the conference.

- 23 In the **Operator Assistance Indication Message** field, select the audio message to be played when the participant requests or is waiting for the operator's assistance.





If the audio file was not uploaded prior to the definition of the IVR Service or if you want to add new audio files, click **Add Message File** to upload the appropriate audio file to the Collaboration Server.

- 24 Click **OK** to complete the IVR Service definition.

The new Conference IVR Service is added to the **IVR Services** list.

To define an Entry Queue IVR Service with Operator Assistance Options

- 1 In the **RMX Management** pane, click **IVR Services** ().
- 2 In the **IVR Services** list, click **New Entry Queue IVR Service** ().
The **New Entry Queue IVR Service - Global** dialog box opens.
- 3 Define the Entry Queue Service **Name**.
- 4 Define the Entry Queue IVR Service Global parameters. For more information, see [Entry Queue IVR Service Properties - Global Parameters](#).
- 5 Click the **Welcome** tab.
The **New Entry Queue IVR Service - Welcome** dialog box opens.
- 6 Define the system behavior when the participant enters the Entry Queue. This dialog box contains options that are identical to those in the **Conference IVR Service - Welcome Message** dialog box.
- 7 Click the **Conference ID** tab.
The **New Entry Queue IVR Service - Conference ID** dialog box opens.
- 8 Select the required voice messages. For more information, see [Entry Queue IVR Service Properties - Conference ID](#).

- 9 Click the **Video Services** tab.

The **New Entry Queue IVR Service - Video Services** dialog box opens.

- 10 In the **Video Welcome Slide** list, select the video slide that will be displayed to participants connecting to the Entry Queue. The slide list includes the video slides that were previously uploaded to the MCU memory.

- 11 Click the **Operator Assistance** tab.

The **Operator Assistance** dialog box opens.



- 12 Select **Enable Operator Assistance** to enable operator assistance when the participant requires or requests help during the connection process.

- 13 In the **Operator Assistance Indication Message** field, select the audio message to be played when the participant requests or is waiting for operator's assistance.



If the audio file was not uploaded prior to the definition of the IVR Service or if you want to add new audio files, click **Add Message File** to upload the appropriate audio file to the Collaboration Server.

- 14 Click **OK** to complete the Entry Queue IVR Service definition.

The new Entry Queue IVR Service is added to the **IVR Services** list.

To define a Conference Profile for an Operator Conference

- 1 In the **RMX Management** pane, click **Conference Profiles**.


- 2 In the **Conference Profiles** pane, click **New Profile**.

The **New Profile – General** dialog box opens.


- 3 Define the Profile name and, if required, the Profile general parameters.

For more details, see [New AVC CP Profile - General Parameters](#).

4 Click the **Operator Conference** check box.

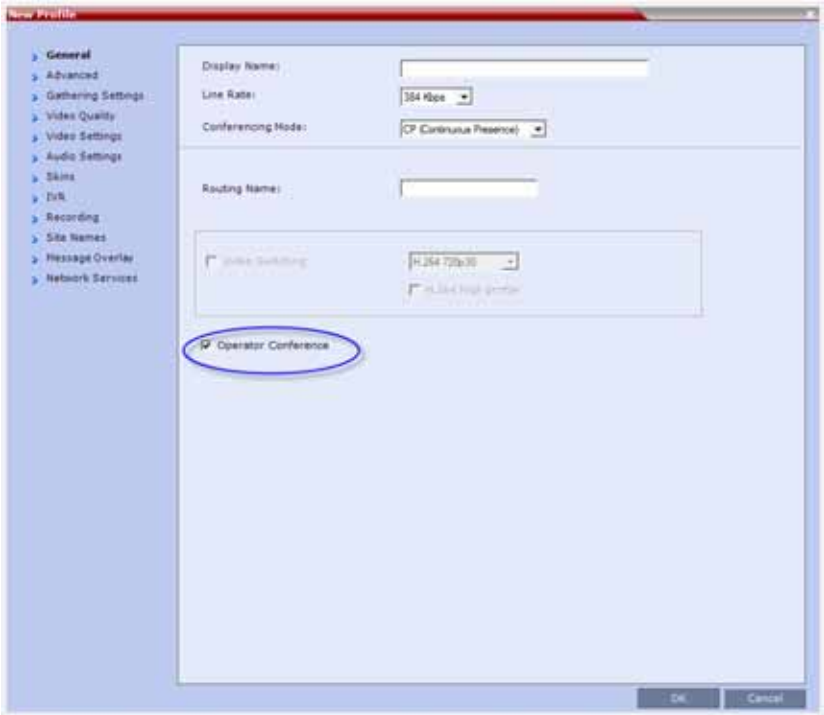

5 Click the **Advanced** tab.
The **New Profile – Advanced** dialog box opens.

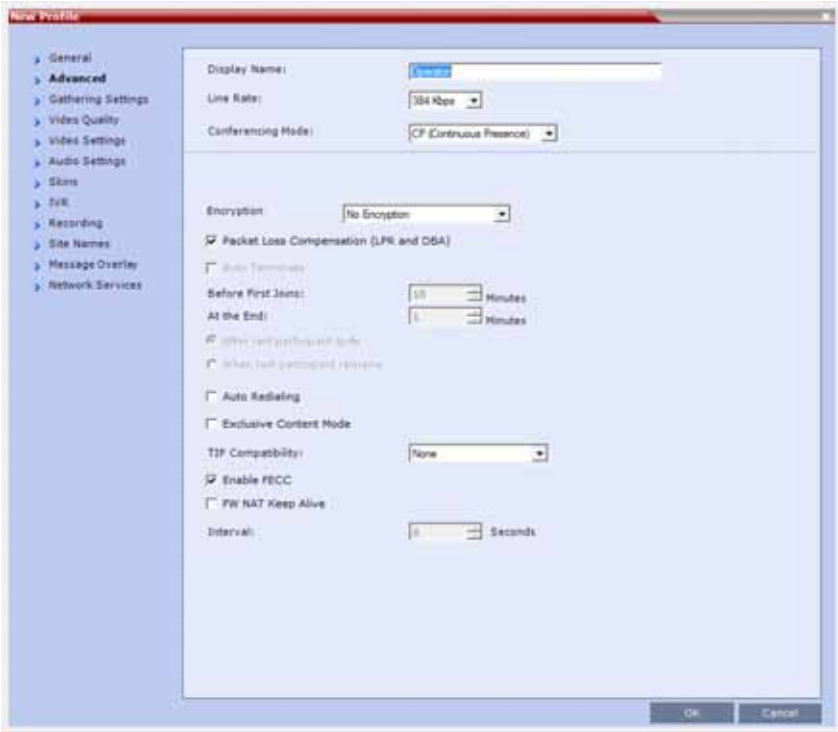

- 6 Define the **Profile - Advanced** parameters. For more details, see [New AVC CP Profile - Advanced Parameters](#).

Note that when Operator Conference is selected, the **Auto Terminate** selection is automatically cleared and disabled and the Operator conference cannot automatically end unless it is terminated by the Collaboration Server User.

- 7 Click the **Video Quality** tab.

The **New Profile – Video Quality** dialog box opens.

- 8 Define the Video Quality parameters. For more details, see [New AVC CP Profile - Video Quality Parameters](#).

- 9 Click the **Video Settings** tab.

The **New Profile - Video Settings** dialog box opens.

- 10 Define the video display mode and layout. For more details, see [New AVC CP Profile - Video Settings Parameters](#).

- 11 Define the remaining Profile parameters. For more details, see [Defining AVC CP Conferencing Profiles](#).

- 12 Click **OK** to complete the Profile definition.

A new Profile is created and added to the Conference Profiles list.

Starting an Ongoing Operator Conference

To start a conference from the Conference pane:

- 1 In the **Conferences** pane, click **New Conference** (🌐).

The **New Conference – General** dialog box opens.

- 2 In the **Profile** field, select a Profile in which the **Operator Conference** option is selected.

Upon selection of the Operator Conference Profile, the **Display Name** is automatically taken from the Collaboration Server User Login Name. This name cannot be modified.

Only one Operator conference can be created for each User Login name.

- 3 Define the following parameters:

New Conference – General Options

Field	Description
Duration	<p>Define the duration of the conference in hours using the format HH:MM (default 01:00).</p> <p>Notes:</p> <ul style="list-style-type: none"> The Operator conference is automatically extended up to a maximum of 168 hours. Therefore, the default duration can be used. This field is displayed in all tabs.

New Conference – General Options

Field	Description
Routing Name	<p>The name with which ongoing conferences, Meeting Rooms, Entry Queues and SIP Factories register with various devices on the network such as gatekeepers and SIP servers. This name must be defined using ASCII characters.</p> <p>Comma, colon and semicolon characters cannot be used in the Routing Name.</p> <p>The Routing Name can be defined by the user or automatically generated by the system if no Routing Name is entered as follows:</p> <ul style="list-style-type: none"> • If ASCII characters are entered as the Display Name, it is used also as the Routing Name • If a combination of Unicode and ASCII characters (or full Unicode text) is entered as the Display Name, the <i>ID</i> (such as Conference ID) is used as the Routing Name. <p>If the same name is already used by another conference, Meeting Room or Entry Queue, the Collaboration Server displays an error message and requests that you to enter a different name.</p>
Profile	Select an operator profile from the Profile drop-down list.
ID	<p>Enter the unique-per-MCU conference ID. If left blank, the MCU automatically assigns a number once the conference is launched.</p> <p>This ID must be communicated to conference participants to enable them to dial in to the conference.</p>
Conference Password	Leave this field empty when defining an Operator conference.
Chairperson Password	Leave this field empty when defining an Operator conference.
Reserve Resources for Video Participants	<p>Enter the number of video participants for which the system must reserve resources.</p> <p>Default: 0 participants.</p> <p>When defining an Operator conference it is recommended to reserve resources for at least 2 video participants (for the operator and one additional participant - who will be moved to the Operator conference for assistance).</p> <p>Note: This option is not supported with Collaboration Server 1800.</p>
Reserve Resources for Voice Participants	<p>Enter the number of audio participants for which the system must reserve resources.</p> <p>Default: 0 participants.</p> <p>When defining an Operator conference and the operator is expected to help voice participants, it is recommended to reserve resources for at least 2 video participants (for the operator and one additional participant - who will be moved to the Operator conference for assistance).</p> <p>Note: This option is not supported with Collaboration Server 1800.</p>
Maximum Number of Participants	<p>Enter the maximum number of participants that can connect to an Operator conference (you can have more than two), or leave the default selection (Automatic).</p> <p>Maximum number of participants that can connect to an Operator conference:</p>

New Conference – General Options

Field	Description
Enable ISDN/PSTN Dial-in	Select this check box if you want ISDN and PSTN participants to be able to connect directly to the Operator conference. This may be useful if participants are having problems connecting to their conference and you want to identify the problem or help them connect to their destination conference.
ISDN/PSTN Network Service and Dial-in Number	If you have enable the option for ISDN/PSTN direct dial-in to the Operator conference, assign the ISDN/PSTN Network Service and a dial-in number to be used by the participants, or leave these fields blank to let the system select the default Network Service and assign the dial-in Number. Note: The dial-in number must be unique and it cannot be used by any other conferencing entity.

4 Click the **Participants** tab.

The **New Conference - Participants** dialog box opens.

You must define or add the Operator participant to the Operator conference.

This participant must be defined as a **dial-out** participant.


Define the parameters of the endpoint that will be used by the Collaboration Server User to connect to the Operator conference and to other conference to assist participants.


For more information see [Participants Tab](#).

5 To insert general information, select the **Information** tab.

The **Information** dialog box opens.

6 Enter the required information. For more information, see [Information Tab](#).**7** Click **OK**.

The new Operator conference is added to the ongoing Conferences list with a special icon .

The Operator participant is displayed in the Participants list with an Operator participant icon , and the system automatically dials out to the Operator participant.

Saving an Operator Conference to a Template

The Operator conference that is ongoing can be saved as a template.


To save an ongoing Operator conference as a template:

1 In the **Conferences** list, select the Operator conference you want to save as a Template.


2 Click the **Save Conference to Template**  button.

or

Right-click and select **Save Conference to Template**.

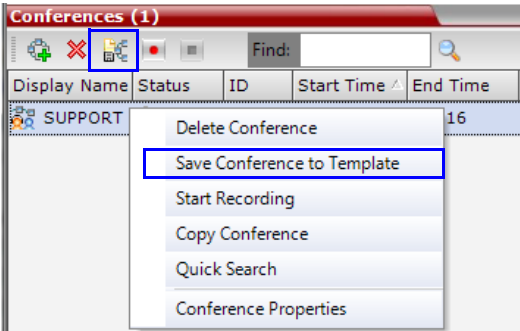

The conference is saved to a template whose name is taken from the ongoing conference **Display Name** (the Login name of the Collaboration Server User). The Template is displayed with the Operator Conference icon.

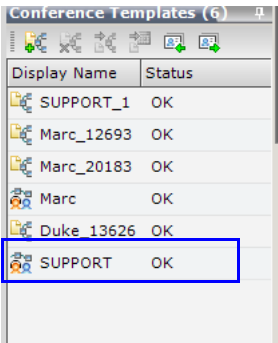

Starting an Operator Conference from a Template

An ongoing Operator conference can be started from an Operator Template saved in the Conference Templates list.

To start an ongoing Operator conference from an Operator Template:

- 1 In the Conference Templates list, select the Operator Template to start as an ongoing Operator conference.




- You can only start an Operator conference from a template whose name is identical to your Login Name. For example, if your Login name is Polycom, you can only start an Operator conference from a template whose name is Polycom.
- If an ongoing Operator conference with the same name or any other conference with the same ID is already running, you cannot start another Operator conference with the same login name.

- 2 Click **Start Conference from Template** (🔒👤).

or

Right-click and select **Start Conference from Template**.

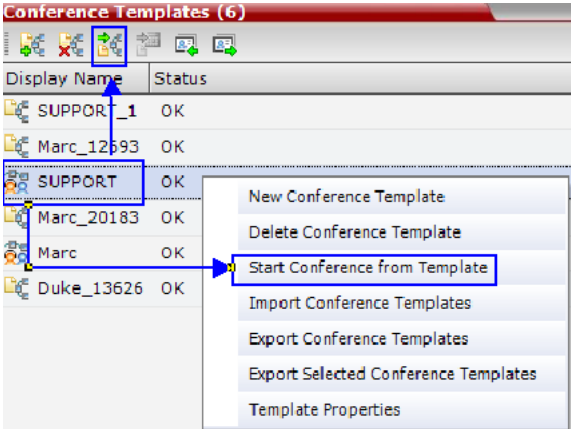


The conference is started.

The name of the ongoing conference in the **Conferences** list is taken from the Conference Template **Display Name**.

Monitoring Operator Conferences and Participants Requiring Assistance

Operator conferences are monitored in the same way as standard ongoing conferences.

Each Operator conference includes at least one participant - the Operator.

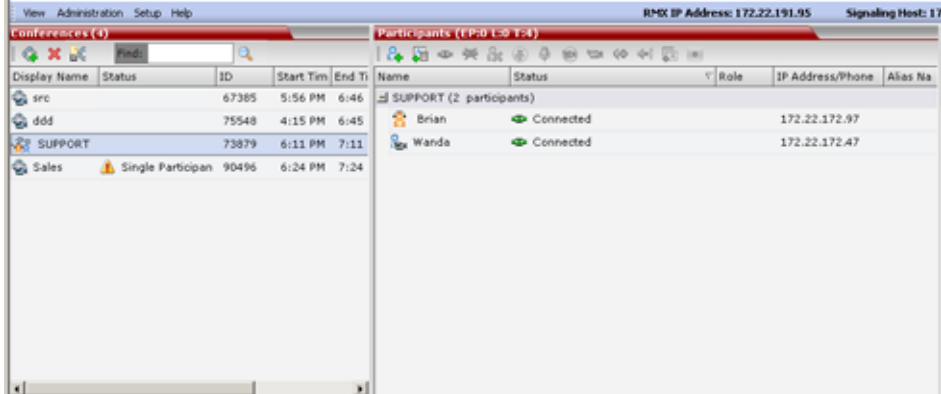


You can view the properties of the Operator conference by double-clicking the conference entry in the Conferences list or by right-clicking the conference entry and selecting Conference Properties. For more information, see [Participant Level Monitoring](#).

Requesting Help

A participant can request help using the appropriate DTMF code from his/her touch tone telephone or the endpoint's DTMF input device. The participant can request Individual Assistance (default DTMF code *0) or Conference Assistance (default DTMF code 00).

Participants in Entry Queues who failed to enter the correct destination conference ID or the conference password will wait for operator assistance (provided that an Operator conference is active).

When requiring or requesting operator assistance, the Collaboration Server management application displays the following:

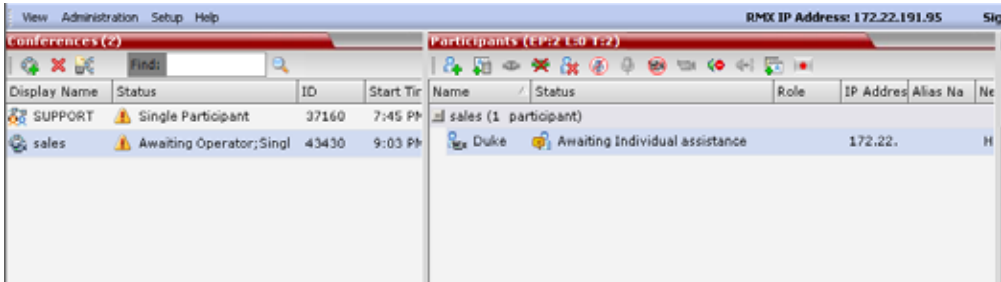

- The participant’s connection Status changes, reflecting the help request. For more information, see [Participants List Status Column Icons and Indications](#).
- The conference status changes and it is displayed with the exclamation point icon and the status Awaiting Operator.
- The appropriate voice message is played to the relevant participants indicating that assistance will be provided shortly.

The following icons and statuses are displayed in the Participant Status column:


Participants List Status Column Icons and Indications

Icon	Status Indication	Description
	Awaiting Individual Assistance	The participant has requested the operator’s assistance for himself/herself.
	Awaiting Conference Assistance	The participant has requested the operator’s assistance for the conference. Usually this means that the operator is requested to join the conference.

When the Operator moves the participant to the Operator conference for individual assistance the participant Status indications are cleared.

Participant Alerts List

The **Participant Alerts** list contains all the participants who are currently waiting for operator assistance.

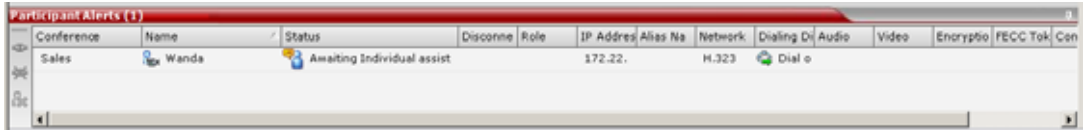

Participants are automatically added to the Participants Alerts list in the following circumstances:

- The participant fails to connect to the conference by entering the wrong conference ID or conference password and waits for the operator’s assistance
- The participant requests Operator’s Assistance during the ongoing conference

This list is used as reference only. Participants can be assisted and moved to the Operator conference or the destination conference only from the Participants list of the Entry Queues or ongoing conference where they are awaiting assistance.

The participants are automatically removed from the Participant Alerts list when moved to any conference (including the Operator conference).

Audible Alarms

In addition to the visual cues used to detect events occurring on the Collaboration Server, an audible alarm can be activated and played when participants request Operator Assistance.

Using Audible Alarms

The Audible Alarm functionality for Operator Assistance requests is enabled for each MCU in either the Collaboration Server Web Client or RMX Manager.

The Audible Alarm played when Operator Assistance is requested is enabled and selected in the **Setup > Audible Alarm > User Customization**. When the Audible Alarm is activated, the *.wav file selected in the User Customization is played, and it is repeated according to the number of repetitions defined in the User Customization.

If more than one Collaboration Server is monitored in the RMX Manager, the Audible Alarm must be enabled separately for each Collaboration Server installed in the site/configuration. A different *.wav file can be selected for each MCU.

When multiple Audible Alarms are activated in different conferences or by multiple MCUs, the Audible Alarms are synchronized and played one after the other. It is important to note that when Stop Repeating Alarm is selected from the toolbar from the Collaboration Server Web Client or RMX Manager, all activated Audible Alarms are immediately halted.

For more details on Audible alarms and their configuration, see [Audible Alarms](#).

Conference Templates

Conference Templates enable administrators and operators to create, save, schedule and activate identical conferences.

A Conference Template:

- Saves the conference Profile.
- Saves all participant parameters including their Personal Layout and Video Forcing settings.
- Simplifies the setting up Telepresence conferences where precise participant layout and video forcing settings are crucial.

Trying to start a Conference Template that exceeds the allowed maximum number of participants will result in participants being disconnected due to resource deficiency.

If the Profile assigned to a conference is deleted while the conference is ongoing the conference cannot be saved as a template.

A Profile assigned to a Conference Template cannot be deleted. The system does not permit such a deletion.

Profile parameters are not embedded in the Conference Template, and are taken from the Profile when the Conference Template becomes an ongoing conference. Therefore, any changes to the Profile parameters between the time the Conference Template was created and the time that it is activated (and becomes an ongoing conference) will be applied to the conference.

Only defined participants can be saved to the Conference Template. Before saving a conference to a template ensure that all undefined participants have disconnected.

Undefined participants are not saved in Conference Templates.

Participant properties are embedded in the Conference Template and therefore, if the participant properties are modified in the Address Book after the Conference Template has been created they are not applied to the participant whether the Template becomes an ongoing conference or not.

The Conference Template display name, routing name or ID can be the same as an Ongoing Conference, reservation, Meeting Room or Entry Queue as it is not active. However, an ongoing conference cannot be launched from the Conference Template if an ongoing conference, Meeting Room or Entry Queue already has the same name or ID. Therefore, it is recommended to modify the template ID, display name, routing name to be unique.

A Reservation that has become an ongoing conference can be saved as Conference Template.

SIP Factories and Entry Queues cannot be saved as Conference Templates.

The conference specified in the Conference Template can be designated as a Permanent Conference. For more information see [Permanent Conference](#).




Note: Resource Capacities and Operational Specifications


For information about Resource Capacities and other operational specifications, see the *RealPresence® Collaboration Server (RMX) Hardware Guide* specific to your system.

Using Conference Templates

The Conference Templates list is initially displayed as a closed tab in the Collaboration Server Web Client main window. The number of saved Conference Templates is indicated on the tab.

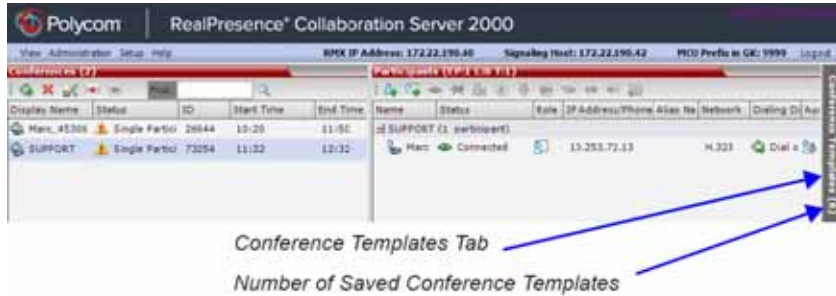

Clicking the tab opens the Conference Templates list.

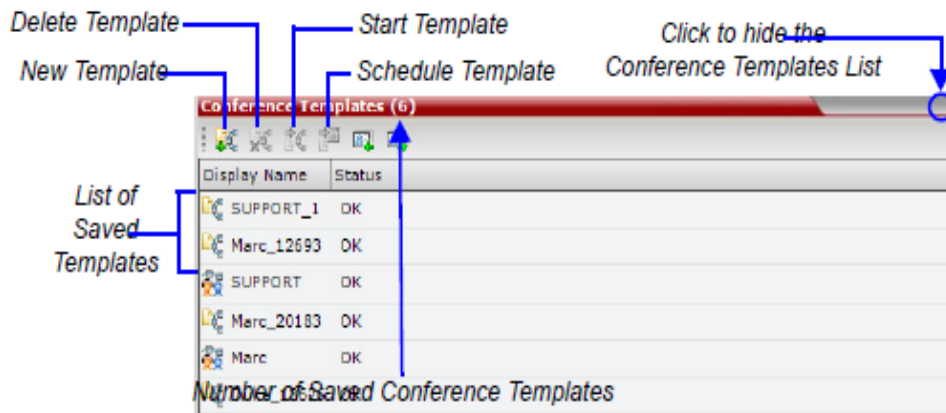

The Conference Templates are listed by Conference Template Display Name and ID and can be sorted by either field. The list can be customized by re-sizing the pane, adjusting the column widths or changing the order of the column headings.



For more information see [Customizing the Main Screen](#).

Clicking the anchor pin (📌) button hides the Conference Templates list as a closed tab.



Toolbar Buttons

The Conference Template toolbar includes the following buttons:

Conference Templates – Toolbar Buttons


Button	Description
 New Conference Template	Creates a new Conference Template.
 Delete Conference Template	Deletes the Conference Template(s) that are selected in the list.

Conference Templates – Toolbar Buttons

Button	Description
 Start Conference from Template	Starts an ongoing conference from the Conference Template that has an identical name, ID parameters and participants as the template.
 Schedule Reservation from Template	Creates a conference Reservation from the Conference Template with the same name, ID, parameters and participants as the Template. Opens the Scheduler dialog box enabling you to modify the fields required to create a single or recurring Reservation based on the template. For more information see Scheduling Reservations .

The Conferences List toolbar includes the following button:

Conferences List – Toolbar Button

Button	Description
 Save Conference to Template	Saves the selected ongoing conference as a Conference Template.

Creating a New Conference Template

There are two methods to create a Conference Template:

- From scratch - defining the conference parameters and participants
- Saving an ongoing conference as Template


Creating a new Conference Template from Scratch

To create a new Conference Template:

- 1 In the Collaboration Server main screen, click the **Conference Templates** pane.

- 2 Click the **New Conference Template**  button.

The **New Conference Template - General** dialog box opens.

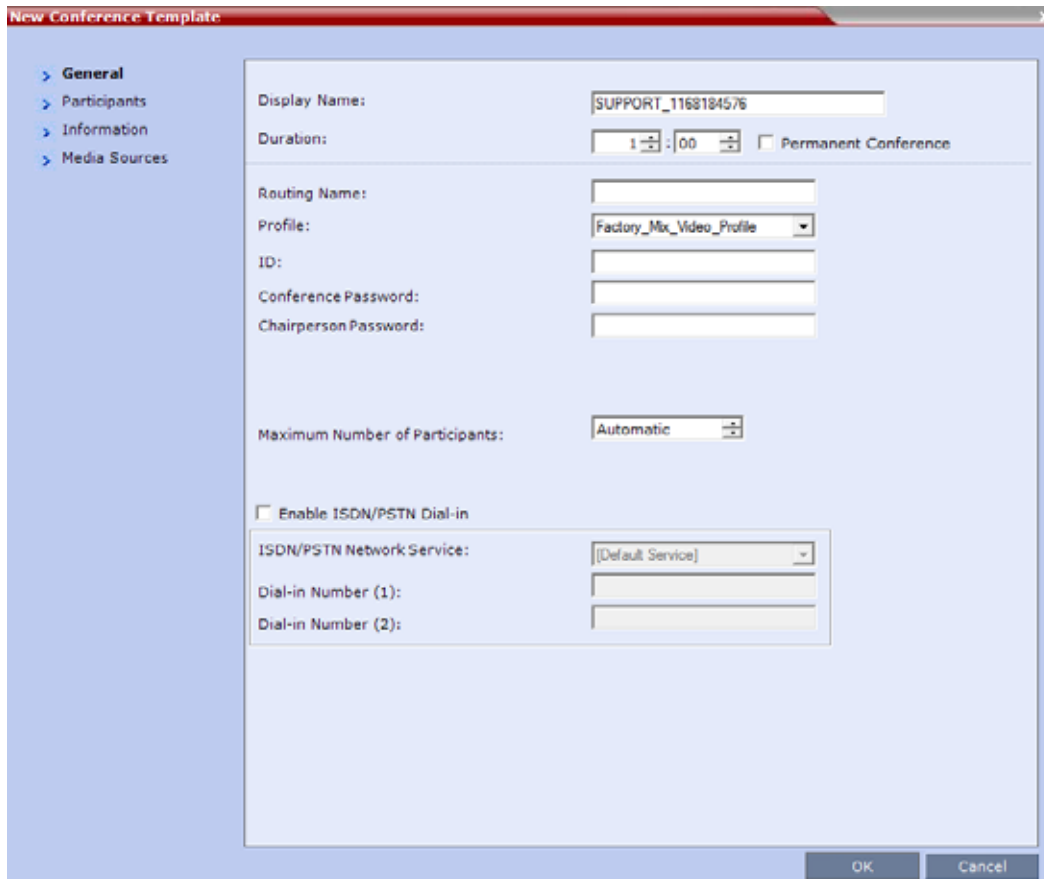

The fields of the **New Template – General** dialog box are identical to those of the **New Conference – General** dialog box. For more information, see [General Tab](#).

- 3 Modify the fields of the **General** dialog box.




Note: Unique dial-in number

A unique dial-in number must be assigned to each conferencing entity. However, Conference Templates can be assigned dial-in numbers that are already assigned to other conferencing entities, but when the template is used to start an ongoing conference or schedule a reservation, it will not start if another ongoing conference, Meeting Room, or Entry Queue or Gateway Profile is using this number.

4 Click the **Participants** tab.

The **New Template – Participants** dialog box opens.

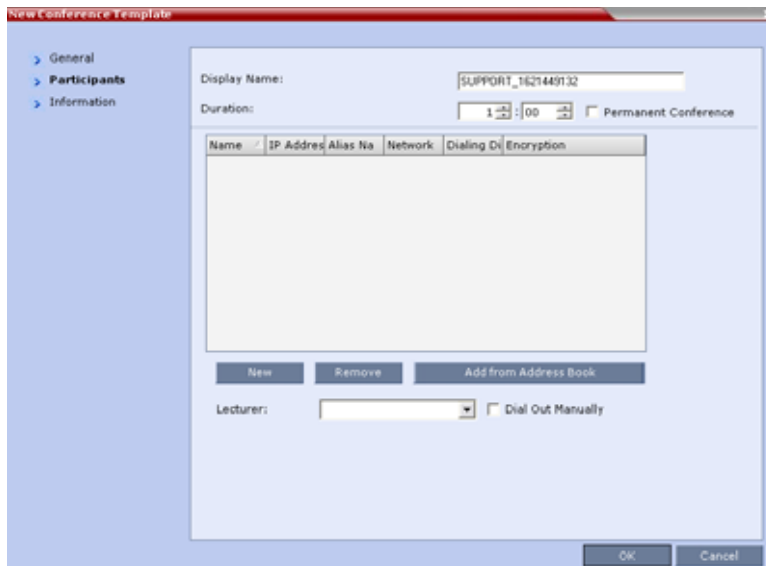

Specify the **Display Name** or **Duration**.

To have a permanent conference, select the **Permanent Conference** check box.


The fields of the **New Template – Participants** dialog box are the same as those of the **New Conference – Participant** dialog box.

5 You can add participants to the template from the Address Book as desired.

- 6 Click the **New** button.

The **New Participant – General** dialog box opens.

The **New Template – Participant** dialog box remains open in the background.

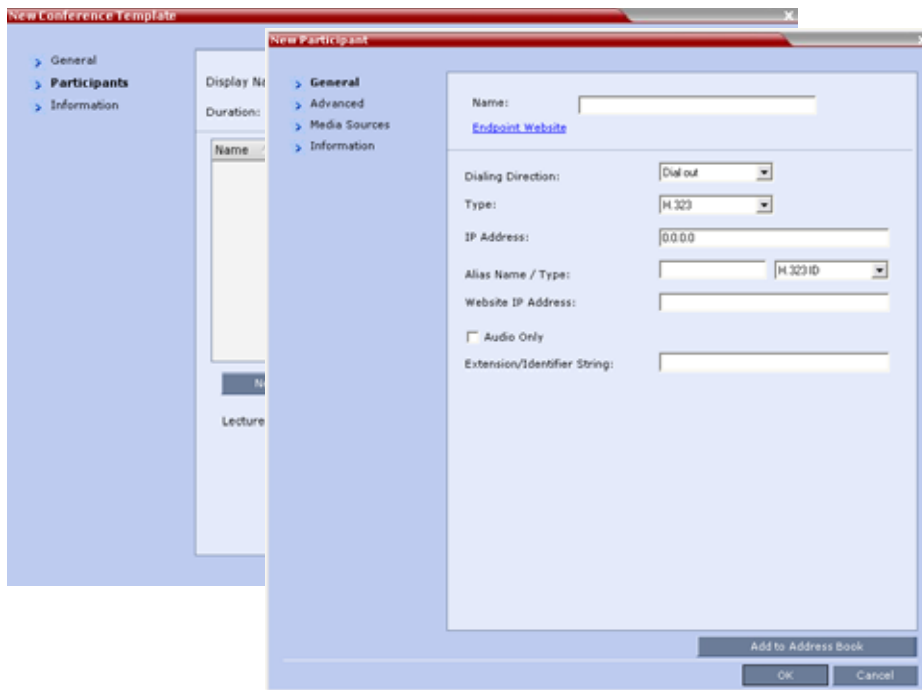


For a full description of the **General** tab fields see [Adding a New participant to the Address Book Directly](#).

- 7 Modify the fields of the **General** dialog box.

8 Click the **Advanced** tab.


The **New Participant – Advanced** dialog box opens.

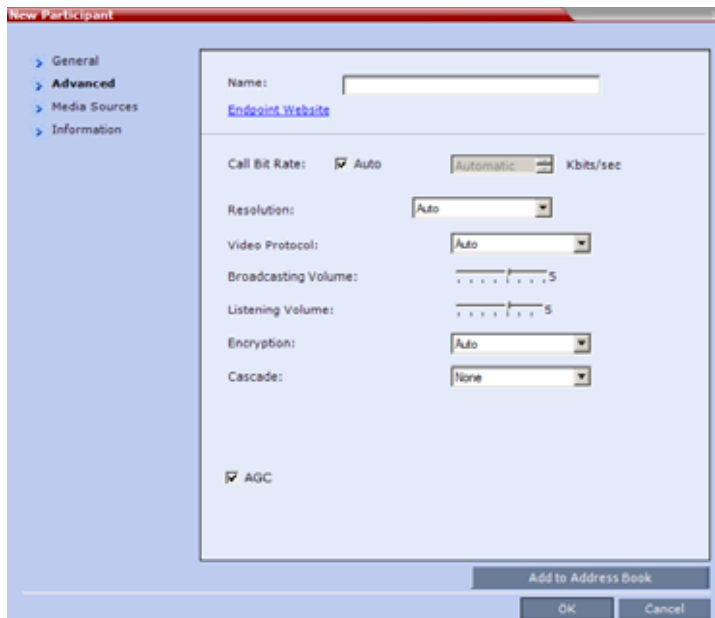

9 Modify the fields of the **Advanced** dialog box.

10 Click the **Media Sources** tab.

The **Media Sources** dialog box opens.

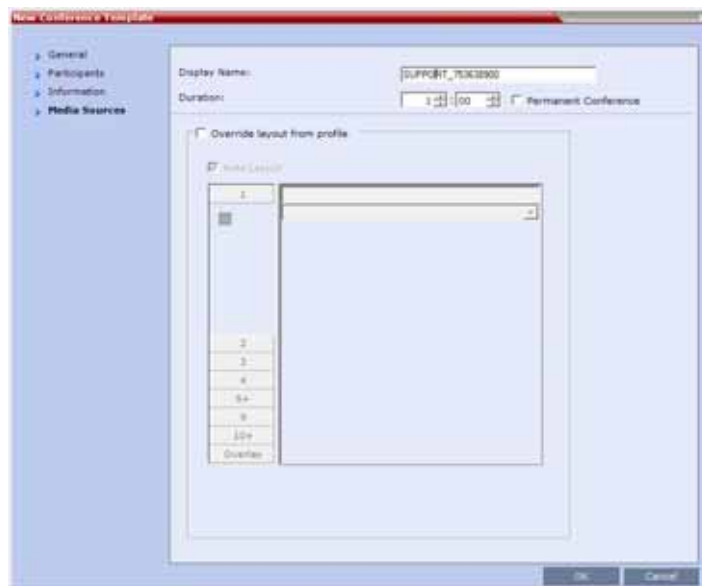

The **Media Sources** dialog box enables you to set up and save, Display Name, Duration and Personal Layout and Video Forcing settings for each participant. This is especially important when setting up Telepresence conferences.

11 Specify the **Display Name** and **Duration**.


To have a permanent conference, select the **Permanent Conference** check box.

12 Modify the Personal Layout and Video Forcing settings for the participant, and select **Override layout from Profile** if needed.

For Configuring Personal Layout and Video Forcing functions, see configurations on **Video Settings** tab in [Defining AVC-Based Conference Profiles](#).

13 To add any optional information, click the **Information** tab.

The **New Participant – Information** dialog box opens.

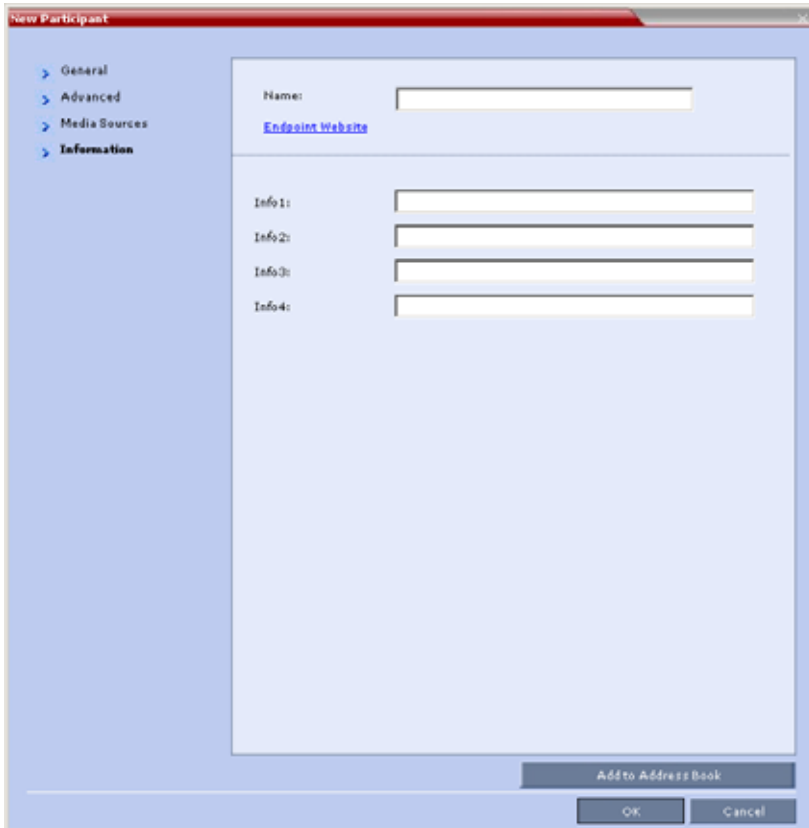

For more information, see [Information Tab](#).


14 Click the **OK** button.

The participant you have defined is added to the **Participants** List.

The **New Participant** dialog box closes and you are returned to the **New Template – Participant** dialog box (which has remained open since step 6).

- 15 To add any optional information, in the **New Conference Template** dialog box, click the **Information** tab.

The **New Conference Template – Information** dialog box opens.

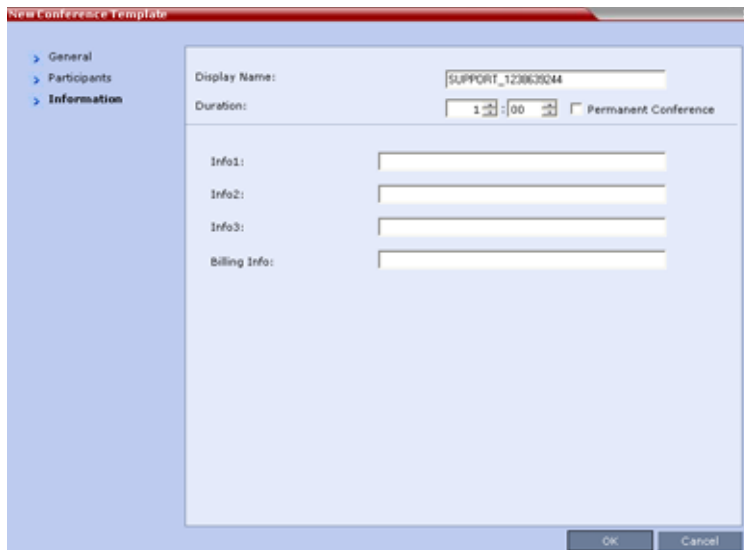

For more information, see [Information Tab](#).

- 16 Click the **OK** button.


The **New Conference Template** is created and its name is added to the **Conference Templates** list.

Saving an Ongoing or AVC-CP Operator Conference as a Template

Any ongoing or AVC-based CP Operator Conference can be saved as a template.

To save an ongoing or AVC-based CP Operator Conference as a template:

- 1 In the **Conferences List**, select the conference or Operator Conference to be saved as a Template.

- 2 Click the **Save Conference to Template**  button.
or
Right-click and select **Save Conference to Template**.



The conference is saved to a template whose name is taken from the ongoing conference Display Name (the Login name of the Collaboration Server User). The Template is displayed with the Operator Conference icon.



Starting an Ongoing Conference From a Template




Note: Message Overlay text

Conference Templates saved from an ongoing conference does not include Message Overlay text messages.

An ongoing conference can be started from any Template saved in the Conference Templates list. In SVC-based templates, only defined dial-in participants may be part of the conference.


To start an ongoing conference from a Template:

- 1 In the **Conference Templates** list, select the Template you want to start as an ongoing conference.

2 Click the **Start Conference from Template** () button.

or

Right-click and select **Start Conference from Template**.

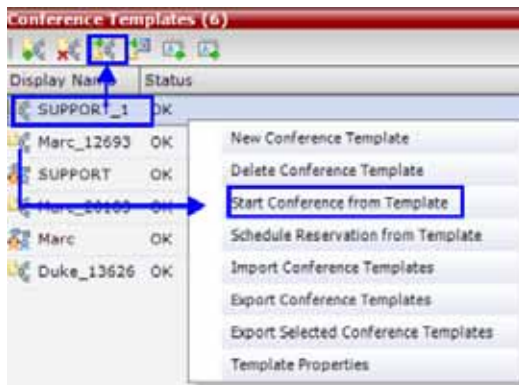

The conference is started.



Note: Dial-in number already assigned to ongoing conference

If a Conference Template is assigned a dial-in number that is already assigned to an ongoing conference, Meeting Room, or Entry Queue or Gateway Profile, when the template is used to start an ongoing conference or schedule a reservation it will not start. However, the same number can be assigned to several conference templates provided they are not used to start an ongoing conference at the same time. If a dial in number conflict occurs prior to the conference's start time, an alert is displayed: ISDN dial-in number is already assigned to another conferencing entity and the conference cannot start.

The name of the ongoing conference in the Conferences list is taken from the Conference Template Display Name.

Participants that are connected to other ongoing conferences when the template becomes an ongoing conference are not connected.



Note: Duplicate Display Name, Routing Name, ID

If an ongoing conference, Meeting Room or Entry Queue with the same Display Name, Routing Name or ID already exists in the system, the conference will not be started.

Starting an Operator Conference from a Template (AVC Conferencing)

An ongoing Operator conference can be started from an Operator Template saved in the Conference Templates list.

To start an ongoing Operator conference from an Operator Template:

- 1 In the **Conference Templates** list, select the Operator Template to start as an ongoing Operator conference.



Note: Login Name


You can only start an Operator conference from a template whose name is identical to your Login Name. For example, if your Login name is Polycom, you can only start an Operator conference from a template whose name is Polycom.

If an ongoing Operator conference with the same name or any other conference with the same ID is already running, you cannot start another Operator conference with the same login name.

- 2 Click the **Start Conference from Template** (🔗) button.

or

Right-click and select **Start Conference from Template**.

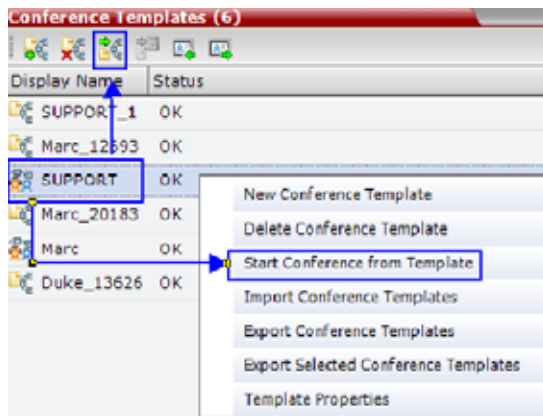

The conference is started.

The name of the ongoing conference in the **Conferences** list is taken from the Conference Template **Display Name**.

Scheduling a Reservation From a Conference Template

A Conference Template can be used to schedule a single or recurring Reservation.

To schedule a Reservation from a Conference Template:

- 1 In the **Conference Templates** list, select the Conference Template you want to schedule as a Reservation.


2 Click the **Schedule Reservation from Template** (📅) button.

or

Right-click and select **Schedule Reservation from Template**.

The **Reservation Properties** dialog box is displayed.

The **Display Name** of the Reservation is taken from the Conference Template Display Name.

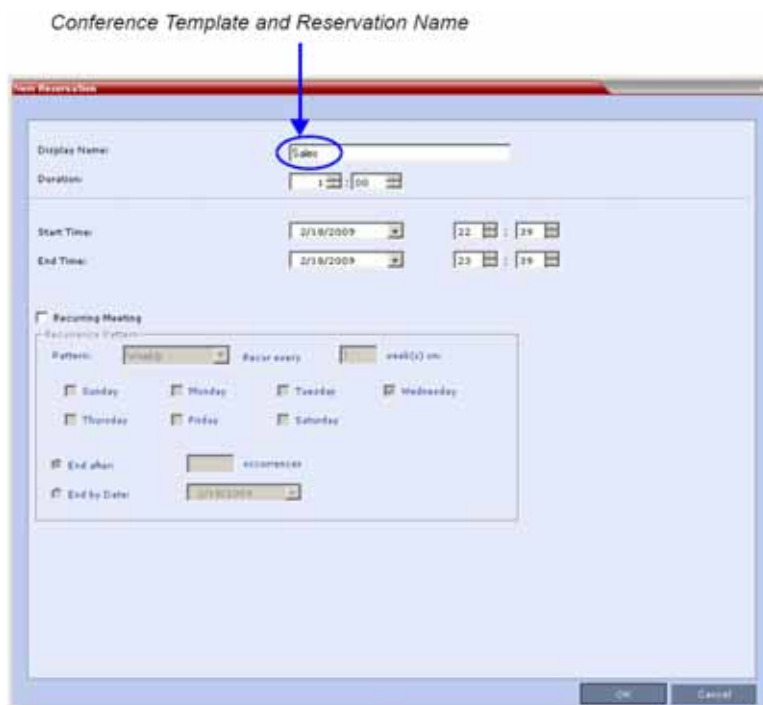

For a full description of the **Reservation Properties** fields see [Creating a New Reservation](#).

3 Modify the fields of the Reservation Properties.

4 Click the **OK** button.

A Reservation is created based on the Conference Template. The Reservation can be viewed and modified along with all other Reservations using the Reservations - Calendar View and Reservations List.

If you create a recurring reservation all occurrences have the same ID. A recurring Reservation is assigned the same ISDN/PSTN dial-in number for all recurrences.

If a dial-in number conflict occurs prior to the conference's start time, an alert is displayed: `ISDN dial-in number is already assigned to another conferencing entity` and the conference cannot start.

The series number (`_0000n`) of each reservation is appended to its Display Name.

Example:

Conference Template name: `Sales`

Display Name for single scheduled occurrence: `Sales`

If 3 recurrences of the reservation are created:

Display Name for occurrence 1: `Sales_00001`


Display Name for occurrence 2: `Sales_00002`

Display Name for occurrence 3: `Sales_00003`

Deleting a Conference Template

One or several Conference Templates can be deleted at a time.

To delete Conference Templates:

- 1** In the **Conference Templates** list, select the Template(s) you want to delete.
- 2** Click the **Delete Conference Template**  button.
or
Right-click and select **Delete Conference Template**.
A confirmation dialog box is displayed.
- 3** Click the **OK** button to delete the Conference Template(s).

Exporting and Importing Conference Templates

Conference Templates can be exported from one MCU and imported to multiple MCUs in your environment. Additionally, you can export Conference Templates and their associated Conference Profiles simultaneously. Using this option can save configuration time and ensures that identical settings are used for conferences running on different MCUs. This is especially important in environments using cascading conferences that are running on different MCUs.

- Administrators can export and import Conference Templates. Operators are only allowed to export Conference Templates.
- You can select a single, multiple or all Conference Templates to be exported.
- Both Conference Templates and their associated Conference Profiles can be exported and imported simultaneously when enabling the Export includes conference profiles or Import includes conference profiles options.

- Exporting and importing Conference Templates only can be used when you want to export and import individual Conference Templates without their associated Conference Profiles. This option enables you to import Conference Templates when Conference Profiles already exist on an MCU.

Exporting Conference Templates

Conference Templates are exported to a single XML file that can be used to import the Conference Templates on multiple MCUs.


Using the Export Conference Templates option, you can:

- Export all Conference Templates from an MCU
- Export selected Conference Templates

Exporting All Conference Templates from an MCU


To export all Conference Templates from an MCU:

- 1 In the Collaboration Server Web Client main window, click the Conference Templates tab. The **Conference Templates** list pane is displayed.

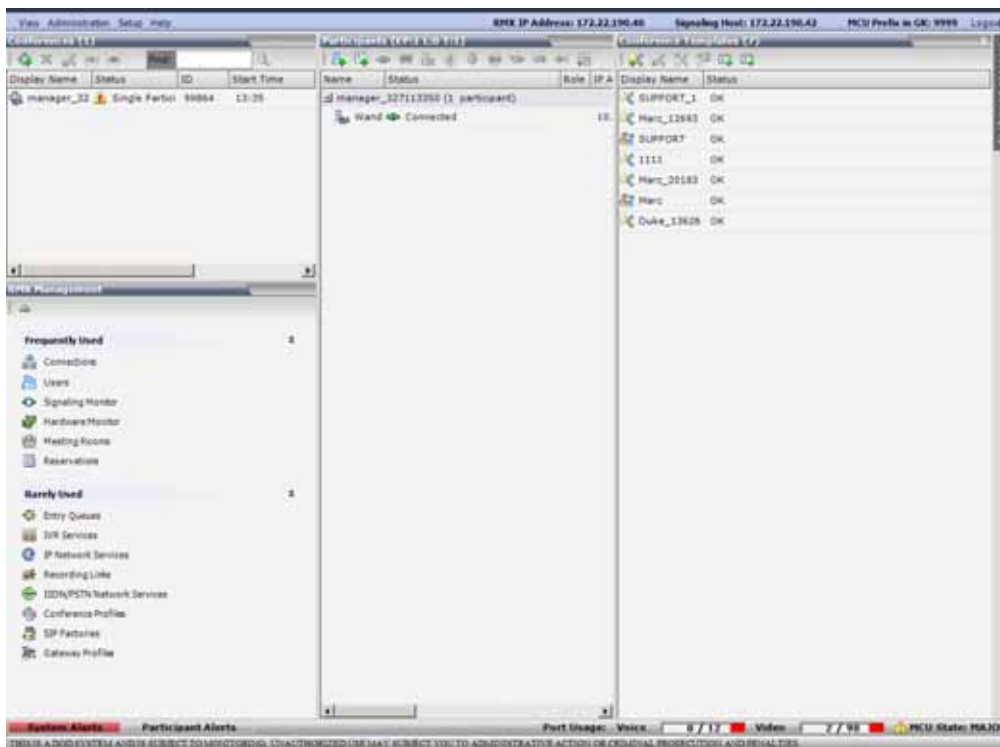


- 2 Click the **Export Conference Templates**  button, or right-click the **Conference Templates** list, and then select **Export Conference Templates**.

The **Conference Templates - Export** dialog box is displayed.

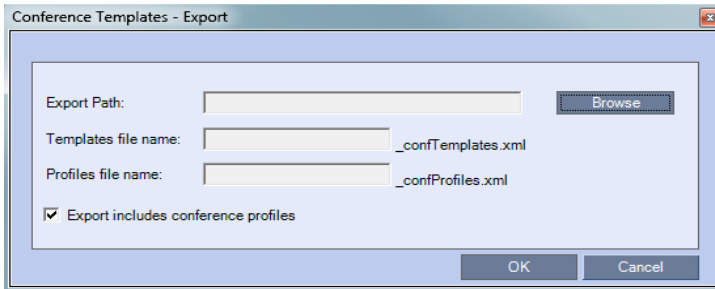

- 3 In the **Export Path** field, type the path name to the location where you want to save the exported file or click **Browse** to select the desired path.
- 4 If you wish to clear the **Export includes conference profiles** check box when you only want to export Conference Templates.

When this check box is cleared, the **Conference Templates - Export** dialog box is displayed without the **Profiles file name** field.

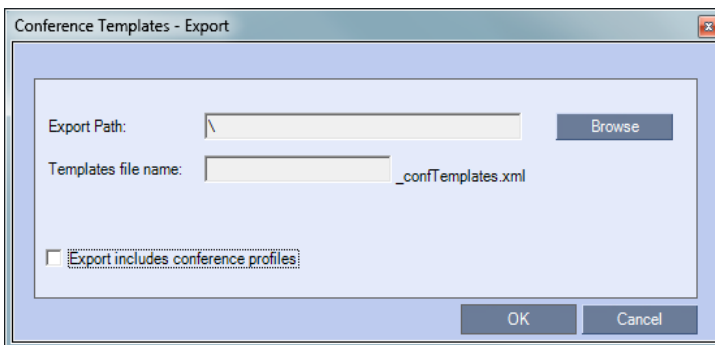

- 5 In the **Templates file name** field, type the file name prefix. The file name suffix (**_confTemplates.xml**) is predefined by the system. For example, if you type **Templates01**, the exported file name is defined as **Templates01_confTemplates.xml**.
The system automatically defines the Profiles file name field with the same file name prefix as the Templates file name field. For example, if you type **Templates01** in the Templates file name field, the exported profiles file name is defined as **Templates01_confProfiles.xml**.
- 6 Click **OK** to export the Conference Templates and Conference Profiles to a file.


Exporting Selected Conference Templates

You can export a single Conference Template or multiple Conference Templates to other MCUs in your environment.


To export selected Conference Templates:

- 1 In the **Conference Templates** list, select the templates you want to export.
- 2 Right-click the Conference Templates to be exported, and then click **Export Selected Conference Templates**.

The **Conference Templates - Export** dialog box is displayed.

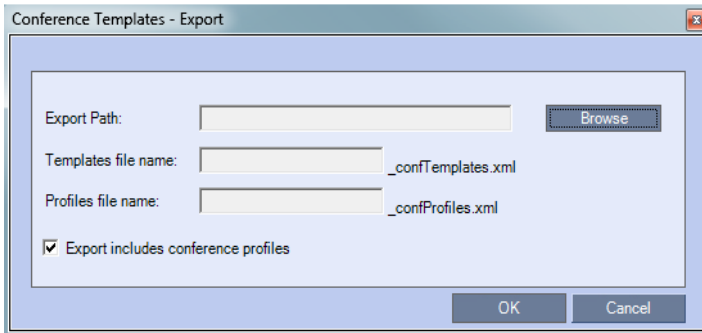

- 3 In the **Export Path** field, type the path name to the location where you want to save the exported file or click **Browse** to select the desired path.
- 4 To export Conference Templates, clear the **Export includes conference profiles** check box. When this check box is cleared, the **Conference Templates - Export** dialog box is displayed without the Profiles file name field.

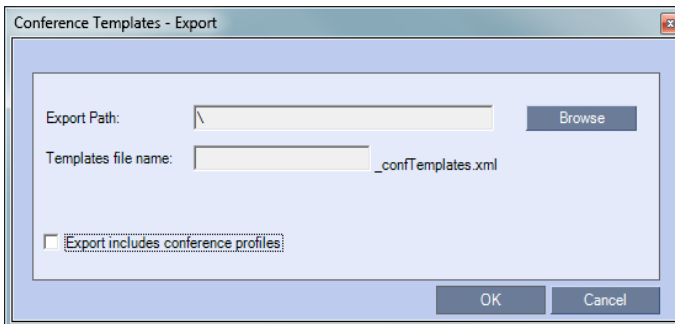


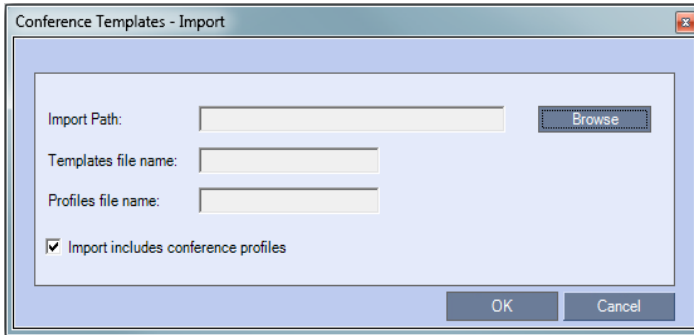
- 5 In the **Templates file name** field, type the file name prefix. The file name suffix (**_confTemplates.xml**) is predefined by the system. For example, if you type, Templates01, the exported file name is defined as **Templates01_confTemplates.xml**.
The system automatically defines the Profiles file name field with the same file name prefix as the Templates file name field. For example, if you type Templates01 in the Templates file name field, the exported profiles file name is defined as **Templates01_confProfiles.xml**.
- 6 Click **OK** to export the Conference Templates and Conference Profiles to a file.

Importing Conference Templates


You can import Conference Templates and Conference Profiles from one MCU to multiple MCUs in your environment.

To import Conference Templates:

- 1 In the Collaboration Server Web Client main window, click the Conference Templates tab. The Conference Templates are displayed.
- 2 Click the **Import Conference Templates**  button, or right-click the Conference Templates pane, and then click **Import Conference Templates**. The **Conference Templates - Import** dialog box is displayed.




- 3 To import Conference Templates, clear the **Import includes conference profiles** check box. When this check box is cleared, the **Conference Templates - Import** dialog box is displayed without the Profiles file name field.

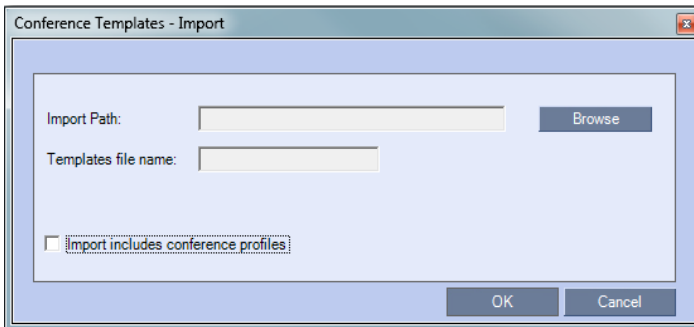

- 4 In the **Import Path** field, click **Browse** to navigate to the path and file name of the Conference Templates you want to import. When clicking the exported templates file you want to import, the system automatically displays the appropriate files in the Templates file name field and the **Profiles file name** field (when the **Import includes conference profiles** check box is selected).
- 5 Click **OK** to import the Conference Templates and their associated Conference Profiles, if selected. Conference Templates are not imported when:
- A Conference Template already exists
 - An associated Conference Profile is not defined in the Conference Profiles list

When one or more Conference Templates are not imported, a Message Alert window is displayed with the templates that were not imported.

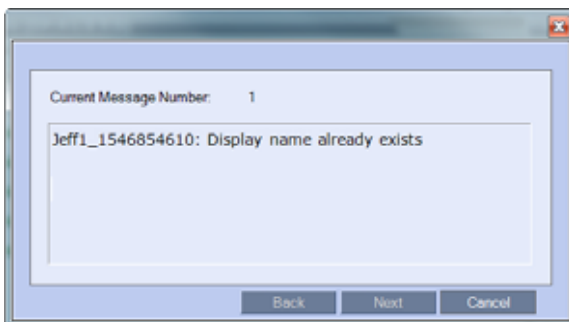

- 6 Click **Cancel** to exit the **Message Alerts** window.

The imported Conference Templates are added to the Conference Templates list. When the **Import includes conference profiles** check box is selected, the imported Conference Profiles are added to the Conference Profiles list.

Start a Conference



Note: Virtual Platform Setup

When using RealPresence Platform, the conferencing parameters should be defined in the RealPresence DMA component, and not directly in the Collaboration Server Virtual Edition.

There are several ways to start a conference:

- Clicking the **New Conference** button in the Conferences pane. For more information, see [Start an AVC CP Conference from the Conferences Pane](#) and [Starting a New SVC Conference](#).
- Dialing in to a Meeting Room.

A Meeting Room is a conference that is saved on the MCU. It remains in passive mode until it is activated by the first participant, or the meeting organizer, dialing in.

For more information, see [Meeting Rooms](#).

- Dialing in to an Ad Hoc Entry Queue which is used as the access point to the MCU. This option is valid to AVC participants dialing into an AVC-based or a Mixed CP and SVC Entry Queue.

For more information, see [Entry Queues, Ad Hoc Conferences and SIP Factories](#).

- Start a Reservation (AVC CP):
 - If the Start Time of the Reservation is past due the conference becomes ongoing immediately.
 - If the Start Time of the Reservation is in the future the conference becomes ongoing, at the specified time on the specified date.

Changes made to this information once the conference is running are not saved to the CDR.

- Start any Conference Template saved in the Conference Templates list.
- Clicking on the link included in a Microsoft Outlook Polycom Meeting Invitation or by manually dialing the numbers displayed in the invitation using the endpoint's numeric input device.

This option is valid to AVC participants only.


Attendees that have received an invitation to a Polycom Meeting through the Polycom Conferencing Add-in for Microsoft Outlook can start a conference by being the first invited attendee to click on a link in the Meeting Invitation displayed on his/her workstation or calendaring enabled endpoint, or manually dial in to the meeting using the Polycom Conference information included in the Meeting Invitation.

For more information see [Polycom Conferencing for Microsoft Outlook®](#).

Start an AVC CP Conference from the Conferences Pane

To start an AVC CP conference from the Conference pane:

- 1 In the **Conferences** pane, click **New Conference** (🌐).
The **New Conference – General** dialog box opens.

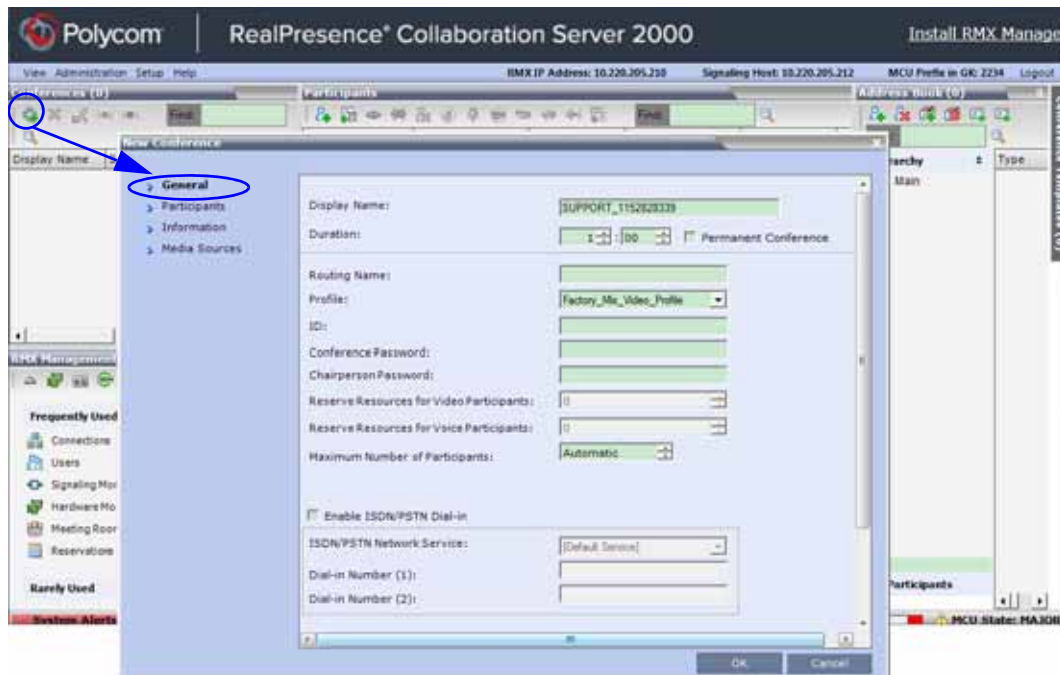

- 2 Set general information, such as meeting duration, meeting profile, and passwords. For more information, see [General Tab](#).
- 3 Click the **Participants** tab to add participants from the Participants Address Book or to define participants (mainly dial-out participants). For more information, see [Participants Tab](#).
- 4 If all participants are undefined, **dial-in**, and no additional information is required for the new conference, click **OK**.

The system displays the conference default **Name**, **Duration** and the default **Profile**, which contains the conference parameters and media settings.

The system automatically allocates the conference **ID** when the conference starts.

In most cases, the default conference **ID** can be used and you can just click **OK** to launch the conference. If required, you can enter a conference **ID** before clicking **OK** to launch the conference.

If you are the meeting chairperson or organizer using the Collaboration Server Web Client to start your own meeting, you need to communicate the default conference ID (or the one you created) to the other conference participants so that they can dial in.

General Tab

You can define parameters such as your display name, conference profile, conference password, and duration in the **General** tab.

The following table describes the information displayed in the **General** Tab.

New Conference - General tab parameters

Field	Description
Display Name	<p>The Display Name is the conferencing entity name in native language character sets to be displayed in the RP Collaboration Server Web Client.</p> <p>In conferences, Meeting Rooms, Entry Queues and SIP factories the system automatically generates an ASCII name for the Display Name field that can be modified using Unicode encoding.</p> <ul style="list-style-type: none"> English text uses ASCII encoding and can contain the most characters (length varies according to the field). European and Latin text length is approximately half the length of the maximum. Asian text length is approximately one third of the length of the maximum. <p>The maximum length of text fields also varies according to the mixture of character sets (Unicode and ASCII).</p> <p>Maximum field length in ASCII is 80 characters.</p> <p>If the same name is already used by another conference, Meeting Room or Entry Queue, the Collaboration Server displays an error message requesting you to enter a different name.</p> <p>Note: This field is displayed in all tabs.</p>
Duration	<p>Define the duration of the conference in hours using the format HH:MM (default 01:00).</p> <p>Note: This field is displayed in all tabs.</p>
Permanent Conference	<p>Click this check box to make this conference a Permanent Conference: an ongoing conference with no pre-determined End Time, continuing until it is terminated by an administrator, operator or chairperson. For more information see Audio Algorithm Support.</p> <p>Note: This field is displayed in all tabs.</p>
Routing Name	<p>Routing Name is the name with which ongoing conferences, Meeting Rooms, Entry Queues and SIP Factories register with various devices on the network such as gatekeepers and SIP servers. This name must be defined using ASCII characters. Comma, colon and semicolon characters cannot be used in the Routing Name.</p> <p>The Routing Name can be defined by the user or automatically generated by the system if no Routing Name is entered as follows:</p> <ul style="list-style-type: none"> If ASCII characters are entered as the Display Name, it is used also as the Routing Name If a combination of Unicode and ASCII characters (or full Unicode text) is entered as the Display Name, the ID (such as Conference ID) is used as the Routing Name. <p>If the same name is already used by another conference, Meeting Room or Entry Queue, the Collaboration Server displays an error message and requests that you enter a different name.</p>
Profile	<p>The system displays the name of the default Conference Profile. Select the required Profile from the list.</p> <p>The Conference Profile includes the conferencing mode, conference line rate, media settings and general settings.</p> <p>For a detailed description of Conference Profiles, see Using Conference Profiles.</p>

New Conference - General tab parameters

Field	Description
ID	<p>Enter the unique-per-MCU conference ID. If left blank, the MCU automatically assigns a number once the conference is launched.</p> <p>This ID must be communicated to conference participants to enable them to dial in to the conference.</p> <p>Note: If setting the Conference ID to the digits that are used for MCU prefix in Gatekeeper (for example gatekeeper prefix is set to 10 and the conference ID is 1001), the system will not be able to dial to the destination conference as the prefix digits are truncated from the conference ID, preventing the system from locating it.</p> <p>Note: If SIP Factories are used do not use the number 7001 as an ID. 7001 is the default SIP Factory ID.</p>
Conference Password	<p>Enter a password to be used by participants to access the conference. If left blank, no password is assigned to the conference.</p> <p>This password is valid only in conferences that are configured to prompt for a conference password.</p> <p>This field is numeric and has a default length of 4 characters. The administrator can modify it in the Setup > System Configuration settings. For more information, see System Configuration Flags.</p> <p>The Collaboration Server can be configured to automatically generate conference (and chairperson) passwords when these fields are left blank. For more information, see Automatic Password Generation Flags.</p>
Chairperson Password	<p>Enter a password to be used by the Collaboration Server to identify the Chairperson and grant him/her additional privileges. If left blank, no chairperson password is assigned to the conference. This password is valid only in conferences that are configured to prompt for a chairperson password.</p> <p>This field is numeric and has a default length of 4 characters. The administrator can modify it in the Setup > System Configuration settings. For more information, see System Configuration Flags.</p> <p>The RealPresence Collaboration Server can be configured to automatically generate chairperson (and conference) passwords when these fields are left blank. For more information, see Automatic Password Generation Flags.</p>
Reserve Resources for Video Participants	<p>Enter the number of video participants for which the system must reserve resources.</p> <p>Default: 0 participants.</p> <p>Maximum participants:</p> <ul style="list-style-type: none"> MPMRx-D / RMX1800: 100 MPMRx-S: 30
Reserve Resources for Audio Participants	<p>Enter the number of audio participants for which the system must reserve resources.</p> <p>Default: 0 participants.</p> <p>Maximum participants:</p> <ul style="list-style-type: none"> MPMRx-D / RMX1800: 300 MPMRx-S: 90

New Conference - General tab parameters

Field	Description
Maximum Number of Participants	Indicate the total number of participants that can be connected to the conference. The automatic setting indicates that the maximum number of participants that can be connected to the conference is determined according to resource availability. Note: If a number is specified, it should be large enough to accommodate the participants specified in the Reserve Resources for Video/Voice Participants fields.
Enable ISDN/PSTN Dial-in	Select this check box if you want ISDN and PSTN participants to be able to connect directly to the conference.
ISDN/PSTN Network Service	The default Network Service is automatically selected. A different ISDN/PSTN Network Service can be selected from the Network Services list.
Dial-in Number (1)	Leave this field blank to let the system automatically assign a number from the dial-in range defined for the selected ISDN/PSTN Network Service. To manually define a dial-in number, enter a unique number from the dial-in number range defined for the selected Network Service. This number cannot be assigned to another Conference/Reservation/Meeting Room/Gateway Profile
Dial-in Number (2)	By default, the second dial-in number is not defined. To define a second dial-in number, enter a required number from the dial-in number range defined for the selected Network Service.

Participants Tab

The Participants tab is used to add participants to the conference from the Address Book or by defining them. Defined dial-out participants are connected to the conference automatically when the conference is launched, unless the Dial Out Manually option is selected.



Note:

This procedure is optional.

When defining a new conference, the **Participants List** is empty.

The following table describes the information displayed in the **Participants List** and the operations that can be performed.

New Conference – Participants Tab

Column / Button	Description
Participants List	
Name	A Unicode field that displays the participant's name and an icon representing the endpoint type: Voice or Video .
IP Address/Phone	Indicates the IP address or phone number of the participant's endpoint. <ul style="list-style-type: none"> For dial-out connection, displays the IP address or phone number of the endpoint called by the RealPresence Collaboration Server. For dial-in connection, displays the participant's IP address or phone number used to identify and route the participant to the appropriate conference.

New Conference – Participants Tab (continued)


Column / Button	Description
Alias Name/SIP Address (IP Only)	Displays the alias name of an H.323 endpoint or the SIP URL.
Network	The network communication protocol used by the endpoint to connect to the conference: IP (H.323 or SIP) or ISDN/PSTN .
Dialing Direction	Select the dialing direction: <ul style="list-style-type: none"> • Dial-in – The participant dials in to the conference. This field applies to IP participants only. • Dial-out – The MCU dials out to the participant. Note: Dial-out is forced when defining an ISDN/PSTN participant.
Encryption	Displays whether the endpoint uses encryption for its media. The default setting is Auto , indicating that the endpoint must connect according to the conference encryption setting.
Lecturer	This option is used to activate the Lecture Mode. Select the participant you want to designate as Lecturer from the list of conference participants. The Lecturer can be selected once the conference is running and participants are connected.
Dial Out Manually	Select this option to designate a Collaboration Server User-controlled dial-out conference connection. When checked, the user must connect each of the dial-out participants who remain on standby until they are connected to the conference. This option is disabled in SVC conferences.
Buttons	
New	Click to define a new participant. For more information, see <i>Polycom® RealPresence Collaboration Server (RMX) 1800/2000/4000 Administrator's Guide</i> , Adding a New participant to the Address Book Directly.
Remove	Click to remove the selected participant from the conference.
Add from Address Book	Click to add a participant from the Address Book to the conference.

Participants can be added to the conference in the following methods:

- Defining a new participant during the definition of the conference (clicking the New button).
- Adding pre-defined participants from the Address Book by either selecting the participants from the list or dragging and dropping the participants from the Address Book to the Participants list.
- Dial-in participants can connect to the conference after it was started (without using the **New Conference - Participants** dialog box).
- Once the conference has started, participants can be added to a conference directly from the Participants Address Book without having to use the **New Conference – Participants** tab.

To add participants from the Address Book:

- 1 In the **Participants List**, click the **Add from Address Book** button to open the Participants Address Book.

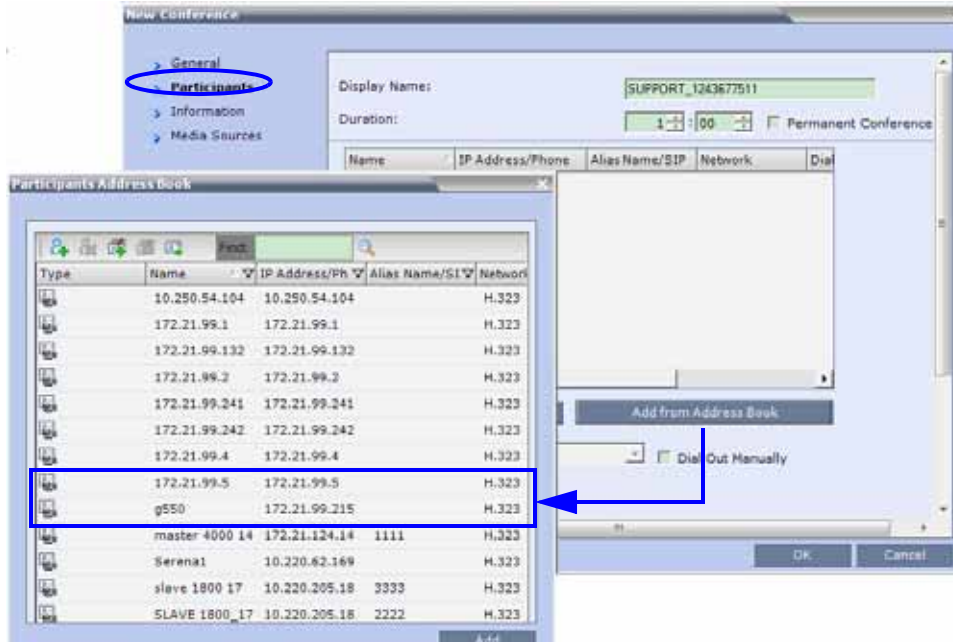

The **All Participants** list opens.

- 2 In the Participants Address Book, select the participants that you want to add to the conference and click the **Add** button.
Standard Windows multiple selection techniques can be used in this procedure.
- 3 The selected participants are assigned to the conference and appear in the **Participant List**.
- 4 Select additional Participants or click the **Close** button to return to the **Participants** tab.

Information Tab

In the **Info** fields, you can add general information about the conference, such as contact person name, company name, billing code, etc.

This information is written to the Call Detail Record (CDR) when the conference is launched.

Changes made to this information once the conference is running are **not** saved to the CDR.



Note:

This procedure is optional. The information entered into these fields does not affect the conference.

New Conference – Information Tab

Field	Description
Info1, 2, 3	There are three information fields that allow you to enter general information for the conference such as company name, contact person etc. Unicode can be used in these fields. The maximum length of each field is 80 characters.
Billing	Enter the conference billing code if applicable.

If no participants were defined for the conference or as long as no participants are connected, the indication **Empty** and a warning icon (⚠) appear in the **Status** column in the **Conferences** pane.

The status changes when participants connect to the conference.

If no participant connects within the time specified in the **Conference Profiles > Auto Terminate > Before First Joins** field, the conference is automatically terminated by the system.

Media Sources Tab

You can define a new layout, and override the original layout that defined in the Conference Profile. Furthermore you can define any participant into a specific window in the new layout. For more information, see [Video Forcing \(AVC-Based CP and Mixed CP and SVC Conferences\)](#).

Starting a Mixed CP and SVC or SVC Only Conference from the Conferences Pane

Starting a New SVC Conference




Note: SVC Conferencing Requirements

- A license is required for SVC conferencing.
- In mixed AVC-SVC conferences, participants with both SVC and AVC endpoints can participate in the same conference.
- In non-virtual MCUs, during mixed SVC & CP conferences, PSTN (Audio Only) calls are also supported.

To start a SVC conference from the Conference pane:

- 1 In the *Conferences* pane, click the **New Conference** (🌿) button.
The **New Conference – General** dialog box opens.

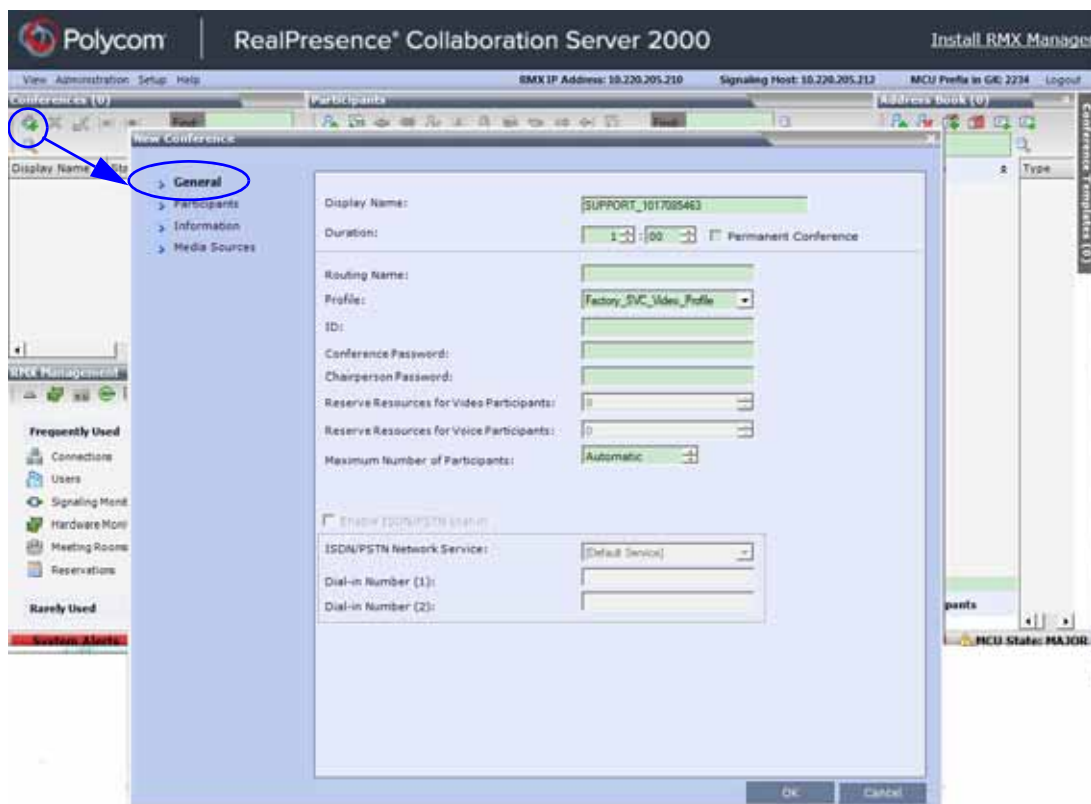



- 2 Select a **Profile** set to **SVC** or **Mixed CP and SVC** Conferencing Mode.
- 3 Set parameters in the **General**, **Information**, **Media Sources**, and **Participants** tabs.
For more information on parameters, see [General Tab](#), [Participants Tab](#), [Information Tab](#), and [Media Sources Tab](#).


Scheduling an AVC-based Reservation

AVC-based Reservations are started by selecting an AVC-based Profiles.

To start a conference from the Reservation Calendar:

- 1 In the **RMX Management** pane, click the **Reservations** entry (). The Reservation Calendar is displayed.
- 2 Click the **New Reservation** () button.

The **New Reservation – General** tab dialog box is displayed.

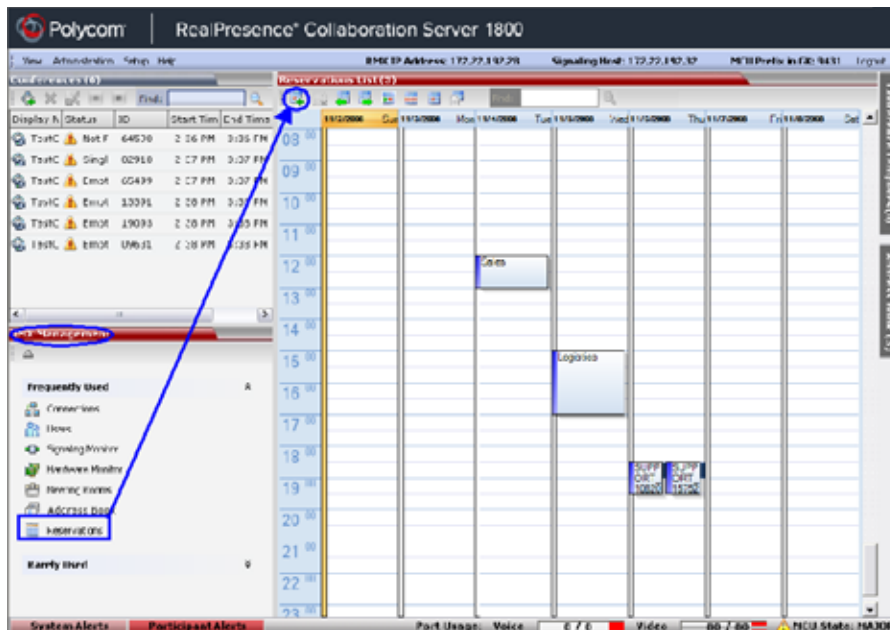

This dialog box is identical to the **AVC CP New Conference - General** dialog box. For a field description, see [General Tab](#).

- 3 **Optional.** Select the **Enable ISDN/PSTN Dial-in** check box if you want ISDN and PSTN participants to be able to connect directly to the conference.
- 4 If **Enable ISDN/PSTN Dial-in** option is selected, either enter a dial-in number, or leave the **Dial-in Number** field blank to let the system automatically assign a number from the dial-in range defined for the selected ISDN/PSTN Network Service.
- 5 Click the **OK** button.

A confirmation box is displayed stating that the *Reservation* time is past due and that the conference will become ongoing.



6 Click **OK**.

The conference is started. If applicable, an ISDN/PSTN dial-in number was assigned to the conference either automatically or manually, this number can be viewed in the **Conferences** pane.

For more information about *Reservations*, see [Scheduling Reservations](#).

Starting an Ongoing Conference From a Template


An ongoing conference can be started from any Conference Template saved in the *Conference Templates* list.




Note: SVC Conferencing Exception

SVC-based Conference Templates cannot be saved with dial-out participants, only dial-in SIP participants may be defined.

To start an ongoing conference from a template:

- 1 In the Conference templates list, select the template you want to start as an ongoing conference.
- 2 Click the **Start Conference from Template**  button, or right-click and select **Start Conference from Template**.

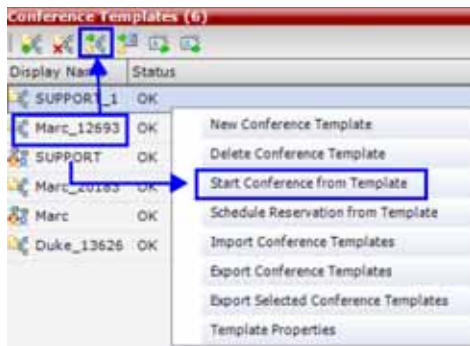

The conference is started.



Note: ISDN/PSTN Numbers Assignment

If a CP Conference Template is assigned an ISDN/PSTN dial-in number already assigned to an ongoing conference, Meeting Room, Entry Queue or Gateway Profile, the template cannot be used to start an ongoing conference or schedule a reservation. However, the same number can be assigned to several conference templates provided they are not used to start an ongoing conference simultaneously. If a dial in number conflict occurs prior to conference's start time, an alert appears, indicating ISDN dial-in number is already assigned to another conferencing entity.

The name of the ongoing conference in the **Conferences** list is taken from the conference template **Display Name**.

Participants that are connected to other ongoing conferences when the template becomes an ongoing conference are not connected.



Note: Name Differing Requirement

Display Name, Routing Name and ID must be unique for ongoing conferences, Meeting Rooms or Entry Queues.

For detailed description of Conference Templates, see [Conference Templates](#).

Starting a Meeting from Microsoft Outlook Using Polycom Add-in



Note: Feature Applicability

This feature is applicable for CP Only Conferencing.

Polycom Conferencing for Microsoft Outlook is an add-in that enables users to easily organize and invite attendees to video enabled meetings via Microsoft Outlook®. For more information see [Polycom Conferencing for Microsoft Outlook®](#).

Using Polycom Conferencing add-in to Microsoft Outlook, an audio meeting can be created as any other Outlook meeting. For more information, see [Appendix H - Integration Into Microsoft Environments](#).

Conference and Participant Level Operations

Conference Operations

The Collaboration Server user can Copy and Paste conferences. When using the Collaboration Server Web Client, conferences can be copied and pasted on the same MCU. However, when using the RMX Manager, with its ability to manage multiple MCUs, conferences can be copied and pasted between different MCUs.



Note: Resource Capacities and Operational Specifications

For information about Resource Capacities and other operational specifications, see the *RealPresence® Collaboration Server (RMX) Hardware Guide* specific to your system.

Copy Conference

The **Copy** command copies all the conference's properties including connected participants and makes these properties available for pasting and starting a new conference. The copied conference remains active until it terminates or is deleted.

To copy a conference:

- » In the **Conferences List** pane, right-click the conference you want to copy, and select **Copy Conference**.

Paste Conference

The **Paste Conference** command starts the new conference on the same MCU or on a different MCU.

To paste a conference:

- » Right-click in the **Conferences List** pane, and select **Paste Conference**.
or
If you are using the RMX Manager, and you want to paste the conference to a different MCU:
 - a** In the MCUs list pane, click the MCU in which to create the conference.
 - b** In the **Conferences List** pane, right-click, and select **Paste Conference**.The conference is pasted to the MCU with its **Display Name** assigned by the system.

Paste Conference As

The **Paste Conference As** command allows the system user to create a new conference using the copied conference properties as a template. It automatically opens the **Conference Properties** dialog box allowing the user to modify information in the **General**, **Participants** and **Information** tabs to create the new conference. When the **OK** button in the **Conference Properties** dialog box conference Properties dialog box is clicked, the new conference is started.

To paste a conference as a new conference:


- 1 Right-click in the **Conferences List** pane, and select **Paste Conference As**.

or

If you are using the RMX Manager and you want to paste the conference to a different MCU:

- a In the MCUs list pane, click the MCU in which to create the conference.
- b In the **Conferences List** pane, right-click, and select **Paste Conference As**.

The **Conference Properties** dialog box is displayed.

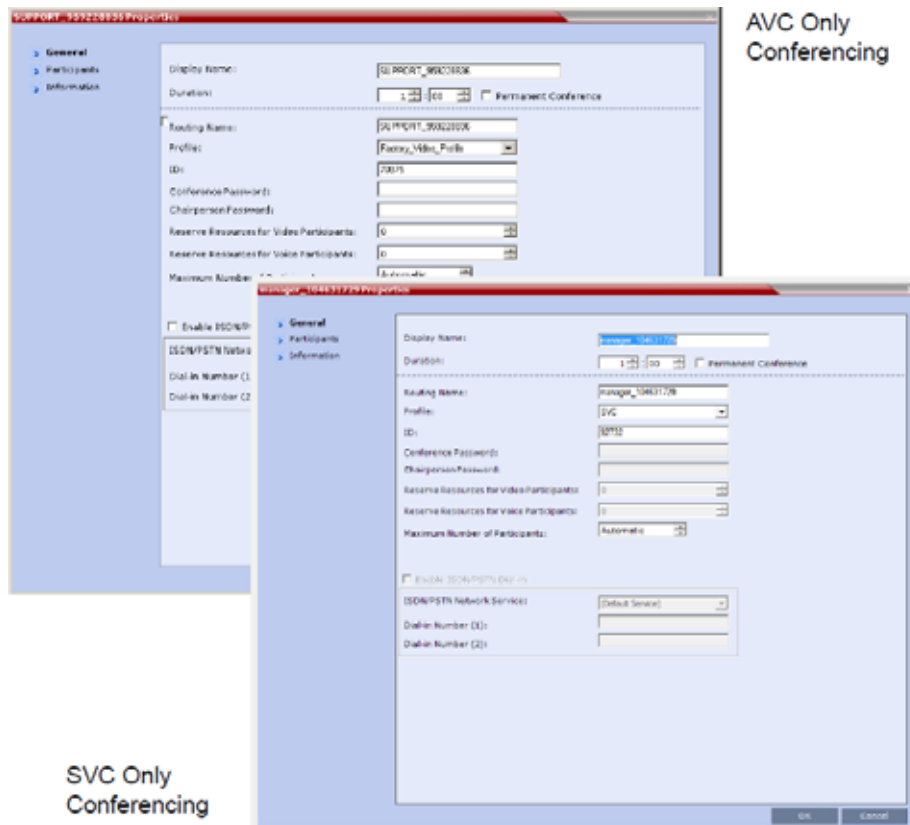















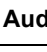

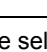
- 2 Modify the conference information as required.
- 3 Click **OK** to paste and start the new conference.

Participant Operations


Operational Buttons

Various operations can be performed during an ongoing conference, affecting only the selected participants in the conference. These operations enable you to modify and control the connections and statuses of participants in ongoing conferences, as described in the following table.

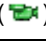Participant Level Operations

Menu Option	Button	Description
New Participant		Define a new participant. SVC dial-in participants can be added to SVC Only and Mixed CP and SVC conferences. SVC dial-out participants cannot be added to any conference.
Add Participant From Address Book		Open the Address Book to select the participant for the conference. SVC dial-in participants can be added to SVC Only and Mixed CP and SVC conferences. SVC dial-out participants cannot be added to any conference.
Connect Participant		Connect a disconnected defined dial-out participant to the conference.
Disconnect Participant		Disconnect the participant from the conference.
Delete Participant		Delete the selected participants from the conference.
Mute Audio		Mute the audio transmission from the participant to the conference. The Audio Muted indicator appears in the Participants List and the Unmute Audio button () becomes active.
Unmute Audio		Resume the participant's audio transmission to the conference. The Mute Audio button () becomes active.
Suspend Video		Suspend the video transmission from the participant to the conference. The suppressed participant's video is not transmitted to the conference but the participant still receives conference video. The Suspend Video indicator appears in the Participants List and the Resume Video button () becomes active.
Resume Video		Resume the participant's video transmission to the conference. The Suspend Video button becomes active ()
Block Audio		Block the audio transmission from the conference to the participant. When blocked, the participant can still be heard by the conference. The Audio Blocked indicator appears in the Participants List and the Unblock Audio button () becomes active.
Unblock Audio		Resume the audio transmission from the conference to the participant. The Block Audio button () becomes active.
Change to Chairperson		Define the selected participant as the conference leader/chairperson.

Participant Level Operations

Menu Option	Button	Description
Change to Regular Participant		Define the chairperson as a regular participant without chairperson privileges.
Change To Content Token Owner		Initiate Content Broadcast Control to prevent the accidental interruption or termination of H.239 Content that is being shared by this participant.
Cancel Content Token Owner		Cancel Content Broadcast Control.
Add Participant to Address Book		Add selected participant's details to the Participant Address Book.
Move to Conference (AVC Only)		Move an AVC participant to another ongoing AVC CP conference. The destination conference is selected from a displayed list.
View Participant Sent Video (AVC Only)		Preview the video sent from the AVC participant to the conference.
View Participant Received Video (AVC Only)		Preview the video sent from the conference to the AVC participant.
Copy Participant		Copy the all participant's parameters in preparation for Pasting into another conference or back into the current conference.
Cut Participant		Copy the all participant's parameters and delete the participant from the current conference. The participant can be pasted into another conference or back into the current conference.
Paste Participant As		Paste the participant into the selected conference as a new participant with parameters modified via the Address Book Participant - Properties dialog box.
Abort H.239 Session		Withdraw the Content Token from the participant back to the MCU for re-assignment.
Connect to Website (AVC Only)		Connect directly to the internal website of the participant's endpoint to perform administrative, configuration and troubleshooting activities.
AGC (Auto Gain Control) (AVC Only)		<p>Enable AGC for the participant with weak audio signal during ongoing conferences.</p> <p>Notes:</p> <ul style="list-style-type: none"> To implement AGC for the participant audio, the ENABLE_AGC System Flag in system.cfg must be set to YES. The flag default value is NO. Enabling AGC may result in amplification of background noise.
Participant Properties		View all Participant Properties.

Copy, Cut and Paste Participant

The Collaboration Server user can **Copy**, **Cut** and **Paste** participants between different conferences running on the MCU, including his/her current conference. These functions, when used via the RMX Manager, with its ability to manage multiple MCUs and participants, allow the MCU user to **Copy**, **Cut** and **Paste** participants between conferences running on different MCUs.

Copy Participant

The **Copy** command copies all the participant's properties and makes them available for pasting. The participant remains connected to his/her current conference.

To copy a participant:

- » In the **Participants List** pane, right-click the participant you want to copy, and select **Copy Participant**.

Cut Participant

The **Cut** command copies all the participant's properties and makes them available for pasting. The participant is deleted from his/her current conference.

To cut a participant:

- » In the **Participants List** pane, right-click the participant you want to cut, and select **Cut Participant**.

Paste Participant

The **Paste** command connects the copied or cut participant to the selected conference.

If the participant was copied, he/she should be deleted from the conference he/she was copied from, unless it is required that the participant is connected to two (or more) conferences. (There are endpoints that permit a participant to be connected to multiple conferences).

To paste a participant:

- 1 In the **Conferences List** pane, click the conference into which you want to paste the copied/cut participant.
- 2 Right-click in the **Participants List** pane of the selected conference, and select **Paste Participant**.

or

If you are using the RMX Manager and you want to paste the participant to a conference on a different MCU:

- a In the MCUs list pane, click the MCU hosting the conference into which you wish to add the participant.
- b In the **Conferences list** pane, click the conference into which you want to paste the copied/cut participant.
- c Right-click the **Participants list** pane, and select **Paste Participant**.

The participant is connected to the conference.

Paste Participant As

The **Paste Participant As** command allows the MCU user to create a new participant using the copied participant's properties as a template. It automatically opens the **Address Book - Participant Properties** dialog box allowing the MCU user to modify the participant's properties effectively creating a new participant. When the **OK** button in the **Participant Properties** dialog box is clicked, the new participant is connected to the selected conference.

To paste a participant as a new participant:

- 1 In the **Conferences List** pane, click the conference into which you want to paste the copied/cut participant.

Right-click in the **Participants List** pane of the selected conference, and select **Paste Participant As** or

If you are using the RMX Manager and you want to paste the participant to a conference on another MCU:

- a In the MCUs list pane, click the MCU hosting the conference into which you wish to add the participant.
- b In the **Conferences list** pane, click the conference into which you want to paste the copied/cut participant.
- c Right-click the **Participants List** pane, and select **Paste Participant As**.

The **Address Book - Participant Properties** dialog box is displayed.

- 2 Modify the participant information as required. For more information, see [Address Book](#).

Optional. If not already in the Address Book, both the copied/cut participant and the new one can be added to the Address Book.

- 3 Click **OK** to connect the new participant to the selected conference.

Moving Participants Between Conferences

The Collaboration Server User can move participants between ongoing conferences, including an Operator conference, and from the Entry Queue to the destination conference if help is required.

When moving between conferences or when a participant is moved from an Entry Queue to a conference by the Collaboration Server user (after failure to enter the correct destination ID or conference password), the IVR messages and slide display are skipped.

Move Guidelines

- Move is available only between CP conferences (meaning, not between Video Switching conferences).
- Move between conferences can be performed without an active Operator conference.
- When moving the conference chairperson from one conference to another, the source conference will automatically end if the **Auto Terminate When Chairperson Exits** option is enabled, and that participant is the only conference chairperson.
- When moving the Operator to any conference (following assistance request), the IVR messages and slide display are skipped.
- Participants cannot be moved from a Telepresence conference.
- Participants cannot be moved from LPR-enabled conferences to non-LPR conferences. Move from non-LPR conferences to LPR-enabled conferences is possible.
- Move between encrypted and non-encrypted conferences depends on the **ALLOW_NON_ENCRYPT_PARTY_IN_ENCRYPT_CONF** flag setting, as described in the following table:

Participant Move Capabilities vs. ALLOW_NON_ENCRYPT_PARTY_IN_ENCRYPT_CONF flag setting

Flag Setting	Source Conference/EQ Encrypted	Destination Conference Encrypted	Move Enabled?
NO	Yes	Yes	Yes
NO	Yes	No	Yes
NO	No	Yes	No
NO	No	No	Yes
YES	Yes	Yes	Yes
YES	Yes	No	Yes
YES	No	Yes	Yes
YES	No	No	Yes

- When moving dial-out participants who are disconnected to another conference, the system automatically dials out to connect them to the destination conference.
- Cascaded links cannot be moved between conferences.

- Participants cannot be moved to a conference if the move will cause the number of participants to exceed the maximum number of participants allowed for the destination conference.

Moving Participants Options

Collaboration Server users can assist participants by performing the following operations:

- Move a participant to an Operator conference (Attend a participant).
- Move a participant to its Home (destination) conference.
- Move participant from one ongoing conference to another


A move can be performed using the following methods:

- Using the participant right-click menu
- Using drag and drop

To move a participant from the ongoing conference using the right-click menu options:

- 1 In the **Conference List** pane, click the conference where there are participants waiting for Operator's Assistance to display the list of participants.
- 2 In the **Participants** list, right-click the icon of the participant to be moved, and select one of the following options:
 - **Move to Operator Conference** - to move the participant to the Operator conference.
 - **Move to Conference** - to move the participant to another ongoing AVC CP conference.

When selected, the **Move to Conference** dialog box opens, letting you select the name of the destination conference.

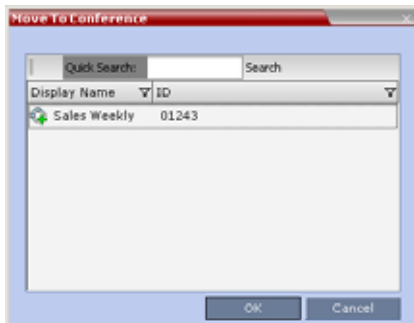

- **Back to Home Conference** - if the participant was moved to another conference or to the Operator conference, this options moves the participant back to its source conference. This option is not available if the participant was moved from an Entry Queue to an Operator conference or the destination conference.

Moving a Participant Interactively

You can drag and drop a participant from an Entry Queue or an ongoing conference to an Operator or destination (Home) conference.

- 1 Display the participants list of the Entry Queue or the source conference by clicking its entry in the **Conferences** list.
- 2 In the **Participants** list, drag the icon of the participant to the **Conferences List** pane, and drop it on the Operator Conference icon or another ongoing conference.

Personal Conference Manager (PCM) (AVC CP Conferences)

The *Personal Conference Manager (PCM)* interface enables the conference chairperson to control various conference features using his/her endpoint's remote control device.


The following conference operations can be performed:

- Initiate *Polycom's Click&View™* application to change the local screen layout.
- Invite participants to connect to the conference.
- View and control the audio and video of each connected endpoint.
- Camera Control - control the camera of a remote endpoint using *Far End Camera Control (FECC)*.
- Control the camera of a connected endpoint.
- Video Force a specific participant to a specific window of the video layout.
- Initiate and control recording of the conference.
- Disconnect a participant.
- Terminate the conference.

PCM Usage Guidelines

- PCM is supported in H.323 and SIP network environments.
- PCM is only available in AVC CP conferences.
- PCM can only be activated from up to 4 conferences per MPMRx card.
- If all possible PCM sessions are active on a media card and a chairperson of another conference, hosted on the same media card, attempts to start an additional PCM session, a message is displayed indicating that the requested PCM session cannot be activated because the maximum number of concurrent PCM sessions are already activated. FECC is then activated.
- When PCM is active, FECC can only be performed by the chairperson using PCM's Camera Control menu.
- FECC is available to all IP participants in the conference with the exception of the chairperson that has an active PCM session.
- If enabled, Message Overlay is not displayed while PCM is active.
- Normal conference video is resumed after 4 seconds of inactivity within the PCM menu.
- If a chairperson with active PCM session is moved to another conference, the PCM session is automatically terminated.
- PCM cannot be activated from the chairperson's endpoint when connected with QCIF resolution.
- The **PCM_LANGUAGE** System Flag determines the language of the PCM interface.
 - Possible Values:** ENGLISH, CHINESE_SIMPLIFIED, CHINESE_TRADITIONAL, JAPANESE, GERMAN, FRENCH, SPANISH, KOREAN, PORTUGUESE, ITALIAN, RUSSIAN, NORWEGIAN
 - Default:** Current *RMX Web Client* language.
- The Start PCM DTMF code for initiating PCM is configured in the DTMF Codes tab of the New Conference IVR Service or Conference IVR Service Properties dialog box. The default DTMF Code is ## and can be modified or if required.

The default value of the **Permission** field is **Everyone**. It can be modified to **Chairperson**.

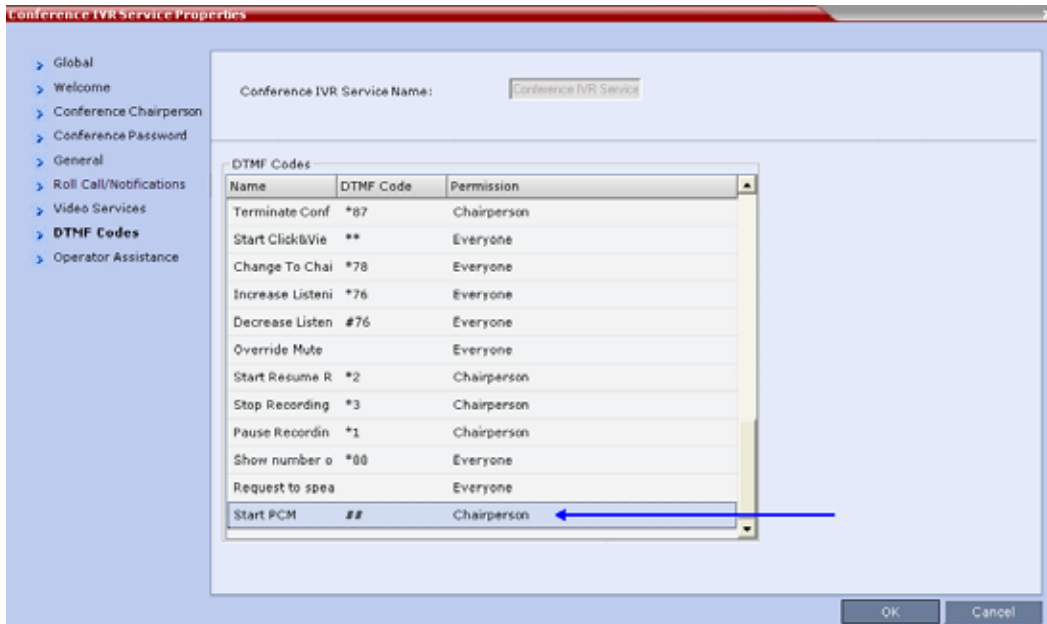

- Although PCM is successfully initiated on Microsoft Office Communications client or Lync client, since FECC feature is not available on these clients none of the PCM options are accessible as the only available keys are #,*,1..9 and not the navigation keys ("LEFT", "RIGHT", etc.).

Modifying the PCM_FECC System Flag

The **PCM_FECC** System Flag determines whether the DTMF Code, ##, the Arrow Keys (FECC) or both will activate the PCM interface. In addition, this flag can be used to disable the PCM.

Possible Values: YES / NO

Default: YES.

The table below summarizes the combined effect of the DTMF Code and **PCM_FECC** System Flag settings on the system.


PCM_FECC / DTMF Code

PCM_FECC=	DTMF Code	Effect on System
YES	Defined	Both <i>DTMF Codes</i> and <i>Arrow Keys</i> will activate <i>PCM</i> .
	Deleted	Only the <i>Arrow Keys</i> can activate <i>PCM</i> . Once <i>PCM</i> is activated the <i>Arrow Keys</i> lose their <i>FECC</i> functionality.
NO	Defined	Only the <i>DTMF Code</i> can activate <i>PCM</i> . Once <i>PCM</i> is activated the <i>Arrow Keys</i> lose their <i>FECC</i> functionality.
	Deleted	<i>PCM</i> is disabled.

For more information see [Modifying System Flags](#).

PCM Interface

Initiating PCM


For IP endpoints: PCM is activated by pressing the *Far* key () followed by any of the *Arrow Keys* on the *Remote Control Device*.

For ISDN/PSTN endpoints: PCM is activated by pressing **##** on the *Remote Control Device*.

If, after activation, no keys are pressed on the *Remote Control Device* within a period of 10 seconds, PCM is automatically deactivated.

When PCM becomes active, the top level of the *PCM Main Menu* is displayed on the conference chairperson's endpoint:

Main Menu - Level 1

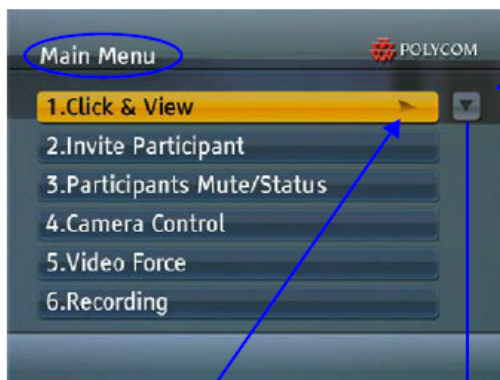

Arrow Indicator:
There are more menu options on the next page

Arrow Indicator:
There are menu options on the previous page

Right Arrow:
Corresponds to the Remote Device's Right Arrow Key
Action:
Go to Sub-Menu of Selected Option (Click&View)

Main Menu - Level 2




PCM Main Menu - Level 2 can only viewed and accessed by ISDN endpoints connected to Collaboration Server 1800/2000/4000 by using DTMF Codes 7 and 8.

Remote Control Device Keys

PCM facilitates user interaction with the RMX using *DTMF Codes* and the *Arrow (FECC)* keys of the endpoint's remote control device.



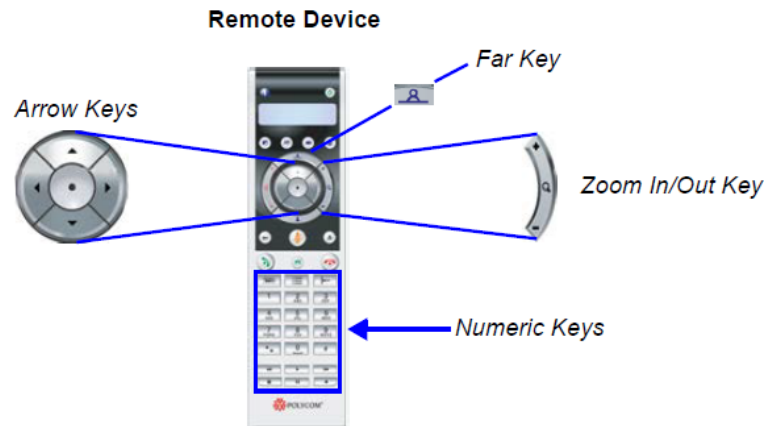


Menu Navigation - Arrow and Zoom Keys

The PCM Menu is navigated using the Remote Device's Arrow Zoom Keys which are defined as follows:




They are defined as follows:

PCM - Menu Navigation

Arrow Key	Description
Left 	<ul style="list-style-type: none"> Go up one menu level. Delete the character to the left of the cursor when entering data. Exit the PCM menu and return to normal conference video (from PCM the top level menu.) Select the video window to the left when navigating a video layout. Initiate PCM from a conference.
Right 	<ul style="list-style-type: none"> Go down one menu level. Confirm current selection in the PCM menu. Select the video window to the right when navigating a video layout. Initiate PCM from a conference.
Up 	<ul style="list-style-type: none"> Cycle upward through the displayed menu options. Select the video window above when navigating a video layout. Initiate PCM from a conference.
Down 	<ul style="list-style-type: none"> Cycle downward through the displayed menu options. Select the video window below when navigating a video layout. Initiate PCM from a conference.
Zoom in (+) 	<ul style="list-style-type: none"> Confirm current selection in the PCM menu. Zoom in on the remote camera when using FECC.

PCM - Menu Navigation (continued)

Arrow Key	Description
Zoom out (-) 	<ul style="list-style-type: none"> Exit PCM Menu. Zoom out on the remote camera when using FECC.

DTMF Codes - Numeric Keys



Before using the shortcut number keys 0-9, enable the DTMF function of the endpoint according to that endpoint's configurations.

DTMF codes are entered using the Remote Device Numerics Keys and are defined as follows:

PCM - DTMF Codes

Numeric Key	Description
0	<ul style="list-style-type: none"> Number input. Shortcut key to a numbered menu option - when conference video or the PCM menu is displayed.
1-9	<ul style="list-style-type: none"> Number input. Shortcut key to a numbered menu option - when the conference video or the PCM menu is displayed. Initiate PCM session on ISDN/PSTN endpoint (1 is the default for the <i>Start PCM DTMF Code</i>).
*	<ul style="list-style-type: none"> Initiate DTMF mode (with Polycom endpoints) - during a conference or when the PCM menu is displayed. Enter a period "." - while entering an IP address.
#	Confirm selection and send information to the RMX.

PCM Main Menu - Level 1

Click & View

With the *Click&View* application, participants can change their Personal Layouts using the Arrow Keys or DTMF codes entered using the Numeric Keys of their endpoints.

For a full description of *Click&View* see [Defining a New Conference IVR Service](#).

Invite Participant


To invite a participant to connect to the conference:

- 1 Use the **Up/Down** arrow keys to select **Invite Participant** in the *Main Menu* and then press the **Right** arrow or **#** key to confirm your selection.

or


Press the **2** key on the *Remote Device*.

The *Invite Participant* sub menu is displayed.

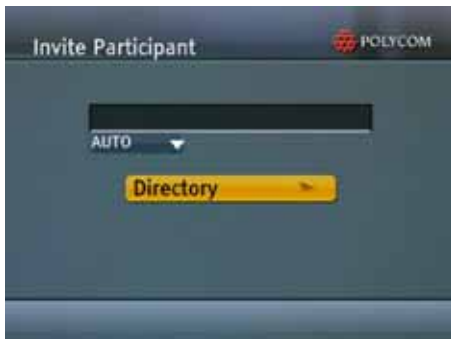

- 2 Use the *Numeric Keys* to enter the number of the participant's endpoint.
- 3 Press the **#** key to initiate the call.
- 4 **Optional.**
 - a Use the **Down** arrow to browse to and change the selection of the dialing method from **Auto** to one of the following:
 - ◆ H.323
 - ◆ SIP
 - ◆ VoIP
 - ◆ ISDN
 - ◆ PSTN
 - b Press the **#** key to initiate the call.
- 5 **Optional.**
 - a Use the *Arrow Keys* to browse to the **Directory** button and select the *Alphabetic Grouping* sub menu.

The *Local Directory* is displayed.

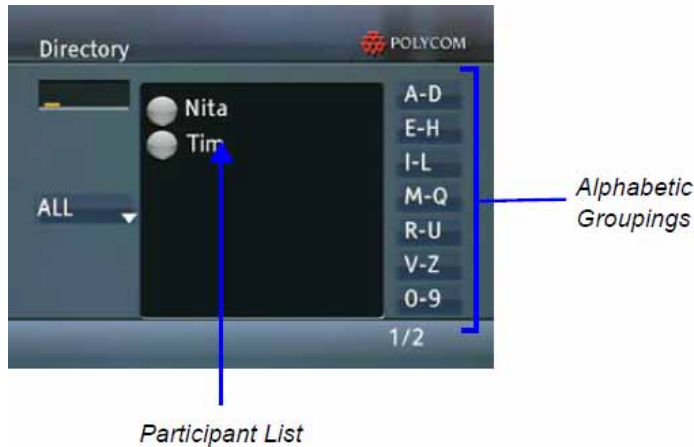

- b** Use the *Numeric Keys* to enter the number of the participant's endpoint.
- c** Press **#** or the **Zoom In** key to initiate the call.
- or
- d** Use the **Up/Down** arrow keys to select a **Participant** from the displayed list or use the **Up/Down** and **Left /Right** arrow keys to display other directory listings.
A message, *Press # or Zoom In to select*, is displayed.

- e** Press **#** or the **Zoom In** key to initiate the call.

Optional. To display all participants:

- Use the **Down** arrow and the to select the **ALL** button.
- Use the **Zoom In** key to display the global directory.
- Use the **Up/Down** and **Left /Right** arrow keys to select a **Participant**.
- Press **#** or the **Zoom In** key to initiate the call.

Participants Mute/Status

The chairperson can view and control the audio and video status of each participant's endpoint. The chairperson can:

- View the audio and video status of participants.
- Mute, block, unmute, unblock participant audio.
- Suspend or allow participant video.
- Mute all (except chairperson and lecturer).

To view and change the Participants Mute/Status:

- 1** Use the **Up/Down** arrow keys to browse to **Participants Mute/Status** entry in the *Main Menu* and then press the **Right** arrow or **#** key to confirm your selection.

or

Press the **3** key on the *Remote Device*.

The *Participants Mute/Status* sub menu is displayed.











The sub menu displays the *Muted*, *Blocked* and *Video Suspended* status of all participants' endpoints. **ALL** can be selected to mute and unmute all participant endpoints with the exception of the conference chairperson and lecturer.

- 2 Use the **Up/Down/Left/Right** arrow keys to select a *Mute*, *Block* or *Suspend* status icon.
- 3 Use the **Zoom In** key to toggle the state of the audio and video channels of the participants' endpoints.

The status icons are summarized in the table below.

Participants Mute/Status - Icons

Status Icon	Description
	Audio output from this endpoint is allowed. Other conference participants can hear the audio from this endpoint.
	The endpoint is muted. Other conference participants will not hear audio from this endpoint.
	The audio input to this endpoint is allowed. This endpoint can hear the conference audio.
	The audio output to this endpoint is blocked. This endpoint cannot receive the conference audio.
	Video output from the endpoint is allowed. Other conference participants can see video from this endpoint.
	Video output from the endpoint is suspended. Other conference participants cannot see video from this endpoint.
	The endpoint is neither muted nor blocked.
	The endpoint is both muted and blocked.

Far End Camera Control

This function is not available to chairpersons using *PCM* with *ISDN* endpoints. The endpoint to be controlled must support *Far End Camera Control* (FECC).

Using the arrow keys of the remote control device, the chairperson can control the direction, zoom and focus of a remote endpoint's camera.


To control a far camera:

- 1 Use the **Up/Down** arrow keys to select **Camera Control** in the *Main Menu* and then press the **Right** arrow or **#** key to confirm your selection.

or

Press the **4** key on the *Remote Device*.


The *Camera Control* sub menu is displayed.

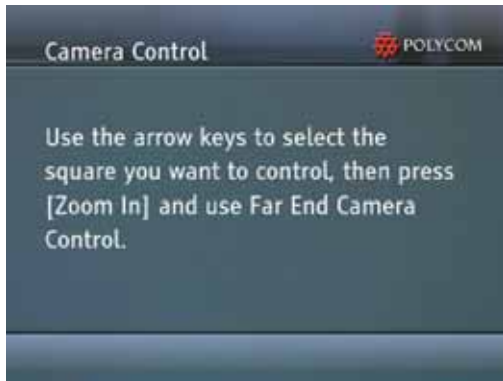


- 2 Use the **Up/Down/Left/Right** arrow keys to select the far camera to be controlled.

A colored frame is displayed around the selected cell in the video layout.

- 3 Use the **Zoom In** key to activate *FECC*.

Following a 10 second delay, the *FECC* active icon () is displayed in the video image of the selected site.

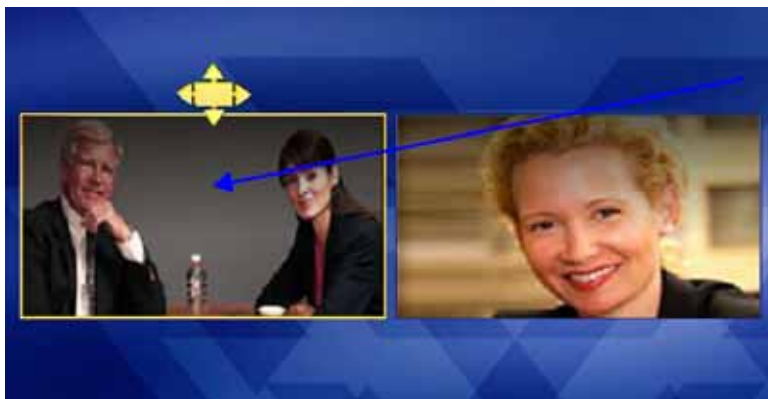

Selected Cell for Far End Camera Control

If no camera control keys are pressed on the *Remote Control Device* within a period of 5 seconds, the previous menu (*Camera Control*) menu is automatically displayed.

- 4 Use the **Up/Down/Left/Right/Zoom In/Zoom Out** arrow keys to control the remote camera.
- 5 Use the **Zoom Out** key on the remote control to return to the *PCM Main Menu*.

Video Forcing

This function is not available to chairpersons using *PCM* with *ISDN* endpoints.

Video Forcing enables the chairperson to force the video of a specific participant to a specific window of the video layout.


To Video Force a participant's video:

- 1 Use the **Up/Down** arrow keys to select **Video Force** in the *Main Menu* and then press the **Right** arrow or **#** key to confirm your selection.

or

Press the **5** key on the *Remote Device*.

The *Video Force* sub menu is displayed.

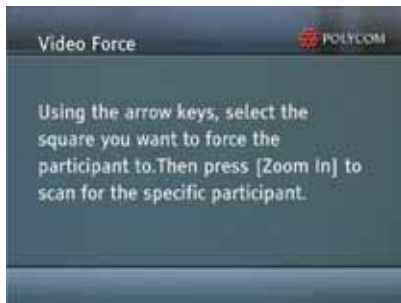

- 2 Use the **Up/Down/Left/Right** arrow keys to select the window of the video layout that you want the specific participant to be displayed in.
- 3 Press the **Zoom In** key to cycle the display of all participants in the selected video window until the participant you want to be displayed appears.
- 4 Press the **Right** arrow or **#** key to confirm your selection.

Recording

This function is not available to chairpersons using *PCM* with *ISDN* endpoints.

If a *Recording Link* has been set up in the *Conference Profile*, the conference chairperson can use the *PCM* interface to start, pause, resume and stop recording. If no *Recording Link* exists, this function appears grayed out and cannot be selected.

In x mode aA *Recording* or *Recording Paused* indication is displayed in the upper left corner of the video layout of all conference participants.



To use the recording functions:

- 1 Use the **Up/Down** arrow keys to select **Recording** in the *Main Menu* and then press the **Right arrow or #** key to confirm your selection.

or

Press the **6** key on the *Remote Device*.

The *Recording* sub menu is displayed.



To start recording:

- » Use the **Up/Down** arrow keys to select **Start Recording** and then press the **Right arrow or #** key to confirm your selection.

or

Press the **1** key on the *Remote Device*.

To pause recording:

- » While recording is in progress, use the **Up/Down** arrow keys to select **Pause** and then press the **Right** arrow or **#** key to confirm your selection.
- or
- Press the **2** key on the *Remote Device*.

To resume recording:

- » While recording is paused, use the **Up/Down** arrow keys to select **Resume** and then press the **Right** arrow or **#** key to confirm your selection.
- or
- Press the **2** key on the *Remote Device*.

To stop recording:

- » While recording is in progress, use the **Up/Down** arrow keys to select **Stop Recording** and then press the **Right** arrow or **#** key to confirm your selection.
- or
- Press the **3** key on the *Remote Device*.

PCM Main Menu - Level 2

Drop Participant

To disconnect a participant from the conference:

- 1 Use the **Up/Down** arrow keys to navigate to the second page of the *Main Menu*.
 - 2 Use the **Up/Down** arrow keys to select **Drop Participant** and then press the **Right** arrow or **#** key to confirm your selection.
- or
- Press the **7** key on the *Remote Device*.
- The *Drop Participant* sub menu is displayed.



- 3 Using the **Up/Down** arrow keys, select the participant to be disconnected and then press the **Right** arrow or **#** key to confirm your selection.

or

Press the *Numeric Key* on the *Remote Device* corresponding to the participant entry.

Terminating a Conference



Although this function can be accessed and viewed by chairpersons using *PCM* with *ISDN* endpoints, conference termination cannot be executed.


To terminate a conference:

- 1 Use the **Up/Down** arrow keys to navigate to the second page of the *Main Menu*
- 2 Use the **Up/Down** arrow keys to select **Terminate Conference** and then press the **Right** arrow or **#** key to confirm your selection.

or

Press the **8** key on the *Remote Device*.

The *Terminate Conference* sub menu is displayed.

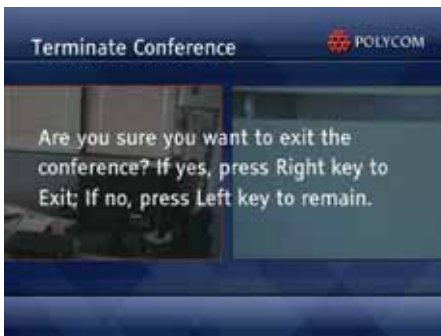

- 3 Press the **Right** arrow key to confirm termination of the conference.

or

Press the **Left** arrow key to cancel termination of the conference.

Polycom Conferencing for Microsoft Outlook®



Polycom Conferencing for Microsoft Outlook is supported in AVC CP Conferencing Mode only

Polycom Conferencing for Microsoft Outlook is an add-in that enables users to easily organize and invite attendees to Video Enabled meetings via Microsoft Outlook®.

Polycom Conferencing for Microsoft Outlook is implemented by installing the Polycom Conferencing Add-in for Microsoft Outlook on Microsoft Outlook® e-mail clients. It enables meetings to be scheduled with video endpoints from within Outlook. The add-in also adds a Polycom Conference button in the Meeting tab of the Microsoft Outlook e-mail client ribbon.

The meeting organizer clicks the Polycom Conference button to add Conference Information to the meeting invitation.

Attendees call the meeting at the scheduled Start Time using the link or the dial-in number provided in the meeting invitation.

Polycom Conference Button

The image shows two overlapping screenshots of the Microsoft Outlook interface. The top screenshot shows the 'Meeting' ribbon with the 'Polycom Conference' button highlighted by a blue box and a blue arrow. The bottom screenshot shows the 'Meeting' ribbon with the 'Polycom Conference' button highlighted by a blue box and a blue arrow. Below the ribbon, the meeting invitation details are shown, including the subject 'Weekly Team Status Meeting', start and end times, and an agenda. A blue box highlights the 'Polycom Conference' button in the ribbon, and a blue arrow points from this box to the 'Polycom Conference' button in the meeting invitation details. Another blue box highlights the 'Polycom Conference' button in the meeting invitation details, and a blue arrow points from this box to the 'Polycom Conference' button in the meeting invitation details. A third blue box highlights the 'Polycom Conference' button in the meeting invitation details, and a blue arrow points from this box to the 'Polycom Conference' button in the meeting invitation details. The text 'Conference Information Added' is written in blue on the right side of the image.

A Gathering Slide is displayed to connected participants until the conference starts.

Gathering Slide:
Displays Meeting
Information Until
Conference Starts



The Gathering Slide displays live video along with information taken from the meeting invitation such as the subject, meeting organizer, duration, dial-in numbers etc. At the end of the Gathering Phase, the conference layout is displayed.

For more information see [Video Preview \(AVC Participants Only\)](#).


Setting up the Calendaring Solution

The following steps are performed to set up the Calendaring solution:

- a The administrator installs the Polycom Conferencing Add-in for Microsoft for Microsoft Outlook e-mail clients. For more information, see the *Polycom Unified Communications Deployment Guide for Microsoft Environments*.
- b The administrator creates an Microsoft Outlook e-mail-account for the Collaboration Server. If included in the solution, Polycom RealPresence DMA system and calendaring-enabled endpoints share this e-mail account. For more information, see the *Polycom Unified Communications Deployment Guide for Microsoft Environments*.
- c The administrator configures the Collaboration Server for Calendaring using the Exchange Integration Configuration dialog box, providing it with the Microsoft Exchange Server Name, User Name and Password and optional Primary SMTP Mail box information needed to access the e-mail account.

To configure the Collaboration Server's Exchange Integration Configuration:


- 1 On the Collaboration Server menu, click **Setup > Exchange Integration Configuration**. The **Exchange Integration Configuration** dialog box is displayed.

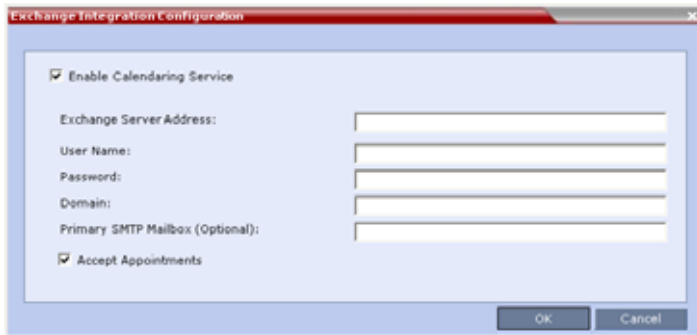

There are three options that can be used to configure the **Exchange Integration Configuration**. The option you choose will depend on the configuration of the mailbox in the Exchange Server and the configuration of the Exchange Server itself.

- **Option 1** - Use this option if the Exchange Server settings have been left at their default values.
- **Option 2** - Use this option if the **Primary SMTP Mailbox** is not the default mailbox.
- **Option 3** - Use this option if the Exchange Server settings have been modified by the administrator.

Option 1 - Using default Exchange Server settings

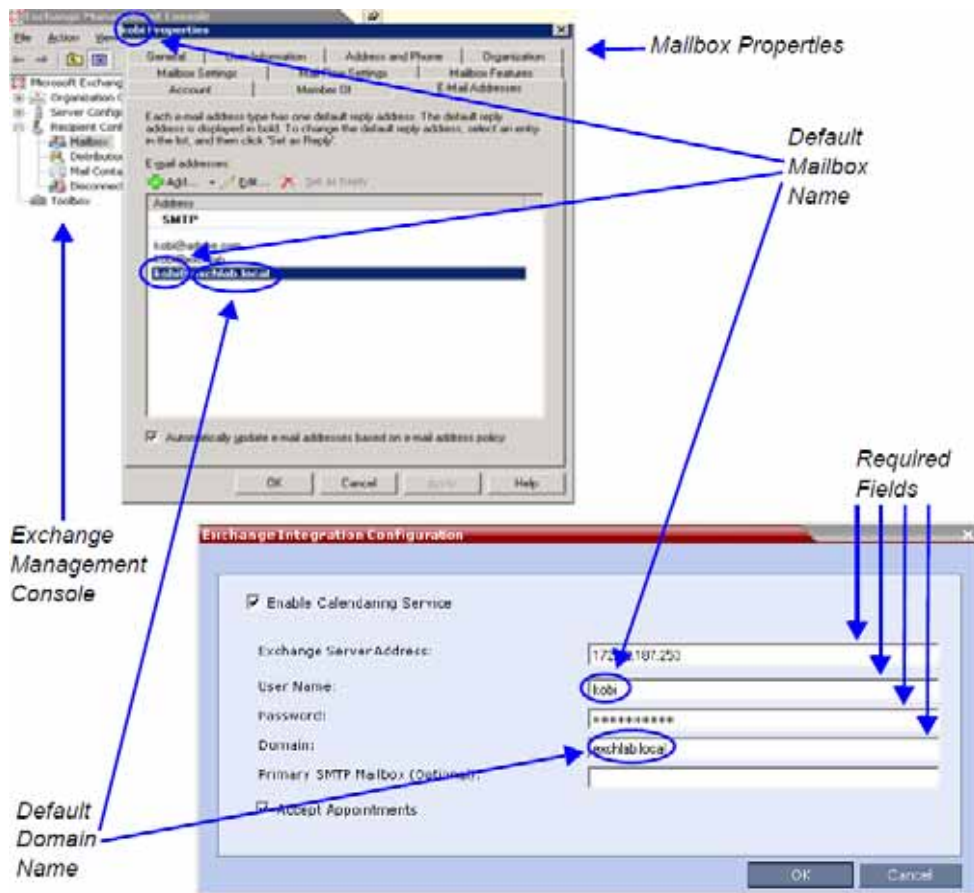


- a** Define the following fields:

Exchange Integration Configuration - Option 1

Field	Description
Enable Calendaring Service	Select or clear this check box to enable or disable the Calendaring Service using the Polycom Add-in for Microsoft Outlook. When this check box is cleared all fields in the dialog box are disabled.
Exchange Server Address	Enter the IP address of the Exchange Server.
User Name	Enter the User Name of the Collaboration Server, as registered in the Microsoft Exchange Server, that the Collaboration Server uses to login to its e-mail account. Field length: Up to 80 characters.
Password	Enter the Password the Collaboration Server uses to login to its e-mail account as registered in the Microsoft Exchange Server. Field length: Up to 80 characters.
Domain	Enter the name of the network domain where the Collaboration Server is installed as defined in the Microsoft Exchange Server.
Primary SMTP Mailbox (Optional)	This field is left empty.
Accept Appointments	Select this check box to enable the Collaboration Server to send replies to meeting invitations. Clear this check box when the Collaboration Server is part of a Unified Conferencing solution that includes a RealPresence DMA system, as the RealPresence DMA system will send a reply to the meeting invitation.

- b** Click **OK**.

Option 2 - Using an alternate Primary SMTP Mailbox

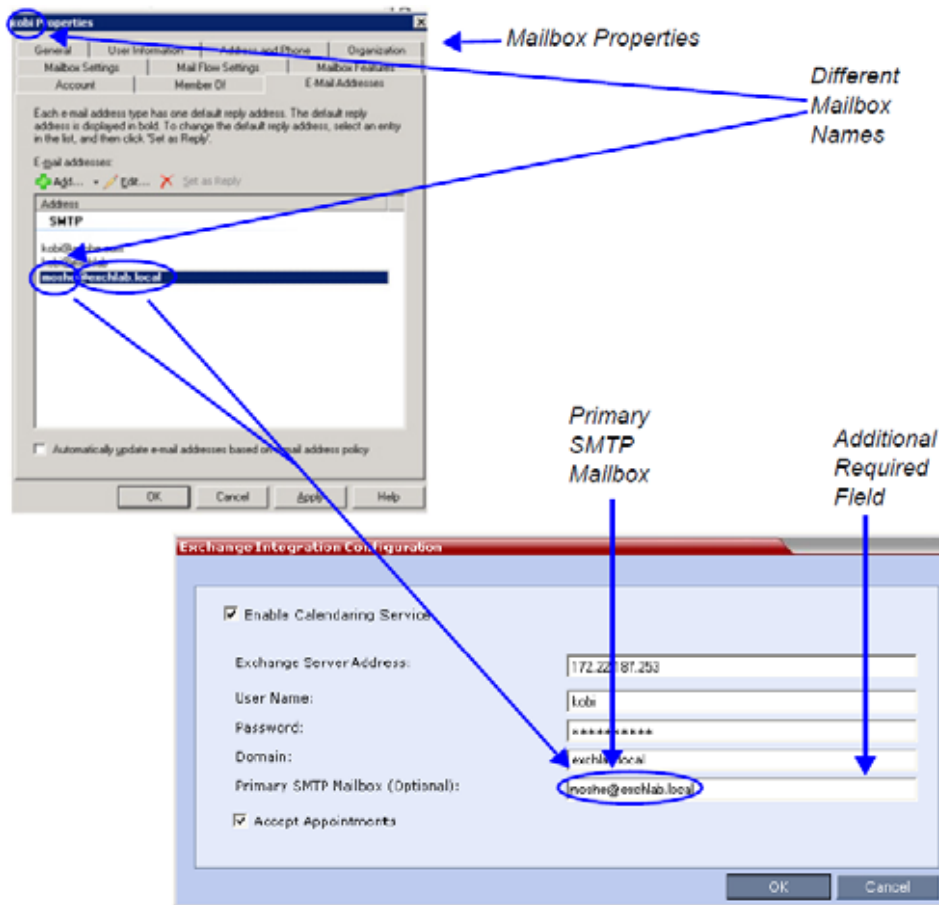

- a Define the following fields:

Exchange Integration Configuration - Option 2

Field	Description
Enable Calendaring Service	
Exchange Server Address	
User Name	These fields are defined as for Option 1 above.
Password	
Domain	
Accept Appointments	

Exchange Integration Configuration - Option 2

Field	Description
Primary SMTP Mailbox (Optional)	Enter the name of the SMTP Mailbox in the Microsoft Exchange Server to be monitored by the Collaboration Server. Note: Although several mailboxes can be assigned to each user in the Microsoft Exchange Server, only the Primary SMTP Mailbox is monitored. The Primary SMTP Mailbox name does not have to contain either the Collaboration Server's User Name or Domain name.

b Click OK.

Option 3 - Using modified Exchange Server settings

The image shows two screenshots. The top screenshot is the Internet Information Services (IIS) Manager. In the left-hand tree view, the 'EWD' folder under 'Web Sites' is circled in blue. A blue arrow points from this folder to the 'Exchange Server Address' field in the 'Exchange Integration Configuration' dialog box below. The right-hand pane of IIS Manager shows a list of files and folders, with 'Exchange.asmx' selected. A blue arrow points from this selection to the same 'Exchange Server Address' field. Another blue arrow points from the text 'Full path to Exchange Server' to the 'Exchange.asmx' entry. The bottom screenshot is the 'Exchange Integration Configuration' dialog box. It has several fields: 'Exchange Server Address' (with the URL 'https://172.22.187.253/EWD/Exchange.asmx'), 'User Name' (with 'kobi'), 'Password' (with masked characters), 'Domain' (with 'exchlab.local'), and 'Primary SMTP Mailbox (Optional)'. Four blue arrows point to these four fields from the text 'Required Fields'. At the bottom of the dialog box are 'OK' and 'Cancel' buttons. A blue arrow points from the text 'Exchange Web Services Folder Renamed from EWS to EWD' to the 'EWD' folder in the IIS Manager screenshot.

- a Define the following fields:

Exchange Integration Configuration - Option 3

Field	Description
Exchange Server Address	<p>If Exchange Server settings have been modified, enter the full path to the Microsoft Exchange Server where the Collaboration Server's Microsoft Outlook e-mail account is registered, for example if the EWS folder has been renamed EWD:</p> <p>https://labexch01/EWD/Exchange.asmx</p> <p>Note: If a server name is entered, the Collaboration Server and the Microsoft Exchange Server must be registered to the same Domain. (The Domain name entered in this dialog box must match the Local Domain Name entry in the Management Network - DNS Properties dialog box.)</p> <p>For more information see Modifying the Default IP Network Service. Field length: Up to 80 characters.</p>
Enable Calendaring Service	These fields are defined as for Option 1 above.
User Name	
Password	
Domain	
Primary SMTP Mailbox (Optional)	
Accept Appointments	

- b Click the **OK** button.

If applicable, the Polycom® RealPresence® Media Suite, VMC, RealPresence DMA system, and calendaring-enabled endpoints are configured with the **Exchange Server Name, User Names and Passwords** needed to access their accounts.

For more information see the *Polycom Unified Communications Deployment Guide for Microsoft Environments*.

The administrator configures the Collaboration Server to have a default Ad-hoc Entry Queue service enabled. If ISDN/PSTN participants are included, up to two ISDN/PSTN dial-in numbers must be configured for the Ad Hoc Entry Queue.

For more information see [Defining a New Entry Queue](#).

Calendaring Guidelines

- The Collaboration Server must have its MCU prefix registered in the gatekeeper.
For more information see [Modifying the Default IP Network Service](#).
- The Collaboration Server must be configured as a Static Route.
For more information see [Modifying the Default IP Network Service](#).

- The Collaboration Server's Default Entry Queue must be configured as an Ad Hoc Entry Queue and must be designated as the Transit Entry Queue.

For more information see the [Entry Queues](#).

- The meeting organizer can enable recording and/or streaming of the meeting.
- If meeting is to be recorded, the Ad Hoc Entry Queue must have recording enabled in its Profile.
For more information see [Defining AVC CP Conferencing Profiles](#).
- Meetings can be single instance or have multiple occurrences.
- Attendees that do not have video devices may be invited to the meeting.
- Attendees using e-mail applications that use the iCalendar format may be invited to meetings via the Calendaring Service.
- Meeting invitations sent by Polycom Conferencing for Microsoft Outlook can be in a different language to the Collaboration Server Web Client. The following languages are supported:
 - English
 - French
 - German
 - International Spanish
 - Korean
 - Japanese
 - Simplified Chinese
- Collaboration Server resource management is the responsibility of the system administrator:
 - Conferences initiated by Polycom Conferencing for Microsoft Outlook are ad hoc and therefore resources are not reserved in advance.
 - Polycom Conferencing for Microsoft Outlook Add-in assumes that sufficient resources are available and does not check resource availability. Sufficient resources are therefore not guaranteed.
 - A meeting invitation that is automatically accepted by the Collaboration Server is not guaranteed availability of resources.
 - If the Collaboration Server runs out of resources, attendees will not be able to connect to their conferences.
- By using RealPresence DMA system to load-balance resources between several Collaboration Servers, resource capacity can be increased, alleviating resource availability problems.


Creating and Connecting to a Conference

Creating a Conference

Meetings are organized using the Microsoft Outlook client in the normal manner.

If the meeting organizer decides that video participants are to be included in a multipoint video conference, he/she clicks the Polycom Conference button. Conference Information such as the Meeting ID and connection information is automatically added to the existing appointment information.

Polycom Conference Button

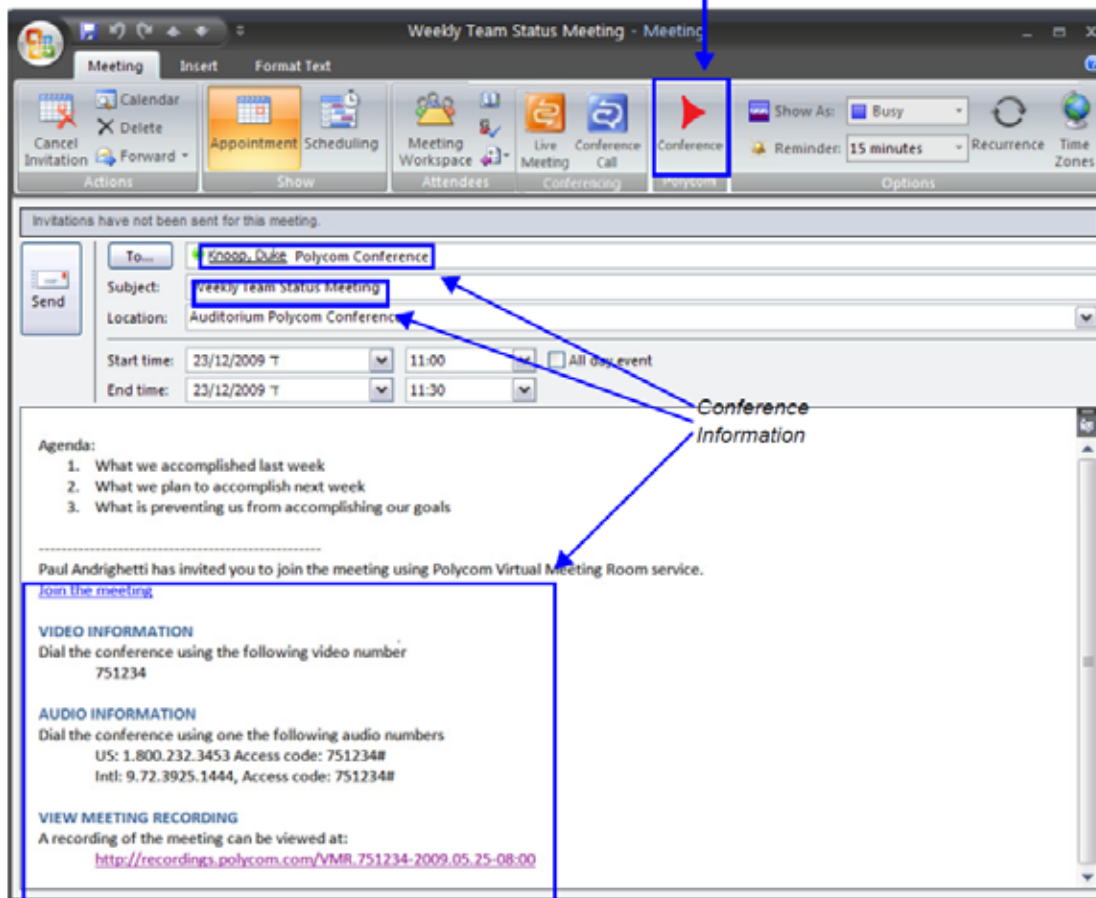

The meeting organizer can add a meeting agenda or personal text to the invitation before it is sent. The meeting organizer can update or cancel the video enabled meeting in the same manner as for any other meeting.

When the meeting organizer sends the meeting invitation a meeting record is saved in the Microsoft Exchange Server, the RealPresence Collaboration Server, RealPresence DMA system, the Polycom® RealPresence® Media Suite, and calendaring-enabled endpoints.

RealPresence Collaboration Servers, RealPresence DMA system, and calendaring-enabled endpoints poll the Microsoft Exchange Server to retrieve new meeting records and updates to existing meeting records.

[Microsoft Outlook Field Usage](#) table below summarizes the Collaboration Server's usage of Microsoft Outlook data fields included in the meeting invitation.

Microsoft Outlook Field Usage

Microsoft Outlook Field	Usage by the Collaboration Server / RealPresence DMA system	
	Conference / Meeting Room	Gathering Slide
Subject	Display Name of Conference / Meeting Room.	Meeting Name.
Start/End Time	Used to calculate the Conference's Duration.	
Record	Enable Recording in the Conference or Meeting Room Profile.	Display Recording option.
Video Access Number	<p>Comprised of: <MCU Prefix in Gatekeeper> <Conference Numeric ID>.</p> <p>Note: It is important that MCU Prefix in Gatekeeper field in the Collaboration Server's IP Network Service - Gatekeeper tab and the Dial-in prefix field in the Polycom Conferencing Add-in for Microsoft Outlook - Video Network tab contain the same prefix information.</p> <p>If Recording and Streaming are enabled in the Conference Profile, this number is used as part of the recording file name.</p>	Displayed as the IP dial in number in the Access Number section of the Gathering Slide.
Audio Access Number	ISDN/PSTN dial-in number. Up to two numbers are supported.	Displayed as the ISDN/PSTN dial-in number in the Access Number section of the Gathering Slide.
Streaming recording link	<p>Enables recording of conferences by the Polycom® RealPresence® Media Suite using the recording link.</p> <p>Enables streaming of the recording of the conference from the Polycom® RealPresence® Media Suite.</p>	If recording is enabled, a REC indicator is displayed in the top left corner of the slide.

Connecting to a Conference

Participants can connect to the conference in the following ways:

- Participants with Polycom CMA/RealPresence Desktop™ or a Microsoft Office Communicator client running on their PCs can click on a link in the meeting invitation to connect to the meeting.

- Participants with a HDX or a room system will receive a prompt from the endpoint's calendaring system along with a button that can be clicked in order to connect.

Participants with endpoints that are not calendaring-enabled can connect to the meeting by dialing the meeting number manually.

- Participants outside the office or using PSTN or mobile phones, can use the dial in number in the meeting invitation to manually dial in to the meeting.

Collaboration Server Standalone Deployment

When using a single Collaboration Server in a standalone deployment, connection is via an Ad Hoc Entry Queue. The meeting is started when the first participant connects to the Collaboration Server.

When the first participant connects, a conference is created and named according to the information contained in the dial string. Subsequent participants connecting with the same dial string are routed from the Ad Hoc Entry Queue to the conference.

After the conference has been created the Conference Name, Organizer, Time, Duration and Password (if enabled) are retrieved from the conference parameters for display during the Gathering Phase.

Collaboration Server and Polycom RealPresence DMA System Deployment

In a RealPresence DMA system deployment a Virtual Meeting Room is activated when the first participant connects to the RealPresence DMA system. The RealPresence DMA system receives the dial string to activate a Virtual Meeting Room on the Collaboration Server.

The RealPresence DMA system uses the Meeting ID contained in the dial-in string to access meeting information stored in the Exchange Server database.

When the meeting information is found on the Exchange Server, the Conference Name, Organizer, Time, Duration and Password (if enabled) are retrieved from the Exchange Server database for display during the Gathering Phase.



If enabled, automatically generated passwords are ignored.

For more information see [Automatic Password Generation Flags](#).

Polycom Solution Support

Polycom Implementation and Maintenance services provide support for Polycom solution components only. Additional services for supported third-party Unified Communications (UC) environments integrated with Polycom solutions are available from Polycom Global Services and its certified Partners. These additional services will help customers successfully design, deploy, optimize and manage Polycom visual communications within their UC environments.

Professional Services for Microsoft Integration is mandatory for Polycom Conferencing for Microsoft Outlook and Microsoft Office Communications Server integrations. For additional information and details please see http://www.polycom.com/services/professional_services/index.html or contact your local Polycom representative.

Conference and Participant Monitoring

You can monitor ongoing conferences and perform various operations while conferences are running.

Three levels of monitoring are available with the Collaboration Server:


- General Monitoring - You can monitor the general status of all ongoing conferences and their participants in the main window.
- Conference Level Monitoring - You can view additional information regarding a specific conference and modify its parameters if required, using the Conference Properties option.
- Participant Level Monitoring - You can view detailed information on the participant's status, using the Participant Properties option.

General Monitoring


Users can monitor a conference or keep track of its participants and progress.

All monitoring and operations procedures performed during ongoing conferences can be performed by either of following two methods:

- Using the buttons in the toolbars.

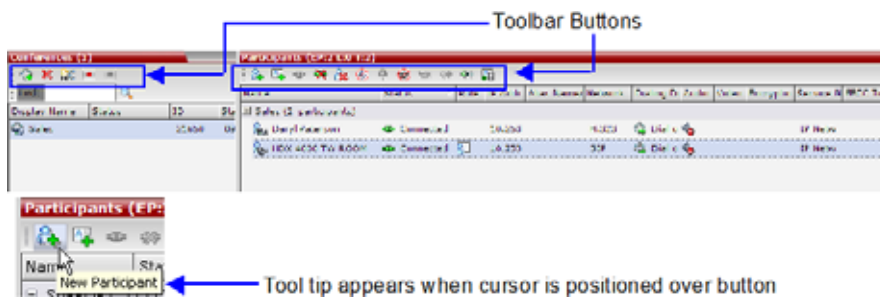

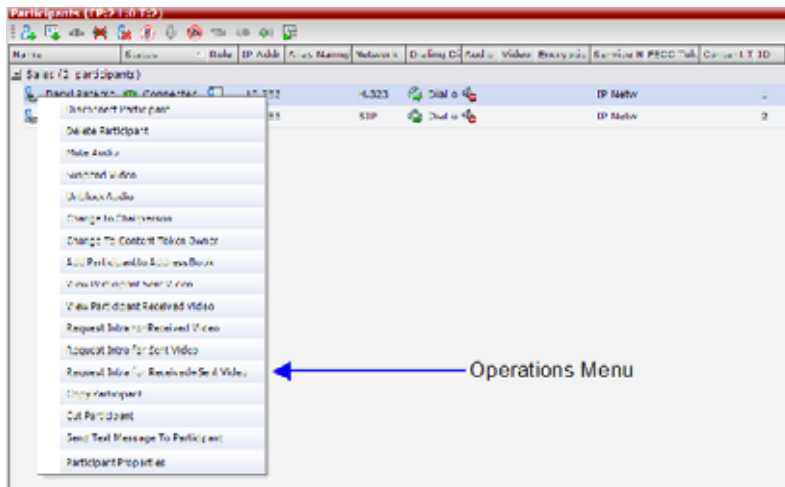

- Right-clicking an entity in the **Conferences** or **Participants** pane and selecting an operation from the menu.




Multi-Selection

Using multiple selection, you can monitor and perform simultaneous operations on multiple participants in multiple conferences.


The selected conferences are displayed as sub-lists in the Participants list pane.

The sub-lists can be expanded and collapsed by clicking the  and  sublist control buttons that appear next to the conference name in the sub-list headings.

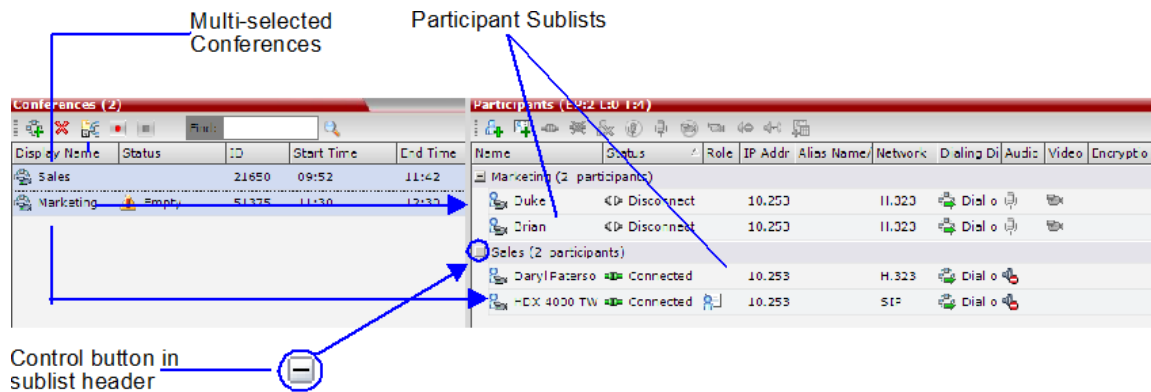

Using the Chairperson Password for Filtering


If you are logged in as a chairperson, the **Chairperson Password** field is displayed. It enables you to search for, and display a list of, ongoing conferences for which you have the password.



To search for an ongoing conference by Chairperson Password:

- 1 Click in the **Chairperson Password** field.
- 2 Enter the password to be searched for.
- 3 Click the **Refresh** button.

The **Conferences** list is refreshed and ongoing conferences with the requested password are displayed.

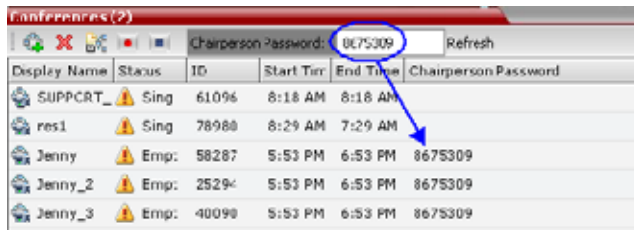

You can also click the blinking Participant Alerts indication bar to view participants that require attention. For more information, see [System and Participant Alerts](#).

Video Switching conferences appear with the HD (📺) icon in the conferences list to differentiate between CP and VSW conferences.



Monitoring is done in the same way as for CP conferences.

Conference Level Monitoring

In addition to the general conference information that is displayed in the Conference list pane, you can view the details of the conference's current status and setup parameters, using the Conference Properties dialog box.

The tabs displayed in the Conference Properties dialog boxes are dependent on the Conferencing Mode, the participant authorization.

Conference monitoring - Tab list per conferencing mode and user


Tab Name	Admin				Chairperson				Operator			
	CP	SVC	Mixed	VSW	CP	SVC	Mixed	VSW	CP	SVC	Mixed	VSW
General	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Advanced	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Conference monitoring - Tab list per conferencing mode and user

Tab Name	Admin				Chairperson				Operator			
	CP	SVC	Mixed	VSW	CP	SVC	Mixed	VSW	CP	SVC	Mixed	VSW
Gathering Settings	✓	✗	✗	✓	✓	✗	✗	✓	✓	✗	✗	✓
Video Quality	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Video Settings	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Audio Settings	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Customized Polling	✓	✗	✗	✓	✗	✗	✗	✗	✓	✗	✗	✓
Skins	✓	✗	✓	✗	✓	✗	✓	✗	✓	✗	✓	✗
IVR	✓	✓	✓	✓	✗	✗	✗	✗	✓	✓	✓	✓
Information	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Recording	✓	✗	✓	✓	✓	✗	✓	✓	✓	✗	✓	✓
Site Names	✓	✗	✓	✗	✓	✗	✓	✗	✓	✗	✓	✗
Message Overlay	✓	✗	✗	✗	✓	✗	✗	✗	✓	✗	✗	✗
Network Services	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓





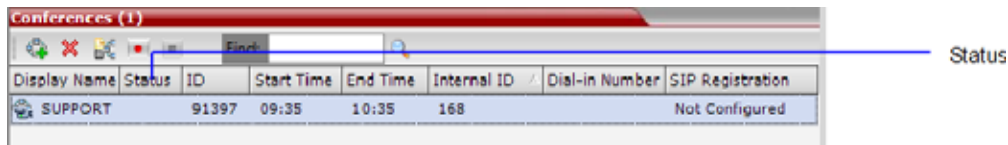

Monitoring the Conference in the Conference List Pane

The Conference List pane displays information about ongoing conferences.



No status indicator display in the **Status** column means that the conference is running without problems. One or more of the status indicators may appear in the **Status** column.

Conferences – Monitoring Information

Field	Description
Display Name	<p>Displays conference name and type of conference:</p> <ul style="list-style-type: none">  – AVC Conference running in CP mode.  – AVC Conference running in Video Switching mode.  – The AVC conference has been secured using the *71 DTMF code. For details, see Secured Conference Monitoring (AVC CP Only).  – AVC Operator Conference  – Media Relay - SVC-based Conference.  – Mixed CP and SVC Conference
Status	<p>Displays the status of the ongoing conference.</p> <p>If there is no problem with the participant's connection no indication is displayed.</p> <p>If one of the following statuses occur, the appropriate indication is displayed, preceded by a warning icon (⚠).</p> <ul style="list-style-type: none"> Audio – There is a problem with the participant's audio. Empty – No participants are connected. Faulty Connection – Participants are connected, but the connection is problematic. Not Full – Not all the defined participants are connected. Partially Connected – The connection process is not yet complete; the video channel has not been connected. Single Participant – Only one participant is connected. Video – There is a problem with the participant's video. Content Resource Deficiency – Content will not be sent to legacy endpoints. Awaiting Operator – A participant has requested operator assistance. Connected, Noisy – Participant's endpoint is requesting too many intras, resulting in the MCU ceasing to send intras to the endpoint to preserve conference quality for all other participants.
ID	The Conference ID assigned to the conference.
Start Time	Conference start time.
End Time	The time the conference is expected to end.
Dial in Number(1)	The Conference dial in number for ISDN/PSTN participants.

Conferences – Monitoring Information (Continued)

Field	Description
SIP Registration	<p>The status of registration with the SIP server:</p> <ul style="list-style-type: none"> • Not configured - Registration with the SIP Server was not enabled in the Conference Profile assigned to this conferencing Entity. In Multiple Networks configuration, If one service is not configured while others are configured and registered, the status reflects the registration with the configured Network Services. The registration status with each SIP Server can be viewed in the Properties - Network Services dialog box of each conferencing entity. • Failed - Registration with the SIP Server failed. This may be due to incorrect definition of the SIP server in the IP Network Service, or the SIP server may be down, or any other reason the affects the connection between the MCU or the SIP Server to the network. • Registered - The conferencing entity is registered with the SIP Server. • Partially Registered - This status is available only in Multiple Networks configuration, when the conferencing entity failed to register to all the required Network Services if more than one Network Service was selected.


Additional information about the conference can be viewed when accessing the conference properties.

Viewing the Properties of CP and Mixed CP and SVC Conferences

To view the parameters of an ongoing CP conference:

- 1 In the **Conference** list pane, double-click the conference, or right-click the conference and then click **Conference Properties**.

The **Conference Properties - General** dialog box with the **General** tab opens.

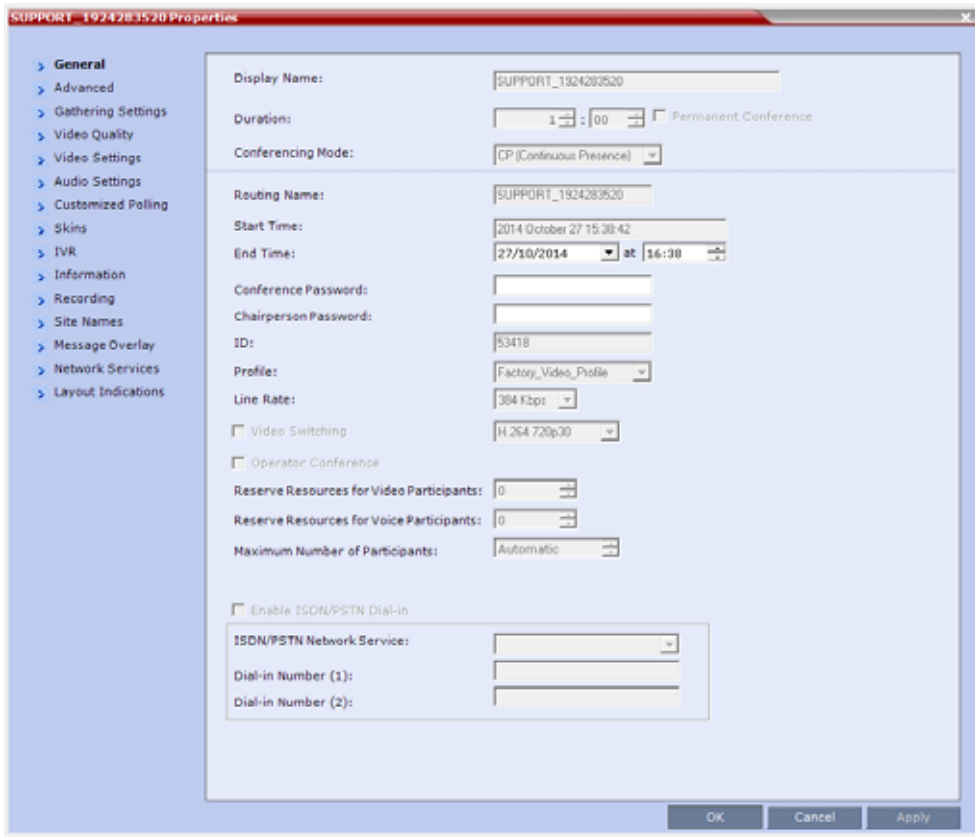

The following information is displayed in the **General** tab:

Conference Properties - General

Field	Description
Display Name	The Display Name is the conference name in native language and Unicode character sets to be displayed in the Collaboration Server Web Client. Note: This field is displayed in all tabs.
Duration	The expected duration of the conference using the format HH:MM. Note: This field is displayed in all tabs.
Permanent Conference	Indicates whether the conference is set as a Permanent Conference, with no pre-determined End Time. This conference continues until it is terminated by an administrator, operator or chairperson. Note: This field is displayed in all tabs.
Routing Name	The ASCII name of the conference. It can be used by H.323 and SIP participants for dialing in directly to the conference. It is used to register the conference in the gatekeeper and the SIP server.

Conference Properties - General


Field	Description
Conferencing Mode	The conferencing mode set for the conference: CP, VSW, SVC Only , or CP and SVC .
Start Time	The time the conference started.
End Time	The expected conference end time. Note: This field is not shown when the conference is set as a Permanent Conference.
Conference Password	A numeric password for participants to access the conference.
Chairperson Password	A numeric password used by participants to identify themselves as the conference chairperson.
ID	The conference ID.
Profile	The name of the conference Profile from which conference parameters were taken.
Line Rate	The maximum transfer rate, in kilobytes per second (Kbps) of the call (video and audio streams).
Video Switching	When selected, the conference is running in a special conferencing mode which implies that all participants must connect at the same line rate and the video parameters are set according to the highest common parameters. Participants with endpoints not supporting the video parameters (such as the video protocol, resolution and frame rate) selected for the conference will connect as secondary (audio only). If HD 1080p is selected for the conference, endpoints that do not support HD 1080p resolution are connected as Secondary (Audio Only) participants. Video layout changes are not enabled during a conference. Note: Video Switching conferencing mode is unavailable to ISDN participants. For more information, see Video Switching (VSW) Conferencing .
Reserve Resources for Video Participants	Displays the number of video participants for which the system reserved resources. Default: 0 participants.
Reserve Resources for Audio Participants	Displays the number of audio participants for which the system reserved resources. Default: 0 participants.
Max Number of Participants	Indicates the total number of participants that can be connected to the conference. The Automatic setting indicates the maximum number of participants that can be connected to the MCU according to resource availability.
Enable ISDN/PSTN Network Service	When selected, ISDN/PSTN participants can dial into the conference.
ISDN/PSTN Network Service	When the Enable ISDN/PSTN Network Service is selected, displays the default Network Service.

Conference Properties - General

Field	Description
Dial-in Number (1)	Displays the conference dial in number.
Dial-in Number (2)	Displays the conference dial in number.

2 Click the **Advanced** tab.

The **Conference Properties - Advanced** dialog box opens.

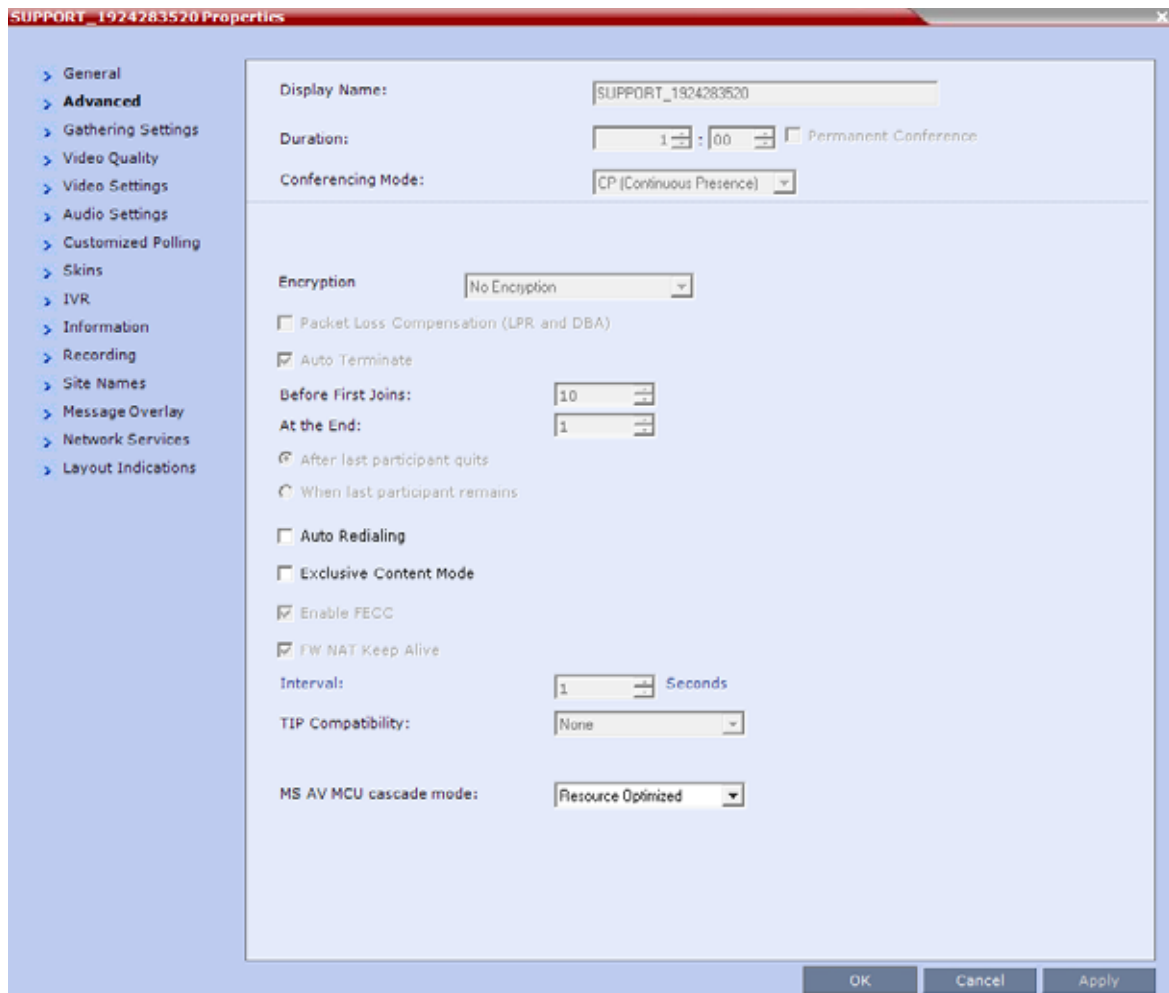

3 The following information is displayed in the **Advanced** tab:

Conference Properties - Advanced Parameters


Field/Option	Description
Encryption	Indicates whether the conference is encrypted.

Conference Properties - Advanced Parameters

Field/Option	Description
Packet Loss Compensation (LPR and DBA)	Indicates whether Packet Loss Compensation (LPR and DBA) is enabled for the conference.
Auto Terminate	When selected, indicates that the MCU will automatically terminate the conference when Before First Joins, At the End-After Last Quits and At the End - When Last Participant Remains parameters apply.
Auto Redialing	Indicates whether dial-out participants are automatically (when selected) or manually (when cleared) connected to the conference. This option is disabled in mixed CP and SVC conferences.
Exclusive Content Mode	When selected, Content is limited to one participant.
Enable FECC	When selected, Far End Camera Control is enabled.
FW NAT Keep Alive	When selected, sends a FW NAT Keep Alive message at specific Intervals for the RTP, UDP and BFCP channels. The interval specifies how often a FW NAT Keep Alive message is sent. For more information, see RealPresence Collaboration Server (RMX) Network Port Usage .
TIP Compatibility	Indicates the TIP Compatibility mode implemented for the conference, when the environment implements the Collaboration Server and Cisco Telepresence Systems (CTS) Integration solution. <ul style="list-style-type: none"> • None • Prefer TIP For more information, see .
MS AV MCU cascade mode	This field is part of the Microsoft Lync utility and defines the resource usage in the cascading relationship between Polycom RealPresence Collaboration Server and Microsoft Lync server. Microsoft Lync is not supported by Collaboration Server (RMX) 18000-0. For more information see Video Resource Requirement Selection in Lync 2013 AVMCU Cascade .

4 Click the **Gathering Settings** tab.

The **Conference Properties - Gathering Settings** dialog box opens.

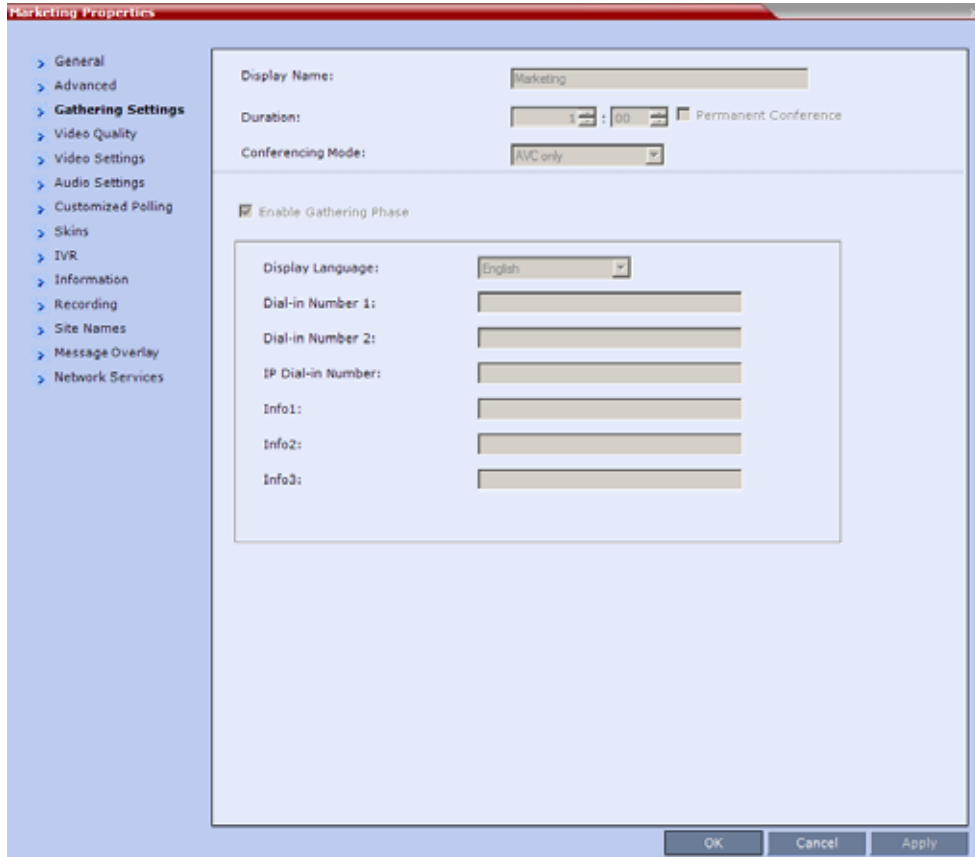


The following information is displayed:

Profile - Gathering Settings

Field/Options	Description
Enable Gathering	Indicates whether the Gathering Phase has been enabled.
Display Language	Indicates the language of the Gathering Slide field headings. Note: When working with the Polycom Conferencing Add-in for Microsoft Outlook, the language selected should match the language selected for the conference in the Polycom Conferencing Add-in for Microsoft Outlook to ensure that the Gathering Phase slide displays correctly.
Access Number 1	Indicates the ISDN or PSTN number(s) to call to connect to the conference.
Access Number 2	Note: The numbers entered must be verified as the actual Access Numbers.
IP Dial-in Number	
Info 1	Additional information to be displayed during the Gathering Phase.
Info 2	
Info 3	

5 Click the **Video Quality** tab.

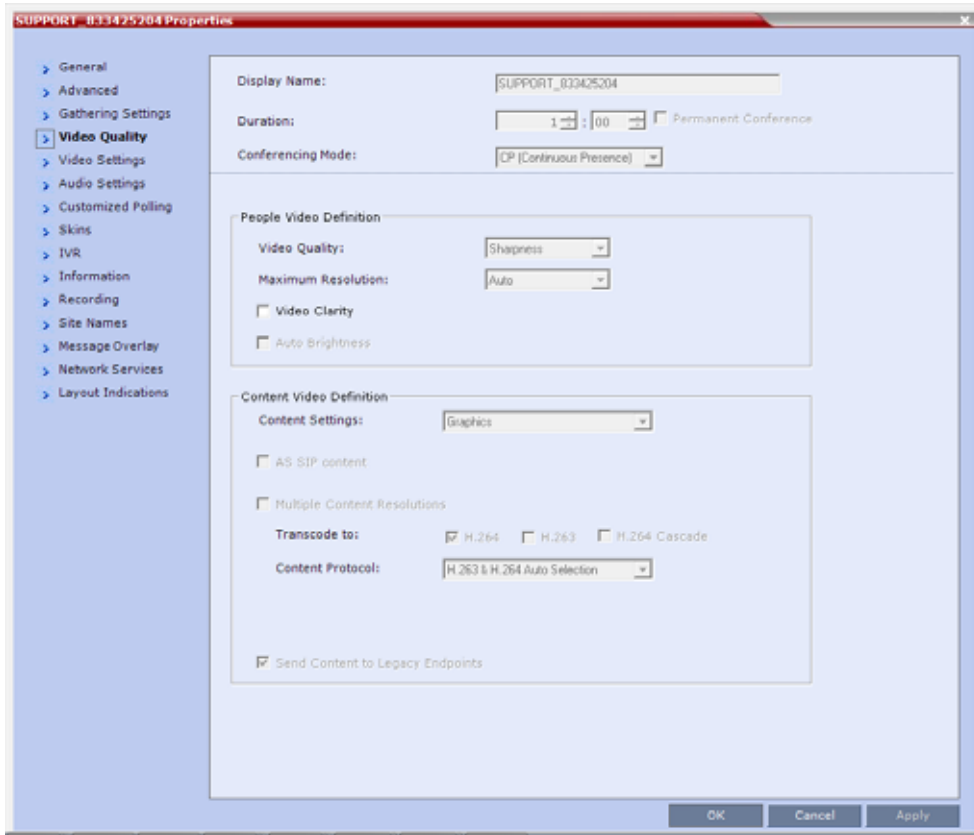

The **Conference Properties - Video Quality** dialog box opens.

The following information is displayed:


Conference Properties - Video Quality Parameters

Field/Option	Description
People Video Definition	
Video Quality	Indicates the resolution and frame rate that determine the video quality set for the conference. Possible settings are: Motion or Sharpness . For more information, see Video Resolutions in AVC CP Conferencing .
Maximum Resolution	Indicates the Maximum Resolution setting for the conference. Auto (default) - indicates that the Maximum Resolution is selected in the Resolution Configuration dialog box. The Maximum Resolution settings for conferences and participants cannot be changed during an ongoing conference.
Video Clarity	Indicates if Video Clarity is enabled for the conference. Video Clarity is not support by Collaboration Server (RMX) 1800 with no DSP cards.

Conference Properties - Video Quality Parameters

Field/Option	Description
Auto Brightness	<p>Indicates if Auto Brightness is selected for the conference.</p> <p>Note: When Auto Brightness is enabled, color changes may be observed in computer-based VGA Content sent by HDX endpoints through the People video channel.</p> <p>Auto Brightness is not support by Collaboration Server (RMX) 1800 with no DSP cards.</p>
Content Video Definition	
AS-SIP	<p>When selected, content is shared using the Multiple Resolutions mode and is not supported in any other Content sharing mode.</p> <p>For more information, see Enabling AS-SIP Content.</p>
Multiple Content Resolutions	<p>Indicates if Multiple Content Resolutions mode for content sharing is enabled. In this mode, content is shared in multiple streams, one for each video protocol: H.263 and H.264. This allows endpoints with different protocols to connect and disconnect without having to restart Content sharing in the middle of a conference. For more information, see Multiple Content Resolutions.</p>
Content Settings	<p>Indicates the Content channel resolution set for the conference. Possible resolutions are Graphics (default), Hi-res Graphics, Live Video, and Customized Content Rate.</p> <p>For more information, see Content Settings.</p>
Content Protocol	<p>Indicates the Content Protocol used for content sharing in Highest Common Content Sharing Mode.</p> <p>For more information, see MCU Usage Modes of Content Protocols.</p>
Content Resolution	<p>Indicates the Content Resolution and frame rate according to the selected Content Sharing Mode (Highest common Content or Multiple Resolution Contents) and the video protocol. For more information, see H.264 Cascade Optimized.</p>
Send Content to Legacy Endpoints (CP only)	<p>Indicates if the Send Content to Legacy Endpoints is enabled. If enabled, Content can be sent to H.323/SIP/ISDN endpoints that do not support H.239 Content (legacy endpoints) over the video (people) channel. For more information see Sending Content to Legacy Endpoints.</p>

- 6 Click the **Video Settings** tab to list the video parameters.

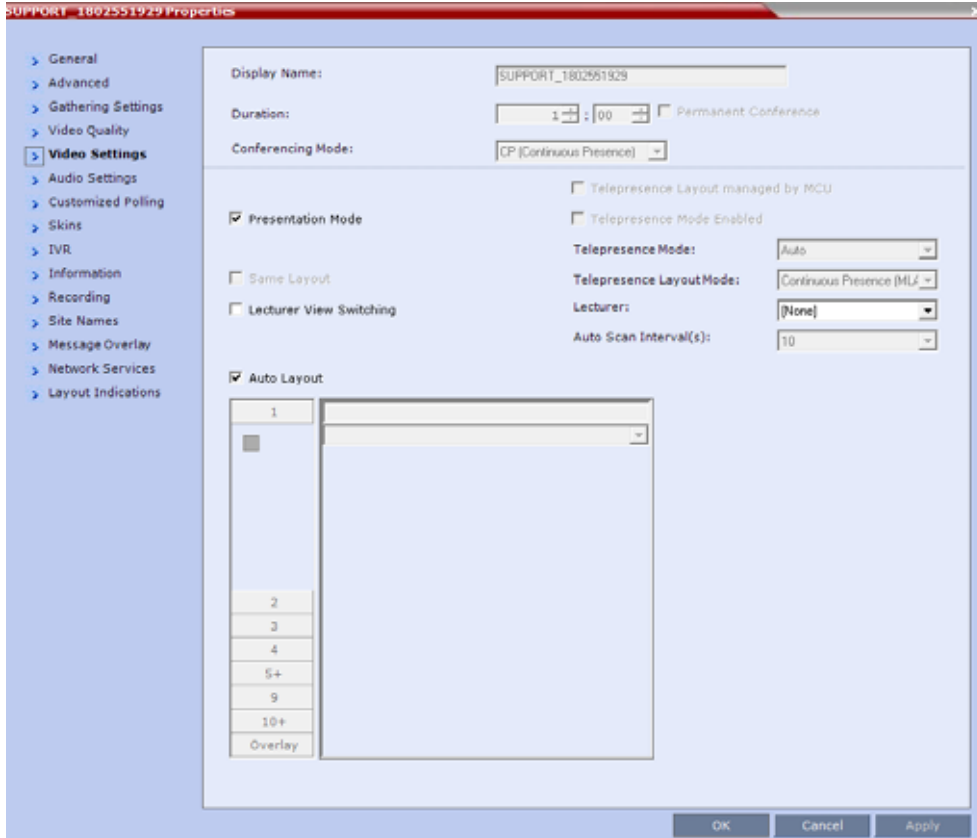


Conference Properties - Video Settings Parameters

Field	Description
Presentation Mode	When checked, indicates that the Presentations Mode is active. This option is disabled in a mixed CP and SVC conference. For more information, see Supplemental Conferencing Features .
Lecturer View Switching	When checked, the Lecturer View Switching enables automatic random switching between the conference participants in the lecturer video window. This option is disabled in a mixed CP and SVC conference.
Same Layout	When checked, forces the selected layout on all conference participants, and the Personal Layout option is disabled. This option is disabled in a mixed CP and SVC conference.
Auto Layout	When enabled, the system automatically selects the conference layout based on the number of participants in the conference.

Conference Properties - Video Settings Parameters


Field	Description	
Telepresence Mode Enabled	Indicates if the conference is running in Telepresence Mode.	These fields are enabled if the Collaboration Server has a Telepresence license installed. See Defining New Profiles .
Telepresence Mode	Indicates the Telepresence Mode.	
Telepresence Layout Mode	Indicates the layout of the Telepresence Mode.	
Lecturer	Indicates the name of the lecturer (if one is selected). Selecting a lecturer enables the Lecture Mode. This option is disabled in a mixed CP and SVC conference.	
Auto Scan Interval(s)	The time interval, 10 - 300 seconds, that Auto Scan uses to cycle the display of participants that are not in the conference layout in the selected cell. This option is disabled in a mixed CP and SVC conference.	
Video Layouts	Indicates the currently selected video layout.	

7 Click the **Audio Settings** tab to view the audio setting for the conference.

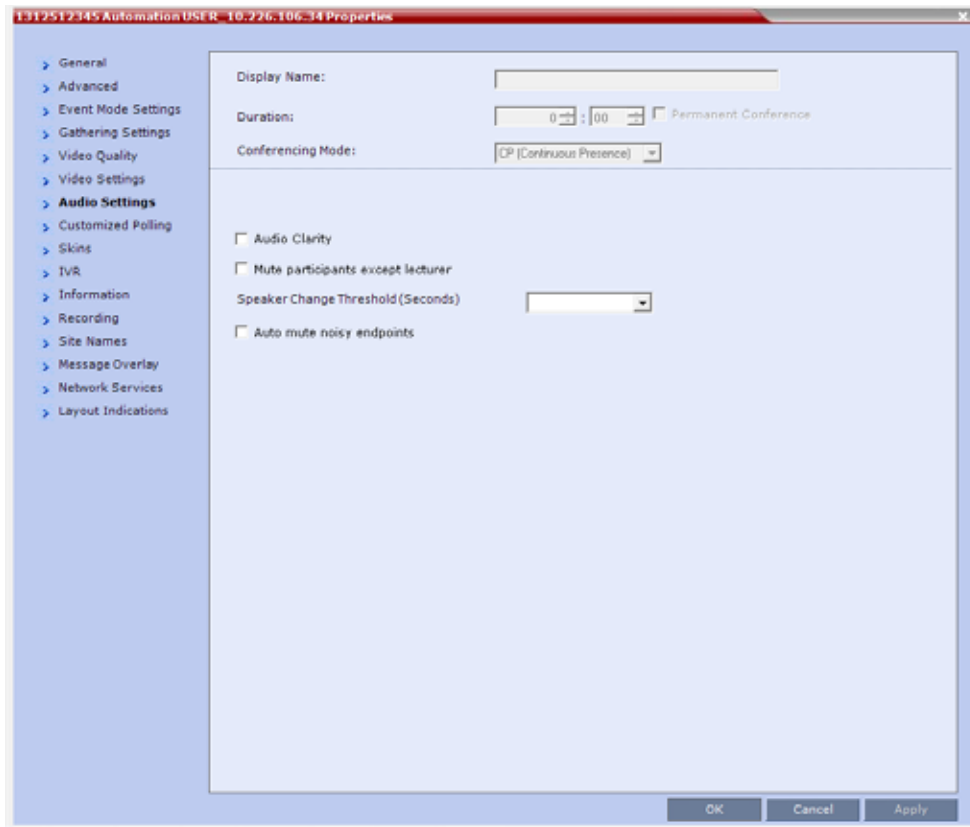

8 If needed, you can enable or disable the **Mute participants except lecturer** setting.

9 CP Only Conferences: Click the **Customized Polling** tab to view and modify the customized polling for the conference.

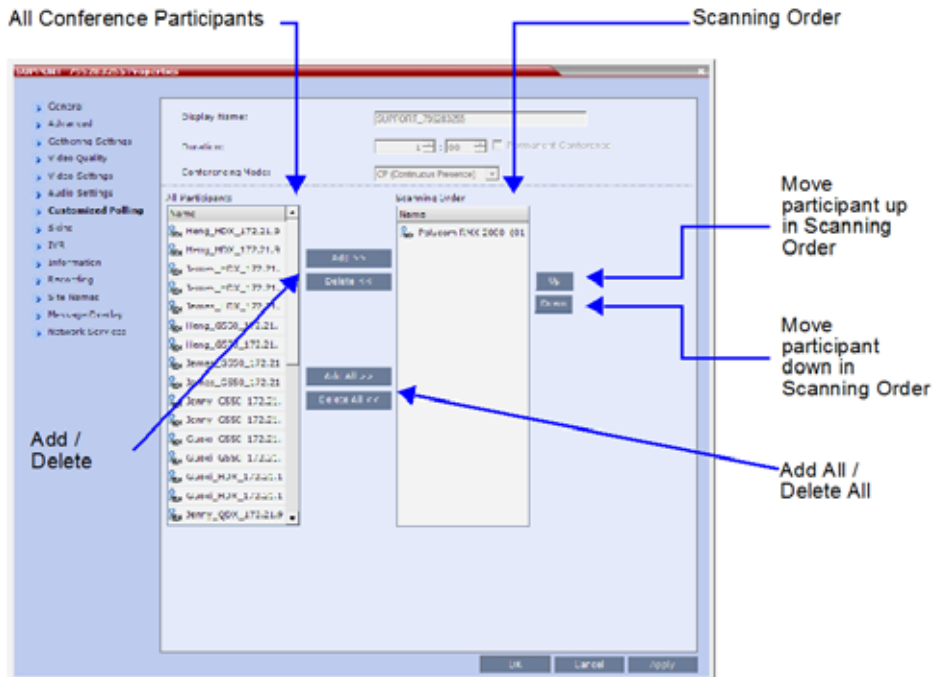


All conference participants are listed in the left pane (**All Participants**) whereas the participants to be displayed in the Auto Scan enabled cell are listed in the right pane (**Scanning Order**).

The dialog box buttons are summarized in the table below.

Customized Polling - Buttons

Button	Description
Add	Select a participant and click this button to add a the participant to the list of participants to be Auto Scanned. The participants name is removed from the All Participants pane.
Delete	Select a participant and click this button to delete the participant from the list of participants to be Auto Scanned. The participants name is moved back to the All Participants pane.
Add All	Add all participants to the list of participants to be Auto Scanned. All participants' names are removed from the All Participants pane.
Delete All	Delete all participant from the list of participants to be Auto Scanned. All participants' names are moved back to the All Participants pane.
Up	Select a participant and click this button to move the participant up in the Scanning Order.
Down	Select a participant and click this button to move the participant down in the Scanning Order.

- 10 Click **Apply** to confirm and keep the Conference Properties dialog box open.
or
Click **OK** to confirm and return to the Collaboration Server Web Client main screen.
- 11 Click the **Skins** tab to view the skin selected for the conference.
You cannot select another skin during an ongoing conference.
- 12 Click the **IVR** tab to view the IVR settings.
- 13 Click the **Information** tab to view general information defined for the conference. Changes made to this information once the conference is running are not saved to the CDR.
- 14 Click the **Recording** tab to review the recording settings for the conference.
- 15 Click the **Site Names** tab to enable or disable the display of site names during the conference, and adjust the display properties.
- 16 Click the **Message Overlay** tab to send text messages to the conference participants during the conference, and adjust the display properties of the text messages.

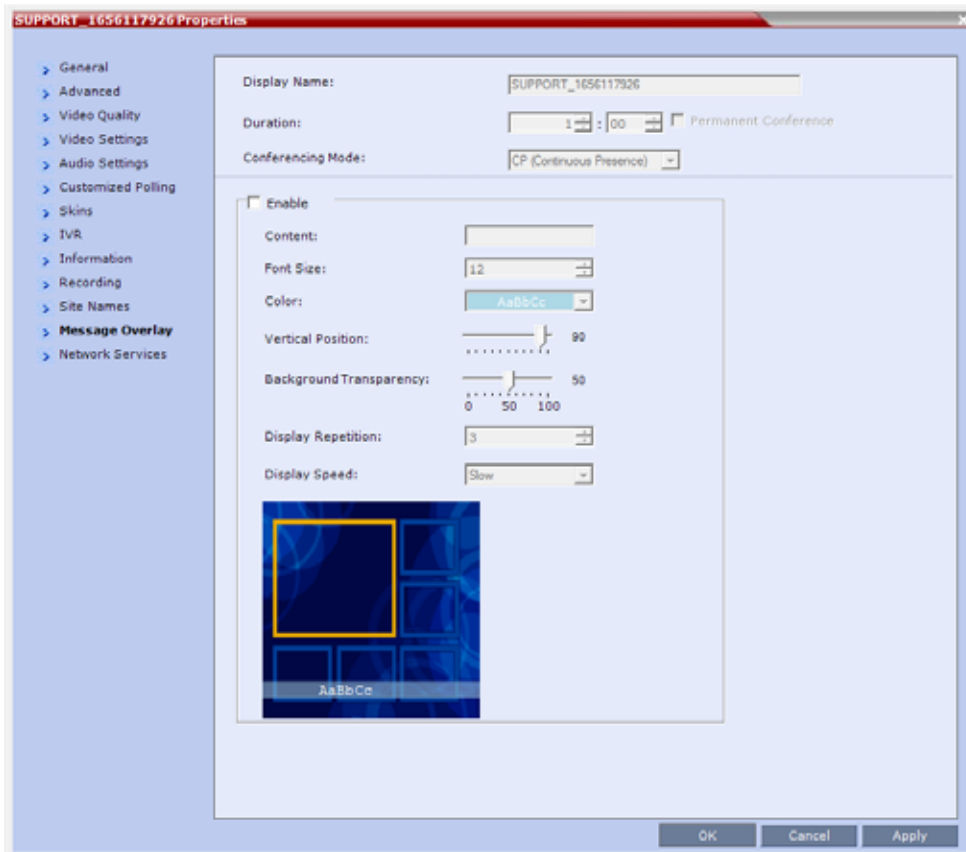

For more information, see [Sending Text Messages During a Conference Using Message Overlay](#).

- 17 Click the **Network Services** tab to verify the SIP registration for the conference.
- 18 Click the **Layout Indications** tab to view the layout indications settings for the conference.
No changes in layout indications settings is possible for ongoing conferences.
- 19 Click **OK** to close the **Conference Properties** dialog box.

Viewing the Properties of Ongoing SVC Conferences

To view the parameters of an ongoing SVC conference:

- 1 In the **Conference** list pane, double-click the SVC conference or right-click the SVC conference and then click **Conference Properties**.

The **Conference Properties - General** dialog box with the **General** tab opens.

The screenshot shows the 'SUPPORT_1769056499 Properties' dialog box with the 'General' tab selected. The left sidebar lists various tabs: General, Advanced, Video Quality, Video Settings, Audio Settings, IVR, Information, Network Services, and Layout Indications. The main area contains the following fields and controls:

- Display Name:** SUPPORT_1769056499
- Duration:** 1 : 00 (with a 'Permanent Conference' checkbox)
- Conferencing Mode:** SVC Only (dropdown)
- Routing Name:** SUPPORT_1769056499
- Start Time:** 2014 October 27 16:46:43
- End Time:** 27/10/2014 at 17:46
- Conference Password:** (empty text box)
- Chairperson Password:** (empty text box)
- ID:** 67997
- Profile:** Dork_SVC (dropdown)
- Line Rate:** 4096 Kbps (dropdown)
- Video Switching:** H.264 720p30 (dropdown)
- Operator Conference**
- Reserve Resources for Video Participants:** 0
- Reserve Resources for Voice Participants:** 0
- Maximum Number of Participants:** Automatic
- Enable ISDN/PSTN Dial-in**
- ISDN/PSTN Network Service:** (dropdown)
- Dial-in Number (1):** (empty text box)
- Dial-in Number (2):** (empty text box)

Buttons at the bottom: OK, Cancel, Apply.

- 2 The following information is displayed in the **General** tab:

Conference Properties - General Parameters


Field	Description
Display Name	The Display Name is the conference name in native language and Unicode character sets to be displayed in the Collaboration Server Web Client. Note: This field is displayed in all tabs.
Duration	The expected duration of the conference using the format HH:MM. Note: This field is displayed in all tabs.
Conferencing Mode	The conferencing mode for the conference.

Conference Properties - General Parameters

Field	Description
Routing Name	The ASCII name of the conference. It can be used by H.323 and SIP participants for dialing in directly to the conference. It is used to register the conference in the gatekeeper and the SIP server.
Start Time	The time the conference started.
End Time	The expected conference end time.
Conference Password	A numeric password for participants to access the conference.
Chairperson Password	A numeric password used by participants to identify themselves as the conference chairperson.
ID	The conference ID.
Profile	The name of the conference Profile from which conference parameters were taken.
Line Rate	The maximum transfer rate, in kilobytes per second (Kbps) of the call (video and audio streams).
Video Switching	Video Switching is not supported in SVC conferences.
Reserve Resources for Video Participants	Reserve Resources for Video Participants is not supported in SVC conferences.
Reserve Resources for Audio Participants	Reserve Resources for Audio Participants is not supported in SVC conferences.
Max Number of Participants	Indicates the total number of participants that can be connected to the conference. The Automatic setting indicates the maximum number of participants that can be connected to the MCU according to resource availability.
Enable ISDN/PSTN Network Service	ISDN/PSTN participants are not supported in SVC conferences.
ISDN/PSTN Network Service	ISDN/PSTN participants are not supported in SVC conferences.
Dial-in Number (1)	ISDN/PSTN participants are not supported in SVC conferences.
Dial-in Number (2)	ISDN/PSTN participants are not supported in SVC conferences.

3 Click the **Advanced** tab.

The **Conference Properties - Advanced** dialog box opens.

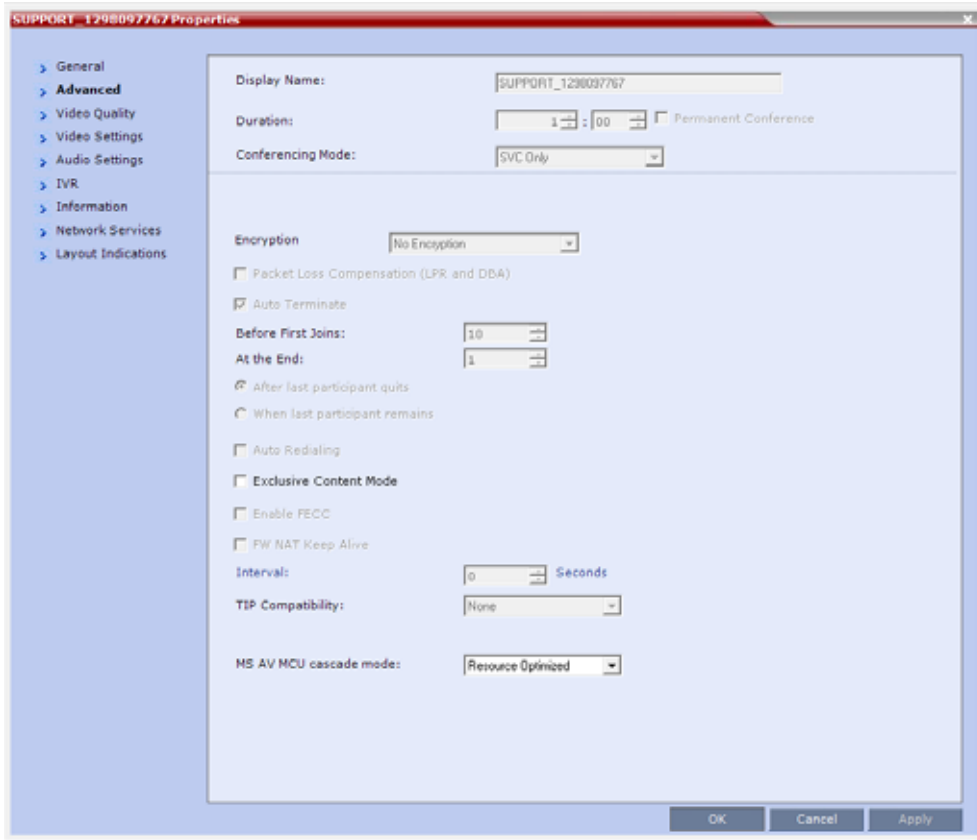

4 The following information is displayed in the **Advanced** tab:

Conference Properties - Advanced Parameters


Field/Option	Description
Encryption	Indicates the Encryption setting for the conference.
Packet Loss Compensation (LPR and DBA)	Packet Loss Compensation is not supported in SVC conferences.
Auto Terminate	When selected, indicates that the MCU will automatically terminate the conference when Before First Joins , At the End-After Last Quits and At the End - When Last Participant Remains parameters apply.
Auto Redialing	Dial-out is not supported in SVC conferences.
Exclusive Content Mode	When selected, Content is limited to one participant.
Enable FECC	Far End Camera Control is not supported in SVC conferences.

Conference Properties - Advanced Parameters

Field/Option	Description
FW NAT Keep Alive	When selected, sends a FW NAT Keep Alive message at specific Intervals for the RTP, UDP and BFCP channels. The interval specifies how often a FW NAT Keep Alive message is sent. For more information, see RealPresence Collaboration Server (RMX) Network Port Usage .
TIP Compatibility	TIP Compatibility is not supported in SVC conferences.
MS AV MCU cascade mode	This field is part of the Microsoft Lync utility and defines the resource usage in the cascading relationship between Polycom RealPresence Collaboration Server and Microsoft Lync server. For more information see Video Resource Requirement Selection in Lync 2013 AVMCU Cascade .

5 Click the **Video Quality** tab.

The **Conference Properties - Video Quality** dialog box opens.

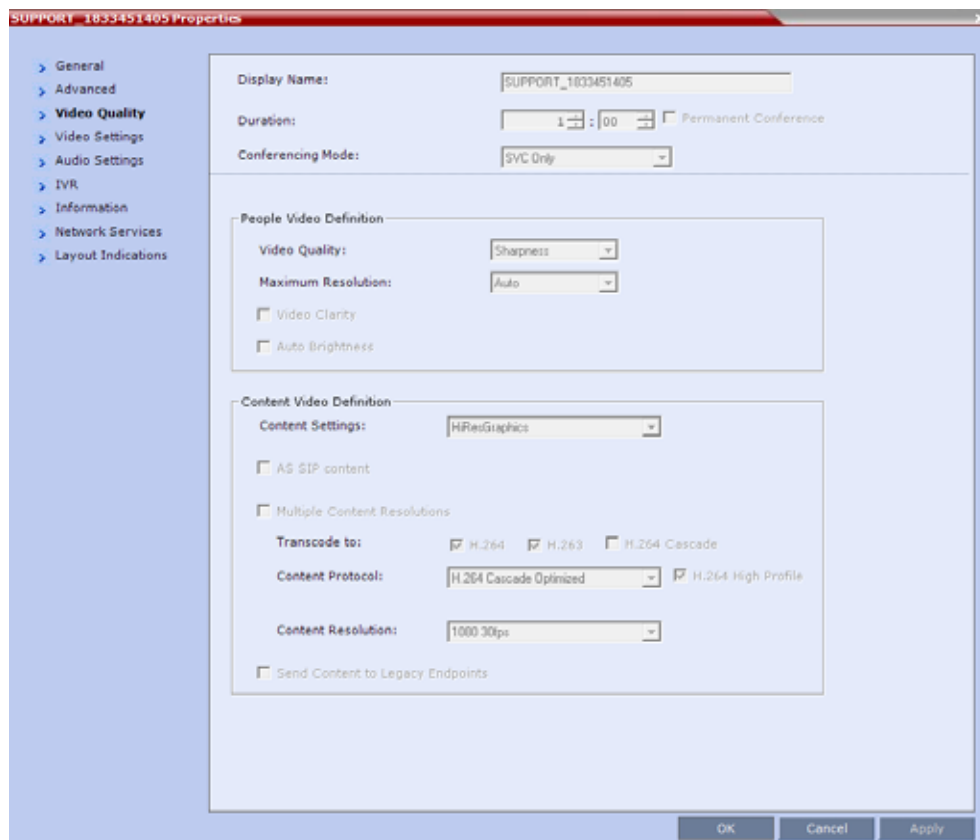


The following information is displayed:

Conference Properties - Video Quality Parameters

Field/Option	Description
People Video Definition	
Video Quality	Indicates the resolution and frame rate that determine the video quality set for the conference. In SVC conferencing, only Sharpness is supported.
Maximum Resolution	In SVC conferencing, this is always Auto (default) - The Maximum Resolution remains as selected in the Resolution Configuration dialog box.
Video Clarity	Video Clarity is not supported in SVC conferences.
Auto Brightness	Auto Brightness is not supported in SVC conferences.
Content Video Definition	
AS-SIP	AS-SIP is not supported in SVC conferences.
Multiple Content Resolutions	Indicates if Multiple Content Resolutions mode for content sharing is enabled. In this mode, content is shared in multiple streams, one for each video protocol: H.263 and H.264. This allows endpoints with different protocols to connect and disconnect without having to restart Content sharing in the middle of a conference. For more information, see Multiple Content Resolutions .
Content Settings	Indicates the Content channel resolution set for the conference. Possible resolutions are Graphics (default), Hi-res Graphics , Live Video , and Customized Content Rate . For more information, see Content Settings .
Content Protocol	Indicates the Content Protocol used for content sharing in Highest Common Content Sharing Mode. For more information, see MCU Usage Modes of Content Protocols .
Content Resolution	Indicates the Content Resolution and frame rate according to the selected Content Sharing Mode (Highest common Content or Multiple Resolution Contents) and the video protocol. For more information, see H.264 Cascade Optimized .

- 6 Click the **Video Settings** tab to view the video parameters defined for the conference.

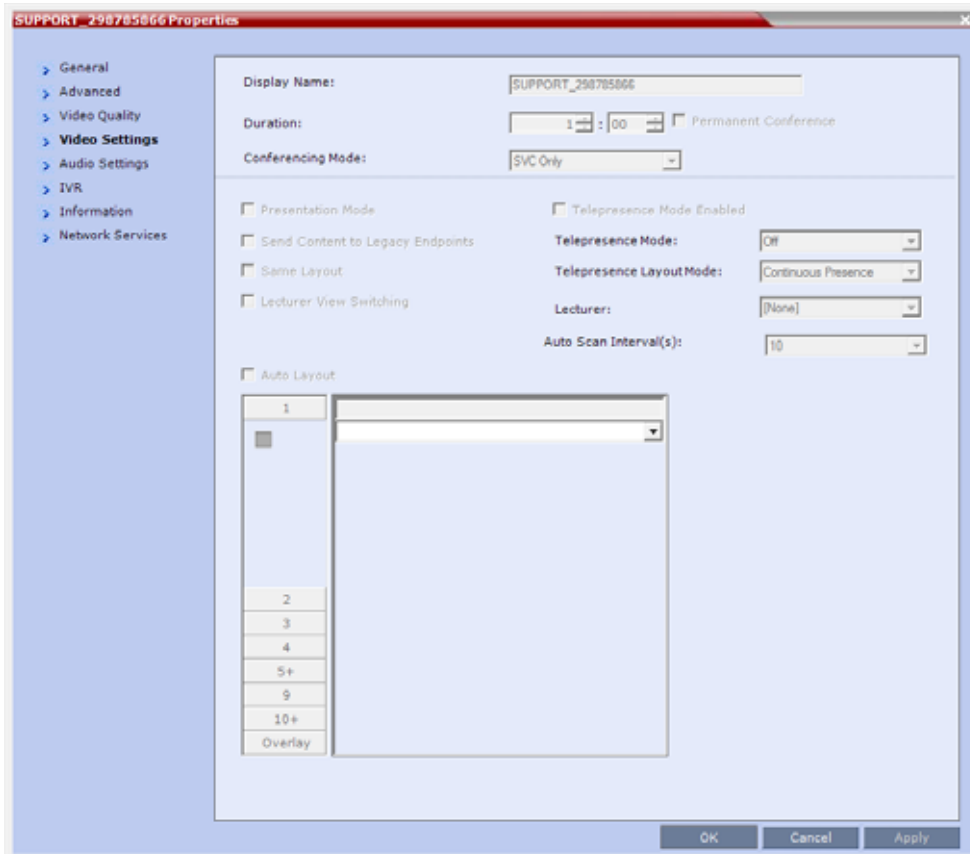

In SVC conferences, only Auto Layout is enabled and cannot be disabled. All other video settings are disabled.

- 7 Click the **Audio Settings** tab to view the audio parameters defined for the conference.
In SVC conferences, all **Audio Settings** options are disabled.
- 8 Click the **IVR** tab to view the conference IVR settings.
- 9 Click the **Information** tab to view general information defined for the conference. Changes made to this information once the conference is running are not saved to the CDR.
- 10 Click the **Network Services** tab to view the conference IVR settings.
- 11 Click the **Layout Indications** tab to view the conference IVR settings.
- 12 Click **OK** to close the **Conference Properties** dialog box.

Monitoring of Operator Conferences and Participants Requiring Assistance



This feature is applicable only in CP and Mixed CP and SVC conferences.

Operator conferences are monitored in the same way as standard ongoing conferences. Each Operator conference includes at least one participant - the Operator.




You can view the properties of the Operator conference by double-clicking the conference entry in the Conferences list or by right-clicking the conference entry and selecting **Conference Properties**.

Requesting Help

A participant can request help using the appropriate DTMF code from his/her touch tone telephone or the endpoint's DTMF input device. The participant can request Individual Assistance (default DTMF code *0) or Conference Assistance (default DTMF code 00).

Participants in Entry Queues who failed to enter the correct destination conference ID or the conference password will wait for operator assistance (provided that an Operator conference is active).

When requiring or requesting operator assistance, the Collaboration Server management application displays the following:

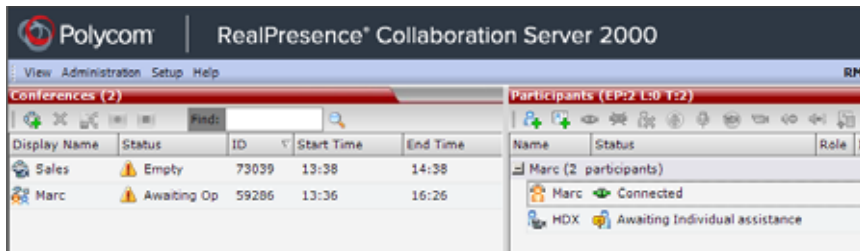

- The participant's connection **Status** changes, reflecting the help request. For details, see [Participants List Status Column Icons and Indications](#).
- The conference status changes and it is displayed with the exclamation point icon and the status Awaiting Operator.
- The appropriate voice message is played to the relevant participants indicating that assistance will be provided shortly.

The following icons and statuses are displayed in the Participant **Status** column:

Participants List Status Column Icons and Indications

Icon	Status indication	Description
	Awaiting Individual Assistance	The participant has requested the operator's assistance for himself/herself.
	Awaiting Conference Assistance	The participant has requested the operator's assistance for the conference. Usually this means that the operator is requested to join the conference.

When the Operator moves the participant to the Operator conference for individual assistance the participant Status indications are cleared.

Request to Speak


Participants that were muted by the conference organizer/system operator can indicate that they want to be unmuted by entering the appropriate DTMF code.

An icon is displayed in the Role column of the Participants list for 30 seconds.



Request to Speak is:

- Activated when the participant enters the appropriate DTMF code (default: **99**).
The DTMF code can be modified in the conference **IVR Service Properties - DTMF Codes** dialog box.

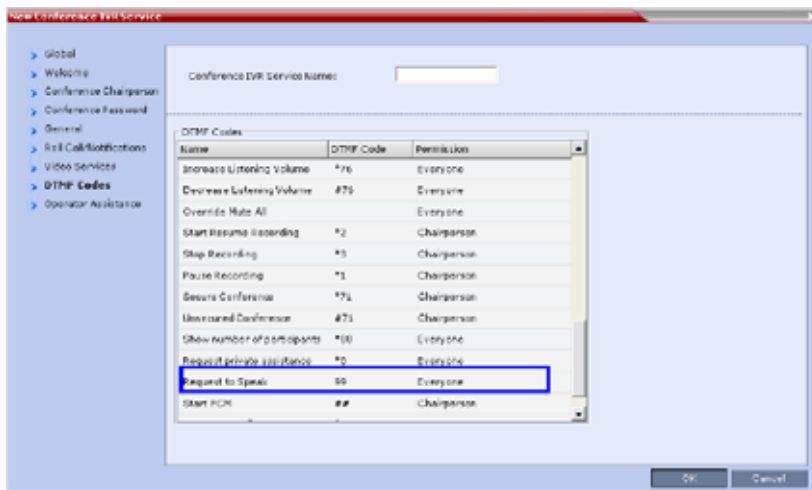

- Available for dial-in and dial-out participants.
- A participant can request to speak more than once during the conference.
- Supported in all conference types.
- Supported in H.323 and SIP environments.
- The duration of the icon display cannot be modified.

Participant Alerts List

The **Participant Alerts** list contains all the participants who are currently waiting for operator assistance.



Participants are automatically added to the Participants Alerts list in the following circumstances:

- The participant fails to connect to the conference by entering the wrong conference ID or conference password and waits for the operator’s assistance.
- The participant requests Operator’s Assistance during the ongoing conference.

This list is used as reference only. Participants can be assisted and moved to the Operator conference or the destination conference only from the Participants list of the Entry Queues or ongoing conference where they are awaiting assistance.

The participants are automatically removed from the Participant Alerts list when moved to any conference (including the Operator conference).

Participant Level Monitoring

In addition to conference information, you can view detailed information regarding the status and parameters of each listed participant, using the Participant Properties dialog box. Participant properties can be displayed for all participants currently connected to a conference and for defined participants that have been disconnected.



Properties differ for IP and ISDN/PSTN participants.

SIP SVC-based participant properties are similar to SIP AVC-based participant properties.

The table below lists the tabs in the Participant Properties dialog box, as viewed by each user type, for each participant connection types.

Participant monitoring - Tab list per participant connection type and user


Tab Name	Admin		Chairperson		Operator	
	AVC H.323	AVC/SVC SIP	AVC H.323	AVC/SVC SIP	AVC H.323	AVC/SVC SIP
General	✓	✓	✓	✓	✓	✓
Advanced	✓	✓	✗	✗	✓	✓
Information	✓	✓	✓	✓	✓	✗
Media Sources	✓	✓	✓	✓	✓	✓
H.245	✓	✗	✗	✗	✓	✗
SDP	✗	✓	✗	✗	✗	✓
Connection Status	✓	✓	✗	✗	✓	✓
Channel Status	✓	✓	✗	✗	✓	✓
Channel Status - Advanced	✓	✓	✗	✗	✗	✗

Participant monitoring - Tab list per participant connection type and user

Tab Name	Admin		Chairperson		Operator	
	AVC H.323	AVC/SVC SIP	AVC H.323	AVC/SVC SIP	AVC H.323	AVC/SVC SIP
Gatekeeper Status	✓	✓	✗	✗	✗	✗
Call Admission Control	✗	✗	✗	✗	✗	✗

Participant Connection Monitoring (AVC and SVC-based Connections)

When a conference is selected in the *Conference* list, the Participants list header displays a summary of participant connection status.

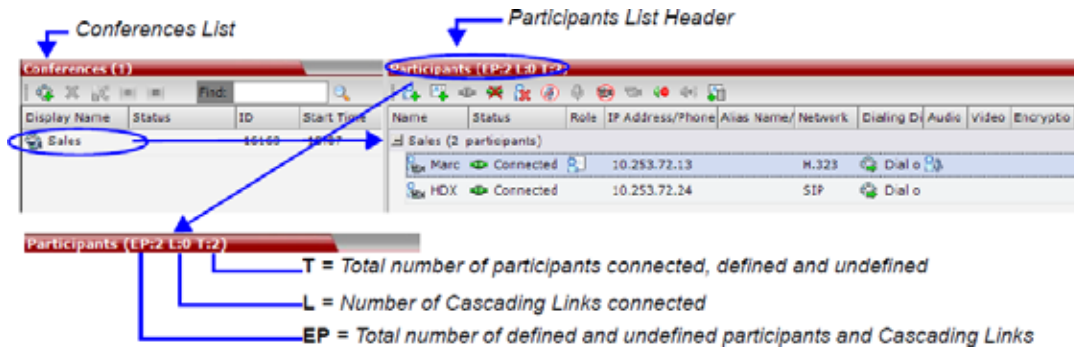

These numbers include:

- EP = the number of Endpoints currently connected to the conference (both defined and undefined participants). This number includes participants whose status is connected with problem, connected partially or connected as secondary.
Connected Cascading Links are not included and are detailed separately.
- L = the number of Cascading Links currently connected to the conference.
- T = the total number of all:
 - ◆ connected Participants - both defined and undefined participants
 - ◆ defined participants that are currently disconnected
 - ◆ Cascading Links - both connected and disconnected












If more than one conference is selected, the **EP:n L:n T:n** numbers reflect the cumulative connection status information of all the selected conferences.

If no conference is selected, the **EP:n L:n T:n** numbers are all zeroed.









If the T(otal) number of participants is higher than the number of connected participants, it indicates that additional participants defined for the conference have not yet connected. For example, if the EP: is **12** and the T: is **15**, it means that 12 out of 15 of the expected participants have connected and that **3** defined participants have not yet connected.

The *Participant* list displays the following participant indicators and properties:











Participant Monitoring – Indicators and Properties

Column	Icon/Description	
Name	Displays the name and type (icon) of the participant:	
		Audio Participant – Connected via IP phone or ISDN/PSTN.
		Video Participant – Connected with audio and video channels.
Status	Displays the connection status (text and icon) of the participant. If there is no problem with the participant's connection no indication is displayed.	
		Connected – The participant is successfully connected to the conference.
		Disconnected – The participant is disconnected from the conference. This status applies only to defined participants.
		Waiting for Dial-in – The system is waiting for the defined participant to dial into the conference.
		Partially Connected – The connection process is not yet complete; the video channel has not been connected.
		Faulty Connection – The participant is connected, but problems occurred in the connection, such as synchronization loss.
		Secondary Connection – The endpoint's video channel cannot be connected to the conference and the participant is connected only via audio.
		Awaiting Individual Assistance (AVC-based connection) – The participant has requested the user's (operator's) assistance.
		Awaiting Conference Assistance (AVC-based connection) – The participant has requested the operator's assistance for the conference. This usually means that the user (operator) has been requested to join the conference.
		Connected, Noisy – Participant's endpoint is requesting too many intras, resulting in the MCU ceasing to send intras to the endpoint to preserve conference quality for all other participants.

Participant Monitoring – Indicators and Properties

Column	Icon/Description	
Role	Displays the participant's role or function in the conference:	
		Chairperson – The participant is defined as the conference chairperson. The chairperson can manage the conference using touch-tone signals (DTMF codes).
		Lecturer (AVC-based connection) – The participant is defined as the conference Lecturer.
		Lecturer and Chairperson – The participant is defined as both the conference Lecturer and Chairperson.
		Cascade-enabled Dial-out Participant (AVC-based connection) – A special participant functioning as a link in a cascaded conference.
		Recording (AVC-based connection) – A special participant functioning as a Recording Link. Note: The Recording participant does not support H.264 High Profile. If recording a conference set to H.264 High Profile, the Recording participant connects as Audio Only and records the conference Audio while displaying the recording icon for the conference.
		Request to speak (AVC-based connection) - Participants that were muted by the conference organizer/system operator can indicate that they want to be unmuted by entering the appropriate DTMF code (default 99). The icon is displayed for 30 seconds.
IP Address/Phone	The IP participant's IP address or the ISDN/PSTN participant's phone number.	
Alias Name/ SIP Address	The participant's Alias Name or SIP URI. The alias of a Polycom® RealPresence® Media Suite if the participant is functioning as a recording link.	
Network	The participant's network connection type – H.323, or SIP or ISDN/PSTN.	
Dialing Direction		Dial-in – The participant dialed the conference.
		Dial-out – The MCU dialed the participant.

Participant Monitoring – Indicators and Properties

Column	Icon/Description	
Audio	Displays the status of the participant's audio channel. If the participant's audio is connected and the channel is neither muted nor blocked, no indication is displayed.	
		Disconnected – Participant's audio channel is disconnected. This is a defined participant who is waiting to be connected to the conference.
		Muted – Participant's audio channel is muted. Indicates who initiated the Mute: participant, Collaboration Server User or MCU. The participant can still hear the conference.
		Blocked – Transmission of audio from the conference to the participant is blocked.
		Muted and Blocked - Audio channel is muted and blocked.
Video	Displays the status of the participant's video channel. If there is no problem with the participant's video connection and the channel is neither suspended nor secondary, no indication is displayed.	
		Disconnected – Participant's video channel is disconnected. This is a defined participant who is waiting to be connected to the conference.
		Suspended – Video transmission from the endpoint to the conference is suspended.
		Secondary – Participant is connected only through the audio channel due to problems with the video channel.
Encryption		(AVC-based connection) Indicates that the endpoint is connected to the conference using encryption.
Service Name	Displays the <i>IP Network Service</i> used to connect this participant to the conference.	
FECC Token		Participant is the holder of the FECC token and has Far End Camera Control capabilities. The FECC token can be allocated to only one participant at a time and remains un-allocated if no participant requests it. Note: FECC is not supported with ISDN.
Content Token		Participant is the holder of the Content token and has content sharing permission. The Content token can be allocated to only one participant at a time and remains un-allocated if no participant requests it.

Viewing the Properties of Participants

To view the participant Properties:

- » In the **Participant List** pane double-click the participant entry. Alternatively, right-click a participant and then click **Participant Properties**.

The **Participant Properties** dialog box opens, displaying the last opened tab.



Media Sources properties are not available for SVC participants.

The screenshot displays the 'Participants (EP2 L10 12)' list on the left. A context menu is open over a participant, with 'ParticipantProperties' selected. A blue arrow points from this menu item to the 'Audio Properties' dialog box. Below this, two labels with arrows point to the 'SVC Properties' dialog box: 'SVC-based Participant' and 'AVC-based Participant'. The 'Audio Properties' dialog shows fields for Name, Endpoint Type (SVC), and Layout Type (Conference). The 'SVC Properties' dialog shows similar fields but with a different Layout Type (NEW ADD TR ROOM).

The Media Sources dialog box enables you to mute participant's audio, suspend participant's video transmission and select a personal Video Layout for the participant.



For ISDN/PSTN participants, only the following tabs are displayed in the Participant Properties dialog box:

- General, Advanced, Information
- Media Sources
- Connection Status
- Channel Status

The General, Advanced and Information tabs include the same properties for new and defined participants. For more information, see [Adding a Participant to the Address Book](#).

Monitoring IP Participants

The following parameters are displayed for an IP participant.

Participant Properties - Media Sources Parameters

Field	Description
Name	Indicates the participant's name. Note: This field is displayed in all tabs.
Endpoint Website (link)	Click the Endpoint Website hyperlink to connect to the internal website of the participant's endpoint. It enables you to perform administrative, configuration and troubleshooting activities on the endpoint. The connection is available only if the IP address of the endpoint's internal site is filled in the Website IP Address field in the Participant Properties - General dialog box. Note: This field is displayed in all tabs (excluding ISDN/PSTN participants).
Endpoint Type	Indicates whether the participant is using an AVC-based or SVC-based endpoint. Fields, tabs and options are enabled or disabled according to the endpoint type. Note: This field is displayed in all tabs.
Layout Type	Indicates whether the video layout currently viewed by the participant is the Conference or Personal Layout. If Personal Layout is selected, you can select a Video Layout that will be viewed only by this participant.
Video Layout	Indicates the video layout currently viewed by the participant. When Personal Layout is selected in the Layout Type you can force participants to the video windows in a layout that is specific to the participant. For more information, see Setting the Video Layout in Cascading conferences .

Participant Properties - Media Sources Parameters

Field	Description
Mute/Suspend	<p>Indicates if the endpoint's audio and/or video channels have been muted/suspended. The entity that initiated audio mute or video suspend is also indicated.</p> <ul style="list-style-type: none"> • MCU – Audio or Video channel has been muted/suspended by the MCU. • User – Channels have been muted/suspended by the Collaboration Server user. • Participant – Channels have been muted/suspended by the participant from the endpoint. <p>You can also cancel or perform mute and suspend operation using these check boxes.</p> <p>Note: If the participant muted his/her audio channel, the system displays the mute icon only for H.323.</p>
Block	<p>When checked, the audio transmission from the conference to the participant's endpoint is blocked, but the participant will still be heard by other participants.</p>

- 1 Click the **Connection Status** tab to view the connection status, and if disconnected the cause of the disconnection.



This dialog box is the same for AVC-based and SVC-based participants. The following parameters are displayed:

Participant Properties - Connection Status Parameters

Field	Description
Participant Status	
Status	Indicates the connection status of the participant.
Connection Time	The date and time the participant connected to the conference. Note: The time format is derived from the MCU's operating system time format.
Disconnection Time	The date and time the defined participant disconnected from the conference.
Connection Retries Left	Indicates the number of retries left for the system to connect defined participant to the conference.
Call Disconnection Cause	Displays the cause for the defined participant's disconnection from the conference. See Conference and Participant Monitoring .
Video Disconnection Cause	Displays the cause the video channel could not be connected. For more information, see Appendix A - Disconnection Causes .
Possible Solution	In some cases, a possible solution is indicated to the cause of the video disconnection.

- Click the **H.245** (H.323) or **SDP** (SIP) tab during or after the participant's connection process to view information that can help in resolving connection issues.

*LPR activity
(Displayed in all three panes)*

Displays the endpoint's actual capabilities used for the connection

H.323 Participant (AVC-based)


List's the endpoint's capabilities as retrieved from the remote site

Displays the MCU's capabilities used for connection with the participant

Participant Properties - H.245/SDP Parameters

Field	Description
Remote Capabilities	Lists the participant's capabilities as declared by the endpoint.
Remote Communication Mode	Displays the actual capabilities used by the endpoint when establishing the connection with the MCU (Endpoint to MCU).
Local Communication Mode	Displays the actual capabilities used by the MCU when establishing the connection with the participant's endpoint (MCU to Endpoint).

- Click on the **Channel Status** tab to view the status of the various channels.

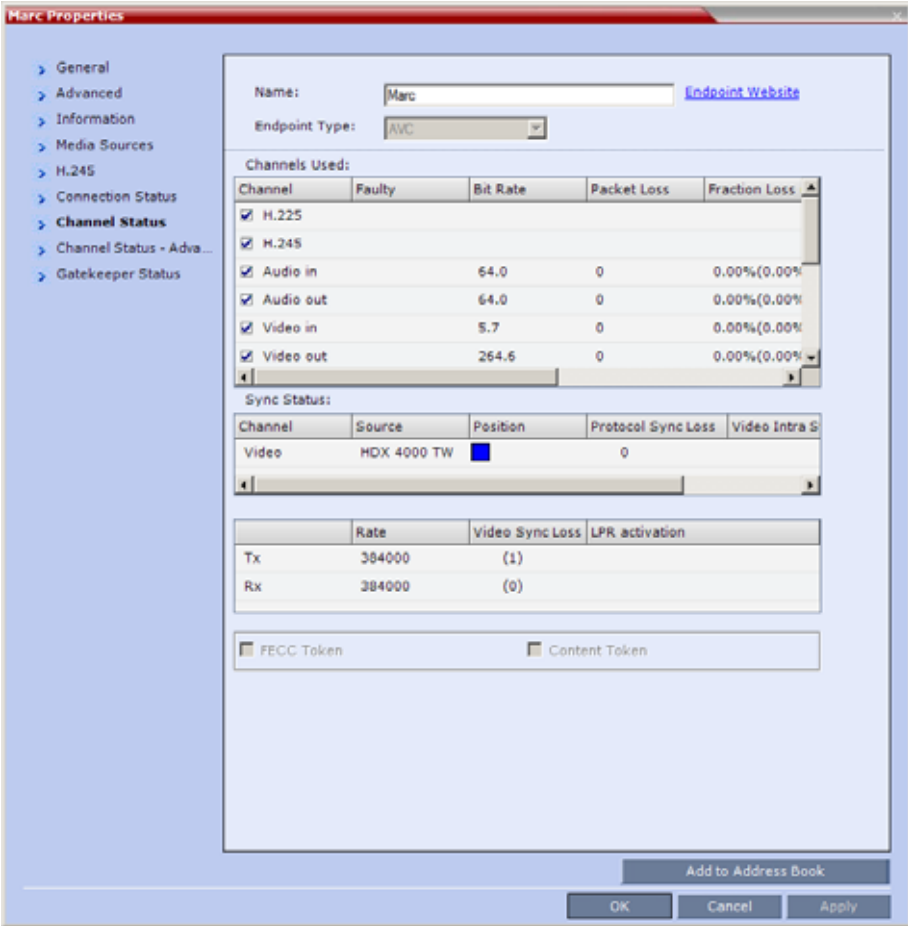

The following parameters are displayed:


Participant Properties - Channel Status Parameters

Field	Description
Channels Used	<p>When checked, indicates the channel type used by the participant to connect to the conference: Incoming channels are endpoint to MCU, Outgoing channels are from MCU to endpoint.</p> <p>Channels:</p> <ul style="list-style-type: none"> • H.225/Signaling - The call-signaling channel. • H.245/SDP - The Control channel. • Audio in - Incoming audio channel • Audio out - Outgoing audio channel • Video in - Incoming video channel • Video out - Outgoing video channel • Content in - H.239/People+Content conferences • Content out - H.239/People+Content conferences • FECC in - The incoming FECC channel is open. • FECC out - The outgoing FECC channel is open. <p>Columns:</p> <ul style="list-style-type: none"> • Faulty – A red exclamation point indicates a faulty channel condition. This is a real-time indication; when resolved the indication disappears. An exclamation point indicates that further investigation may be required using additional parameters displayed in the Advanced Channel Status tab. • Bit Rate – The actual transfer rate for the channel. When channel is inactive, bit rate value is 0. For example, if the participant is connected without video, the bit rate for the video channel is 0. Note: The CTS Audio Auxiliary channel is used only for Content. In all other cases, the bit rate shown in this column for this channel is 0. • Packet Loss – The accumulated count of all packets that are missing according to the RTCP report since the channel was opened. This field is relevant only during the connection stage and does not display faulty indications. • Fraction Loss (Peak) – The ratio between the number of lost packets and the total number of transmitted packets since the last RTCP report. Peak (in parentheses) indicates the highest ratio recorded since the channel was opened. • Number of Packets – The number of received or transmitted packets since the channel has opened. This field does not cause the display of the faulty indicator. • Jitter (Peak) – Displays the network jitter (the deviation in time between the packets) as reported in the last RTCP report (in milliseconds). Peak (in parentheses) reflects the maximum network jitter since the channel was opened. • Latency – Indicates the time it takes a packet to travel from one end to another in milliseconds (derived from the RTCP report). High latency value may indicate that there is a problem in the network, or that the endpoint is sending an incorrect RTCP values.

Participant Properties - Channel Status Parameters

Field	Description
Sync Status	<ul style="list-style-type: none"> • Channel - The channel type: Video or Content. • Source - The name of the participant currently viewed by this participant. • Position - The video layout position indicating the place of each participant as they appear in a conference. • Protocol Sync Loss - Indicates whether the system was able to synchronize the bits order according to the selected video protocol. • Video Intra Sync - Indicates whether the synchronization on a video Intra frame was successful. • Video Resolution - The video resolution of the participant.
Rx - Rate	The received line rate.
Tx - Rate	The transmitted line rate.
Tx - Video Sync Loss	When checked, indicates a video synchronization problem in the outgoing channel from the MCU. The counter indicates the sync-loss count.
Rx - Video Sync Loss	When checked, indicates a video synchronization problem in the incoming channel from the endpoint. The counter indicates the sync-loss count.
Tx - LPR Activation	When checked, indicates LPR activation in the outgoing channel.
Rx - LPR Activation	When checked, indicates LPR activation in the incoming channel.
FECC Token	When checked, indicates that the participant is the holder of the FECC Token.
Content Token	When checked, indicates that the participant is the holder of the Content Token.

- 4 Click the **Channel Status Advanced** tab to view additional information for selected audio and video channels.

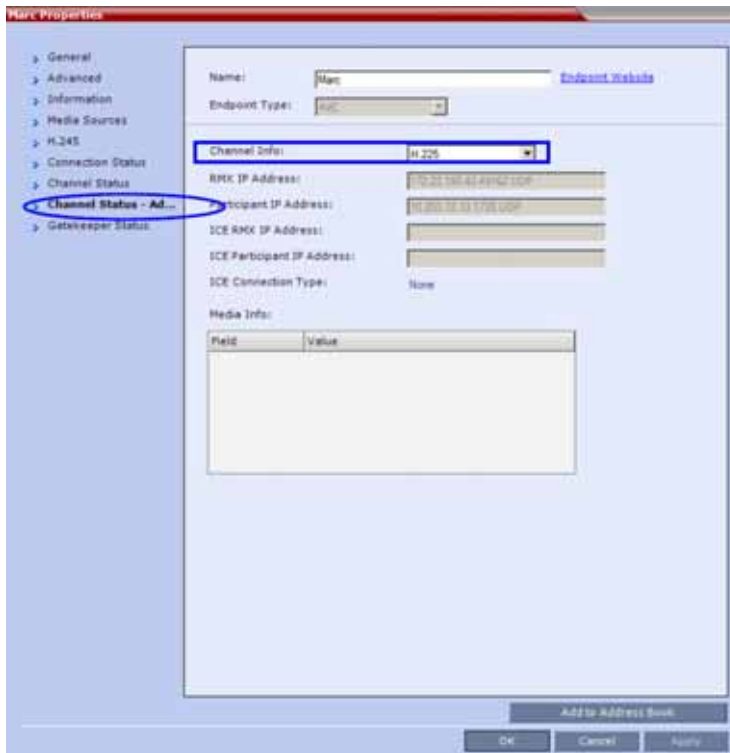

In the **Channel Status - Advanced** tab, channels can be selected for viewing additional information:


Participant Properties - Channel Status Advanced Parameters

Field	Description
Channel Info	Select a channel to view its information: <ul style="list-style-type: none"> • H.225 • H.245 • Audio in • Audio out • Video in • Video out • Content in • Content Out • SIP BFCP TCP
Collaboration Server IP Address	The IP address and the transport protocol (TCP/UDP) of the MCU to which the participant is connected and the port number allocated to the participant incoming media stream on the MCU side.
Participant IP Address	The IP address and the transport protocol (TCP/UDP) of the participant and the port number allocated to the media stream on the participant side.

Participant Properties - Channel Status Advanced Parameters

Field	Description
ICE RealPresence Collaboration Server 1800/2000/4000 IP Address	The IP address, port number, and transport protocol of the MCU used to pass through the media when ICE is functional. See Monitoring Participant Connections .
ICE Participant IP Address	The IP address, port number, and transport protocol of the endpoint used to pass through the media when ICE is functional. See Monitoring the Participant Connection in ICE Environment .
ICE Connection Type	<p>Indicates the type of connection between the Collaboration Server and the participant in the ICE environment:</p> <ul style="list-style-type: none"> • Local (or Host) - The endpoint (Remote) is on the same network as the Collaboration Server and the media connection is direct, using local addresses. • Relay - Media between the Collaboration Server and the participant passes through a media relay server. • Firewall - Media connection between the Collaboration Server and the participant is done using their external IP addresses (the IP addresses as seen outside of the local network).
Media Info	This table provides information about the audio and video parameters, such as video algorithm, resolution, etc. For more information, see Appendix E - Participant Properties Advanced Channel Information .
RTP Statistics	This information may indicate problems with the network which can affect the audio and video quality. For more information, see Appendix E - Participant Properties Advanced Channel Information .


5 For H.323 AVC-based participants only - Click the **Gatekeeper Status** tab to view its parameters.

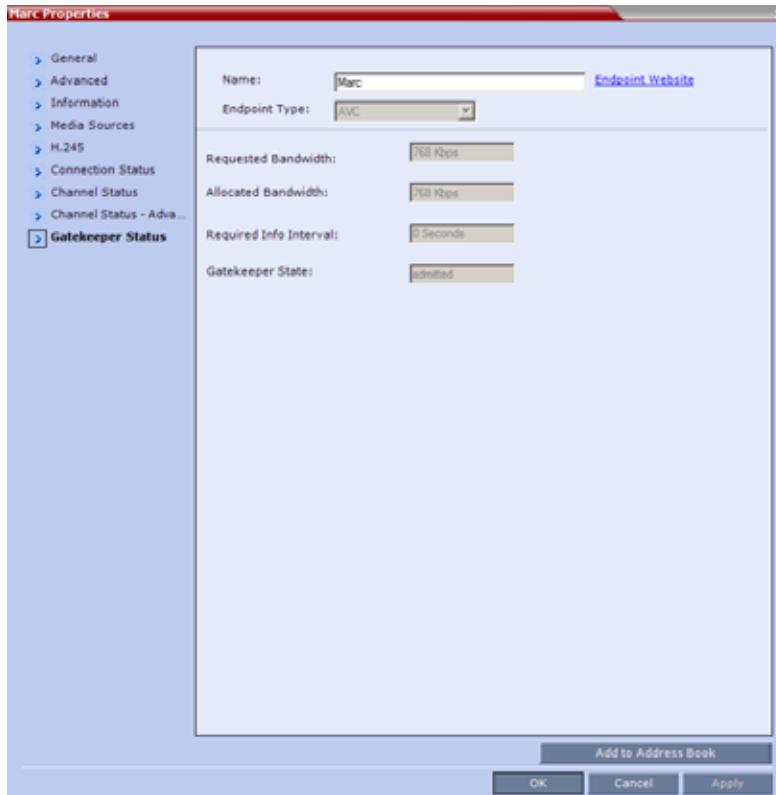

Participant Properties - Gatekeeper Status Parameters

Field	Description
Requested Bandwidth	The bandwidth requested by the MCU from the gatekeeper.
Allocated Bandwidth	The actual bandwidth allocated by the gatekeeper to the MCU.
Required Info Interval	Indicates the interval, in seconds, between registration messages that the MCU sends to the gatekeeper to indicate that it is still connected.
Gatekeeper State	Indicates the status of the participant's registration with the gatekeeper and the bandwidth allocated to the participant. The following statuses may be displayed: <ul style="list-style-type: none"> • ARQ – Admission Request - Indicates that the participant has requested the gatekeeper to allocate the required bandwidth on the LAN. • Admitted – Indicates that the gatekeeper has allocated the required bandwidth to the participant. • DRQ – Disengage Request – The endpoint informs the gatekeeper that the connection to the conference is terminated and requests to disconnect the call and free the resources. • None – Indicates that there is no connection to the gatekeeper.

- 6 For SIP AVC-based and SVC-based participants - Click the Call Admission Control tab to view its parameters.**

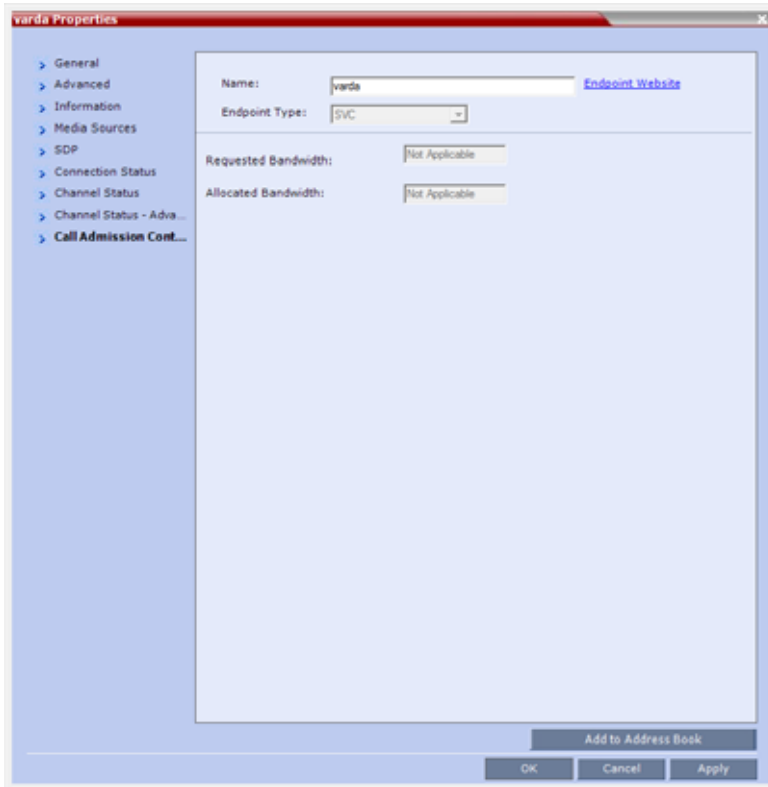


Participant Properties - Gatekeeper Status Parameters

Field	Description
Requested Bandwidth	The bandwidth requested by the MCU from the SIP server.
Allocated Bandwidth	The actual bandwidth allocated by the SIP server to the MCU.

Monitoring SIP BFCP Content

In the SIP Participant Properties dialog box, BFCP status information appears in:

- All three panes of the **SDP** tab.
- The **Channel Status** tab.
- The **Channel Status - Advanced** tab.

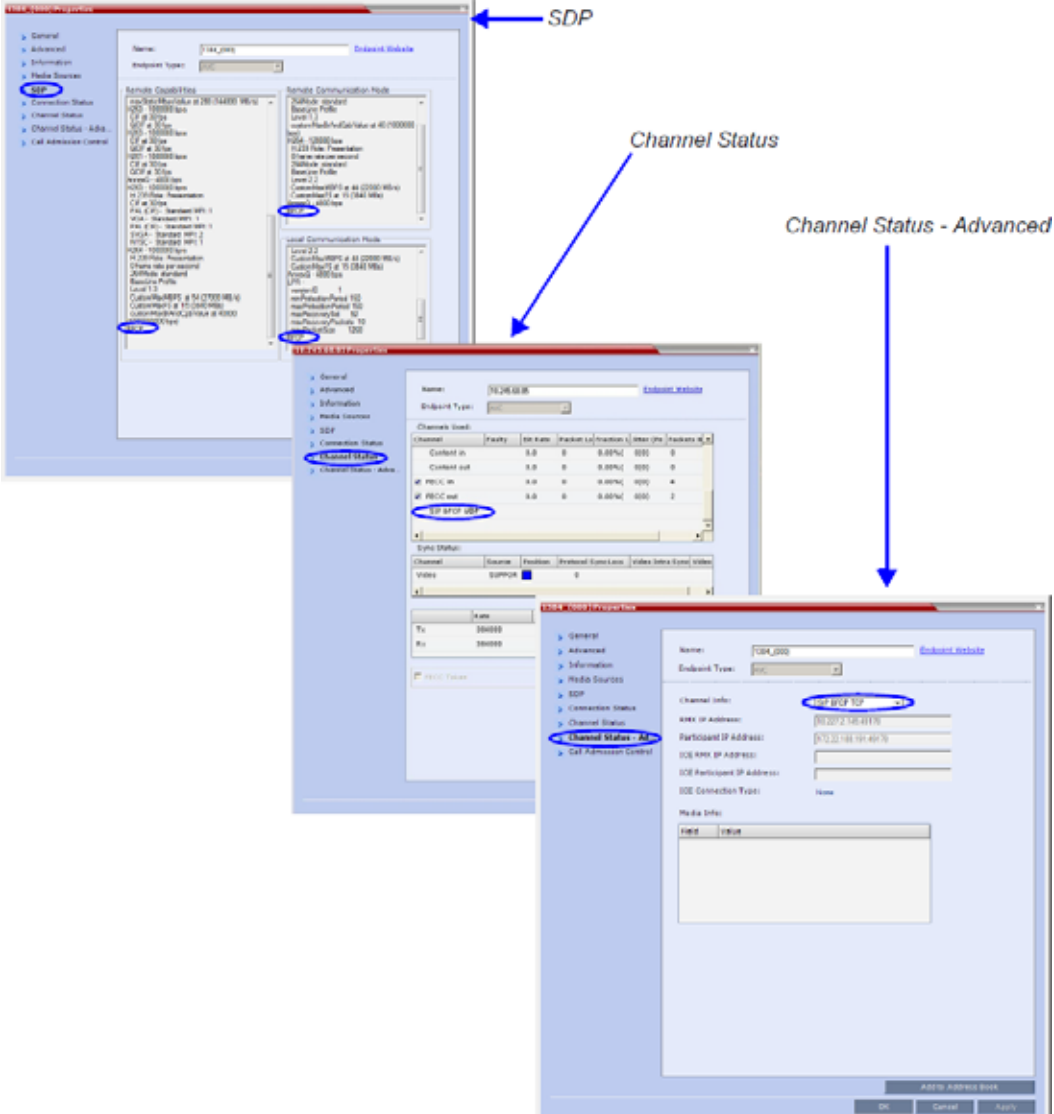

For more information see [Participant Level Monitoring](#).

Detecting Endpoint Disconnection

Endpoint disconnect can be detected for

- SIP endpoints - [Detecting SIP Endpoint Disconnection](#)
- H.323 endpoints - [H.323 Endpoint Disconnection Detection](#)

Detecting SIP Endpoint Disconnection

When an abnormal disconnection of SIP endpoints occurs because of network problems or client application failures, SIP endpoints remain connected to the conference causing connection disruptions. For example, the video freezes in the layout or blocks content for SIP endpoints when a quick re-connection is performed. It can take several minutes to detect the SIP endpoint disconnection using the SIP standard behavior.

In a normal SIP video call, audio and video (RTP and RTCP) messages are sent from the endpoints to the MCU to detect the signaling of connected endpoints. Conversely, SVC endpoints might not send video RTP messages to the MCU when a participant is not displayed in the video layout of any of the participants in the conference. For SVC endpoints, the MCU will only verify audio RTP and RTCP messages and video RTCP messages. Video RTP messages will not be checked.

To detect the disconnection of SIP endpoints in a reasonable amount of time, a new system flag can be defined to specify the amount of time that the MCU should wait for an RTCP or RTP message from the SIP endpoint before the endpoint starts the disconnection process. The system default value is automatically set to 20 seconds.

The system flag, **DETECT_SIP_EP_DISCONNECT_TIMER**, contains the amount of time in seconds to wait for an RTCP or RTP message to be received from the endpoint. When the time that was set in the system flag has elapsed and no RTCP or RTP audio or video message has been received on either the audio or the video channel, the MCU disconnects the SIP endpoint from the conference. A CDR event record is created with a Call Disconnection Cause of `SIP remote stopped responding`.

The Microsoft Lync add-in endpoint opens audio and content channels. Lync endpoints can send RTCP/RTP messages and empty RTP audio messages. When the time that was set in the system flag has elapsed and no RTCP or RTP message has been received on the audio channel, the MCU disconnects the endpoint from the conference.

SIP audio only endpoints use the audio channel only. When the time that was set in the system flag has elapsed and no RTCP or RTP message has been received on the audio channel, the MCU disconnects the SIP audio endpoint from the conference.

Configuring the System Flag

The time out used for SIP endpoint disconnection detection is controlled by the **DETECT_SIP_EP_DISCONNECT_TIMER** System Flag which must be added to the System Configuration to view or modify its value.

Range: 0 - 300

When the value is set between 0 and 14, the feature is disabled and SIP endpoints are not detected for disconnection. When the value is set between 15 and 300, the feature is enabled.

Default: 20

For more information see , and [Modifying System Flags](#).

H.323 Endpoint Disconnection Detection

In versions previous to version 8.4, when an H.323 endpoint disconnected, round trip messages were still received, even when a gatekeeper was deployed. Because of this, the MCU failed to detect the endpoint disconnection.

From version 8.4 onward, the MCU detects H.323 endpoint connection or disconnection by monitoring RTCP/RTP messages reception using either the audio or video channels. When these messages are not received within a predefined timeout interval, the endpoint is considered disconnected. Therefore as long as either RTCP or RTP messages (interchangeably) are received on either of the video or audio channels, the endpoint is considered connected.

If no messages are received through either channel within the predefined time out interval, the endpoint is disconnected, and a disconnection message, `H.323 remote stopped responding`, is sent to the endpoint.

No channel disconnection detection occurs while an endpoint's video or audio are muted, or while the endpoint is put on hold.

In audio calls, only the audio channel is polled for RTCP/RTP messages.

System Configuration Flag

The time out used for H.323 endpoint disconnection detection is controlled by the **DETECT_H323_EP_DISCONNECT_TIMER** System Flag which must be added to the System Configuration to view or modify its value.

Range: 16 - 300 (4-second units). Values indivisible by 4 will be rounded upward. Flag values between 0 and 15 disable the flag functionality.

Default: 20

For more information see , and [Modifying System Flags](#).

Monitoring ISDN/PSTN Participants

Using the **Participant Properties** dialog box, you can monitor and verify the properties of an ISDN/PSTN participant. The dialog box's tabs contain information that is relevant to the participant's status only while the conference is running and is used to monitor the participant's status when connection problems occur.



Maximum line rate at which ISDN endpoints can connect to a conference is 768 kbps.


The table below lists the audio algorithms that are supported for ISDN participants according to their connection bit rate

Supported Audio Algorithms vs Bit Rate

	Bit Rate		
	96Kbps (and Lower)	128Kbps – 192Kbps	256Kbps (and Higher)
Audio Algorithm	G722.1 16K	G722.1 C 32K	G722.1 C 48K
	G722.1 C 24K	G722.1 C 24K	G722.1 C 32K
	Siren14 24K	Siren14 32K	G722.1 C 24K
	G722 48K	Siren14 24K	Siren14 48K
	G722 56K	G722.1 32K	Siren14 32K
	G722 64K	G722.1 24K	Siren14 24K
	G711 56K	G722 48K	G722.1 32K
	G711 64K	G722 56K	G722.1 24K
		G722 64K	G722.1 16K
		G711 56K	G722 48K
		G711 64K	G722 56K
			G722 64K
			G711 56K
			G711 64K

To view the participant properties during a conference:

- 1 In the **Participants** list, right click the desired participant and select **Participant Properties**. The **Participant Properties - Media Sources** dialog box is displayed.

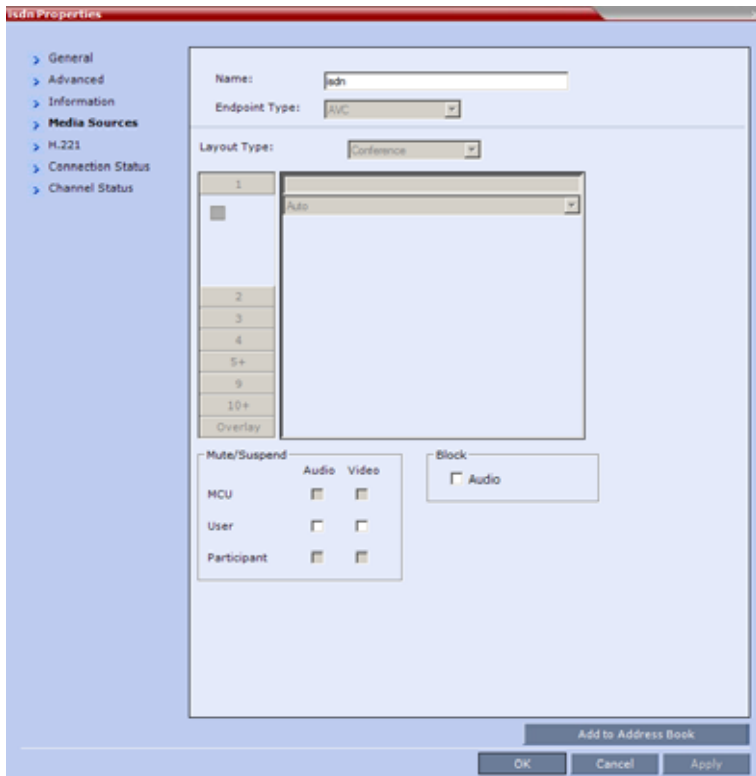


ISDN/PSTN Participant Properties - Media Sources

Field	Description
Mute/Suspend	<p>Indicates if the endpoint’s audio and/or video channels from the endpoint have been muted/suspended.</p> <p>The entity that initiated audio mute or video suspend is also indicated.</p> <ul style="list-style-type: none"> • MCU – Audio or Video channel has been muted/suspended by the MCU. • User – Channels have been muted/suspended by the Collaboration Server user. • Participant – Channels have been muted/suspended by the participant from the endpoint. <p>You can also cancel or perform mute and suspend operation using these check boxes.</p>
Block (Audio)	<p>When checked, the audio transmission from the conference to the participant’s endpoint is blocked, but the participant will still be heard by other participants.</p>

- Click the **H.221** tab to view additional information that can help to resolve connection issues.

List's the endpoint's capabilities as retrieved from the remote site

Displays the endpoint's actual capabilities used for the connection

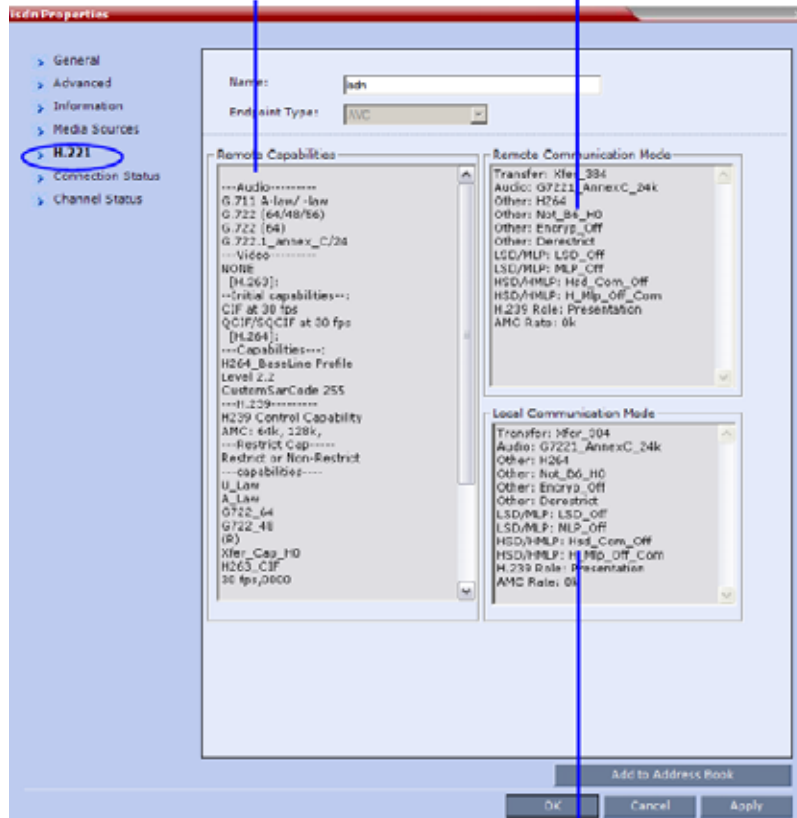


Displays the MCU's capabilities used for connection with the participant

Participant Properties - H.221 Parameters

Field	Description
Remote Capabilities	Lists the participant's capabilities as declared by the endpoint.
Remote Communication Mode	Displays the actual capabilities used by the endpoint when establishing the connection with the MCU (Endpoint to MCU).
Local Communication Mode	Displays the actual capabilities used by the MCU when establishing the connection with the participant's endpoint (MCU to Endpoint).


- 3 Click the **Connection Status** tab to view general information regarding the participant connection and disconnection causes of the participant to the conference.

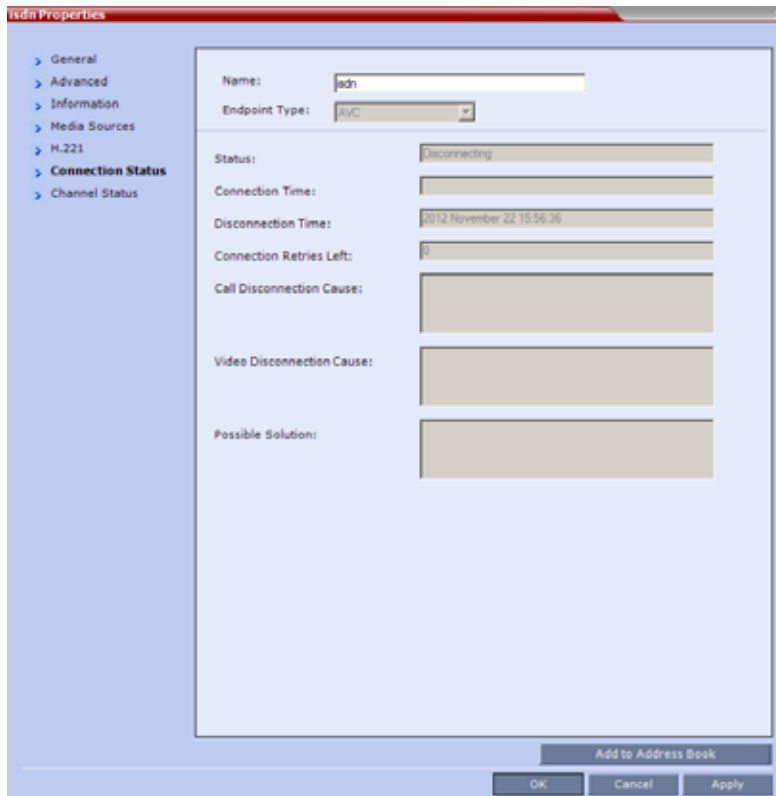

ISDN/PSTN Participant Properties - Connection Status

Field	Description
Status	Indicates the connection status of the participant to the conference. If there is a problem, the appropriate status is displayed, for example, Disconnected.
Connection Time	The date and time the participant connected to the conference.
Disconnection Time	The date and time the participant was disconnected from the conference.
Connection Retries Left	Indicates the number of retries left for the system to connect the participant to the conference.
Call Disconnection Cause	For a full list of Disconnection Causes, Appendix A - Disconnection Causes .


4 Click the **Channel Status** tab to view the status of a participant's channels.

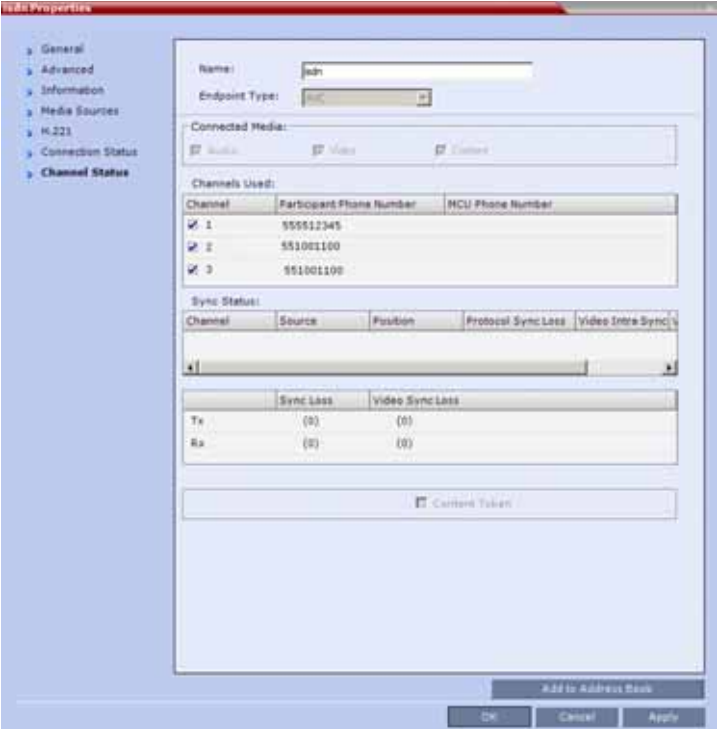

ISDN/PSTN Participant Properties - Channel Status


Field	Description
Connected Media	Indicates if the participant is connected with Audio, Video and Content media channels.
Channels Used	<ul style="list-style-type: none"> • Channel – Indicates the channel used by the participants and whether the channel is connected (indicated with a check mark) or disconnected. • Participant Phone Number – In a dial-in connection, indicates the participant’s CLI (Calling Line Identification) as identified by the MCU. In a dial-out connection, indicates the participant’s phone number dialed by the MCU for each channel. • MCU Phone Number – In a dial-in connection, indicates the MCU number dialed by the participant. In a dial-out connection, indicates the MCU (CLI) number as seen by the participant. This is the number entered in the MCU Number field in the Network Service.
Tx - Video Sync Loss	When checked, indicates a video synchronization problem in the outgoing channel from the MCU. The counter indicates the sync-loss count.
Rx - Video Sync Loss	When checked, indicates a video synchronization problem in the incoming channel from the endpoint. The counter indicates the sync-loss count.
Content Token	A check mark indicates that the participant is the current holder of the Content Token.

The **Connected Media** and **Channels Used** fields of an **Audio Only** participant are displayed as follows:

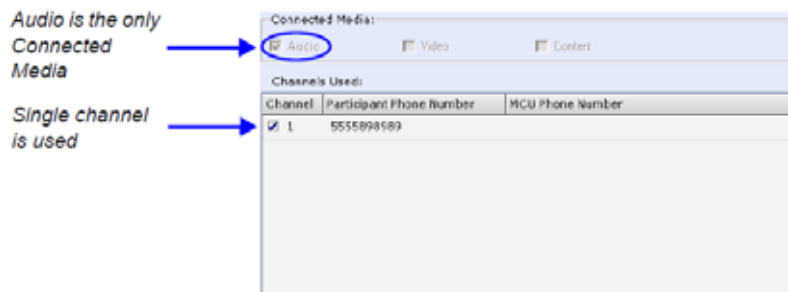

Monitoring Telepresence Participant Properties

A **Telepresence** status indicator is displayed in the **Participant Properties - Advanced** tab when monitoring conference participants.

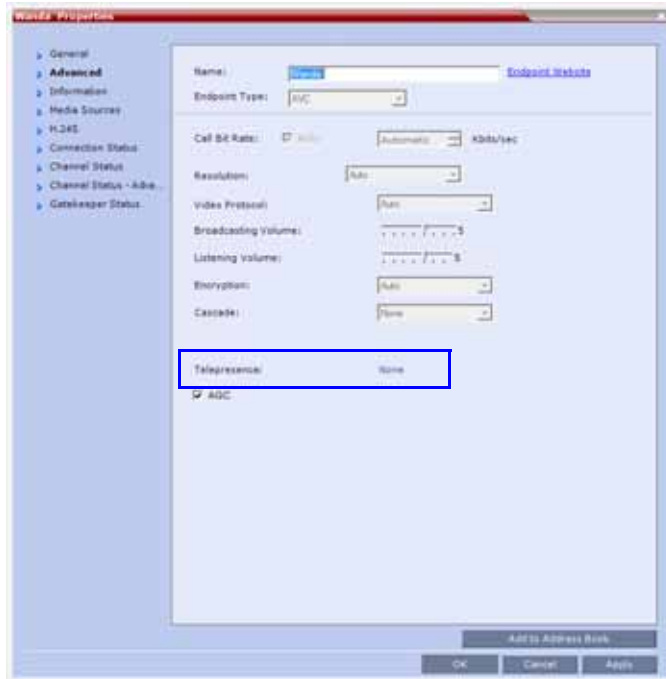

The Telepresence mode of the participant is indicated:

- **RPX** - The participant's endpoint is transmitting 4:3 video format.
- **TPX** - The participant's endpoint is transmitting 16:9 video format.
- **None** - The participant's endpoint is neither RPX nor TPX.

Recording and Streaming Conferences

Conferences running on the Collaboration Server can be recorded using the Polycom® RealPresence® Media Suite in the following ways:

- The Polycom® RealPresence® Media Suite dials in MCU for conference recording via a SIP interface from the Polycom® RealPresence® Media Suite. From the Polycom® RealPresence® Media Suite Administration UI, you can start a conference recording by dialing out to a Collaboration Server. After the Collaboration Server gets the request from the Polycom® RealPresence® Media Suite, the recording will start if the recording is enabled on the Collaboration Server. During the conference recording, you can pause or stop the recording from the Polycom® RealPresence® Media Suite Administration UI. For more information on how to start a recording by dialing out to an inter-operable endpoint see the *Polycom® RealPresence® Media Suite User's Guide*.
- Collaboration Server dials out to Polycom® RealPresence® Media Suite for a conference recording. Recording conferences is enabled via a dial-out Recording Link, which is a dial-out connection from the conference to the recording system.



Note: SVC Conferencing Mode

Conference recording is not available in SVC Conferencing Mode.

The recording system can be installed at the same site as the conferencing MCU or at a remote site. Several MCU's can share the same recording system.

Recording conferences is enabled via a Dial Out Recording Link, which is a dial-out connection from the conference to the recording system.

Recording can start automatically, when the first participant connects to a conference, or on request, when the Collaboration Server user or conference chairperson initiates it.

Multiple Dial Out Recording Links may be defined.

Conference Dial Out Recording Links can be associated on the Collaboration Server with Virtual Recording Rooms (VRR), created and saved on the Polycom® RealPresence® Media Suite.

Each Dial Out Recording Link defined on the Collaboration Server can be given a descriptive name and can be associated with one VRR saved on the Polycom® RealPresence® Media Suite.

The following guidelines apply:

- A Dial Out Recording Link that is being used by an ongoing conference cannot be deleted.
- A Dial Out Recording Link that is assigned to a Profile cannot be deleted.
- The Dial Out Recording Link supports H.264 High Profile with H.323 connections.
- While a Profile is being used in an ongoing conference, it cannot have a different Dial Out Recording Link assigned to it.
- Up to 100 Dial Out Recording Links can be listed for selection in the Conference Profile.

- Multiple Dial Out Recording Links are supported in Continuous Presence and Video Switched conferences.
- The number of Dial Out Recording Links available for selection is determined by the value of the `MAXIMUM_RECORDING_LINKS` System Flag in `system.cfg`. Default value is 20 Dial Out Recording Links.
- The Dial Out Recording Link can be encrypted when recording from an encrypted conference to the Polycom® RealPresence® Media Suite that is set to encryption. For more details, see [Dial Out Recording Link Encryption](#).

Creating Multiple Virtual Recording Rooms on the Polycom® RealPresence® Media Suite

If the environment includes a Polycom® RealPresence® Media Suite and you want to associate Dial Out Recording Links on the Collaboration Server with Virtual Recording Rooms (VRR) created and saved on the Polycom® RealPresence® Media Suite, perform the following operations on the Polycom® RealPresence® Media Suite:

- 1 Modify the parameters of a recording Template to meet the recording requirements.
- 2 Assign the modified recording Template to a VRR. The recording and streaming server will assign a number to the VRR.
- 3 Repeat [step 1](#) and [step 2](#) for each VRR to create additional VRRs.

For more information see the *Polycom® RealPresence® Media Suite User Guide*.

Configuring the Collaboration Server to Enable Recording

To make recording possible the following components you must be configured on the Collaboration Server:

- **Dial Out Recording Link** – Defines the connection between the conference and the recording system.
- **Recording-enabled Conference IVR Service** – Recording DTMF codes and messages must be set in the Conference IVR Service to enable recording-related voice messages to be played and to allow the conference chairperson to control the recording process using DTMF codes.
- **Recording-enabled Profile** – Recording must be enabled in the Conference Profile assigned to the recorded conference.

If Multiple Dial Out Recording Links are being defined for Virtual Recording Rooms (VRRs), created and saved on the Polycom® RealPresence® Media Suite, the `MAXIMUM_RECORDING_LINKS` System Flag in `system.cfg` can be modified to determine the number of Dial Out Recording Links available for selection.

- **Range:** 20 - 100
- **Default:** 20

The flag value can be modified by selecting the System Configuration option from the Setup menu. For more information, see [Modifying System Flags](#).

Defining the Dial Out Recording Link

The Dial Out Recording Link is defined once and can be updated when the H.323 alias or the IP address (of the recording system) is changed. Only one Dial Out Recording Link can be defined in the Collaboration Server. Its type must be **H.323**.



In Multiple Networks Configuration, Dial Out Recording Links use the default Network Service to connect to conferences, therefore the recording system must be defined on the default IP Network Service to enable the recording.

To define a Dial Out Recording Link:

- 1 In the **RMX Management** pane, click **Recording Links** (📁).
- 2 In the **Recording Links** list, click the **New Recording Link** (➕) button.

The **New Recording Link** dialog box is displayed.

- 3 Define the following parameters:

Recording Link Parameters

Parameter	Description
Name	Displays the default name that is assigned to the Recording Link. If multiple Recording Links are defined, it is recommended to use a descriptive name to be indicate the VRR to which it will be associated. Default: Recording Link
Type	Select the network environment: <ul style="list-style-type: none"> • H.323 • SIP

Recording Link Parameters

Parameter	Description
IP Address	<ul style="list-style-type: none"> If no gatekeeper is configured, enter the IP Address of the Polycom® RealPresence® Media Suite. Example: If the Polycom® RealPresence® Media Suite IP address is 173.26.120.2, enter 173 . 26 . 120 . 2. If a gatekeeper is configured, you can either enter the IP address or an alias (see the alias description).
Alias Name	<p>If using the endpoint's alias instead of IP address, first select the alias type and then enter the endpoint's alias.</p> <p>If you are associating this recording link to a VRR on the Polycom® RealPresence® Media Suite, define the alias as follows:</p> <ul style="list-style-type: none"> If you are using the Polycom® RealPresence® Media Suite IP address, enter the VRR number in the Alias field. For example, if the VRR number is 5555, enter 5555. Alternatively, if the Alias Type is set to H.323 ID, enter the Polycom® RealPresence® Media Suite IP address and the VRR number in the format: <code><RealPresence_Media_Suite_IP_Address>##<VRR number></code> For example: If the Polycom® RealPresence® Media Suite IP is 173.26.120.2 and the VRR number is 5555, enter 173 . 26 . 120 . 2##5555
Alias Type	Depending on the format used to enter the information in the IP address and Alias fields, select H.323 ID or E.164 (for multiple Recording links). E-mail ID and Participant Number are also available.

4 Click OK.

The Dial Out Recording Link is added to the Collaboration Server unit.

Enabling the Recording Features in a Conference IVR Service

To record a conference, a Conference IVR Service in which the recording messages and DTMF codes are activated must be assigned to the conference. The default Conference IVR Service shipped with the Collaboration Server includes the recording-related voice messages and default DTMF codes that enable the conference chairperson to control the recording process from the endpoint. You can modify these default settings.

To modify the default recording settings for an existing Conference IVR Service:

- 1** In the **RMX Management** pane, click **IVR Services** .

The IVR Services are listed in the **IVR Services** list pane.

- 2** To modify the default recording settings, double-click the Conference IVR Service or right-click and select **Properties**.

The **Conference IVR Service Properties** dialog box is displayed.

- 3 To assign voice messages other than the default, click the **General** tab and scroll down the list of messages to the recording messages.



- 4 Select the **Recording In Progress** message, and then select the appropriate message file (by default, **Recording_in_Progress.wav**) from the file list to the right of the field.
- 5 Select the **Recording Failed** message, and then select the appropriate message file (by default, **Recording_Failed.wav**) from the file list to the right of the field.
- 6 To modify the default DTMF codes, click the **DTMF Codes** tab.
- 7 To modify the DTMF code or permission for a recording function:
 - a Select the desired DTMF name (**Start**, **Stop** or **Pause Recording**), click the DTMF code entry and type a new code.

Default DTMF Codes assigned to the recording process

Recording Operation	DTMF Code	Permission
Start or Resume Recording	*2	Chairperson
Stop Recording	*3	Chairperson
Pause Recording	*1	Chairperson

- b In the **Permission** entry, select whether this function can be used by all conference participants or only the chairperson.
- 8 Click **OK**.

Enabling the Recording in the Conference Profile

To be able to record a conference, the recording options must be enabled in the Conference Profile assigned to it. You can add recording to existing Profiles by modifying them.


To enable recording for a conference:

- 1 In the **Collaboration Server Management** pane, click **Conference Profiles** (📁).
The **Conference Profiles** list is displayed.
- 2 Create a new profile by clicking **New Profile** (📄), or modify an existing profile by double-clicking or right-clicking an existing profile and then selecting **Profile Properties**.



If creating a new profile, complete the conference definition. For more information on creating Profiles see [Defining AVC CP Conferencing Profiles](#).

- 3 In the **New Profile** dialog box, click the **Recording** tab.

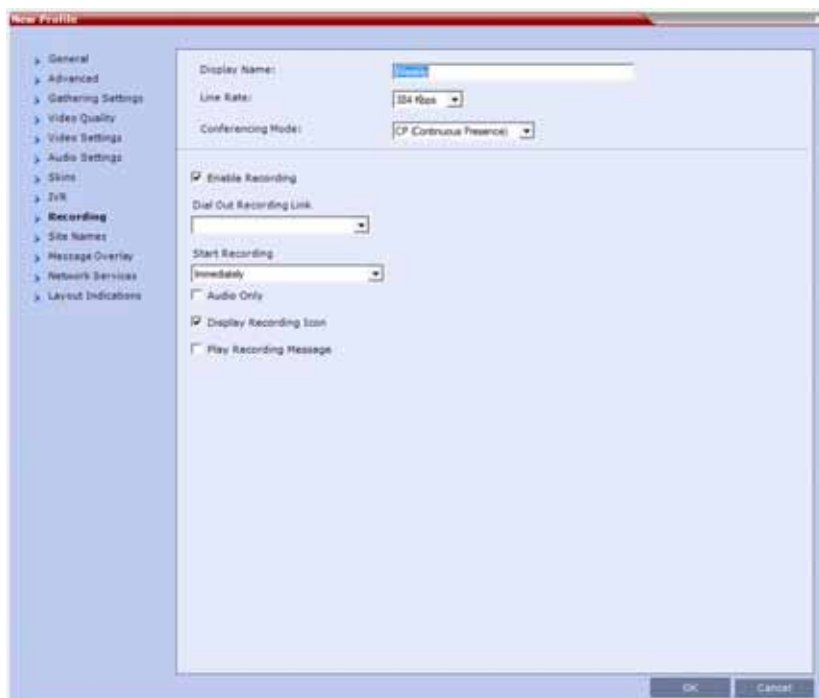

- 4 Select the **Enable Recording** check box.
- 5 Define the following parameters

Conference Profile Recording Parameters

Parameter	Description
Enable Recording	Select to enable Recording Settings in the dialog box.
Recording Link	Select a recording link for the conference from the list.

Conference Profile Recording Parameters

Parameter	Description
Start recording	Select one of the following: <ul style="list-style-type: none"> • Immediately – conference recording is automatically started upon connection of the first participant. • Upon Request – the operator or chairperson must initiate the recording (manual).
Audio only	Select this option to record only the audio channel of the conference. Note: An Audio Only Recording Link cannot be used to record a conference if there are no Voice resources allocated in the Video/Voice Port Configuration.
Display Recording Icon	Select this option to display Recording Indications to all conference participants informing them that the conference is being recorded. The recording icon is replaced by a Paused icon when conference recording is paused. For more information see New AVC CP Profile - Layout Indications Parameters and Recording Indications
Play Recording Message	Selected by default. A message is played to all participants announcing that the conference is being recorded. Un check this box to prevent the announcement from being played.

6 Click OK.

Recording is enabled in the Conference Profile.

Dial Out Recording Link Encryption

The Dial Out Recording Link can be encrypted when recording an encrypted conference. The encryption of the Dial Out Recording Link is enabled when Encryption is selected in the Conference Profile on the Collaboration Server and on the Polycom® RealPresence® Media Suite, and the system flag `ALLOW_NON_ENCRYPT_RECORDING_LINK_IN_ENCRYPT_CONF` is set to NO.

Dial Out Recording Link Encryption Guidelines:

- The Dial Out Recording Link connection type must be **H.323**.
- The Dial Out Recording Link uses the AES encryption format.
- The Polycom® RealPresence® Media Suite recorder must be set to support encryption. For more information see the *Polycom® RealPresence® Media Suite User Guide*.
- Encryption must be selected in the Conference Profile.

Dial Out Recording Link Encryption Flag Setting

Dial Out Recording Links are treated as regular participants, however if the `ALLOW_NON_ENCRYPT_RECORDING_LINK_IN_ENCRYPT_CONF` System Flag is set to **YES** a non-encrypted Dial Out Recording Link is to be allowed to connect to an encrypted conference.

The following table summarizes the connection possibilities for a Dial Out Recording Link that is to be connected to a conference for each of the conference profile and Entry Queue encryption options.

Connections by Recording Link and Conference Encryption Settings

Conference Profile Setting	Dial Out Recording Link Connection Status according to flag: ALLOW_NON_ENCRYPT_RECORDING_LINK_IN_ENCRYPT_CONF	
	YES	NO
Encrypt All	Connected encrypted if possible, otherwise connected non-encrypted.	Connected only if encrypted, otherwise disconnected.
No Encryption	Connected non-encrypted.	Connected non-encrypted.
Encrypt when possible	Connected encrypted if possible, otherwise connected non-encrypted.	Connected encrypted if possible, otherwise connected non-encrypted.

Dial Out Recording Link Settings

The recording of encrypted conferences via an encrypted Dial Out Recording Link is enabled in the Conference Profile by:

- 1 Selecting the **Encryption** option (**Encrypt All** or **Encrypt when Possible**) in the **Advanced** tab.



For more details, see [Packet Loss Compensation - LPR and DBA](#).

- 2 Setting the Recording options in the **Recording** tab. For more details, see [Enabling the Recording in the Conference Profile](#).

Managing the Recording Process

When a conference is started and recording is enabled in its Profile, the system will automatically start the recording if the Start Recording parameter is set to immediately. If it is set to Upon Request, the system waits for the chairperson or Collaboration Server user's request. Once the recording is initiated for a conference, the MCU connects to the recording device (Polycom® RealPresence® Media Suite). The connection that is

created between the conference and the recording device is represented as a special participant (Recording) whose name is the Recording Link. Once the recording has started, the recording process can be stopped and restarted from the Chairperson's endpoint (using DTMF codes) or from the Collaboration Server Web Client. After the recording process has finished, the recording can be identified in the Polycom® RealPresence® Media Suite by its Collaboration Server conference name.



A conference participant and the Recording Link cannot have identical names, otherwise the recording process will fail.

Recording Layout

















When the video layout of the conference is set to Auto Layout, the recording of the conference will now include all the conference participants and not n-1 participants as in previous versions.

In the new Auto Layout algorithm, the Recording Link is counted as a participant, and therefore it is excluded from the layout display used for the recording. The layout used for the other participants will behave as in the standard Auto Layout behavior.





The Recording Layout can be changed during an ongoing conference in the same manner as for any other conference participant. For more information see the [Participant Level Monitoring](#).

The default settings for Auto Layout for the conference and the Recording Link are summarized in the following table:

Recording Link Default Layout Settings (Auto Layout Mode)

Number of Participants	Conference Default Auto Layout Settings	Recording Link Auto Layout Settings
0	N/A	N/A
1		
2		
3		
4		
5		
6		
7		
8		

Recording Link Default Layout Settings (Auto Layout Mode)

Number of Participants	Conference Default Auto Layout Settings	Recording Link Auto Layout Settings
9		
10 or more		



When the Polycom® RealPresence® Media Suite dials in to the MCU for conference recording, you can choose the video layout from the Polycom® RealPresence® Media Suite Admin UI. The following layout is supported by Collaboration Server.






- **Auto:** automatic layout setting at the Collaboration Server side.
- **Single View:** record 1x1 layout.
- **Dual View:** record 1x2 layout.

The default settings for Auto Layout of the Recording Link cannot be changed, and the Auto Layout flags do not apply to the Recording Link Auto Layout default settings.

Using the Collaboration Server Web Client to Manage the Recording Process

To manage the recording process using the right-click menu:

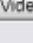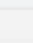- » Right-click the Recording participant in the conference and select from one of the following options:


Name	Status	Role	IP Address	Alias Na	Network	Dialing	Audio	Video	
Logistics (5 participants)									
Recording	Conn	Recordi	172.22.	Recordi	H.323	Dial			
Bill Watson	Conn		172.22.		H.323	Dial			
Brad Peterson	Conn		172.22.		H.323	Dial			
Holly Bramson	Conn		172.22.		H.323	Dial			
Maria Vallance	Conn		192.22.		H.323	Dial			

Recording Participant Right-click Options

Name	Description
Suspend Video	The Suspend Video option prevents the incoming video of the recording link participant to be part of the conference layout. The Recording Link participant is set by default to Suspend Video. The Suspend Video option toggles with the Resume Video option.
Resume Video	The Resume Video option enables the incoming video of the recording link participant to be part of the conference layout. This feature may be used to play back previously recorded video or audio feeds in the conference layout. For more information, see the <i>Polycom® RealPresence® Media Suite User Guide</i> .
Participant Properties	The Participant Properties option displays viewing only information for monitoring, e.g. communication capabilities and channels used to connect to the conference. Users will not be able to perform any functional requests from this window, i.e. disconnect, change layout and mute.




To manage the recording process using the Conference toolbar:

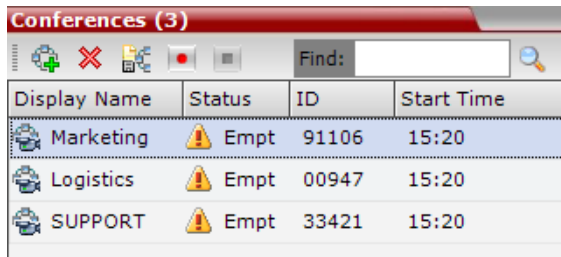- » In the **Conferences** pane, click one of the following buttons in the Conference tool bar.



The recording buttons will only be displayed in the conference tool bar for a conference that is recording-enabled.

Conferences List - Recording Tool bar buttons

Button	Description
	Start/Resume recording. This button toggles with the Pause button.
	Stop recording.
	Pause recording. This button toggles with the Start/Resume button.

Using DTMF Codes to Manage the Recording Process

By entering the appropriate DTMF code on the endpoint, the chairperson can **Stop** the recording (*3), **Pause** it (*1), or **Start/Resume** the recording (*2). For more information on managing the recording process via DTMF codes, see the *Polycom® RealPresence® Media Suite User Guide*.

Conference Recording with Codian IP VCR

Conference recording is available with Codian VCR 2210, VCR 2220 and VCR 2240.

Recording between the Collaboration Server and the Codian VCR is enabled by adding an IP participant to the recorded conference that acts as a link between the conference and the recording device. This participant is identified as a recording link to the Codian VCR according to the product ID sent from the VCR during the connection phase, in the call setup parameters.

The video channel between the conference and the recording device is unidirectional where the video stream is sent from the conference to the recorder.

If the Codian VCR opens a video channel to the conference - this channel is excluded from the conference video mix.

To record a conference running on the Collaboration Server using Codian recorder:

- » In the conference, define or add a dial-out participant using the Codian VCR IP address as the address for dialing.

Once added to the conference, the MCU automatically connects the participant (the link to Codian VCR) and the recording is automatically started on the Codian VCR.

A connection can also be defined on the Codian VCR, dialing into the recorded conference using the MCU prefix and the Conference ID as for any other dial-in participant in the conference.

Monitoring the recording participant

This connection is monitored as any other participant in the conference. The connection can also be monitored in the Codian VCR web client.

Users Connections and Notes

Collaboration Server Users

Collaboration Server Web Client users are defined in the User's table and can connect to the MCU to perform various operations.



Note: Resource Capacities and Operational Specifications

For information about Resource Capacities and other operational specifications, see the *RealPresence® Collaboration Server (RMX) Hardware Guide* specific to your system.

User Types

The authorization level determines a user's capabilities within the system. The MCU supports the following user Authorization Levels:

- Administrator
- Operator
- Machine Account (Application-user)
- Administrator Read-only
- Chairperson
- Auditor

Administrator

An administrator can define and delete other users, and perform all configuration and maintenance tasks.

A default user with administrator authorization is provided by all MCU types to be used with Polycom products, having the following details:

- **User name** - SA_PLCM_Integration
- **Password** - Polycom_CS

This user is not considered a new user. Therefore, no `New SA_PLCM_Integration user message` should be generated.

Since this user is provided in secure mode (JITC) as well, an active alarm is displayed upon login, indicating the existence of an SA_PLCM_Integration default user, and recommending replacing it with an alternate one for security reasons.

This user should be recognized by the DMA/XMA as well, thus enable their logging into the MCU without any undue messages, with the exception of the active alarm stated above upon logging into a secure machine.

Administrator Read-only

A user with Administrator permission with the same viewing and monitoring permissions of a regular Administrator. However, this user is limited to creating system backups and cannot perform any other configuration or conference related operation.

Operator

An Operator can manage Meeting Rooms, Profiles, Entry Queues, and SIP Factories, and can also view the Collaboration Server configurations, but cannot change them.

Administrator and Operator users can verify which users are defined in the system. Neither of them can view the user passwords, but an Administrator can change a password.

Chairperson

A Chairperson can only manage ongoing conferences and participants, in both single and cascading MCUs scenarios. The Chairperson does not have access to the Collaboration Server configurations and utilities.

Auditor

An **Auditor** can only view Auditor Files and audit the system.

Machine Account

User names can be associated with servers (machines) to ensure that all users are subject to the same account and password policies. For more details, see [Machine Account](#) later on this chapter.

Listing Users

The **Users** pane lists the currently defined users in the system and their authorization levels. The pane also enables the administrators to add and delete users.

The system is shipped with a default Administrator user called POLYCOM, whose password is POLYCOM. However, once you have defined other authorized Administrator users, it is recommended to remove the default user.

You can view the list of users that are currently defined in the system.

To view the users currently defined in the system:

- 1 In the **RMX Management** pane, click **Users** (.

The **Users** pane is displayed.



User Name	Authorization Level	Disabled	Locked
POLYCOM	Administrator	No	No
chair	Chairperson	No	No
SUPPORT	Administrator	No	No

The list includes three columns: **User Name**, **Authorization Level** and **Disabled**:

- **User Name** - The login name used by the user to connect to the MCU.
- The **Authorization** - Indicates the Authorization Level assigned to the User: **Administrator**, **Administrator Read-only**, **Operator**, **Chairperson** or **Auditor**.
- **Disabled** - Indicates whether the user is disabled and cannot access the system unless enabled by the administrator. For more details, see [Disabling a User](#).

Locked indicates whether the user has been locked out and cannot access the system unless enabled by the administrator.

In Ultra Secure Mode (**ULTRA_SECURE_MODE=YES**), Users can be automatically disabled or locked out by the system when they do not log into the Collaboration Server application for a predefined period or if their login session does not meet Enhanced Security requirements. Users can be manually disabled by the administrator. For more details, see [Notes](#).


Adding a New User


Administrators can add new users to the system.



The User Name and Password must be in ASCII.

To add a new user to the system:

- 1 In the **RMX Management** pane, click **Users** (.
- 2 The **Users** pane is displayed.

- 3 Click **New User** () , or right-click anywhere in the pane and then click **New User**.
The **User Properties** dialog box opens.



The **User Properties** dialog box is shown with the following fields and controls:



- User Name:** A text input field.
- Password:** A text input field.
- Authorization Level:** A dropdown menu currently set to **Operator**.
- Associate with a machine**
- FQDN:** A text input field.
- OK** and **Cancel** buttons at the bottom.

- 4 In the **User Name** text box, enter the name of the new user. This is the login name used by the user when logging into the system.
- 5 In the **Password** text box, enter the new user's password. This will be the user's password when logging into the system.
- 6 In the **Authorization Level** list, select the user type: **Administrator**, **Administrator Read-Only**, **Operator**, **Chairperson** or **Auditor**.
- 7 To associate a user with a machine:
 - a In the **User Properties** dialog box, select the **Associate with a machine** check box.
 - b Enter the FQDN of the server that hosts the application who's application-user name is being added.
- 8 Click **OK**.
The **User Properties** dialog box closes and the new user is added to the system.

Deleting a User




To delete a user, you must have Administrator authorization. The last remaining Administrator in the Users list cannot be deleted.

- 1 In the **RMX Management** pane, click **Users** () .
- 2 Select the user and click **Delete** () , or right-click the user and then click **Delete User**.
The system displays a confirmation message.
- 3 In the **confirmation** dialog box, select **Yes** to confirm or **No** to cancel the operation.
If you select **Yes**, the user name and icon are removed from the system.

Changing a User's Password

Users with Administrator authorization can change their own password and other users' passwords. Users with Operator authorization can change their own password.

To change a user's password:

- 1 In the **RMX Management** pane, click **Users** .
- 2 Right-click the user and click **Change User Password**.
The **Change Password** dialog box opens.
- 3 Enter the **Old Password** (current), **New Password** and **Confirm the New Password**.




The Password must be in ASCII.


- 4 Click **OK**.
The user's password is changed.

Disabling a User

An administrator can disable an enabled user. An indication is displayed in the Users List when the User is disabled. An administrator can enable a disabled User.

To disable a user:

- 1 In the **RMX Management** pane, click **Users** .
- The Users pane is displayed.
- 2 In the **Users** pane, right-click the user to be disabled and select **Disable User** in the menu.
A confirmation box is displayed.

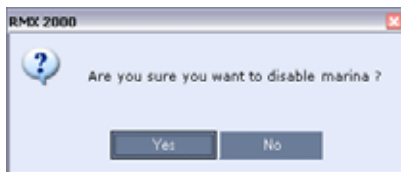


- 3 Click **YES**.
The User status in the **Users** list - **Disabled** column changes to **Yes**.


Enabling a User


An administrator can enable a User who was disabled automatically by the system (in the Ultra Secure Mode) or manually by the administrator.

To enable a user:

- 1 In the **RMX Management** pane, click **Users** ().
The **Users** pane is displayed.
- 2 Right-click the user to be enabled and select **Enable User**.
A confirmation box is displayed.
- 3 Click **YES**.
The User status in the **Users** list - **Disabled** column changes to **NO**.

Renaming a User**To rename a user:**

- 1 In the **RMX Management** pane, click **Users** ().
The Users pane is displayed.
- 2 Right-click the user to be renamed and select **Rename User**.
The **Rename User** dialog box is displayed.

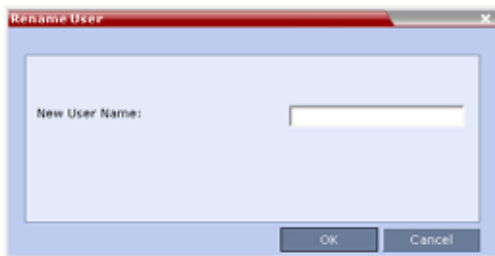

- 3 Enter the user's new name in the **New User Name** field and click **OK**.
The user is renamed and is forced to change his/her password.

Machine Account

User names can be associated with servers (machines) to ensure that all users are subject to the same account and password policies.

For enhanced security reasons it is necessary for the Collaboration Server to process user connection requests in the same manner, whether they be from regular users accessing the Collaboration Server via the Collaboration Server Web Browser / RMX Manager.

Regular users can connect from any workstation having a valid certificate while application-users representing applications can only connect from specific servers. This policy ensures that a regular user cannot impersonate an application-user to gain access to the Collaboration Server in order to initiate an attack that would result in a Denial of Service (DoS) to the impersonated application.

The connection process for an application-user connecting to the Collaboration Server is as follows:

- 1 The application-user sends a connection request, including its TLS certificate, to the Collaboration Server.
- 2 The Collaboration Server searches its records to find the FQDN that is associated with the application-user's name.

- 3 If the FQDN in the received certificate matches that associated with application-user, and the password is correct, the connection proceeds.

Guidelines for defining a machine account

- Application-users are only supported when TLS security is enabled and Request peer certificate is selected. TLS security cannot be disabled until all application-user accounts have been deleted from the system.
- For Secure Communications, an administrator must set up on the Collaboration Server system a machine account for the RealPresence DMA system with which it interacts. This machine account must include a fully-qualified domain name (FQDN) for the RealPresence DMA system.
- Application-user names are the same as regular user names.
Example: the DMA application could have an application-user name of `DMA1`.
- The FQDN can be used to associate all user types: Administrator, Operator with the FQDN of a server.
- Multiple application-users can be configured the same FQDN name if multiple applications are hosted on the same server
- If the system is downgraded the application-user's FQDN information is not deleted from the Collaboration Server's user records.
- A System Flag, `PASS_EXP_DAYS_MACHINE`, enables the administrator to change the password expiration period of application-user's independently of regular users. The default flag value is 365 days.
- The server hosting an application-user whose password is about to expire will receive a login response stating the number of days until the application-user's password expires. This is determined by the value of the `PASSWORD_EXPIRATION_WARNING_DAYS` System Flag. The earliest warning can be displayed 14 days before the password is due to expire and the latest warning can be displayed 7 days before passwords are due to expire. An Active Alarm is created stating the number of days before the password is due to expire.
- The `MIN_PWD_CHANGE_FREQUENCY_IN_DAYS` System Flag does not effect application-user accounts. Applications typically manage their own password change frequency.
- If an application-user identifies itself with an incorrect FQDN, its account will not be locked, however the event is written to the Auditor Event File.
- If an application-user identifies itself with a correct FQDN and an incorrect password, its account will be locked and the event written to the Auditor Event File.
- An application-user cannot be the last administrator in the system. The last administrator must be regular user.
- User names are not case sensitive.

Monitoring

- An application-user and its connection is represented by a specific icon.

Active Directory

- When working with Active Directory, the RealPresence DMA system cannot be registered within Active Directory as regular users. The RealPresence DMA system application-users must be manually.
- The only restriction is that TLS mode is enabled together with client certificate validation.

- If the above configuration are set off it will not be possible to add machine accounts.
- When setting the TLS mode off the system should check the existence of a machine account and block this operation until all machine accounts are removed.

Connections

The Collaboration Server enables you to list all connections that are currently logged into the MCU, e.g. users, servers or API users. The MCU issues an ID number for each login. The ID numbers are reset whenever the MCU is reset.

Viewing the Connections List

To list the users who are currently connected to the MCU:

- 1 In the **Collaboration Server Management** pane, click **Connections** ().

A list of connected users is displayed in the **Connections** pane.



Login Name	Authorization Level	Login Time	Workstation
POLYCOM	Administrator	9/20/2006 4:44 PM	EMA.F5-VARDAL-LT
POLYCOM	Administrator	9/20/2006 7:18 PM	EMA.F5-Z1VN
POLYCOM	Administrator	9/20/2006 10:46 AM	F3-NOAL

The information includes:

- The user's login name.
- The user's authorization level (**Chairperson, Operator, Administrator** or **Auditor**).
- The time the user logged in.
- The name/identification of the computer used for the user's connection.

Notes

Notes are the electronic equivalent of paper sticky notes. You can use notes to write down questions, important phone numbers, names of contact persons, ideas, reminders, and anything you would write on note paper. Notes can be left open on the screen while you work.

Using Notes

Notes can be read by all system Users concurrently connected to the MCU. Notes that are added to the Notes list are updated on all workstations by closing and re-opening the Notes window. Notes can be written in any Unicode language.


To create a note:

- 1 On the **Collaboration Server** menu, select **Administration > Notes**.

The **Notes** window opens.



Note	Last Modified	Modified By	Modified From
Haggai (#482) is using 191.95	7/13/2006 8:38 AM	POLYCOM	EMA.F3-HAGAIGE
	7/18/2006 11:31 AM	POLYCOM	EMA.F6-ANDREWK
Ori (#289) is working on 189.178	7/12/2006 9:46 AM	POLYCOM	EMA.F3-HAGAIGE
test	8/16/2006 2:36 PM	POLYCOM	EMA.F4-BBI-LAP

- 2 In the **Notes** toolbar, click **New Note** () , or right-click anywhere inside the **Notes** window and select **New Note**.
- 3 In the **Note** dialog box, type the required text and click **OK**.

The new note is saved and closed. The **Notes** list is updated, listing the new note and its properties:

- **Note** – The beginning of the note’s text.
- **Last Modified** – The date of creation or last modification.
- **Modified By** – The Login Name of the user who last modified the note.
- **Modified From** – The Client Application and Workstation from which the note was created or modified.




Note	Last Modified	Modified By	Modified From
Haggai (#483) is using 191.95	7/13/2006 8:38 AM	POLYCOM	EMA.F3-HAGAIGE

To open or edit a note:

- » Double-click the entry to edit, or right-click the entry and select **Note Properties**.

The note opens for viewing or editing.

To delete a note:

- 1 In the **Notes** list, select the entry for the note to delete and click **Delete Note** () , or right-click the entry and select **Delete Note**.

A **delete confirmation** dialog box is displayed.

- 2 Click **OK** to delete the note, or click **Cancel** to keep the note.

IP Network Services

IP Network Services enable the Collaboration Server to function within IP network environments. They include the network parameters required for the MCU to connect with other IP devices on the same network or outside the network through a firewall.

Collaboration Server IP Network Services Overview

Two types of IP Network Services are defined for the Collaboration Server:

- Management Network Service
- Default IP Service (Conferencing Service)

Connection between the Collaboration Server management applications (Web Client And RMX Manager) and participant connections to conferences (Dial in, dial out) are supported within the following IP addressing environments: IPv4, IPv6 and IPv6 & IPv4

When IPv4 is selected, IPv6 fields are hidden and conversely when IPv6 is selected, IPv4 fields are hidden. When IPv6 & IPv4 is selected both IPv6 and IPv4 fields are displayed.




For the purposes of comprehensive documentation, all screen captures in this chapter pertaining to RealPresence Collaboration Servers (RMX) 1800/2000/4000 show the dialog boxes as displayed with IPv6 & IPv4 selected.

For more information on IPv6, see [LAN Redundancy](#).

When the RMX is configured for IPv4 and IPv6 Addressing, the addition of the `sdp-anat` option tag in the SIP Require and SIP Supported headers allows a mixture of IPv4 and IPv6 addressing to be specified by the Session Description Protocol (SDP). For more information see [Management Network \(Primary\)](#).

The IP Network Services are configured by selecting this option in the RMX Management pane of the Collaboration Server Web Client/RMX Manager application.

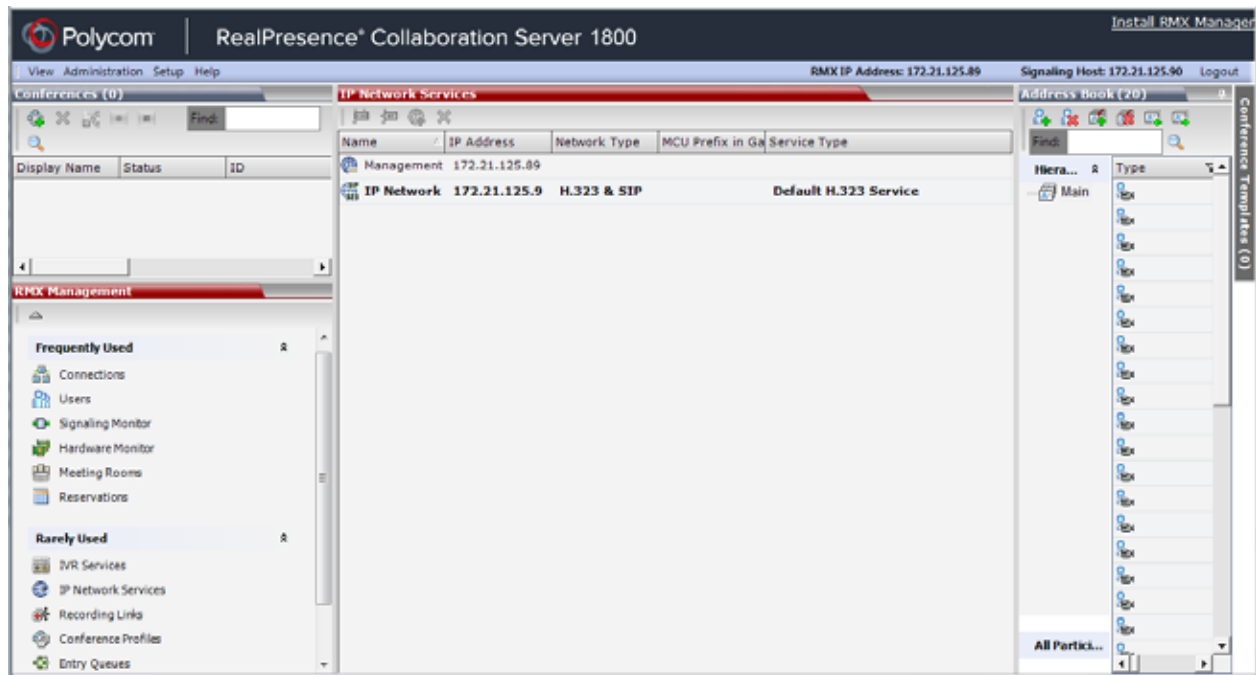

Management Network (Primary)

The Management Network is used to connect between the Collaboration Server and the management applications (Collaboration Server Web Client or RMX Manager application) and enable these applications to control the MCU. It contains the network parameters, such as the IP address of the MCU's control unit, required for connection between the Collaboration Server and the management applications. You can use this IP address to connect to the control unit should the MCU become corrupted or inaccessible.

During First Time Power-up, the Management Network parameters can be set either via a USB key or by using a cable to create a private network. For more information, see First Entry Power-up and Configuration and Appendix G - Configuring Direct Connections to the Collaboration Server in the RealPresence Collaboration Server (RMX) Getting Started Guide.

Default IP Service (Conferencing Service)

The Default IP Service (Conferencing Service) is used to configure and manage communications between the Collaboration Server and conferencing devices such as endpoints, gatekeepers, SIP servers, etc.

The Default IP Service contains parameters for:

- Signaling Host IP Address
- External conferencing devices

Calls from all external IP entities are made to the Signaling Host, which initiates call set-up and assigns the call to the appropriate media card.

Conferencing related definitions such as environment (H.323 or SIP) are also defined in this service.

Most of the Default IP Service is configured by the Fast Configuration Wizard, which runs automatically should the following occur:

- First time power-up.
- Deletion of the Default IP Service, followed by a system reset.

For more information, see First Entry Power-up and Configuration in the *Polycom® RealPresence Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*



Changes made to any of these parameters only take effect when the Collaboration Server is reset. An Active Alarm is created when changes made to the system have not yet been implemented and the MCU must be reset.

Using IPv6 Networking Addresses for Collaboration Server Internal and External Entities

IPv6 addresses can be assigned to both Collaboration Server (**Internal**) and **External Entity** addresses.

Collaboration Server Internal Addresses (Default Management Network Service):

- Control Unit
- Signaling Host
- Shelf Management
- MPM1 (Media Card)
- MPM2 (Media Card)

External Entities:

- Gatekeepers (Primary & Secondary)
- SIP Proxies on EMA
- DNS Servers
- Default Router
- Defined participants

IPv6 Addressing Guidelines

- Internet Explorer 7™ is required for the Collaboration Server Web Client and RMX Manager to connect to the Collaboration Server using IPv6.
- The default IP address version is IPv4.
- The IP address field in the Address Book entry for a defined participant can be either IPv4 or IPv6. A participant with an IPv4 address cannot be added to an ongoing conference while the Collaboration Server is in IPv6 mode nor can a participant with an IPv6 address be added while the Collaboration Server is in IPv4 mode.

An error message, Bad IP address version, is displayed and the New Participant dialog box remains open so that the participant's address can be entered in the correct format.

- Participants that do not use the same IP address version as the Collaboration Server in ongoing conferences launched from Meeting Rooms, Reservations and Conference Templates, and are disconnected. An error message, Bad IP address version, is displayed.
- IP Security Protocols (IPSec) are not supported.

Modifying the Management Network

The Management Network parameters need to be modified if you want to:


- Connect directly to the Collaboration Server from a workstation
- Modify routes
- Modify DNS information

To view or modify the Management Network Service:

- 1 In the **RMX Management** pane, click the **IP Network Services** (🌐) button.
- 2 In the **IP Network Services** list pane, double-click the **Management Network** (🌐) entry.

The **Management Network Properties - IP** dialog box opens

Management Network Properties - Collaboration Servers (RMX) 2000/4000

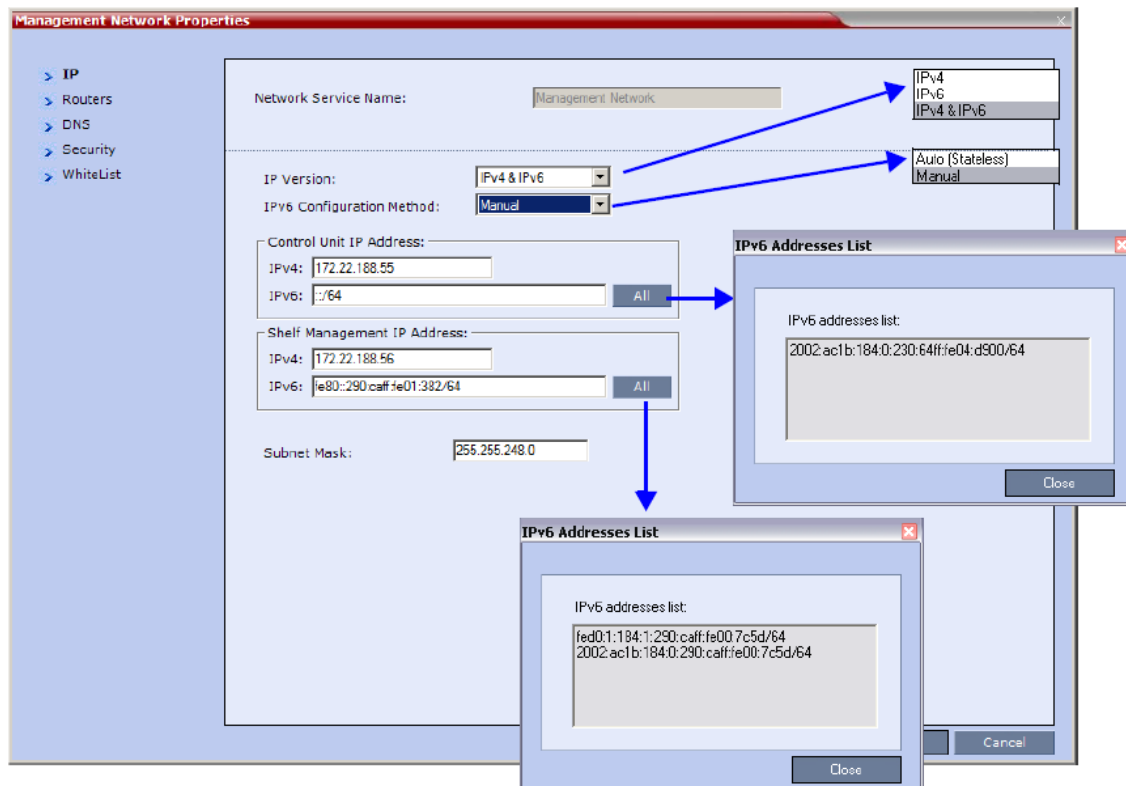

On the RealPresence Collaboration Server (RMX) 2000 an additional tab called **LAN Ports** appears. For more information on the **LAN Ports** tab see Step 8.

Management Network Properties - Collaboration Server (RMX) 1800

- 3 Modify the following fields:

Default Management Network Service – IP

Field	Description	
Network Service Name	Displays the name of the Management Network. This name cannot be modified. Note: This field is displayed in all Management Network Properties tabs.	
IP Version	IPv4	Select this option for IPv4 addressing only.
	IPv6	Select this option for IPv6 addressing only.
	IPv4 & IPv6	Select this option for both IPv4 and IPv6 addressing. Note: If the gatekeeper cannot operate in IPv6 addressing mode, the H323_RAS_IPV6 System Flag should be set to NO . For more information see The CS System Flags .


Default Management Network Service – IP

Field	Description	
IPv6 Configuration Method Manual Configuration Method is recommended with IPv6.	Auto (Stateless)	Select this option to allow automatic generation of the following addresses: <ul style="list-style-type: none"> • Link-Local (For internal use only) • Site-Local • Global
	Manual	Select this option to enable manual entry of the following addresses: <ul style="list-style-type: none"> • Site-Local • Global Manual configuration of the following address types is not permitted: <ul style="list-style-type: none"> • Link-Local • Multicast • Anycast
Control Unit IP Address	IPv4	The IPv4 address of the Collaboration Server. This IP address is used by the Collaboration Server Web Client to connect to the Collaboration Server.
	IPv6	The IPv6 address of the MCU. This IP address is used by the Collaboration Server Web Client to connect to the Collaboration Server. <p>Note: Internet Explorer 7™ is required for the Collaboration Server Web Client to connect to the MCU using IPv6.</p>
	All	Click the All button to display the IPv6 addresses as follows: <ul style="list-style-type: none"> • Auto - If selected, Site-Local and Global site addresses are displayed. • Manual - If selected, only the Manual site address is displayed.

Default Management Network Service – IP

Field	Description	
Shelf Management IP Address	IPv4	The IPv4 address of the RMX Shelf Management Server. This IP address is used by the Collaboration Server Web Client for Hardware Monitoring purposes.
Collaboration Server 2000/4000 only)	IPv6	The IPv6 address of the RMX Shelf Management Server. This IP address is used by the Collaboration Server Web Client for Hardware Monitoring purposes. Note: Internet Explorer 7™ is required for the Collaboration Server Web Client to connect to the MCU using IPv6.
	All	Click the All button to display the IPv6 addresses as follows: <ul style="list-style-type: none"> • Auto - If selected, Site-Local and Global site addresses are displayed. • Manual - If selected, only the Manual site address is displayed.
Subnet Mask	Enter the subnet mask of the Control Unit. Note: This field is specific to IPv4 and is not displayed in IPv6 only mode.	

4 Click the **Routers** tab.

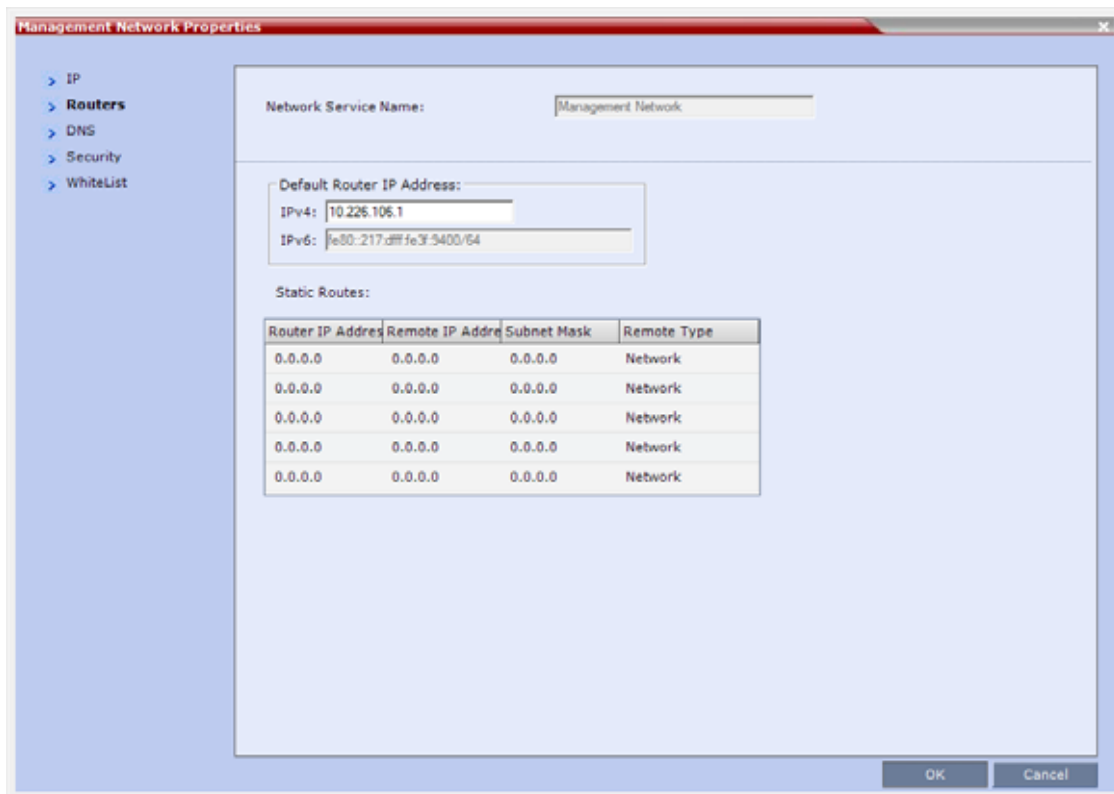

5 Modify the following fields:

Default Management Network Service – Routers

Field	Description	
Default Router IP Address	IPv4	Enter the IP address of the default router. The default router is used whenever the defined static routers are not able to route packets to their destination. The default router is also used when host access is restricted to one default router.
	IPv6	
Static Routes (IPv4 Only Table)	The system uses Static Routes to search other networks for endpoint addresses that are not found on the local LAN. Up to five routers can be defined in addition to the Default Router. The order in which the routers appear in the list determines the order in which the system looks for the endpoints on the various networks. If the address is in the local subnet, no router is used. To define a static route (starting with the first), click the appropriate column and enter the required value.	
	Router IP Address	Enter the IP address of the router.
	Remote IP Address	Enter the IP address of the entity to be reached outside the local network. The Remote Type determines whether this entity is a specific component (Host) or a network. <ul style="list-style-type: none"> • If Host is selected in the Remote Type field, enter the IP address of the endpoint. • If Network is selected in the Remote Type field, enter of the segment of the other network.
	Remote Subnet Mask	Enter the subnet mask of the remote network.
	Remote Type	Select the type of router connection: <ul style="list-style-type: none"> • Network – defines a connection to a router segment in another network. • Host – defines a direct connection to an endpoint found on another network.

6 Click the **DNS** tab.

The screenshot shows the 'Management Network Properties' dialog box with the 'DNS' tab selected. The fields are as follows:


- Network Service Name: Management Network
- MCU Host Name: PolycomMCU
- DNS: Off
- Register Host Names Automatically to DNS Servers:
- Local Domain Name: (empty)
- DNS Servers Addresses:
 - Primary Server: 0.0.0.0
 - Secondary Server: 0.0.0.0
 - Tertiary Server: 0.0.0.0

7 Modify the following fields:

Default Management Network Service – DNS

Field	Description
MCU Host Name	Enter the name of the MCU on the network. Default name is RMX
DNS	Select: <ul style="list-style-type: none"> • Off – If DNS servers are not used in the network. • Specify –To enter the IP addresses of the DNS servers. Note: The IP address fields are enabled only if Specify is selected.
Register Host Names Automatically to DNS Servers	Select this option to automatically register the MCU Signaling Host and Shelf Management with the DNS server.
Local Domain Name	Enter the name of the domain where the MCU is installed.
DNS Servers Addresses	
Primary Server	The static IP addresses of the DNS servers. A maximum of three servers can be defined.
Secondary Server	
Tertiary Server	

8 Click the **Security** tab.

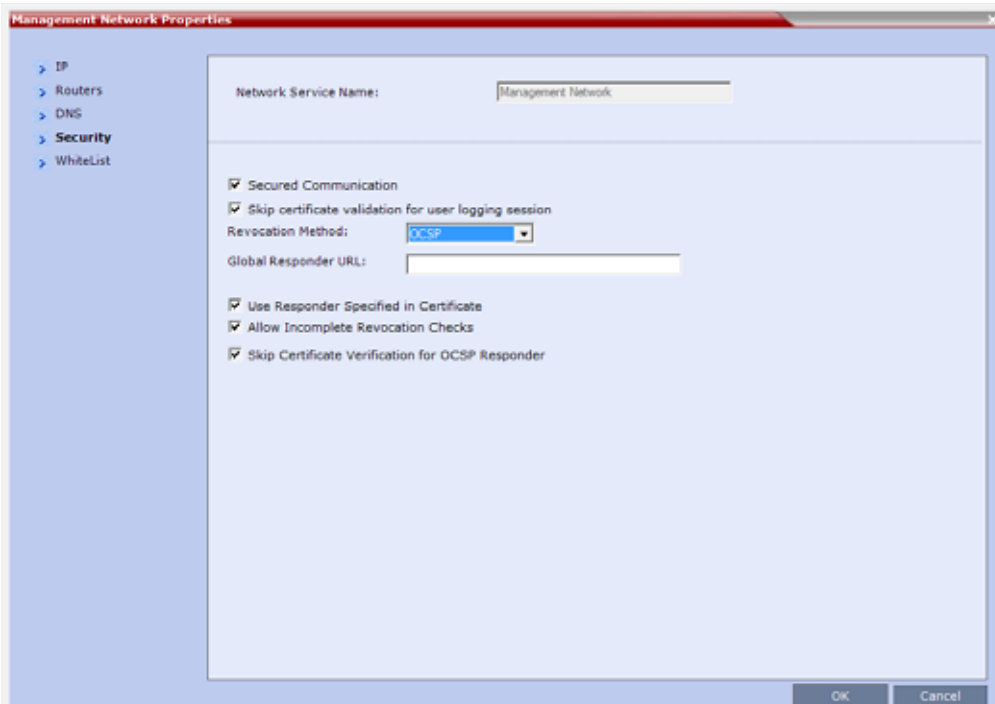

9 Modify the following fields:

Management Network Properties – Security Parameters

Field	Description
Secured Communication	Select to enable Secured Communication. The Collaboration Server supports TLS 1.0 and SSL 3.0 (Secure Socket Layer). A SSL/TLS Certificate must be installed on the Collaboration Server for this feature to be enabled. This box is checked by default when the MCU is in Ultra Secure Mode . For more information see Appendix F - Secure Communication Mode .
Skip certificate validation for user logging session	Select this check box to prevent peer certificate requests being issued. For more information see (PKI) Public Key Infrastructure . This check box must be cleared when enabling Secured Mode . If it is not cleared an Active Alarm is created and a message is displayed stating that Secured Communications Mode must be enabled.

Revocation Method

Management Network Properties – Security Parameters


Field	Description
Global Responder URL	For a detailed description of these fields see Certificate Management and Certificate Revocation .
Use Responder Specified in Certificate	
Allow Incomplete Revocation Checks	
Skip Certificate Validation for OSCP Responder	For a detailed description see Certificate Management and Certificate Revocation .

10 Click **OK**.

11 If you have modified the Management Network Properties, reset the MCU.

12 To define a white list, click the **White List** tab.

A **White List** contains the addresses of IP Networking Entities permitted to connect to the RMX's Management Network; Networking Entities such as Network Hosts, Control Workstations, Gatekeepers SIP/ DNS Servers, etc.

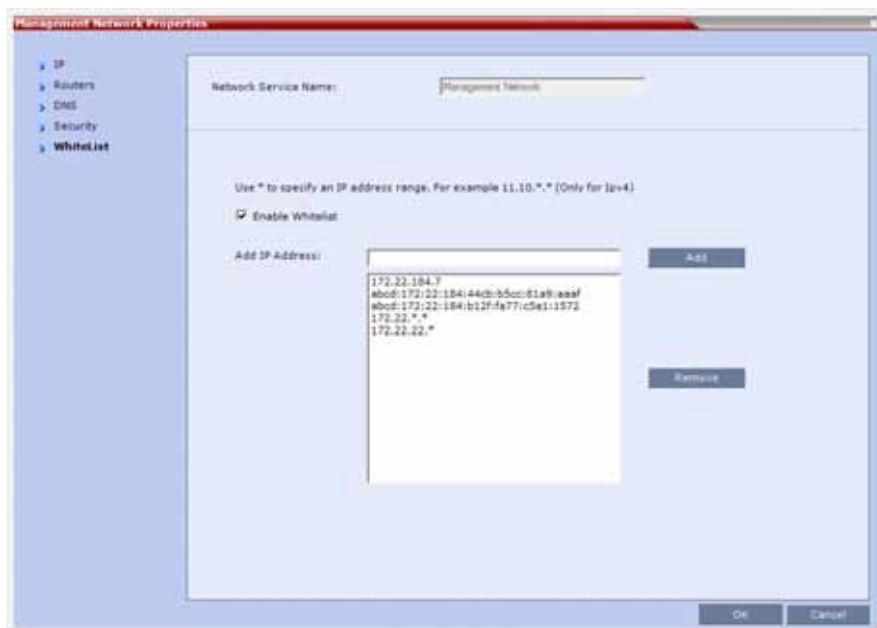

For a detailed description of these fields see [White List Access](#).

Modifying the Default IP Network Service

The Default IP Network Service is defined initially during the First Time Power-up or if the Default IP Service has been deleted, followed by an Collaboration Server restart. For details, see *Polycom® RealPresence Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*, Procedure 4: Modifying the Default IP Service and ISDN/PSTN Network Service Settings.

Once the Default IP Network Service is defined, you can modify its properties through the IP Network Properties dialog boxes. The Default IP Service parameters need to be modified if you want to change the:

- Network type that the Collaboration Server connects to
- IP address of the Collaboration Server Signaling Host
- IP addresses of the Collaboration Server Media boards
- Subnet mask of the Collaboration Server's IP cards
- Gatekeeper parameters or add gatekeepers to the Alternate Gatekeepers list
- SIP server parameters

To view or modify the Default IP Service:

- 1 In the **RMX Management** pane, click **IP Network Services** (🌐).
- 2 In the **Network** list pane, double-click the **Default IP Service** (🌐, 🌐, or 🌐) entry.

The **Default IP Service - Networking IP** dialog box is displayed.

Default IP Service - Collaboration Servers (RMX) 2000/4000

IP Network Service Properties

Networking

- IP
- Routers
- DNS
- Conferencing
- Gatekeeper
- Ports
- QoS
- SIP Servers
- Security
- SIP Advanced
- V3S Gateway

RMX 2000 Only

RMX 4000 Only

Network Service Name: IP Network Service

IP Network Type: H.323 & SIP

Signaling Host IP Address:

IPv4: 172.18.104.102

IPv6: 2002:ac1b:184:0:230:6411:fe04:d900/135323360

Media Card 1 IP Address:

IPv4: 172.18.104.102

IPv6: 2002:ac1b:184:0:290:caff:fe00:a621/64

Media Card 2 IP Address:

IPv4: 172.18.104.104

IPv6: 2002:ac1b:184:0:290:caff:fe00:a621/64

Media Card 3 IP Address:

IPv4: 172.18.104.105

IPv6: 2002:ac1b:184:0:290:caff:fe00:a621/64

Media Card 4 IP Address:

IPv4: 172.18.104.106

IPv6: 2002:ac1b:184:0:290:caff:fe00:a621/64

Subnet Mask: 255.255.255.0

OK Cancel

Default IP Service - Collaboration Server (RMX) 1800

- 3 Modify the following fields:


Default IP Network Service – IP

Field	Description
Network Service Name	The name Default IP Service is assigned to the IP Network Service by the Fast Configuration Wizard. This name can be changed. Note: This field is displayed in all IP Signaling dialog boxes and can contain character sets that use Unicode encoding.
IP Network Type	Displays the network type selected during the First Entry configuration. The Default IP Network icon indicates the selected environment. You can select: <ul style="list-style-type: none"> • H.323 - For an H.323-only Network Service. • SIP - For a SIP-only Network Service. • H.323 & SIP - For an integrated IP Service. Both H.323 and SIP participants can connect to the MCU using this service. Note: This field is displayed in all Default IP Service tabs.

Default IP Network Service – IP


Field	Description
Signaling Host IP Address	<p>On RealPresence Collaboration Server 1800 this field is disabled as only one IP address is used for signaling and media transmission.</p> <p>Enter the address to be used by IP endpoints when dialing in to the MCU.</p> <p>Dial out calls from the Collaboration Server are initiated from this address.</p> <p>This address is used to register the Collaboration Server with a Gatekeeper or a SIP Proxy server.</p>
Media Card 1 IP Address	<p>Collaboration Server 1800: Enter the IP address of the media card to be used by IP endpoints when dialing in to the MCU.</p> <p>Collaboration Server 2000/4000: Enter the IP address of the first media card as provided by the network administrator.first media card</p> <p>Endpoints connect to conferences and transmit call media (video, voice and content) via these addresses.</p>
Media Card 2 IP Address (Collaboration Server 2000/4000)	<p>Collaboration Server 2000/4000: Enter the IP address of the second media card if installed.</p> <p>Endpoints connect to conferences and transmit call media (video, voice and content) via these address.</p>
Media Card 3 IP Address (Collaboration Server 4000)	<p>Collaboration Server 4000: Enter the IP address of the third media cards if installed.</p> <p>Endpoints connect to conferences and transmit call media (video, voice and content) via these addresses.</p>
Media Card 4 IP Address (Collaboration Server 4000)	<p>Collaboration Server 4000: Enter the IP address of the fourth media cards if installed.</p> <p>Endpoints connect to conferences and transmit call media (video, voice and content) via these addresses.</p>
Subnet Mask	<p>Enter the subnet mask of the MCU.</p> <p>Default value: 255.255.255.0.</p>

4 Click the **Routers** tab.

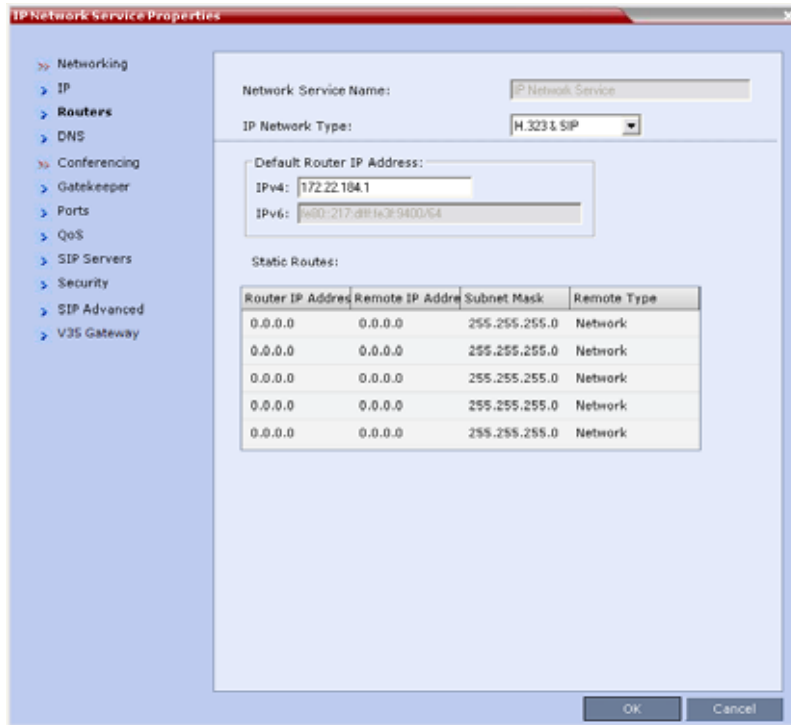

With the exception of **IP Network Type**, the field definitions of the **Routers** dialog box are the same as for the Default Management Network. For more information see [Default Management Network Service – Routers](#).

5 Optional. Click the **DNS** tab.

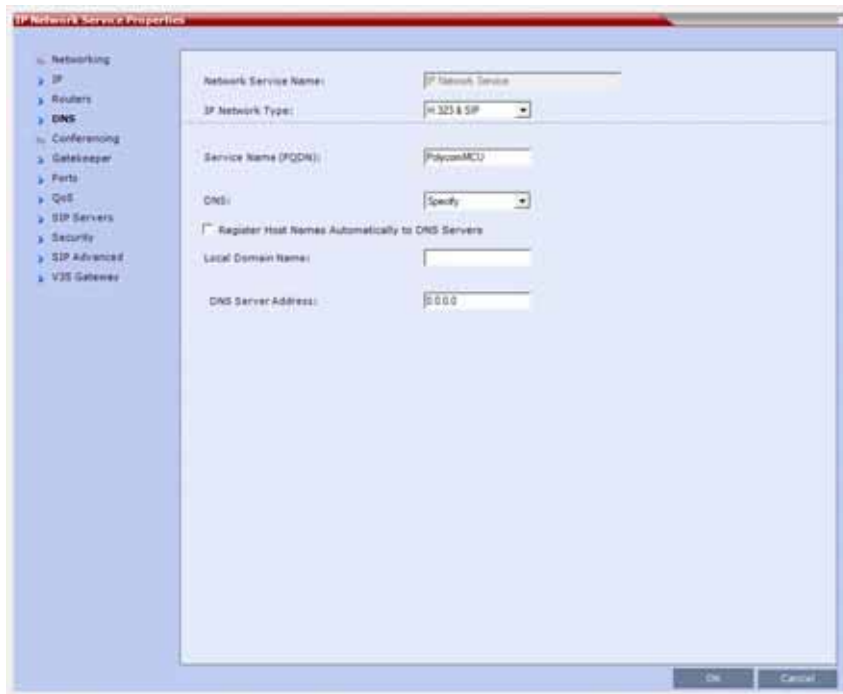


6 In the **DNS** field select **Specify**.

7 In the **DNS Server Address** field, enter the IP address of the DNS Server for the IP Network Service.

- If the DNS field in the IP Network Service is set to **Specify** and the DNS is not configured or disabled, the DNS configured for the Management Network will be used.
- When upgrading from a version that does not support a DNS per IP Network Service, the DNS configured for the Management Network will be used.
- In both Standard Security and Ultra Secure Modes:
 - ◆ A separate DNS can be configured for the Management Network Service and the IP Network Service.
 - ◆ If a Multiple Services Licence is installed, a separate DNS can be configured for each additional IP Network Service that is defined. For more information see [Multiple Network Services](#).

- 8 To view or modify the gatekeeper parameters, click the **Gatekeeper** tab.

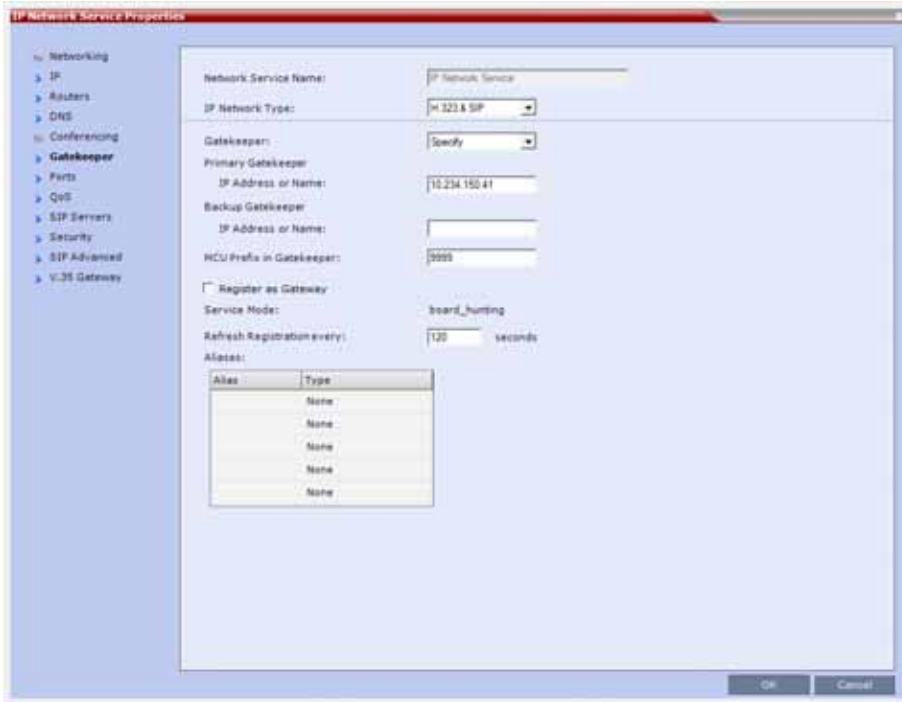

- 9 Modify the following fields:


Default IP Service – Conferencing – Gatekeeper Parameters

Field	Description	
Gatekeeper	Select Specify to enable configuration of the gatekeeper IP address. When Off is selected, all gatekeeper options are disabled.	
Primary Gatekeeper IP Address or Name	Enter either the gatekeeper's host name as registered in the DNS or IP address.	Note: When in IPv4&IPv6 or in IPv6 mode, it is easier to use Names instead of IP Addresses.
Alternate Gatekeeper IP Address or Name	Enter the DNS host name or IP address of the gatekeeper used as a fallback gatekeeper used when the primary gatekeeper is not functioning properly.	
MCU Prefix in Gatekeeper	Enter the number with which this Network Service registers in the gatekeeper. This number is used by H.323 endpoints as the first part of their dial-in string when dialing the MCU. When PathNavigator or SE200 is used, this prefix automatically registers with the gatekeeper. When another gatekeeper is used, this prefix must also be defined in the gatekeeper.	

Default IP Service – Conferencing – Gatekeeper Parameters

Field	Description
Register as Gateway	<p>Select this check box if the Collaboration Server is to be seen as a gateway, for example, when using a Cisco gatekeeper.</p> <p>Notes:</p> <ul style="list-style-type: none"> Do not select this check box when using Polycom ReadIManager or a Radvision gatekeeper. Gateway functionality is not supported by Collaboration Server (RMX) 1800 with no DSP cards.
Refresh Registration every __ seconds	<p>The frequency with which the system informs the gatekeeper that it is active by re-sending the IP address and aliases of the IP cards to the gatekeeper. If the IP card does not register within the defined time interval, the gatekeeper will not refer calls to this IP card until it re-registers. If set to 0, re-registration is disabled.</p> <p>Note:</p> <ul style="list-style-type: none"> It is recommended to use default settings. This is a re-registration and not a 'keep alive' operation – an alternate gatekeeper address may be returned.
Aliases	
Alias	<p>The alias that identifies the Collaboration Server's Signaling Host within the network. Up to five aliases can be defined for each Collaboration Server.</p> <p>Note: When a gatekeeper is specified, at least one alias must be entered in the table.</p> <p>Additional aliases or prefixes may also be entered.</p>
Type	<p>The type defines the format in which the card's alias is sent to the gatekeeper. Each alias can be of a different type:</p> <ul style="list-style-type: none"> H.323 ID (alphanumeric ID) E.164 (digits 0-9) Email ID (email address format, e.g. abc@example.com) Participant Number (digits 0-9, * and #) <p>Note: Although all types are supported, the type of alias to be used depends on the gatekeeper's capabilities.</p>

10 To view or modify the ports values, click the **Ports** tab.

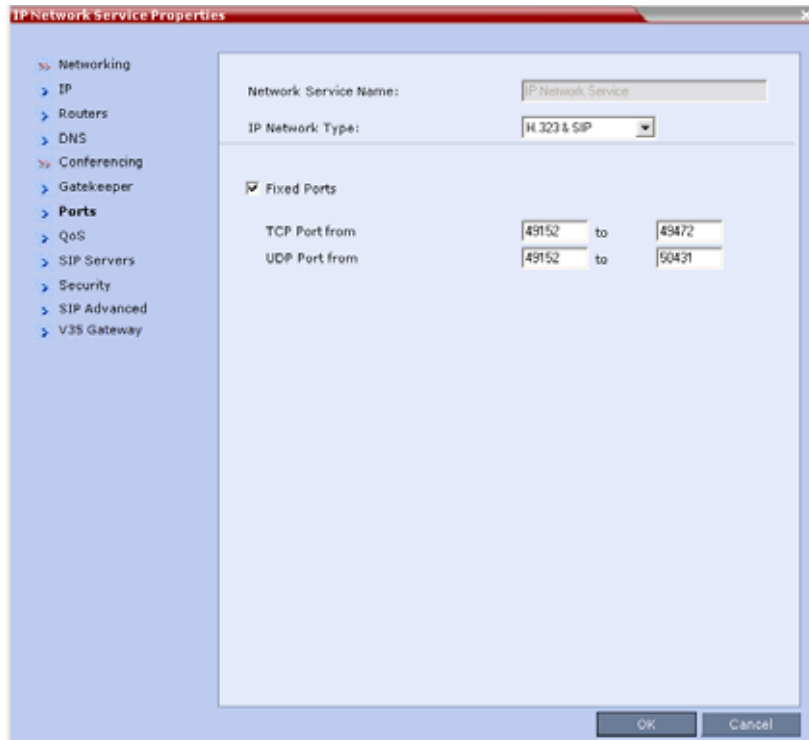

Settings in the **Ports** tab allow specific ports in the firewall to be allocated to multimedia conference calls.

The port range recommended by IANA (Internet Assigned Numbers Authority) is 49152 to 65535. The Collaboration Server uses this recommendation along with the number of licensed ports to calculate the port range.

11 Modify the following fields:

Default IP Service – Conferencing – Ports Parameters

Field	Description
Fixed Ports	<p>Leave this check box cleared if you are defining a Network Service for local calls that do not require configuring the firewall to accept calls from external entities. When cleared, the system uses the default port range and allocates 4 RTP and 4 RTCP ports for media channels (Audio, Video, Content and FECC).</p> <p>Note: When ICE Environment is enabled, 8 additional ports are allocated to each call.</p> <p>Click this check box to manually define the port ranges or to limit the number of ports to be left open.</p>


Default IP Service – Conferencing – Ports Parameters

Field	Description
TCP Port from - to	Displays the default settings for port numbers used for signaling and control. To modify the number of TCP ports, enter the first and last port numbers in the range. The number of ports is calculated as follows: Number of simultaneous calls x 2 ports (1 signaling + 1 control).
UDP Port from - to	Displays the default settings for port numbers used for audio and video. To modify the number of UDP ports: <ul style="list-style-type: none"> Enter the first and last port numbers in the range, and the range must be 3000 ports per media card. When ICE environment is enabled, the range must be 6000 ports per media card.



If you do not specify an adequate port range, the system will accept the settings but will issue a warning. Calls will be rejected when the Collaboration Server's ports are exceeded.

12 If required, click the **QoS** tab.

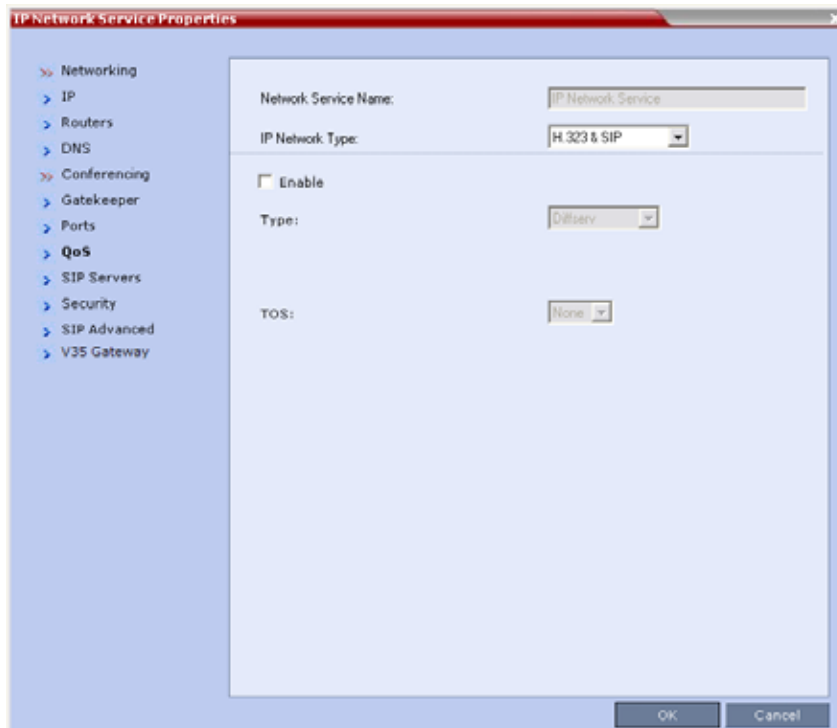

Quality of Service (QoS) is important when transmitting high bandwidth audio and video information. QoS can be measured and guaranteed in terms of:

- Average delay between packets
- Variation in delay (jitter)
- Transmission error rate

DiffServ and **Precedence** are the two QoS methods supported by the Collaboration Server. These methods differ in the way the packet's priority is encoded in the packet header.

The Collaboration Server's implementation of QoS is defined per Network Service, not per endpoint.



The routers must support QoS in order for IP packets to get higher priority.

13 View or modify the following fields:

Default IP Service – Conferencing – QoS Parameters

Field	Description
Enable	Select to enable the configuration and use of the QoS settings. When un-checked, the values of the DSCP (Differentiated Services Code Point) bits in the IP packet headers are zero.
Type	<p>DiffServ and Precedence are two methods for encoding packet priority. The priority set here for audio video and IP Signaling packets should match the priority set in the router.</p> <ul style="list-style-type: none"> • DiffServ: Select when the network router uses DiffServ for priority encoding. The default priorities for both audio and video packets is 0x31. These values are determined by the QOS_IP_VIDEO and QOS_IP_AUDIO flags in the system.cfg file. The default priority for Signaling IP traffic is 0x00 and is determined by the QOS_IP_SIGNALING flag in the system.cfg file. For more information Modifying System Flags. • Precedence: Select when the network router uses Precedence for priority encoding, or when you are not sure which method is used by the router. Precedence should be combined with None in the TOS field. The default priority is 5 for audio and 4 for video packets. <p>Note: Precedence is the default mode as it is capable of providing priority services to all types of routers, as well as being currently the most common mechanism.</p>

Default IP Service – Conferencing – QoS Parameters

Field	Description
Audio / Video	You can prioritize audio and video IP packets to ensure that all participants in the conference hear and see each other clearly. Select the desired priority. The scale is from 0 to 5, where 0 is the lowest priority and 5 is the highest. The recommended priority is 4 for audio and 4 for video to ensure that the delay for both packet types is the same and that audio and video packets are synchronized and to ensure lip sync.
TOS	Select the type of Service (TOS) that defines optimization tagging for routing the conferences audio and video packets. <ul style="list-style-type: none"> • Delay: The recommended default for video conferencing; prioritized audio and video packets tagged with this definition are delivered with minimal delay (the throughput of IP packets minimizes the queue sequence and the delay between packets). • None: No optimization definition is applied. This is a compatibility mode in which routing is based on Precedence priority settings only. Select None if you do not know which standard your router supports.

14 Click the **SIP Servers** tab.

The screenshot shows the 'IP Network Service Properties' dialog box with the 'SIP Servers' tab selected. The left sidebar shows a tree view with 'SIP Servers' highlighted. The main area contains the following configuration options:

- Network Service Name: IP Network Service
- IP Network Type: H.323 & SIP
- SIP Server: Specify
- SIP Server Type: Generic
- Refresh Registration every: 3600 seconds
- Transport Type: TLS
- Skip certificate validation
 - Revocation Method: OCSP
 - Global Responder URL: (empty)
- Use Responder Specified in Certificate
- Allow Incomplete Revocation Checks
- Skip Certificate Verification for OCSP Responder

Below these options are two tables:

SIP Servers:

Parameter	Primary Server
Server IP Addr	10.234.150.41
Server Domain	DomainName
Port	5061

Outbound Proxy Servers:

Parameter	Primary Server
Server IP Addr	0.0.0.0
Port	5061

At the bottom right of the dialog are 'OK' and 'Cancel' buttons.

15 Modify the following fields:

Default IP Network Service – SIP Servers

Field	Description
SIP Server	Select: <ul style="list-style-type: none"> • Specify – To manually configure SIP servers. • Off – If SIP servers are not present in the network. Note: When set to Specify , the Security tab is displayed.
SIP Server Type	Select: <ul style="list-style-type: none"> • Generic - For non Microsoft environments. • Microsoft - For Microsoft SIP environments.
Refresh Registration	This defines the time in seconds, in which the Collaboration Server refreshes its registration on the SIP server. For example, if “3600” is entered the Collaboration Server will refresh its registration on the SIP server every 3600 seconds.
Transport Type	Select the protocol that is used for signaling between the Collaboration Server and the SIP Server or the endpoints according to the protocol supported by the SIP Server: <p>UDP – Select this option to use UDP for signaling.</p> <p>TCP – Select this option to use TCP for signaling.</p> <p>TLS – The Signaling Host listens on secured port 5061 only and all outgoing connections are established on secured connections. Calls from SIP clients or servers to non secured ports are rejected.</p> <p>The following protocols are supported: TLS 1.0, SSL 2.0 and SSL 3.0.</p> Note: If TLS is selected, the Skip Certificate Validation and the other certificate related fields are displayed.
Skip Certificate Validation	When checked, no Certificate Validation is performed.
Revocation Method	For a detailed description, see Certificate Management and Certificate Revocation .
Global Responder URL	
Use Responder Specified in Certificate	
Allow Incomplete Revocation Checks	
Skip Certificate Validation for OSCP Responder	
SIP Servers: Primary Server	
Server IP Address	Enter the IP address of the preferred SIP server. <p>If a DNS is used, you can enter the SIP server name.</p> Note: When in IPv4&IPv6 or in IPv6 mode, it is easier to use Names instead of IP Addresses .

Default IP Network Service – SIP Servers

Field	Description
Server Domain Name	<p>Enter the name of the domain that you are using for conferences.</p> <p>The domain name is used for identifying the SIP server in the appropriate domain according to the host part in the dialed string.</p> <p>For example, when a call to <code>EQ1@polycom.com</code> reaches its outbound proxy, this proxy looks for the SIP server in the <code>polycom.com</code> domain, to which it will forward the call.</p> <p>When this call arrives at the SIP server in <code>polycom.com</code>, the server looks for the registered user (EQ1) and forwards the call to this Entry Queue or conference.</p>
Port	<p>Enter the number of the TCP or UDP port used for listening. The port number must match the port number configured in the SIP server.</p> <p>Default port is 5060.</p>

Outbound Proxy Servers: Primary Server

Server IP Address	<p>By default, the Outbound Proxy Server is the same as the SIP Server. If they differ, modify the IP address of the Outbound Proxy and the listening port number (if required).</p> <p>Note: When in IPv4&IPv6 or in IPv6 mode, it is easier to use Names instead of IP Addresses.</p>
Port	<p>Enter the port number the outbound proxy is listening to.</p> <p>The default port is 5060.</p>



When updating the parameters of the SIP Server in the **IP Network Service - SIP Servers** dialog box, the Collaboration Server must be reset to implement the change.

16 Click the **Security** tab.

(This tab is only displayed if the **SIP Server** field in the **SIP Servers** tab is set to **Specify**.)

The screenshot shows the 'IP Network Service Properties' dialog box. On the left is a tree view with the following items: Networking, IP, Routers, Conferencing, Gatekeeper, Ports, QoS, SIP Servers, Security (selected), SIP Advanced, and V35 Gateway. The main content area contains the following fields:

- Network Service Name: IP Network Service
- IP Network Type: H.323 & SIP
- SIP Authentication
 - User Name: [text box]
 - Password: [password box]
- H.323 Authentication
 - User Name: [text box]
 - Password: [password box]

At the bottom right are 'OK' and 'Cancel' buttons.

17 Modify the following fields:

Default IP Network Service – Security (SIP Digest)


Field	Description
SIP Authentication	<p>Click this check box to enable SIP proxy authentication.</p> <p>Select this check box only if the authentication is enabled on the SIP proxy, to enable the Collaboration Server to register with the SIP proxy. If the authentication is enabled on the SIP proxy and disabled on the RMX, calls will fail to connect to the conferences.</p> <p>Leave this check box cleared if the authentication option is disabled on the SIP proxy.</p>
User Name	<p>Enter the user name the Collaboration Server will use to authenticate itself with the SIP proxy. This name must be defined in the SIP Proxy.</p> <p>These fields can contain up to 20 ASCII characters.</p>
Password	<p>Enter the password the Collaboration Server will use to authenticate itself with the SIP proxy. This password must be defined in the SIP proxy.</p>

Default IP Network Service – Security (SIP Digest)

Field	Description
H.323 Authentication	<p>Click this check box to enable H.323 server authentication.</p> <p>Select this check box only if the authentication is enabled on the gatekeeper, to enable the Collaboration Server to register with the gatekeeper. If the authentication is enabled on the gatekeeper and disabled on the RMX, calls will fail to connect to the conferences.</p> <p>Leave this check box cleared if the authentication option is disabled on the gatekeeper.</p>
User Name	<p>Enter the user name the Collaboration Server will use to authenticate itself with the gatekeeper. This name must be defined in the gatekeeper.</p> <p>These fields can contain up to 64 ASCII characters.</p>
Password	<p>Enter the password the Collaboration Server will use to authenticate itself with the gatekeeper. This password must be defined in the gatekeeper.</p>

If the **Authentication User Name** and **Authentication Password** fields are left empty, the SIP Digest authentication request is rejected. For registration without authentication, the Collaboration Server must be registered as a trusted entity on the SIP server.

18 To configure the ICE environment, click the **SIP Advanced** tab.

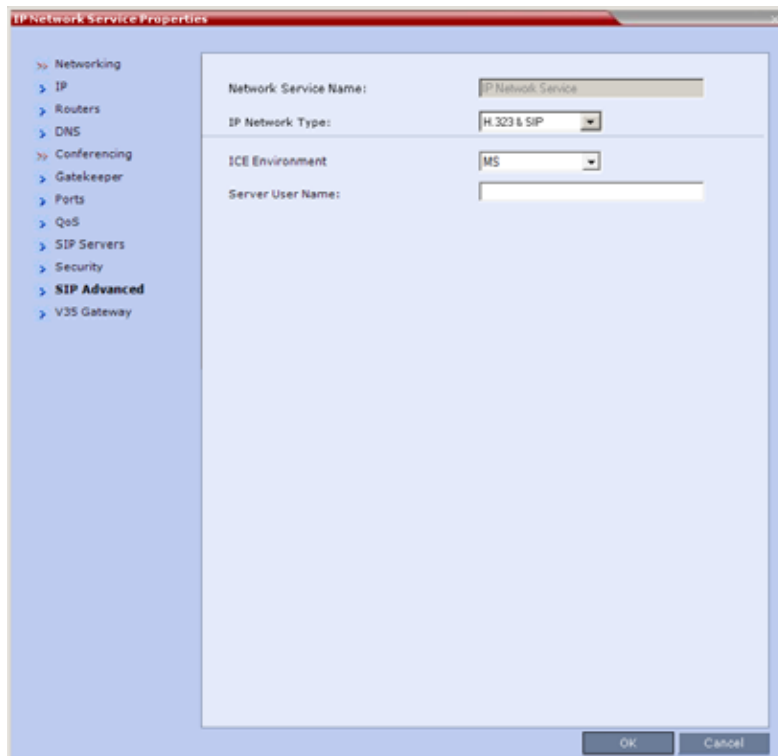


19 Modify the following fields:

Default IP Network Service – SIP Advanced

Field	Description
ICE Environment	Select MS (for Microsoft ICE implementation) to enable the ICE integration.
Server User Name	Enter the <i>Collaboration Server</i> User name as defined in the Active Directory . For example, enter rmx1234 . This field is disabled if the ICE Environment field is set to None .

20 To view or modify the V35 gateway parameters, click the **V35 Gateway** tab.

The **V35 Gateway** dialog box is displayed.

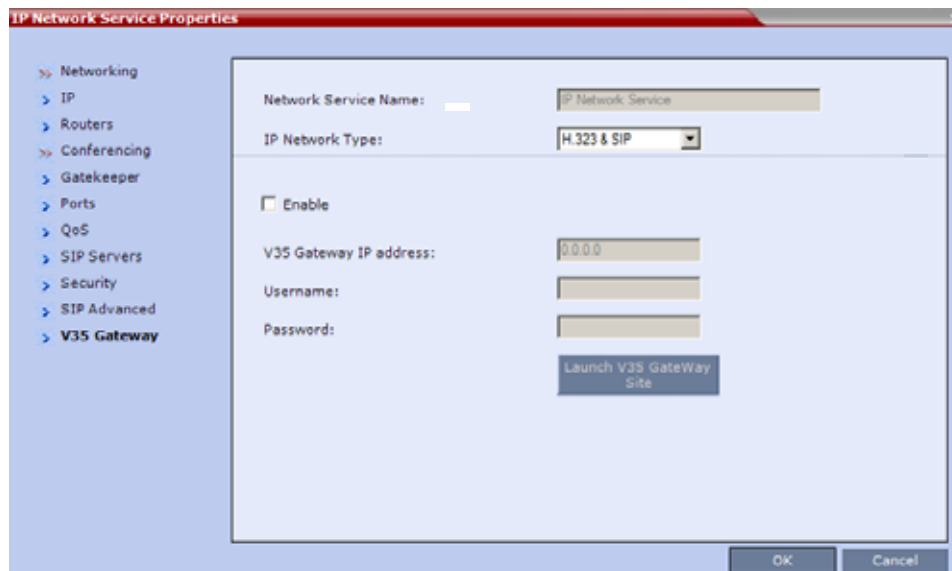

21 Modify the following fields:

Network Service - V35 tab

Field	Description
V35 Gateway IP Address	Enter the Management IP address of the management interface of the Serial Gateway . For more information see the <i>RealPresence Collaboration Server (RMX) 1800/2000/4000 Deployment Guide for Maximum Security Environments, Serial Gateway S4GW - Maximum Security Mode</i> .
Username	Enter the User Name that the Collaboration Server uses to log in to the management interface of the Serial Gateway.
Password	Enter the Password that the Collaboration Server uses to log in to management interface of the Serial Gateway .

22 Click the **OK** button.



When updating the parameters of the SIP Server in the **IP Network Service - SIP Servers** dialog box, the Collaboration Server must be reset to implement the change.

Ethernet Settings

The automatically identified speed and transmit/receive mode of each **LAN** port used by the system can be manually modified if a specific switch requires it. These settings can be modified in the **Ethernet Settings** dialog box.


Physical Mapping - Port Type to Label on RealPresence Collaboration Server 4000

Port Type	Annotation on MCU	
Media	LAN 2	RTM LAN Card
Modem	LAN 1	RTM-IP 4000 Card
Management 1	LAN 2	
Signaling 1	LAN 3	
ShM	LAN 6	


To modify the automatic LAN port configuration:

- 1 On the Collaboration Server menu, select **Setup > Ethernet Settings**.

The **Ethernet Settings** dialog box specific to the system you are using is displayed; some examples are shown below.

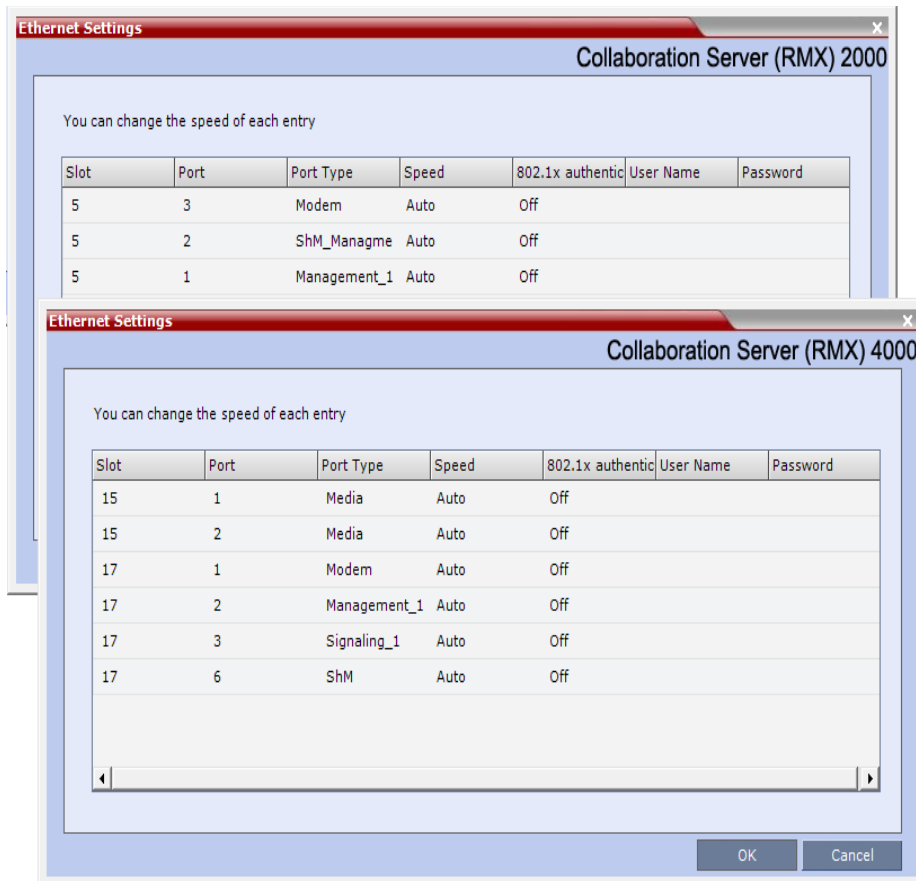

RealPresence Collaboration Server (RMX) 4000 In Ultra Secure Mode

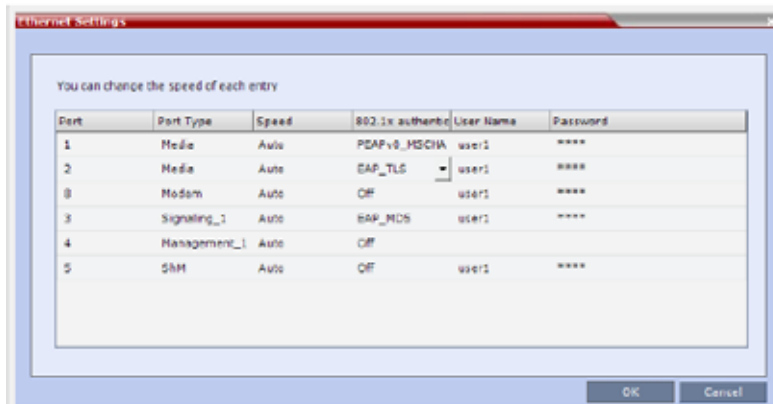




RealPresence Collaboration Server (RMX) 4000:

Although the RTM LAN (media card) ports are shown as Port 1 in the **Ethernet Settings** and **Hardware Monitor**, the physical LAN connection is **Port 2**.

- 2 Select the speed and transmit/receive mode for each ports as follows:

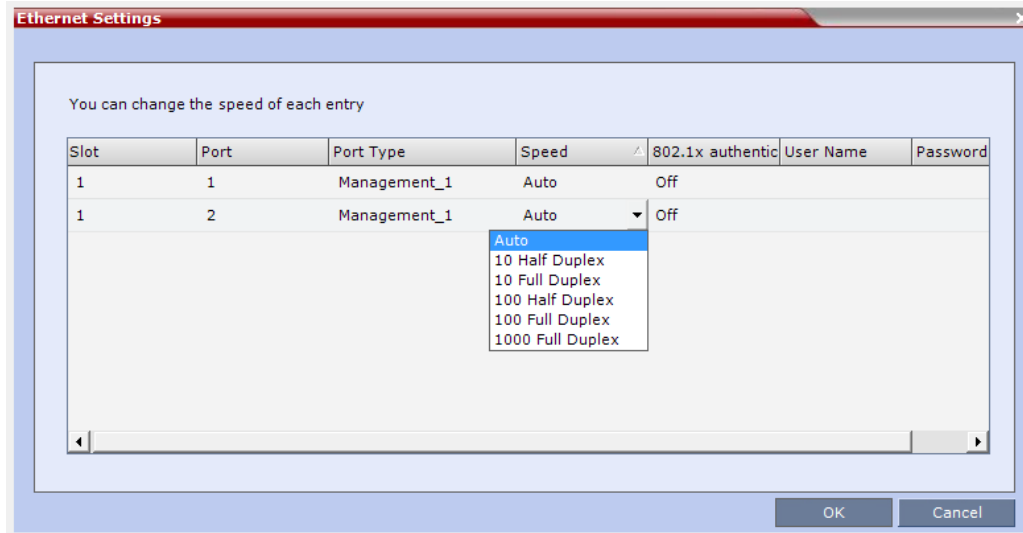

Ethernet Settings Parameters

Field	Description
Speed	<p>The Collaboration Server 1800 has 2 LAN ports that can be configured.</p> <p>The Collaboration Server 2000/4000 has 3 LAN ports on the RTM-IP (Management, Signaling and Shelf Management), and additional LAN ports on each media card (RTM LAN) and RTM ISDN cards. You can set the speed and transmit/receive mode manually for these ports.</p>
Port	<p>The LAN port number.</p> <p>Note: Do not change the automatic setting of Port 1,4 and Port 5 of the Management 2 and Signaling 2 Networks. Any change to the speed of these ports will not be applied.</p>
Speed	<p>Select the speed and transmit/receive mode for each port.</p> <p>Default: Auto – Negotiation of speed and transmit/receive mode starts at 1000 Mbits/second Full Duplex, proceeding downward to 10 Mbits/second Half Duplex.</p> <p>Notes:</p> <p>To maximize conferencing performance, especially in high bit rate call environments, a 1Gb connection is recommended.</p> <ul style="list-style-type: none"> • RealPresence Collaboration Server (RMX) 4000 - Do not select 1000 Full Duplex for any LAN ports in Slot 17. Select only 100 Full Duplex.

Ethernet Settings Parameters

Field	Description
802.1x Authentication	For more information about 8.2.1x Authentication see IEEE 802.1X Authentication .
User Name	
Password	

- 3 Click **OK**.


IP Network Monitoring

The **Signaling Monitor** is the Collaboration Server entity used for monitoring the status of external network entities such as the gatekeeper, DNS, SIP proxy and Outbound proxy and their interaction with the MCU.

To monitor signaling status:

- 1 In the **RMX Management** pane, click **Signaling Monitor** (📡).
- 2 In the **Signaling Monitor** pane, double-click **Default IP Service**.

The **IP Network Services Properties – RMX CS IP** tab opens:

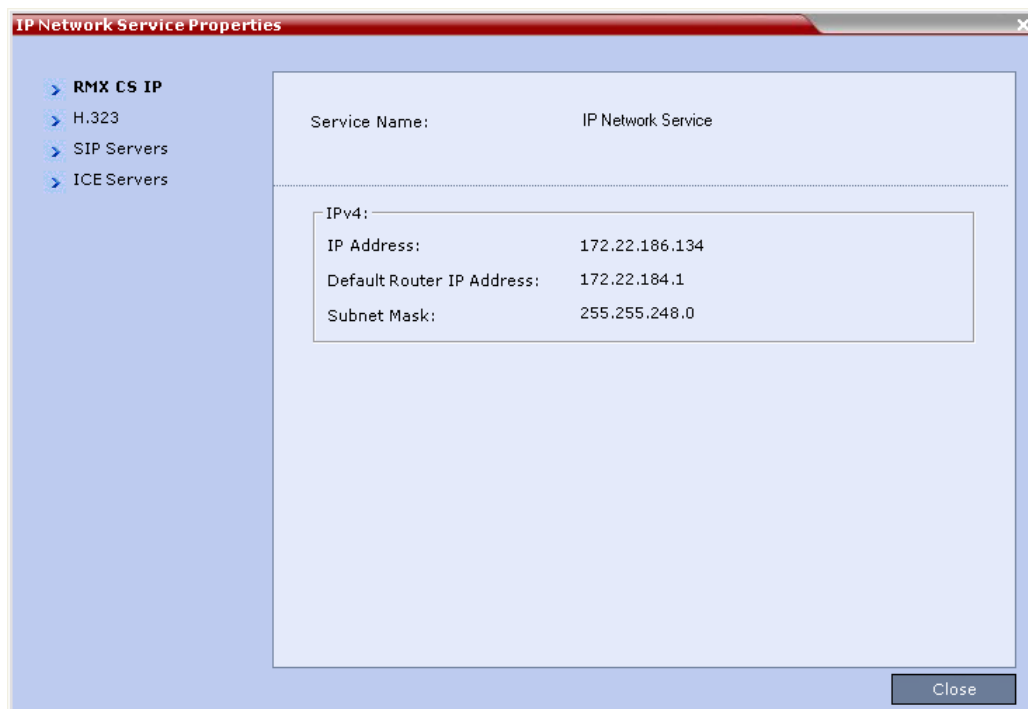

The **RMX CS IP** tab displays the following fields:


IP Network Services Properties – RMX CS IP Parameters

Field	Description
Service Name	The name assigned to the IP Network Service by the Fast Configuration Wizard . Note: This field is displayed in all tabs.

IP Network Services Properties – RMX CS IP Parameters

Field	Description		
IPv4	IP Address		
	Default Router IP Address	The IP address of the default router. The default router is used whenever the defined static routers are not able to route packets to their destination. The default router is also used when host access is restricted to one default router.	
	Subnet Mask	The subnet mask of the MCU. Default value: 255.255.255.0 .	
IPv6	Scope	IP Address	
		Global	The Global Unicast IP address of the Collaboration Server.
		Site-Local	The IP address of the Collaboration Server within the local site or organization.
	Default Router IP Address	The IP address of the default router. The default router is used whenever the defined static routers are not able to route packets to their destination. The default router is also used when host access is restricted to one default router.	

3 Click the **H.323** tab.

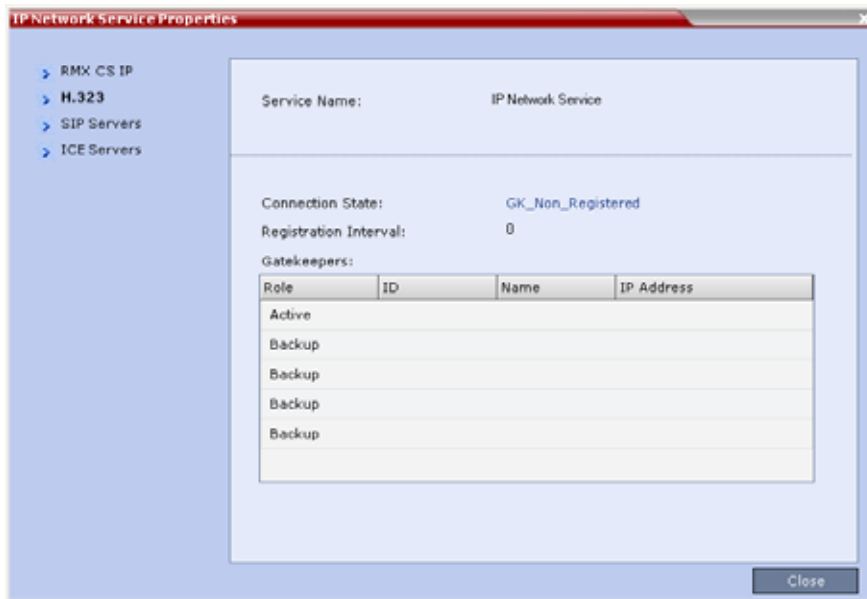


The **H.323** tab displays the following fields:

IP Network Services Properties – H.323 Parameters

Field	Description																		
Connection State	<p>The state of the connection between the Signaling Host and the gatekeeper:</p> <p>Discovery - The Signaling Host is attempting to locate the gatekeeper.</p> <p>Registration - The Signaling Host is in the process of registering with the gatekeeper.</p> <p>Registered - The Signaling Host is registered with the gatekeeper.</p> <p>Not Registered - The registration of the Signaling Host with the gatekeeper failed.</p>																		
Registration Interval	<p>The interval in seconds between the Signaling Host's registration messages to the gatekeeper. This value is taken from either the IP Network Service or from the gatekeeper during registration. The lesser value of the two is chosen.</p> <table border="1"> <thead> <tr> <th>Role</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Active</td> <td>Active - The active gatekeeper.</td> </tr> <tr> <td>Backup</td> <td>Backup - The backup gatekeeper that can be used if the connection to the preferred gatekeeper fails.</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th>ID</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>ID</td> <td>The gatekeeper ID retrieved from the gatekeeper during the registration process.</td> </tr> <tr> <th>Name</th> <th>Description</th> </tr> <tr> <td>Name</td> <td>The gatekeeper's host's name.</td> </tr> <tr> <th>IP Address</th> <th>Description</th> </tr> <tr> <td>IP Address</td> <td>The gatekeeper's IP address.</td> </tr> </tbody> </table>	Role	Description	Active	Active - The active gatekeeper.	Backup	Backup - The backup gatekeeper that can be used if the connection to the preferred gatekeeper fails.	ID	Description	ID	The gatekeeper ID retrieved from the gatekeeper during the registration process.	Name	Description	Name	The gatekeeper's host's name.	IP Address	Description	IP Address	The gatekeeper's IP address.
Role	Description																		
Active	Active - The active gatekeeper.																		
Backup	Backup - The backup gatekeeper that can be used if the connection to the preferred gatekeeper fails.																		
ID	Description																		
ID	The gatekeeper ID retrieved from the gatekeeper during the registration process.																		
Name	Description																		
Name	The gatekeeper's host's name.																		
IP Address	Description																		
IP Address	The gatekeeper's IP address.																		

4 Click the **SIP Servers** tab.

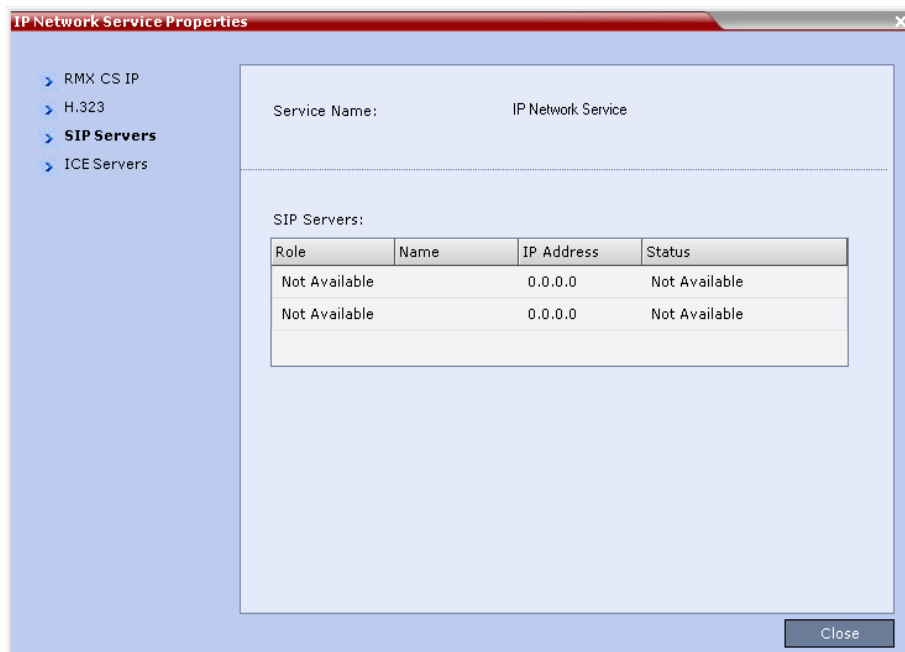


The **SIP Servers** tab displays the following fields:

IP Network Services Properties – SIP Servers Parameters

Field	Description
Role	Active -The default SIP Server is used for SIP traffic. Backup -The SIP Server is used for SIP traffic if the preferred proxy fails.
Name	The name of the SIP Server.
IP Address	The SIP Server's IP address.
Status	The connection state between the SIP Server and the Signaling Host. Not Available - No SIP server is available. Auto - Gets information from DHCP, if used.

5 Click the **ICE Servers** tab.

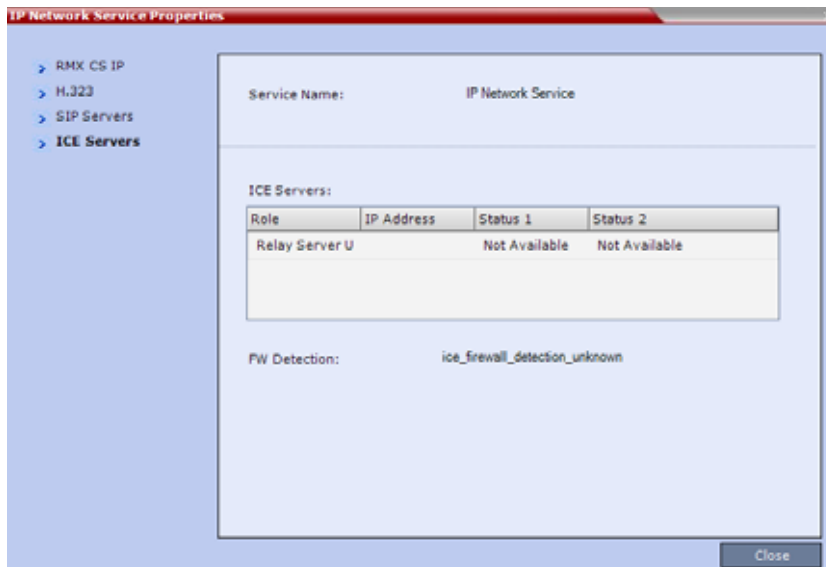

The **ICE Servers** tab displays the following fields:

IP Network Services Properties – ICE Servers Parameters

Field	Description
Role	The ICE Server's role is displayed: <ul style="list-style-type: none"> • STUN password server • STUN Server UDP • STUN Server TCP • Relay Server UDP • Relay Server TCP
IP Address	The ICE Server's IP Address.

IP Network Services Properties – ICE Servers Parameters

Field	Description
Status 1/2/3/4	<p>A status is displayed for each media card installed in the Collaboration Server:</p> <ul style="list-style-type: none">• Connection O.K.• MS – register fail• MS – subscribe fail• MS – service fail• Connection failed• User/password failed• Channel didn't receive any packets for 5 seconds• Channel exceeded allotted bandwidth• Unknown failure <p>In systems with multiple media cards, Status 1 refers to the uppermost media card.</p>
FW Detection	<p>The Firewall Detection status is displayed:</p> <ul style="list-style-type: none">• Unknown• UDP enabled• TCP enabled• Proxy -TCP is possible only through proxy• Block – both UDP & TCP blocked• None

LAN Redundancy

LAN Redundancy enables the redundant LAN port connection to automatically replace the failed LAN port by using another physical connection and NIC (Network Interface Card). When a LAN port fails, IP network traffic failure is averted and network or endpoints disconnections do not occur. When LAN cables are connected to both LAN 1 and LAN 2 ports, the RMX automatically selects which port is active and which is redundant.

Media Redundancy - Collaboration Server (RMX) 2000/4000

On the RealPresence Collaboration Server (RMX) 2000 and RealPresence Collaboration Server (RMX) 4000, the LAN 1 and LAN 2 port on the RTM LAN card can be used as redundant media ports.

RealPresence Collaboration Server (RMX) 2000/4000 RTM LAN Card on Rear Panel



Media Redundancy on the RealPresence Collaboration Server (RMX) 2000/4000 is dependent on the settings of the **LAN_REDUNDANCY** and **MULTIPLE_SERVICES** System Flags as summarized in the following table:

RMX 2000 / 4000 - Media Redundancy - System Flags


System Flag / Value	RMX 2000	RMX 4000
LAN_REDUNDANCY = NO MULTIPLE_SERVICES = NO	No Redundancy	
LAN_REDUNDANCY = NO MULTIPLE_SERVICES = YES		
LAN_REDUNDANCY = YES MULTIPLE_SERVICES = NO	Media Redundancy Only	Full Redundancy
LAN_REDUNDANCY = YES MULTIPLE_SERVICES = YES	Full Media Redundancy (If only one IP Network Service is defined per media card.)	

Media and Signaling Redundancy - Collaboration Server (RMX) 1800

On the RealPresence Collaboration Server 1800 LAN 1 and LAN 2 are the redundant media and signaling ports:

- LAN 1 port is used for standard communications
- LAN 2 port can be used to define a second Network Service or for LAN Redundancy

The following cables are connected to the LAN ports on the rear panel of the RealPresence Collaboration Server 1800:

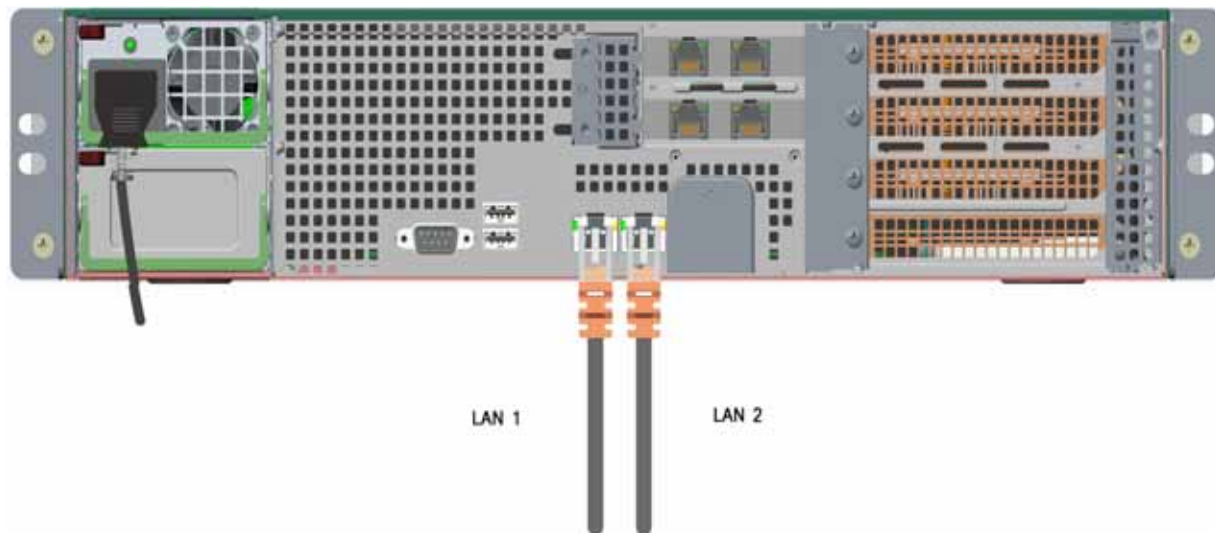

LAN Connections to the IP ports

IP Port	Description
LAN 1	For management network connections: When LAN redundancy is enabled, LAN 1 is used for management, media, and signaling network connections.
LAN 2	For media, and signaling network connections: When LAN redundancy is enabled, LAN 2 is the backup for the LAN 1 port.

Media Redundancy on the RealPresence Collaboration Server (RMX) 1800 is dependent on the settings of the **LAN_REDUNDANCY** and **MULTIPLE_SERVICES** System Flags as summarized in the following table:


RMX 1800 - Media Redundancy - System Flags

System Flag / Value	RMX 1800
LAN_REDUNDANCY = NO MULTIPLE_SERVICES = NO	No Redundancy. If a second LAN cable is connected to Port 2, Network separation is enabled (the Management Network Service is separated from the Default IP Network Service)
LAN_REDUNDANCY = NO MULTIPLE_SERVICES = YES	No Redundancy.
LAN_REDUNDANCY = YES MULTIPLE_SERVICES = NO	Full Redundancy
LAN_REDUNDANCY = YES MULTIPLE_SERVICES = YES	These flags cannot be set to YES simultaneously.

Signaling and Management Redundancy - Collaboration Server (RMX) 4000

On the RealPresence Collaboration Server (RMX) 4000, for Signaling and Management Redundancy when **LAN_REDUNDANCY = YES** and **MULTIPLE_SERVICES = NO**, the **LAN 3** port on the **RTM-IP 4000** card is redundant to the **LAN 2** port. **LAN** ports **4** and **5** are never used.

RealPresence Collaboration Server (RMX) 4000 - RTM IP 4000 on Rear Panel2

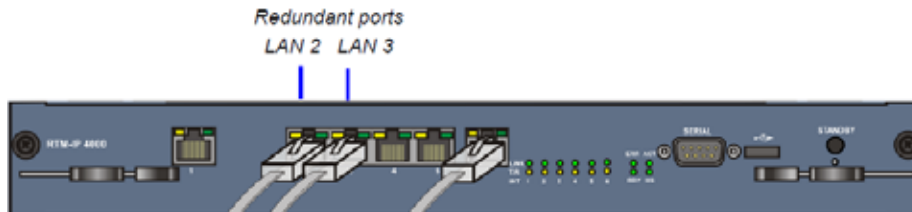

On the RealPresence Collaboration Server (RMX) 1800/4000 Signaling and Management Redundancy is implemented using the LAN ports on the RTM-IP card and is dependent on the settings of the **LAN_REDUNDANCY** and **MULTIPLE_SERVICES** System Flags as summarized in the following table.

RMX 4000 - Signaling and Management Redundancy - System Flags


Flag / Value	Port Usage	
	LAN 2	LAN 3
LAN_REDUNDANCY = NO MULTIPLE_SERVICES = NO	Management	Signaling
LAN_REDUNDANCY = NO MULTIPLE_SERVICES = YES	Management	Not Used
LAN_REDUNDANCY = YES MULTIPLE_SERVICES = NO	Management & Signaling (LAN3 is redundant to LAN 2)	
LAN_REDUNDANCY = YES MULTIPLE_SERVICES = YES	Management	Management

Management Redundancy - Collaboration Server (RMX) 1800

On the RealPresence Collaboration Server 1800, for Management Redundancy, the **LAN 2** port is redundant to the **LAN 1** port and must have a LAN cable connected.

LAN Redundancy is not supported by Collaboration Server (RMX) 1800 with no DSP cards.

RealPresence Collaboration Server 1800 - LAN 2 connection on Rear Panel

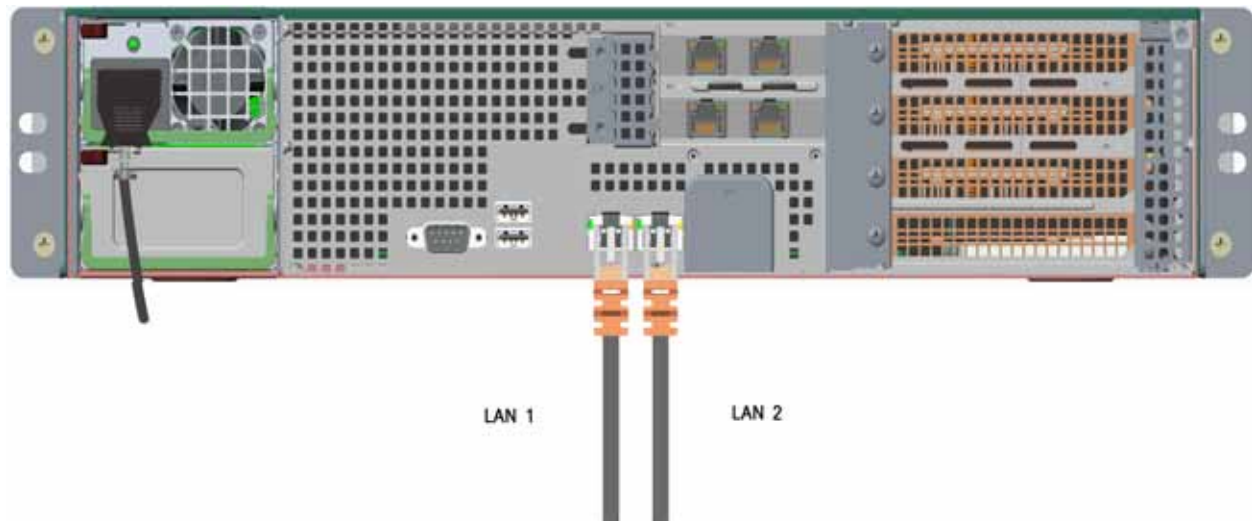

On the RealPresence Collaboration Server 1800, Management Redundancy is implemented using the **LAN 1** and **LAN 2** ports and is dependent on the settings of the **LAN_REDUNDANCY** and **MULTIPLE_SERVICES** System Flags as summarized in the following table.

RMX 1800 - Management Redundancy - System Flags

Flag / Value	Port Usage	
	LAN 1	LAN 2
LAN_REDUNDANCY = NO MULTIPLE_SERVICES = NO	Management	Media and Signaling
LAN_REDUNDANCY = NO MULTIPLE_SERVICES = YES	Management	Media and Signaling
LAN_REDUNDANCY = YES MULTIPLE_SERVICES = NO	Management, Media and Signaling.	LAN 2 is redundant to LAN 1
LAN_REDUNDANCY = YES MULTIPLE_SERVICES = YES	These flags cannot be set to YES simultaneously.	

Configuration Requirements

LAN Redundancy is disabled by default and is enabled by changing the **LAN_REDUNDANCY** system flag to **YES** and connecting the appropriate LAN cables to the LAN ports on the Collaboration Server as follows:

RealPresence Collaboration Server 1800

- » Connect the additional LAN cable to **LAN 2** port on the rear panel of the Collaboration Server 1800.

RealPresence Collaboration Server (RMX) 2000



On a RealPresence Collaboration Server (RMX) 2000, one RTM LAN card is required. For more information see the *RealPresence Collaboration Server (RMX) 2000 Hardware Guide, Installing or Replacing the RTM LAN*.

- Connect the additional LAN cable to **LAN 1** port on the RTM LAN.
- In the **Setup > System Configuration > System Flags** dialog box, add the flag **RMX2000_RTM_LAN** and set it to **YES** to activate the installed RTM LAN card.
- On the RealPresence Collaboration Server (RMX) 2000, LAN Redundancy can be enabled simultaneously with Multiple Networks. To enable the Multiple Networks option, set the **MULTIPLE_SERVICES** flag to **YES**.
- A system reset is required when adding the **RMX2000_RTM_LAN** flag.

RealPresence Collaboration Server (RMX) 4000

- Connect the additional LAN cable to **LAN 1** port on the RTM LAN.
- On the RealPresence Collaboration Server (RMX) 4000, LAN Redundancy can be enabled simultaneously with Multiple Networks. To enable the Multiple Networks option, set the **MULTIPLE_SERVICES** flag to **YES**.
- If required, reset the Collaboration Server.

On all systems:

- LAN Redundancy can be disabled by setting the **LAN_REDUNDANCY** System Flag to **NO**.
- If the **LAN_REDUNDANCY** System Flag value set to **NO**, the LAN 2 port must be connected to the IP network.



On the RMX 2000/4000, full media redundancy is supported if only one IP Network Service is defined per media card.

Hardware Monitor Indications

When LAN Redundancy is enabled on the Collaboration Server, LAN 2 port is **Active**. With LAN redundancy, when LAN LEDs are lit they indicate that a physical connection of the cables is present but does not indicate their activity status. In the **Hardware Monitor** pane the **Lan List** displays the Collaboration Server LAN ports together with their **Status** indication.

Slot	Port	Type	Status	802.1x status	802.1x method	802.1x failure
4		Management	Active	Not Configured	Off	
2		Media	Active	Authenticated	PEAPv0 MSCHAPv2	
1		Media	Active	Not Configured	Off	
3		Modem	Inactive	Not Configured	Off	
5		Sim	Active	Failed	EAP-TLS	Bad Configuration
3		Signaling	Active	Authenticated	EAP-MD5	

The **Hardware Monitor Status** indications are summarized in the following table:

RTM LAN Indications

Status	Description
Active	The LAN port cable is connected.
Inactive	The LAN port cable is not connected.
Standby	The LAN Redundancy option is enabled and this LAN port is the redundant and in standby mode. In case of failure, this port becomes active.

Network Traffic Control

The Network Traffic Control mechanism controls the level of UDP packets generated by the system. It regulates a set of queuing systems and mechanisms by which UDP packets are received and transmitted to the network router.

During a conference blast-out UDP packets can cause overloads on the network. MCU bandwidth usage can increase to above the designated conference participant line rate settings, causing network bandwidth issues such as latency and packet loss.

Three Network Traffic Control Flags are used to control the Network Traffic mechanism:

- **ENABLE_TC_PACKAGE -**

When the flag is set to **NO** (default), **Network Traffic Control** is disabled on the Collaboration Server. Set the flag to **YES** to enable Network Traffic Control.

- **TC_BURST_SIZE -**

This flag regulates the Traffic Control buffer or max burst size as a percentage of the participant line rate. In general, higher traffic rates require a larger buffer. For example, if the flag is set to 10 and the participants line rate is 2MB, then the burst size is 200Kbps.

Default = 10

Flag range: 1-30.

- **TC_LATENCY_SIZE -**

This flag limits the latency (in milliseconds) or the number of bytes that can be present in a queue.

Default = 500

Flag range: 1-1000 (in milliseconds).

SIP Proxy Failover With Polycom® Distributed Media Application™ (DMA™) 7000

Collaboration Server systems that are part of a RealPresence DMA system environment can benefit from the RealPresence DMA system's SIP Proxy Failover functionality.

SIP Proxy Failover is supported in the RealPresence DMA system's Local Clustering mode with redundancy achieved by configuring two DMA servers to share a single virtual IP address.

The virtual IP address is used by the Collaboration Server as the IP address of its SIP Proxy.

No additional configuration is needed on the Collaboration Server.

Should a SIP Proxy failure occur in one of the RealPresence DMA system servers:

- The other RealPresence DMA system server takes over as SIP Proxy.
- Ongoing calls may be disconnected.
- Previously ongoing calls will have to be re-connected using the original IP address, registration and connection parameters.
- New calls will connect using the original IP address, registration and connection parameters.

RealPresence Collaboration Server (RMX) Network Port Usage

The following table summarizes the port numbers and their usage in the <Product Name>:

Server Network Port Usage Summary

Connection Type	Port Number	Protocol	Description	Configurable
HTTP	80	TCP	Management between the Collaboration Server and Collaboration Server Web Client.	No
HTTPS	443	TCP	Secured Management between the Collaboration Server and Collaboration Server Web Client.	No
DNS	53	UDP	Domain name server.	Can be disabled in the IP Network Service.
DHCP	68	UDP	Dynamic Host Configuration Protocol.	Can be disabled in the IP Network Service.
SSH	22	TCP	Secured shell. It is the Collaboration Server terminal. SSH is not supported when the Collaboration Server is in Ultra Secure Mode. For more information see Ultra Secure Mode .	No
NTP	123	UDP	Network Time Protocol. Enables access to a time server on the network.	No
H.323 GK RAS	1719	UDP	Gatekeeper RAS messages traffic.	No
H.323 Q.931	1720 - incoming; 49152-59999 - outgoing	TCP	H.323 Q.931 call signaling. Each outgoing call has a separate port. The port for each outgoing call is allocated dynamically.	Yes - for outgoing calls only. It is configured in the Fixed Ports section of the IP service.

Server Network Port Usage Summary

Connection Type	Port Number	Protocol	Description	Configurable
H.323 H.245	49152 - 59999	TCP	H.245 control. Each outgoing call has a separate port. The port for each outgoing call is allocated dynamically. It can be avoided by tunneling.	Yes - for outgoing calls only. It is configured in the Fixed Ports section of the IP service.
SIP server	5060 60000	UDP, TCP	Connection to the SIP Server. Sometimes port 60000 is used when the system cannot reuse the TCP port. This port can be set in the Central signaling (CS) configuration file.	Yes - in the IP service.
Alternative SIP server	5060 60000	UDP, TCP	Connection to the alternate SIP Server. Sometimes port 60000 is used when the system cannot reuse the TCP port. This port can be set in the Central signaling (CS) configuration file.	Yes - in the IP service.
SIP Outbound proxy	5060 60000	UDP, TCP	Connection to the SIP outbound proxy. Sometimes port 60000 is used when the system cannot reuse the TCP port. This port can be set in the Central signaling (CS) configuration file.	Yes - in the IP service.
Alternative SIP Outbound proxy	5060 60000	UDP, TCP	Connection to the alternate SIP outbound proxy. Sometimes port 60000 is used when the system cannot reuse the TCP port. This port can be set in the Central signaling (CS) configuration file.	Yes - in the IP service.
SIP-TLS	60002	TCP	Required for Binary Floor Control Protocol (BFCP) functionality for SIP People+Content content sharing.	No - port is not opened if SIP People+Content is disabled.
RTP	49152 - 59999	UDP	RTP media packets. The ports are dynamically allocated.	Yes - It is configured in the Fixed Ports section of the IP service.

Server Network Port Usage Summary

Connection Type	Port Number	Protocol	Description	Configurable
RTCP	49152 - 59999	UDP	RTP control. The ports are dynamically allocated.	Yes - It is configured in the Fixed Ports section of the IP service.
SIP -TLS	5061	TCP	SIP -TLS for SIP server, alternate SIP server, outbound proxy and alternate outbound proxy.	No

Defining ISDN/PSTN Network Services

To enable the RealPresence Collaboration Server (RMX) to function within ISDN/PSTN network environments, network parameters must be defined for the ISDN/PSTN Network Service.

The configuration dialog boxes for both these network services are accessed from the **RMX Management** pane of the RMX Web Client or RMX Manager.

Display N	Status	ID	Start Tim	Enc	Name	Span Typ	Service Type
POLY	⚠ Singl	52683	3:25 PM	5:	ISDN/PSTN Service	T1	PRI



Note: DSP Cards

RealPresence Collaboration Servers (RMX) 1800 support ISDN/PSTN only with 3 DSP cards installed, and with built-in ISDN hardware.

RealPresence Collaboration Server (RMX) 1800-0 does not utilize DSP cards and does not support ISDN/PSTN connections.

ISDN/PSTN Network Services Overview

To enable ISDN and PSTN participants to connect to the MCU, an ISDN/PSTN Network Service must be defined. A maximum of two ISDN/PSTN Network Services, of the same Span Type (E1 or T1) can be defined for the Collaboration Server. Each Network Service can attach spans from either or both cards.

Most of the parameters of the first ISDN/PSTN Network Service are configured in the Fast Configuration Wizard, which runs automatically if an RTM ISDN card is detected in the Collaboration Server during first time power-up. For more information, see Procedure 1: First-time Power-up in the *Polycom RealPresence Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*.

Supported Capabilities and Conferencing Features:

- ISDN video is supported only in **Continuous Presence** (CP) conferences.
- Only BONDING (using multiple channels as a single, large bandwidth channel) is supported.
- Simple audio negotiation.
- Supported video resolutions are the same as for IP.
- Supported video Protocols are the same as for IP: H.261, H.263, H.264.
- H.239 for content sharing.
- Lecture Mode.
- DTMF codes.
- Securing of conferences.
- Basic cascading between two MCUs using an ISDN link is available and forwarding of DTMF codes can be suppressed.

Non Supported Capabilities and Conferencing Features:

- NFAS (Non-Facility Associated Signaling)
- Leased line usage
- Restricted Channel mode
- Aggregation of channels
- E1 and T1 spans cannot operate simultaneously
- V.35 serial standards
- Primary and secondary clock source configuration (they are automatically selected by the system)
- Auto detection of **Audio Only** setting at endpoint
- Auto re-negotiation of bit rate
- Additional network services (two currently supported)
- Change of video mode (capabilities) from remote side during call
- Audio algorithms G.729 and G.723.1
- FECC
- H.243 Chair Control
- T.120 data sharing protocol
- H.261 Annex D
- MIH Cascading using an ISDN connection as cascade link

Adding/Modifying ISDN/PSTN Network Services

The system administrator can use the RMX Management – ISDN/PSTN Network Services section of the Collaboration Server Web Client to add a second ISDN/PSTN Network Service or modify the first ISDN/PSTN Network Service.



A new ISDN/PSTN Network Service can be defined even if no RTM ISDN card is installed in the system.

Obtaining ISDN/PSTN required information

Before configuring the ISDN/PSTN Network Service, obtain the following information from your ISDN/PSTN Service Provider:


- Switch Type
- Line Coding and Framing
- Numbering Plan
- Numbering Type
- Dial-in number range




If the Collaboration Server is connected to the public ISDN Network, an external CSU or similar equipment is needed.


To Add an ISDN/PSTN Network Service:

- 1 In the **RMX Management** pane, click **ISDN/PSTN Network Services** .

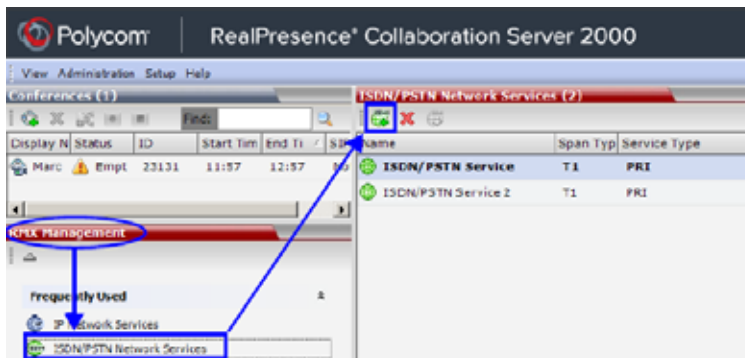

- 2 In the **ISDN/PSTN Network Services** list menu, click **New ISDN/PSTN Service** (), or right-click anywhere in the **ISDN/PSTN Network Services** list and select **New ISDN/PSTN Service**.

The Fast Configuration Wizard sequence begins with the **ISDN/PSTN** dialog box:

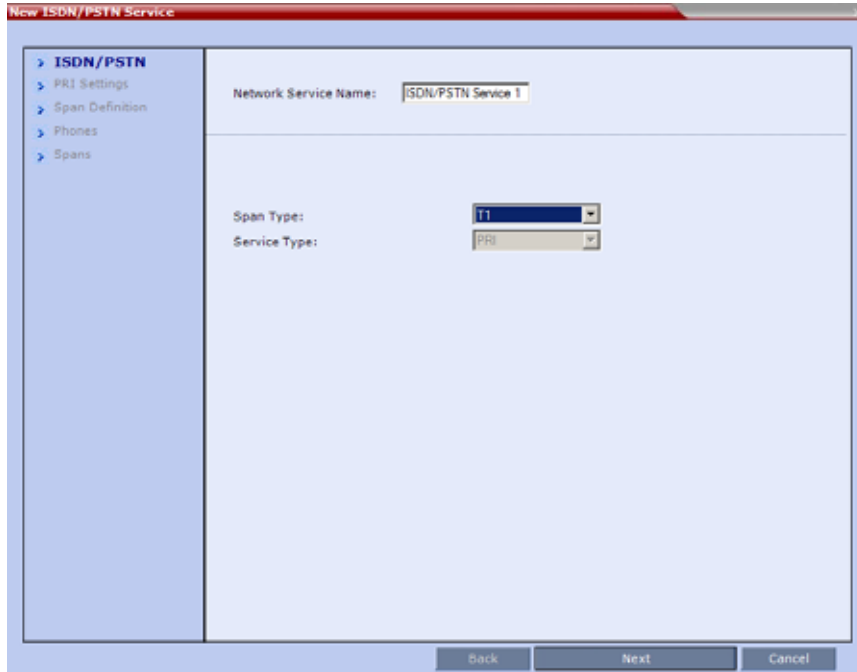


- 3 Define the following parameters:

ISDN Service Settings

Field	Description
Network Service Name	Specify the service provider's (carrier) name or any other name you choose, using up to 20 characters. The Network Service Name identifies the ISDN/PSTN Service to the system. Default name: ISDN/PSTN Service Note: This field is displayed in all ISDN/PSTN Network Properties tabs and can contain character sets that use Unicode encoding.
Span Type	Select the type of spans (ISDN/PSTN) lines, supplied by the service provider, that are connected to the Collaboration Server. Each span can be defined as a separate Network Service, or all the spans from the same carrier can be defined as part of the same Network Service. Select either: <ul style="list-style-type: none"> • T1 (U.S. – 23 B channels + 1 D channel) • E1 (Europe – 30 B channels + 1 D channel) Default: T1 Note: E1 and T1 spans cannot operate simultaneously.
Service Type	PRI is the only supported service type. It is automatically selected.

4 Click **Next**.

The **PRI Settings** dialog box is displayed:

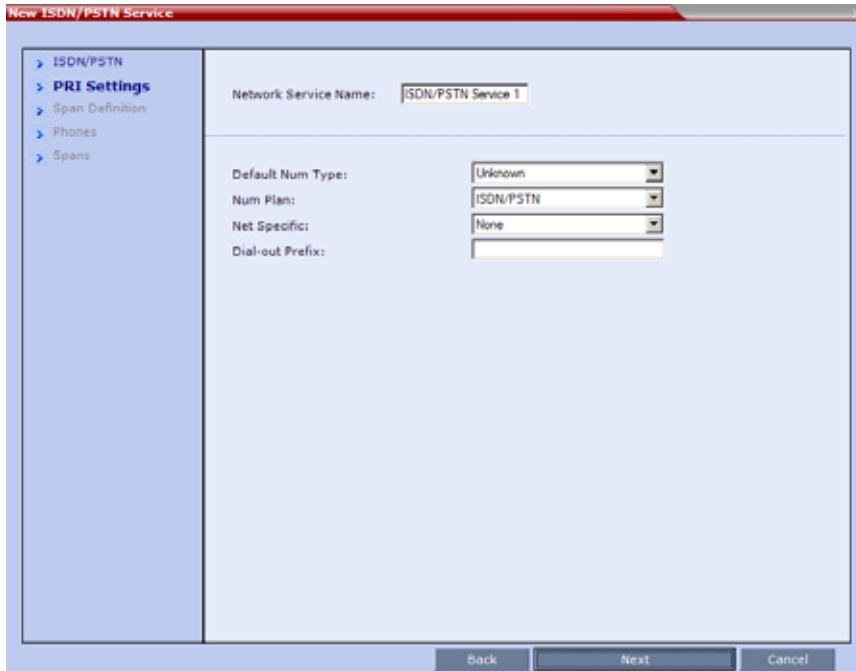

5 Define the following parameters:

ISDN Service Settings


Field	Description
Default Num Type	<p>Select the Default Num Type from the list.</p> <p>The Num Type defines how the system handles the dialing digits. For example, if you type eight dialing digits, the Num Type defines whether this number is national or international.</p> <p>If the PRI lines are connected to the Collaboration Server via a network switch, the selection of the Num Type is used to route the call to a specific PRI line. If you want the network to interpret the dialing digits for routing the call, select Unknown.</p> <p>Default: Unknown</p> <p>Note: For E1 spans, this parameter is set by the system.</p>
Num Plan	<p>Select the type of signaling (Number Plan) from the list according to information given by the service provider.</p> <p>Default: ISDN</p> <p>Note: For E1 spans, this parameter is set by the system.</p>
Net Specific	<p>Select the appropriate service program if one is used by your service provider (carrier).</p> <p>Some service providers may have several service programs that can be used.</p> <p>Default: None</p>

ISDN Service Settings

Field	Description
Dial-out Prefix	Enter the prefix that the PBX requires to dial out. Leave this field blank if a dial-out prefix is not required. The field can contain be empty (blank) or a numeric value between 0 and 9999 . Default: Blank

6 Click **Next**.

The **Span Definition** dialog box is displayed:

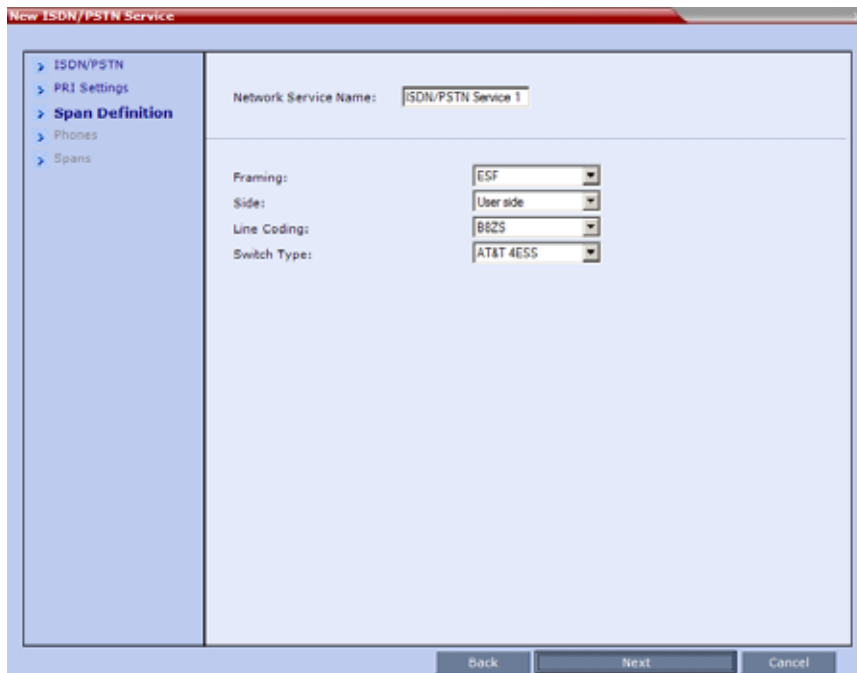

7 Define the following parameters:


Span Definition

Field	Description
Framing	Select the Framing format used by the carrier for the network interface from the list. <ul style="list-style-type: none"> For T1 spans, default is SFSF. For E1 spans, default is FEBE.

Span Definition

Field	Description
Side	<p>Select one of the following options:</p> <ul style="list-style-type: none"> • User side (default) • Network side • Symmetric side <p>Note: If the PBX is configured on the network side, then the Collaboration Server unit must be configured as the user side, and vice versa, or both must be configured symmetrically.</p>
Line Coding	<p>Select the PRI line coding method from the list.</p> <ul style="list-style-type: none"> • For T1 spans, default is B8ZS. • For E1 spans, default is HDB3.
Switch Type	<p>Select the brand and revision level of switch equipment installed in the service provider's central office.</p> <ul style="list-style-type: none"> • For T1 spans, default is AT&T 4ESS. • For E1 spans, default is EURO ISDN. <p>Note: For T1 configurations in Taiwan, Framing must be set to ESF and Line Coding to B8ZS.</p>

- 8 Click **Next**.
The **Phones** dialog is displayed.
- 9 To define dial-in number ranges click the **Add** button.
- 10 The **Add Phone Number** dialog box opens.

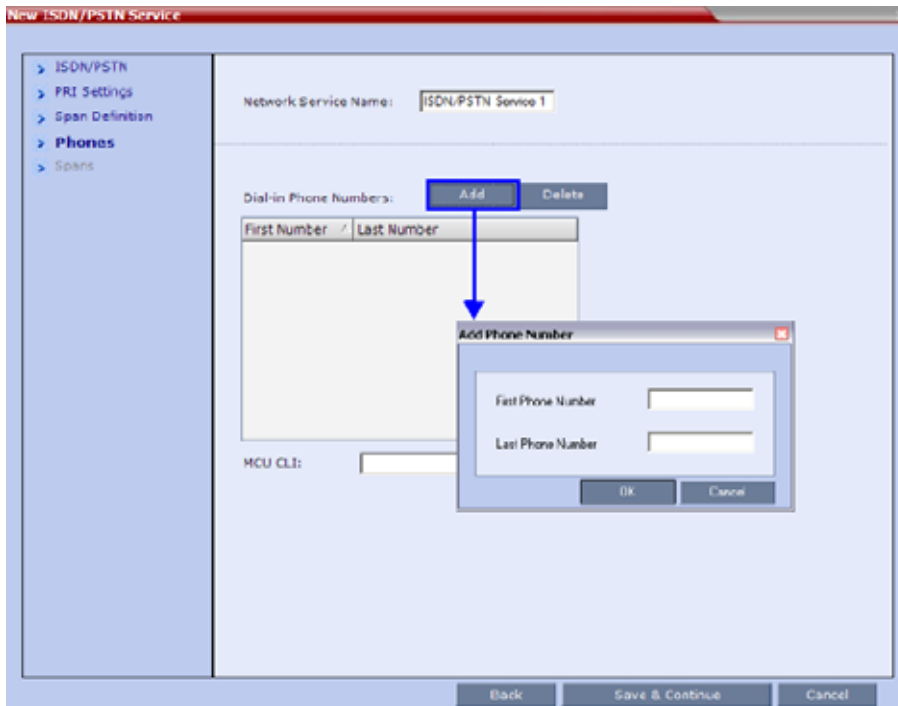

11 Define the following parameters:

Phones Settings

Field	Description
First Number	The first number in the phone number range.
Last Number	The last number in the phone number range.



- A range must include at least two dial-in numbers.
- A range cannot exceed 1000 numbers.

12 Click **OK**.

The new range is added to the **Dial-in Phone Numbers** table.

13 To define additional dial-in ranges, repeat steps 8 to 10.

14 Enter the **MCU CLI** (Calling Line Identification).

In a dial-in connections, the **MCU CLI** indicates the MCU's number dialed by the participant. In a dial-out connection, indicates the MCU (CLI) number as seen by the participant

15 Click **Save & Continue**.

After clicking **Save & Continue**, you cannot use the **Back** button to return to previous configuration dialog boxes.

The ISDN/PSTN Network Service is created and confirmed.


16 Click **OK** to continue the configuration.

The **Spans** dialog box opens displaying the following read-only fields:

- **ID** – The connector on the ISDN/PSTN card (PRI1 - PRI12).
- **Slot** – The media card that the ISDN/PSTN card is connected to (1 or 2)
- **Service** – The Network Service to which the span is assigned, or blank if the span is not assigned to a Network Service
- **Clock Source** – Indicates whether the span acts as a clock source, and if it does, whether it acts as a Primary or Backup clock source. The first span to synchronize becomes the primary clock source.
- **State** – The type of alarm: No alarm, yellow alarm or red alarm.

- 17 Attach spans to existing Network Services, by marking the appropriate check boxes in the **Attached** field.

Each ISDN/PSTN card can support 7 E1 or 9 T1 PRI lines.

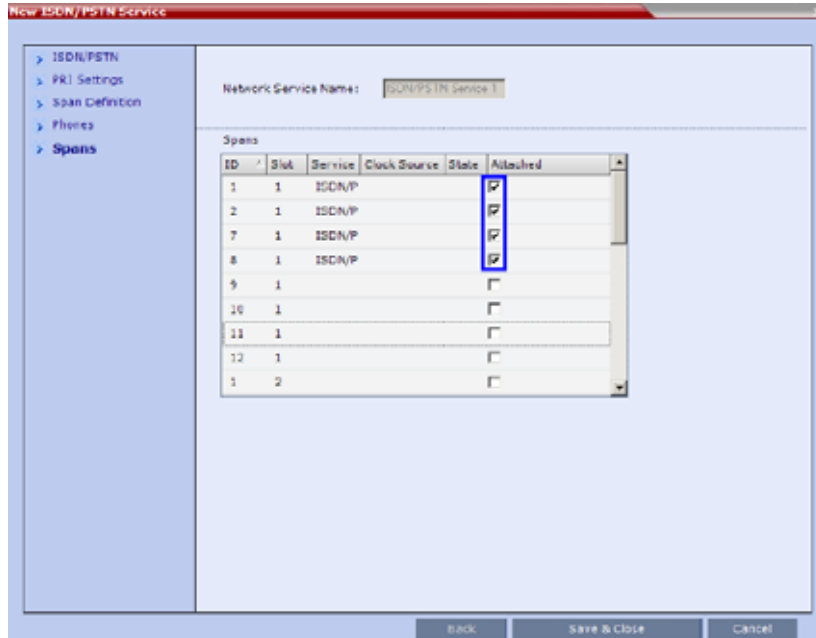

- 18 Click **Save & Close**.

Modifying an ISDN/PSTN Network Service

To Modify an ISDN/PSTN Network Service:

- 1 In the **RMX Management** pane, click **ISDN/PSTN Network Services** (ISDN).
- 2 In the **ISDN/PSTN Network Services** list, double-click the **ISDN** or right-click the **ISDN** entry and select **Properties**.

The **ISDN Properties** dialog boxes are displayed. They are similar to the **Fast Configuration Wizard's** dialog boxes. For more information see [Adding/Modifying ISDN/PSTN Network Services](#).

The following **ISDN Properties** can be modified:

- PRI Settings
 - ◆ Net Specific
 - ◆ Dial-out Prefix
- Span Definition
 - ◆ Framing
 - ◆ Side
 - ◆ Line Coding
 - ◆ Switch Type
- Phones

- ◆ Dial-in Phone Numbers
- ◆ MCU CLI
- Spans
 - ◆ Attached

All other **ISDN Properties** can only be modified by deleting the ISDN/PSTN network service and creating a new PSTN service using the Fast Configuration Wizard. For more information, see [Adding/Modifying ISDN/PSTN Network Services](#).

Network Security

System security can be enhanced by separating the Media, Signaling and Management Networks.

Collaboration Server (RMX) 4000

On the Collaboration Server (RMX) 4000, Media, Signaling and Management Networks are physically separated to provide enhanced security. The Default IP Network Service and the Management Network Service have been logically and physically separated from each other. In the IP Network Service each IP address is assigned a physical port and media (RTP) inputs are routed directly to a media card. This provides for a more secure network with greater bandwidth as each media card has its own dedicated port. All signaling communications are processed on a single stack of the processor in the Collaboration Server.

Collaboration Server 1800

On the RealPresence Collaboration Server 1800 the Default IP Network Service and the Management Network Service have been logically and physically separated from each other to provide enhanced security. The Collaboration Server 1800 includes two LAN ports that can be used for separating the management network from the signaling and media network or if Multiple Networks option is enabled, each LAN port is used for signaling, media and management per Network Service.

Collaboration Server (RMX) 2000

On the RealPresence Collaboration Server (RMX) 2000 a RTM LAN or RTM ISDN card is required to enable the separation between the networks. By defining Multiple Network Services, a separate network can be defined for each media card installed in the system.

For more information see Procedure 5: Enable Network Separation (RMX 2000) in the *RealPresence Collaboration Server (RMX) 1800/2000/4000 Deployment Guide for Maximum Security Environments*.

Multiple Network Services

Media, signaling and management networks can be physically separated on the Collaboration Server system to provide enhanced security. This addresses the requirement in an organization that different groups of participants be supported on different networks. For example, some participants may be internal to the organization while others are external.

Up to eight media and signaling networks can be defined for the Collaboration Server (RMX) 4000, or four for the RealPresence Collaboration Server (RMX) 2000 and two for the Collaboration Server (RMX) 1800.


Multiple IP Network Services can be defined; up to two for each media and signaling network connected to the Collaboration Server. The networks can be connected to one or several Media cards in the Collaboration Server unit.

The Management Network is logically and physically separated from the media and signaling networks. There can be one Management Network defined per Collaboration Server system.

Each conference on the Collaboration Server can host participants from the different IP Network networks simultaneously.


The following figure shows the network topology with three different media and signaling networks and one Management network connected to the Collaboration Server (RMX) 4000.

Collaboration Server (RMX) 4000 - Multiple Networks Topology Sample

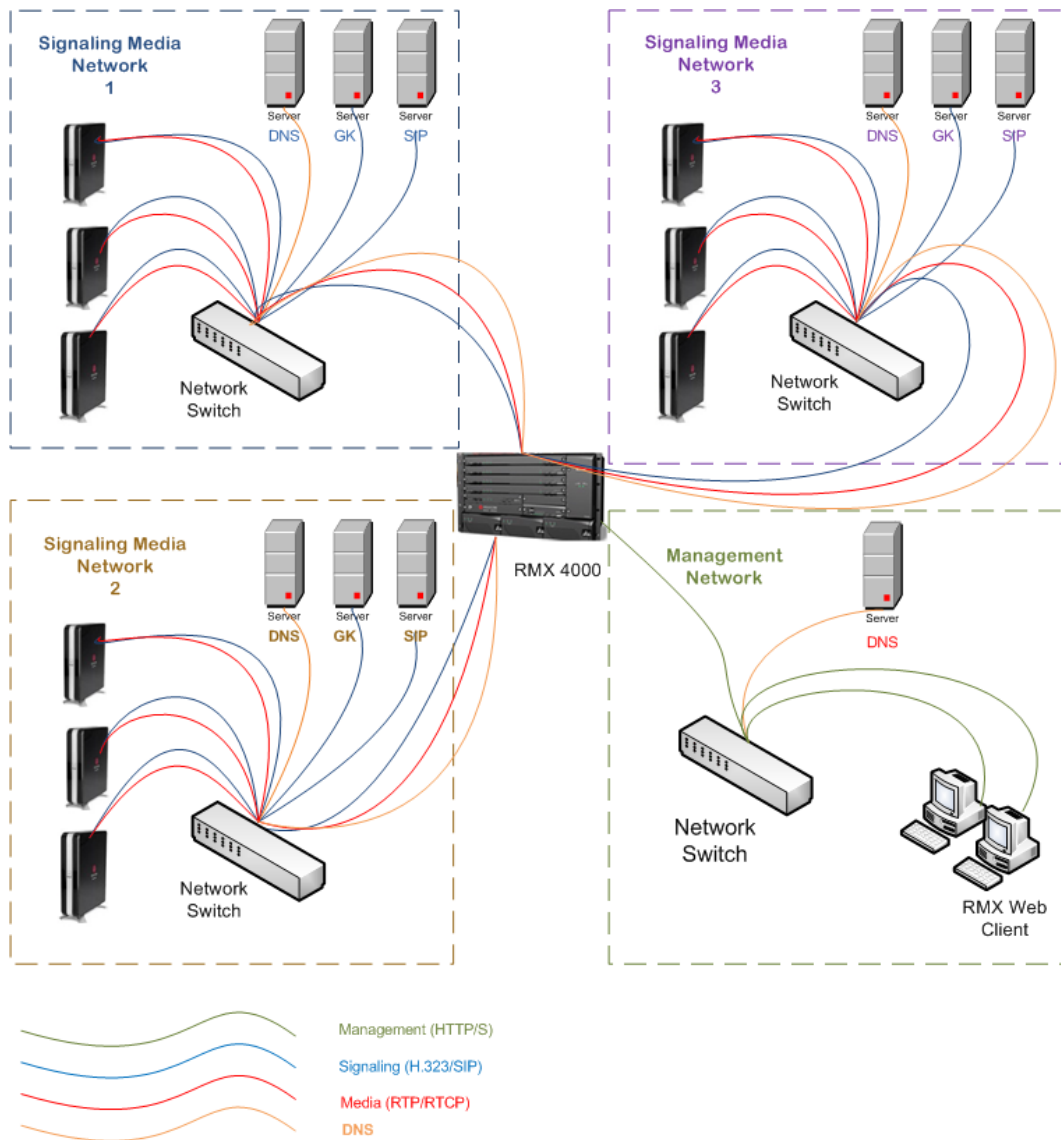

The following figure shows the network topology with two different media and signaling networks and one Management network connected to the Collaboration Server (RMX) 1800.

Collaboration Server (RMX) 1800 - Multiple Networks Topology Sample

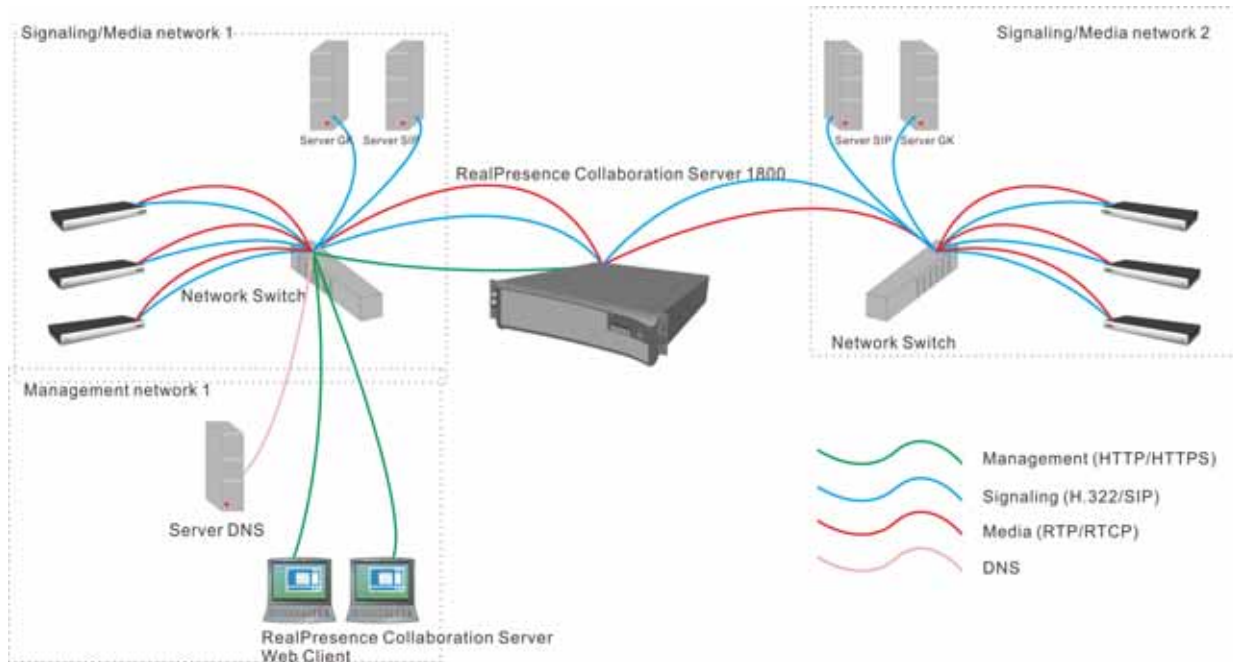

Guidelines

- Multiple Services system mode is a purchasable option and it is enabled in the MCU license.
- Multiple Network Services are supported in MCUs with at least 1024MB memory only. MCU units with memory of 512MB support only one IP Network Service.
- Multiple Services system mode is enabled when the system configuration flag **MULTIPLE_SERVICES** is added and set to **YES**.
- Only IPv4 is supported for the definition of Multiple Network Services.



The **MULTIPLE_SERVICE** System Flag cannot be set to **YES** when **IPv6 Addressing** is enabled.

- When configuring Multiple Networks on the RealPresence Collaboration Server (RMX) 2000, the **RMX2000_RTM_LAN** flag must be set to **YES** in addition to the **MULTIPLE_NETWORKS=YES** flag.
- Multiple Network Services are not supported with Microsoft ICE Environments in versions prior to **Version 7.8**.
- Up to two Network Services, one per LAN port, can be associated with each Media card.
- An IP Network Service can be associated with one or several media cards. If more than one card is associated with the same Network Service, the system routes the calls to the appropriate card according to resource availability.

- On the Collaboration Server (RMX) 2000/4000, both RTM ISDN or RTM LAN can be used for Multiple Services configuration. However, if RTM ISDN is installed and used for Multiple Services configuration, only one Network Service can be associated with the media card to which the RTM/ISDN card is attached.
- On the Collaboration Server (RMX) 1800, LAN redundancy cannot be enabled in parallel to Multiple Networks and the **LAN_REDUNDANCY** flag must be set to **NO** when the Multiple Networks option is enabled.
- Participants on different networks can connect to the same conference with full audio, video and content capabilities.
- Traffic on one network does not influence or affect the traffic on other networks connected to the same MCU, unless they are connected to the same media card. If one network fails, it will not affect the traffic in the other connected networks, unless they are connected to the same media card and the card fails.
- Maximum number of services that can be defined per Collaboration Server platform:

Maximum Number of Network Services per Collaboration Server System

MCU	Total Media Cards	Network Services (Up to 2 per Media Card)	Management Services	Network Services that Include ICE (1 / Media Card)
1800 (Excluding (RMX) 1800 with no DSP cards)	3 (DSP Cards)	Up to 2	1	1
2000	2	Up to 4 when using 2 RTM LAN cards. Less when using a combination of RTM ISDN and RTM LAN, or 2 RTM ISDN cards.	1	2
4000	4	Up to 8 when using 4 RTM LAN cards. Less when using up to 2 RTM ISDN cards and the remaining RTM LAN cards.	1	4

- From Version 7.8 onwards, a DNS server can be specified for each IP Network Service and for the Collaboration Server Management Network Service.
 - In the Network Services that do not include the DNS, use the IP addresses of the various devices to define them in the Network Services.
- Participants are associated with a Network Service and use it resources as follows:
 - Dial-in participants - according to the network used to place the call and connect to the Collaboration Server.
 - Dial-out participant - according to the Network Service selected during the participant properties definition or during conference definition, according to the Network Service selected as default.

- Recording Links use the default Network Service to connect to conferences, therefore the recording system must be defined on the default network to enable the recording.

Resource Allocation and Capacity

The Resolution Configuration affect the resource capacity of the MCU. They are reflected in the port gauges displayed on the Collaboration Server management application's main screen. In Multiple Networks mode, the overall resources are divided between the Network Services. However, the port gauges do not reflect the resource availability per Network Service. For more information see [Resource Capacity](#).

First Time Installation and Configuration

First Time Installation and Configuration of the RealPresence Collaboration Server (RMX) 1800/2000/4000 consists of the following procedures:

- 1 Preparations:
 - Gather Network Equipment and Address Information Get the information needed for integrating the Collaboration Server into the local network for each of the networks that will be connected to the Collaboration Server.
 - Unpack the Collaboration Server.
 - Modify the Management Network parameters on the USB Key.
- 2 Hardware Installation and Setup:
 - Mount the Collaboration Server in a rack.
 - Connect the necessary cables.
- 3 First Entry Power-up and Configuration:
 - Power up the Collaboration Server.
 - Register the Collaboration Server.
 - Connect to the Collaboration Server.
 - Configure the Default IP Network Service.
 - Configure the ISDN/PSTN Network Service.
 - Modify the required System Flag to enable Multiple Services and reset the MCU.
- 4 Add the required IP Network Services to accommodate the networks connected to the Collaboration Server.
- 5 Select a Network Service to act as default for dial out and gateway calls for which the Network Service was not selected.
- 6 Place several calls and run conferences to ensure that the system is configured correctly.

For details see [First Time Installation and Configuration](#) in the *Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*.

Upgrading to Multiple Services

- 1 Gather Network Equipment and Address Information for each of the networks that will be connected to the Collaboration Server unit. For a list of required address, see the *Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*, Gather Network Equipment and Address Information.
- 2 Upgrade to the new version and install the activation key that contains the Multiple Services license as described in the *RealPresence Collaboration Server (RMX) 1800/2000/4000 Release Notes*.

- 3 Place several calls and run conferences to ensure that the system upgrade was completed successfully.
- 4 Modify the required System Flag to enable Multiple Services, DO NOT reset the MCU yet.
- 5 Connect the additional network cables to the Collaboration Server and change existing connections to match the required configuration as described in the appropriate *RealPresence Collaboration Server (RMX) Hardware Guide*.

At this point, the Management Network can be modified to match the required local network settings



If the RealPresence Collaboration Server (RMX) 2000 you are upgrading does not include RTM ISDN or RTM LAN cards, you must install at least one RTM LAN card to enable the definition of multiple Network Services. If no RTM ISDN or RTM LAN cards are installed, the RealPresence Collaboration Server (RMX) 2000 works in a single Network Service mode and an alarm is issued by the system. For more details about the installation of RTM LAN cards, see the *RealPresence Collaboration Server (RMX) 2000 Hardware Guide*.

- 6 Reset the MCU.
- 7 Connect to the MCU and add the required IP Network Services to accommodate the networks connected to the Collaboration Server unit.
- 8 Select a Network Service to act as default for dial out and gateway calls for which the Network Service was not selected.
- 9 Place several calls and run conferences to ensure that the system is configured correctly.

Gather Network Equipment and Address Information - IP Network Services Required Information

It is important that before connecting multiple networks and implementing Multiple Services in the Collaboration Server, that you obtain the information needed to complete the IP Network Service configuration for each connected network from your network administrator.

Network Equipment and Address Information per IP Network Service

Parameter	Note
Signaling Host IP address	
Media Board IP address (MPM 1)	
Media Board IP address (MPM 2) RealPresence Collaboration Server (RMX) 2000/4000 only	If more than one media card is associated with this Network Service
Media Board IP address (MPM 3) Collaboration Server (RMX) 4000 only	If more than one media card is associated with this Network Service
Media Board IP address (MPM 4) Collaboration Server (RMX) 4000 only	If more than one media card is associated with this Network Service
Gatekeeper IP address (optional)	
DNS IP address (optional)	Only one DNS can be defined for the entire Network topology
SIP Server IP address (optional)	

RealPresence Collaboration Server (RMX) Hardware Installation




When connecting the LAN cables of the various networks to the Collaboration Server it is recommended to use a color system to differentiate between the networks, for example, using colored cables.

Collaboration Server (RMX) 4000 Multiple Services Configuration

[Collaboration Server \(RMX\) 4000 Rear Panel with LAN and PRI cables](#) shows the cables connected to the Collaboration Server (RMX) 4000 rear panel, when one RTM ISDN and three RTM LAN cards are installed providing IP and ISDN connectivity. The RTM ISDN card can be used for both ISDN and IP calls and only one IP network Service is associated with each RTM/LAN card.

Collaboration Server (RMX) 4000 Rear Panel with LAN and PRI cables

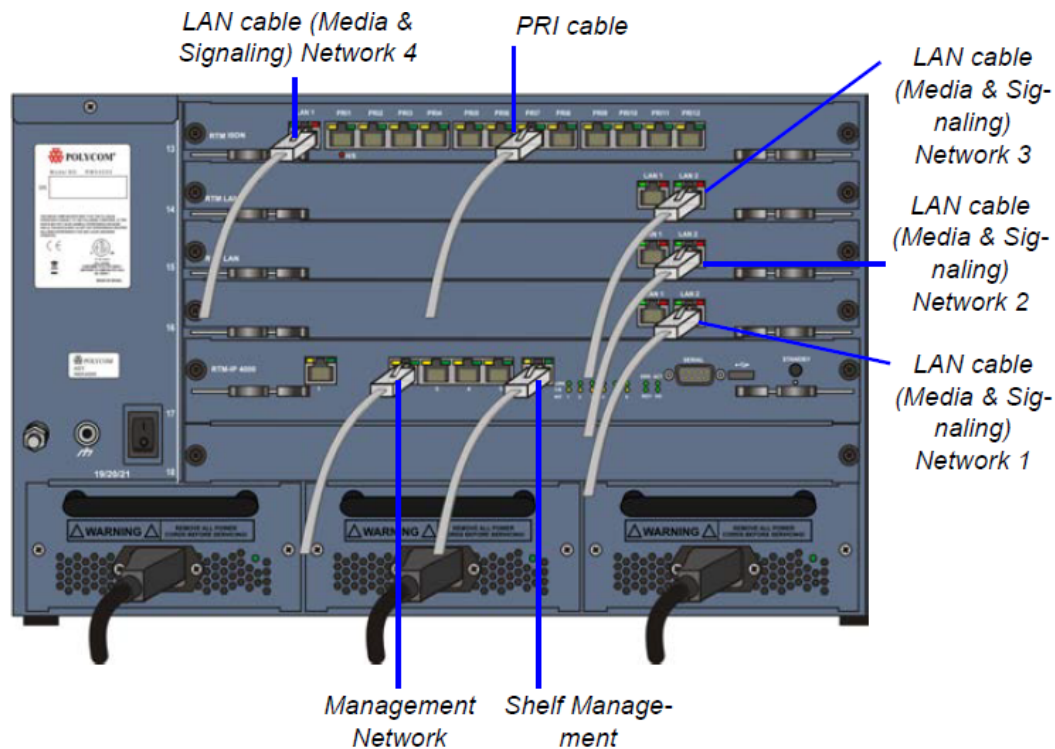


In this case, up to four different IP Network Services can be defined - one for each RTM LAN/RTM ISDN cards installed in the system.

If two LAN ports per each installed RTM LAN card are used, up to three additional Network Services can be defined, bringing it to a total of up to 7 IP Network Services.

Several cards can be assigned to the same IP Network Service. The definition of the network services attached to the Collaboration Server unit and which cards are assigned to each network service is defined in the IP Network Service.

Connecting the cables to the RTM IP 4000

The following cables are connected to the RTM IP on the rear panel of the Collaboration Server (RMX) 4000.

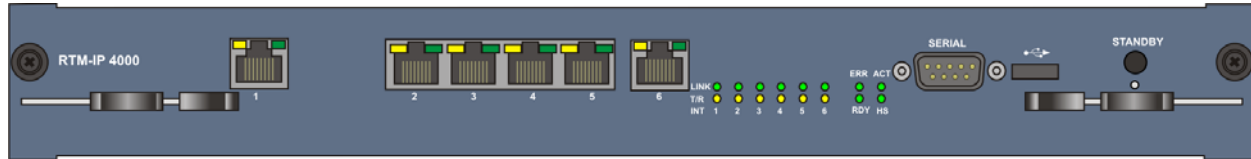

LAN Connections to the RTM IP

RTM IP Port	Description
LAN 1	Modem
LAN 2	Management
LAN 3	–
LAN 4	–
LAN 5	–
LAN 6	Shelf Management

Connecting the cables to the RTM LAN



LAN Connections to the RTM LAN

RTM LAN Port	Description
LAN 1	Signaling and Media - additional (second) Network Service
LAN 2	Signaling and Media - existing (first) Network Service


RealPresence Collaboration Server (RMX) 2000 Multiple Services Configuration

If one LAN port per RTM ISDN/ RTM LAN card is used, up to two different IP Network Services can be defined - one for each installed RTM LAN/RTM ISDN cards.

If two LAN ports per each installed RTM LAN card are used, up to four Network Services can be defined.


[RealPresence Collaboration Server \(RMX\) 2000 Rear Panel with RTM LAN Cables](#) shows the cables connected to the RealPresence Collaboration Server (RMX) 2000 rear panel, when two RTM LAN cards are installed providing IP connectivity. In this case, only one IP network Service can be associated with each RTM LAN card.

RealPresence Collaboration Server (RMX) 2000 Rear Panel with RTM LAN Cables

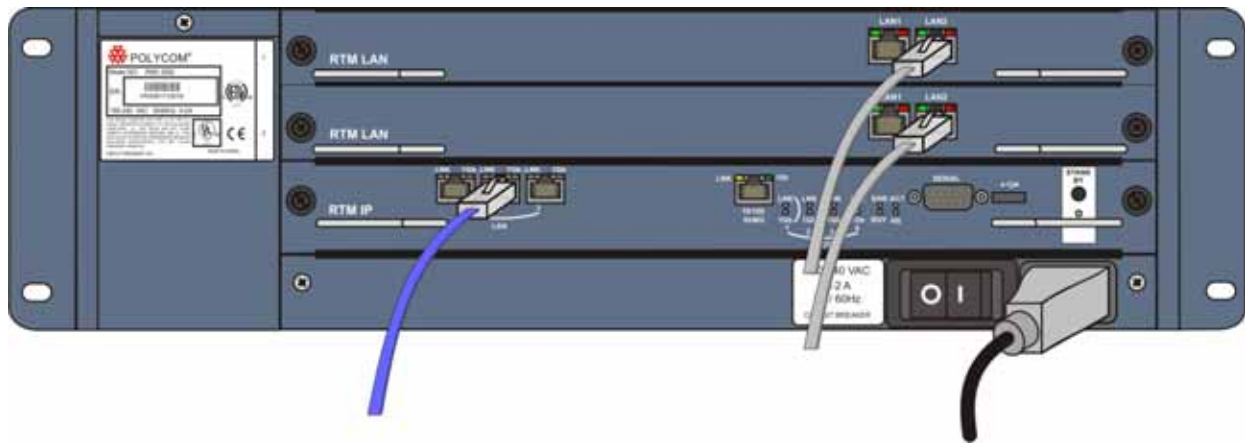

Connecting the cables to the RTM IP

The following cables are connected to the RTM IP on the rear panel of the RealPresence Collaboration Server (RMX) 2000.

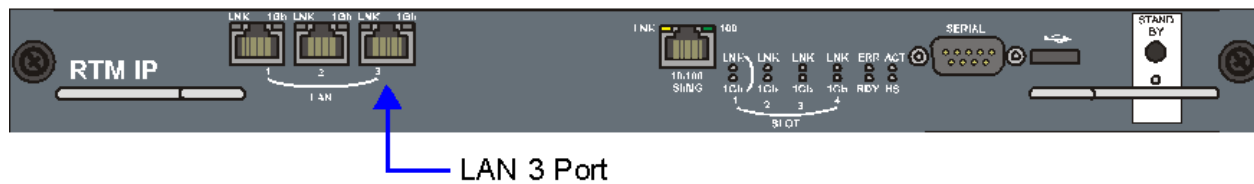


LAN Connections to the RTM IP

RTM IP Port	Description
LAN 1	–
LAN 2	Management
LAN 3	Modem

Connecting the cables to the RTM LAN



If RTM LAN or RTM ISDN cards are not installed on the Collaboration Server, they must be installed before connecting the additional network cables for media and signaling.

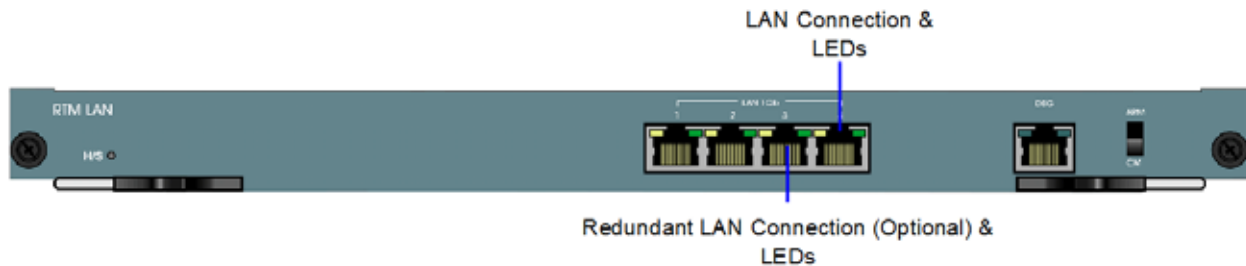

LAN Connections to the RTM LAN


RTM IP Port	Description
LAN 1	Signaling and Media - second Network Service (optional)
LAN 2	Signaling and Media - first Network Service (optional)

Collaboration Server (RMX) 1800 Multiple Services Configuration

Up to two media and signaling networks can be defined for the Collaboration Server (RMX) 1800. Each of these networks can be assigned a different IP Network Services (Multiple IP Network Services).

Connecting the cables to the RealPresence Collaboration Server 1800

Two LAN cables are connected to the LAN ports on the rear panel of the Collaboration Server 1800:

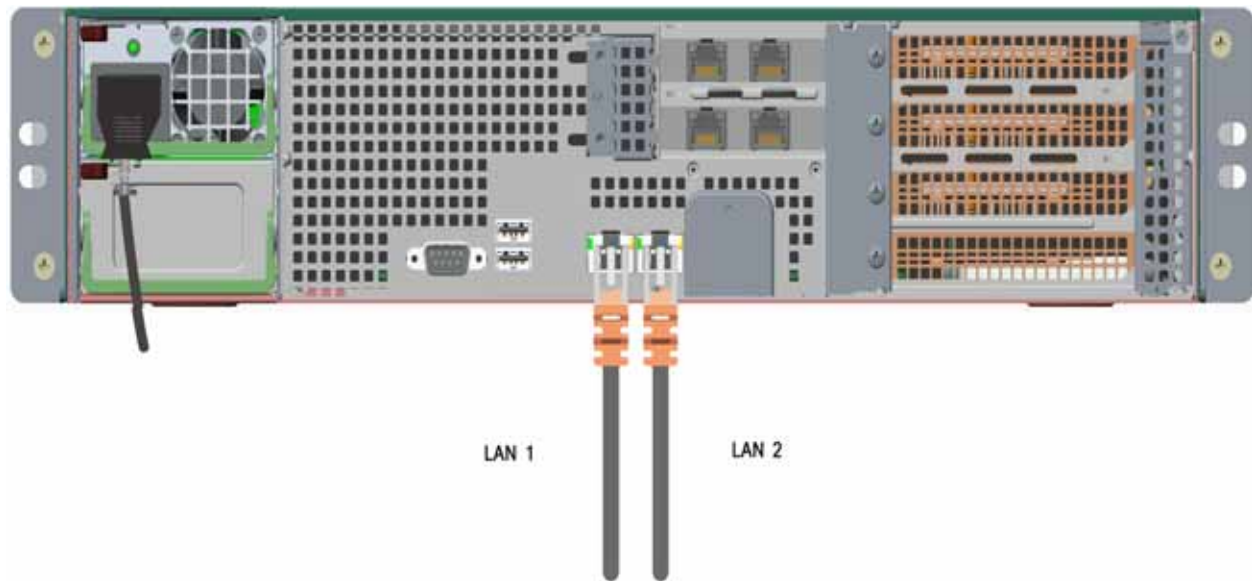

LAN Connections to the IP ports

IP Port	Description
LAN 1	Management, media and signaling for Network Service 1.
LAN 2	Media and signaling for Network Service 2.

Collaboration Server Configuration

Once the network cables are connected to the Collaboration Server, you can modify the default IP Network Service and add additional Network Services.

System Flags and License Settings

The **MULTIPLE_SERVICES** System Flag determines whether the Multiple Services option will be activated once the appropriate license is installed. Possible Values: **YES / NO** Default: **NO**

This flag must be manually added to the system configuration and set to **YES** to enable this option. For more information see .



If the **MULTIPLE_SERVICES** System Flag is set to **YES** and no RTM ISDN or RTM LAN card is installed in the RealPresence Collaboration Server (RMX) 2000, an Active Alarm is displayed.



If the values of either of the **MULTIPLE_SERVICES** or **V35_ULTRA_SECURED_SUPPORT** System Flags are changed from **YES** to **NO**, the defined IP Network Services are not displayed in the IP Network Services list pane: they are, however, saved in the system.

If either of the flag values are changed back to **YES**, the saved defined IP Network Services will be displayed.

IP Network Service Definition

Use this procedure to define Network Services in addition to the Network Service already defined during first entry installation and configuration. Each of the defined Network Service can be associated with one or more media cards installed in the system (depending on the system type).

Once a media card is associated with a Network Service it cannot be associated with another network service.

To add new/additional Network Services:

- 1 In the **Device Management** pane, click **IP Network Services** (🌐).
- 2 In the **Network Services** list toolbar, click the **Add Network Service** button.

The **New IP Service - Networking IP** dialog box opens.

The image displays two screenshots of the 'New IP Service' dialog box in a network management interface.

Top Screenshot: SERVICE 2 Properties (Collaboration Server 1800)

- Network Service Name:** SERVICE 2
- IP Network Type:** H.323 & SIP
- Signaling Host IP Address:**
 - IPv4: 10.220.203.118
 - IPv6: (empty)
- Media 1 IP Address:**
 - IPv4: 0.0.0.0
 - IPv6: (empty)
- Media 2 IP Address:**
 - IPv4: 10.220.203.118
 - IPv6: (empty)

Bottom Screenshot: 100.20 Properties (Collaboration Servers 2000 / 4000)

- Network Service Name:** 100.20
- IP Network Type:** H.323 & SIP
- Signaling Host IP Address:**
 - IPv4: 100.20.0.152
 - IPv6: (empty)
- Media Card 1 IP Address:**
 - Media Card 1 Port 1 IP Address: IPv4: (empty)
 - Media Card 1 Port 2 IP Address: IPv4: (empty)
- Media Card 2 IP Address:**
 - Media Card 2 Port 1 IP Address: IPv4: 0.0.0.0
 - Media Card 2 Port 2 IP Address: IPv4: 0.0.0.0
- Media Card 3 IP Address:**
 - Media Card 3 Port 1 IP Address: IPv4: (empty)
 - Media Card 3 Port 2 IP Address: IPv4: 100.20.0.156
- Media Card 4 IP Address:**
 - Media Card 4 Port 1 IP Address: IPv4: 0.0.0.0
 - Media Card 4 Port 2 IP Address: IPv4: 0.0.0.0
- Subnet Mask:** 255.255.255.0

Buttons: Service Configuration, OK, Cancel

- 3 Define the following fields:

IP Network Service - IP Parameters

Field	Description
Network Service Name	Enter the IP Network Service name. Note: This field is displayed in all IP Signaling dialog boxes and can contain character sets that use Unicode encoding.
IP Network Type	Select the IP Network environment. You can select: <ul style="list-style-type: none"> • H.323 - For an H.323-only Network Service. • SIP - For a SIP-only Network Service. • H.323 & SIP - For an integrated IP Service. Both H.323 and SIP participants can connect to the Collaboration Server using this service. Note: This field is displayed in all Default IP Service tabs.
Signaling Host IP Address	Enter the address to be used by IP endpoints when dialing into the Collaboration Server using this Network Service. Dial out calls of participants to whom this network service will be assigned are initiated from this address. This address is used to register the Collaboration Server with a Gatekeeper or a SIP Proxy server residing on this network.
Media Card 1 Port 1 IP Address Media Card 1 Port 2 IP Address 2	If only one network is connected to this media card, it is enough to assign one media card to this Network Service. In such a case, enter one IP address for the media card according to the LAN Port used for the connection. If each of the LAN ports on one media card is used with two different networks, each port is assigned to its own Network Service. In such a case, enter the IP address of the port to be assigned to this Network Service. A LAN port that is already assigned to a different Network Service, displays the IP Address of the assigned port and it cannot be assigned to this Network Service (it is disabled).


IP Network Service - IP Parameters

Field	Description
Media Card 2 Port 1 IP Address Media Card 2 Port 2 IP Address (RealPresence Collaboration Server (RMX) 2000/4000)	<p>If only one network is connected to this media card, it is enough to assign one media card to this Network Service. In such a case, enter one IP address for the media card according to the LAN Port used for the connection, as provided by the network administrator.</p> <p>If each of the LAN ports on one media card is used with two different networks, each port is assigned to its own Network Service. In such a case, enter the IP address of the port to be assigned to this Network Service.</p> <p>Notes:</p> <ul style="list-style-type: none"> • LAN Ports/Media cards that are already associated with another Network Service cannot be associated with this Network Service. • You can define a Network Service without assigning media cards to it. • To change the assignment of a card from one service to another, the card must first be removed from the service to which it is assigned prior to its assignment to another service.
Media Card 3 Port 1 IP Address/ Media Card 3 Port 2 IP Address (Collaboration Server (RMX) 4000)	<p>RealPresence Collaboration Server (RMX) 2000: If one card was already assigned to another service, only one additional card can be assigned to this service.</p>
Media Card 4 Port 1 IP Address Media Card 4 Port 2 IP Address (Collaboration Server (RMX) 4000)	<p>Collaboration Server (RMX) 4000: Depending on the number of media cards installed in the system, you can assign up to 4 media cards to this network service provided that they are not assigned to any other Network Service.</p>
Subnet Mask	<p>Enter the subnet mask of the Collaboration Server in that network service. Default value: 255.255.255.0.</p>

- 4 **Optional.** Some system flags can be defined per Network Service, depending on the network environment.

To modify these flags, click the **Service Configuration** button.

The **Service Configuration** dialog box opens.

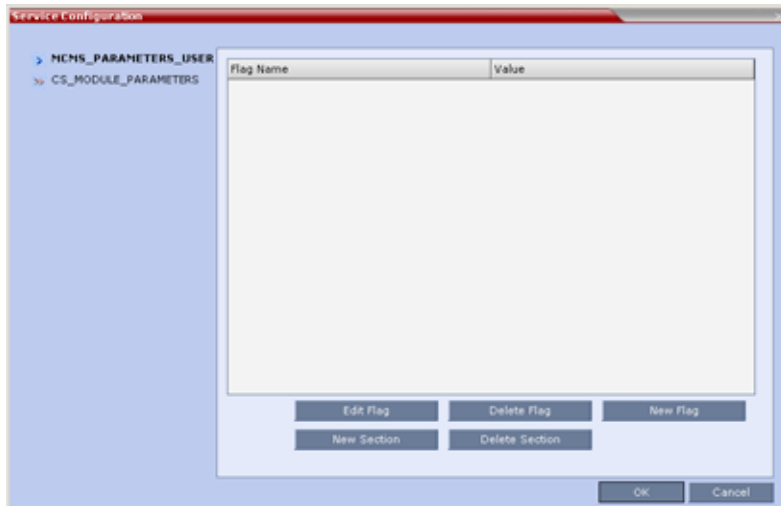

All the flags must be manually added to this dialog box. For a detailed description of the flags and how to add them, see .



Flags defined per Network Service override their general definition in the System Configuration.

The following flags can be defined per service:

- ALLOW_NON_ENCRYPT_PARTY_IN_ENCRYPT_CONF
- ENABLE_H239
- SIP_ENABLE_FECC
- ENABLE_CLOSED_CAPTION
- ALLOW_NON_ENCRYPT_RECORDING_LINK_IN_ENCRYPT_CONF
- NUMERIC_CONF_ID_LEN
- NUMERIC_CONF_ID_MIN_LEN
- NUMERIC_CONF_ID_MAX_LEN
- ENABLE_CASCADED_LINK_TO_JOIN_WITHOUT_PASSWORD
- MAX_CP_RESOLUTION
- QOS_IP_AUDIO
- QOS_IP_VIDEO
- QOS_IP_SIGNALING
- ENABLE_CISCO_GK
- SIP_FREE_VIDEO_RESOURCES

- FORCE_CIF_PORT_ALLOCATION
 - MS_ENVIRONMENT
 - SIP_FAST_UPDATE_INTERVAL_ENV
 - SIP_FAST_UPDATE_INTERVAL_EP
 - H263_ANNEX_T
 - H239_FORCE_CAPABILITIES
 - MIX_LINK_ENVIRONMENT
 - IP_LINK_ENVIRONMENT
 - FORCE_STATIC_MB_ENCODING
 - FORCE_RESOLUTION
 - SEND_WIDE_RES_TO_IP
 - DISABLE_WIDE_RES_TO_SIP_DIAL_OUT
 - SEND_SIP_BUSY_UPONRESOURCE_THRESHOLD
- 5 Click the **Routers** tab.
 - 6 Define the routers used in this network and that are other than the routers defined in the Management Network. The field definitions of the Routers tab are the same as for the Default Management Network. For more information see [Default Management Network Service – Routers](#).
 - 7 Click the **DNS** tab.

The screenshot shows the 'IP Network Service Properties' dialog box with the 'DNS' tab selected. The left-hand navigation pane lists various network settings, with 'DNS' highlighted. The main area contains the following fields and options:

- Network Service Name: IP Network Service
- IP Network Type: H.323 & SIP
- Service Name (FQDN): PolycomMCU
- DNS: Specify
- Register Host Names Automatically to DNS Servers
- Local Domain Name: (empty field)
- DNS Server Address: 0.0.0.0

At the bottom right, there are 'OK' and 'Cancel' buttons.

8 Modify the following fields:

Default Management Network Service – DNS

Field	Description
Service Host Name	Enter the host name of this network Service. Each Network Service must have a unique Host Name otherwise an error message is displayed.
DNS	<p>Select:</p> <ul style="list-style-type: none"> • Off – If no DNS server is used in this network. • Specify – To enter the IP address of the DNS server used by this network service. <p>Notes:</p> <ul style="list-style-type: none"> • The IP address field is enabled only if Specify is selected. • In both Standard Security and Ultra Secure Modes: • A DNS can be configured for the Management Network Service that is defined and the IP Network Service. • If a Multiple Services Licence is installed, a DNS can be configured for each additional IP Network Service that is defined. If the DNS field in the IP Network Service is set to Specify and the DNS is not configured or disabled, the DNS configured for the Management Network will be used. • When upgrading from a version that does not support a DNS per IP Network Service, the DNS configured for the Management Network will be used.
Register Host Names Automatically to DNS Servers	Select this option to automatically register this Network Service Signaling Host with the DNS server.
Local Domain Name	Enter the name of the domain for this network service.
DNS Server Address	Enter the static IP address of the DNS server that is part of this network.

9 Click the **Gatekeeper** tab.

10 Define the Primary and Alternate Gatekeepers and at least one Alias for this network Service. The field definitions of the Gatekeeper tab are the same as for the Default IP Network Service. For more information see [Default IP Service – Conferencing – Gatekeeper Parameters](#).



In **Multiple Services** mode, an Alias must be defined for the specified gatekeeper.

11 To view or modify the port settings, click the **Ports** tab.

Settings in the Ports tab allow specific ports in the firewall to be allocated to multimedia conference calls. If required, defined the ports to be used multimedia conference calls handled by this Network Service. The field definitions of the Ports tab are the same as for the Default IP Network Service.

For more information see [Default IP Service – Conferencing – Ports Parameters](#).

12 If required, click the **QoS** tab.

The Collaboration Server's implementation of **QoS** is defined per Network Service, not per endpoint.



The routers must support QoS in order for IP packets to get higher priority.

The field definitions of the QoS tab are the same as for the Default IP Network Service. For more information see [Default IP Service – Conferencing – QoS Parameters](#).

13 Click the **SIP Servers** tab.**14** Define the **Primary** and **Alternate SIP Server** for this network Service.

- Starting with Version 7.1, Registration of conferencing entities with the SIP Servers was moved to the conferencing entities and is defined in the Conference Profile.
- If Microsoft Office Communications or Lync server are part of this network service, a certificate must be created for this network service. If each network connected to the Collaboration Server includes Microsoft Office Communications or Lync server, separate certificates must be created and sent to the Collaboration Server for each of these networks.
- If the Network Service does not include a DNS, you must use the IP address of the SIP Server instead of its name.

The field definitions of the **SIP Servers** tab are the same as for the **Default IP Network Service**. For more information see [Default IP Network Service – SIP Servers](#).

15 Click the **Security** tab.

The field definitions of the Security tab are the same as for the Default IP Network Service. For more information see [Default IP Network Service – Security \(SIP Digest\)](#).

16 To configure the ICE environment, click the **SIP Advanced** tab.**17** Modify the following fields:**Default IP Network Service – SIP Advanced**

Field	Description
ICE Environment	Select MS (for Microsoft ICE implementation) to enable the ICE integration.



For more information, see [LAN Redundancy](#).

18 Click the **OK** button.

The new Network Service is added to the **IP Network Services** list pane.

Setting a Network Service as Default


The default Network Service is used when no Network Service is selected for the following:

- Dial out participants
- Reserving resources for participants when starting an ongoing conference
- Gateway calls

In addition, the Signaling Host IP address and the MCU Prefix in GK displayed on the Collaboration Server Web Client main screen are taken from the default H.323 Network Service.

One IP Network Service can be defined as default for H.323 connections and another Network Service as default for SIP connections. If the IP Network Service supports both H.323 and SIP connections, you can set the same Network Service as default for both H.323 and SIP, or for H.323-only or for SIP-only.

To designate an IP Network Service as the default IP Network Service:






- 1 In the **Device Management** pane, click **IP Network Services** (.
- 2 In the **Network Services** list pane right-click the IP Network Service to be set as the default, and then click **Set As H.323 Default**, or **Set As SIP Default**.

The next time you access this menu, a check mark is added next to the network service type to indicate its selection as default.

To set this IP Network Service for both H.323 and SIP connections, repeat step 2 and select the option you need.

The following icons are used to indicate the default IP Network Service type:

Default IP Network Service Icons

Icon	Description
	This Network Service supports both SIP and H.323 connections and is designated as default for both SIP and H.323 connections.
	This Network Service supports both SIP and H.323 connections and is designated as default for H.323 connections.
	This Network Service supports both SIP and H.323 connections and is designated as default for SIP connections.
	This Network Service supports only H.323 connections and is set as default for H.323 connections.
	This Network Service supports only SIP connections and is set as default for SIP connections.

Ethernet Settings

The Collaboration Server is set to automatically identify the speed and transmit/receive mode of each LAN ports located on the RTM LAN or RTM ISDN cards that are added to the system. These port settings can be manually configured if the specific switch requires it, via the **Ethernet Settings** dialog box.


Signaling Host IP Address and MCU Prefix in GK Indications

The Collaboration Server Web Client displays the Signaling Host IP Address and MCU Prefix in GK parameters as defined in the Default H.323 Network Service.

Conference Profile

Registration of conferencing entities such as ongoing conferences, Meeting Rooms, Entry Queues, SIP Factories and Gateway Sessions with SIP servers is done per conferencing entity. This allows better control on the number of entities that register with each SIP server by selecting for each of the conferencing entities whether it will register with the SIP server.

The registration is defined in the **Conference Profile - Network Services** tab.

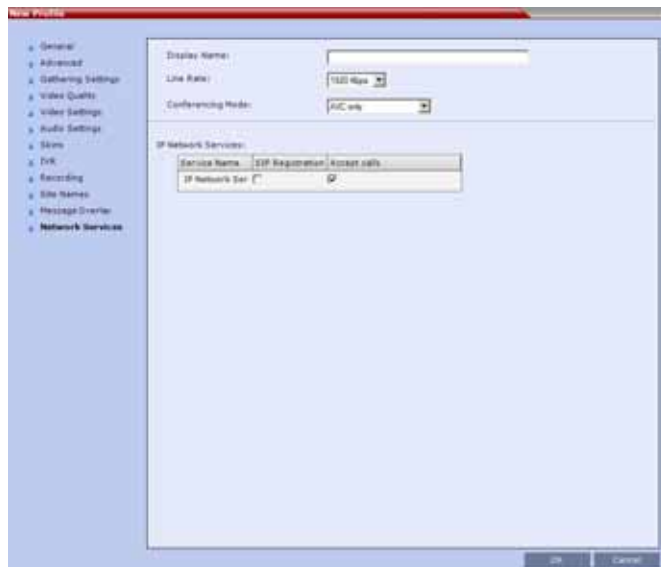

In the **IP Network Services** table, the system lists all the defined Network Services (one or several depending on the system configuration).

- To register the conferencing entity to which this profile is assigned to a Network Service, in the **Registration** column click the check box of that Network Service.
- You can also prevent dial in participants from connecting to that conferencing entities when connecting via a Network Service.


In the **Accept Calls** column, clear the check box of the Network Service from which calls cannot connect to the conference.

Gateway Profiles

To enable the Collaboration Server to call the destination endpoint/MCU via IP connection, the Network Service for the call must be selected in the Gateway Profile dialog box.

The Network Service set as default is used if no other Network Service is selected.

If the same Network Service is used for H.323 and SIP calls, the **Network Service Environment** must include both **H.323** and **SIP** settings.

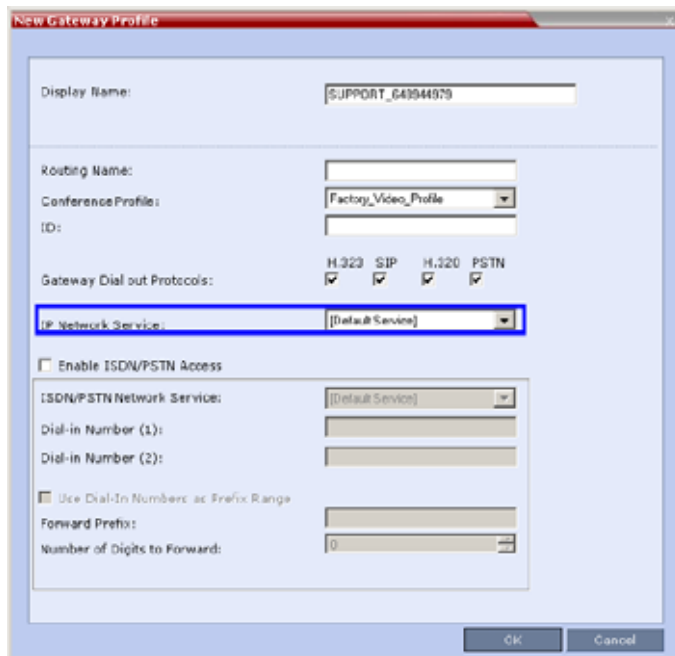

New Gateway Profile

Display Name: SUPPORT_649944979

Routing Name:

Conference Profile: Factory_Video_Profile

ID:

Gateway Dial out Protocols: H.323 SIP H.220 PSTN

IP Network Service: [Default Service]

Enable ISDN/PSTN Access

ISDN/PSTN Network Service: [Default Service]

Dial-in Number (1):

Dial-in Number (2):

Use Dial-In Numbers as Prefix Range

Forward Prefix:

Number of Digits to Forward: 0

OK Cancel



Note: Gateway Functionality

Gateway functionality is not supported by Collaboration Server (RMX) 1800 with no DSP cards.

Hardware Monitor

The Hardware Monitor pane includes the status of the hardware elements contained within the Collaboration Server, among which are the LAN ports on the RTM LAN cards.

Slot	Type	Status	Temperat	Voltage
0	RMX-4000	-	-	-
1	MPMX	Normal	Normal	Normal
2	MPMX	Normal	Normal	Normal
3	MPMX	Normal	Normal	Normal
4	MPMX	Normal	Normal	Normal
5	FSM4000	Normal	Normal	Normal
6	Empty	Empty	-	-
8	CNTL+	Normal	Normal	Normal
9	PWR1	Normal	-	Normal
10	PWR2	Normal	-	Normal
11	PWR3	Normal	-	Normal
12	FAN3	Normal	Normal	Normal
13	RTM LAN	Normal	Normal	Normal
14	RTM LAN	Normal	-	-
15	RTM LAN	Normal	Normal	Normal
16	RTM LAN	Normal	Normal	Normal
17	RTM-IP4000	Normal	Normal	Normal
20	Backplane Amos	Normal	-	-
21	LANS	Normal	-	-

It is possible to reset the MPMRx media cards by selecting the MPMRx media card, and then selecting **Reset** from the right-click menu.

Slot	Type	Status	Temperature	Voltage
0	RMX 4000	-	-	-
1	MPMRx-D	Normal	Normal	Normal
2	MPMRx-D	Normal	Normal	Normal
3	MPMRx-D	Normal	Normal	Normal
4	MPMRx-D	Normal	Normal	Normal
5	FSM4000	Normal	Normal	Normal
6	Empty	Empty	-	-
8	CNTL4000	Normal	Normal	Normal
9	PWR1	Normal	-	Normal
10	PWR2	Normal	-	Normal
11	PWR3	Normal	-	Normal
12	FANS	Normal	Normal	Normal
13	RTM LAN	Normal	Normal	Normal
14	RTM LAN	Normal	Normal	Normal
15	RTM LAN	Normal	Normal	Normal
16	RTM ISDN	Normal	Normal	Normal
17	RTM-IP4000	Normal	Normal	Normal
20	Backplane+	Normal	-	-
21	LANS	Normal	-	-

Signaling Monitor

The **Signaling Monitor** pane includes the list of the IP Network Services defined in the system - up to two in the Collaboration Server (RMX) 1800/2000 and up to four in the Collaboration Server (RMX) 4000. Double-clicking a Network Service, displays its properties and status.



Name	IP Address	Router	Subnet Mask
IP Network Service	200.10.0.152	200.10.0.1	255.255.255.0
IP2	100.10.0.150	100.10.0.1	255.255.255.0
100-30	100.30.0.152	100.30.0.1	255.255.255.0
100-20	100.20.0.152	100.20.0.1	255.255.255.0

Conferencing


Each conference on the Collaboration Server can host participants from the different IP Network networks simultaneously.

Defining Dial Out Participants

When defining dial out participants, you can select the Network Service to place the call according to the network to which the endpoint pertains. If the endpoint is located on a network other than the selected network, the participant will not be able to connect.

If no Network is selected, the system uses the IP Network Service selected for reserving the conference resources, and if none is set for the conference it uses the Network Service set as default.

The IP Network Service is selected in the **New Participant - Advanced** dialog box.

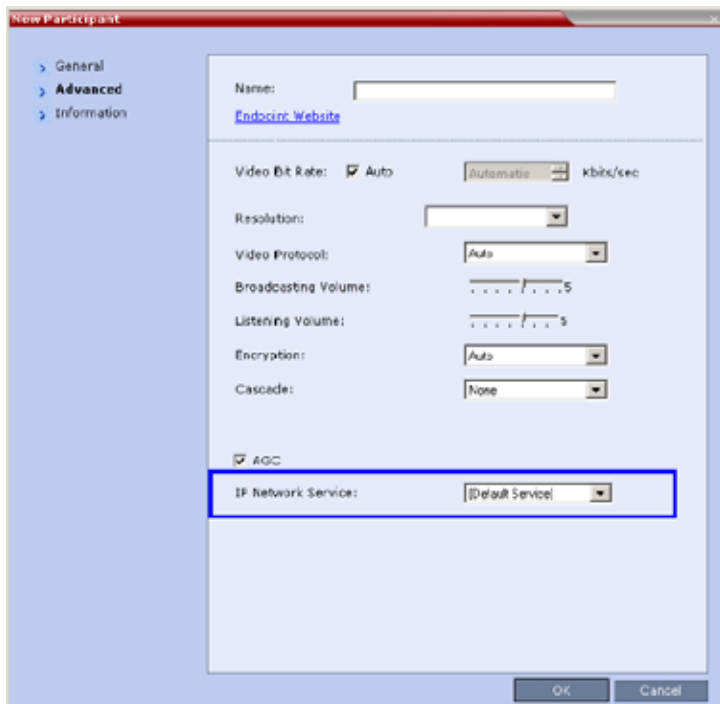

The screenshot shows the 'New Participant - Advanced' dialog box. The 'Advanced' tab is selected. The 'IP Network Service' dropdown menu is highlighted with a blue box and contains the text 'Default Service'. Other settings include:

- Name: [Empty text field]
- Endpoint Website: [Endpoint Website](#)
- Video Bit Rate: Auto [Automatic] kbits/sec
- Resolution: [Empty dropdown menu]
- Video Protocol: [Auto] dropdown menu
- Broadcasting Volume: [Progress bar from 0 to 5]
- Listening Volume: [Progress bar from 0 to 5]
- Encryption: [Auto] dropdown menu
- Cascade: [None] dropdown menu
- AGC
- IP Network Service: [Default Service] dropdown menu

Buttons for 'OK' and 'Cancel' are visible at the bottom right.

Reserving Video Resources for a Conference



This section is applicable only for Collaboration Servers 2000/4000.

When defining a new ongoing conference or a conference reservation, you can select the Network Service that will be used to reserve the required resources. If no Network Service is selected, the default Network Service is used. Therefore, make sure that not all conferences are reserving resources from the same Network Service, otherwise you may run out of resources for that Network Service.

The IP Network Service is selected in the **New Conference/New Meeting Room/New Reservation - General** dialog box.

The screenshot shows the 'New Meeting Room' dialog box with the 'General' tab selected. The 'IP Network Service' dropdown menu is highlighted with a blue box and is set to '[Default Service]'. Other visible fields include:

- Display Name: [SUPPORT_552049296]
- Duration: [1:00] [30] [Permanent Conference]
- Routing Name: []
- Profile: [Factory_Video_Profile]
- ID: []
- Conference Password: []
- Chairperson Password: []
- Reserve Resources for Video Participants: [0]
- Reserve Resources for Voice Participants: [0]
- Maximum Number of Participants: [Automatic]
- IP Network Service: [Default Service]
- Enable SIP/SIP Trunk Dial-In: []
- TSDN/PSDN Network Service: [Default Service]
- Dial-In Number (1): []
- Dial-In Number (2): []

Monitoring Conferences

The Conference Properties - Network Services dialog box shows for each Network Service with which Network Service's SIP proxy the conference should be registered and if the dial in call will be connected to the conference.

In the Participant pane, a new column - Service Name was added, indicating the name of Network Service used for the participant's connection.

Resource Report

The Resource Report displays a graph of the MCU's total resource usage as well as a graph of the MCU's total resource usage. When Multiple Network Services are active, an additional table of resource usage per network service is displayed.

Video resource allocations are reported in AVC HD720p30 units. The same amounts of system resources are allocated to Voice (Audio) participants, as those allocated to CIF Video participants.

The user can select a view of either resource usage Totals (default) or resource usage per Network Service.

For Collaboration Servers 1800 and 2000/4000 with MPMRx media cards there is no differentiation between Video and Voice (Audio) resource usage.

Resource Report - Collaboration Servers 1800 and 2000/4000 with MPMRx Cards



Port Usage Gauges



Collaboration Servers 1800 and 2000/4000 with MPMRx media cards do not differentiate between Video and Voice (Audio) resource usage and display a single port usage gauge.

The Port Gauge(s) show the total resource usage for the Collaboration Server and not per Network Service. So it may not be an accurate representation of the availability of resources for conferencing, as one Network Service may run out of available resources while another Network Service may have all of its resources available. In such a case, the port gauge(s) may show that half of the system resources are available for conferencing, while calls via the Network Service with no available resources will fail to connect.

Port Usage Gauge - Collaboration Servers 2000/4000 with MPMRx Cards

Port Usage: 20 / 400 

Port Usage Gauge - Collaboration Server 1800

Port Usage: Voice 0 / 100  Video 0 / 100 

Port Usage Gauge - Collaboration Server 1800

Port Usage: 5 / 100 

NAT (Network Address Translation) Traversal

NAT Traversal is a set of techniques enabling participants behind firewalls to connect to conferences, hosted on the Collaboration Server, remotely using the internet.


All signaling and media for both SIP and H.323 will be routed through an **SBC**. The following **SBC** environments are supported:

- **SAM** - a Polycom SBC
- **Acme Packet** - a 3rd party SBC
- **VBP** - Polycom Video Border Proxy

Deployment Architectures

The following NAT Traversal topologies are given as examples. Actual deployments will depend on user requirements and available infrastructure:

Remote Connection Using the Internet

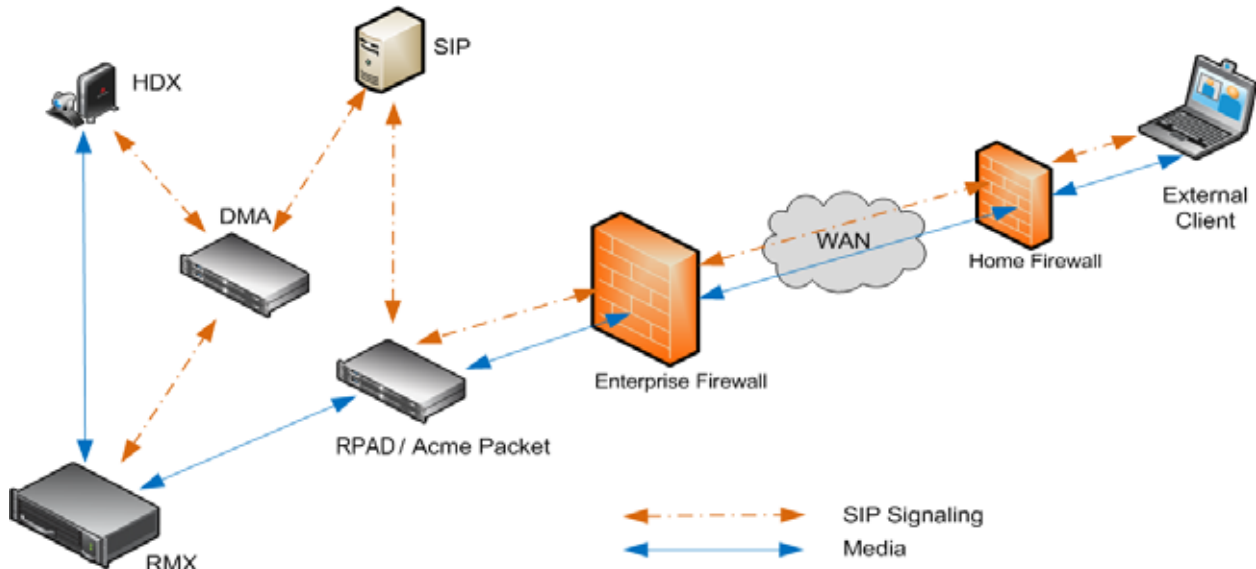


The following **Remote Connection** call flow options are supported:

Remote Connections

Enterprise Client		
Environment	Registered	SBC
SIP / H.323	Yes	SAM / Acme Packet
SIP / H.323	No	SAM / Acme Packet
SIP / H.323	No	SAM Only

Business to Business Connections

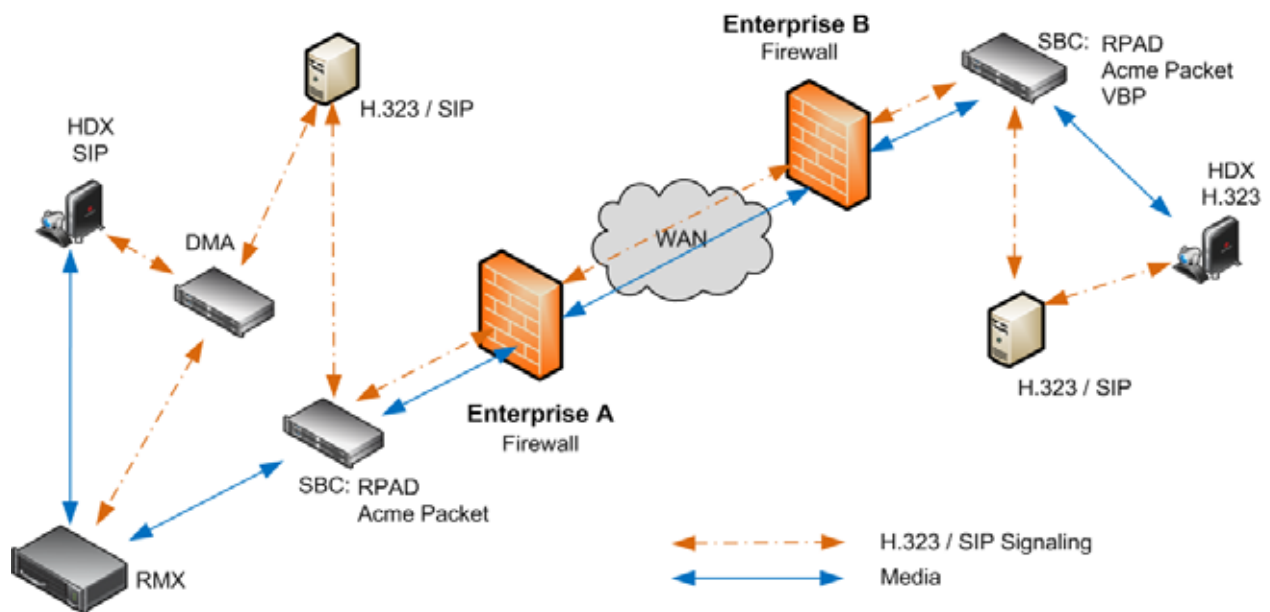

The following **Business to Business** connection call flow options are supported:

Business to Business Connections

Enterprise A Client				Enterprise B Client		
Environment	Registered	SBC		SBC	Registered	Environment
H.323	Yes	RealPresence Access Director	⇔	RealPresence Access Director	Yes	H.323
H.323	Yes		⇔	VBP	Yes	H.323
SIP	Yes	RealPresence Access Director	⇔	RealPresence Access Director	Yes	H.323
SIP	Yes	Acme Packet	⇔	Acme Packet	Yes	H.323

FW (Firewall) NAT Keep Alive

The Collaboration Server can be configured to send a FW NAT keep alive message at specific Intervals for the RTP, UDP and BFCP channels.

This is necessary because port mappings in the firewall are kept open only if there is network traffic in both directions. The firewall will only allow UDP packets into the network through ports that have been used to send packets out.


By default the Collaboration Server sends a FW NAT Keep Alive message every 30 seconds. As there is no traffic on the Content and FECC channels as a call begins, the firewall will not allow any incoming packets

from the Content and FECC channels in until the Collaboration Server sends out the first of the FW NAT Keep Alive messages 30 seconds after the call starts.

If Content or FECC are required within the first 30 seconds of a call the **FW NAT Keep Alive Interval** should be modified to a lower value.

To enable and modify FW NAT Keep Alive:

FW NAT Keep Alive is enabled in the **New Profile - Advanced** dialog box.

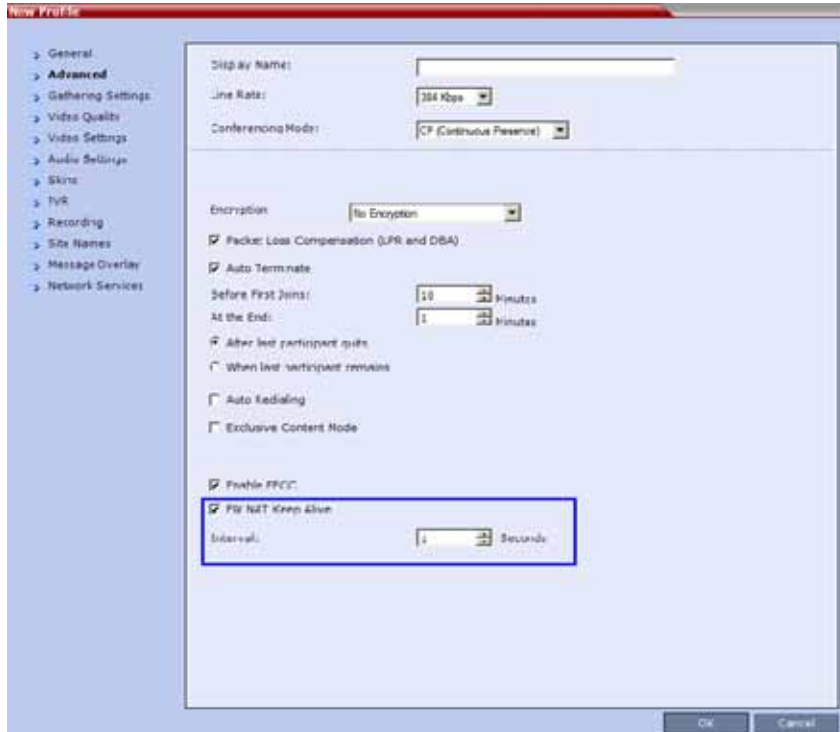

- » Select the **FW NAT Keep Alive** check box and if required, modify the **Interval** field within the range of **5 - 86400** seconds.

System Configuration in SBC environments

In an environment that includes SAM (a Polycom SBC), to ensure that a RealPresence Mobile endpoint can send content to a conference the value of the system flag

NUM_OF_INITIATE_HELLO_MESSAGE_IN_CALL_ESTABLISHMENT must be set to at least **3**.

For more details on modifying the values of system flags, see [Modifying System Flags](#).

SIP TCP Keep-Alive

SIP TCP Keep Alive behavior is defined for each IP Network Service and can be modified by adding the following System Flags and modifying their values:

- SIP_TCP_KEEP_ALIVE_TYPE
- SIP_TCP_KEEP_ALIVE_BEHAVIOR

IVR Services

Interactive Voice Response (IVR) is an application that allows participants to communicate with the conferencing system via their endpoint's input device (such as a remote control). The IVR Service includes a set of voice prompts and a video slide used to automate the participants connection to a conference or Entry Queue. It allows customization of menu driven scripts and voice prompts to meet different needs and languages.

The IVR module includes two types of services:

- Conference IVR Service that is used with conferences
- Entry Queue IVR Service that is used with Entry Queues

The system is shipped with two default Conference IVR Services (one for the conferences and the other for gateway calls) and one default Entry Queue IVR Service. The default services include voice messages and video slides in English.

To customize the IVR messages and video slide perform the following operations:

- Record the required voice messages and create a new video slide.
For more information, see [Creating a Welcome Video Slide](#).
- Optional. Add the language to the list of languages supported by the system.
- Upload the voice messages to the MCU (This can be done as part of the language definition or during the IVR Service definition).
- Create the Conference IVR Service and upload the video slide, and if required any additional voice messages.
- Optional. Create the Entry Queue IVR Service and upload the required video slide and voice messages.



When upgrading the *Collaboration Server* software version new DTMF Codes and voice messages are not automatically added to existing IVR Services in order to avoid conflicts with existing DTMF codes. Therefore, to use new options, new Conference and Entry Queue IVR Services must be created.

IVR Services List


You can view the currently defined Conference IVR and Entry Queue IVR Services in the **IVR Services** list pane.

To view the IVR Services list:

- 1 In the Collaboration Server Management pane, expand the **Rarely Used** list.

- 2 Click the **IVR Services** () entry.



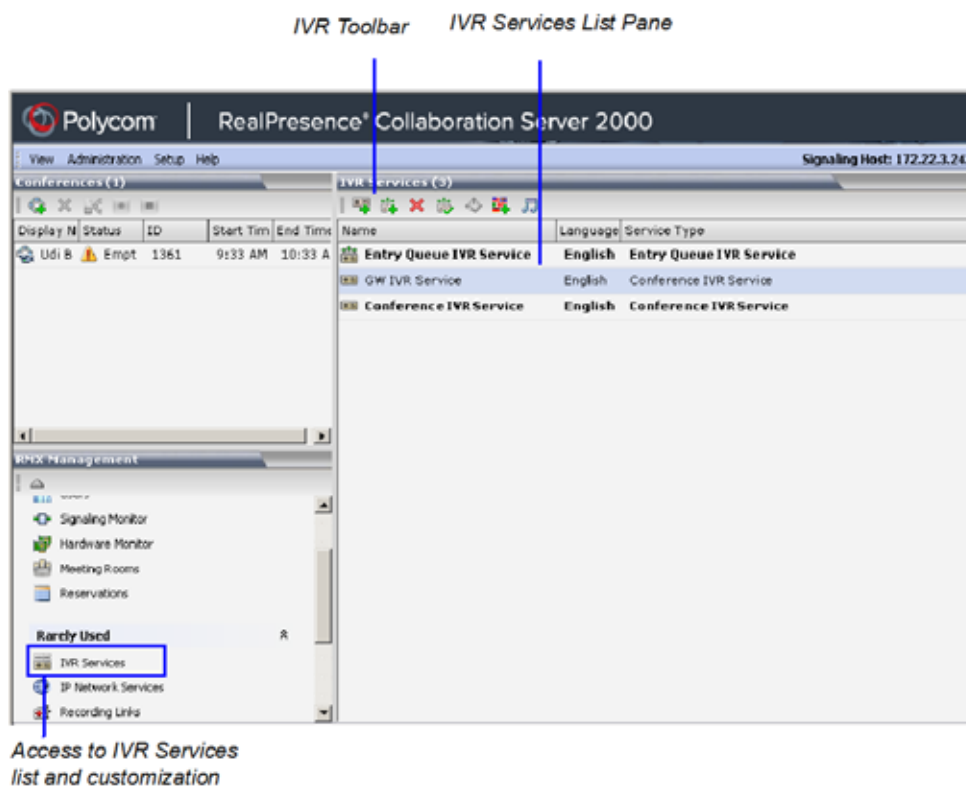


The list pane displays the Conference IVR Services list and the total number of IVR services currently defined in the system.





IVR Services Toolbar

The IVR Services toolbar provides quick access to the IVR Service definitions as follows:

IVR Toolbar buttons

Button	Button Name	Descriptions
	New Conference IVR Service	Creates a new Conference IVR Service.
	New Entry Queue IVR Service	Creates a new Entry Queue IVR Service.
	Delete Service	Deletes the selected IVR service(s).
	Set Default Conference IVR Service	Sets the selected Conference IVR Service as default. When creating a new conference Profile the default IVR Service is automatically selected for the Profile (but can be modified).
	Set Default Entry Queue Service	Sets the selected Entry Queue IVR Service as default. When creating a new Entry Queue the default Entry Queue IVR Service is automatically selected.

IVR Toolbar buttons

Button	Button Name	Descriptions
	Add Supported Languages	Adds languages to the IVR module, enabling you to download voice prompts and messages for various languages.
	Replace/Change Music File	To replace the currently loaded music file that is used to play background music, the MCU is shipped with a default music file.



Adding Languages

You can define different sets of audio prompts in different languages, allowing the participants to hear the messages in their preferred language.


The Collaboration Server is shipped with a default language (English) and all the prompts and messages required for the default IVR Services, conference and Entry Queues shipped with the system.

You can add languages to the list of languages for which different messages are downloaded to the MCU and IVR Services are created. This step is required before the creation of additional IVR messages using languages that are different from English, or if you want to download additional voice files to existing files in one operation and not during the IVR service definition.


To add a language:

- 1 In the Collaboration Server Management pane, expand the **Rarely Used** list.
- 2 Click the **IVR Services** () entry.
- 3 In the Conference IVR Services list, click the **Add Supported Languages** () button.

The **Supported Languages** dialog box opens.

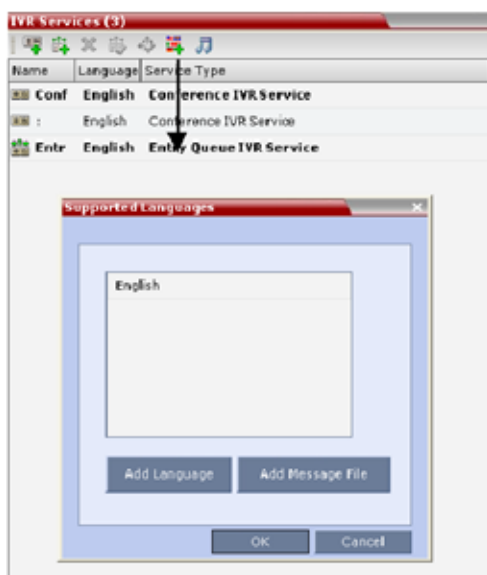

- Click the Add Language button.
The **New Language** dialog box opens.

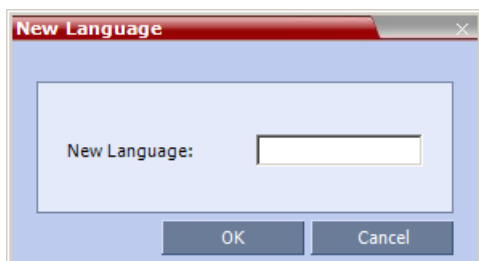

- In the **New Language** dialog box, enter the name of the new language. The language name can be typed in Unicode and cannot start with a digit. Maximum field length is 31 characters.
- Click **OK**.
The new language is added to the list of Supported Languages.

Uploading a Message File to the Collaboration Server

You can upload audio files for the new language or additional files for an existing language now, or you can do it during the definition of the IVR Service. In the latter case, you can skip the next steps.




- Voice messages should not exceed 3 minutes.
- It is not recommended to upload more than 1000 audio files to the MCU memory.

To upload messages to the MCU:

- To upload the files to the MCU, in the Supported Languages dialog box, click the **Add Message File** button.

The **Add Message File** dialog box opens.

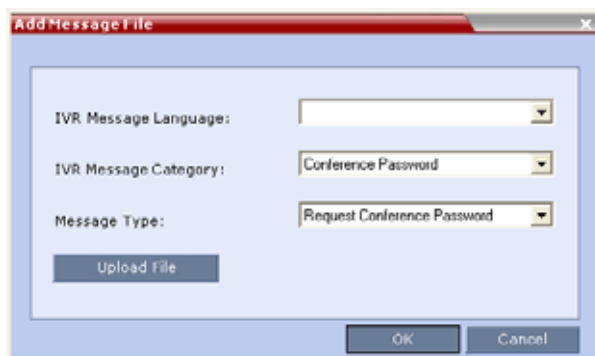

Audio files are uploaded to the MCU one-by-one.

- In the **IVR Message Language** list, select the language for which the audio file will be uploaded to the MCU.
- In the **IVR Message Category** list, select the category for which the audio file is uploaded.

- 4 In the **Message Type** list, select the message type for which the uploaded message is to be played. You can upload several audio files for each Message Type. Each file is downloaded separately.

The table below lists the Message Types for each category:

IVR Message Types by Message Category

Message Category	Message Type	Message
Conference Password	Request Conference Password	Requests the participant to enter the conference password.
	Request Conference Password Retry	A participant who enters an incorrect password is requested to enter it again.
	Request Digit	Requests the participant to enter any digit in order to connect to the conference. Used for dial-out participants to avoid answering machines in the conference.
Welcome Message	Welcome Message	The first message played when the participant connects to the conference or Entry Queue.
Conference Chairperson	Request Chairperson Identifier	Requests the participants to enter the chairperson identifier key.
	Request Chairperson Password	Requests the participant to enter the chairperson password.
	Request Chairperson Password Retry	When the participant enters an incorrect chairperson password, requests the participant to enter it again.
General	Messages played for system related event notifications, for example, notification that the conference is locked. Upload the files for the voice messages that are played when an event occurs during the conference. For more information, see Conference IVR Service Properties - General Voice Messages .	
Billing Code	Requests the chairperson to enter the conference Billing Code.	
Roll Call	Roll call related messages, such as the message played when a participant joins the conference. Messages are listed in the Conference IVR Service - Roll Call dialog box.	
Conference ID	Requests the participant to enter the required Conference ID to be routed to the destination conference.	

Conference / Chairperson Password Interaction for Dial-in Participants

Password		System Behavior
Conference	Chairperson	
No	No	All endpoints connect without any IVR prompt.
Yes	No	The MCU issues an IVR prompt for the conference password. All endpoints must respond with the conference password. The MCU will prompt three times before non-responding endpoints are disconnected.


Conference / Chairperson Password Interaction for Dial-in Participants

Password		System Behavior
Conference	Chairperson	
Yes	Yes	The MCU issues an IVR prompt for the conference password. All endpoints must respond with either the conference password or the chairperson password. The MCU will prompt three times before non-responding endpoints are disconnected.
No	Yes	The MCU issues an IVR prompt requesting the endpoint wanting to be chairperson to respond with "#". When the endpoint wanting to be chairperson responds with "#", the MCU issues an IVR prompt requesting the chairperson password.

If no password is manually assigned to the conference, the MCU generates a random conference password.

- Click **Upload File** to upload the appropriate audio file to the MCU.

The **Install File** dialog box opens.

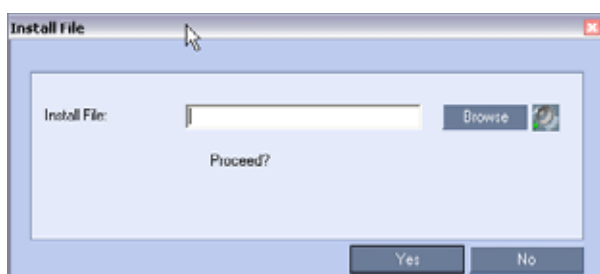

- Enter the file name or click the **Browse** button to select the audio file to upload.
The **Select Source File** dialog box opens.
- Select the appropriate *.wav audio file, and then click the **Open** button.
The name of the selected file is displayed in the Install field in the **Install File** dialog box.
- Optional. You can play a .wav file by selecting the **Play** button (🎧).
- Click **Yes** to upload the file to the MCU.
The system returns to the **Add Message File** dialog box.
- Repeat [step 6](#) for each additional audio file to be uploaded to the MCU.
- Once all the audio files are uploaded to the MCU, close the **Add Message File** dialog box and return to the **Add Language** dialog box.
- Click **OK**.

Defining a New Conference IVR Service

The Collaboration Server is shipped with two default Conference IVR Services and all its audio messages and video slide. You can define new Conference IVR Services or modify the default Conference IVR Service. For the definition of Conference IVR Service for gateway calls, see [Defining the IVR Service for Gateway Calls](#).



Up to 80 IVR Services (Conference IVR Services and Entry Queue IVR Services) can be defined per Collaboration Server.

Defining a New Conference IVR Service

To define a new Conference IVR Service:

- 1 On the **IVR Services** toolbar, click the **New Conference IVR Service** () button.
The **New Conference IVR Service - Global** dialog box opens.

- 2 Define the following parameters:

Conference IVR Service Properties - Global Parameters

Field/Option	Description
Conference IVR Service Name	Enter the name of the Conference IVR Service. The maximum field length is 20 characters and may be typed in Unicode.
Language For IVR	Select the language of the audio messages and prompts from the list of languages defined in the Supported languages. The default language is English. For more information, see Adding Languages .

Conference IVR Service Properties - Global Parameters

Field/Option	Description
External Server Authentication	<p>This option is not supported with Collaboration Server 1800.</p> <p>You can configure the IVR Service to use an external database application to verify a participant's right to join the conference. For more information, see Conference Access with External Database Authentication.</p> <p>Select one of the following options:</p> <ul style="list-style-type: none"> • Never – The participant's right to join the conference will not be verified with an external database application (default). • Always – Any participant request to join the conference is validated with the external database application using a password. • Upon Request – Only the participant request to join the conference as chairperson is validated with the external database application using a password. The validation process occurs only when the participant enters the chairperson identifier key.
Number of User Input Retries	Enter the number of times the participant will be able to respond to each menu prompt before being disconnected from the conference. Range is between 1-4, and the default is 3.
Timeout for User Input (Sec)	Enter the duration in seconds that the system will wait for the participant's input before prompting for another input. Range is between 1-10, and the default value is 5 seconds.
DTMF Delimiter	Enter the key that indicates the last input key. Possible values are the pound (#) and star (*) keys. The default is #.


3 Click the **Welcome** tab.

The **New Conference IVR Service - Welcome** dialog box opens.



- 4 Select the **Enable Welcome Messages** check box to define the system behavior when the participant enters the Conference IVR queue. When participants access a conference through an Entry Queue, they hear messages included in both the Entry Queue Service and Conference IVR Service. To avoid playing the Welcome Message twice, disable the Welcome Message in the Conference IVR Service.
- 5 Select the **General Welcome Message**, to be played when the participant enters the conference IVR queue.
- 6 To upload an audio file for an IVR message, click **Add Message File**.

The **Install File** dialog box opens.

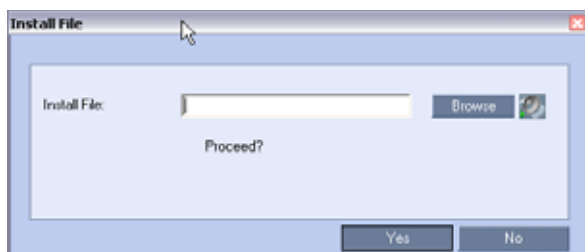

The Collaboration Server unit is bundled with default audio IVR message files. To upload a customized audio file, see [Creating Audio Prompts and Video Slides](#).

- a Click the **Browse** button to select the audio file (*.wav) to upload.
The **Select Source File** dialog box opens.
 - b Select the appropriate *.wav audio file and then click the **Open** button.
 - c Optional. You can play a .wav file by selecting the **Play** button (🔊).
 - d In the **Install File** dialog box, click **Yes** to upload the file to the MCU memory.
The **Done** dialog box opens.
 - e Once the upload is complete, click **OK** and return to the IVR dialog box. The new audio file can now be selected from the list of audio messages.
- 7 Click the **Conference Chairperson** tab.
The **New Conference IVR Service - Conference Chairperson** dialog box opens.



- 8 Select the **Enable Chairperson Messages** check box to enable the chairperson functionality. If this feature is disabled, participants are not able to connect as the chairperson.



When both Conference Password and Chairperson Password options are enabled and defined, the system first plays the prompt `Enter conference password`. However, if the participant enters the chairperson password, the participant becomes the chairperson.

To play the prompt requesting the Chairperson password, `For conference chairperson services...`, do not select the **Enable Password Messages** option.

- 9 Select the various voice messages and options for the chairperson connection.



If the files were not uploaded prior to the definition of the IVR Service or if you want to add new audio files, click **Add Message File** to upload the appropriate audio file to the Collaboration Server.

New Conference IVR Service Properties - Conference Chairperson Options and Messages

Field/Option	Description
Chairperson Identifier Request	Select the audio file that requests the participants to enter the key that identifies them as the conference chairperson.
Request Chairperson Password	Select the audio file that prompts the participant for the chairperson password.
Retry Chairperson Password	Select the audio file that prompts participants to re-enter the chairperson password if they enter it incorrectly.
Chairperson Identifier Key	Enter the key to be used for identifying the participant as a chairperson. Possible keys are: pound key (#) or star (*).
Billing Code	The prompt requesting the chairperson billing code selected in the General tab.

10 Click the **Conference Password** tab.

The **New Conference IVR Service - Conference Password** dialog box opens.



11 Select the **Enable Password Messages** check box to request the conference password before moving the participant from the conference IVR queue to the conference.



When both Conference Password and Chairperson Password are enabled and defined, the system first plays the prompt `Enter conference password`. However, if the participant enters the chairperson password, the participant becomes the chairperson.

To play the prompt requesting the Chairperson password, `For conference chairperson services...`, do not select the **Enable Password Messages** option.

12 Select the MCU behavior for password request for Dial-in and Dial-out participant connections.

Select the required system behavior as follows:

- **Request password** - The system requests the participant to enter the conference password.
- **None** - The participant is moved to the conference without any password request.
- **Request Digit** - The system requests the participant to enter any key. This option is used mainly for dial-out participants and to prevent an answering machine from entering the conference.


13 Select the various audio messages that will be played in each case.

New Conference IVR Service Properties - Conference Password Parameters

Option	Description
Request Password	Select the audio file that prompts the participant for the conference password.
Retry Password	Select the audio file that requests the participant to enter the conference password again when failing to enter the correct password.
Request Digit	Select the audio file that prompts the participant to press any key when the Request Digit option is selected.

14 Click the **General** tab.

The **New Conference IVR Service - General** dialog box opens.

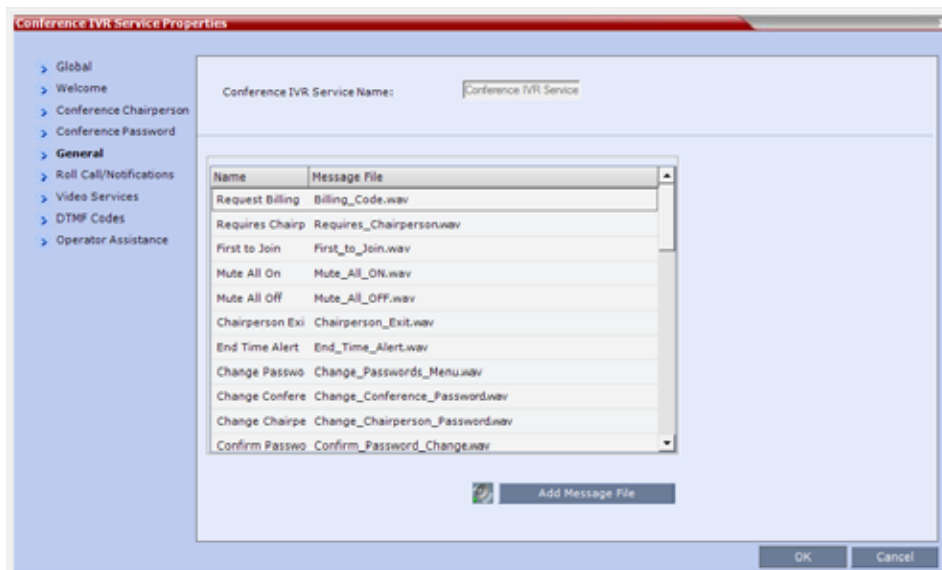

The **General** dialog box lists messages that are played during the conference. These messages are played when participants or the conference chairperson perform various operations or when a change occurs.

- 15 To assign the appropriate audio file to the message type, click the appropriate table entry, in the **Message File** column. A drop-down list is enabled.
- 16 From the list, select the audio file to be assigned to the event/indication.
- 17 Repeat steps 15 and 16 to select the audio files for the required messages.

The following types of messages and prompts can be enabled:

Conference IVR Service Properties - General Voice Messages

Message Type	Description
Blip on Cascade Link	Indicates that the link to the cascaded conference connected successfully.
Chairperson Exit	<p>Informs all the conference participants that the chairperson has left the conference, causing the conference to automatically terminate after a short interval.</p> <p>Note: This message is played only when the Requires Chairperson option is selected in the Conference Profile - IVR dialog box.</p>
Chairperson Help Menu	<p>A voice menu is played upon a request from the chairperson, listing the operations and their respective DTMF codes that can be performed by the chairperson. The playback can be stopped any time.</p> <p>Note: If you modify the default DTMF codes used to perform various operations, the default voice files for the help menus must be replaced.</p>
Change Chairperson Password	Requests the participant to enter a new chairperson password when the participant is attempting to modify the chairperson password.

Conference IVR Service Properties - General Voice Messages

Message Type	Description
Change Conference Password	Requests the participant to enter a new conference password when the participant is attempting to modify the conference password.
Change Password Failure	A message played when the participant enters an invalid password, for example when a password is already in use.
Change Passwords Menu	This voice menu is played when the participants requests to change the conference password. This message details the steps required to complete the procedure.
Conference is Locked	This message is played to participants attempting to join a Secured conference.
Conference is Secured	This message is played when the conference status changes to Secure as initiated by the conference chairperson or participant (using DTMF code *71).
Conference is unsecured	This message is played when the conference status changes to Unsecured as initiated by the conference chairperson or participant (using DTMF code #71).
Confirm Password Change	Requests the participant to re-enter the new password.
Dial Tone	The tone that will be played to indicate a dialing tone, to let the calling participant enter the destination number. Note: This option is not available in SVC conferences and for SVC participants in mixed CP and SVC conferences.
Disconnect on Busy	The Busy Tone is played when the system retries to redial a busy destination number and fails after exceeding the number of redials. This call is then disconnected. Note: This option is not available in SVC conferences and for SVC participants in mixed CP and SVC conferences.
Disconnect on No Answer	The Reorder Tone is played when the system retries to redial a destination number that does not answer and fails after exceeding the number of redials. This call is then disconnected. Note: This option is not available in SVC conferences and for SVC participants in mixed CP and SVC conferences.
Disconnect on Wrong Number	A voice message is played when the call fails because of an incorrect destination number. The message is followed the Reorder Tone and the call is disconnected. Note: This option is not available in SVC conferences and for SVC participants in mixed CP and SVC conferences.
End Time Alert	Indicates that the conference is about to end.
Enter Destination ID	Prompts the calling participant for the destination number. Default message prompts the participant for the conference ID (same message as in the Entry Queue IVR Service). Note: This option is not available in SVC conferences and for SVC participants in mixed CP and SVC conferences.
First to Join	Informs the participant that he or she is the first person to join the conference.

Conference IVR Service Properties - General Voice Messages

Message Type	Description
Incorrect Destination ID	If the participant entered an incorrect conference ID (in gateway calls it is the destination number), requests the participant to enter the number again. Note: This option is not available in SVC conferences and for SVC participants in mixed CP and SVC conferences.
Maximum Number of Participants Exceeded	Indicates the participant cannot join the destination conference as the maximum allowed number of participants will be exceeded.
Mute All Off	This message is played to the conference to inform all participants that they are unmuted (when Mute All is cancelled).
Mute All On	Informs all participants that they are muted, with the exception of the conference chairperson. Note: This message is played only when the Mute All Except Me option is activated.
No Video Resources Audio Only.	Informs the participant of the lack of Video Resources in the <i>Collaboration Server</i> and that he/she is being connected as Audio Only.
Participant Help Menu	A voice menu that is played upon request from a participant, listing the operations and their DTMF codes that can be performed by any participant.
Password Changed Successfully	A message is played when the password was successfully changed.
Recording Failed	This message is played when the conference recording initiated by the chairperson or the participant (depending on the configuration) fails to start.
Recording in Progress	This message is played to participant joining a conference that is being recorded indicating the recording status of the conference.
Redial on Wrong Number	A message is played requesting the participant to enter a new destination number followed by up to five redial attempts. If all redial attempts fail, the participant is alerted by an IVR message that the dialed number is unreachable, followed by the Reorder Tone and disconnection. Note: This option is not available in SVC conferences and for SVC participants in mixed CP and SVC conferences.
Request Billing Code	Requests the participant to enter a code for billing purposes.
Requires Chairperson	The message is played when the conference is on hold and the chairperson joins the conference. For this message to be played the Conference Requires Chairperson option must be selected in the Conference Profile - IVR dialog box.
Ringing Tone	The tone that will be played to indicate that the system is calling the destination number. Note: This option is not available in SVC conferences and for SVC participants in mixed CP and SVC conferences.
Self Mute	A confirmation message that is played when participants request to mute their line.

Conference IVR Service Properties - General Voice Messages

Message Type	Description
Self Unmute	A confirmation message that is played when participants request to unmute their line.

18 Click the **Roll Call/Notifications** tab.

The **New Conference IVR Service - Roll Call** dialog box opens.



The Roll Call and Tone Notification options are disabled in SVC and mixed CP and SVC conferences.


The **Roll Call** feature of the Conference IVR Service is used to record the participants' names for playback when the participants join and leave a conference.

Roll Call announcements played upon a participant's connection or disconnection from a conference (Entry and Exit announcements) can be replaced by tones. These tones can be used as notification when participants join or leave the conference but the identification of the participant is not required. The system is shipped with two default tones: **Entry Tone** and **Exit tone**. When the Tone Notifications option is enabled, no recording of the participant names will occur and the conference chairperson will not be able to ask for a name review during the conference.

In Collaboration Server 2000/4000, the selection of tones in the IVR Service definition replaces the functionality of the system flag **IVR_ROLL_CALL_USE_TONES_INSTEAD_OF_VOICE**.

19 Select one of the following options to determine the announcement mode:

- a To enable the Roll Call feature, select the **Enable Roll Call** option.

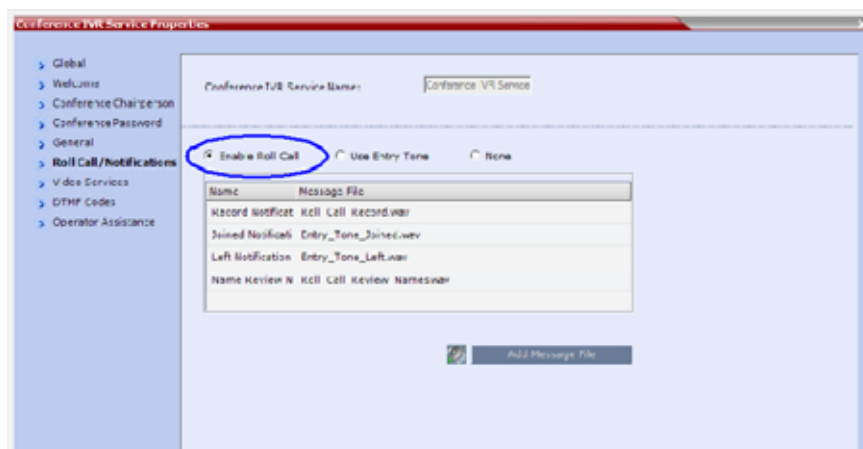

- b Select **Enable Tones** to enable the **Tone Notifications** option.

The dialog box changes to display the tone notification options.

- c Select **None** to disable the Roll Call and Tone Notifications features.

20 If you enable the **Roll Call** option, assign the audio file to the message type in the **Message File** column, and click the appropriate table entry.

An arrow appears in the **Message File** column.



If the Roll Call option is enabled, you must assign the appropriate audio files to all message types.

21 Click the arrow to open the **Message File** list and select the appropriate audio file.

Conference IVR Service Properties - Roll Call Messages

Roll Call Message	Description
Roll Call Record	Requests participants to state their name for recording, when they connect to the conference. Note: The recording is automatically terminated after two seconds.
Roll Call Joined	A voice message stating that the participant has joined the conference. Note: In Collaboration Server 2000/4000, when the system flag IVR_ROLL_CALL_USE_TONES_INSTEAD_OF_VOICE is set to YES, the system does not playback the Roll Call names when participants enter the conference. However, the voice message will be played, unless it is replaced with tone file. In such a case, the use of tones requires the uploading of the appropriate tone files in *.wav format and replacing the Roll Call Joined message file with the tone file.
Roll Call Left	A voice message stating that the participant has left the conference. Note: In Collaboration Server 2000/4000, when the system flag IVR_ROLL_CALL_USE_TONES_INSTEAD_OF_VOICE is set to YES, the system does not playback the Roll Call names when participants exit the conference. However, the voice message will be played, unless it is replaced with tone file. In such a case, the use of tones requires the uploading of the appropriate tone files in *.wav format and replacing the Roll Call Left message file with the tone file.
Roll Call Review	Played when Roll Call is requested by the chairperson, introducing the names of the conference participants in the order they joined the conference.

Once a conference is enabled for Roll Call, Roll Call can be disabled using the #42 or enabled using the * 42 DTMF Codes. or enabled with all connected participants in the conference receiving the <name> has joined/left the conference announcement.

For all connected participants in the conference while the Roll Call is disabled (**#42**)

- Joining participants are requested to say their name.
- The conference is not interrupted with join/left announcements.
- Roll call review is possible.

For all connected participants in the conference while the roll call is enabled (***42**)


- Joining participant are requested to say their name.
- The conference is interrupted with join/left prompts.

- Roll call review is possible.

If Roll Call is enabled, when a participant joins or leaves a conference, the system plays a voice message to all participants. The audio message consists of the joining or leaving participant's Roll Call name followed by either "has joined the conference" or "has left the conference".

These voice messages can be replaced with audio tones. The use of tones requires that the appropriate tone files in *.wav format be uploaded and configured to replace the **Roll Call Joined.wav** and **Roll Call Left.wav** message files.

- 22** If you enable the **Tone Notifications** option, select the Entry Tone or Exit tone.

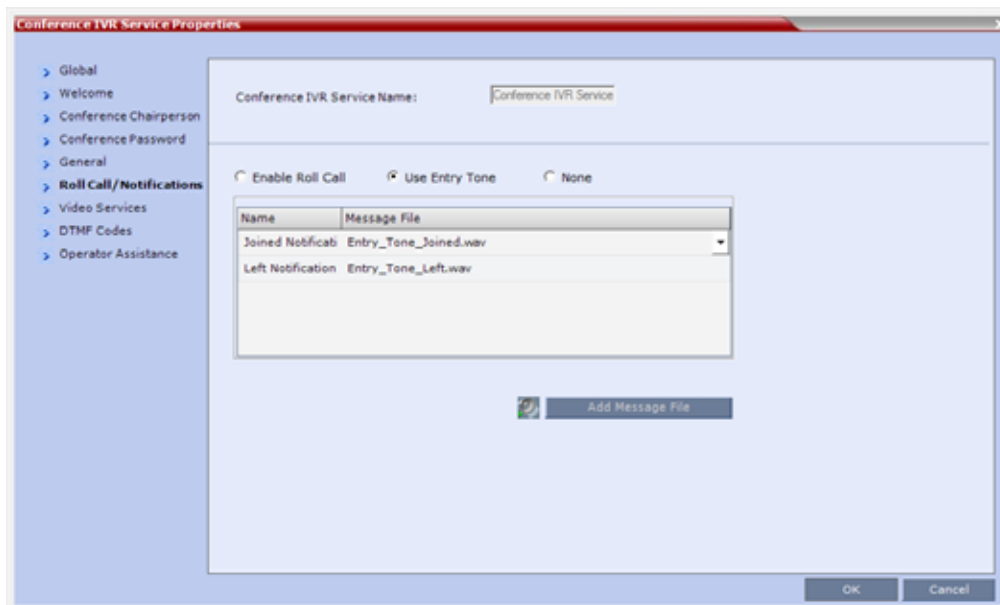

- Click the appropriate table entry in the **Message File** column.
A drop-down list is enabled.
- From the list, select the audio file to be assigned to the event/indication.




If the **Tones** option is enabled, you must assign the appropriate audio files to all notification types. The Collaboration Server system is shipped with two default tones: **Entry_tone.wav** and **Exit_tone.wav**.

If required, you can upload customized audio files that will be played when participants join or leave the conference.

If the option to play a tone when a cascading link connection is established, make sure that the tone selected for Entry or Exit notification differ from the cascading link tone as the latter one cannot be customized.

23 Click the Video Services tab.

The **New Conference IVR Service - Video Services** dialog box opens.

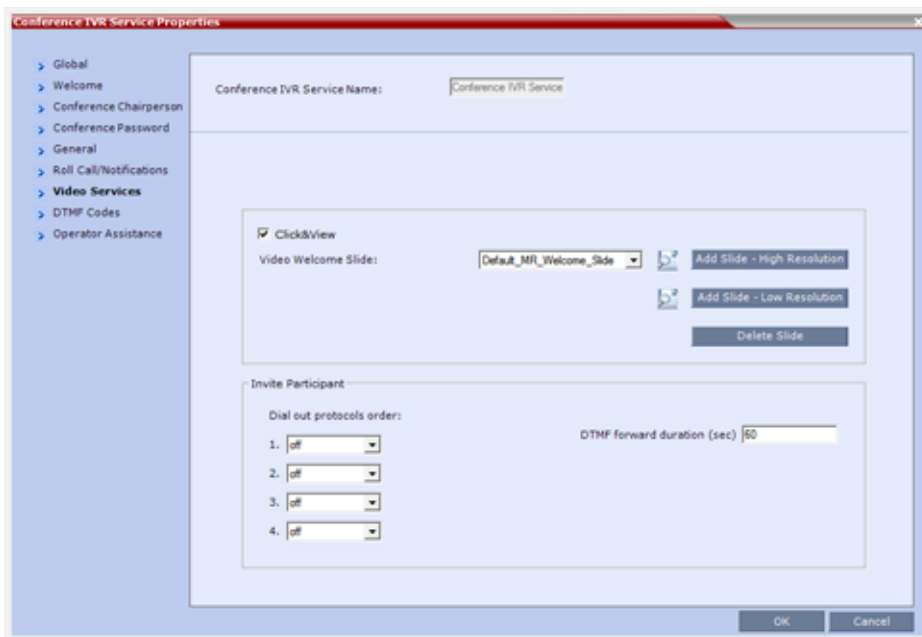

The Click&View and Invite Participants features are disabled in SVC and mixed CP and SVC conferences.

In addition to the low and high resolution slides included in the default slide set, customized low and high resolution slides are supported.

The following guidelines apply:

- Two customized slides can be loaded per **IVR Service**:
 - ◆ A low resolution slide, to be used with low resolution endpoints.
 - ◆ A high resolution slide, to be used with high resolution endpoints.

The following table summarizes the recommended input slide formats and the resulting slides that are generated:

IVR Slide - Input / Output Formats


Slide Resolution	Format	
	Input Slides	Generated Slides
High	HD1080p (16:9)	HD1080p
	or	HD720p
	HD720p (16:9)	

IVR Slide - Input / Output Formats

Slide Resolution	Format	
	Input Slides	Generated Slides
Low	4CIF (4:3)	4SIF
	or	SIF
	CIF (4:3)	CIF

- The source images for the high resolution slides must be in ***.bmp** or ***.jpg** format.
- If the uploaded slides are not of the exact **SD** or **HD** resolution, an error message is displayed and the slides are automatically cropped or enlarged to the right size.
- If a slide that is selected in an **IVR Service** is deleted, a warning is displayed listing the **IVR Services** in which it is selected. If deleted, it will be replaced with a default Collaboration Server slide.
- The generated slides are not deleted if the system is downgraded to a lower software version.
- The first custom source file uploaded, whatever its format, is used to generate both high and low resolution custom slides. High resolution source files uploaded after the first upload will be used to generate and replace high resolution custom slides. Likewise, low resolution source files uploaded after the first upload will be used to generate and replace low resolution custom slides.
- If there are two custom source files in the folder, one high resolution, one low resolution, and a new high resolution custom source file is uploaded, new high resolution custom slides are created. The existing low resolution custom slides are not deleted.
- If there are two custom source files in the folder, one high resolution, one low resolution, and a new low resolution custom source file is uploaded, new low resolution custom slides are created. The existing high resolution custom slides are not deleted.

24 Define the following parameters**New Conference IVR Service Properties - Video Services Parameters**

Video Services	Description
Click&View	Select this option to enable endpoints to run the Click&View application that enables participants to select a video layout from their endpoint. Note: This option is not available in SVC conferences and for SVC participants in mixed CP and SVC conferences.
Video Welcome Slide	Select the Low Resolution and High Resolution video slides to be displayed when participants connect to the conference. To view any slide, click the Preview Slide () button. Notes: <ul style="list-style-type: none"> • When using one of the default Polycom slides, the slide will be displayed in the resolution defined in the profile, i.e. CIF, SD, HD 720p or HD 1080p. When defining a gateway IVR Service, the recommended default slide is: Default_GW_Welcome_Slide. • Customized H.261 slides are not supported. When Collaboration Server is configured to IPv6, the IVR slide is displayed without taking into account the MTU Size.

New Conference IVR Service Properties - Video Services Parameters

Video Services	Description
Invite Participant	See Inviting Participants using DTMF . Note: The Invite Participant feature is not available in SVC conferences and for SVC participants in mixed CP and SVC conferences.
Dial out protocols order	Select the order of the network protocols that will be used by the system to dial the destination number. The system will start dialing using the first protocol, and if the call is not answered it will continue with the second, third and fourth protocols (if they are enabled) until the call is answered. By default, H.323 is set as the first protocol and SIP as the second while the remaining protocols are disabled (set to Off). For PSTN calls, select the PSTN protocol and not ISDN. Set PSTN before ISDN if both PSTN and ISDN protocols are required.
DTMF forward duration	Use this field when connecting to another conferencing entity with an IVR, requiring the input of a password, destination number or ID. Enter the number of seconds that the system will wait for the input of an additional DTMF digits such as a password or conference number. Range: 10 - 600 seconds Default: 60 seconds.

25 If the video slide file was not uploaded to the MCU prior to the IVR Service definition, click the:

- **Add Slide - Low Resolution** button to upload a **Low Resolution Slide**.
- **Add Slide - High Resolution** button to upload a **High Resolution Slide**.

The **Install File** dialog box opens. The uploading process is similar to the uploading of audio files. For more information, see [step 6](#) above.




- The video slide must be in a **.jpg** or **.bmp** file format. For more information, see [Creating a Welcome Video Slide](#).
- Customized H.261 slides are not supported.

26 Click the **DTMF Codes** tab.

The **New Conference IVR Service - DTMF Codes** dialog box opens.

This dialog box lists the default DTMF codes for the various functions that can be performed during the conference by all participants or by the chairperson.

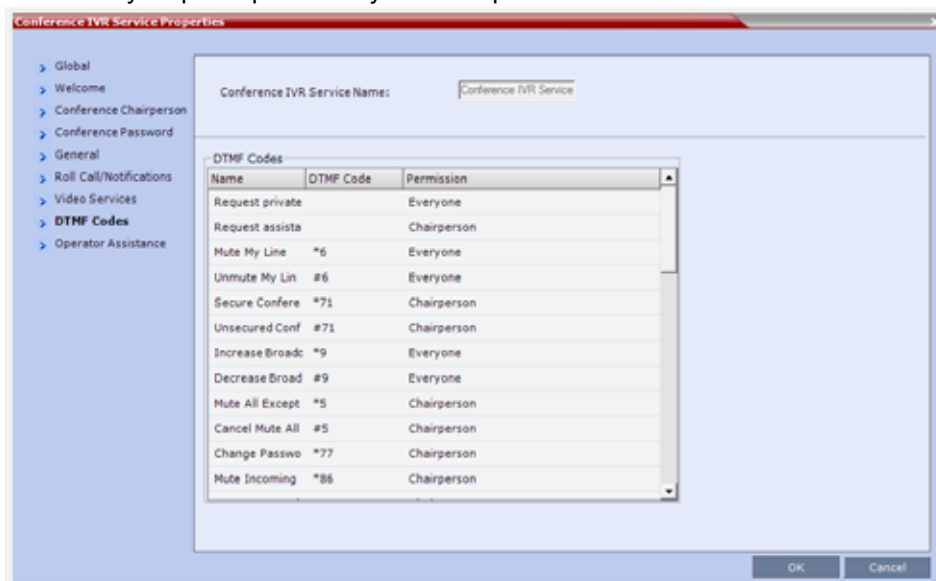

Participants and chairpersons can manage their connection to ongoing conferences from their endpoints, using DTMF codes from their endpoints. Chairpersons can also control an ongoing conference using DTMF codes.

To use the DTMF codes to control the conference, the DTMF input must be first enabled on the endpoint remote control.

New Conference IVR Service Properties - DTMF Codes

Operation	DTMF String	Permission
Mute My Line	*6	Everyone
Unmute My Line	#6	Everyone
Increase Broadcast Volume	*9	Everyone
Note: This option is not available for SVC participants.		
Decrease Broadcast Volume	#9	Everyone
Note: This option is not available for SVC participants.		
Mute All Except Me	*5	Chairperson
Cancel Mute All Except Me	#5	Chairperson
Change Password	*77	Chairperson
Mute Incoming Participants	*86	Chairperson
Unmute Incoming Participants	#86	Chairperson

New Conference IVR Service Properties - DTMF Codes

Operation	DTMF String	Permission
Play Help Menu	*83	Everyone
Enable Roll Call Note: This option is not available in SVC conferences.	*42	Chairperson
Disable Roll Call Note: This option is not available in SVC conferences.	#42	Chairperson
Roll Call Review Names Note: This option is not available in SVC conferences.	*43	Chairperson
Roll Call Stop Review Names Note: This option is not available in SVC conferences.	#43	Chairperson
Terminate Conference	*87	Chairperson
Start Click&View Note: This option is not available for SVC participants.	**	Everyone
Start PCM Note: This option is not available for SVC participants.	##	Chairperson
Invite Participant Note: This option is not available for SVC participants.	*72	Everyone
Disconnect Last Invited Participant Note: This option is not available for SVC participants.	#72	Chairperson
Change To Chairperson	*78	Everyone
Increase Listening Volume Note: This option is not available for SVC participants.	*76	Everyone
Decrease Listening Volume Note: This option is not available for SVC participants.	#76	Everyone
Override Mute All	Configurable	Everyone
Start Recording	*2	Chairperson
Stop Recording	*3	Chairperson
Pause Recording	*1	Chairperson
Secure Conference	*71	Chairperson
Unsecured Conference	#71	Chairperson
Show Number of Participants Note: This option is not available in SVC conferences.	*88	Everyone
Request individual assistance Note: This option is not available for SVC participants.	*0	Everyone

New Conference IVR Service Properties - DTMF Codes

Operation	DTMF String	Permission
Request assistance for conference Note: This option is not available for SVC participants.	00	Chairperson
Request to Speak	99	Everyone
Touch Control Prefix Note: This option is not available for SVC participants.	*#	Everyone



Do not change the **DTMF** code of the **Touch Control Prefix (*#)**.

If during the ongoing conference the **Show Number of Participants** DTMF option (default DTMF *88) is used, when the displayed number of participants is removed, the message overlay text is also removed.

27 To modify the DTMF code or permission:

- a In the **DTMF Code** column, in the appropriate entry enter the new code.
- b In the **Permission** column, select from the list who can use this feature (Everyone or just the Chairperson).



By default, the Secure, Unsecure Conference and Show Number of Participants options are enabled in the Conference IVR Service. When Secured Conference is enabled, it locks the conference and prevents participants and Collaboration Server Users from joining the conference. A Secured Conference cannot be monitored or controlled. In the Secured Conference mode, the Administrator cannot view the participant or conference properties, but can manually terminate them. In the Secured Conference mode, the chairperson and participants can perform various operations, such as muting through DTMF codes. However, because Secure conferences cannot be monitored, these operations or status changes are not displayed in the Conferences or Participants panes.


The Secure, Unsecure Conference and Show Number of Participants options can be disabled by removing their codes from the Conference IVR Service.

To disable the Text Indication option in the DTMF Code column, clear the DTMF code (*88) of **Show Number of Participants** from the table.

To disable the Secure Conference options, in the **DTMF Code** column, clear the DTMF codes of both Secured Conference (*71) and Unsecured Conference (#71) from the table.

28 Click the **Operator Assistance** tab.

The **Operator Assistance** dialog box opens.

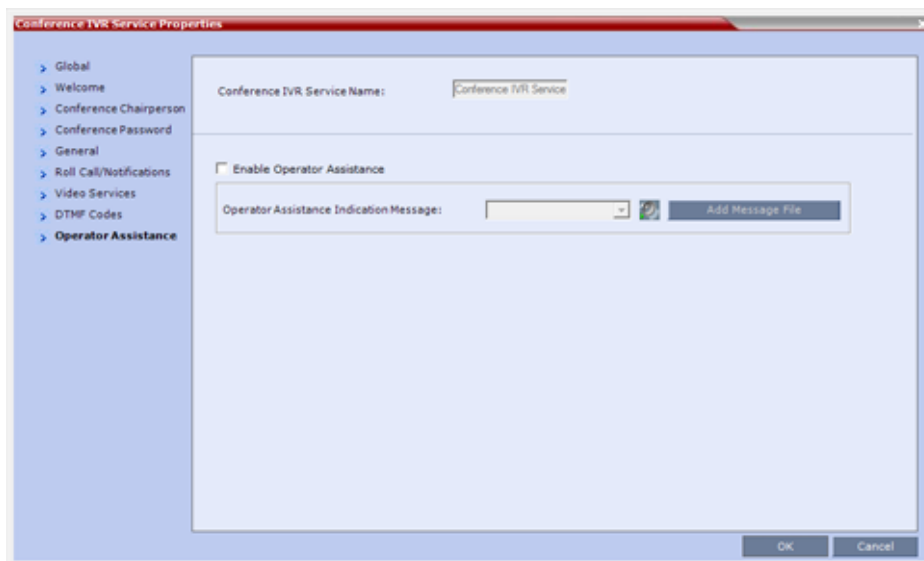

29 Select **Enable Operator Assistance** to enable operator assistance when the participant requires or requests help during the connection process to the conference or during the conference.



The Operator Assistance option is disabled in SVC conferences.

30 In the **Operator Assistance Indication Message** field, select the audio message to be played when the participant requests or is waiting for the operator's assistance.



If the audio file was not uploaded prior to the definition of the IVR Service or if you want to add new audio files, click **Add Message File** to upload the appropriate audio file to the Collaboration Server.

31 Click **OK** to complete the IVR Service definition.

The new Conference IVR Service is added to the **IVR Services** list.

Change to Chairperson

Regular participants can request to become the conference chairperson using the appropriate DTMF code (default: *78), which enabled them to perform operations designated for chairpersons only.

The Change to Chairperson via the DTMF code (default: *78) is executed only if the following settings were configured for the MCU and the conference:

- In the **Conference IVR Service - Conference Chairperson** dialog box, select the **Enable Chairperson Messages** check box, and select the appropriate voice messages.

For more information, see [New Conference IVR Service Properties - Conference Chairperson Options and Messages](#).

- When starting a new conference or defining a new Meeting Room, define the **Chairperson Password** in the conference General dialog box.

For more information, see [Creating a New Meeting Room](#).

Controlling the receipt of in-band and out-of-band DTMF Codes

The **RFC2833_DTMF System Flag** controls the receipt of in-band or out-of-band DTMF Codes.

When set to **YES** (default), the RMX will receive DTMF Codes sent in-band. When set to **NO** the RMX receives DTMF Codes sent out-of-band. The RMX always sends DTMF Codes in-band (as part of the Audio Media stream). If you wish to modify the flag value, the flag must be added to the System Configuration file. For more information see [Modifying System Flags](#).

Entry Queue IVR Service

An Entry Queue (EQ) is a routing lobby for conferences. Participants are routed to the appropriate conference according to the conference ID they enter.


An Entry Queue IVR Service must be assigned to the Entry Queue to enable the voice prompts and video slide guiding the participants through the connection process.

An Entry Queue IVR Service is a subset of an IVR Service. You can create different Entry Queue Services for different languages and personalized voice messages.


The Collaboration Server is shipped with a default Entry Queue IVR Service and all its audio messages and video slide. You can define new Entry Queue IVR Services or modify the default Entry Queue IVR Service.

Defining a New Entry Queue IVR Service

To set up a new Entry Queue IVR Service:

- 1 In the **RMX Management** pane, click **IVR Services** ().

- 2 In the **IVR Services** list, click the **New Entry Queue IVR Service** () button.
The **New Entry Queue IVR Service - Global** dialog box opens.

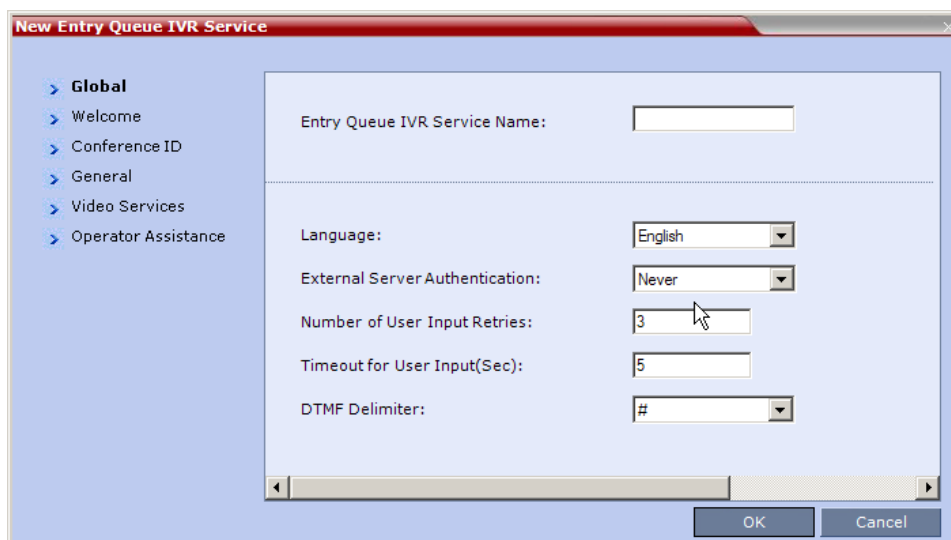


- 3 Fill in the following parameters:

Entry Queue IVR Service Properties - Global Parameters

Option	Description
Entry Queue Service Name	(Mandatory) Enter the name of the Entry Queue Service. The name can be typed in Unicode. Maximum field length is 80 ASCII characters.
Language	Select the language in which the Audio Messages and prompts will be heard. The languages are defined in the Supported Languages function.
External Server Authentication	This option is used for Ad Hoc conferencing, to verify the participant's permission to initiate a new conference. For a detailed description see Appendix D - Ad Hoc Conferencing and External Database Authentication . Select one of the following options: <ul style="list-style-type: none"> • None to start a new conference without verifying with an external database the user right to start it. • Conference ID to verify the user's right to start a new conference with an external database application using the conference ID.
Number of User Input Retries	Enter the number of times the participant is able to respond to each menu prompt before the participant is disconnected from the MCU.
Timeout for User Input (Sec.)	Enter the duration in seconds that the system waits for input from the participant before it is considered as an input error.
DTMF Delimiter	The interaction between the caller and the system is done via touch-tone signals (DTMF codes). Enter the key that will be used to indicate a DTMF command sent by the participant or the conference chairperson. Possible keys are the pound key (#) or star (*).

4 Click the **Welcome** tab.

The **New Entry Queue IVR Service - Welcome** dialog box opens.

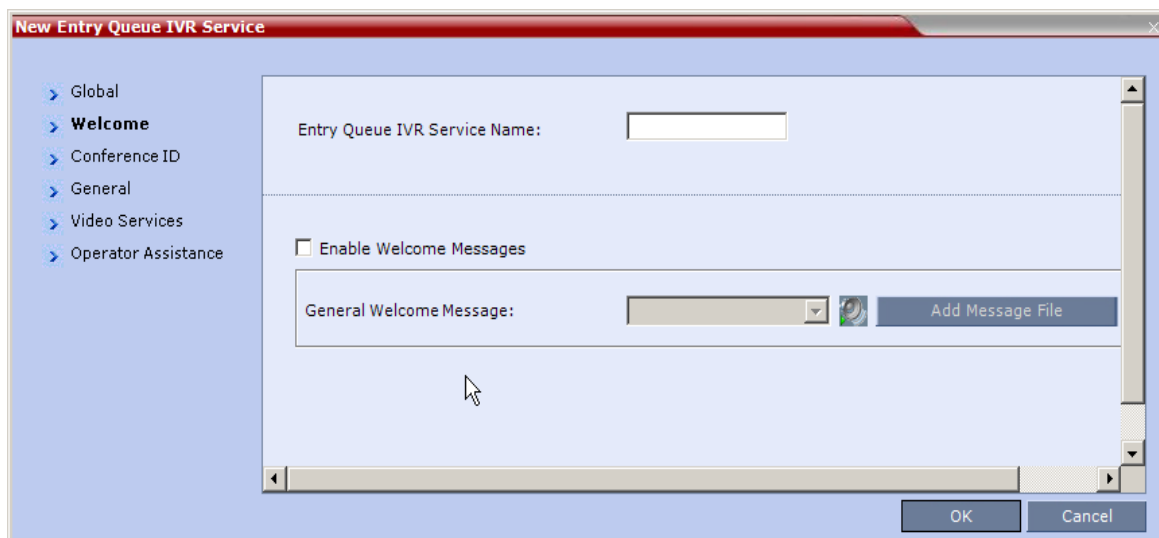


If the files were not uploaded prior to the definition of the IVR Service or if you want to add new audio files, click **Add Message File** to upload the appropriate audio file to the Collaboration Server.

5 Define the appropriate parameters. This dialog box contains options that are identical to those in the **Conference IVR Service - Welcome Message** dialog box. For more information about these parameters, see [New Conference IVR Service Properties - Conference Chairperson Options and Messages](#).

6 Click the **Conference ID** tab.

The **New Entry Queue IVR Service - Conference ID** dialog box opens.

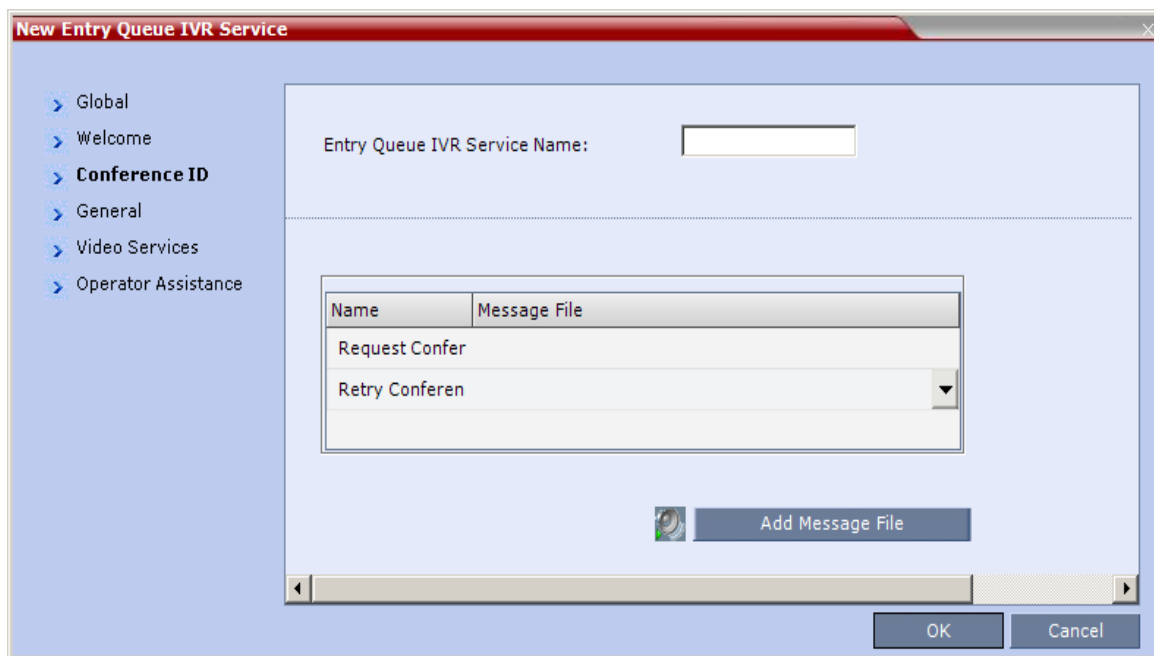

7 Select the voice messages:

Entry Queue IVR Service Properties - Conference ID

Field/Option	Description
Request Conference ID	Prompts the participant for the conference ID.
Retry Conference ID	When the participant entered an incorrect conference ID, requests the participant to enter the ID again.

8 Assign an audio file to each message type, as follows:

- In the **Message File** column, click the table entry, and then select the appropriate audio message.

9 Click the **General** tab.

The **New Entry Queue IVR Service - General** dialog box opens.



The administrator can enable an audio message that informs the participant of the lack of **Video Resources** in the *Collaboration Server* and that he/she is being connected as **Audio Only**. The message states: **All video resources are currently in use. Connecting using audio only.**

The following guidelines apply:

- The **IVR** message applies to video participants only. **Audio Only** participants will not receive the message.
- Only **H.323** and **SIP** participants receive the audio message.
- Downgrade to **Audio Only** is not supported for undefined **ISDN** dial in participants. These participants are disconnected if there is a lack of **Video Resources**.
- The audio message is the first message after the call is connected, preceding all other **IVR** messages.
- The message is called **No Video Resources-Audio Only** and the message file (**.wav**) is called **No video resources audio only.wav**.
- The audio message must be added to the **Conference** and **Entry Queue IVR Services** separately.
- The IVR message can be enabled/disabled by the administrator using the **ENABLE_NO_VIDEO_RESOURCES_AUDIO_ONLY_MESSAGE** System Flag in **system.cfg**.

Possible values: **YES / NO**, default: **YES**


If you wish to modify the flag value, the flag must be added to the **System Configuration** file. For more information see the [Modifying System Flags](#).

10 Enter the message **Name** and **Message File** name for the **Audio Only** message:

- **Message Name:** **No Video Resources-Audio Only**
- **Message File name:** **No_Video_Resources_Audio_Only.wav**

11 Click the Video Services tab.

The **New Entry Queue IVR Service - Video Services** dialog box opens.

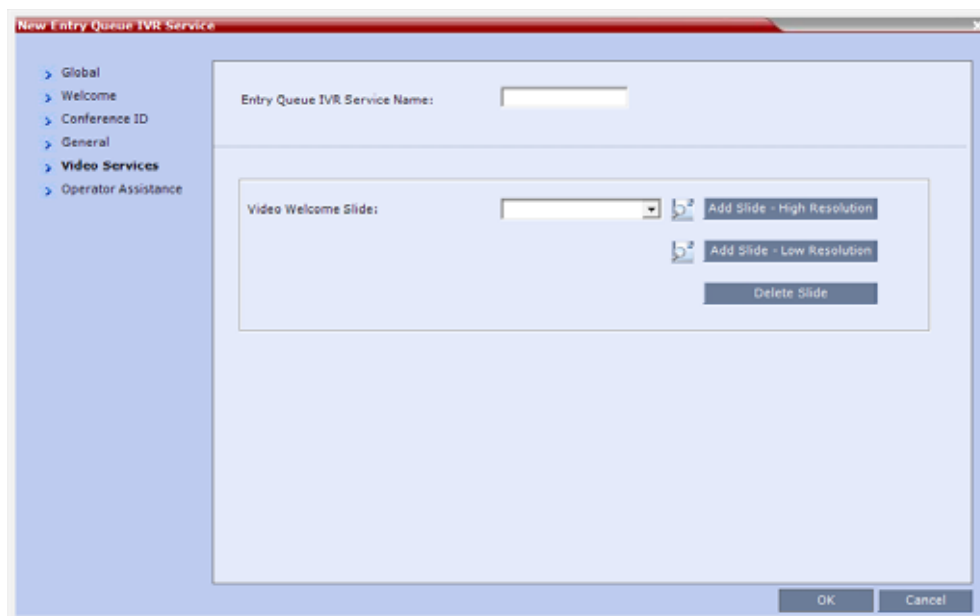

12 In the **Video Welcome Slide** list, select the video slide that will be displayed to participants connecting to the Entry Queue. The slide list includes the video slides that were previously uploaded to the MCU memory.

13 To view any slide, click **Preview Slide** (🖼️).

14 If the video slide file was not uploaded to the MCU prior to the IVR Service definition, click the:

- **Add Slide - Low Resolution** button to upload a **Low Resolution Slide**.
- **Add Slide - High Resolution** button to upload a **High Resolution Slide**.

The **Install File** dialog box opens. The uploading process is similar to the uploading of audio files. For more information, see [step 6](#).



The video slide must be in a **.jpg** or **.bmp** file format. For more information, see [Creating a Welcome Video Slide](#).

- 15 Click the **Operator Assistance** tab.

The **Operator Assistance** dialog box opens.

- 16 Select **Enable Operator Assistance** to enable operator assistance when the participant requires or requests help during the connection process.

- 17 In the **Operator Assistance Indication Message** field, select the audio message to be played when the participant requests or is waiting for operator's assistance.



If the audio file was not uploaded prior to the definition of the IVR Service or if you want to add new audio files, click **Add Message File** to upload the appropriate audio file to the Collaboration Server.


- 18 Click **OK** to complete the Entry Queue Service definition.

- 19 The new Entry Queue IVR Service is added to the **IVR Services** list. For more information, see [IVR Services List](#).


Setting a Conference IVR Service or Entry Queue IVR Service as the Default Service

The first Conference IVR Service and Entry Queue IVR Service are automatically selected by default. The IVR Services (Conference and Entry Queue) shipped with the system are also set as default. If additional Conference IVR Services and Entry Queue IVR Services are defined, you can set another service as the default for each service type.

To select the default Conference IVR Service:


- In the **IVR Services** list, select the Conference IVR Service to be defined as the default, and then click **Set Default Conference IVR Service** ().

Alternatively, in the **IVR Services** list, right-click the Conference IVR Service and then select **Set Default Conference IVR Service**.

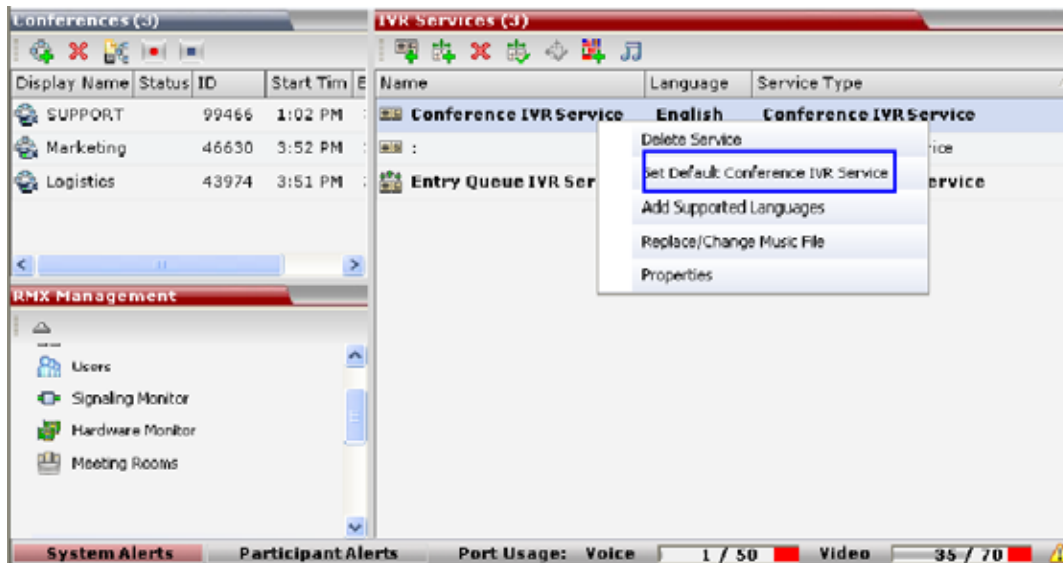


The IVR Service is displayed in bold, indicating that it is the current default service.

To select the Default Entry Queue IVR Service:

- » In the **IVR Services** list, select the Entry Queue IVR Service to be defined as the default, and then click **Set Default Entry Queue IVR Service** ().

Alternatively, in the **Conference IVR Services** list, right-click the Entry Queue IVR Service and then select **Set Default Entry Queue IVR Service**.

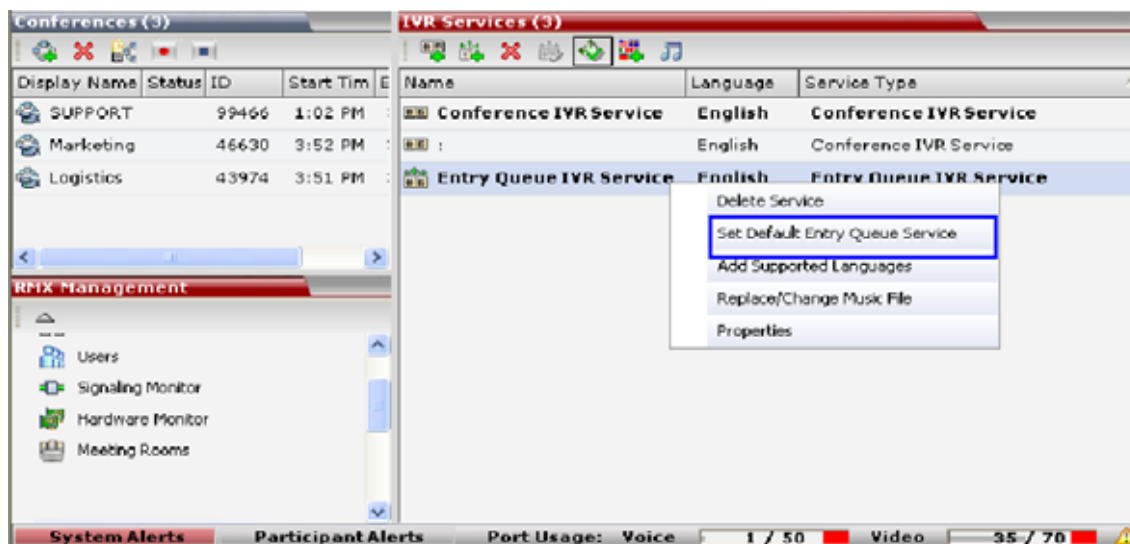

The default Entry Queue IVR Service is displayed in bold, indicating that it is the current default service.

Modifying the Conference or Entry Queue IVR Service Properties

You can modify the properties of an existing IVR Service, except the service name and language.

To modify the properties of an IVR Service:

- 1 In the **RMX Management** pane, click **IVR Services**.
- 2 In the **IVR Services** list, Click the IVR Service to modify.
For more information about the tabs and options of this dialog box, see [Defining a New Conference IVR Service](#).
- 3 Modify the required parameters or upload the required audio files.
- 4 Click **OK**.

Replacing the Music File

The Collaboration Server is shipped with a default music file that is played when participants are placed on hold, for example, while waiting for the chairperson to connect to the conference (if the conference requires a chairperson), or when a single participant is connected to the conference. You can replace the default music file with your own recorded music.

Music file guidelines:

- The file must be in ***.wav** format.
- Music length cannot exceed one hour.
- The music recording must be in the range of (-12dB) to (-9dB).

Adding a Music File

To replace the Music file:

- 1 In the **RMX Management** pane, click **IVR Services**.
- 2 In the IVR Services list toolbar, click the **Replace/Change Music File** (🎵) button.

The **Install Music File** window opens.



- 3 Click the **Browse** button to select the audio file (***.wav**) to upload.
The **Open** dialog box opens.



- 4 Select the appropriate audio ***.wav** file and then click **Open**.
The selected file name is displayed in the **Install Music File** dialog box.
- 5 You can play the selected file by clicking **Play** (🎵).
 - a Click **Play Selected File** to play a file on your computer.
 - b Click **Play RMX File** to play a file already uploaded on the **RMX**.
- 6 In the **Install Music File** dialog box, click **OK** to upload the file to the MCU.

- The new file replaces the previously uploaded file and this file is used for all background music played by the MCU.

Creating Audio Prompts and Video Slides

The *Collaboration Server* is shipped with default voice messages (in WAV format) and video slides that are used for the default IVR services. You can create your own video slides and record the voice messages for different languages or customize them to your needs.

Recording an Audio Message

To record audio messages, use any sound recording utility available in your computer or record them professionally in a recording studio. Make sure that recorded message can be saved as a Wave file (*.wav format) and that the recorded format settings are as defined in steps 4 and 5 on the following procedure. The files are converted into the *Collaboration Server* internal format during the upload process.

This section describes the use of the Sound Recorder utility delivered with Windows 95/98/2000/XP.

Defining the format settings for audio messages



- The format settings for audio messages need to be set only once. The settings will then be applied to any new audio messages recorded.
- The utility or facility used to record audio messages must be capable of producing audio files with the formats and attributes as shown in the following procedure, namely, **PCM, 16.000kHz, 16Bit, Mono**.

Windows® XP® Sound Recorder is one of the utilities that can be used.

To define the format settings for audio messages:

- On your PC, select **Start > Programs > Accessories > Entertainment > Sound Recorder**.


The **Sound–Sound Recorder** dialog box opens.



- To define the recording format, click **File > Properties**.


The **Properties for Sound** dialog box opens.

3 Click **Convert Now**.

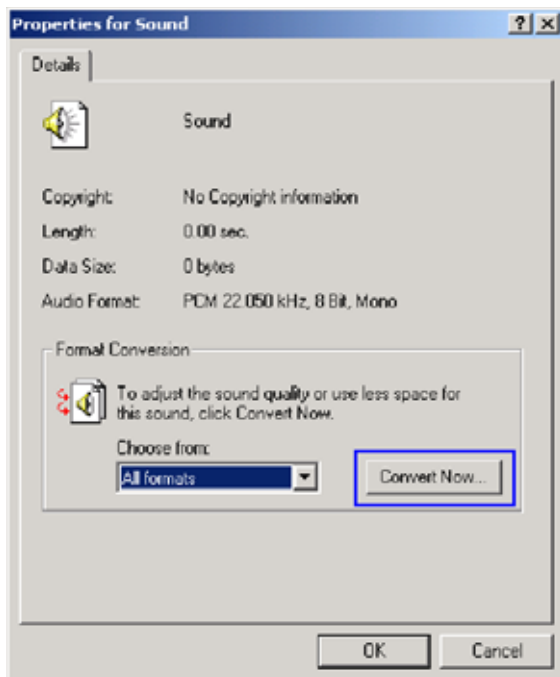


The **Sound Selection** dialog box opens.

- 4 In the **Format** field, select **PCM**.
 5 In the **Attributes** list, select **16.000 kHz, 16Bit, Mono**.

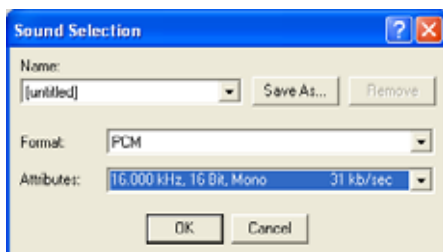

- 6 To save this format, click the **Save As** button.
 The **Save As** dialog box opens.
 7 Select the location where the format will reside, enter a name and then click **OK**.

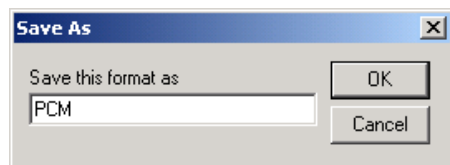

The system returns to the **Sound Selection** dialog box.

- 8 Click **OK**.
 The system returns to the **Properties for Sound** dialog box.

9 Click **OK**.

The system returns to the Sound–Sound Recorder dialog box. You are now ready to record your voice message.

Recording a new audio message



Regardless of the recording utility you are using, verify that any new audio message recorded adheres to the following format settings: 16.000kHz, 16Bit, Mono.

To record a new audio message:

Make sure that a microphone or a sound input device is connected to your PC.

1 On your PC, click **Start > Programs > Accessories > Entertainment > Sound Recorder**.

The **Sound–Sound Recorder** dialog box opens.

2 Click **File > New**.

3 Click the **Record** button.

The system starts recording.

4 Start narrating the desired message.




For all audio IVR messages, stop the recording anytime up to 3 minutes (which is the maximum duration allowed for an IVR voice message). If the message exceeds 3 minutes it will be rejected by the Collaboration Server unit.

5 Click the **Stop Recording** button.


6 Save the recorded message as a wave file, click **File > Save As**.

The **Save As** dialog box opens.

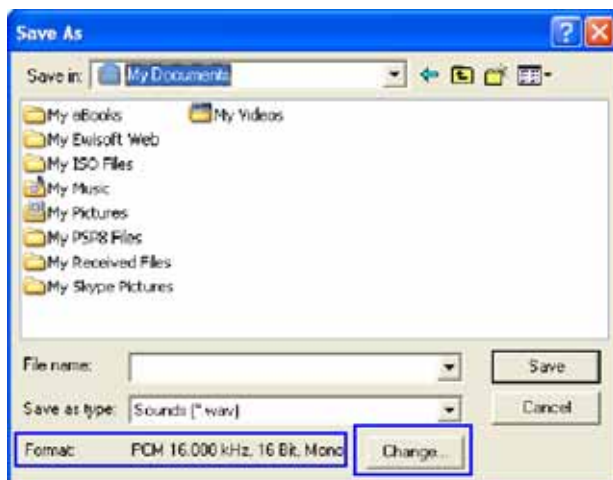

- 7 Verify that the **Format** reads: **PCM 16.000 kHz, 16Bit, Mono**. If the format is correct, continue with step 10. If the format is incorrect, click **Change**.

The **Sound Selection** dialog box is displayed.

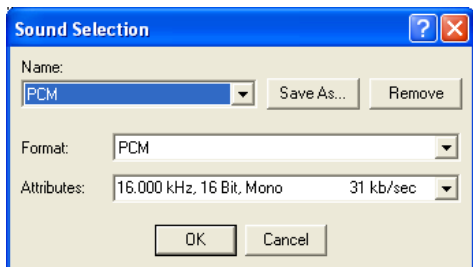

- 8 In the **Name** field, select the name of the format created in [step 7](#).
- 9 Click **OK**.
The system returns to the **Save As** dialog box.
- 10 In the **Save in** field, select the directory where the file will be stored.
- 11 In the **Save as Type** field, select the ***.wav** file format.
- 12 In the File name box, type a name for the message file, and then click the **Save** button.
- 13 To record additional messages, repeat steps 1 to 10.



To upload your recorded ***.wav** file to the Collaboration Server, see [step 6](#).

Creating a Welcome Video Slide

The video slide is a still picture that can be created in any graphic application.

To create a welcome video slide:

- 1 Using any graphic application, save your image in either ***.jpg** or ***.bmp** file format.
- 2 For optimum quality, ensure that the image dimensions adhere to the Collaboration Server recommended values (width x height in pixels):
 - 640 x 480
 - 704 x 480
 - 848 x 480
 - 720 x 576
 - 704 x 576
 - 1024 x 576
 - 960 x 720
 - 1280 x 720
 - 1440 x 1088
 - 1920 x 1088

The Collaboration Server can accommodate small deviations from the recommended slide resolutions.

- 3 Save your file.



Customized H.261 slides are not supported..



If using a default Polycom slide, the slide's resolution will be as defined in the profile, i.e. SD, HD or CIF.

If the display of the Welcome slide is cut in the upper area of the screen, change the settings of the endpoint's monitor to People **Stretch** instead of **Zoom**.



To upload your video slide to the Collaboration Server, see [step 12](#) in Defining a New Entry Queue IVR Service.

Inviting Participants using DTMF



This feature is disabled in SVC conferences and for SVC participants in mixed CP and SVC conferences.

A participant in a video or audio conference can invite another participant to the conference using the touch-tone DTMF numeric keypad on the participant's endpoint. You can invite a participant using various communication devices, such as a mobile phone, an IP phone, PSTN phones, laptops, or connect to another conference running on another PBX or MCU.

Invite Call Flow

The following flow describes how a participant is invited to the conference using the DTMF codes:

- 1 During the conference, the participant enters the DTMF code (default is ***72**) on the numeric keypad to invite another participant.
- 2 The participant is prompted to enter the invited participant's destination number (a number or IP address) including the prefix (if required) and the DTMF delimiter digit ('*' or '#') at the end. The asterisk (*) is used to denote the dot in the IP address.

For example: To enter an IP address such as 10.245.22.19, on the DTMF keypad press 10*245*22*19 and then the DTMF delimiter.



Digits that are entered after the DTMF delimiter and before the participant is connected are ignored.

- 3 The system automatically dials to the destination according to the protocol order as defined in the **IVR Services Properties - Video Services** tab.
 When the call cannot be completed by the current protocol, the system attempts to connect to the destination using the next protocol according to the protocol order.
 The *Collaboration Server* connects the participant when the call is answered.
- 4 The last invited participant can be disconnected when the inviting participant enters the DTMF code (default is **#72**) on the numeric keypad.

Entering Additional DTMF Codes

In some environments, the call is answered by an IVR system (for example when connecting to another conference or PBX), requesting a password or a destination number to complete the connection process. In such a case, additional DTMF digits must be entered before the **DTMF forward duration** time has expired and are forwarded to the invited destination. When the additional DTMF codes are entered, they are heard by all the conference participants.

If the DTMF code is not entered on time or if the wrong DTMF code is entered, the participant is prompted for a new input. After the defined number of retries have elapsed, the call is ended.

Error Handling

- If the destination endpoint is busy or the participant did not answer, the system ends the call.

- When an incorrect number is entered, the call fails and an error message is displayed.
- If the destination number is not entered in a specific amount of time (defined in **Timeout for user input** in the **IVR Services - Global** tab), the participant is prompted to enter a destination number again. Depending on the **Number of user input retries** as defined in the **IVR Services - Global** tab, the system will attempt to receive the required input. When all the retries have failed, the call to the invited participant is cancelled.

Guidelines

- Inviting other participants is available to AVC-enabled participants only.
- Participants can be invited to Event Mode, and CP and VSW conferences. Event Mode conferencing is not supported on Collaboration Server (RMX) 1800 with no DSP cards.
- All network protocols are supported (H.323, SIP, ISDN, and PSTN). It is recommended to select PSTN and not ISDN if PSTN is the only destination protocol. If both PSTN and ISDN are enabled, it is recommended to select the PSTN before ISDN as the connection process for PSTN endpoints will be quicker.
- In an Multiple IP Networks environment, the system will try to connect the participant using each of the IP Network Services listed in the **Conference Profile - Network Services** dialog box. Network services that are excluded from this list are skipped during the dialing sequence.
- In Event Mode conferences, the invited participant connection parameters must match one of the conference levels.
- In CP conferences, the participant initiating the invitation to another participant is able to view the dialing information and connection status. During the dialing process, the dialing string is displayed as the participant name which is replaced by the site name when connected to the conference.
- By default, all participants (Everyone) are granted permission to invite a participant to join a conference. To change the permission to the Chairperson, modify the **Permission** column in the **IVR Service - DTMF Codes** tab.

Enabling the Invite Participants using DTMF Option

The option to invite participants to a conference using the DTMF keypad is enabled in the following **Conference IVR Services** dialog boxes:


- General
- Video Services
- DTMF Codes

To enable the Invite Participant using DTMF on the Collaboration Server:

- 1 Open an existing or define a new **Conference IVR Service**.
Conference IVR Service - Global dialog box opens.

- 2 Click the **General** tab.


The **Conference IVR Services - General** tab is displayed.

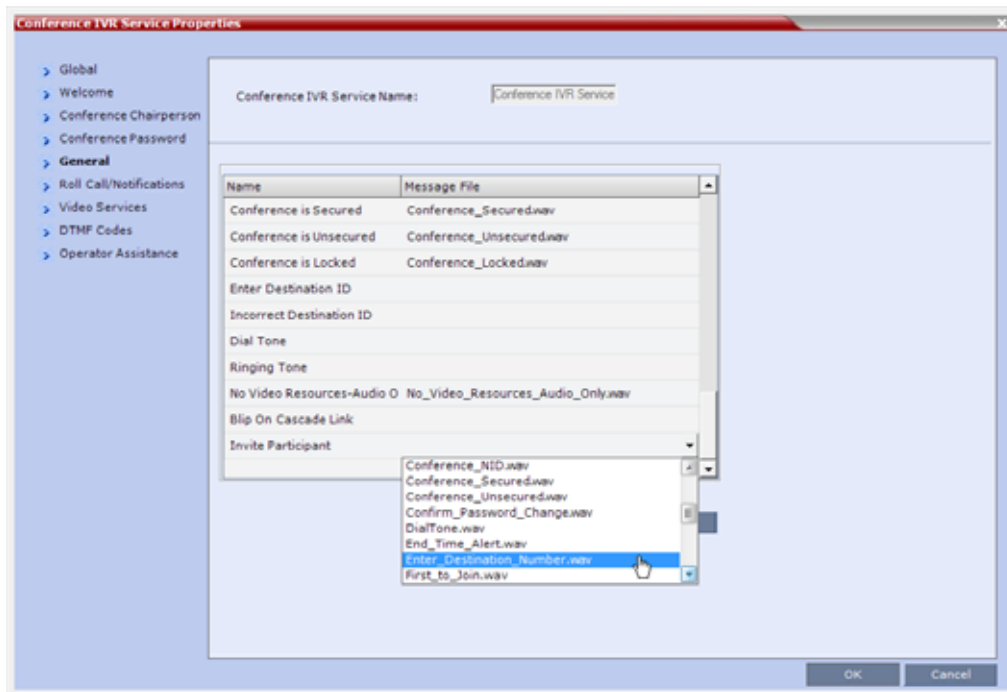

- 3 In the Message File column of the **Invite Participant** entry, click the drop-down arrow and select the required voice message. The file **Enter_Destination_Number.wav** that is shipped with the system can be used for this message.

To upload a new file, click the **Add Message File**. For more details, see [Creating Audio Prompts and Video Slides](#).

- Click the **Video Services** tab.
The **IVR Services - Video Services** tab is displayed.

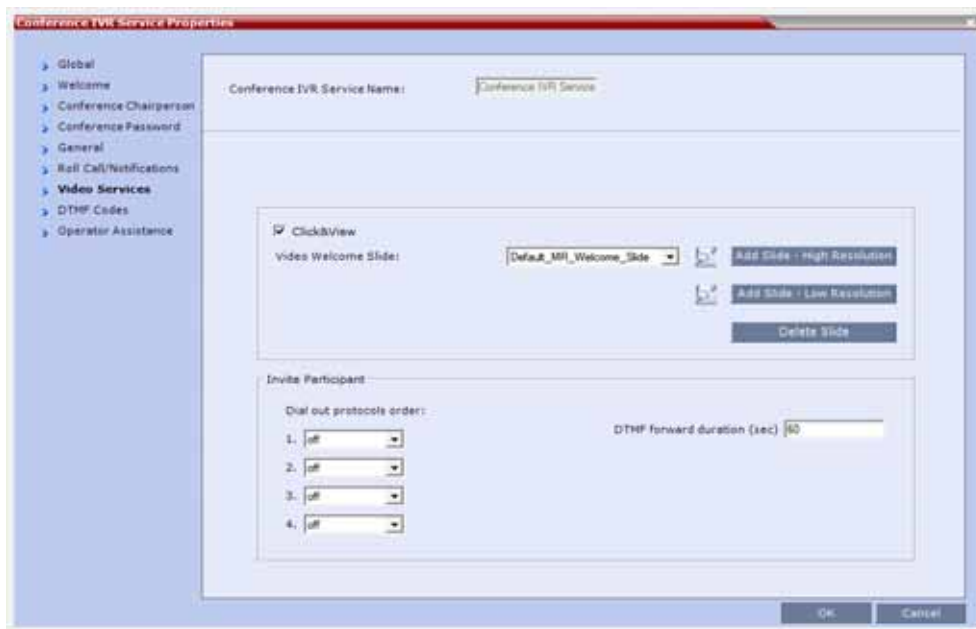


- Define the following parameters:

IVR Services Properties - Video Services Parameters - Invite Participants

Video Services	Description
Dial out protocols order	Select the order of the network protocols that will be used by the system to dial the destination number. The system will start dialing using the first protocol, and if the call is not answered it will continue with the second, third and fourth protocols (if they are enabled) until the call is answered. By default, H.323 is set as the first protocol and SIP as the second while the remaining protocols are disabled (set to Off). For PSTN calls, select the PSTN protocol and not ISDN. Set PSTN before ISDN if both PSTN and ISDN protocols are required.
DTMF forward duration	Use this field when connecting to another conferencing entity with an IVR, requiring the input of a password, destination number or ID. Enter the number of seconds that the system will wait for the input of additional DTMF digits such as a password or conference number. The range can be from 10 seconds to 600 seconds. Default is 60 seconds.

- Click the **DTMF Codes** tab.

The **IVR Services - DTMF Codes** tab is displayed.

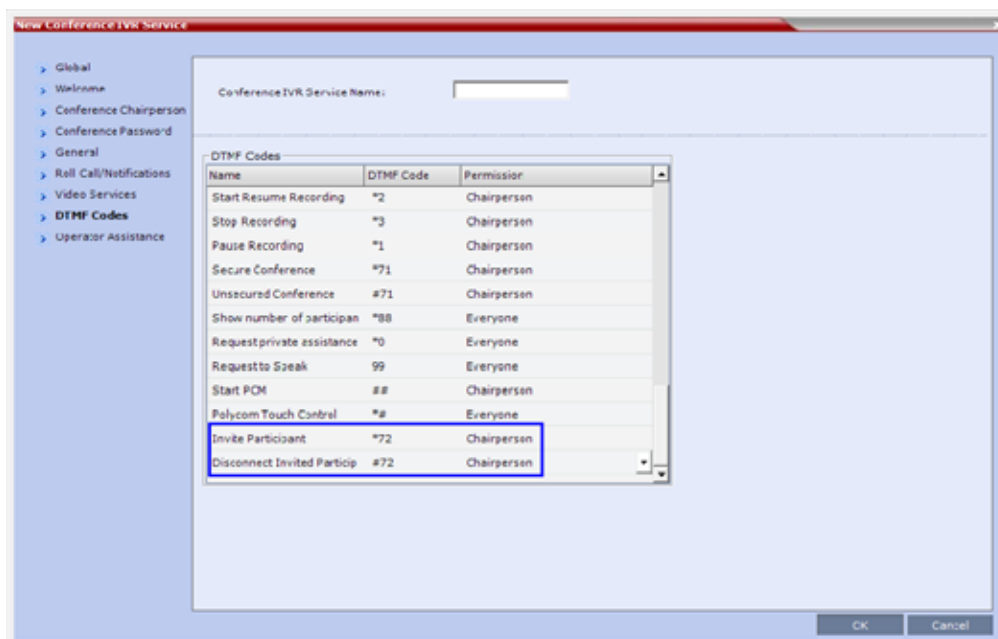

- Make sure that **Invite Participant** and **Disconnect Invited Participant** have DTMF Codes assigned to them. Default system values are ***72 (Invite Participant)** and **#72 (Disconnect Invited Participant)**, however you can enter your own values.

When upgrading from a previous version, default system values may not be assigned if these IVR entries were not defined in your existing IVR Service and have to be manually added to the **DTMF Codes** table.

- If required, determine who can invite other participants to the conference using DTMF codes by changing the permissions to either **Chairperson** or **Everyone**.
- Click **OK**.

Disabling the Invite Participant Option

To disable the Invite Participant option:

- From the **IVR Services - DTMF Codes** tab, delete the DTMF digits from the **DTMF Code** column.
- Click **OK**.

External IVR Service Control

IVR Services can be controlled externally from an application server supporting the MCCF-IVR (Media Control Channel Framework-Interactive Voice Response) package. The external IVR service is currently being implemented with the integration of the Polycom RealPresence Virtualization Manager (DMA) as the application server. When the application server is deployed in the enterprise environment and the Polycom RealPresence Collaboration Server (MCU) is deployed as a media server, the external IVR service can be used to play audio messages, display slides, and collect DTMF input from the participant.

For more information, see [Using External IVR Services via the MCCF-IVR Package](#).

IVR Services Support with TIP Protocol

From Version 8.1, Conference IVR and Entry Queue IVR Services are supported with AVC TIP protocol in conferences that include both TIP-enabled and non-TIP-enabled endpoints. TIP-enabled endpoints can be moved from the Entry Queue to the destination conference if the **TIP Compatibility Modes** settings in the Profile are identical for both conferencing entities (it is recommended to use the same **Profile** for both entities).

The IVR services can be enabled in **Prefer TIP** TIP Compatibility Modes.

IVR media files, WAV for voice messages and JPG for video slides, are all stored on the RealPresence Collaboration Server (RMX).

Guidelines for TIP Support with IVR Services

- AVC SIP and TIP protocols are supported on the RealPresence Collaboration Server 2000/4000 only.
- IVR default audio files are enabled in **Prefer TIP** TIP Compatibility Modes.
- TIP-enabled endpoints can send DTMF digits to MCU.
- In a mixed TIP environment, there is no support for content in cascaded conferences. Additionally, Legacy and Lync endpoints cannot view content.

Default IVR Prompts and Messages

The system is shipped with the following audio prompts and messages:

Default IVR Messages

Message Type	Message Text	When Played	File Name
General Welcome Message	Welcome to unified conferencing.	The participant enters the conference IVR queue	General_Welcome.wav
Chairperson Identifier Request	For conference Chairperson Services, Press the Pound Key. All other participants please wait...	The participant is asked to self-identify as the chairperson	Chairperson_Identifier.wav
Request Chairperson Password	Please enter the Conference Chairperson Password. Press the pound key when complete.	The participant is asked for the chairperson password	Chairperson_Password.wav
Retry Chairperson Password	Invalid chairperson password. Please try again.	A participant enters an incorrect Chairperson password	Chairperson_Password_Failure.wav
Request Password	Please enter the conference password. Press the pound key when complete.	A participant is requested to enter the conference password	Conference_Password.wav
Retry Password	Invalid conference password. Please try again.	An incorrect conference password is entered	Retry_Conference_Password.wav
Request Digit	Press any key to enter the conference.	A participant is requested to press any key	Request_Digit.wav
Request Billing Code	Please enter the Billing code. Press the pound key when complete.	A participant is asked to enter a billing code	Billing_Code.wav
Requires Chairperson	Please wait for the chairperson to join the conference.	A participant attempts to join a conference prior to the Chairperson joining	Requires_Chairperson.wav

Default IVR Messages

Message Type	Message Text	When Played	File Name
Chairperson Exit	The chairperson has left the conference. Note: The TERMINATE_CONF_AFTER_CHAIR_DROPPED flag must be enabled to play this message.	The chairperson has left the conference.	Chairperson_Exit.wav
First to Join	You are the first person to join the conference.	The first participant joins a conference	First to Join.wav
Mute All On	All conference participants are now muted.	When all participants are muted by the operator or chairperson.	Mute_All_On.wav
Mute All Off	All conference participants are now unmuted.	When all participants are unmuted by the operator or chairperson.	Mute_All_Off.wav
End Time Alert	The conference is about to end.	The conference is about to end	End_Time_Alert.wav
Change Password Menu	Press one to change conference password. Press two to change chairperson password. Press nine to exit the menu.	A participant requests a conference password change	Change_Password_Menu.wav
Change Conference Password	Please enter the new conference password. Press the pound key when complete.	A participant presses two in the Change Password IVR menu.	Change_Conference_Password.wav
Change Chairperson Password	Please enter the new chairperson password. Press the pound key when complete.	A participant presses one in the Change Password IVR menu.	Change_Chairperson_Password.wav
Confirm Password Change	Please re-enter the new password. Press the pound key when complete.	A participant enters a new conference or chairperson password	Confirm_Password_Change.wav

Default IVR Messages

Message Type	Message Text	When Played	File Name
Change Password Failure	The new password is invalid.	A participant enters an invalid password	Change_Password_Failure.wav
Password Changed Successfully	The password has been successfully changed.	A participant has confirmed a password change	Password_Changed_Successfully.wav
Self Mute	You are now muted.	A participant mutes his or her audio	Self_Mute.wav
Self Unmute	You are no longer muted.	A participant unmutes his or her audio	Self_Unmute.wav
Chairperson Help Menu	<p>The available touch-tone keypad actions are as follows:</p> <ul style="list-style-type: none"> • To exit this menu press any key. • To request private assistance, press star, zero. • To request operator's assistance for the conference, press zero, zero. • To mute your line, press star, six. • To unmute your line, press pound, six. 	A chairperson requests the chairperson help menu	Chairperson_Help_Menu.wav
Participant Help Menu	<p>The available touch-tone keypad actions are as follows:</p> <ul style="list-style-type: none"> • To exit this menu press any key. • To request private assistance, press star, zero. • To mute your line, press star, six. • To unmute your line, press pound, six. • To increase your volume, press star, nine. • To decrease your volume, press pound, nine. 	A participant requests the participant help menu	Participant_Help_Menu.wav
Maximum Participants Exceeded	The conference is full. You cannot join at this time.	A participant attempts to join a full conference	Maximum_Participants_Exceeded.wav
Roll Call Record	After the tone, please state your name.		Roll_Call_Record.wav
Roll Call Joined	...has joined the conference.		Roll_Call_Joined.wav
Roll Call Left	...has left the conference.		Roll_Call_Left.wav

Default IVR Messages

Message Type	Message Text	When Played	File Name
Roll Call Review	The conference participants are...		Roll_Call_Review.wav
Request Conference NID	"Please enter your conference NID. Press the pound key when complete.		Request_Conference_NID.wav
Retry Conference NID	Invalid conference NID. Please try again.	A participant enters an invalid conference NID	Retry_Conference_NID.wav
Secured Conference	The conference is now secured.	A chairperson or participant secures a conference	Conference_Secured.wav
Unsecured Conference	The conference is now in an unsecured mode	A chairperson or participant unsecures a conference	Conference_Unsecured.wav
Locked Conference	Conference you are trying to join is locked		Conference_Locked.wav
Conference Recording	The conference is being recorded		Recording_in_Progress.wav
Conference Recording Failed	The conference recording has failed		Recording_Failed.wav
No Video Resources Audio Only.	All video resources are currently in use. Connecting using audio only		No_Video_Resources_Audio_Only.wav

Volume Control of IVR Messages, Roll Call and Music

The volume of IVR music, and IVR messages and Roll Call is controlled by the following system flags:

- **IVR_MUSIC_VOLUME**
- **IVR_MESSAGE_VOLUME**
- **IVR_ROLL_CALL_VOLUME**

To control the volume of IVR music, Roll Call and messages:

- » Modify the values of the **System Flags** listed in the following table by selecting **Setup > System Configuration**.

If these flags do not appear in the System Flags list, they must be manually added. For more information see [System Configuration Flags](#).

Default IVR Messages

Flag	Description
IVR_MUSIC_VOLUME	The volume of the IVR music played when a single participant is connected to the conference varies according to the value of this flag. Possible value range: 0-10 (Default: 2). 0 – disables playing the music 1 – lowest volume 10 – highest volume
IVR_MESSAGE_VOLUME	The volume of IVR messages varies according to the value of this flag. Possible value range: 0-10 (Default: 2). 0 – disables playing the IVR messages 1 – lowest volume 10 – highest volume Note: It is not recommended to disable IVR messages by setting the flag value to 0.
IVR_ROLL_CALL_VOLUME	The volume of the Roll Call varies according to the value of this flag. Possible value range: 0-10 (Default: 4). 0 – disables playing the Roll Call 1 – lowest volume 10 – highest volume Note: It is not recommended to disable the Roll Call by setting the flag value to 0.



The following System Flags do not require an MCU reset:

- **IVR_MESSAGE_VOLUME**
- **IVR_MUSIC_VOLUME**
- **IVR_ROLL_CALL_VOLUME**

For all other flag changes, the MCU must be reset for the modified flag settings (including deletion) to take effect.

IVR Services in TIP-Enabled Conferences

Conference IVR and Entry Queue/Virtual Entry Queues are supported with AVC TIP protocol in conferences that include both TIP-enabled and non-TIP-enabled endpoints.

A Virtual Entry Queue can be configured to either IVR Only Service Provider or External IVR Control mode.

TIP-enabled endpoints can be moved from the Entry Queue to the destination conference if the **TIP Compatibility Modes** settings in the Profile are identical for both conferencing entities (it is recommended to use the same **Profile** for both entities).

TIP IVR users can access the conference directly or enter the Entry Queue/Virtual Entry Queue and provide a password to access the conference.

The IVR services can be enabled with **Prefer TIP**.

IVR media files, WAV for voice messages and JPG for video slides, are all stored on the RealPresence Collaboration Server (RMX).

IVR Services in TIP-Enabled Conferences Guidelines

- IVR default audio files are enabled for all **TIP Compatibility Modes**.
- TIP-enabled endpoints can send DTMF digits to MCU.
- In a mixed TIP environment there is no support for content in cascaded conferences. Additionally, Legacy and Lync endpoints cannot view content.

Entry Queue and Virtual Entry Queue Access

TIP endpoints can dial-in to conferences directly using the IVR, Entry Queue/Virtual Entry Queue and IVR Only Service Provider. For more information see [Defining a New Entry Queue](#)

For more information on Multipoint see the .

Configuring the Conference and Entry Queue IVR Services

The IVR module includes two types of services:

- Conference IVR Service that is used with conferences
- Entry Queue IVR Service that is used with Entry Queues

The configuration process is the same for TIP and non-TIP enabled Conferences and Entry Queues.

For more information about IVR Services see, [Defining a New Conference IVR Service](#).

For more information about Entry Queues see, [Entry Queues](#).

For more information see [Appendix I - Polycom Open Collaboration Network \(POCN\)](#).

Call Detail Record (CDR) Utility

The Call Detail Record (CDR) utility enables you to view summary information about conferences, and retrieve full conference information and archive it to a file. The file can be used to produce reports or can be exported to external billing programs.



The value of the fields that support Unicode values, such as the info fields, will be stored in the CDR file in UTF8. The application that reads the CDR must support Unicode.

The Collaboration Server can store details of up to 2000 (RealPresence Collaboration Server (RMX) 1800/2000) or 4000 (RealPresence Collaboration Server (RMX) 4000) conferences. When this number is exceeded, the system overwrites conferences, starting with the earliest conference. To save the conferences' information, their data must be retrieved and archived. The frequency with which the archiving should be performed depends on the volume of conferences run by the MCU.

The Collaboration Server displays Active Alarms before overwriting the older files, enabling the users to backup the older files before they are deleted. The display of Active Alarms is controlled by the **ENABLE_CYCLIC_FILE_SYSTEM_ALARMS** system flag.

If the **ENABLE_CYCLIC_FILE_SYSTEM_ALARMS** is set to **YES** (default setting when **ULTRA_SECURE_MODE** system flag is set to **YES**) and a Cyclic File reaches a file storage capacity limit, an Active Alarm is created: *Backup of CDR files is required.*

Each conference is a separate record in the MCU memory. Each conference is archived as a separate file. Each conference CDR file contains general information about the conference, such as the conference name, ID, start time and duration, as well as information about events occurring during the conference, such as adding a new participant, disconnecting a participant or extending the length of the conference.

The CDR File Properties

The output of a CDR file depends on the format in which the file was archived and the size of the file.

CDR File Formats

The conference CDR records can be retrieved and archived in the following two formats:

- **Unformatted data** – Unformatted CDR files contain multiple records in raw data format. The first record in each file contains general conference data. The remaining records contain event data, one record for each event. Each record contains field values separated by commas. This data can be transferred to an external program such as Microsoft Excel® for billing purposes. The following is a sample of an unformatted CDR file.

Unformatted CDR File


```

675,TestConf-838343740,110,25.07.2006,21:55:22,01:00:00,25.07.2006,21:55:22,00:01:04,2,c100,0
,0,0,81,25.07.2006,21:55:22,0,0,1,6,0,255,3,255,255,255,0,0,0;0
2001,25.07.2006,21:55:22,0,0,0,300,5,0,255,1,0,,0,0,0,0,0,65535,65535,1,65535,65535,65535
5,65535,32,Service,0,,15,0,0,0;83001,25.07.2006,21:55:22,0,0,0,0;0
2001,25.07.2006,21:55:22,0,1,0,0,0,1;05001,25.07.2006,21:55:22,0,0,1647,,,,,;0
101,25.07.2006,21:55:28,0,POLYCOM,TestParty-1904020434,0,0,0,255,0,Default IP
Service,0,0,0,,0,0,1,3;0
2101,25.07.2006,21:55:28,0,2,,0,255,5,0,1,,4294967295,0,1720,8,TestParty-1904020434;0
101,25.07.2006,21:55:29,0,POLYCOM,TestParty-1471911551,1,0,0,255,0,Default IP
Service,0,0,0,,0,0,1,3;0
2101,25.07.2006,21:55:29,0,2,,0,255,5,0,1,,4294967295,0,1720,8,TestParty-1471911551;0
101,25.07.2006,21:55:30,0,POLYCOM,TestParty-932240319,2,0,0,255,0,Default IP
Service,0,0,0,,0,0,1,3;0
2101,25.07.2006,21:55:30,0,2,,0,255,5,0,1,,4294967295,0,1720,8,TestParty-932240319;0
101,25.07.2006,21:55:30,0,POLYCOM,TestParty-1111630138,3,0,0,255,0,Default IP
Service,0,0,0,,0,0,1,3;0
2101,25.07.2006,21:55:30,0,2,,0,255,5,0,1,,4294967295,0,1720,8,TestParty-1111630138;0
101,25.07.2006,21:55:31,0,POLYCOM,TestParty-1966416118,4,0,0,255,0,Default IP
Service,0,0,0,,0,0,1,3;0
2101,25.07.2006,21:55:31,0,2,,0,255,5,0,1,,4294967295,0,1720,8,TestParty-1966416118;0
101,25.07.2006,21:55:31,0,POLYCOM,TestParty-654921264,5,0,0,255,0,Default IP
Service,0,0,0,,0,0,1,3;0
2101,25.07.2006,21:55:31,0,2,,0,255,5,0,1,,4294967295,0,1720,8,TestParty-654921264;0
101,25.07.2006,21:55:32,0,POLYCOM,TestParty-670304466,6,0,0,255,0,Default IP
Service,0,0,0,,0,0,1,3;0
2101,25.07.2006,21:55:32,0,2,,0,255,5,0,1,,4294967295,0,1720,8,TestParty-670304466;0
101,25.07.2006,21:55:33,0,POLYCOM,TestParty-147079156,7,0,0,255,0,Default IP

```

- **Formatted text** – Formatted CDR files contain multiple sections. The first section in each file contains general conference data. The remaining sections contain event data, one section for each event. Each field value is displayed in a separate line, together with its name. This data can be used to generate a summary report for a conference. The following is an example of a formatted CDR file.

Formatted CDR File

```

File version: 675
Conference Name: TestConf-838343740
Internal Conference ID: 110
Reserved duration: 01:00:00
Actual start time: 25.07.2006,21:55:22
Actual duration: 00:01:04
Status: Cause User Terminate
File Name: c100
GMT Offset: 0
File Retrieved: True

CONFERENCE START
25.07.2006,21:55:22
Fall-out Manually: #false
Auto Terminate: True
Line Rates: 384 kbps
Audio Algorithm: auto
Video Session: Continuous Presence
Video Format: auto
CIF Frame Rate: auto
QCIF Frame Rate: auto

CONFERENCE START CONTINUE 1
25.07.2006,21:55:22
Entry Tone: OFF
Exit Tone: OFF
End Time Alert Tone: OFF

```



The field names and values in the formatted file will appear in the language being used for the Collaboration Server Web Client user interface at the time when the CDR information is retrieved.

Multi-Part CDR Files

By default, the maximum CDR (Call Data Record) file size is limited to 1MB. When a CDR file reaches a size of 1MB the file is saved and further call data recording is stopped and the additional data is lost.

The Collaboration Server can be configured to keep recording the data in multiple CDR file set of 1MB each. Multi-Part CDR ensures that conference call data from long duration or permanent conferences is recorded and not lost.

Enabling the Multi-Part CDR Option

- Multi-Part CDR is enabled by setting the value of **ENABLE_MULTI_PART_CDR** system flag to **YES**. The flag's default value is **NO**.
When flag value is **NO**, CDR storage is limited to a single 1MB file. Further call data recording stops. To modify the default setting, the flag must be manually added to the System Configuration. For more information see, [Modifying System Flags](#).
- If the flag value is set to **YES**, when a CDR file reaches 1MB, an additional CDR file is created and added to the CDR file set for that conference.
- If the flag value is changed from **YES** to **NO** (or visa versa) all existing CDR files are retained.

CDR File Contents

The general conference section or record contains information such as the Routing Name and ID, and the conference starting date and time.

The event sections or records contain an event type heading or event type code, followed by event data. For example, an event type may be that a participant connects to the conference, and the event data will list the date and time the participant connects to the conference, the participant name and ID, and the participant capabilities used to connect to the conference.

To enable compatibility for applications that written for the MGC family, the Collaboration Server CDR file structure is based on the MGC CDR file structure.

The unformatted and formatted text files contain basically the same information. The following differences should be noted between the contents of the unformatted and formatted text files:

- In many cases a formatted text file field contains a textual value, whereas the equivalent unformatted file field contains a numeric value that represents the textual value.
- For reading clarity, in a few instances, a single field in the unformatted file is converted to multiple fields in the formatted text file, and in other cases, multiple fields in the unformatted file are combined into one field in the formatted file.
- To enable compatibility between MGC CDR files and Collaboration Server CDR files, the unformatted file contains fields that were applicable to the MGC MCUs, but are not supported by the Collaboration Server MCUs. These fields are omitted from the formatted text file.



[Appendix C - CDR Fields Unformatted File](#) Appendix contains a full list of the events, fields and values that appear in the unformatted file. This appendix can be referred to for information regarding the contents of fields in the unformatted text file, but does not reflect the exact contents of the formatted text file.

Viewing, Retrieving and Archiving Conference Information

You can view the list of CDR files and retrieve them to your local workstation. These files can then be used to generate billing information, resource usage reports and more by any third party application.

Viewing the Conference Records

You can list all the CDR files that are currently saved on the MCU.

To open the CDR utility:



- » On the Collaboration Server Menu, click **Administration > CDR**.

The **CDR List** pane opens, displaying a list of the conference CDR records stored in the MCU.

Display Name	Start Time	GMT Start Time	Durabo	Reserved Start Tim	Reserved Durabon	Status	File Retrieved
1448 Default System	23 August 2007 20:	23 August 2007 1:	00:01:12	23 August 2007 20:0	168:00:00	Conferenc	No
1448 Default System	29 January 2012 19	29 January 2012	00:00:03	29 January 2012 19:	168:00:00	Conferenc	No
1448 Default System	29 January 2012 19	29 January 2012	00:00:03	29 January 2012 19:	168:00:00	Conferenc	No
EQ	22 March 2012 17:0	22 March 2012 15	00:01:06	22 March 2012 17:0	01:00:00	Conferenc	No
2599 Default System	30 April 2012 14:44	30 April 2012 11:	00:02:21	30 April 2012 14:44:	168:00:00	Conferenc	No
2599 Default System	24 May 2012 17:16	24 May 2012 14:	00:19:57	24 May 2012 17:16:	168:00:00	Conferenc	No
1448 Default System	13 February 2012 1	13 February 2012	00:09:51	13 February 2012 17	168:00:00	Conferenc	No
1448 Default System	23 March 2012 22:0	23 March 2012 20	00:00:15	23 March 2012 22:0	168:00:00	Conferenc	No
1448 Default System	14 February 2012 1	14 February 2012	00:04:31	14 February 2012 17	168:00:00	Conferenc	No
1448 Default System	31 March 2012 16:0	31 March 2012 13	00:00:41	31 March 2012 16:0	168:00:00	Conferenc	No
2599 Default System	08 May 2012 17:46	08 May 2012 14:	00:08:01	08 May 2012 17:46:	168:00:00	Conferenc	No
1448 Default System	09 February 2012 1	09 February 2012	05:24:55	09 February 2012 14	168:00:00	Conferenc	No
1448 Default System	07 March 2012 19:3	07 March 2012 17	00:05:11	07 March 2012 19:3	168:00:00	Conferenc	No
2599 Default System	10 May 2012 14:02	10 May 2012 11:	00:02:50	10 May 2012 14:02:	168:00:00	Conferenc	No
2599 Default System	30 May 2012 19:51	30 May 2012 16:	00:04:48	30 May 2012 19:51:	168:00:00	Conferenc	No
2599 Default System	08 May 2012 19:09	08 May 2012 16:	00:00:41	08 May 2012 19:09:	168:00:00	Conferenc	No
1448 Default System	13 February 2012 1	13 February 2012	00:02:39	13 February 2012 13	168:00:00	Conferenc	No
1448 Default System	22 March 2012 17:1	22 March 2012 15	00:13:05	22 March 2012 17:1	168:00:00	Conferenc	No
2599 Default System	01 May 2012 15:16	01 May 2012 12:	00:00:38	01 May 2012 15:16:	168:00:00	Conferenc	No
2599 Default System	28 May 2012 14:20	28 May 2012 11:	00:00:01	28 May 2012 14:20:	168:00:00	Conferenc	No
2599 Default System	06 June 2012 15:14	06 June 2012 12:	00:00:13	06 June 2012 15:14:	168:00:00	Conferenc	No

The following fields are displayed:

Conference Record Fields


Field	Description
Display Name	The Display Name of the conference and an icon indicating whether or not the CDR record has been retrieved and saved to a formatted text file. The following icons are used:  The CDR record has not been saved.  The CDR record has been saved.
Start Time	The time the conference started.
GMT Start Time	The time the conference started according to Greenwich Mean Time (GMT).

Conference Record Fields

Field	Description
Duration	The actual conference duration.
Reserved Start Time	The reserved start time of the conference. If the conference started immediately this is the same as the Start Time .
Reserved Duration	The time the conference was scheduled to last. Discrepancy between the scheduled and the actual duration may indicate that the conference duration was prolonged or shortened.
Status	<p>The conference status. The following values may be displayed:</p> <ul style="list-style-type: none"> • Ongoing Conference • Terminated by User • Terminated when end time passed • Automatically terminated when conference was empty – The conference ended automatically because no participants joined the conference for a predefined time period, or all the participants disconnected from the conference and the conference was empty for a predefined time period. • Conference never became ongoing due to a problem • Unknown error <p>Note: If the conference was terminated by an MCU reset, the status Ongoing Conference will be displayed.</p>
File Retrieved	<p>Indicates if the conference record was downloaded using any of the file retrieval buttons in the CDR List pane or the API.</p> <ul style="list-style-type: none"> • Yes - when the conference record was retrieved to any file or using the API. • No - when the conference record was not retrieved at all. <p>The File Retrieved field is updated whenever the record is downloaded.</p>

Multi-part CDR File display

When the Multi-Part CDR is configured on the Collaboration Server, an additional column, **Part Index** is added to the CDR list.

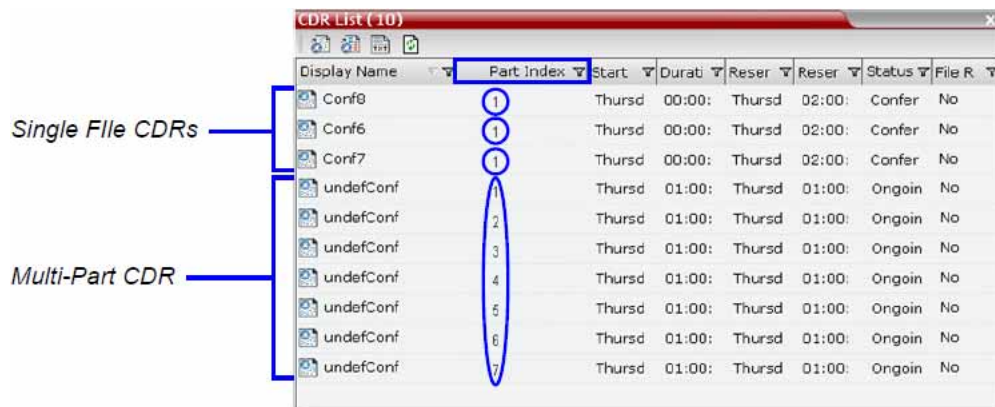

The Part Index column displays the CDR file's sequence in the CDR file set:


- CDRs up to 1MB consist of a single file. Each file has a unique Display Name and a Part Index of 1.

- Files included in a Multi-Part CDR file sets have the same Display Name. The first file of the set is numbered 1 with each additional CDR file numbered in an ascending numeric sequence.

Refreshing the CDR List

If the CDR file list remains constant too long, you can refresh the list to view the latest CDR files.

To refresh the CDR list:




- » Click the **Refresh**  button, or right-click on any record and then select **Refresh**.
Updated conference CDR records are retrieved from the MCU memory.

Retrieving and Archiving Conference CDR Records

You can retrieve the CDR files and store them on your workstation for later use.

To retrieve and archive CDR records:

- To retrieve a single CDR record, right-click the record to retrieve, and select the required format or the record to retrieve. Then, click the appropriate button on the toolbar as detailed in the table below.
To retrieve multiple CDR records simultaneously, use standard Windows multi-selection methods.

Menu Option	Button	Action
Retrieve		Retrieves the conference information as unformatted data into a file whose extension is .cdr .
Retrieve Formatted XML		Retrieves the conference information as formatted text into a file whose extension is .xml . Note: Viewed when logged in as a special support user.
Retrieve Formatted		Retrieves the conference information as formatted text into a file whose extension is .txt .

The **Retrieve** dialog box opens.

The dialog box displays the names of the destination CDR files.

- Select the destination folder for the CDR files and then click **OK**.

If the destination file already exists, you will be asked if you want to overwrite the file or specify a new name for the destination file.

The files are saved to the selected folder.



CDR files are not included in the backup process and should be backed up manually by saving the CDR files to a destination device.

Gateway Calls

The RealPresence Collaboration Server (RMX) can be used as a gateway that provides connectivity across different physical networks and translates multiple protocols for point-to-point rich media communications.

The Collaboration Server supports a range of video and audio algorithms. It allows sites with different frame rates, connection speeds, audio algorithms, video resolutions and network protocols to transparently connect with one another. It also enables multipoint conference creation from an endpoint.

A special conference acting as a Gateway Session is created on the Collaboration Server. It includes one dial-in connection of the endpoint initiating the Gateway Session and one or several dial-out connections to endpoints. It provides connectivity between the various protocols: H.323, SIP, ISDN and PSTN.

To enable the gateway functionality a special Gateway Profile is defined on the Collaboration Server.



Note: Gateway Functionality

Gateway calls are supported with AVC calls only.

Gateway functionality is not supported by Collaboration Server (RMX) 1800 with no DSP cards.

Gateway Functionality

The following features and capabilities are supported in gateway calls:

- Gateway Sessions are in CP Mode only.
If Video Switching is selected in the Profile assigned to the Gateway Session, the system ignores this setting and will run the Gateway Session in CP mode.
 - Gathering phase is not supported in gateway calls, even if it is defined in the Profile assigned to the Gateway Profile.
- Sharing Content using H.239 protocol
- FECC.
Note: Only IP participants can use FECC as it is not supported by the ISDN protocol.
- Recording.
Note: The Recording Link is not considered as a participant and therefore, the gateway session will automatically end when only one of the participants remains connected in addition to the recording link. The video of the Recording Link is not included in the display of the video of the gateway call.
- Forwarding of DTMF codes from the Gateway Session to a conference running on another gateway, MCU or DMA. This enables the participant to enter the required conference and/or chairperson password when connecting to another conference.
DTMF forwarding is enabled when there are only two participants connected to the Gateway Session.
- Forwarding of all DTMF codes sent by participants in the Gateway Session to all PSTN and ISDN participants. This is enabled by adding the **ALWAYS_FORWARD_DTMF_IN_GW_SESSION_TO_ISDN** System Flag to **system.cfg** and setting its value to **YES**.
- Up to 80 gateway calls may be run on a fully configured MCU.
- Gateway Profiles are included in the **Backup** and **Restore Configuration** operations.

- CDR files are generated for Gateway Sessions in the same way as for conferences.
- **Cascading** - To support cascading, the gateway indicates a lower number than the MCU for master-slave relation (directly or through DMA).
A participant, wishing to join the conference as a chairperson, is required to connect using the chairperson password.
- Gateway calls are supported in Microsoft and Avaya environments.
- If the **ENABLE_AUTO_EXTENSION** system flag is set to:
 - **YES** (default), Gateway Calls are not limited in duration while endpoints are connected.
 - **NO**, Gateway Calls are limited to 60 minutes.

For more information see [Modifying System Flags](#).

Call Flows

Call flow changes according to the connection protocols: IP or ISDN. This section describes the call flows between two endpoints connect via one gateway. For call flows describing connections between two endpoints via two gateways, or a connection of an endpoint to a conference running on MCU via a gateway, see [Basic Cascading Using ISDN Cascaded Link](#).

IP Participants

The following calling methods are available:

- [Direct Dialing](#) - the dialing string includes the destination number/conference ID and the call is routed directly to the destination endpoint/conference. This is the recommended method.
- [Gateway IVR Dialing For IP Participants](#) - the call connects to the gateway, where through interaction with the IVR, the destination number is entered using DTMF codes.
- [Direct Dialing Using IP Addresses](#) - dial and receive calls to and from H.323 endpoints using the IP address when that the Gatekeeper is not functioning
- [Calling a SIP Endpoint in a Remote Domain](#) - connection of H.323 and SIP endpoints residing in one domain to SIP endpoints residing in a remote domain

Direct Dialing

The calling endpoint enters the dialing string that includes the access numbers to the Collaboration Server Gateway Profile and the number of the destination endpoint. Up to 10 destination numbers can be entered in one string.

The call connects to the Collaboration Server Gateway Profile and a Gateway Session is created. The dial-in participant is automatically connected to it.

During the connection phase, the number being dialed is displayed on the screen of the calling endpoint.

If the call is not answered or it cannot be completed using one communication protocol, the system will try to connect the endpoint using the next communication protocol according to the selected protocols in the following order: H.323, SIP and ISDN. PSTN numbers are identified separately and are dialed immediately without trying other connections.

If the call is busy, the system will not try to connect the endpoint using another protocol.


If the call is not completed after trying all possible protocols, the system displays the number that was dialed on the calling endpoint's screen and the reason for not completing the call. For details, see [Connection Indications](#).

When the call is connected, a new Gateway Session is created and added to the ongoing Conferences list.

Dialing from H.323 Endpoints

The calling endpoints can dial to one, two or several endpoints (up to ten) in one dialing string.

Dialing String and Call Flow from H.323 Endpoint to One, Two or Three Endpoints

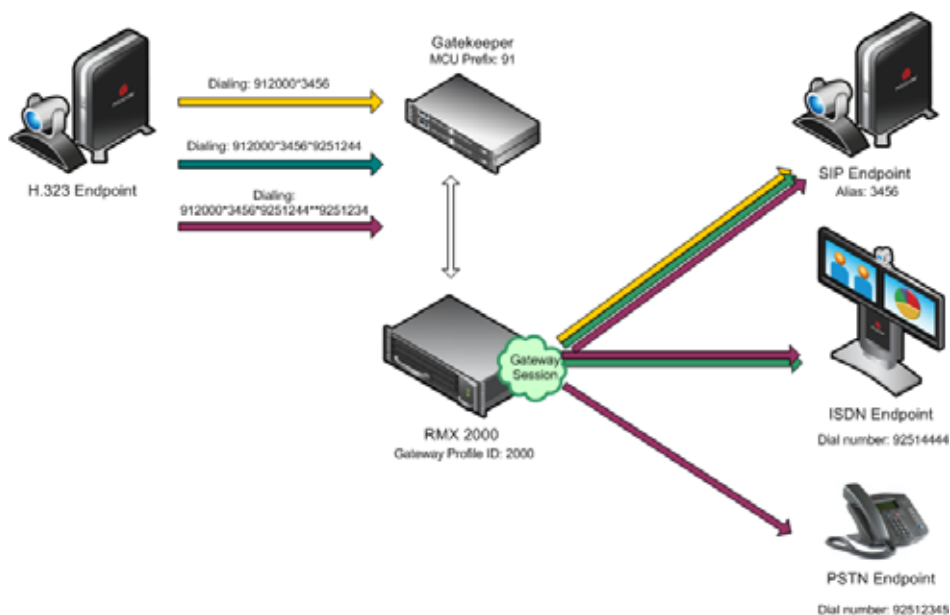

The dialing string includes the following components:

[MCU prefix in GK] - the prefix with which the Collaboration Server is registered to the gatekeeper.

[GW Profile ID] - The ID of the Gateway Profile to be used for routing the call to the destination endpoint or DMA, as defined in the Collaboration Server Gateway Profiles. It includes the parameters of the call to the destination.

* - indicates H.323, SIP or ISDN connection protocol to the destination endpoint (followed by the appropriate destination number). Placing this delimiter before the destination number causes the system to try to connect the endpoint using H.323 first, then SIP and lastly ISDN according to the selected protocols.

** - indicates a PSTN connection to the destination endpoint (followed by the appropriate destination number).

[Destination number] - the destination number as alias, IPv4 address or ISDN/PSTN number.

The dialing string:

```
[MCU prefix in GK][GW Profile ID]*[Destination Number, first
participant]*[Destination Number, second participant]**[Destination
number].....*[Destination Number, tenth participant]
```


For example, If the MCU Prefix in the GK is 91 and the GW Profile ID is 2000, and the destination number is 3456 (SIP) enter: 912000*3456.

To invite two participants: SIP: 3456 and ISDN: 9251444, enter: 912000*3456*9251444.

To invite two participants: SIP: 3456 and a PSTN participant whose number is 9251234, enter: 912000*3456**9251234.

Dialing from SIP Endpoints

Dialing String and Call Flow from SIP Endpoint to One, Two or Three Endpoints

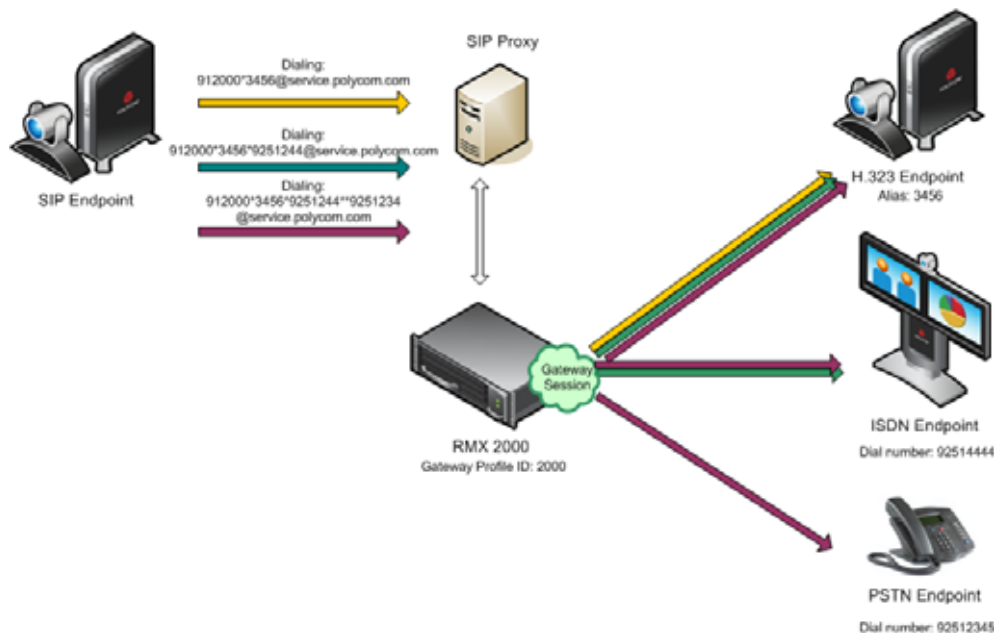

The calling endpoints can dial to one, two or several endpoints (up to ten) in one dialing string. The dialing string includes the following components:

[MCU Prefix in SIP Proxy] - The prefix with which the Collaboration Server is registered to the SIP Proxy. This component is optional and is not required in most cases.

[GW Profile ID] - The ID of the Gateway Profile to be used for routing the call to the destination endpoint or DMA, as defined in the Collaboration Server Gateway Profiles. It includes the parameters of the call to the destination.

* - indicates H.323, SIP or ISDN connection protocol to the destination endpoint (followed by the appropriate destination number). Placing this delimiter before the destination number causes the system to try to connect the endpoint using H.323 first, then SIP and lastly ISDN according to the selected protocols.

** - indicates a PSTN connection to the destination endpoint (followed by the appropriate destination number).

[Destination number] - the destination number as alias, IPv4 address or ISDN/PSTN number.

[@domain name] - the Collaboration Server domain name as registered to the SIP Proxy

The dialing string:

```
[GW Profile ID]*[Destination Number, first participant]*[Destination Number,
second participant]**[destination number].....*[Destination Number, tenth
participant]@domain name
```

Optional:

[GW Profile ID]*[Destination Number, first participant]*[Destination Number, second participant]**[destination number].....*[Destination Number, tenth participant]@IP address of the Collaboration Server signaling host

Optional:

[MCU prefix in SIP Proxy][GW Profile ID]*[Destination Number, first participant]*[Destination Number, second participant]**[destination number].....*[Destination Number, tenth participant]@domain name

For example, if the GW Profile ID is 2000, the domain name is service.polycom.com, and the destination number is 3456, enter: 2000*3456@service.polycom.com.


If using the IP address of the Collaboration Server signaling host (for example, 172.22.188.22) instead of the domain name enter: 2000*3456@172.22.188.22.

To invite two participants IP: 3456 and ISDN: 9251444, enter: 2000*3456*9251444@service.polycom.com.

To invite two participants IP: 3456 and PSTN: 9251234, enter: 912000*3456**9251234@service.polycom.com.

Gateway IVR Dialing For IP Participants

Can be used by IP endpoints when the destination dialing string includes the address of the MCU only. This is the same flow as the dialing method used for ISDN/PSTN calls, however it is less recommended for IP participants. For details, see [Dialing via Gateway IVR for ISDN Participants](#).

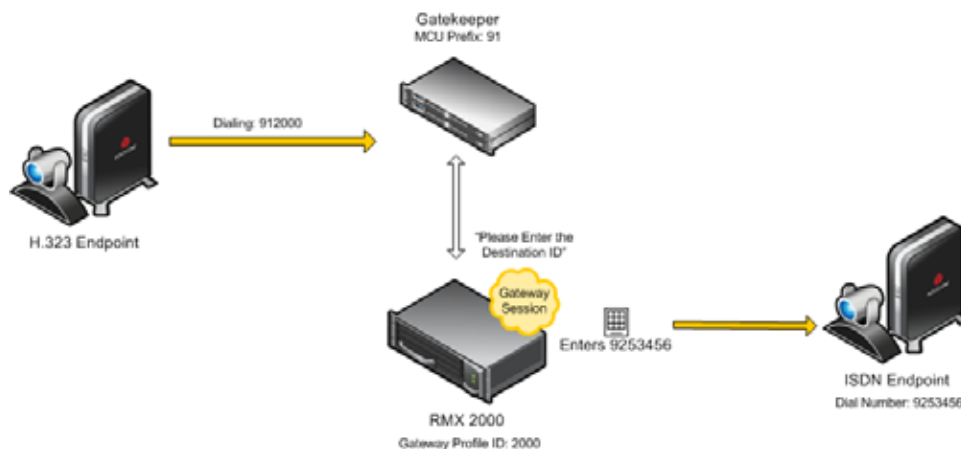Dialing from H.323 Endpoints**Dialing String and Call Flow from IP Endpoint to ISDN Endpoint**

[MCU prefix in GK] - the prefix with which the Collaboration Server is registered to the gatekeeper.

[GW Profile ID] - The ID of the Gateway Profile to be used for the gateway call and the IVR message.

The dialing string format is:

[MCU prefix in GK][GW Profile ID]

For example, if the MCU Prefix in the GK is 91 and the GW Profile ID is 2000 enter: 912000.

Once the participant is connected to the Gateway Profile and hears the IVR message requesting the destination number, using the DTMF input keypad, the participant enters the number of the destination endpoint followed by the # key. PSTN numbers are identified by an * before the number.

For example, enter 3456# for IP endpoint, or 9253456# for ISDN, or *9253456# for PSTN phone.

To enter an IP address as the destination number, replace the periods (.) with asterisks (*) in the format n*n*n*n followed by the # key. For example, if the IP address is 172.22.188.22, enter 172*22*188*22#.

Dialing from SIP Endpoints

[MCU prefix in SIP Proxy] - the prefix with which the Collaboration Server is registered to the gatekeeper. [Optional.]

[GW Profile ID] - The ID of the Gateway Profile to be used for the gateway call and the IVR message.

[@domain name] - the Collaboration Server domain name as registered to the SIP Proxy.

The dialing string:

[GW Profile ID]@domain name

Optional:

[GW Profile ID]@IP address of the Collaboration Server signaling host

Optional:

[MCU prefix in SIP proxy][GW Profile ID]@domain name

Once the participant is connected to the *Gateway Profile* and hears the IVR message requesting the destination number, using the DTMF input keypad, the participant enters the number of the destination endpoint followed by the # key. PSTN numbers are identified by an * before the number.

For example, enter 3456# for IP endpoint, or 9253456# for ISDN, or *9253456# for PSTN phone.

To enter an IP address as the destination number, replace the periods (.) with asterisks (*) in the format n*n*n*n followed by the # key. For example, if the IP address is 172.22.188.22, enter 172*22*188*22#.

Direct Dialing Using IP Addresses

For Collaboration Servers registered to a gatekeeper, the Collaboration Server can be configured to dial and receive calls to and from H.323 endpoints using the IP address in the event that the Gatekeeper is not functioning.

Dial-out Calls

For Dial-out calls, direct IP dialing is enabled or disabled by the **GK_MANDATORY_FOR_CALLS_OUT** system flag.

When the flag is set to **NO** (default), if the Gatekeeper is not functioning, the Collaboration Server dials to the endpoint using the endpoint's IP address configured in the IP Address field of the **New Participant/Participant Properties - General** dialog box.

The screenshot shows the 'New Participant' dialog box with the 'General' tab selected. The 'IP Address' field is highlighted with a blue border and contains the value '0.0.0.0'. Other fields include Name, Endpoint Website, Dialing Direction (Dial out), Type (H.323), Alias Name / Type (H.323 ID), Website IP Address, Audio Only checkbox, and Extension/Identifier String.

If no IP address is defined in the Participant Properties, the call will fail.

The method by which calls are dialed out to the endpoint is dependant on the flag value and the availability of the Gatekeeper as summarized in the following table:

Determination of Method for Dialing an Endpoint by Flag and Gatekeeper Availability

Flag Value	Gatekeeper Available	Results
NO	NO	Dial out to endpoint IP Address bypassing the Gatekeeper.
NO	YES	Dial out to endpoint Alias Name using the Gatekeeper.
YES	NO	No dial out to endpoint.
YES	YES	Dial out to endpoint Alias Name using the Gatekeeper.

Dial-in Calls

For Dial-in calls, direct IP dialing is enabled or disabled by the **GK_MANDATORY_FOR_CALLS_IN** and system flag.

When the flag is set to NO (default), if the Gatekeeper is not functioning, calls from endpoints will be connected directly to the Entry Queue, Conference or Meeting Room that was dialed.

The method by which dial-in calls are accepted or rejected is dependant on the flag value and the availability of the Gatekeeper as summarized in the following table.

GK_MANDATORY_FOR_CALLS_IN - System Flag

Flag Value	Gatekeeper Available	Results
NO	NO	Dial-in call is connected bypassing the Gatekeeper.
NO	YES	Dial-in call is connected using the <i>Gatekeeper.</i>
YES	NO	Dial-in call is rejected.
YES	YES	Dial-in call is connected using the <i>Gatekeeper.</i>

Enabling or Disabling Direct IP Dialing

The direct IP dialing is enabled by default. To disable it, manually add the flags **GK_MANDATORY_FOR_CALLS_OUT** and **GK_MANDATORY_FOR_CALLS_IN** to the **System Configuration - MCMS_PARAMETERS** dialog box and for each flag enter the required value (**YES** or **NO**).

For more information on flag definition, see [Modifying System Flags](#).



For flag changes (including deletion) to take effect, reset the Collaboration Server. For more information see [Resetting the Collaboration Server](#).

Calling a SIP Endpoint in a Remote Domain

The Gateway functionality allows the connection of H.323 and SIP endpoints to SIP endpoints residing in a remote domain, different to that of the MCU's domain.

This functionality can be enabled when:

- The calling endpoint may be H.323 or SIP.
- The destination endpoint must be SIP.
- The dial string from the calling endpoint to the Collaboration Server includes the gateway dial-out number of the SIP endpoint that is located in the remote domain.

By definition, a dial-in string cannot contain two domains and it is therefore necessary that the dial string be of the following format:

```
mcu-meeting-room*dest%40dest-domain@mcu-domain
```

Where:

- The domain of the gateway call is **mcu-domain**
- The remote destination domain is **dest%40dest-domain**.
- The “%40” is replaced with an “@” when the gateway call is dialed to the remote SIP destination.



DTMF tones and Caller-id are not passed end-to-end.

ISDN Participants

Two dialing methods are available to ISDN/PSTN participants:

- [Dialing via Gateway IVR for ISDN Participants](#)
- [Direct Dial-in to Endpoints or DMA VMR using Automatically Generated Destination Numbers.](#)

In addition, PSTN participants can dial the Gateway IVR and can use the MCU or DMA prefix in the gatekeeper together with the conference ID/endpoint alias as the destination string to simplify the input. This is one of the methods for PSTN participants to connect to a virtual Meeting Room on the DMA.

Dialing via Gateway IVR for ISDN Participants

In this flow, the calling endpoint enters the dialing string that includes the access number to the Collaboration Server Gateway Profile.

The endpoint connects to the Collaboration Server and is welcomed by the IVR Welcome slide and message: `Please enter the destination number` followed by the dial tone.

Using the endpoint's DTMF input device such as remote control, the participant enters the number of the destination endpoint followed by the # key. Only one number can be dialed.

While the system dials to the destination endpoints, the participant hears the dialing rings. During the connection phase, the number being dialed is displayed on the screen of the calling endpoint.

If the call is not answered or it cannot be completed using one communication protocol, the system will try to connect the endpoint using the next communication protocol according to the selected protocols in the following order: H.323, SIP and ISDN.


PSTN numbers are identified separately and are dialed immediately without trying other connections.

If the endpoint is busy, the system will not try to connect the endpoint using another protocol.

If the call is not completed after trying all possible protocols, the system displays the number that was dialed on the calling endpoint's screen and the reason for not completing the call. For details, see [Connection Indications](#).

Dialing from ISDN/PSTN Endpoints

Dialing String and Call Flow from ISDN Endpoint to IP Endpoint

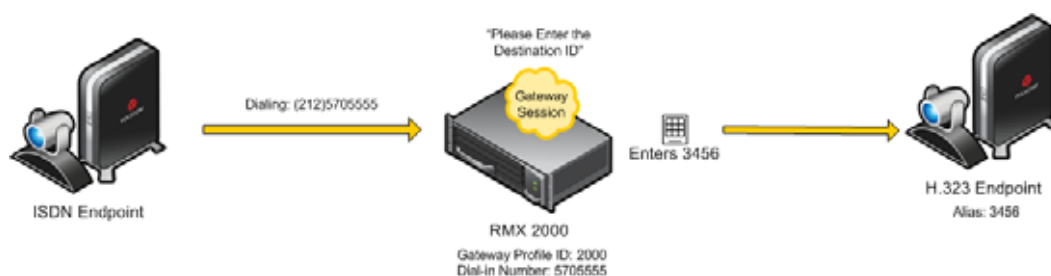

[GW Profile ISDN/PSTN number] - The dial-in number assigned to the Gateway Profile, including the required country and area codes.

For example, if the dial-in number assigned to the Gateway Profile is 5705555, enter this number with the appropriate area code: 2125705555.

Once the participant is connected to the Gateway Profile and hears the IVR message requesting the destination number, using the DTMF input keypad, the participant enters the number of the destination endpoint followed by the # key. For example, enter 3456# for IP endpoint.

To enter an IP address as the destination number, replace the periods (.) with asterisks (*) in the format n*n*n*n followed by the # key. For example, if the IP address is 172.22.188.22, enter 172*22*188*22#.

PSTN Dial-in Using GK Prefix

When connecting to an Collaboration Server that is standalone or part of a DMA solution deployment, PSTN participants are prompted by an IVR message requesting the **Destination Conference ID** followed by the # key to be entered using the DTMF input keypad.

Including the Gatekeeper Prefix in the DTMF input string enables PSTN participants to use the input string when connecting to an Collaboration Server whether the Collaboration Server is a standalone MCU or part of a DMA solution deployment. For a detailed description, see [PSTN Dial-in Using GK Prefix](#).

Direct Dial-in to Endpoints or DMA VMR using Automatically Generated Destination Numbers

ISDN/PSTN participants can call the destination endpoints without interaction with the IVR of the gateway. This dialing method is enabled when the administrator configures the Gateway Profile to automatically generate the dial string of the destination endpoint or Meeting Room on the DMA by truncating the dial in string and replacing the truncated digits by other digits that can be used as the destination number.


For a detailed description of the call flow when dialing the DMA using this method, see [Calling a RealPresence DMA Direct with Automatically Generated Destination Dial Strings](#).

Calling an IP Endpoint via Gateway

If the call destination is an IP endpoint, the endpoints must be registered to the same gatekeeper to which the Collaboration Server is registered. There should be a mapping between the dial-in numbers in the range defined for the ISDN Network Service and also assigned to the Gateway Profile and the IP endpoints, in such a way that the alias of each endpoint is the number that will be appended to the ISDN prefix.

When the call arrives to the gateway, this prefix is truncated and replaced by digits that correspond to the MCU prefix in the gatekeeper and the call is forwarded to the destination endpoint.

Call Flow from ISDN Endpoint to H.323 Endpoint with Automatically Generated Forwarded Dial String

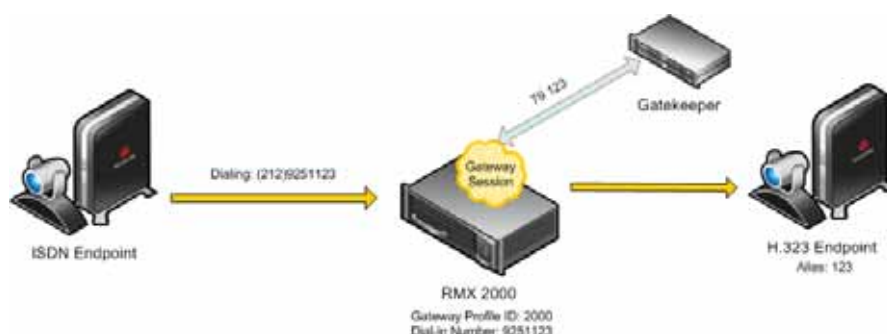

For example:

- The ISDN prefix is 9251.
- The dial in number range defined in the ISDN Network Service can be 100 to 400 (that is, 9251100 to 9251400).
- The dial in numbers assigned to the Gateway Profile can the entire range, or part of the range of other Gateway Profiles are to be used: 100 to 200 (that is 9251100 to 9251200).
- The aliases assigned to the IP endpoints will range between 100 to 200 or 400 (for the full range) as well.
- MCU Prefix in the gatekeeper: 79.
- Number of digits to append (same as the ISDN prefix is this example): 3.
- The destination endpoint alias is 123.
- The ISDN endpoint dials 9251123. The Collaboration Server truncates the four first digits 9251 replacing them with 79 and appends 123 to 79, to create the destination number 79123 which is sent to the gatekeeper for routing.

Interoperability with DMA

The Collaboration Server does not register to the gatekeeper as a Gateway, therefore it is recommended to create and use the DMA Dialing Rules to enable the DMA Dial One Method.

When the caller enters the Dial One digit as the destination number prefix, the DMA replaces this digit with the MCU prefix in the Gatekeeper and the ID of the Gateway Profile. For example, the calling participant can enter 99251444, where 9 is the digit that is used as the MCU prefix registered in gatekeeper and is replaced by the gatekeeper with * and the Gateway Profile ID (for example, *2000) as defined in the Dialing Rule.

For more details on Dialing Rules definition in the DMA, see [Dial Rule Operations](#) in the *Polycom RealPresence DMA System Operations Guide*.

Configuring the Gateway Components on the Collaboration Server

To enable gateway calls in the Collaboration Server, the following components have to be configured:

- Conference IVR Service to be used with the Conference Profile assigned to the Gateway Profile. The IVR Services are used for Gateway IVR connections.
- Conference Profile that includes the IVR Service for the Gateway Session and the settings to automatically terminate the Gateway Session when one participant is still connected or when no participants are connected
- Gateway Profile for call routing.



Defining the IVR Service for Gateway Calls

The system is shipped with a default Conference IVR Services for gateway calls named GW IVR Service that enables you to run gateway calls without defining a new Conference IVR Service. This IVR Service includes the following settings:

- **Welcome slide and message** - disabled
- **Conference and Chairperson Passwords** - disabled
- **General Messages** - all messages including the gateway messages and dial tones are selected
- **Roll Call** - disabled
- **Video Services** - Click&View - enabled
- **Video Services** - Video Welcome Slide - Default_GW_Welcom_Slide
- **Operator Assistance** - disabled

You can define a new Conference IVR Service to be used for gateway calls. This Conference IVR Service will be assigned to the appropriate Gateway Profile.

To define a new Conference IVR Service for gateway calls:

- 1 In the **RMX Management - Rarely Used** pane, click the **IVR Services**  entry. The list pane displays the Conference IVR Services list.
- 2 On the IVR Services toolbar, click **New Conference IVR Service** . The **New Conference IVR Service - Global** dialog box opens.
- 3 In the **Conference IVR Service Name** field, enter a name that will identify this service as a gateway IVR service.
- 4 Define the IVR Service Global parameters (it is recommended to use the system defaults). For more details, see [Conference IVR Service Properties - Global Parameters](#).
- 5 When defining a gateway IVR Service, the following options should remain disabled:
 - Welcome Messages (in the **Conference IVR Service - Welcome** dialog box).
 - Chairperson Messages (in the **Conference IVR Service - Conference Chairperson** dialog box).
 - Password Messages (in the **Conference IVR Service - Conference Password** dialog box)

6 Click the **General** tab.

The **General** dialog box lists messages that are played during the conference. These messages are played when participants or the conference chairperson perform various operations or when a change occurs.

7 To assign the appropriate audio file to the message type, click the appropriate table entry, in the **Message File** column. A drop-down list is enabled.




For gateway redial, ensure that the audio files for the gateway redial messages have been assigned.

8 From the list, select the audio file to be assigned to the event/indication.

9 Repeat steps 7 and 8 to select the audio files for the required messages.

10 For a gateway IVR Service, select the audio file for the following message types:

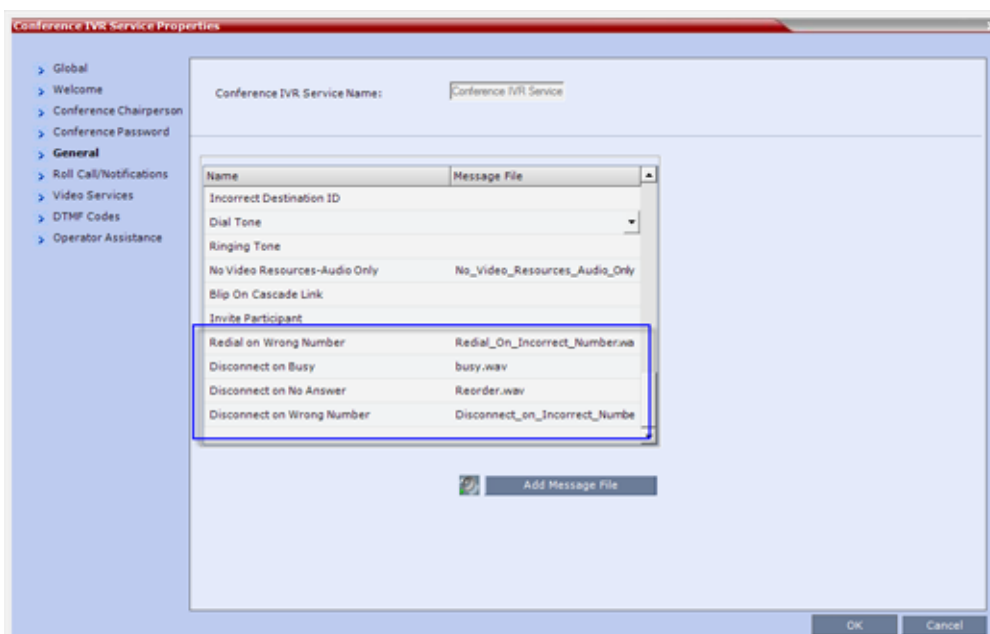

Conference IVR Service Properties - Gateway General Voice Messages


Message Type	Description
Enter Destination ID	Prompts the calling participant for the destination number. Default message prompts the participant for the conference ID (same message as in the Entry Queue IVR Service).
Incorrect Destination ID	If the participant entered an incorrect conference ID (in gateway calls it is the destination number), requests the participant to enter the number again.
Dial Tone	The tone that will be played to indicate a dialing tone, to let the calling participant enter the destination number.

Conference IVR Service Properties - Gateway General Voice Messages

Message Type	Description
Ringing Tone	The tone that will be played to indicate that the system is calling the destination number.
Redial on Wrong Number	The message played when the wrong destination is entered, allowing you to enter a new number. For details, see Redial on Wrong Number .
Disconnect on Wrong Number	The message played when the wrong destination is entered, followed by a disconnection tone. For details, see Disconnect on Wrong Number .
Disconnect on Busy	The tone (or message) played when the dialed destination number is busy. For details, see Disconnect on Busy .
Disconnect on No Answer	The tone (or message) played when the dialed destination number does not answer. For details, see Disconnect on No Answer .

- 11 When defining a gateway IVR Service, it is recommended that the **Roll Call** option remains disabled.
- 12 Click the **Video Services** tab.
The **New Conference IVR Service - Video Services** dialog box opens.
- 13 Define the following parameters:

New Conference IVR Service Properties - Video Services Parameters

Video Services	Description
Click&View	Select this option to enable endpoints to run the Click&View application that enables participants to select a video layout from their endpoint.
Video Welcome Slide	<p>Select the video slide file to be displayed when participants connect to the conference. To view any slide, click the Preview Slide () button.</p> <p>If the video slide file was not uploaded to the MCU prior to the IVR Service definition, click the Add Slide button. The Install File dialog box opens. The uploading process is similar to the uploading of audio files. For more information, see step 7.</p> <p>Notes:</p> <ul style="list-style-type: none"> • When using one of the default Polycom slides, the slide will be displayed in the resolution defined in the profile, i.e. CIF, SD, HD 720p or HD 1080p. • When defining a gateway IVR Service, the recommended default slide is: Default_GW_Welcome_Slide.

- 14 Click the **DTMF Codes** tab.
The **New Conference IVR Service - DTMF Codes** dialog box opens.
- 15 If required, modify the DTMF codes or permissions. For more details see [New Conference IVR Service Properties - DTMF Codes](#).
- 16 Click the **Operator Assistance** tab.
- 17 If Operator Assistance will not be available to participants, clear the **Enable Operator Assistance** option, which is automatically selected to disable it.

- 18 Click **OK** to complete the IVR Service definition.

The new Conference IVR Service is added to the IVR Services list.

Defining the Conference Profile for Gateway Calls

The Conference Profile that will be later assigned to the Gateway Profile determine the parameters of the gateway call, such as the line rate and video resolution and if to automatically terminate the gateway session when one participant or no participants are connected to the Gateway Session.



Gathering phase is not supported in gateway calls, even if it is defined in the Profile assigned to the Gateway Profile.

To define a Conference Profile for Gateway Sessions:

- 1 In the **RMX Management - Rarely Used** pane, click **Conference Profiles**.
- 2 In the **Conference Profiles** pane, click **New Profile**.
The **New Profile – General** dialog box opens.
- 3 Define the Profile name and select the line rate for the gateway session.
- 4 Click the **Advanced** tab.

The **New Profile – Advanced** dialog box opens.

- 5 Define the required settings for **Encryption** and **LPR**.
- 6 Set the **Auto Terminate - At the End** option to **When Last Participant Remains** ensuring that the gateway call will end when only one participant is connected. For more details, see [New AVC CP Profile - Advanced Parameters](#).
- 7 Define the remaining Profile parameters as described in [Defining AVC CP Conferencing Profiles](#).

Defining the Gateway Profile

A Gateway Profile is a conferencing entity, based on the Conference Profile assigned to it, that enables endpoints to dial-in and initiate Gateway Sessions. The system is shipped with a default Gateway Profile, named **Default_GW_Session**.



When an endpoint calls the Gateway Profile, a new Gateway Session is automatically created based on the Profile parameters, and the endpoint joins the gateway call which can also be a multipoint conference if more than two participants are connected to the conference.

The Gateway Profile defines the parameters of the gateway call that are taken from the Conference Profile assigned to it, such as line rate, resolution, the IVR Service to be used and the dial-in numbers.



Up to 1000 Gateway Profiles, Entry Queues, IP Factories and Meeting Rooms can be defined in the Collaboration Server (they are all part of one repository whose size is 1000 entries).

To define a new Gateway Profile:

- 1 In the **RMX Management - Rarely Used** pane, click **Gateway Profiles** .
- 2 In the **Gateway Profiles** list pane, click the **New Gateway Profile**  button.

The **New Gateway Profile** dialog box opens.

New Gateway Profile

Display Name:

Routing Name:

Conference Profile:

ID:

Gateway Dial out Protocols: H.323 SIP H.320 PSTN

Enable ISDN/PSTN Access

ISDN/PSTN Network Service:

First Phone Number:

Last Phone Number:

Use Dial-In Numbers as Prefix Range

Forward Prefix:

Number of Digits to Forward:

OK Cancel



Do not enable PSTN/ISDN access without defining the dial-in numbers range and/or the use of “Dial-In Numbers as Prefix Range”. If you enable the PSTN/ISDN access without the definition of the dialing parameters, people can dial in to the gateway from outside the organization and then make long distance calls at the 'host' expense.

The new Gateway Profile is added to the list.

System Configuration

For details about adding and modifying system flags, see .

Displaying the Connection Information

You can hide the connection indications displayed on the participant’s screen during the connection phase by changing the system configuration and manually adding and setting the system flag **DISABLE_GW_OVERLAY_INDICATION** to **YES** in the **MCMS_PARAMETERS_USER** tab.

By default, this flag is set to **NO** and all connection indications are displayed.

Enabling PSTN dial-in using GK prefix

The feature is enabled when setting the flag **USE_GK_PREFIX_FOR_PSTN_CALLS** to **Yes**.

For more details, see [PSTN Dial-in Using GK Prefix](#).

Gateway Calls Redialing

The Gateway can redial to numbers that are wrong, or busy or there is no answer.

Gateway Redial Guidelines

- Redial with IVR is supported:
 - In CP environments only.
 - For H.323, SIP and ISDN calls.
 - When using the Collaboration Server’s Inviting Participants using DTMF functionality.
- Redial with IVR is not supported:
 - When using PCM’s Invite Participant functionality.
 - Dialing multiple destination numbers.

Redial on Wrong Number

An IVR message is played requesting the user to enter a new number, followed by up to five redial attempts. If all redial attempts fail, the user is alerted by an IVR message that the dialed number is unreachable, followed by reorder tone and disconnection.

Wrong Destination Number

- The number of re-dial attempts is controlled by the **WRONG_NUMBER_DIAL_RETRIES** system flag.
The default number of redial attempts is **3**. To modify the number of redial attempts, manually add the flag to *system.cfg* and set its value to the number of redial attempts required.
The flag value range is **0-5**. A flag value of **0** means that no redials are attempted.
For more information about system flags see .
- Redial attempts follow the same order as defined in the Gateway Profile: H.323, followed by SIP, followed by ISDN. For more information about Gateway Profiles and Gateway Dial out Protocols see [Defining the Gateway Profile](#).
- Redial on Wrong Number is activated if a Gateway Call fails, for all defined protocols, for any reason or combination of reasons listed in the following table.

Call Failure Reasons - H.323, SIP, ISDN

H.323	SIP	ISDN
Unreachable Destination	484 - Address Incomplete	3 - No Route to Destination
Bad Format Address	404 - Not Found	18 - No User Responding
Adaptive Busy	414 - Request-URI Too Long	28 - Invalid Number Format
Admission Rejected (ARJ) Reason: Request Denied Item 1: Cannot find location.	416 - Unsupported URI Scheme	41 - Temporary Failure
Admission Rejected (ARJ) Reason: Called Party Not Registered	420 - Bad Extension	
	421 - Extension Required	

The user receives the Redial on Wrong Number IVR message: `Incorrect destination. Please enter the destination number.`

If all the redial attempts fail the user receives the Disconnect on Wrong Number IVR message: `Destination could not be reached; call is disconnected.`

- Gateway Re-dial is not activated if the reason for call failure is **Busy** or **No Answer**, for any of the defined protocols.

Wrong Destination Number Time-out

- A time-out counter is started when the Redial on Wrong Number message is played. If the user does not enter another destination number within the time-out period it is considered a failed dial out attempt.
- The Redial on Wrong Number message and time-out are repeated according to the value of the **WRONG_NUMBER_DIAL_RETRIES** system flag. If there is no input from the user, after completing the retries, the user receives the Disconnect on Wrong Number IVR message: `Incorrect destination number` followed by the Reorder Tone.

Disconnect on Busy

Redialing of calls to busy destination can be selected. The number of redial attempts is dependent on the **NUMBER_OF_REDIAL** system flag, the default value is **3**.

If all redialing retry attempts fail, the user receives the Disconnect on Busy message in the form of Busy Tone. The call is then disconnected.

Disconnect on No Answer


If all retry attempts fail, the user receives the Disconnect on No Answer message in the form of Reorder Tone. The call is then disconnected.

Disconnect on Wrong Number

If a call fails due to no answer at the destination, the user receives the Disconnect on Wrong Number IVR message: **Incorrect Destination Number** followed by **Reorder Tone**. The call is then disconnected.

Monitoring Ongoing Gateway Sessions

Ongoing Gateway Sessions that are created when calling the Gateway Profile, are listed in the ongoing Conferences list pane.

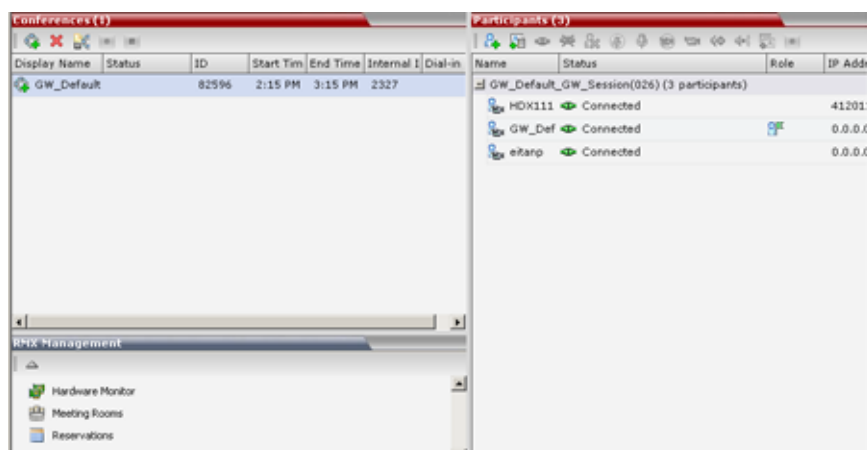

Gateway Sessions are monitored in the same way as the conferences. For more details on monitoring conferences, see [Conference Level Monitoring](#).



Additional ISDN and PSTN Participants cannot dial in directly to the Gateway Session once it was started.

Connection Indications

During the connection process to the other endpoints, the system displays on the calling participant's screen the called number and the connection status.

A Maximum of 32 characters can be displayed for connection indications. If the displayed information is longer than 32 characters the text is truncated.

If the system dials out to only one destination endpoint, the dialed number is not shown, only the connection status.

If the destination endpoint is ISDN, the system displays the connection progress in percentages, where the percentages represent various stages in the connection process as follows:

- Up to 60% the connection of the ISDN channels (up to 30 channels can be connected when E1 is used for the connection).
- 60% - 80% BONDING stage.
- 80% - 90% Capability exchange stage.
- 90% - 99% Media connection stage.

Once the call is completed, the indications are cleared.

If the call is not completed after trying all possible protocols, the system displays the number that was dialed on the calling endpoint's screen and one of the following causes:

- **Busy** - The far endpoint is in another call. In such a case, the system does not try to connect using another communication protocol.
- **Rejected** - The far endpoint has rejected the call. In such a case, the system will try to connect using another communication protocol.
- **Unreached** - The number could not be resolved by the gatekeeper or the SIP proxy or could not be found on the network. In such a case, the system will try to connect using another communication protocol.
- **Failed** - Any reason causing the system not to complete the connection process. In such a case, the system will try to connect using another communication protocol.

You can hide the connection indications by changing the system configuration. For more details, see [System Configuration](#).

Gateway Session Parameters

The Collaboration Server creates a new conference that acts as a Gateway Session.

Gateway Session Name

The Gateway Session has a unique ID whose display name is composed of the following components:

- The prefix **GW_**.
- The Gateway Profile display name. For example, `Default_GW_Session`
- `(number)` where the number is a gateway conference counter.

For example: if the Gateway Profile display name is `Default_GW_Session`, the conference name will be `GW_Default_GW_Session(001)`.

Conference ID

The ID of the new conference is assigned randomly by the MCU.

The Gateway Session automatically ends when only one participant is left in the session.

Connected Participant Parameters

Once this conference is created, the calling participant is connected to it and one or several dial-out participant(s) are automatically created and added to this gateway session. The dial-in participant is also identified as the chairperson of the conference.

The connecting (dial-in) participant name is taken from the endpoint. If the endpoint does not send its name, it is derived from the Gateway Profile display name and it includes the Gateway Session name, underscore and a random number is displayed (between brackets), for example, `GW_Default_GW_Session(001)_(000)`.

The name of the destination (dial-out) participant is taken from the endpoint. If the endpoint does not send its name, it is taken from the dialed number. If the dialed number was an IP address, the system displays underscores instead of dots, for example, `172_22_172_89`.

Participants connected to a gateway session are monitored in the same way as participants connected to ongoing conferences. For details, see [Participant Level Monitoring](#).


Direct Dialing from ISDN/PSTN Endpoint to IP Endpoint via a Meeting Room

Dialing from an ISDN endpoint to a specific IP endpoint using the Gateway Profile is a two-step process (dialing to the Gateway and then entering the number of the destination IP endpoint).


When dialing to specific IP endpoints you can simplify the dialing process by creating the appropriate Meeting Room.

To set up the Meeting Room for direct dialing in:


- 1 Set the conference parameters in the Conference Profile and make sure that the conference will automatically end when there is only one participant connected to the meeting.
- 2 Define the Meeting Room with the following:
 - Conference Profile in which the **Auto Terminate - At the end - When Last Participant Remains** option is selected. For more details on Conference Profile definition, see [Defining the IVR Service for Gateway Calls](#).

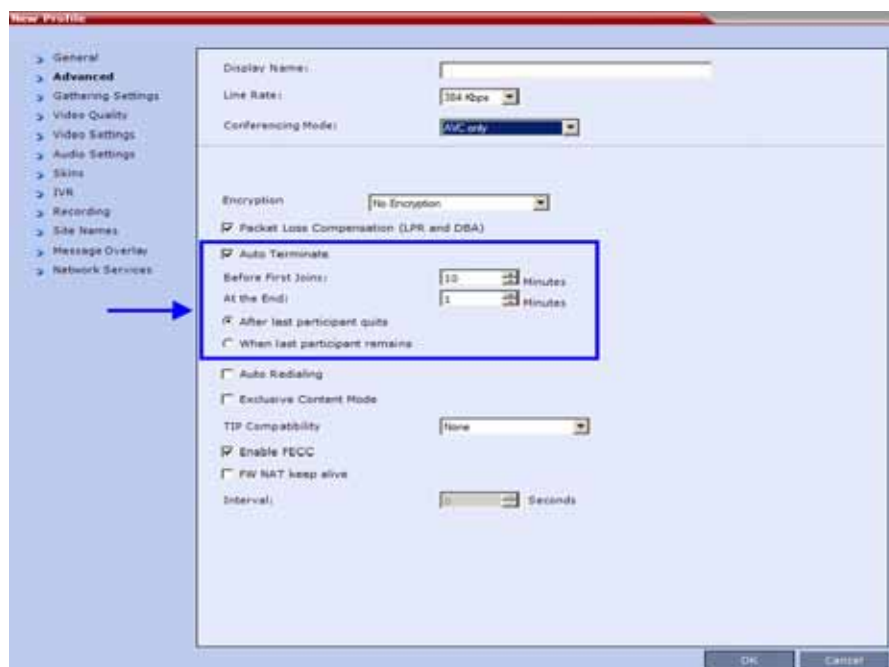

- ISDN/PSTN access is enabled and a dial-in number is assigned to the Meeting Room.

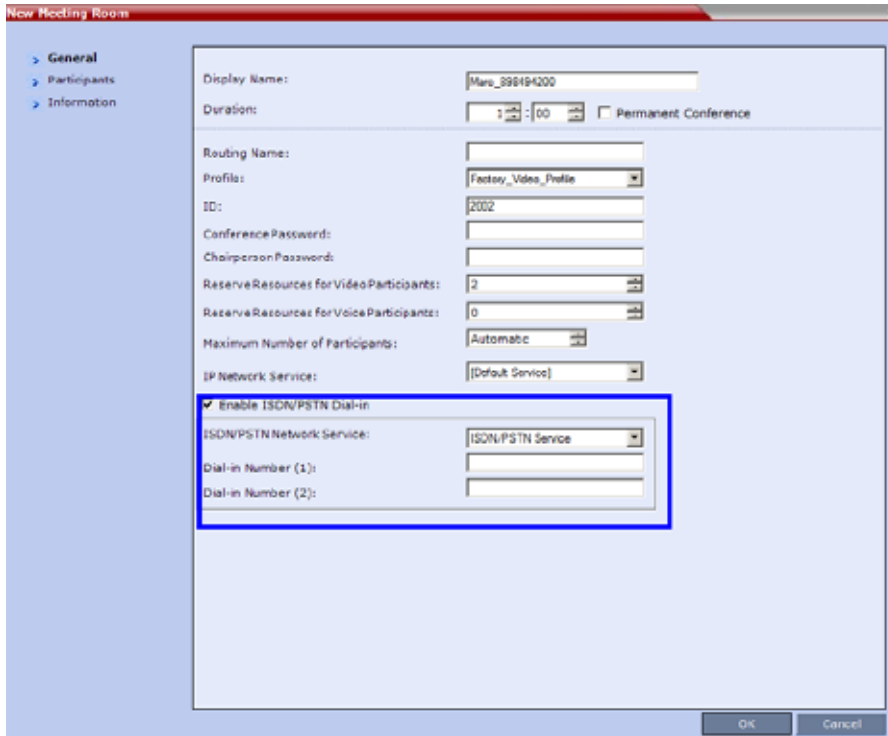

- The dial-out IP endpoint is added to the Meeting Room's Participants list.

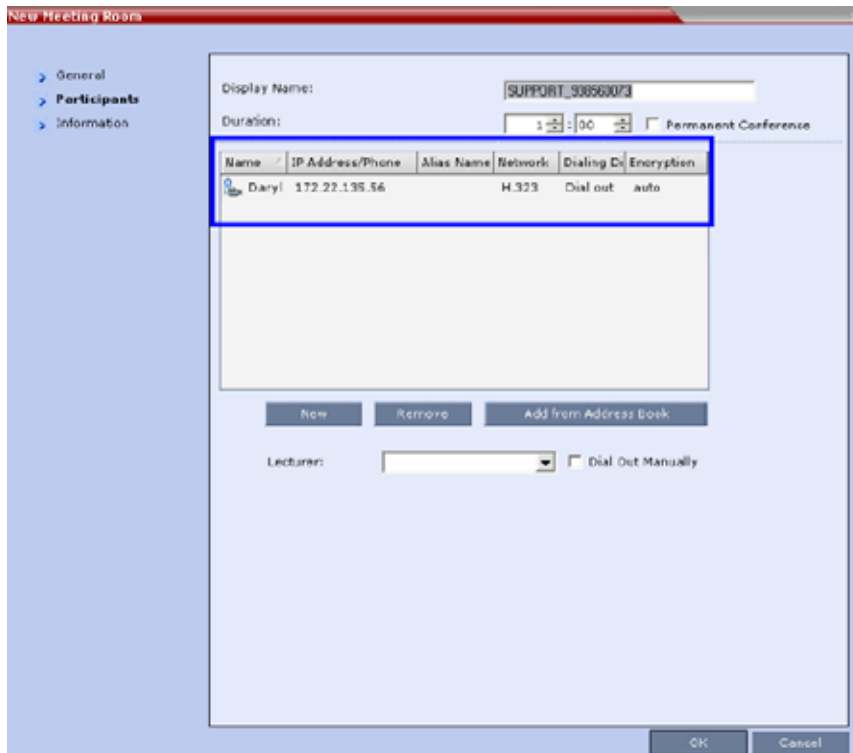

Dialing to Polycom® RealPresence DMA System

Two dialing methods are available to ISDN/PSTN participants calling the DMA:


- Direct with automatically generated destination dial strings from dial-in strings.
- Via Gateway IVR.

In addition, PSTN participants can dial the Gateway IVR and can use the MCU or DMA prefix in the gatekeeper together with the conference ID/endpoint alias as the destination string to simplify the input. This is one of the methods for PSTN participants to connect to a virtual Meeting Room on the DMA. For more details, see [PSTN Dial-in Using GK Prefix](#).

Calling a RealPresence DMA Direct with Automatically Generated Destination Dial Strings

In this configuration, the gateway session initiator enters one of the dial-in numbers assigned to the gateway profile. This number is truncated by the Collaboration Server gateway and the truncated digits are replaced by a prefix that corresponds either to the DMA prefix in the Gatekeeper.

Call Flow from ISDN Endpoint to Polycom DMA with Automatically Generated Forwarded Dial String

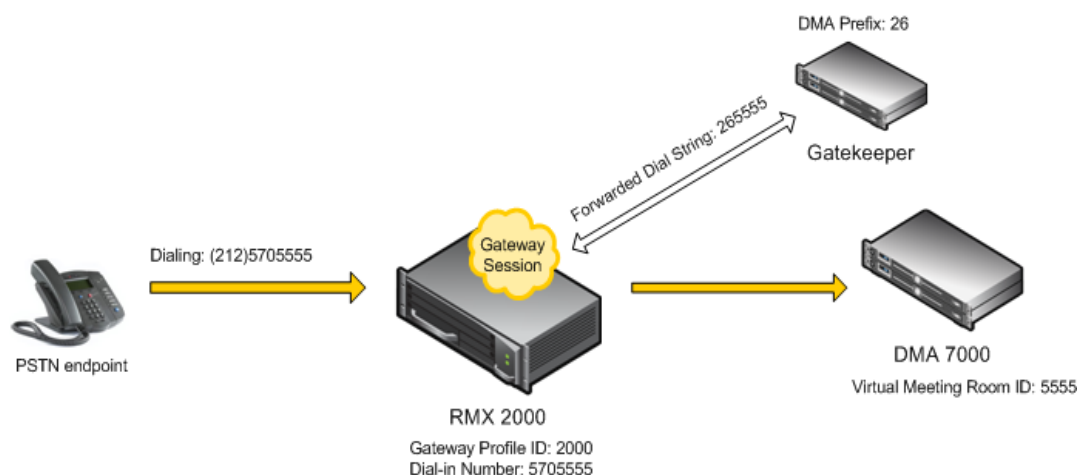

Example:

The figure above shows the call flow assuming the following parameters:

First Dial-in Number	5705550
Last Dial-in Number	5705560
Use Dial-in Numbers as Destination ID	Selected
DMA Meeting Room ID	5555
Destination Prefix (DMA prefix in Gatekeeper)	26
Number of Rightmost Digits to Append	4

PSTN participant dials	(212)5705555
Number that will be used by Collaboration Server to forward the call to the DMA	265555

Calling the RealPresence DMA via Gateway IVR

Audio PSTN/ISDN calls can be routed to Polycom DMA 7000 via the Collaboration Server. ISDN Video endpoints connect using their audio channels (but consume video resources). The RealPresence DMA system enables load balancing and the distribution of multipoint calls on up to 10 Polycom Collaboration Server media servers.

As part of this solution, the Collaboration Server acts as a gateway for the DMA that supports H.323 calls. The PSTN or ISDN endpoint dials the virtual Meeting Room on the DMA via the Gateway Profile on the Collaboration Server.

Both the Collaboration Server and the RealPresence DMA must be registered with the same gatekeeper.

The dialing string of the destination conference on the RealPresence DMA must be communicated to the dialing endpoint and used during the connection to the Gateway Profile on the Collaboration Server. There are two options available for doing this:


- Manual Dial String Entry
- Automatic Dial String Generation

Manual Dial String Entry

Dialing String and Call Flow from ISDN Endpoint to Polycom DMA

The connection is done in two steps:

- A PSTN/ISDN participant dials the dial-in number assigned to the Gateway Profile (5705555), including the country and area code (if needed) and connects to the Gateway IVR.
- When prompted for the target conference ID, the caller enters the string of the target meeting room on the DMA followed by the # key.

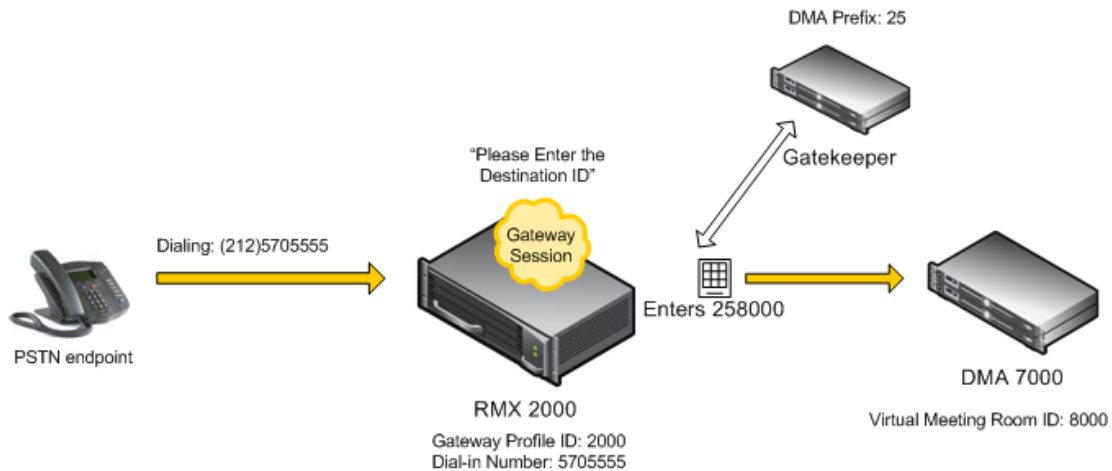


This string is composed of the RealPresence DMA prefix as registered in the gatekeeper and the ID of the virtual meeting room running on the RealPresence DMA. For example, if the DMA prefix is 25 and the target meeting room ID is 8000 the participant enters 258000 followed by the # key.

The Collaboration Server creates a Gateway Session with two participants, the calling participant and the link to the conference running on the RealPresence DMA.

Automatic Dial String Generation

The administrator can configure the Gateway Profile to automatically generate and forward the dial string from the Collaboration Server Gateway Session to the RealPresence DMA in order to connect to the required RealPresence DMA Meeting Room. When this configuration option is selected, the participant does not need to interact with the IVR Service.

Call Flow from ISDN Endpoint to RealPresence DMA with Automatically Generated Forwarded Dial String

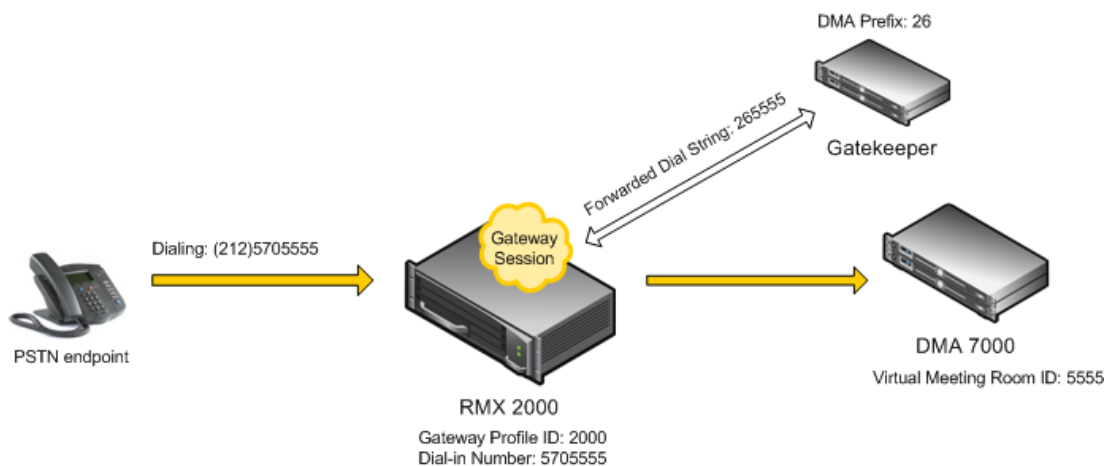

Example:

The figure above shows the call flow assuming the following parameters:

First Dial-in Number	5705550
Last Dial-in Number	5705560
Use Dial-in Numbers as Destination ID	Selected
DMA Meeting Room ID	5555
Destination Prefix (DMA Gatekeeper)	26
Number of Rightmost Digits to Append	4
PSTN participant dials	(212)5705555

PSTN Dial-in Using GK Prefix

When connecting to an Collaboration Server that is standalone or part of a DMA solution deployment, PSTN participants are prompted by an IVR message requesting the Destination Conference ID followed by the # key to be entered using the DTMF input keypad.

Including the Gatekeeper Prefix in the DTMF input string enables PSTN participants to use the input string when connecting to an Collaboration Server whether the Collaboration Server is a standalone MCU or part of a DMA solution deployment.

Enabling PSTN dial-in using GK prefix

The feature is enabled by the **USE_GK_PREFIX_FOR_PSTN_CALLS** system flag in system.cfg. For more information see [Modifying System Flags](#).

The following table summarizes the PSTN participant's DTMF input depending on the flag value.

PSTN Participant input via DTMF

Configuration	FLAG: USE_GK_PREFIX_FOR_PSTN_CALLS=	
	NO	YES
Standalone Collaboration Server Conference ID= 1234	PSTN participant enters: 1234# .	PSTN participant enters: 761234#
Collaboration Server with DMA Virtual Meeting Room ID in DMA = 1234 DMA gatekeeper prefix = 76	PSTN participant enters: 761234#	(The Gatekeeper Prefix "76" is automatically removed from the DTMF input string for a standalone Collaboration Server.)

Deploying a Polycom RMX™ Serial Gateway S4GW

UC APL Public Key Infrastructure (PKI) requires that the Serial Gateway S4GW be connected directly to the Collaboration Server and not to the H.323 network. The Serial Gateway effectively becomes an additional module of the Collaboration Server, with all web and H.323 traffic passing through the Collaboration Server.

For more information see [Deploying a Polycom RMX™ Serial Gateway S4GW](#) in the *RealPresence Collaboration Server (RMX)2000/4000 Deployment Guide for Maximum Security Environments*.

RMX Manager Application

The RMX Manager is the Windows version of the Collaboration Server Web Client. It can be used instead of the Collaboration Server Web Client for routine Collaboration Server management and for Collaboration Server management via a modem connection. For more information on using the RMX Manager via a modem connection, see [Appendix G - Configuring Direct Connections to the Collaboration Server](#).



The RMX Manager is essential, and the only interface for accessing the Collaboration Server's management console in Maximum Security Environments. The RMX Manager specific to the Maximum Security version being deployed can be downloaded from the Support section of the Polycom website.

Modem connection is not supported when the Collaboration Server is in Ultra Secure Mode. For more information see [Ultra Secure Mode](#).

Using the RMX Manager application, a single user can control a single or multiple MCU units as well as conferences from multiple MCUs. The RealPresence Collaboration Server systems can be managed and controlled by the RMX Manager application.

The RMX Manager can list and monitor:

- Up to 20 Collaboration Server systems in the MCUs pane
- Up to 800 conferences in the Conferences pane
- Up to 1600 participants in the Participants pane

The RMX Manager is faster than the RMX Web Client and can give added efficiency to Collaboration Server management tasks, especially when deployed on workstations affected by:

- Lack of performance due to bandwidth constraints within the LAN/WAN environment.
- Slow operation and disconnections that can be caused by the anti-phishing component of various antivirus applications.



Users with **Auditor** authorization level cannot connect to the RealPresence Collaboration Server via the RMX Manager application and must use the RMX Web Client.

The RMX Manager application can be installed in your local workstation or accessed directly on the RealPresence Collaboration Server system without installing it in your workstation.

Installing the RMX Manager Application

The installation of the RMX Manager Application includes two main stages:

- Accessing or downloading the RMX Manager Installer
- Installing the RMX Manager application



For information about Installing the RMX Manager for Secure Communication Mode see [Download and Install the RMX Manager Onto a Workstation](#) in the *RealPresence Collaboration Server (RMX) 1800/2000/4000 Deployment Guide for Maximum Security Environments*.



The RMX manager can be installed for use by multiple users on a shared workstation. For more information, see [Installing the RMX Manager for Multi-User Capability](#).

Guidelines

- The Collaboration Server Installation and First Entry Configuration must be completed before installing the RMX Manager application.
For more details, see the *Polycom RealPresence Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*.
- When upgrading the RMX Manager application, it is recommended to backup the MCU list using the **Export RMX Manager Configuration** option.
For more details, see [Import/Export RMX Manager Configuration](#).
- When upgrading the RMX Manager from a major version (for example, version 8.7.0) to a maintenance version of that version (for example, 8.7.0.x), the installation must be performed from the same MCU (IP address) from which the major version was installed.
- If you are upgrading from another MCU (different IP address), you must first uninstall the RMX Manager application from the Windows Control Panel.

Accessing or Downloading the RMX Manager Installer

The RMX Manager installer can be downloaded or accessed and installed on your workstations using one of the following methods:

- Accessing the RMX Manager Application Installer Directly from the MCU
- Downloading the RMX Manager application from the Polycom web site at <http://www.polycom.com/support> and installing it. The Installation procedure is the same as if you have downloaded the application from the Login screen.
- Accessing the RMX Manager Installer from the Login screen

Accessing the RMX Manager Application Installer Directly from the MCU

- 1 Start Internet Explorer and in your browser enter:

<http://<Collaboration Server IP Address>/RMXManager.html>.


For example, if the Collaboration Server IP address is 10.226.10.46, enter in the browser the following address: <http://10.226.10.46/RMXManager.html>.

The **RMX Manager** installation page is displayed.

2 Click **Install**.



The installer verifies the application's requirements on the workstation.

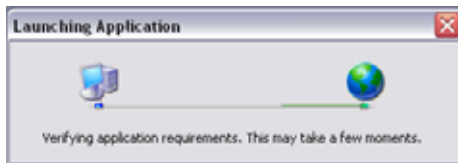

3 Continue the Installation as described in [Installing the RMX Manager on Your Workstation](#).

Downloading the Installation files from Polycom Support Site

- 1 Access the Polycom web site at <http://www.polycom.com/support>.
- 2 Click on **Documents and Downloads** and then select **UC Infrastructure** from the drop-down list
- 3 Select the appropriate RMX/Collaboration Server product.
- 4 Click the **RMX 1800/2000/4000 version n.n.n.n Local Web Client (RMX Manager)** link.

The file download dialog box opens.

- 5 Follow the standard download procedure to either run the installer directly by selecting **Open** or **Save** in the File Download dialog.
 - If you select **Open**, the download is performed and the archive containing the RMX Manager and its components are saved in Internet Explorer's Temporary Internet Files folder.
 - a Navigate to the **RMX_x-x-x-nnnn_LocalWebClient-RMXManager > RmxManagerInstallerMsi** folder.
 - b Double-click **setup.exe** to install the RMX Manager.
 - If you select **Save**, you need to specify where the archive containing the RMX Manager and its components are saved locally.
 - a When the download completes, select **Open** or **Open Folder**.
 - b Navigate to the **RMX_x-x-x-x_LocalWebClient-RMXManager** folder.
 - c Double-click **deploy.application** to install the RMX Manager.

6 Continue the Installation as described in [Installing the RMX Manager on Your Workstation](#).

Accessing the RMX Manager Installer from the Login screen

- 1 Start Internet Explorer and connect to one of the Collaboration Server units in your site. It is recommended to connect to the Collaboration Server installed with the latest software version.


The **Login** screen is displayed.

There is a link to the **RMX Manager Installer** at the top of the right edge of the screen.



- 2 Click the **Install RMX Manager** link.

The installer verifies the application's requirements on the workstation.

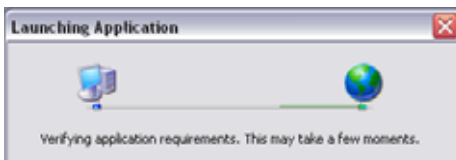

The **Install** dialog box is displayed.


Installing the RMX Manager on Your Workstation

Once the installer has verified that the application's requirements on the workstation are met, the The **Install** dialog box is displayed.


- 1 Click the **Install** button.



The installation proceeds.

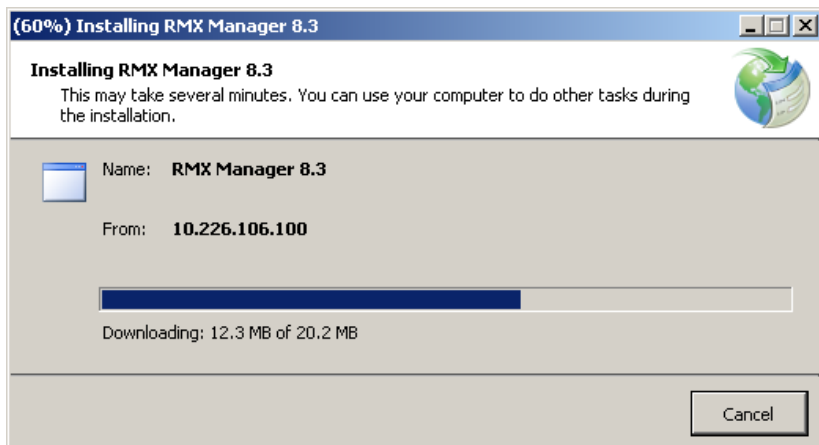

The installation completes, the application loads and the **RMX Manager - MCUs** screen is displayed.

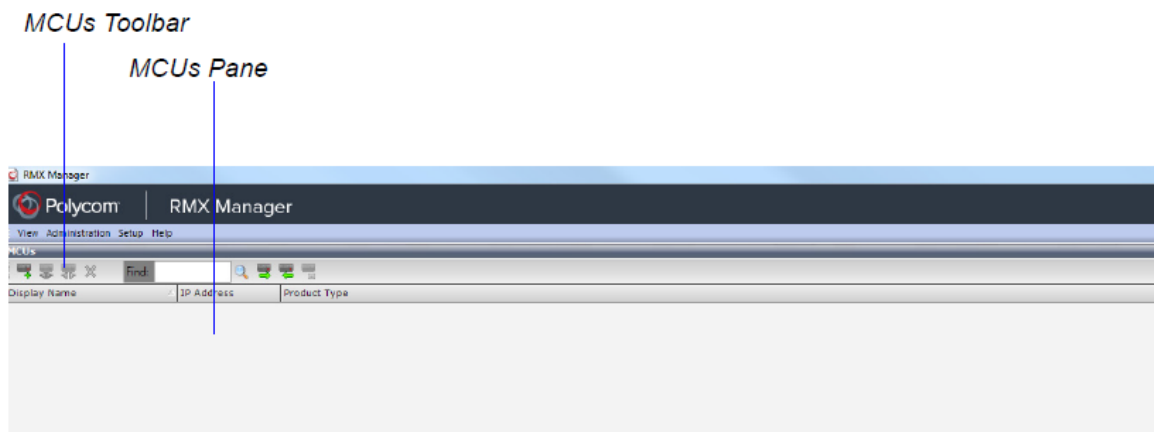

The first time you start the RMX Manager application, the **MCUs** pane is empty.

Installing the RMX Manager for Multi-User Capability

The RMX Manager can be installed to be available to all users of a shared computer during the initial installation.


The following procedure is performed after downloading the RMX Manager from the Polycom Support website.




The RMX Manager can still be installed from the Collaboration Server Web Client, but the installation will only be available to the current user.

To install the RMX Manager for Multiple Users:


- 1 Download the RMX Manager installation package from the Polycom Support website.
- 2 Unzip the installation package.

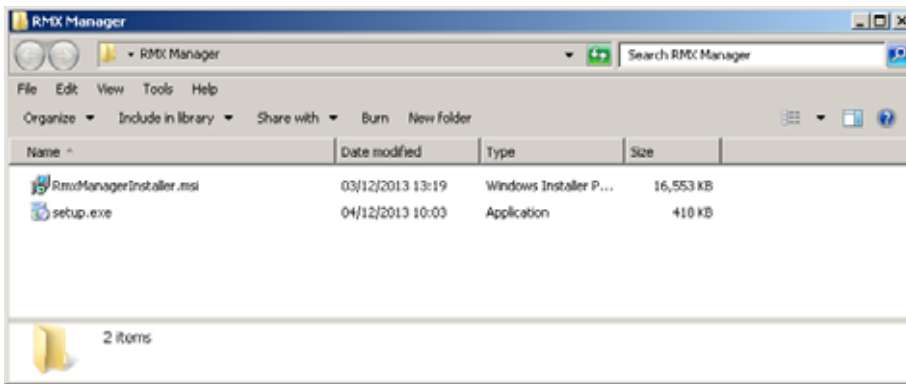

- 3 Double-click **setup.exe** to open the RMX Manager Setup Wizard.

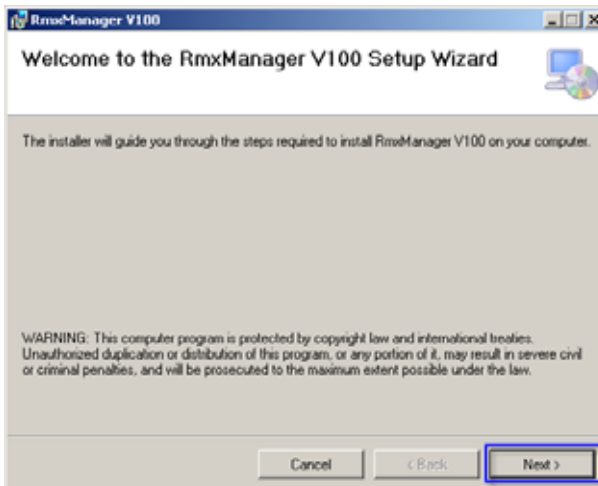


4 Click **Next**.

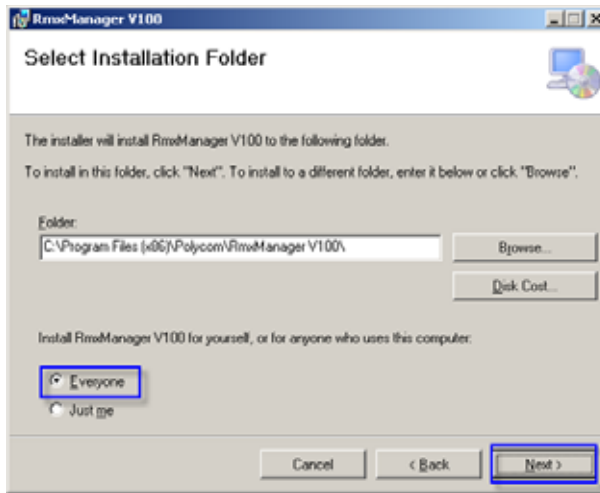


5 Select **Everyone** to install the RMX Manager for all users sharing the computer. (Select **Just me** to install the RMX Manager just for the current user.)


6 Click **Next**.

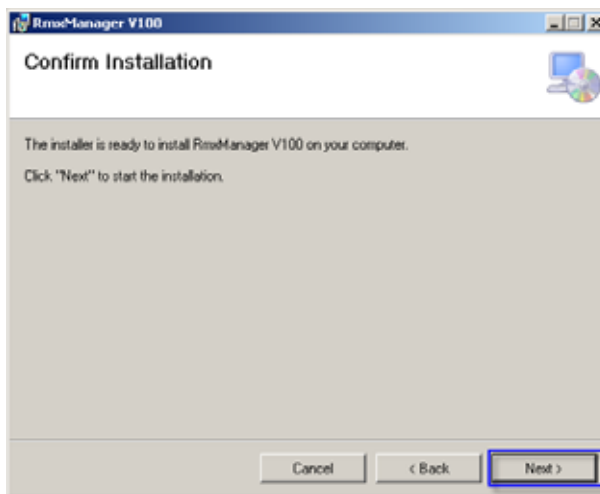

The installation begins.

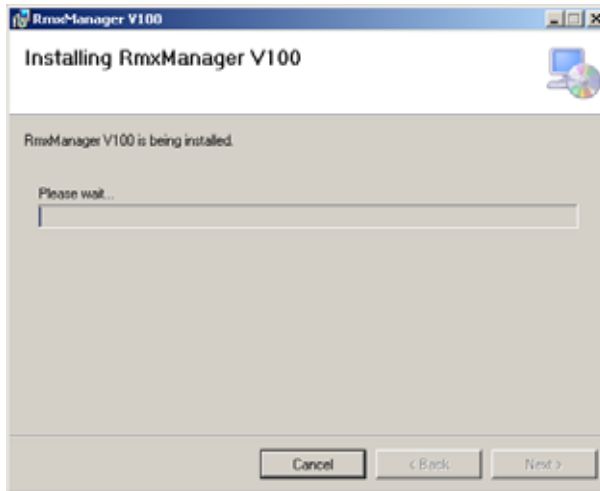

When the installation is complete, a confirmation window is displayed.

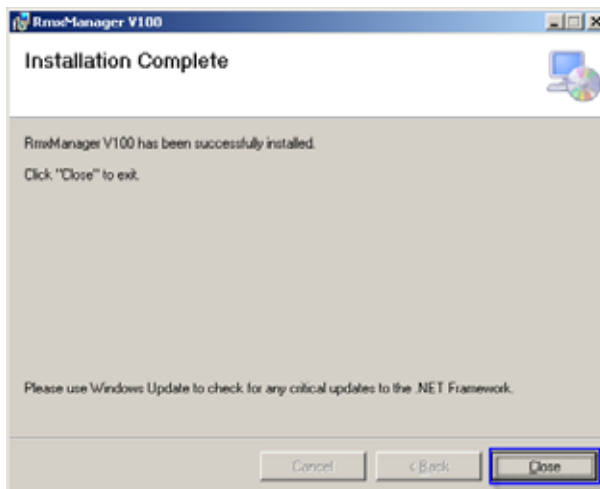

- 7 Click **Close** to close the RMX Manager installer.

The installation is complete.

Starting the RMX Manager Application

Once installed, the RMX Manager can be run using the `http://` (non-secured) or `https://` (secured) command in the browser's address line or the Windows **Start** menu.


To use the browser:

- 1 In the browser's command line, enter:
`http://<MCU Control Unit IP Address>/RMXManager.html`
 or
`https://<MCU Control Unit IP Address>/RMXManager.html`
- 2 Press **Enter**.

To use the Windows Start menu:

- 1 Click **Start > Programs**.
 - a If the RMX Manager is displayed in the recently used programs list, click **RMX Manager** in the list to start the application.
 or
 - b Click **All Programs > Polycom > RMX Manager**.

The MCUs screen is displayed, listing the MCUs currently defined in the RMX Manager.

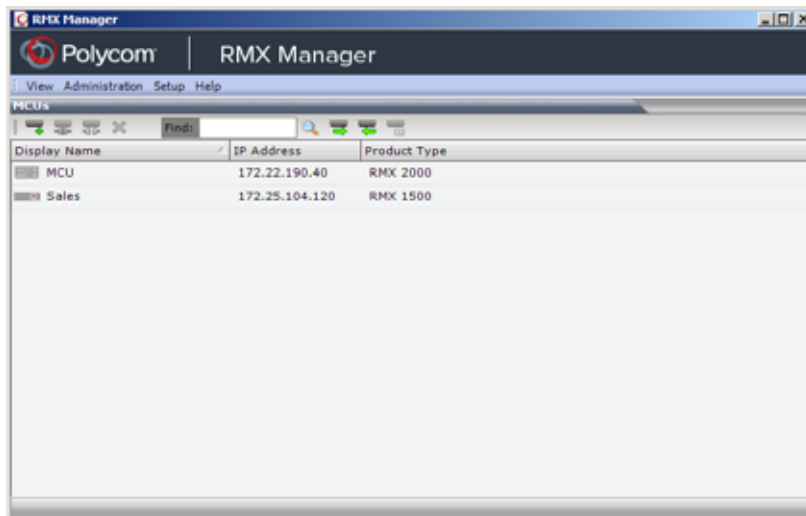

This screen enables you to add additional MCUs or connect to any of the MCUs listed. For details on adding MCUs, see [Adding MCUs to the MCUs List](#).

For each listed MCU, the system displays the following information:

- **MCU Display Name** (as defined in the Add MCU dialog box).
- **IP Address** of the MCU's control unit
- **Product Type** - The MCU type: RealPresence Collaboration Server (RMX) 1800/2000/4000.
 Before connecting to the MCU for the first time, the Collaboration Server type is unknown so **RMX** is displayed instead as a general indication.

To display the RMX Manager main screen you must connect to one of the listed Collaboration Servers. For more details, see [Connecting to the MCU](#).


Connecting to the MCU

Once an MCU is defined, the RMX Manager can be connected to it. This allows you to set up conferences, make reservations, monitor On Going Conferences and perform other activities on several MCUs.



The first Collaboration Server unit that is connected to the RMX Manager dictates the Authorization Level of Users that can connect to the other MCUs on the list. For example, if the Authorization level of the User POLYCOM is Administrator, all Users connecting to the other MCUs on the list must be Administrators. Each user can have a different login name and password for each of the listed MCUs and they must be defined in the Users list of each of the listed MCUs.

To connect the RMX Manager to an MCU:

- 1 In the **MCUs** pane or screen, use one of the following methods:
 - a Double-click the MCU icon.
 - b Select the Collaboration Server to connect and click the **Connect MCU**  button.
 - c Right-click the MCU icon and then click **Connect MCU**.

If you are connecting to the MCU from the MCUs opening screen and have defined the Username and Password for the connecting MCU, the system connects to the Collaboration Server, and the RMX Manager Main Screen is displayed.



If you are connecting to any MCU from the MCUs pane in the RMX Manager Main Screen and have defined the **Username** and **Password** for the connecting MCU, the MCU icon changes to connected and its status, type and number of audio and video resources are displayed in the MCUs pane.

If the Username and Password are missing from the MCU parameters, or if the **Remember Me** check box has been cleared, the **Connect** dialog box opens.

- 2 Enter the **Username** and **Password** of the user with which you will login to the MCU.

- 3 To add the user name and password to the MCU properties so you will not have to enter them each time you login to the MCU, make sure that the **Remember Login** check box is selected. Otherwise, clear the **Remember Login** check box.

- 4 Click **OK**.


The system connects to the Collaboration Server, and the RMX Manager Main Screen is displayed.

If a User with the entered Username and Password is not defined in the Collaboration Server, an error message is displayed and the system lets you re-enter the Username and Password.

RMX Manager Main Screen

The RMX Manager Main Screen is displayed only when at least one MCU is connected.

This screen is similar to the RMX Web Client Main Screen with the addition of the **MCUs** pane. As in the RMX Web Client, the panes are displayed according to the Authorization Level of the logged in User. The **MCUs** pane is displayed to all users.

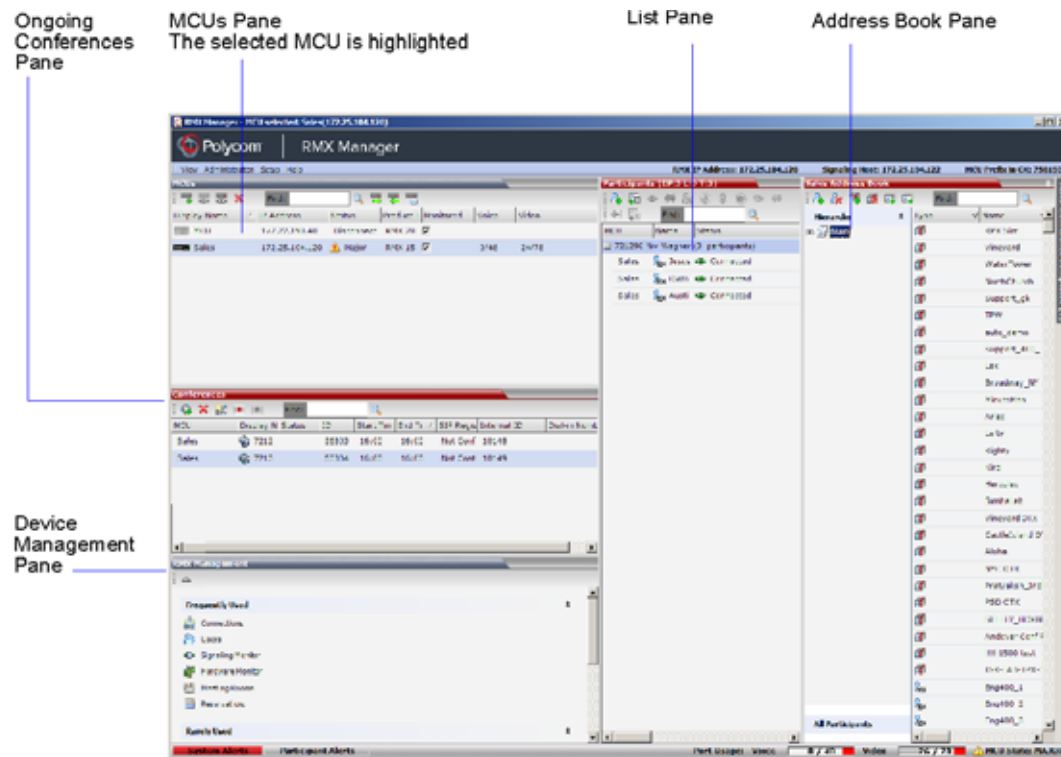


Only one MCU can be selected in the **MCUs** pane. If only one MCU is connected, it is automatically selected. The selected MCU is highlighted.

The menu items, the Collaboration Server Management features, the Address Book and the Conference Templates are all properties of the selected MCU and apply to it.

MCUs Pane

The **MCUs** pane includes a list of MCUs and a toolbar.

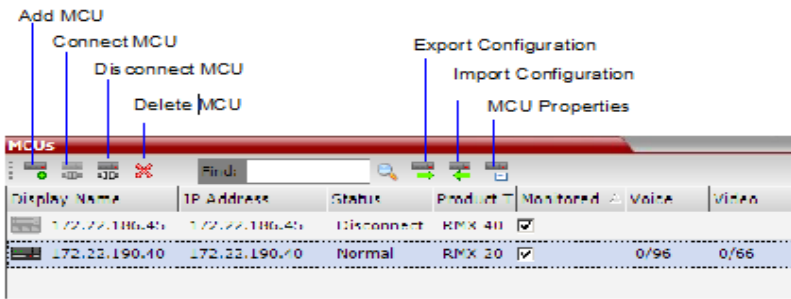

For each listed MCU, the system displays the following information:

- **MCU Display Name** - the name of the MCU and its icon according to its type and connection status. The following icons are available:

MCU Icons and Statuses

Icon	Description
	Collaboration Server (RMX) 2000, disconnected.
	Collaboration Server (RMX) 2000, connected.
	Collaboration Server (RMX) 4000, disconnected.
	Collaboration Server (RMX) 4000, connected.
	Collaboration Server 1800, disconnected
	Collaboration Server 1800, connected

- **IP Address** - of the MCU's control unit.
- **Status** - The status of the MCU:
 - **Connected** - the MCU is connected to the RMX Manager and can be managed by the RMX Manager user.
 - **Disconnected** - The MCU is disconnected from the RMX Manager
 - **Major** - The MCU has a major problem. MCU behavior could be affected and attention is required.
- **Product Type** - The MCU type: RealPresence Collaboration Server 1800/2000/4000. Before connecting to the MCU for the first time, the Collaboration Server type is unknown so **RMX** is displayed instead as a general indication.
- **Monitored** - When checked indicates that the conferences running on this MCU are automatically added to the Conferences list and monitored. To stop monitoring the conferences running on this MCU and their participants, clear the Monitored check box.
- **Video Resources** - The number of video resources that are available for conferencing.
- **Audio Resources** - The number of audio resources that are available for conferencing.

Use Other RMX Manager UI Components

The RMX Manager has all the UI components that a RMX web client has, together with a unique MCU list pane.

For more information on other UI components, such as conference pane, address book and so on, refer to [Collaboration Server Web Client Screen Components](#).

You can always control and manage conferences using either the RMX manager or the RMX web client. Operations described throughout this book apply to both the RMX manager and the RMX web client.

Adding MCUs to the MCUs List


The RMX Manager can connect to one or several Collaboration Servers simultaneously. If the site's configuration includes more than one MCU, or when a new MCU is added to your configuration, and you want to monitor and control all MCUs from within the same window, you must add the MCU to the MCUs list.



The Collaboration Server must be installed and its IP addresses properly configured in the Management Network Service before defining its connection parameters in the RMX Manager application.

To add the MCU to the list of MCUs being managed, define the MCU's connection parameters.

To add a Collaboration Server unit:

- 1 On the **MCUs** toolbar, click **Add MCU**  to add an MCU to the MCU list.
The **Add MCU** dialog box opens.
- 2 Define the following parameters:

MCU Properties


Field	Description
MCU Name	Enter the name of the MCU on the network.
MCU IP	Enter the IP address of the MCU's Control Unit. The IP address must be identical to the one configured in the MCU during first entry Configuration.
Port	Enter the number of the port used for communication and data transactions between the Collaboration Server unit and the RMX Manager. For standard connection, enter 80 . For a Secured connection (using TLS or SSL), enter 443 .
Username	Enter the user name with which you will login to the MCU. A User with this name must be defined in the Collaboration Server Users list. The system is shipped with a default User whose name is POLYCOM.
Password	Enter the password as defined for the user name with which you will login to the MCU. The system is shipped with a default User whose password is POLYCOM.
Secure Mode	Optional. Select this check box to connect to the Collaboration Server with SSL and work in Secure Mode.
Remember Login	This check box is automatically selected, and it enables the usage of the user name and password entered in this dialog box when connecting to the Collaboration Server. If this check box is cleared, the user is prompted for the user name and password when connecting to this Collaboration Server unit.
Auto Reconnection	Select this check box to automatically reconnect to the Collaboration Server if the connection between the RMX Manager and the MCU is broken.
Interval	Enter time in seconds between reconnect ion attempts to the Collaboration Server. For example, if you enter 10, the system will wait 10 seconds between the connection attempts.
Max Time	Enter the maximum amount of time in seconds that the Collaboration Server is allowed to try to reconnect. If the Collaboration Server reconnects before the allotted time frame the count down timer is halted. For example, if you enter 100, the system will stop trying to reconnect if it has failed to do so within 100 seconds.

3 Click **OK**.

The MCU is added to the MCUs pane.

4 If required, repeat steps 1-3 to define additional Collaboration Server units.

The **MCUs** pane contains the list of all defined MCUs.

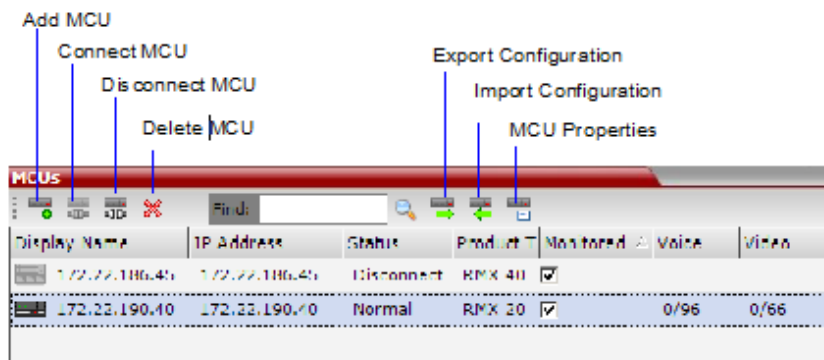


Grouping the Participants by MCU

The Participants can be grouped by MCU and then by conferences.

To change the display mode for the Participants pane:

- On the Collaboration Server menu, click **View > Group by MCU**.
The **Participants** pane display changes accordingly.

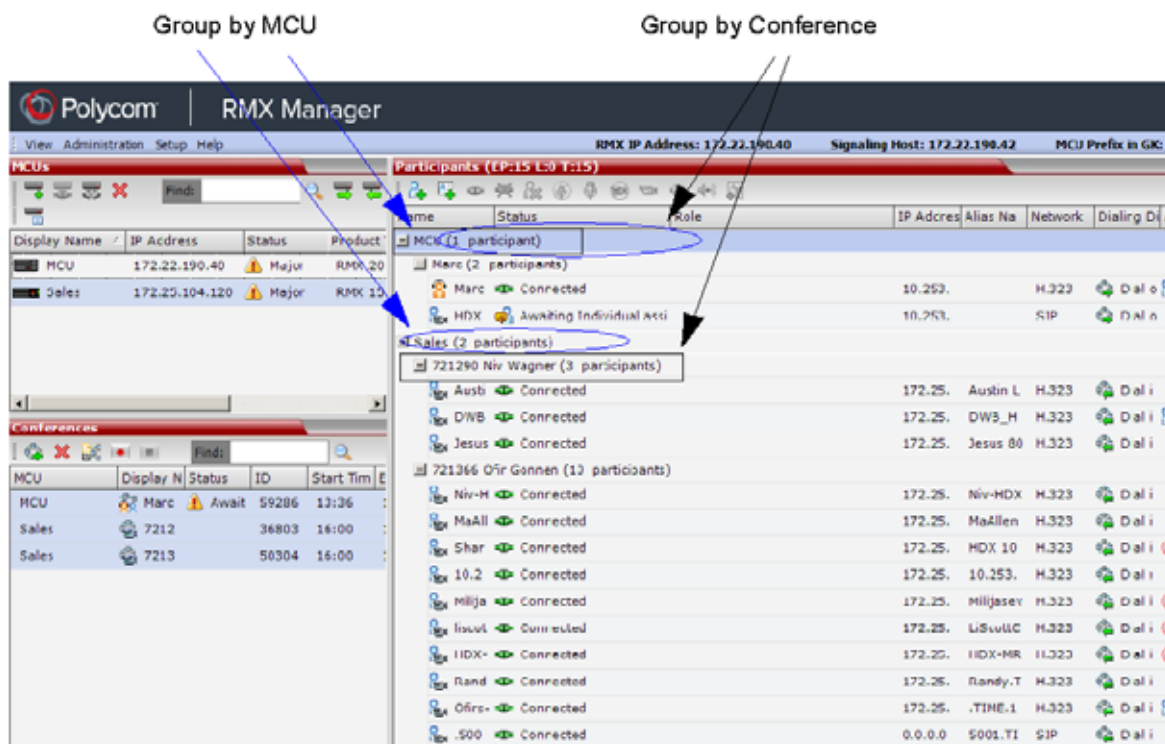


To toggle between the two display modes, click **View > Group by MCU**.

Start Monitoring/Stop Monitoring

By default, all conferences running on connected Collaboration Servers are monitored.

You can stop the automatic monitoring of conferences on a specific MCU in one of the following methods:

- » By clearing the check box in the **Monitored** column in the **MCUs** pane.

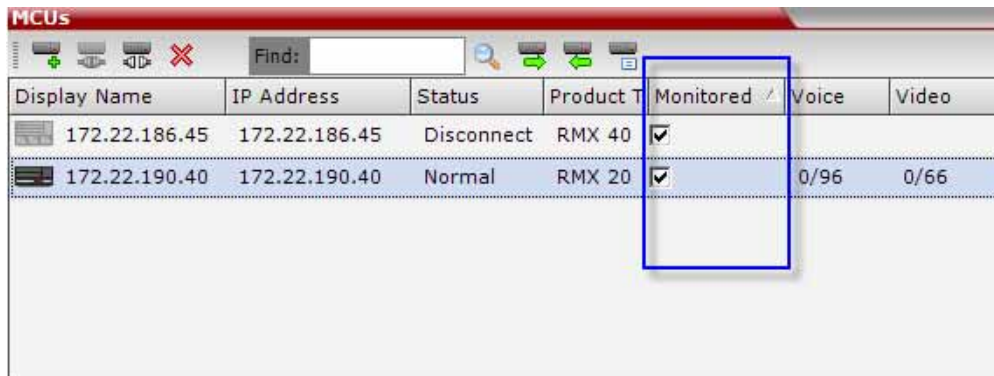

Right-clicking the MCU icon and selecting **Stop Monitoring**.

The check box is cleared in the Monitored column.

- » To start monitoring again, click the check box in the **Monitored** column in the **MCUs** pane, or right-clicking the MCU icon and selecting **Start Monitoring**.


Modifying the MCU Properties

You can view the currently defined MCU settings, and modify them when required, for example, change the MCU name, IP address or Secured mode.

Use this procedure to add the **Username** and **Password** to the properties of the MCU that was automatically added to the MCU list when installing the RMX Manager. This enables automatic login when connecting the MCU to the RMX Manager.

You can modify the MCU properties when the MCU is connected or disconnected.

To view and/or modify the MCU Properties:

- 1 Use one of the following methods:
 - a Select the MCU to disconnect and click **MCU Properties** .
 - b Right-click the **MCU** icon and then click **MCU Properties**.


The **MCU Properties** dialog box opens.
- 2 Define/modify the required parameters. For details, see [MCU Properties](#).
- 3 Click **OK**.

Disconnecting an MCU

An MCU can be disconnected from the RMX Manager, without removing it from the MCUs list.

To disconnect an MCU:

- 1 Use one of the following methods:


- a Select the MCU to disconnect and click **Disconnect MCU** .
- b Right-click the MCU icon and then click **Disconnect MCU**.

The MCU icon changes to disconnected and any ongoing conference running on that MCU will not be monitored in this RMX Manager; they are removed from the **Conferences** pane. This MCU can still be monitored and controlled by other users.

Removing an MCU from the MCUs Pane

An MCU can be removed from the RMX Manager. This function should be used if the MCU hardware was disconnected and removed from the network.

To Remove an MCU from the list:


- 1 Use one of the following methods:
 - a Select the MCU to disconnect and click **Delete** .
 - b Right-click the **MCU** icon and then click **Remove MCU**.
A confirmation message is displayed.
- 2 Click **OK** to confirm or **Cancel** to abort the operation.
The **MCU** icon is removed from the **MCUs** pane.

Changing the RMX Manager Language

You can change the language of the RMX Manager menus and dialog boxes. Only one language can be selected at a time and the RMX Manager application must be restarted after changing the display language.

To select a language:

- 1 On the **RMX Manager** menu, click **Setup > Customize Display Settings > Multilingual Settings**.
The **Multilingual Settings** dialog box opens, displaying the current language selection.

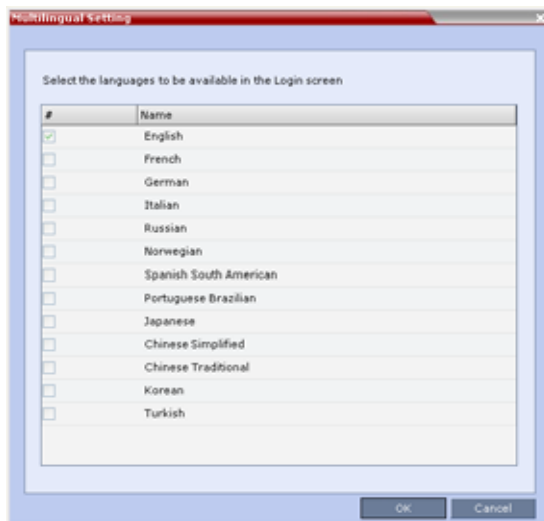

- 2 Click the check box of the required language. Only one language can be selected.
- 3 Click **OK**.
- 4 Restart the RMX Manager application to implement the language change.

Import/Export RMX Manager Configuration

The RMX Manager configuration that includes the MCU list and the multilingual selection can be save to any workstation/PC on the network and imported to any Multi-RMX Manager installed in the network. This enables the creation of the MCUs list once and distributing it to all RMX Manager installations on the network.

In addition, when upgrading to a previous version, the MCU list is deleted, and can be imported after upgrade.

The exported file is save in XML format and can be edited in any text editor that can open XML files.

To Export the RMX Manager Configuration:

- 1 In the RMX Manager, click **Export RMX Manager Configuration**  in the toolbar, or right-click anywhere in the **MCUs** pane and then click **Export RMX Manager Configuration**.

The **Export RMX Manager Configuration** dialog box opens.

- 2 Click **Browse** to select the location of the save file, or enter the required path in the **Export Path** box.


The selected file path is displayed in the **Export Path** box.

- 3 Click **OK** to export the RMX Manager configuration.


To Import the RMX Manager Configuration:

- 1 In the RMX Manager, click **Import RMX Manager Configuration**  in the toolbar, or right-click anywhere in the **MCUs** pane and then click **Import RMX Manager Configuration**.

The **Import RMX Manager Configuration** dialog box opens.

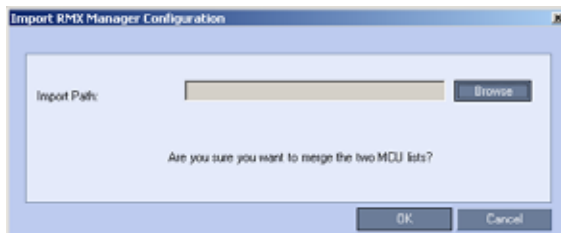

- 2 Click the **Browse** button to select the saved file, or enter the required path in the **Export Path** box. The **Open** dialog box is displayed.

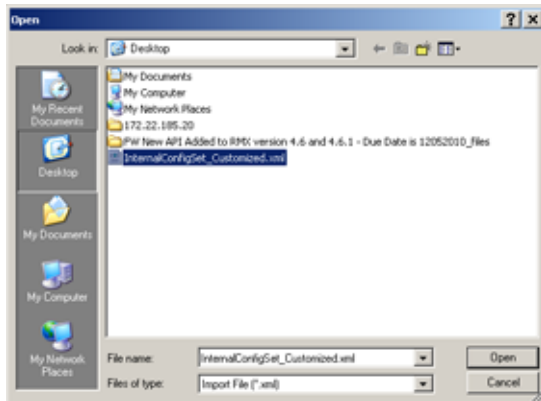

- 3 Select the XML file previously saved, and click the **Open** button. The selected file path is displayed in the **Import Path** box.
- 4 Click **OK** to import the file.

Installing RMX Manager in Secure Communication Mode

The RMX Manager cannot be downloaded from an MCU operating in Secure Communication Mode, without a valid TLS certificate.

The following procedure describes how to obtain a TLS certificate and download the RMX Manager from the MCU operating in Secure Communication Mode.



FIPS is always enabled in Ultra Secure Mode, and when **ClickOnce** is used to install RMX Manager, the workstation must have one of the following installed:

- .NET Framework 3.5 or a later version of the .NET Framework.
- .NET Framework 2.0 plus Service Pack 1 or later.


To install the RMX Manager:

- 1 Set the Collaboration Server to Non Secure Communication Mode
 - a In the **RMX Management** pane, click **IP Network Services**.

- b** In the **IP Network Services** list pane, double click the **Management Network** entry. The **Management Network Properties** dialog box is displayed.




- c** Click on the **Security** tab. The **Security** dialog box is displayed.

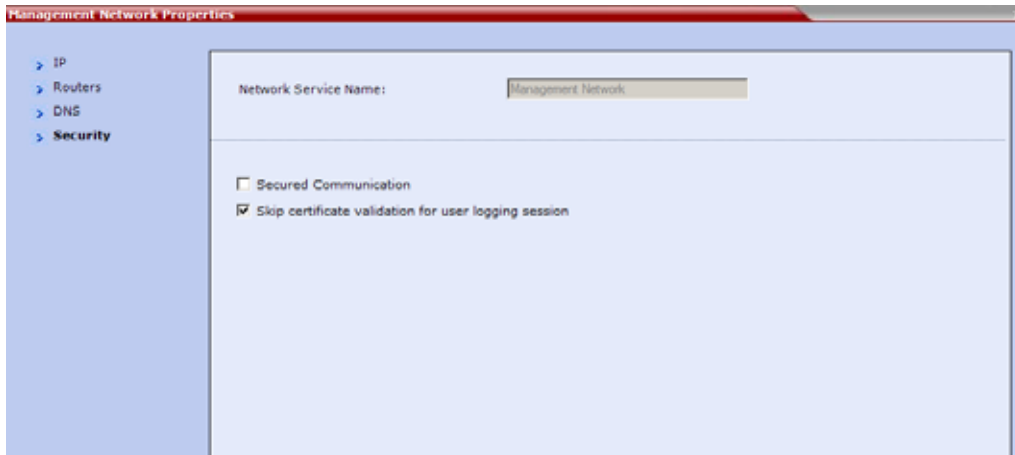

- d** Clear the **Secured Communication** check box.

- 2 Click the **DNS** tab.
The **DNS** dialog box is displayed.

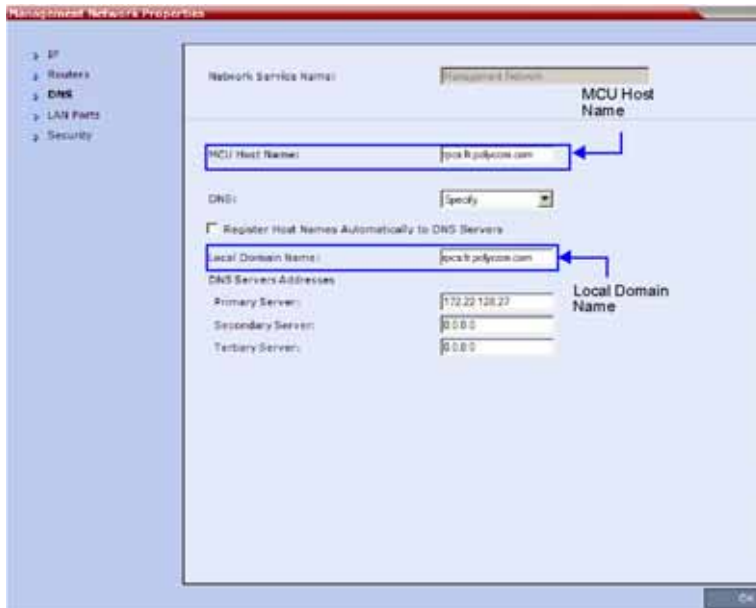

- 3 Enter the **Local Domain Name**.



The **Local Domain Name** must be the same as the **MCU Host Name**. If the content of these two fields are not identical an active alarm is created.

4 Create a Certificate Request.

For more information, see [Purchasing and Installing a Certificate](#).

Certificates can also be created and issued using an *Internal Certificate Authority*. For more information see [Using an Internal Certificate Authority](#).


5 Install the certificate.

For more information, see [Purchasing and Installing a Certificate](#).

6 Set the Collaboration Server to Secure Communication Mode


- a In the **RMX Management** pane, click **IP Network Services**.
- b In the **IP Network Services** list pane, double click the **Management Network** entry.

The **Management Network Properties** dialog box is displayed.

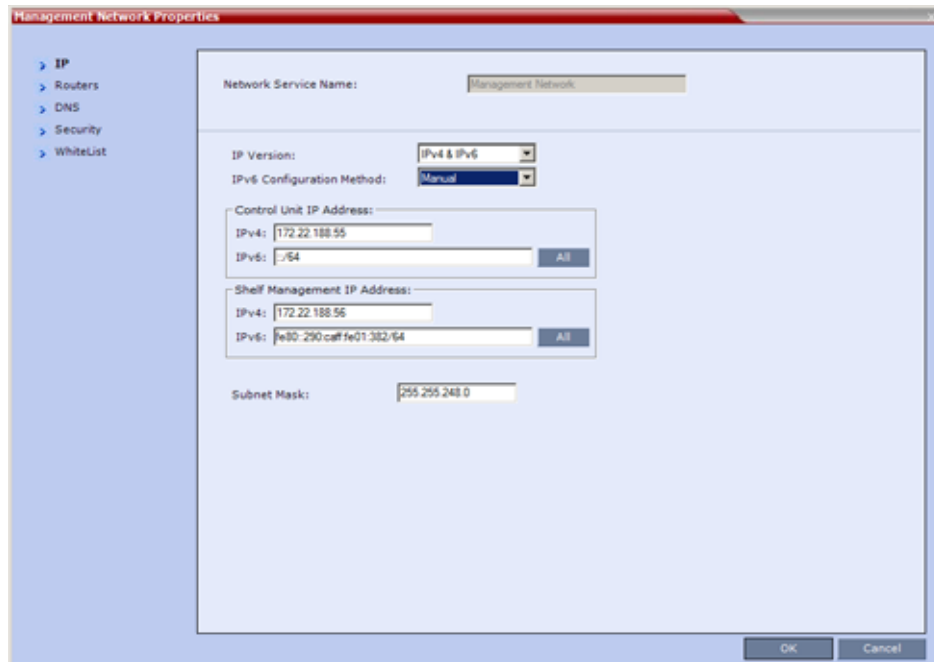

c Click the **Security** tab.

The **Security** dialog box is displayed.

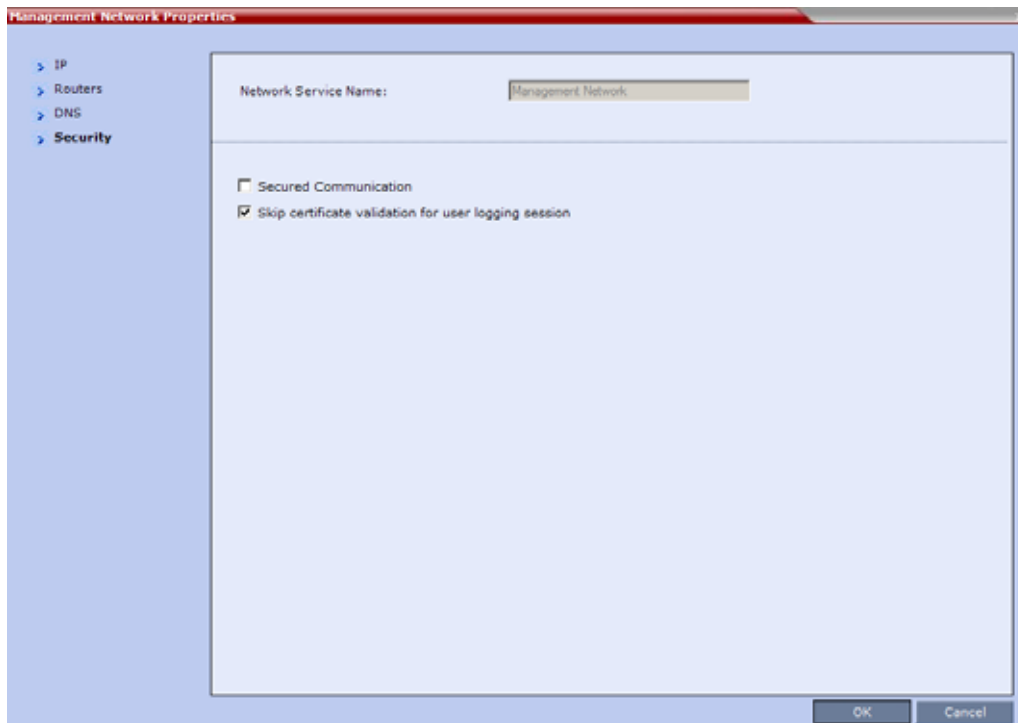

d Select the **Secured Communication** check box.


- e Click **OK**.
- 7 Reset the Collaboration Server:
 - a In the **RMX Management** pane, click **Hardware Monitor** .
The **Hardware Monitor** pane is displayed.
 - b Click **Reset** (🔧).
- 8 Install the RMX Manager. For more information see [Installing the RMX Manager Application](#).

Using an Internal Certificate Authority

If your TLS certificate was created and issued by an Internal Certificate Authority, it may not be seen as having been issued by a trusted Certificate Authority. The RMX Manager is not downloaded successfully and a warning is received stating that the certificate was not issued by a trusted Certificate Authority.

To add the Internal Certificate Authority as a trusted Certificate Authority:

- 1 Navigate to the folder where the certificate (.cer) file is saved.
- 2 Open the certificate file.

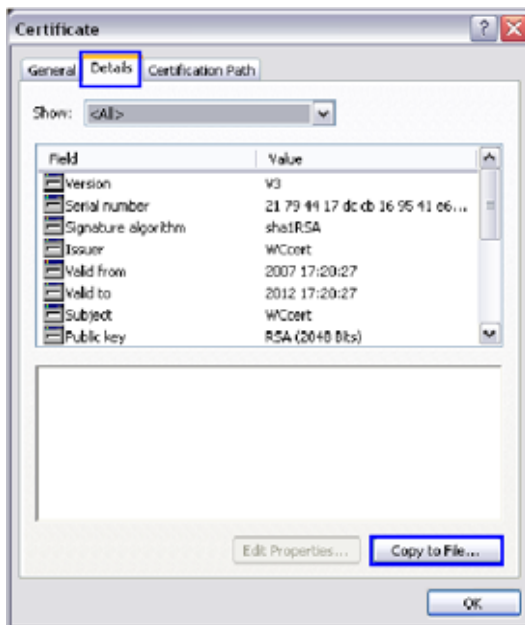

- 3 Click the **Details** tab.

- 4 Click the **Copy to File** button.

The **Certificate Export Wizard** is displayed.



- 5 Click **Next**.

The **Export File Format** dialog box is displayed.



- 6 Select **Base-64 encoded X.509 (.CER)**.

- 7 Click **Next**.

The **File to Export** dialog box is displayed.



8 In the **File Name** field, enter the file name for the exported certificate.

9 Click **Next**.

The final **Certificate Export Wizard** dialog box is displayed.



10 Click **Finish**.

The successful export message is displayed.

11 Click **OK**.

Use the RMX Web Client

You can manage or monitor a Polycom RealPresence Collaboration Server with the RMX Web Client application, using Internet Explorer installed on your workstation, or using RMX Manager application.

The RMX Manager is the Windows version of the RMX Web Client. For more information, see [RMX Manager Application](#).



You can always control and manage conferences using either the RMX manager or the RMX web client. Operations described throughout this book apply to both the RMX manager and the RMX web client.

Starting the RMX Web Client

You start the RMX Web Client by connecting to the MCU system. To connect to the MCU you need to get the following information from your system administrator:

- User name
- Password
- MCU Control Unit IP Address

To start the Collaboration Server Web Client:

- 1 In your browser address line, enter `http://<Control Unit IP Address>` and press the **Enter** key.

The Login screen is displayed.



- 2 Enter your **User Name** and **Password** and click the **Login** button.

If the default User name and password were not changed on first entry, the default user name and password are both **POLYCOM**.

The RMX Web Client main screen is displayed.

RMX Web Client Screen Components

The RMX Web Client main screen consists of the following panes:

- Conference List
- Status Bar
- List Pane
- Address Book
- Collaboration Server Management
- Conference Templates Tab

You can login as a user with Chairperson, Operator or Administrator authorization. Your Authorization Level determines your viewing and system functions.

The Administrator's view is shown below.

The screenshot displays the RMX Web Client interface for a RealPresence Collaboration Server 1800. The interface is divided into several panes and components:

- Conferences List:** Located at the top left, it shows a list of active conferences with columns for Name, Status, Role, IP Address/Phone, Alias Name/SIP, Network, Dialing Direction, Audio, Video, and Encryption.
- List Pane:** The central area displaying a detailed list of participants for the selected conference, including their names, status, roles, and contact information.
- Address Book:** Located on the right side, it provides a search and list interface for contacts.
- RMX Management:** A sidebar on the left containing navigation options for system administration, such as Connections, Users, Signaling Monitor, Hardware Monitor, Meeting Rooms, Reservations, and various services.
- Status Bar:** Located at the bottom, it displays system metrics like Participant Alerts, Part Usage, and Video/PCU status.
- Conference Templates Tab:** A vertical tab on the far right edge of the interface.

The main screen can be customized. For more information, see [Customizing the Main Screen](#).

Viewing and System Functionality Permissions

Your User's Authorization Level determines the viewing and system functionality of the RMX Web Client as summarized in the following table.

Viewing and System Permissions

	Authorization Level		
	Chairperson	Operator	Administrator
Viewing Permissions			
Conference List	✓	✓	✓
List pane	✓	✓	✓
Address Book pane	✓	✓	✓
Conference Templates pane		✓	✓
Status Bar		✓	✓
RealPresence Collaboration Server Management pane		✓	✓
Conference Alarms		✓	✓
Conference Status		✓	✓
Configurations dialog boxes		✓	✓
System Functionality			
Start Conferences	✓	✓	✓
Monitor Conferences	✓	✓	✓
Monitor Participants	✓	✓	✓
Solve Basic Problems		✓	✓
Modify MCU Configuration			✓



In addition to Chairpersons, Operators and Administrators, additional user types are:


- **Auditor:** A user that can view Auditor Files and audit the system. For more information, see [Auditor](#).
- **Machine Account:** A User Name associated with servers (machines). For more information, see [Machine Account](#).
- **Administrator - Read Only:** A user with the viewing and monitoring permissions of a regular Administrator, but can only create system backups and cannot perform any other functional operation. For more information, see [Administrator Read-only](#).

For more information on users and permissions, see [Collaboration Server Users](#).

Conferences List

If you are logged in as a User with Operator or Administrator permissions:

The Conferences pane lists all the conferences currently running on the MCU along with their **Status**, **Conference ID**, **Start Time** and **End Time** data. The number of ongoing conferences is displayed as the title of the pane.

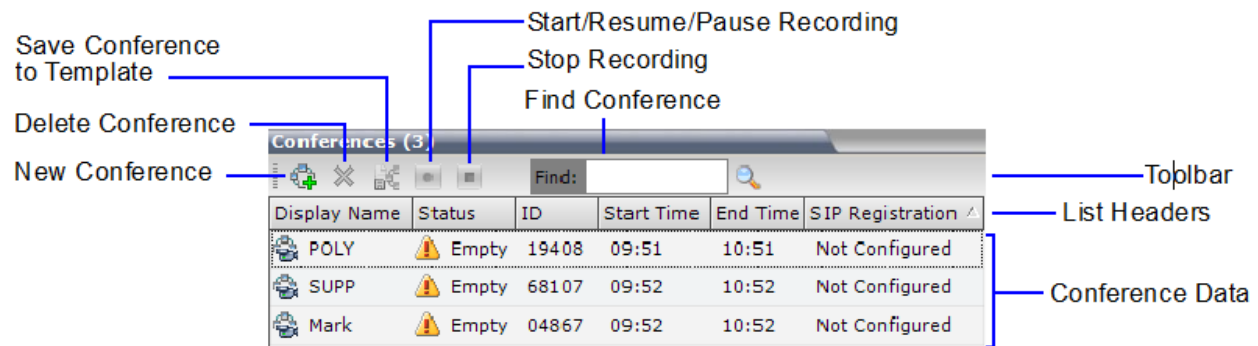

The **Conferences List** toolbar contains the following buttons:

- **New Conference** – Starts a new ongoing conference.
- **Delete Conference** – Deletes the selected conference(s).
- **Save Conference to Template** - Saves the conference with its participants to a template for future use.
- If Conference Recording is enabled for AVC Only conferences, the following buttons are displayed in color:
 - **Start/Resume Recording** – Starts/resumes recording.
A **Recording** Indication is displayed to all conference participants informing them that the conference is being recorded.
 - **Stop Recording** – Stops recording.
 - **Pause** – Toggles with the **Start/Resume** button.
A **Paused** Indication is displayed to all conference participants informing them that conference recording has been paused.

If you are logged in as a User with Chairperson permissions:

- You can list and monitor conferences you have started or for which you have entered the password or that don't have a Chairperson Password assigned.
- A **Chairperson Password** field and a **Refresh** button are displayed.
Enter a password and click **Refresh** to display a list of conferences with the requested password.

- A **Chairperson Password** column is included in the conference data.




List Pane

The List pane displays details of the item selected in the Conferences pane or RMX Management pane.

The title of the pane changes according to the selected item.

Example: When an ongoing conference is selected on the Conferences pane, the list and parameters of the connected participants is displayed.



Selecting an item in the RMX Management pane lists the items currently defined.

Example: If the Users item is selected, a list of system Users defined for the MCU is displayed.



RMX Management Pane

This view is available to Operators and Administrators.

The RMX Management pane lists the entities that need to be configured to enable the Collaboration Server to run conferences. Only users with Administrators permission can modify these parameters.

The RMX Management pane is divided into two sections:


- **Frequently Used** – Parameters often configured monitored or modified.
- **Rarely Used** – Parameters configured during initial system set-up and rarely modified afterward.

Items can be moved between these two sections to customize the management tasks per system User. For more details, see [Customizing the RMX Management Pane](#).

Status Bar

This view is available to Operators and Administrators.

The Status Bar at the bottom of the RMX Web Client contains System and Participant Alerts tabs as well as Port Usage Gauges and an MCU **State** indicator. Information included in the status bar varies with the product model.



System Alerts



The basic unit used for reporting resource usage in the Port Gauges is HD720p30. Usage numbers are rounded to the nearest integer.

This view is available to Operators and Administrators.

This is a list of system problems. The alert indicator flashes red when at least one system alert is active. The flashing continues until a user with Operator or Administrator permission reviews the list.

The **System Alerts** pane is opened and closed by clicking the **System Alerts** button in the left corner of the Status Bar.

Active Alarms

Faults List

ID	Time	GMT Time	Category	Level	Code	Description
1	2012 December 24 1	2012 December 24 14:25:06	General	Major	Insufficient resources	Insufficient resources

For more information about **Active Alarms** and **Faults List**, see [System and Participant Alerts](#).

Participant Alerts

This view is available to Operators, Chairpersons and Administrators.


This is a list of participants that are experiencing connection problems. It is sorted by conference.

The **Participant Alerts** pane is opened and closed by clicking the **Participant Alerts** button in the left corner of the Status Bar.

Conference	Name	Status	Disconnection T	Rate	IP Address/Phone	Alias Name/SIP	Network	Dialing Direction	Audio	Video	Encryption	Service Name	FECN Taken	Content Taken
SUPPORT_1228	HDX 4000 T	Disconnected	2012 December		10.253.72.24		SIP	Dial out		ON		IP Network Service		
SUPPORT_1228	Jeffrey	Disconnected	2012 December		10.253.72.18		H.323	Dial out		ON		IP Network Service		
SUPPORT_1228	Jeffrey SIP	Disconnected	2012 December		10.253.72.18		H.323	Dial out		ON		IP Network Service		
SUPPORT_1228	Duke	Disconnected	2012 December		10.253.72.22		H.323	Dial out		ON		IP Network Service		

Port Usage Gauges

The Port Usage Gauges are displayed in the Status Bar at the bottom of the RMX Web Client screen.

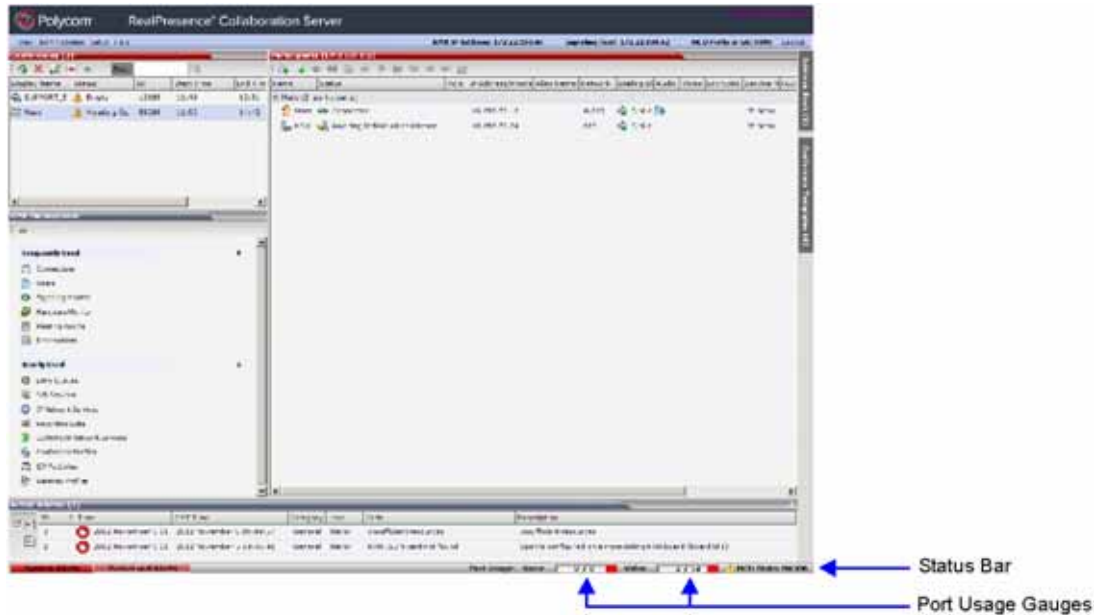


In the RealPresence Collaboration Server (RMX) 1800/2000/4000, the Port Usage gauges displays for the selected MCU:

- The total number of Video or Voice ports in the system according to the Video/Voice Port Configuration. The Audio gauge is displayed only if Audio ports were allocated by the administrator, otherwise only the Video port gauge is displayed.
- The number of Video and Voice ports in use.
- The High Port Usage threshold.

In the RealPresence Collaboration Server 1800 and the RealPresence Collaboration Server (RMX) 2000/4000 with an MPMRx card, the Port Usage Gauge displays for the selected MCU:

- The total number of Video ports in the system.
- The number of Video ports in use.
- The High Port Usage threshold.

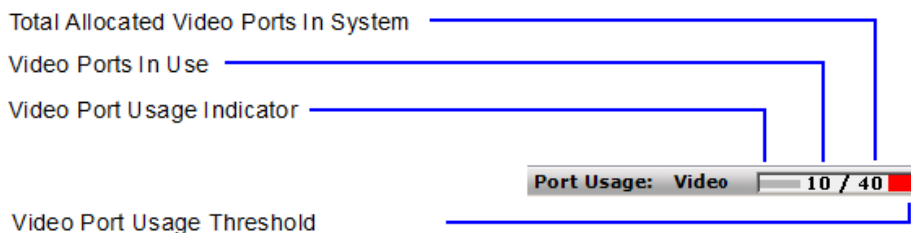


The basic unit used for reporting resource usage in the Port Gauges is HD720p30. Results are rounded to the nearest integer.

MCU State


This view is available to Chairpersons, Operators and Administrators.

The MCU State indicator displays one of the following:



The MCU is starting up. The time remaining until the system start-up is complete is displayed between brackets while a blue progress indicator bar indicates the start-up progress.

Progress Indicator Bar



Time Remaining



The MCU is functioning normally.



The MCU has a major problem. MCU behavior could be affected and attention is required.


Address Book

This view is available to Chairpersons, Operators and Administrators.

The Address Book is a list of Participants and Groups that have been defined on the MCU. The information in the Address Book can be modified only by an administrator. All system users can, however, view and use the Address Book to assign participants to conferences.

The Address Book toolbar contains a **Quick Search** field and the following six buttons:

- New Participant
- New Group
- Delete Participant
- Delete Group
- Import Address Book
- Export Address Book

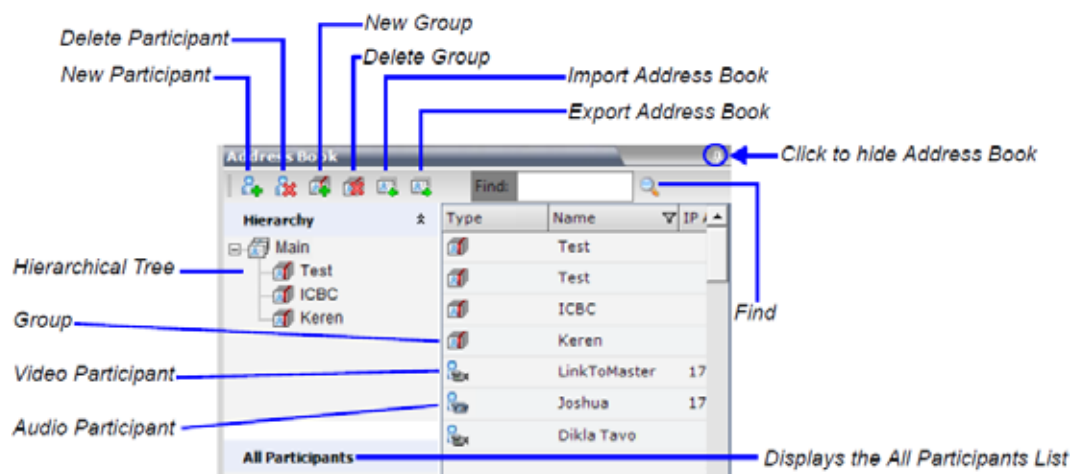

The **Navigation** pane of the Address Book contains the following types of lists:

- **Hierarchical** — Displays a multi-level hierarchical tree of groups and participants. Double-clicking a group on the navigation pane displays the group participants and sub-groups in the List pane.
- **All Participants** — Displays the single unique entity of all the participants in a single level as in previous versions. When adding a participant to a group, the system adds a link to the participant's unique entity that is stored in the **All Participants** list.

The Participants List in the Address Book lists entries according to:


- **Type** – Indicates whether an individual Participant or a Group of participants
- **Name** – The name of the participant or group
- **Dialing Direction** – Dial-in or Dial-out
- **IP Address/Phone** – IP Address/Phone of the participant
- **Encryption** - Indicates whether the participant is encrypted, not encrypted or the system automatically selects the encryption according to the conference settings

Displaying and Hiding the Address Book

The first time you access the RMX Web Client, the **Address Book** pane is displayed. You can hide it by clicking the anchor pin button.

The **Address Book** pane closes and a tab appears at the right edge of the screen.

Click the tab to re-open the Address Book.

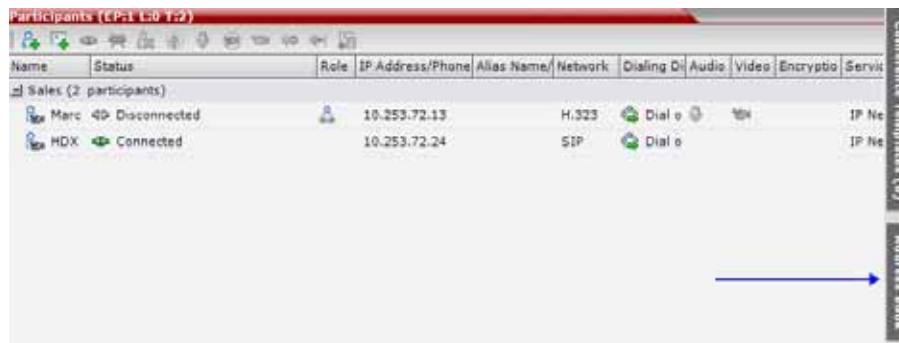

Conference Templates

Conference Templates enable administrators and operators to create, save, schedule and activate identical conferences.

A Conference Template:


- Saves the conference Profile.
- Saves all participant parameters including their Personal Layout and Video Forcing settings.
- Simplifies the setting up Telepresence conferences where precise participant layout and video forcing settings are crucial.

Displaying and Hiding Conference Templates

The **Conference Templates** list pane is initially displayed as a closed tab in the RMX Web Client main window. The number of saved Conference Templates is indicated on the tab.



Clicking the tab opens the **Conference Templates** list pane.

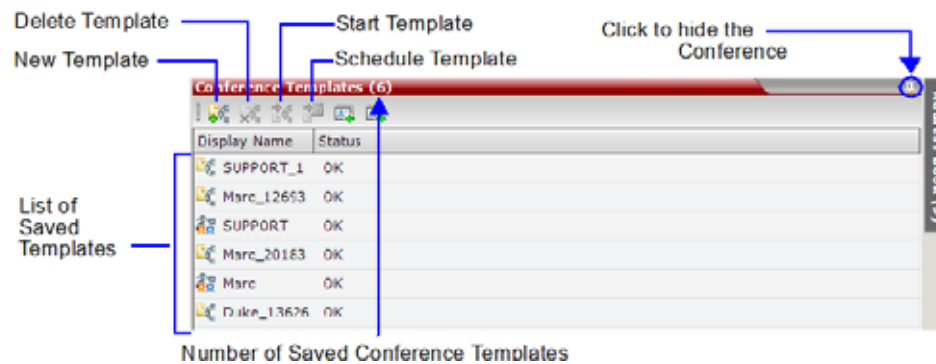

Hide the **Conference Templates** list pane by clicking the anchor pin button in the top right corner of the pane.

The **Conference Templates** list pane closes and a tab appears in the top right corner of the screen.

Customizing the Main Screen

You can customize the main screen according to your preferences. Pane sizes can be changed, column widths can be adjusted and data lists can be sorted.



Customization settings are automatically saved for each logged-in user.

The next time the RMX Web Client is opened, the main screen settings appear as they were when the user exited the application.

To resize a pane:

- » Move the pointer over the pane border, and when the pointer becomes \updownarrow , resize the pane border to the required size.

To adjust column width:

- 1 In the column header row, place the pointer on the vertical field-separator bar of the column.
- 2 When the pointer becomes $\leftarrow\rightarrow$, resize the field-separator bar to the required column size.

To sort the data by any field (column heading):

- 1 In the **Conference List** or List view pane, click on the column heading of the field to be used for sorting.
A ▼ or ▲ symbol appears in the column heading indicating that the list is sorted by this field, as well as the sort order.
- 2 Click on the column heading to toggle the column's sort order.

To change the order of columns in a pane:

- » Click the column heading to be moved and drag it to its new position, until a set of red arrows appears indicating the column's new position.

To restore the RealPresence Collaboration Server display window to its default configuration:

- » On the system menu, click **View > Restore RMX Display Defaults**.

Increasing and Decreasing the Text Size

You can increase or decrease the text size of the RMX Web Client windows for easier readability.

To increase or decrease the text size:

- 1 On the system menu, click **View**.
- 2 Select the **Zoom** option to achieve the desired text size percentage (default is 100%).



In some cases, the text in the dialog boxes in the RMX Web Client might appear not aligned or incomplete. This issue is not caused by setting the Zoom option. Rather, the text size in the Display settings in Windows Control Panel may affect the display of the dialog boxes. Check the Windows Display settings by clicking the **Windows Start** button and selecting **Control Panel > Display**. For Windows XP, click the **Appearance** tab, select **Normal** for the Font size and click **OK**. For Windows 7, select the **Smaller - 100%** option and click **OK**.

Customizing the RMX Management Pane


The **RMX Management** pane can be viewed either as a list or as a toolbar.

To switch between Toolbar and List Views:

- 1 In the RMX Management pane, click the Toolbar **View** button to switch to Toolbar view.

- In Toolbar view, click the **List View** button to switch back to List view.

Toolbar View Button

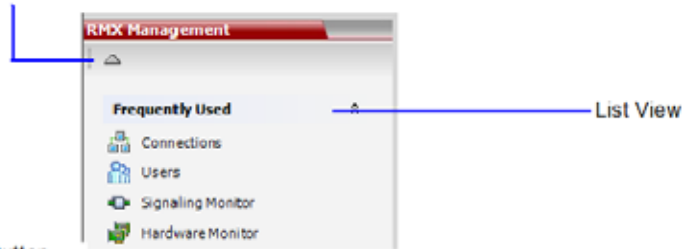



List View Button




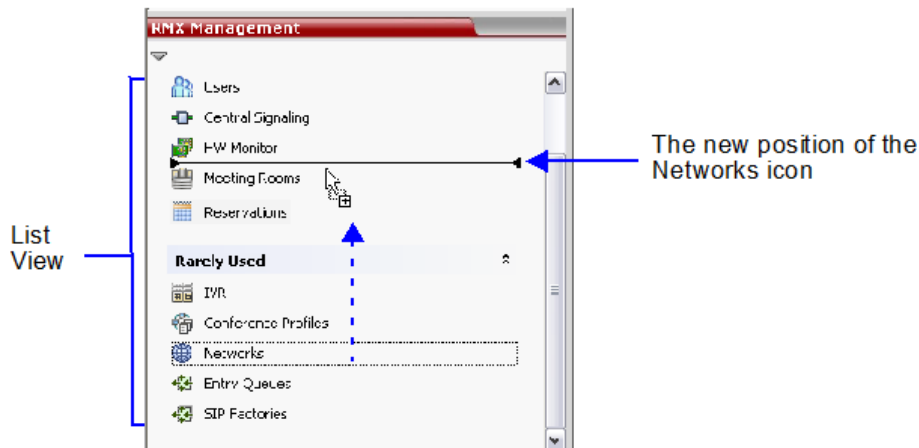
In List view, you can move items between the **Frequently Used** and **Rarely Used** sections depending on the operations you most commonly perform and the way you prefer to work with the RMX Web Client. This option does not work in Toolbar view as all items are represented by icons.

To expand or collapse the Frequently Used and Rarely Used sections:

The **Frequently Used** and **Rarely Used** sections can be expanded or collapsed by clicking the  and  buttons.

To move items within and between the Frequently Used and Rarely Used sections:

- In the **RMX Management** pane, drag the icon of the item you wish to move to the desired position. An indicator line () appears indicating the new position of the icon.



Accessing the Management Console When Security Policy is Stringent

Whereas most customers are able to use the RMX Web Client to access the Collaboration Server's management console, some customers may experience difficulties in doing so. This is usually as a result of local IT policy or the actions of certain Anti-virus applications installed on the control workstation.

In the event of such difficulties it is recommended that the Local Web Client (RMX Manager) application be used to access the management console. The RMX Manager application can be obtained in two ways:

- Install the RMX Manager from the RMX Web Client Login page.
 - or (if the problem persists)
- Download and install the RMX Manager from the Polycom Support site

Install the RMX Manager from the RMX Web Client Login page

- 1 Connect to the Collaboration Server using the default http:// connection.
- 2 Download the RMX Manager from the Collaboration Server from the RMX Web Client Login page.
- 3 After the RMX Manager is installed, use the RMX Manager to connect to the Collaboration Server using the default http:// connection.

Download and install Local Web Client (RMX Manager) file from the Polycom Support site

If the problem persists, download the Local Web Client (RMX Manager) file from the Polycom Support site using the procedure described below.

To download the Local Web Client (RMX Manager) installation files from the Polycom Support Site:

- 1 Access the Polycom web site at <http://www.polycom.com/support>.
- 2 Click on **Documents and Downloads** and then select **UC Infrastructure** from the drop-down list
- 3 Select the appropriate RMX/Collaboration Server product.
- 4 Click the **RMX 1800/2000/4000 Version Local Web Client (RMX Manager)** link.
- 5 When the file download dialog box opens, follow the standard download procedure to either run the installer directly by selecting **Open** or **Save** in the File Download dialog.
 - If you select **Open**, the download is performed and the archive containing the RMX Manager and its components are saved in Internet Explorer's Temporary Internet Files folder.
 - a Navigate to the **RMX_x-x-x-nnnn_LocalWebClient-RMXManager > RmxManagerInstallerMsi** folder.
 - b Double-click **setup.exe** to install the RMX Manager.
 - If you select **Save**, you need to specify where the archive containing the RMX Manager and its components are saved locally.
 - c When the download completes, select **Open** or **Open Folder**.
 - d Navigate to the **RMX_x-x-x-x_LocalWebClient-RMXManager** folder.
 - e Double-click **setup.exe** to install the RMX Manager.
- 6 Continue the Installation as described in [Installing the RMX Manager Application](#).

Administration and Utilities



Note: Resource Capacities and Operational Specifications

For information about Resource Capacities and other operational specifications, see the *RealPresence® Collaboration Server (RMX) Hardware Guide* specific to your system.

System and Participant Alerts

The MCU alerts users to any faults or errors the MCU encountered during operation. Two indication bars labeled System Alerts and Participant Alerts signal users of system errors by blinking red in the event of an alert.

Collaboration Server 1800/2000/4000 Status Bar

Display Name	Status	ID	Start Time	End Time
SUPPORT_3	Empty	13000	11:49	12:31
Marc	Awaiting Co	59285	11:52	14:42

Name	Status	Role	IP Address/Phone	Alias Name	Network	Dialing D	Audio	Video	Encrypt	Service	MFEC
Marc (2: periviparta)	Connected		10.253.72.13		H.323	Dial o				IP Netw	
HDX	Awaiting Individual assistance		10.253.72.24		SIP	Dial o				IP Netw	

ID	Time	GMT Time	Category	Level	Code	Description
3	2012 November 5 11:11	2012 November 5 09:49:57	General	Major	Insufficient resources	Insufficient resources
2	2012 November 5 11:11	2012 November 5 09:45:41	General	Major	RTM ISDN card not found	Soan is configured on a nonexisting RTM board (boardid 1)

System Alerts

Participant Alerts

The **System Alerts** indication bar blinks red prompting the user to view the active alarms. Once viewed, the System Alerts indication bar becomes statically red until the errors have been resolved in the MCU.

The **Participants Alerts** indication bar blinks red indicating participant connection difficulties in conferences. Once viewed, the **Participant Alerts** indication bar becomes statically red until the errors have been resolved in the MCU.


System Alerts

System Alerts are activated when the system encounters errors such as a general or card error. The system errors are recorded by the Collaboration Server and can be generated into a report that can be saved in *.txt format.

To view the System Alerts list:

- 1 Click the red blinking **System Alerts** indication bar.

The **Active Alarms** pane opens. This screen indicates what events have not been resolved.

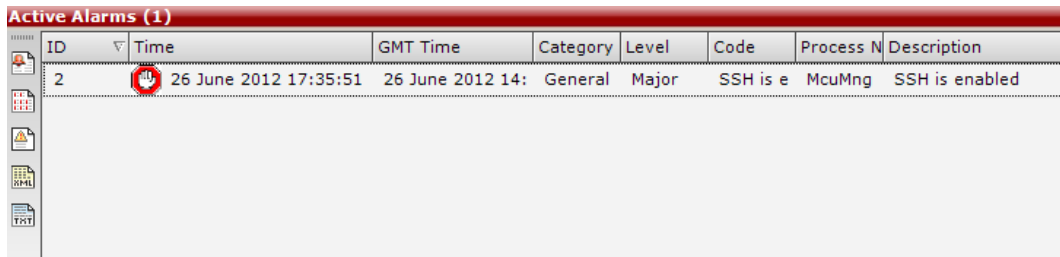




The screenshot shows a window titled "Active Alarms (1)" with a table containing one row of data. The table has columns for ID, Time, GMT Time, Category, Level, Code, Process Name, and Description. A red circle highlights the ID column value '2'.

ID	Time	GMT Time	Category	Level	Code	Process Name	Description
2	26 June 2012 17:35:51	26 June 2012 14:	General	Major	SSH is e	McuMng	SSH is enabled

The following columns appear in the **Active Alarms** pane:

Active Alarms Pane Columns

Field	Description
ID	An identifying number assigned to the system alert.
Time	Lists the local date and time that the error occurred. This column also includes the icon indicating the error level (as listed in the level column).
GMT Time	Lists the date and time according to Greenwich Mean Time (GMT) that the error occurred.
Category	Lists the type of error. The following categories may be listed: <ul style="list-style-type: none"> • File indicates a problem in one of the files stored on the MCU's hard disk. • Card indicates problems with a card. • Exception indicates software errors. • General indicates a general error. • Assert indicates internal software errors that are reported by the software program. • Startup indicates errors that occurred during system startup. • Unit indicates problems with a unit. • MPL indicates an error related to a Shelf Management component (MPL component) other than an MPM, RTM or switch board (Collaboration Server 2000/4000 only).
Level	Indicates the severity of the problem, or the type of event. There are three fault level indicators: <ul style="list-style-type: none">  - Major Error  - System Message  - Startup Event
Code	Indicates the problem, as indicated by the error category.
Process Name	Lists the type of functional process involved.
Description	When applicable, displays a more detailed explanation of the cause of the problem.

For more information about the Active Alarms, see [Appendix B - Active Alarms](#).

- 2 Click one of the following buttons to view its report in the **System Alerts** pane:

System Alerts Buttons

Active Alarms (default) – this is the default reports list that is displayed when clicking the System Alerts indication bar. It displays the current system errors and is a quick indicator of the MCU status.





Faults Full List - A list of all system faults.
Note: Viewed when logged in as a special support user.

System Alerts Buttons



Faults List – a list of faults that occurred previously (whether they were solved or not) for support or debugging purposes.

3 To save the **Active Alarms, Faults Full List** or **Faults** report:

- To a text file, click **Save to Text** .
- To an XML file, click **Save to XML** .



The **Save to XML** button is only available when logged in as a special support user.

The **Save** dialog window opens.

- 4 Select a destination folder, and enter the file name.
- 5 Click **Save**.

Participant Alerts

Participant Alerts enables users, participants and conferences to be prompted and currently connected. This includes all participants that are disconnected, idle, on standby or waiting for dial-in. Alerts are intended for users or administrators to quickly see all participants that need their attention.

To view the Participants Alerts list:




- 1 Click the red blinking **Participants Alerts** indication bar.

The **Participant Alerts** pane opens.

Conference	Name	Status	Disconnection Ti	Role	IP Address/Phone	Alias Name/SIP	Network	Dialing Direc
Marc	HDX 4000 T	Awaiting Individ			10.253.72.24		SIP	Dial out



The **Participant Alerts** pane displays similar properties to that of the **Participant List** pane. For more information, see [Participant Level Monitoring](#).

- 2 To resolve participant issues that created the Participant Alerts, the administrator can either **Connect** , **Disconnect**  or **Delete**  a participant.

RMX Time

To ensure accurate conference scheduling, the MCU has an internal clock that can function in standalone mode, or in synchronization with up to three Network Time Protocol (NTP) servers.

NTP Servers can be used if:

- NTP servers use Version 4 as it is the only supported protocol.
- If applicable, daylight saving adjustments must be implemented by the administrator whether the MCU is in standalone mode or synchronized with NTP Servers.

Altering the clock

The MCU's date and time can be set manually or enabled to synchronize with external NTP servers.

To Alter the MCU Time:

- 1 On the Collaboration Server menu, select **Setup > RMX Time**.

The **RMX Time** dialog box opens.

- 2 View or modify the following fields:

RMX Time – Fields Properties

Field	Description
GMT Date	The date at Greenwich, UK.
Local Time	The MCU's local time settings, are calculated from the GMT Time and the GMT Offset .
GMT Time	The MCU's current GMT Time settings. Select the Up or Down arrows to alter the GMT Time on the MCU.

RMX Time – Fields Properties

Field	Description
GMT Offset	<p>The time zone difference between Greenwich and the MCU's physical location in hours and minutes.</p> <p>Select the Up or Down arrows to alter the GMT Offset time on the MCU. To enter a negative offset either type a minus in the hour box or use the down arrow and decrease the offset below zero.</p>
Retrieve Client Time	<p>Click this button to automatically update the MCU's GMT Date, Time and Offset to match that of the workstation.</p>
Use NTP Server	<p>Select this check box to synchronize the time with up to three NTP servers. When selected, the manual GMT Date and GMT Time setting options are disabled. The GMT Offset fields are still active.</p> <p>To implement this mode an external connection to an NTP server must be enabled.</p> <p>Enter the IP addresses of the required NTP servers in order of precedence. The Status field indicates whether registration with the NTP Server failed or succeeded.</p> <p>Note: The Collaboration Server will not use a time source such as a Windows-based, W32Time service (SNTP) time service. Only full-featured (below Stratum 16) NTP Servers are considered sufficiently reliable for high-accuracy timing environments.</p>
Adjust Reservations Time	<p>Use this button to adjust the start time of all the reservations in one operation. For more information see Adjusting the Start Times of all Reservations.</p> <p>Not supported in the RealPresence Collaboration Server.</p>



After resetting the MCU a delay may occur when synchronizing with the external NTP server.

Resource Management

This section describes how the MCU resources are managed by the MCU and how they are used by the MCU to connect participant to conferences.

This section describes:

- [Resource Capacity](#)
- [Flexible Resource Capacity](#)
- [Displaying the Resource Report](#)
- [MCU Resource Management by RealPresence Resource Manager, Polycom CMA and Polycom RealPresence DMA System](#)

Resource Capacity

The MCU resources are determined by the MCU type, Card Configuration Mode and the system license you have purchased. The total number of licensed resources is shown in the [System Information](#).

Collaboration Server (RMX) 2000 can include up to two media cards and Collaboration Server (RMX) 4000 can include up to four media cards. Both include one RTM-ISDN card with up to 7 E1 or 9 T1 connections.

Collaboration Server (RMX) 1800 does not contain any MPM media cards, yet it supports one media card type similar to the MPMRx card, and therefore has similar capabilities (in terms of the media card).

Collaboration Servers 1800 with 3 DSP cards and built in ISDN also support up to 4 ISDN/PSTN E1/T1 connections.

Collaboration Server (RMX) 1800 with no DSP cards does not contain DSP cards.

In AVC CP Conferencing video resources usage varies according to the video resolution used by the endpoints. The higher the video resolution (quality), the greater the amount of video resources consumed by the MCU.

For more information about Resource Capacities, see the [RealPresence® Collaboration Server \(RMX\) Hardware Guide](#) specific to your system.

Resource Usage in AVC CP Conferencing

Video resources usage varies according to the video resolution used by the endpoints. The higher the video resolution (quality), the greater the amount of video resources consumed by the MCU.

AVC Conferencing - Video Switching Resource Capacity

During a Video Switching conference, each endpoint uses one video (CIF) port.



MCUs with 500MB of memory can support a maximum of 400 simultaneous participant calls, regardless of how system resources are allocated.

MCUs with 1000MB of memory are not subject to this limitation.

MCU memory size is listed in the **Administration > System Information** properties box. For more information see [System Information](#).


Resource Usage in SVC Conferencing

During a SVC conference, each SVC-endpoint uses a video port that is equivalent to a third of HD720p30 port. When sharing content an additional video resource is used.

MCU Capacities in Mixed CP and SVC Conferencing

In a mixed CP and SVC conference, video resources are used according to the amount of both AVC and SVC participants in the conference.

The following diagram illustrates the amount of AVC to SVC port resources that are used in a mixed AVC/SVC conference:

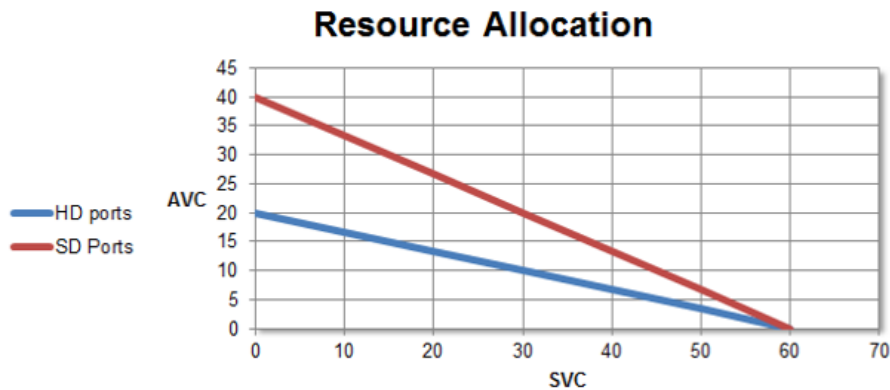

Flexible Resource Capacity

Flexible Resource Capacity™ applies to all Conferencing Modes (SVC and AVC conferencing). The resources are only set to audio and video as a pool and the system allocates the resources according to the connecting endpoints. The maximum number of resources is based on the system license, regardless of the hardware configuration of the MCU.



If Fixed Resource Capacity mode (supported in previous versions) was active at the time of an upgrade, Flexible Resource Capacity mode will automatically be enabled, the settings from the last time Flexible Resource Capacity mode active on the Collaboration Server are implemented when the upgrade is complete.

All resources are initially allocated as HD720p30 video ports. The administrator can allocate some or all of these resources as Voice resources and let the system allocate the remaining Video resources automatically as participants connect to conferences. The number of resources automatically allocated by the system resources per endpoint is according to the participant's endpoint type, capabilities and line rate.



If the system runs out of voice ports, voice endpoints cannot connect to available video ports. Conversely, video endpoints cannot connect to available voice ports.

Forcing Video Resource Allocation to CIF Resolution

You can set the MCU to allocate one CIF video resource to an endpoint, regardless of the resolution determined by the Conference Profile parameters. This forcing saves resources and enables more endpoints to connect to conferences.

The forcing is done by modifying the system configuration and it applies to all conferences running on the MCU.

You can specify the endpoint types for which resource allocation can be forced to CIF resource, enabling other types of endpoints to use higher resolutions in the same conference. For example, you can force the system to allocate one CIF video resource to CMAD and VSX endpoints while HDX endpoints can connect using SD or HD video resources.

Once the endpoint connects to the conference, its type is identified by the Collaboration Server and, if applicable, the Collaboration Server will connect it using one CIF resource, even if a higher resolution can be used.


To force CIF resource:

- 1 On the Collaboration Server menu, select **Setup > System Configuration**.

The **System Flags** dialog box opens.

- 2 In the **MCMS_PARAMETERS** tab, click **New Flag**.

The **New Flag** dialog box is displayed.

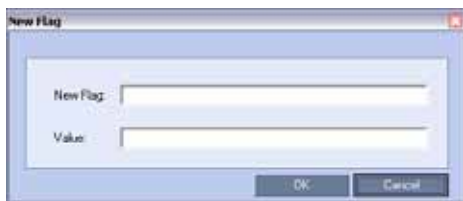

- 3 In the **New Flag** field enter the flag name: **FORCE_CIF_PORT_ALLOCATION**
- 4 In the **Value** field enter the product type to which the CIF resource should be allocated. Possible values are **VSX nnnn** where nnnn represents the model number for example, VSX 8000.
- 5 Click **OK**.

The new flag is added to the flags list.

Reset the MCU for changes to take effect. For more details, see the [Resetting the Collaboration Server](#).

To cancel the forcing of CIF resource:

- 1 On the Collaboration Server menu, select **Setup > System Configuration**.

The **System Flags** dialog box opens.

- 2 In the **MCMS_PARAMETERS** tab, select the flag **FORCE_CIF_PORT_ALLOCATION** and click **Edit Flag** or double-click it.
- 3 In the **New Value** field, clear the value entries.
- 4 Click **OK**.

Reset the MCU for changes to take effect. For more details, see the [Resetting the Collaboration Server](#).

Resource Reports

When viewing the Collaboration Server resource report, the resource allocations are described in AVC HD720p30 units.

The Resource Report also includes a graphic representation of the resource usage. One resource report is available for all resource usage including SVC-based endpoints.

Displaying the Resource Report

- 1 In the main toolbar, select **Administration > Resource Report**.

For each resource type, the Resource Report includes the following columns:


Resource Report Fields Parameters

Column	Description
Type	The type of audio/video resources available - both AVC and SVC-based endpoints (and resources).
Occupied	The number of MCU resources that are used by connected AVC and SVC-based participants or reserved for defined participants.
Free	The number of MCU resources available for connecting AVC and SVC-based endpoints.
Total	The Total column displays the total number of resources of that type as configured in the system (Occupied and Free). This number reflects the current audio/video port configuration (for AVC and SVC-based conferencing). Any changes to the resource allocation will affect the resource usage displayed in the Resource Report.


Resource Reports for Collaboration Server 1800 and 2000/4000 with MPMRx

Collaboration Servers with MPMRx media cards installed do not differentiate between Video and Voice (Audio) resources. These MCUs allocate the same amount of system resources to Voice (Audio) participants, as those allocated to CIF Video participants.

Example: A Collaboration Server with MPMRx media cards installed has 200 licensed HD720p30 resources, all of which are free.

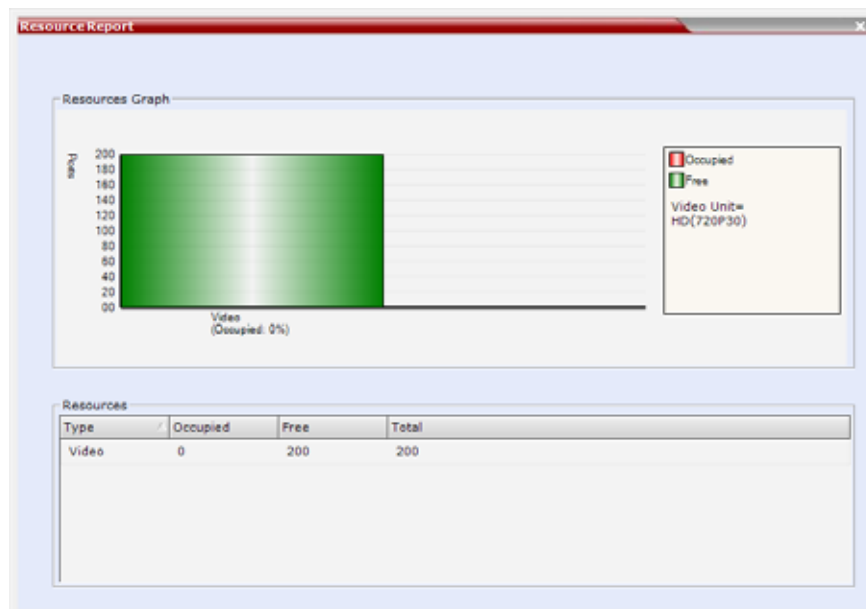

The actual number of occupied or free resources can also be displayed by moving the cursor over the columns of the bar graph. Moving the cursor over the Video bar displays the following view:

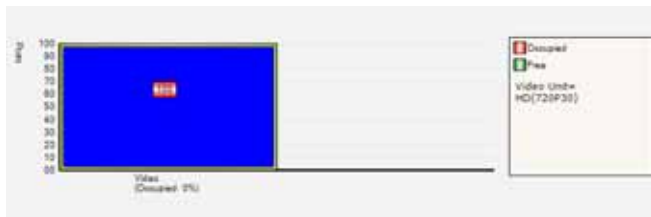

Port Gauge

The Port Gauge in the Status Bar show the numbers as they appear in the resource report. In the following example, 20 of the 400 system resources are shown as occupied.



ISDN/PSTN

RMX 1800 with 3 DSP cards with built-in ISDN supports 4 E1/T1 PRI lines.

On the RMX 2000/4000 a maximum of two RTM ISDN cards are supported, each providing connection for up to either 7 E1 or 9 T1 PRI lines.

E1 and T1 connections cannot be used simultaneously.

The following table lists the ISDN supported bit rates and their respective participant connection capacities per RTM ISDN card:

RMX 2000/4000 ISDN – E1/T1 Connection Capacity vs. Bit rate

Bit Rates (Kbps) (Bonded)	Number of Participants per RTM ISDN Card		
	E1	T1	Type
64	120	92	Voice / PSTN
128	40	40	Video
192	40	40	
256	40	40	
320	40	40	
384	34	34	
512	25	25	
768	17	17	
1152	11	11	
1472	9	9	
1536	8	8	
1920	7	6	

If the conference bit rate is above 128Kbps but does not match any of the bonded bit rates, participants are connected at the highest bonded bit rate that is less than the conference bit rate. For example: If the conference bit rate is 1024Kbps, the participant is connected at 768Kbps

MCU Resource Management by RealPresence Resource Manager, and Polycom RealPresence DMA System

When the RealPresence Resource Manager, and Polycom RealPresence DMA system are part of the solution, following a request by the RealPresence Resource Manager and Polycom RealPresence DMA system, the MCU will send updates on resource usage to the DMA, which updates its own resource usage for the MCU. This provides better management of the Collaboration Server resources by the RealPresence Resource Manager, and Polycom RealPresence DMA system.

Guidelines

- Following requests sent by the RealPresence DMA system, the Collaboration Server will send the number of occupied resources for a conference or total for the MCU. In Flexible Resource Capacity Mode, the DMA receive information about how many Video (CIF) and Audio resources are occupied per conference or MCU according to the request type sent by the DMA.
- Occupied resources are resources that are connected to ongoing conferences. Disconnected endpoints in an ongoing conference are not counted as occupied resources.
- An ongoing conference that does not include participants and the **Send Content to Legacy Endpoints** option is disabled does not occupy resources. If the **Send Content to Legacy Endpoints** option is enabled, the conference occupies one SD resource.

Port Usage Threshold

The Collaboration Server can be set to alert the administrator to potential port capacity shortages. A capacity usage threshold can be set as a percentage of the total number of licensed ports in the system.

When the threshold is exceeded, a System Alert is generated.

The default port capacity usage threshold is 80%.


The administrator can monitor the MCU's port capacity usage via the Port Gauge in the Status Bar of the Collaboration Server Web Client.

Setting the Port Usage Threshold

To Set the Port Usage Threshold:

- 1 In the **Setup** menu, click **Port Gauge** to open the **Port Gauge** dialog box.

Port Gauge Threshold Setting - RealPresence Collaboration Server 1800 or 2000/4000 with MPMRx

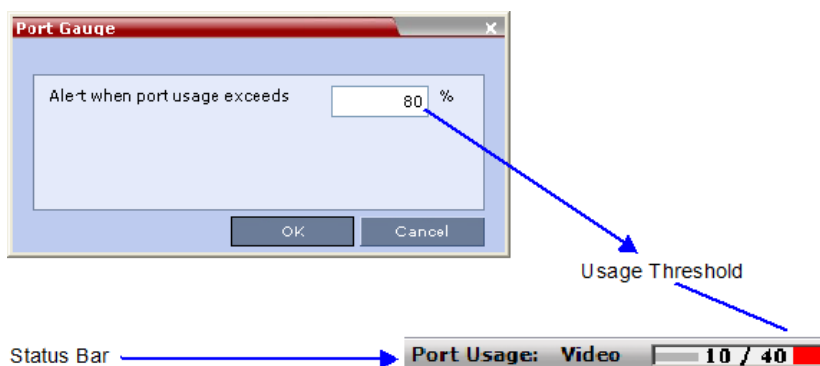


- 2 Enter the value for the percentage capacity usage threshold.
The value is applied to the Audio and video resources according to the Video/Voice Port Configuration.
The high Port Usage threshold represents a percentage of the total number of video or voice ports available. It is set to indicate when resource usage is approaching its maximum, resulting in no free resources to run additional conferences. When port usage reaches or exceeds the threshold, the red area of the gauge flashes. The default port usage threshold is 80%.
- 3 Click **OK**.

SIP Dial-in Busy Notification

When the system flag **SEND_SIP_BUSY_UPON_RESOURCE_THRESHOLD** is set to **YES** (NO is the default), it enables the MCU to send a busy notification to a SIP audio endpoint or a SIP device when dialing in to the MCU whose audio resource usage exceeded the Port Usage threshold.

The Collaboration Server will send a SIP busy response to SIP audio endpoints when:

- The system flag **SEND_SIP_BUSY_UPON_RESOURCE_THRESHOLD** is set to **YES** (NO is the default)
- The port usage threshold for Audio resources is exceeded. The threshold is defined in the **Setup > Port Gauge** dialog box.

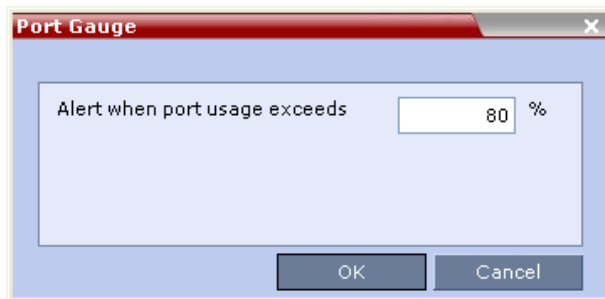


When the flag is set to YES, the system will allow SIP audio endpoints to connect to the MCU until the Port Usage threshold is reached. Once this threshold is exceeded, the SIP audio endpoints will not be able to connect, ensuring that the remaining system resources can be used by all other connections, including SIP video, H.323 cascaded links, and ISDN video. When the call is rejected by the MCU because of lack of resources, the appropriate indication will be sent by the MCU to the SIP audio endpoint.

For example, if the Port Gauge threshold is set to 80%, when 80% of the Audio resources are used, the system will not allow additional SIP audio endpoints to connect and will send a busy notification to the endpoint.

This does not affect the video resources usage.

Port Usage Gauges

The Port Usage Gauges are displayed in the Status Bar at the bottom of the RMX Web Client screen.

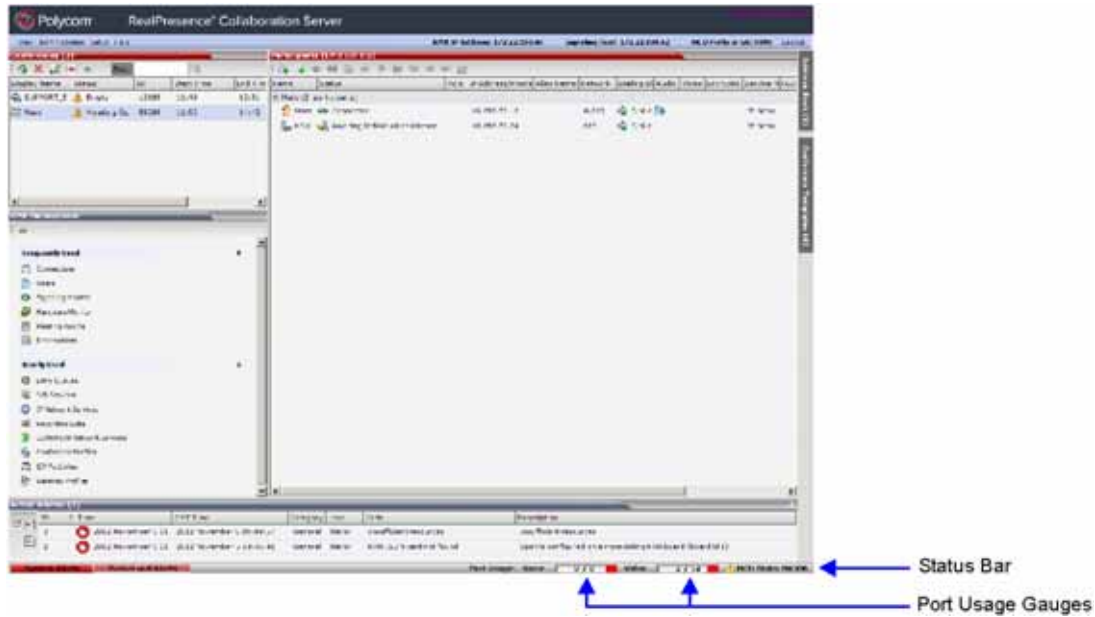


Port Usage Gauges

In the RealPresence Collaboration Server 1800 and the RealPresence Collaboration Server (RMX) 2000/4000 with an MPMRx card, the Port Usage Gauge displays for the selected MCU:

- The total number of Video ports in the system.
- The number of Video ports in use.
- The High Port Usage threshold.

Port Gauges - RealPresence Collaboration Server 1800 and 2000/4000 with MPMRx

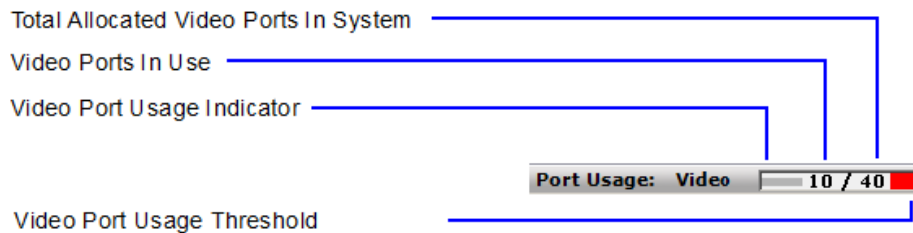

The basic unit used for reporting resource usage in the Port Gauges is HD720p30. Results are rounded to the nearest integer.


System Information

System Information includes License Information and general system information, such as system memory size and Media Card Configuration Mode.

To view the System Information properties box:

- » On the Collaboration Server menu, select **Administration > System Information**.

The **System Information** dialog box is displayed.

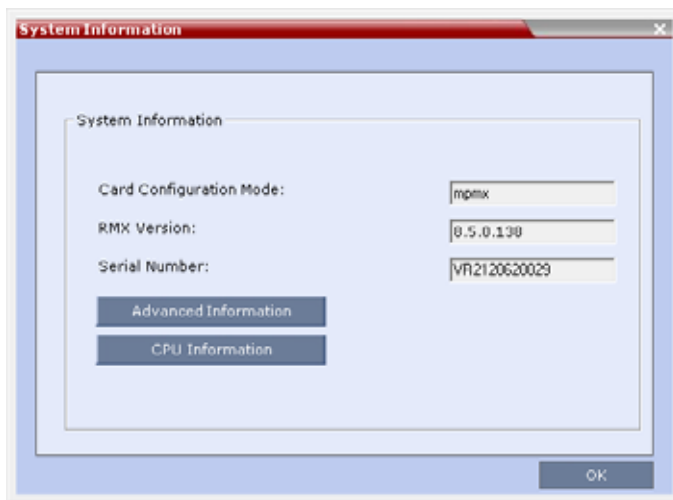

The following information is displayed:

System Information

Field	Description
Card Configuration Mode (N/A for Collaboration Server 1800)	Indicates the MCU configuration as derived from the installed media cards: <ul style="list-style-type: none"> • MPMRx: Only MPMRx cards are supported from version 8.6.
RMX Version	Displays the System Software Version of the MCU.
Serial Number	Displays the Serial Number of the Collaboration Server unit.

SNMP (Simple Network Management Protocol)

SNMP enables managing and monitoring of the MCU status by external managing systems, such as HP OpenView or through web applications.

The Collaboration Server's implementation of SNMPv3 is FIPS 140 compliant.

MIBs (Management Information Base)

MIBs are a collection of definitions, which define the properties of the managed object within the device to be managed. Every managed device keeps a database of values for each of the definitions written in the MIB.

The SNMP systems poll the MCU according to the MIB definitions.

Traps

The MCU is able to send Traps to different managers. Traps are messages that are sent by the MCU to the SNMP Manager when an event such as MCU Reset occurs.

Guidelines

- Version 1, Version 2 and Version 3 traps are supported.
- When SNMPv3 is selected only SNMPv3 Queries and Traps receive responses.
- A mixture of Version 1, Version 2 and Version 3 traps is not permitted.
- In Ultra Secure Mode:
 - Version 3 is the default for both SNMP Agent Version and SNMP Trap Version.
 - The default Authentication Protocol is SHA
 - The default Privacy Protocol is AES.

MIB Files

The H.341 standard defines the MIBs that H.320 and H.323 MCUs must comply with. In addition, other MIBs should also be supported, such as MIB-II and the ENTITY MIB, which are common to all network entities.

The MIBs are contained in files in the SNMP MIBS sub-directory of the Collaboration Server root directory. The files should be loaded to the SNMP external system and compiled within that application. Only then can the SNMP external application perform the required monitoring tasks.



The MULTI-MEDIA_MIB_TC must be compiled before compiling the other MIBs.

Private MIBs

- RMX-MIB (RMX-MIB.MIB)
 - Contains the statuses of the Collaboration Server: Startup, Normal and Major.
 - Contains all the Alarms of the Collaboration Server that are sent to the SNMP Manager.

Support for MIB-II Sections

The following table details the MIB-II sections that are supported:

Supported MIB-II Sections

Section	Object Identifier
system	mib-2 1
interfaces	mib-2 2
ip	mib-2 4

The Alarm-MIB

MIB used to send alarms. When a trap is sent, the Alarm-MIB is used to send it.

H.341-MIB (H.341 – H.323)

- Gives the address of the gatekeeper.
- Supports H.341-MIB of SNMP events of H.323.

Standard MIBs

This section describes the MIBs that are included with the Collaboration Server. These MIBs define the various parameters that can be monitored, and their acceptable values.

Standard MIBs

MIB Name	Description
MULTI-MEDIA-MIB-TC (MULTIMTC.MIB)	Defines a set of textual conventions used within the set of Multi Media MIB modules.
H.320ENTITY-MIB (H320-ENT.MIB)	This is a collection of common objects, which can be used in an H.320 terminal, an H.320 MCU and an H.320/H.323 gateway. These objects are arranged in three groups: Capability, Call Status, and H.221 Statistics.
H.320MCU-MIB (H320-MCU.MIB)	Used to identify managed objects for an H.320 MCU. It consists of four groups: System, Conference, Terminal, and Controls. The Conference group consists of the active conferences. The Terminal group is used to describe terminals in active MCU conferences. The Controls group enables remote management of the MCU.
H323MC-MIB (H323-MC.MIB)	Used to identify objects defined for an H.323 Multipoint Controller. It consists of six groups: System, Configuration, Conference, Statistics, Controls and Notifications. The Conference group is used to identify the active conferences in the MCU. The Notifications group allows an MCU, if enabled, to inform a remote management client of its operational status. Note: The Collaboration Server supports only one field in H.341-H323MC MIB. The Collaboration Server reports the Gatekeeper address using H.341-H323MC MIB – 323McConfigGatekeeperAddress (0.0.8.341.1.1.4.2.1.1.4) in response to a query from a manager.

Standard MIBs

MIB Name	Description
MP-MIB (H323-MP.MIB)	Used to identify objects defined for an H.323 Multipoint Processor, and consists of two groups: Configuration and Conference. The Configuration group is used to identify audio/video mix configuration counts. The Conference group describes the audio and video multi-processing operation.
MIB-II/RFC1213-MIB (RFC1213.MIB)	Holds basic network information and statistics about the following protocols: TCP, UDP, IP, ICMP and SNMP. In addition, it holds a table of interfaces that the Agent has. MIB-II also contains basic identification information for the system, such as, Product Name, Description, Location and Contact Person.
ENTITY-MIB (ENTITY.MIB)	Describes the unit physically: Number of slots, type of board in each slot, and number of ports in each slot.

Unified MIB

The Collaboration Server uses the Polycom Unified MIB, in addition to the RMX specific MIB. The Polycom Unified MIB is an MIB that is used by many Polycom products. The following table describes the information provided by the Collaboration Server in the Unified MIB.

Unified MIB SNMP Fields

Name	Type	Description
Debug	Boolean	Indicates whether the unit is in a debugging state.
IncomingCallsReqrGK	Boolean	Indicates whether a gatekeeper is required to receive incoming H.323 calls.
OutgoingCallsReqrGK	Boolean	Indicates whether a gatekeeper is required to make outgoing H.323 calls.
HDBitrateThrshld	Integer	The minimum bit rate required by endpoints in order to connect to an HD conference.
MaxCPRstln	Integer	Maximum resolution of a CP conference.
MaxCPRstlnCfg	Integer	Configured resolution for a CP conference.
EndpointDispayName	String	The name of the MCU that is displayed on the screen of endpoints that are connecting to the conference.
PALNTSC	NTSC / PAL / AUTO	The video encoding of the RMX.
SeparateMgmtNet	Boolean	Indicates whether management network separation is enabled.
NumPorts	Integer	Total number of ports.
NumVideoPorts	Integer	Number of ports configured for video.

Unified MIB SNMP Fields

Name	Type	Description
ServiceH323	Integer	Indicates the status of H.323 capabilities: 1 - The service is enabled and operational. 2 - The service is enabled but is not operational. 3 - The service is disabled.
ServiceSIP	Integer	Indicates the status of SIP capabilities: 1 - The service is enabled and operational. 2 - The service is enabled but is not operational. 3 - The service is disabled.
ServiceISDN	Integer	Indicates the status of SIP capabilities: 1 - The service is enabled and operational. 2 - The service is enabled but is not operational. 3 - The service is disabled.
RsrcAllocMode	Fixed/Flexible	The resource allocation method which determines how the system resources are allocated to the connecting endpoints.
McuSystemStatus	Integer	System State.
FanStatus	Boolean	Status of the hardware fan.
PowerSupplyStatus	Boolean	Status of the power supply.
IntegratedBoardsStatus	Boolean	Status of the integrated boards.
UltraSecureMode	Boolean	Indicates whether the RMX is operating in Ultra Secure Mode.
ChassisTemp	Integer	The temperature of the chasis.
NumPortsUsed	Integer	Number of ports currently in use.
NewCallsPerMinute	Integer	New calls in the last minute.
ScsfNewCallsPerMinute	Integer	Successful new calls in the last minute.
FldNewCallsPerMinute	Integer	Failed new calls in the last minute.
PctScsflNewCalls	Integer	Percentage of new calls in the last minute which were successful.
CallsEndedScsflPerMin	Integer	Number of calls in the last minute which ended with a success code.
CallsEndedFailedPerMin	Integer	Number of calls in the last minute which ended with a failure code.
CallsEndedScsfl	Integer	Number of calls in the last minute which ended with a success code.
CallsEndedFailed	Integer	Number of calls in the last minute which ended with a failure code.
NumActvCnfrncs	Integer	Number of active conferences.

Traps

Three types of traps are sent as follows:

- **ColdStart trap.** This is a standard trap which is sent when the MCU is reset.

An Example of a ColdStart Trap

```
coldStart notification received from: 172.22.189.154 at 5/20/2007
7:03:12 PM
Time stamp: 0 days 00h:00m:00s.00th
Agent address: 172.22.189.154 Port: 32774 Transport: IP/UDP
Protocol: SNMPv2c Notification
Manager address: 172.22.172.34 Port: 162 Transport: IP/UDP
Community: public
Enterprise: enterprises.8072.3.2.10
Bindings (3)
```

- **Authentication failure trap.** This is a standard trap which is sent when an unauthorized community tries to enter.

An Example of an Authentication Failure Trap

```
authentication Failure notification received from: 172.22.189.154 at
5/20/2007 7:33:38 PM
Time stamp: 0 days 00h:30m:27s.64th
Agent address: 172.22.189.154 Port: 32777 Transport: IP/UDP
Protocol: SNMPv2c Notification
Manager address: 172.22.172.34 Port: 162 Transport: IP/UDP
Community: public
Enterprise: enterprises.8072.3.2.10
Bindings (3)
```

- **Alarm Fault trap.** The third trap type is a family of traps defined in the POLYCOM-RMX-MIB file, these traps are associated with the Collaboration Server active alarm and clearance (proprietary SNMP trap).

An Example of an Alarm Fault Trap

```

rmxFailedConfigUserListInLinuxAlarmFault notification received
from: 172.22.189.154 at 5/20/2007 7:04:22 PM

Time stamp: 0 days 00h:01m:11s.71th
Agent address: 172.22.189.154 Port: 32777 Transport: IP/UDP
Protocol: SNMPv2c Notification
Manager address: 172.22.172.34 Port: 162 Transport: IP/UDP
Community: public
Bindings (6)
Binding #1: sysUpTime.0 *** (timeticks) 0 days 00h:01m:11s.71th
Binding #2: snmpTrapOID.0 *** (oid)
rmxFailedConfigUserListInLinuxAlarmFault
Binding #3: rmxAlarmDescription *** (octets) Insufficient resources
Binding #4: rmxActiveAlarmDateAndTime *** (octets)
2007-6-19,16:7:15.0,0:0

```

Each trap is sent with a time stamp, the agent address, and the manager address.

Status Trap

The MCU sends status traps for the status MAJOR - a trap is sent when the card/MCU status is MAJOR. All traps are considered MAJOR.

RMX MIB entities that do not generate traps.

The following table lists the entities that appear in the RMX MIB of the SNMP that do not generate traps. These traps will be displayed as Faults in the System Alerts pane (at the bottom of the RMX Web Client screen).

SNMP MIB entities that do not generate traps

Key	Description	Comment
5002	Resource process did not receive the Meeting Room list during startup.	
5004	Task terminated	
5008	Low Processing Memory	
5009	Low system Memory	
5010	High system CPU usage	
5014	High CPU utilization	
5016	Process idle	
5107	Failed to open Apache server configuration file	
5108	Failed to save Apache server configuration file	

SNMP MIB entities that do not generate traps

Key	Description	Comment
5110	A private version is loaded	
5111	NTP synchronization failure	
5112	Invalid date and time	
5116	Incorrect Ethernet Settings	
5117	Smart Report found errors on hard disk	
5118	Invalid MCU Version	
5150	Music file error	
5205	Unspecified problem	
5207	Unit not responding	
5209	Failed to mount Card folder	
5401	The Log file system is disabled	
5450	Action redirection failure	
5601	Process terminated	
5602	Terminal initiated MCU reset	
5603	User initiated MCU reset	
5604	Internal MCU reset	
5605	MCU reset	
5606	MCU Reset to enable Diagnostics mode	
5607	Startup process failure	
5801	Polycom default User exists. For security reasons, it is recommended to delete this User and create your own User.	Only in non-Ultra Secure Mode
5904	Single clock source	
5950	MCU is not configured for AVF gatekeeper mode	
5652	Hard disk error /AA_HARD_DISK_FAILURE	Not in use
5551	Port configuration modified	Not in use
5011	Used for testing the Active Alarms mechanism	Not in use
5001	License not found	Not in use (Product activation failure is trapped)

Defining the SNMP Parameters in the Collaboration Server

The SNMP option is enabled via the Collaboration Server Web Client application.

The addresses of the Managers monitoring the MCU and other security information are defined in the Collaboration Server Web Client application and are saved on the MCU's hard disk. Only users defined as Administrator can define or modify the SNMP security parameters in the RMX Web Client application.

To enable SNMP option:

- 1 In the RMX Web Client menu bar, select **Setup > SNMP**.

The **RMX SNMP Properties - Agent** dialog box is displayed.

This dialog box is used to define the basic information for this MCU that will be used by the SNMP system to identify it.


- 2 In the **Agent** dialog box, select the **SNMP Enabled** check box.
- 3 Click **Retrieve MIB Files** to obtain a file that lists the MIBs that define the properties of the object being managed.
The **Retrieve MIB Files** dialog box is displayed.
- 4 Click **Browse** and navigate to the desired directory to save the MIB files.
- 5 Click **OK**.
The path of the selected directory is displayed in the **Retrieve MIB Files** dialog box.
- 6 Click **Save**.
The MIB files are saved to the selected directory.
- 7 Click **Close** to exit the **Retrieve MIB Files** dialog box.
- 8 In the **Agent** dialog box, define the parameters that allow the SNMP Management System and its user to easily identify the MCU.

Collaboration Server-SNMP Properties - Agent Options

Field	Description
Contact person for this MCU	Type the name of the person to be contacted in the event of problems with the MCU.
MCU Location	Type the location of the MCU (address or any description).
MCU System Name	Type the MCU's system name.

9 Select the Traps tab.

The **SNMP Properties – Traps** dialog box opens.

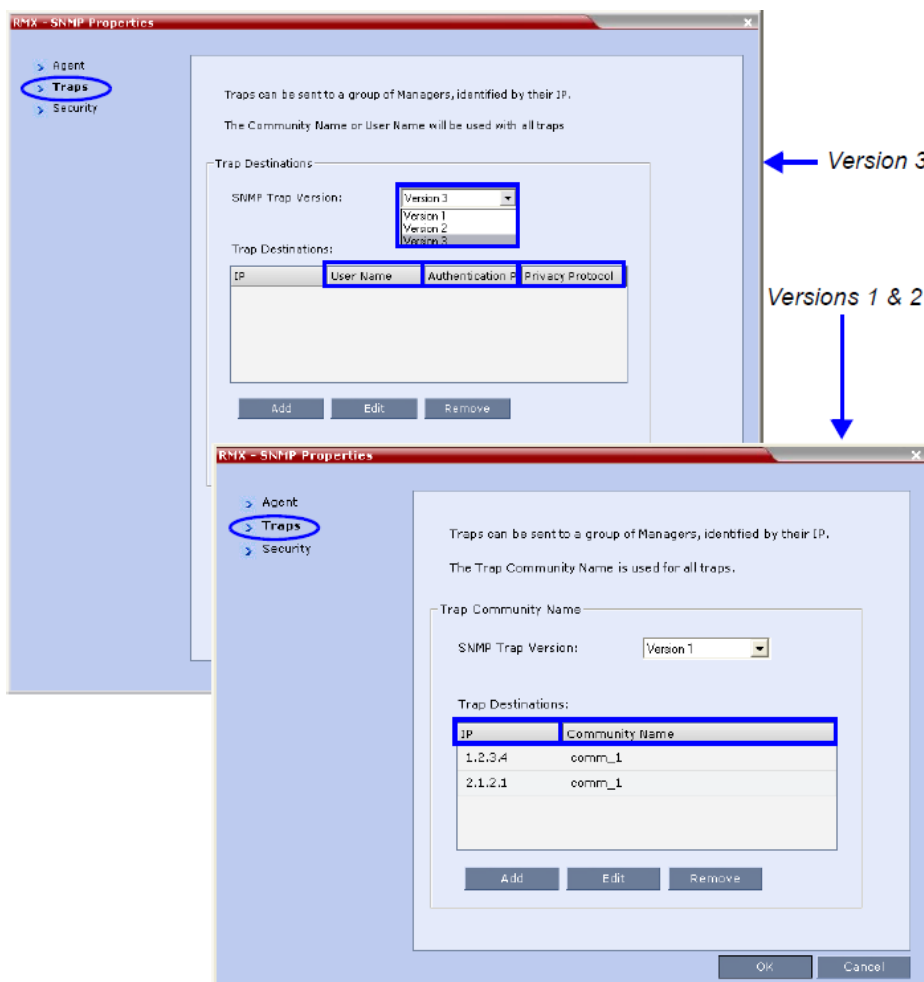


Traps are messages sent by the MCU to the SNMP Managers when events such as MCU Startup or Shutdown occur. Traps may be sent to several SNMP Managers whose IP addresses are specified in the **Trap Destinations** box.

10 Define the following parameters:**SNMPv3 - Traps**

Field	Description																		
SNMP Trap Version	<p>Specifies the version, either Version 1 2 or 3 of the traps being sent to the IP Host. Polycom software supports the standard SNMP version 1 and 2 traps, which are taken from RFC 1215, convention for defining traps for use with SNMP.</p> <p>Note: The SNMP Trap Version parameters must be defined identically in the external SNMP application.</p>																		
Trap Destination	<p>This box lists the currently defined IP addresses of the Manager terminals to which the message (trap) is sent.</p> <table border="1"> <tbody> <tr> <td>IP</td> <td>Enter the IP address of the SNMP trap recipient.</td> <td>All Versions</td> </tr> <tr> <td>Community Name</td> <td>Enter the Community Name of the manager terminal used to monitor the MCU activity</td> <td>Version 1 and Version 2</td> </tr> <tr> <td>User Name</td> <td>Enter the name of the user who is to have access to the trap.</td> <td>Version 3</td> </tr> <tr> <td>Authentication Protocol</td> <td>Enter the authentication protocol: MD5 or SHA.</td> <td></td> </tr> <tr> <td>Privacy Protocol</td> <td>Enter the privacy protocol: DES or AES.</td> <td></td> </tr> <tr> <td>Engine ID</td> <td>Enter an Engine ID to be used for both the Agent and the Trap. Default: Empty</td> <td></td> </tr> </tbody> </table>	IP	Enter the IP address of the SNMP trap recipient.	All Versions	Community Name	Enter the Community Name of the manager terminal used to monitor the MCU activity	Version 1 and Version 2	User Name	Enter the name of the user who is to have access to the trap.	Version 3	Authentication Protocol	Enter the authentication protocol: MD5 or SHA.		Privacy Protocol	Enter the privacy protocol: DES or AES.		Engine ID	Enter an Engine ID to be used for both the Agent and the Trap. Default: Empty	
IP	Enter the IP address of the SNMP trap recipient.	All Versions																	
Community Name	Enter the Community Name of the manager terminal used to monitor the MCU activity	Version 1 and Version 2																	
User Name	Enter the name of the user who is to have access to the trap.	Version 3																	
Authentication Protocol	Enter the authentication protocol: MD5 or SHA.																		
Privacy Protocol	Enter the privacy protocol: DES or AES.																		
Engine ID	Enter an Engine ID to be used for both the Agent and the Trap. Default: Empty																		

11 Click **Add** to add a new Manager terminal.

Depending on the **SNMP Trap Version** selected, one of the two following **New Trap Destination** dialog boxes opens.

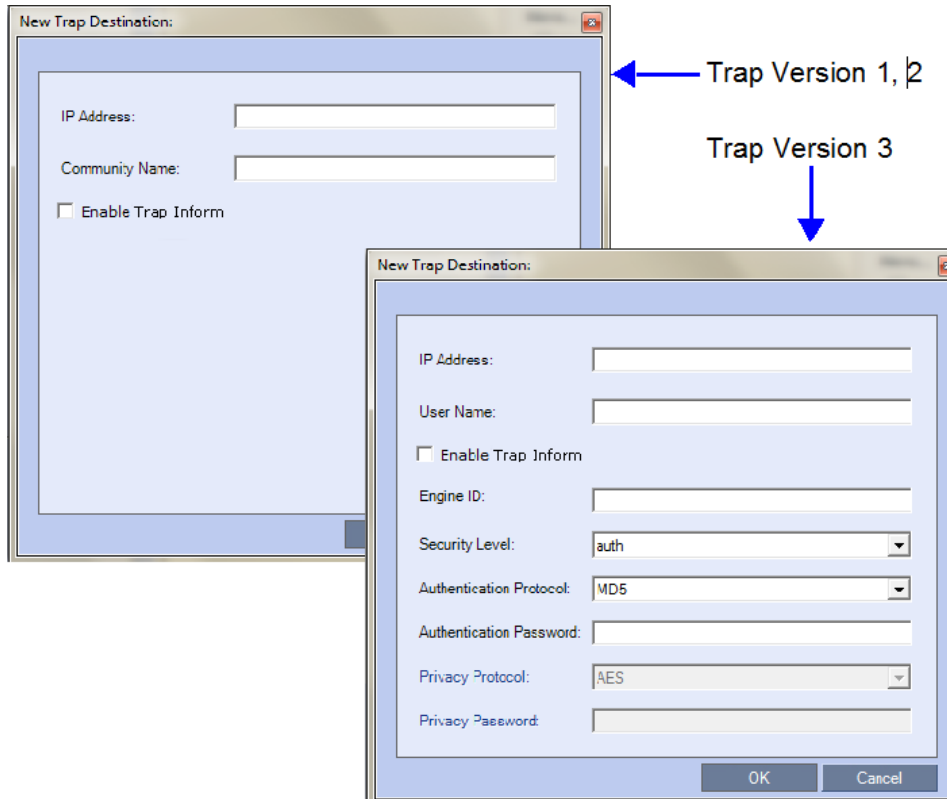

12 Define the following parameters:

SNMPv3 - Traps

Field	Description	Version
IP Address	Enter the IP address of the SNMP trap recipient.	1,2,3
Enable Trap Inform	An Inform is a Trap that requires receipt confirmation from the entity receiving the Trap. If the Engine ID field (Version 3) is empty when Enable Trap Inform has been selected, the Engine ID is set by the Client.	
Community Name	Enter the Community Name of the manager terminal used to monitor the MCU activity	1, 2

SNMPv3 - Traps

Field	Description	Version
User Name	Enter the name of the user who is to have access to the trap.	3
Engine ID	Enter an Engine ID to be used for the Trap. This field is enabled when the Enable Trap Inform check box is selected. If the Enable Trap Inform check box is cleared the Engine ID of the Agent is used. The Engine ID is comprised of up to 64 Hexadecimal characters. Default: Empty	
Security Level	Select a Security Level from the drop-down menu. Range: No Auth, No Priv; Auth, No Priv; Auth, Priv Default: Auth, Priv	
Authentication Protocol	Enter the authentication protocol: MD5 or SHA. The availability of the MD5 Authentication Protocol as a selectable option is controlled by adding the SNMP_FIPS_MODE System Flag to system.cfg and setting its value. A value of YES means that MD5 will neither be displayed as selectable option nor supported. Range: YES/NO. Default: NO.	
Authentication Password		
Privacy Protocol	Enter the privacy protocol: DES or AES. The availability of the DES Privacy Protocol as a selectable option is controlled by adding the SNMP_FIPS_MODE System Flag to system.cfg and setting its value. A value of YES means that DES will neither be displayed as a selectable option nor supported. Range: YES/NO. Default: NO.	
Privacy Password		

- 13** Type the **IP Address** and the **Community name** of the manager terminal used to monitor the MCU activity, and then click **OK**.

The **Community name** is a string of characters that will be added to the message that is sent to the external Manager terminals. This string is used to identify the message source by the external Manager terminal.


The new IP Address and Community name is added to the **Trap Destinations** box.

- a** To delete the IP Address of a Manager terminal, select the address you wish to delete, and click **Remove**.

The IP address in the **Trap Destinations** box is removed.

14 Select the **Security** tab.

The **SNMP Properties – Security** dialog box opens.

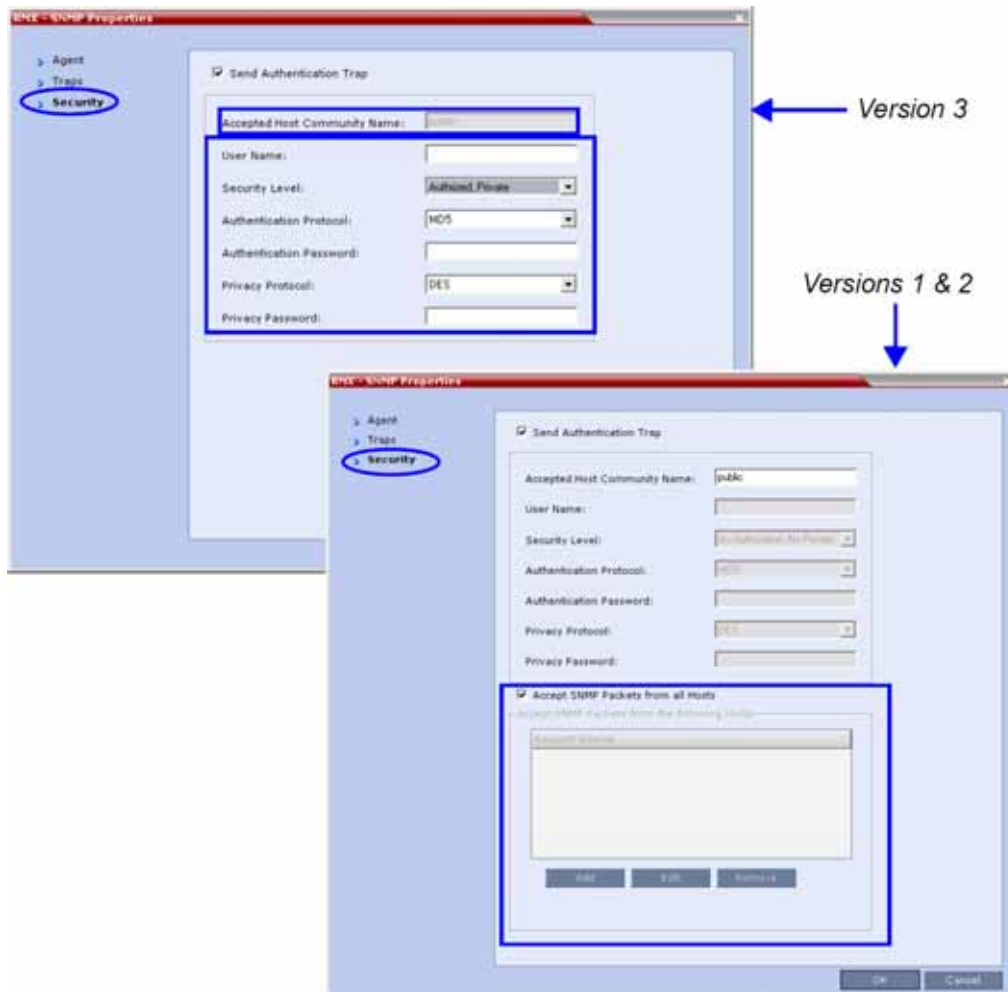

This dialog box is used to define whether the query sent to the MCU is sent from an authorized source. When the **Accept SNMP packets from all Hosts** is disabled, a valid query must contain the appropriate community string and must be sent from one of the Manager terminals whose IP address is listed in this dialog box.


15 Define the following parameters:

SNMP - Security

Field	Description	
Send Authentication Trap	Select this check box to send a message to the SNMP Manager when an unauthorized query is sent to the MCU. When cleared, no indication will be sent to the SNMP Manager.	Versions 1 & 2
Accept Host Community Name	Enter the string added to queries that are sent from the SNMP Manager to indicate that they were sent from an authorized source. Note: Queries sent with different strings will be regarded as a violation of security, and, if the Send Authentication Trap check box is selected, an appropriate message will be sent to the SNMP Manager.	
Accept SNMP Packets from all Host	Select this option if a query sent from any Manager terminal is valid. When selected, the Accept SNMP Packets from These Hosts option is disabled.	
Accept SNMP Packets from the following Hosts	Lists specific Manager terminals whose queries will be considered as valid. This option is enabled when the Accept SNMP Packets from any Host option is cleared.	
User Name	Enter a User Name of up to 48 characters Default: Empty	Version3
Security Level	Select a Security Level from the drop-down menu. Range: No Auth, No Priv; Auth, No Priv; Auth, Priv Default: Auth, Priv	
Authentication Protocol	Select the authentication protocol Range: MD5, SHA Default: MD5	These fields are enabled if Authentication is selected in the Security Level field.
Authentication Password	Enter an Authentication Password . Range: 8 - 48 characters Default: Empty	
Privacy Protocol	Select a Privacy Protocol . Range: DES, AES Default: DES	These fields are enabled if Privacy is selected in the Security Level field.
Privacy Password	Enter a Privacy Password . Range: 8 - 48 characters Default: Empty	
Engine ID	Enter an Engine ID to be used for both the Agent and the Trap. Default: Empty	

- 16 To specifically define one or more valid terminals, ensure that the **Accept SNMP Packets from any Host** option is cleared, and click **Add**.

The **Accepted Host IP Address** dialog box opens.

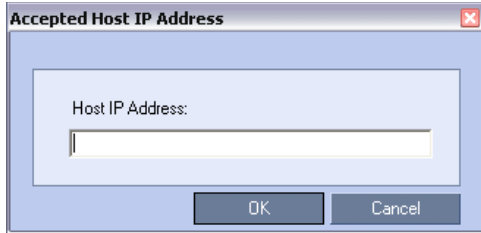

- 17 Enter the IP Address of the Manager terminal from which valid queries may be sent to the MCU, and then click **OK**.

Click **Add** to define additional **IP Addresses**.

The IP Address or Addresses are displayed in the **Accept SNMP Packets from These Hosts** box.



Queries sent from terminals not listed in the **Accept SNMP Packets from These Hosts** box are regarded as a violation of the MCU security, and if the **Send Authentication Trap** check box is selected, an appropriate message will be sent to all the terminals listed in the **SNMP Properties – Traps** dialog box.

- 18 In the **SNMP Properties - Security** dialog box, click **OK**.

Audible Alarms

In addition to the visual cues used to detect events occurring on the Collaboration Server, an audible alarm can be activated and played when participants request Operator Assistance.

Using Audible Alarms

The Audible Alarm functionality for Operator Assistance requests is enabled for each MCU in either the Collaboration Server Web Client or RMX Manager.

The Audible Alarm played when Operator Assistance is requested is enabled and selected in the **Setup > Audible Alarm > User Customization**.

When the Audible Alarm is activated, the *.wav file selected in the User Customization is played, and it is repeated according to the number of repetitions defined in the User Customization.

If more than one Collaboration Server is monitored in the RMX Manager, the Audible Alarm must be enabled separately for each Collaboration Server installed in the site/configuration. A different *.wav file can be selected for each MCU.

When multiple Audible Alarms are activated in different conferences or by multiple MCUs, the Audible Alarms are synchronized and played one after the other. It is important to note that when **Stop Repeating Alarm** is selected from the toolbar from the Collaboration Server Web Client or RMX Manager, all activated Audible Alarms are immediately halted.

Audible Alarm Permissions

An operator/administrator can configure the Request Operator Assistance audible alarm, however Users with different authorization level have different configuration capabilities as shown in the following table.

Audible Alarm Permissions

Option	Operator	Administrator
User Customization	Yes	Yes
Download Audible Alarm File	No	Yes
Stop Repeating Alarms	Yes	Yes

Stop Repeating Message

The Collaboration Server User can stop playing the audible alarm at any time. If more than one audible alarm has been activated, all activated alarms are immediately stopped.

If after stopping the Audible Alarms a new Operator Assistance request event occurs, the audible alarm is re-activated.

To stop the Audible Alarm on the Collaboration Server Client or RMX Manager:

- » On the Collaboration Server menu, select **Setup > Audible Alarms > Stop Repeating Alarm**.
When selected all audible alarms are immediately stopped.

Configuring the Audible Alarms


User Customization

The operators and administrators can:

- Enable/Disable the Audible Alarm.
- Select whether to repeat the Audible Alarm.
- Define the number of repetitions and the interval between the repetitions.

To Customize the Audio Alert on the Collaboration Server Client or RMX Manager:

- 1 On the Collaboration Server menu, select **Setup > Audible Alarms > User Customization**.
The **User Customization** window opens.

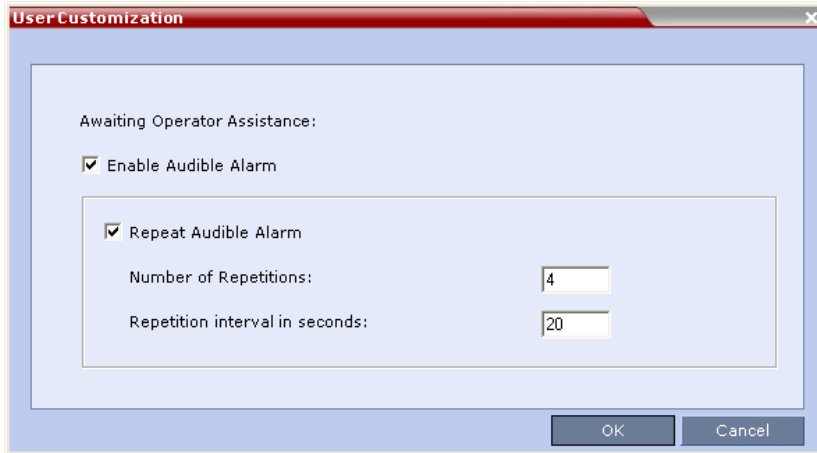

- 2 Define the following parameters:

Audible Alarm - User Customization Options

Option	Description
Enable Audible Alarm	Select this check box to enable the Audible Alarm feature and to define its properties. When this check box is cleared, the Audible Alarm functionality is disabled.
Repeat Audible Alarm	Select this check box to play the Audible Alarm repeatedly. When selected, it enables the definition of the number of repetitions and the interval between repetitions. When cleared, the Audible Alarm will not be repeated and will be played only once.
Number of Repetitions	Define the number of times the audible alarm will be played. Default number of repetitions is 4.
Repetition interval in seconds	Define the number of seconds that the system will wait before playing the Audible Alarm again. Default interval is 20 seconds.

- 3 Click **OK**.

Replacing the Audible Alarm File

Each Collaboration Server is shipped with a default tone file in *.wav format that plays a specific tone when participants request Operator Assistance. This file can be replaced by a *.wav file with your own recording. The file must be in *.wav format and its length cannot exceed one hour.

Only the User with Administrator permission can download the Audible Alarm file.

To replace the Audio file on the Collaboration Server Client or RMX Manager:


- 1 On the Collaboration Server menu, select **Setup > Audible Alarms > Download Audible Alarm File**.

The **Download Audible Alarm File** window opens.




- 2 Click **Browse** to select the audio file (*.wav) to download.

The **Open** dialog box opens.

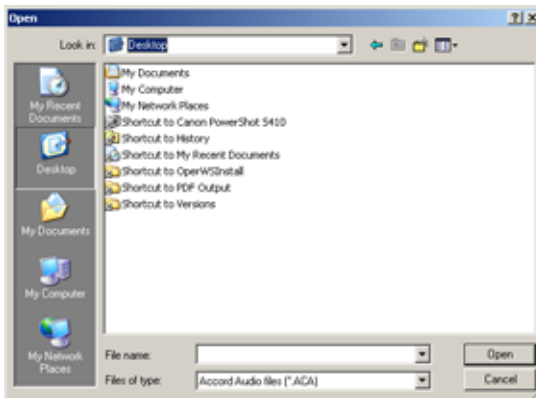

- 3 Select the appropriate *.wav file, and click **Open**.

The selected file name is displayed in the **Install Audible Alarm File** dialog box.

- 4 **Optional.** You can play the selected file or the currently used file by clicking **Play** () as follows:
 - a Click **Play Selected File** to play a file saved on your computer.
 - b Click **Play Collaboration Server File** to play the file currently saved on the Collaboration Server.
- 5 In the **Download Audible Alarm File** dialog box, click **OK** to download the file to the MCU.

The new file replaces the file stored on the MCU. If multiple Collaboration Servers are configured in the RMX Manager, the file must be downloaded to each of the required MCUs separately.

Multilingual Setting

Each supported language is represented by a country flag in the Welcome Screen and can be selected as the language for the Collaboration Server Web Client.


Customizing the Multilingual Setting

The languages available for selection in the Login screen of the RMX Web Client can be modified using the Multilingual Setting option.

To customize the Multilingual Setting:

- 1 On the Collaboration Server menu, select **Setup > Customize Display Settings > Multilingual Setting**.

The **Multilingual Setting** dialog box is displayed.

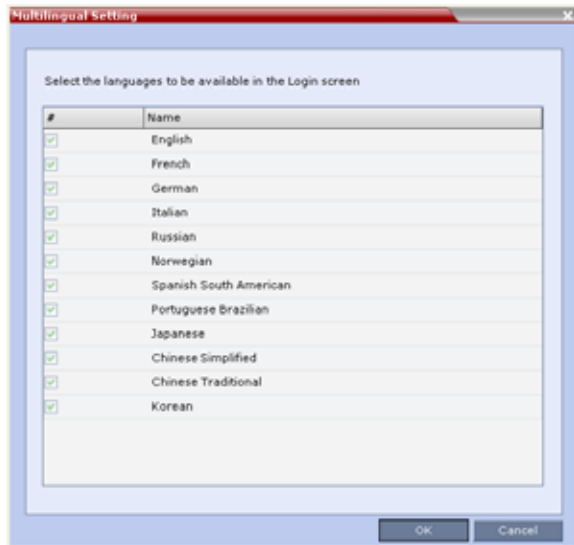

- 2 Select the check boxes of the languages to be available for selection.
- 3 Click **OK**.
- 4 Log out from the RMX Web Client and re-log in for the customization to take effect.

Banner Display and Customization


The Login Screen and Main Screen of the Collaboration Server Web Client and the RMX Manager can display informative or warning text banners. These banners can include general information or they can be cautioning users to the terms and conditions under which they may log into and access the system, as required in many secured environments.

Banner display is enabled in the **Setup > Customize Display Settings > Banners Configuration**.

The administrator can choose one of four alternative login banners to be displayed. The four alternative banners cannot be modified. A Custom banner (default) can also be defined.

The Main Page Banner is blank and can be defined.

The **Banner Configuration** dialog box allows the administrator to select a **Login Banner** from a drop-down menu.

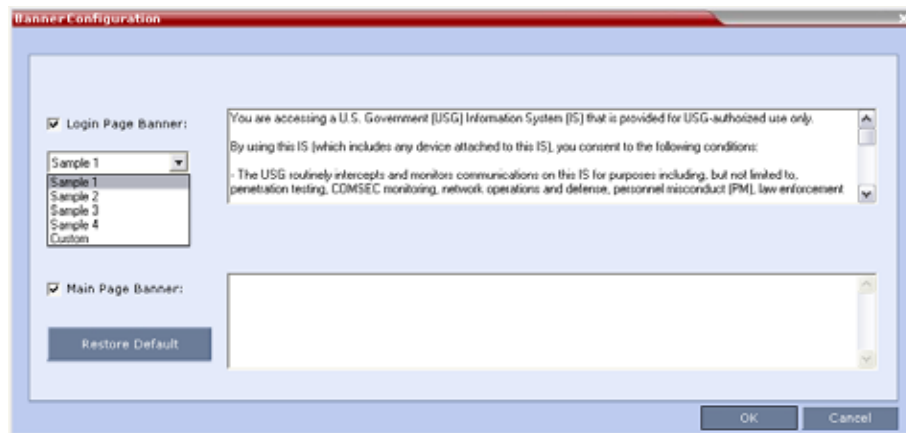

One of the following Login Banners can be selected:

- Non-Modifiable Banners
 - Sample 1
 - Sample 2
 - Sample 3
 - Sample 4
- Modifiable Banner
 - Custom (Default)

Guidelines

- The Login Banner must be acknowledged before the user is permitted to log in to the system.
- If a Custom banner has been created, and the user selects one of the alternative, non-modifiable banners the Custom banner not deleted.
- The Custom Login Banner may contain up to 1300 characters.
- An empty Login Banner is not allowed.
- Any attempt to modify a non-modifiable banner results in it automatically being copied to the Custom banner.

Non-Modifiable Banner Text

Sample 1 Banner

You are accessing a U.S. Government (USG) Information System (IS) that is provided for USG-authorized use only.

By using this IS (which includes any device attached to this IS), you consent to the following conditions:

- The USG routinely intercepts and monitors communications on this IS for purposes including, but not limited to, penetration testing, COMSEC monitoring, network operations and defense, personnel misconduct (PM), law enforcement (LE), and counterintelligence (CI) investigations.
- At any time, the USG may inspect and seize data stored on this IS.
- Communications using, or data stored on, this IS are not private, are subject to routine monitoring, interception, and search, and may be disclosed or used for any USG authorized purpose.
- This IS includes security measures (e.g., authentication and access controls) to protect USG interests--not for your personal benefit or privacy.
- Notwithstanding the above, using this IS does not constitute consent to PM, LE or CI investigative searching or monitoring of the content of privileged communications, or work product, related to personal representation or services by attorneys, psychotherapists, or clergy, and their assistants. Such communications and work product are private and confidential. See User Agreement for details.

Sample 2 Banner

This system is for the use of authorized users only. Individuals using this computer system without authority, or in excess of their authority, are subject to having all of their activities on this system monitored and recorded by systems personnel. In the course of monitoring individuals improperly using this system, or in the course of system maintenance, the activities of authorized users also may be monitored. Anyone using this system expressly consents to such monitoring and is advised that if such monitoring reveals possible criminal activity, system personnel may provide the evidence of such monitoring to law enforcement officials.

Sample 3 Banner

You are about to access a system that is intended for authorized users only. You should have no expectation of privacy in your use of this system. Use of this system constitutes consent to monitoring, retrieval, and disclosure of any information stored within the system for any purpose including criminal prosecution.

Sample 4 Banner

This computer system including all related equipment, network devices (specifically including Internet access), is provided only for authorized use. All computer systems may be monitored for all lawful purposes, including ensuring that their use is authorized, for management of the system, to facilitate protection against unauthorized access, and to verify security procedures, survivability and operational security. Monitoring includes active attacks by authorized personnel and their entities to test or verify the security of the system. During monitoring, information may be examined, recorded, copied and used for authorized purposes. All information including personal information, placed on or sent over this system may be monitored. Use of this system, authorized or unauthorized, constitutes consent to monitoring of this system. Unauthorized use may subject you to criminal prosecution. Evidence of any such unauthorized use collected during monitoring may be used for administrative, criminal or other adverse action. Use of this system constitutes consent to monitoring for these purposes.


Customizing Banners

The Login and Main Screen banners can be customized to display conference information, assistance information or warning text as may be required in Maximum Security Environments.

To customize the banners:

- 1 In the Collaboration Server menu, select **Setup > Customize Display Settings > Banners Configuration**.

The **Banners Configuration** dialog box opens.

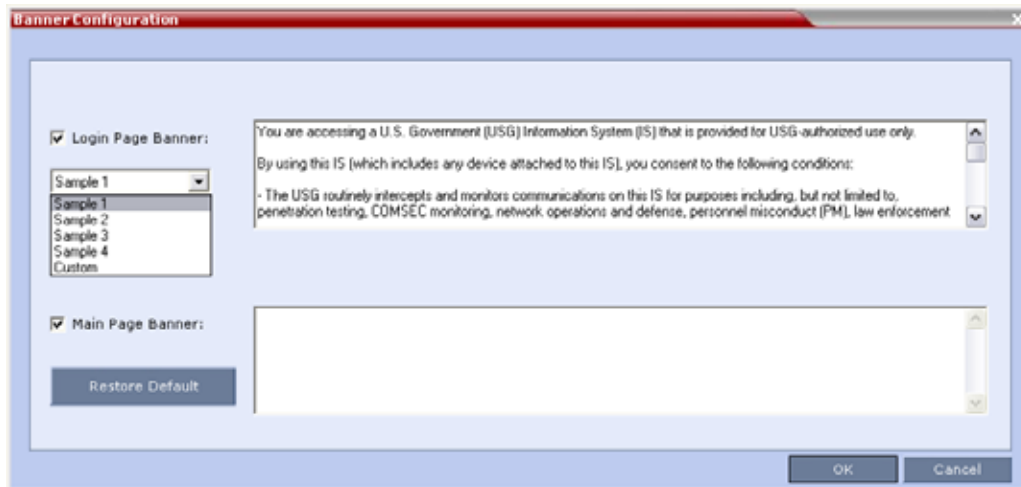

- 2 Customize the banners by modifying the following fields:

Banner Configuration

Field	Description		
	Check Box	Text Field	Restore Default Button
Login Page Banner	Select or clear the check box to enable or disable the display of the banner.	Edit the text in this field to meet local requirements: <ul style="list-style-type: none"> • Banner content is multilingual and uses Unicode, UTF-8 encoding. All text and special characters can be used. 	Click the button to restore the default text to the banner
Main Page Banner		<ul style="list-style-type: none"> • Maximum banner size is 100KB. 	

- 3 Click **OK**.

Banner Display

Login Screen Banner


The Login screen banner can display any text, for example the terms and conditions for system usage. The user must acknowledge that the information was read and click **Accept** to proceed to the Login screen as shown in the following screen:



When the Collaboration Server is configured to work in Ultra Secure Mode, such as Maximum Security Environments, the display banner includes the terms and conditions for system usage as detailed in the default text: contained in Sample Banner 1.

Main Screen Banner

The Main Screen banner is displayed at the bottom of the screen:

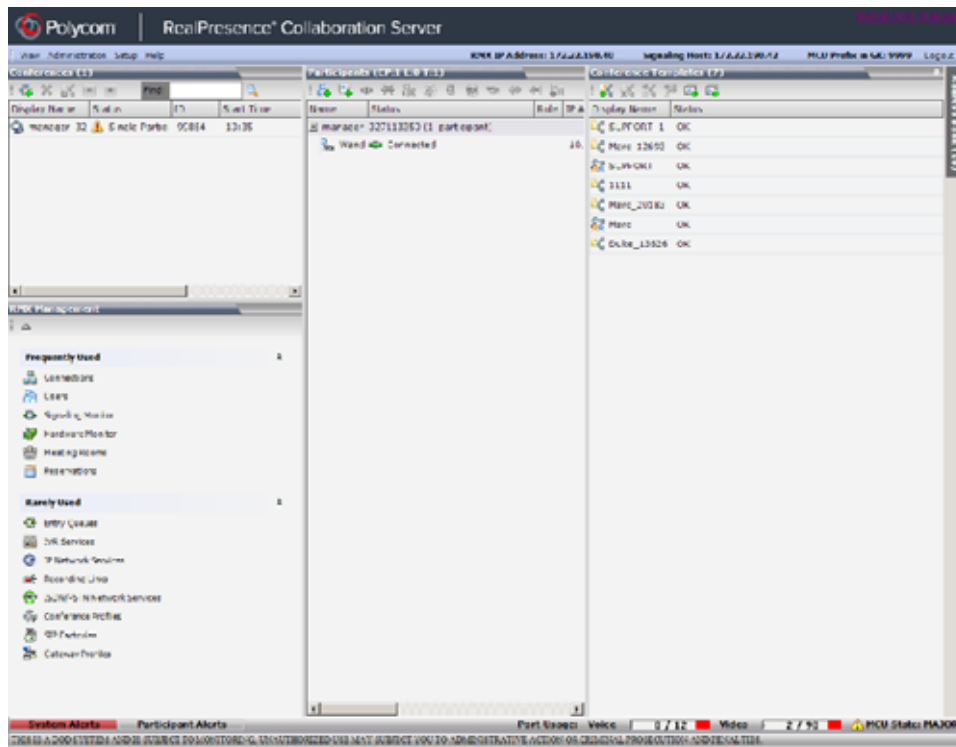

When the Collaboration Server is configured to work in Maximum Security Environments with banner display enabled, the display banner includes the following default text:

THIS IS A DOD SYSTEM AND IS SUBJECT TO MONITORING, UNAUTHORIZED USE MAY SUBJECT YOU TO ADMINISTRATIVE ACTION OR CRIMINAL PROSECUTION AND PENALTIES.

Software Management

The Software Management menu is used to backup and restore the Collaboration Server's configuration files and to download MCU software.

Backup and Restore Guidelines

- Direct access to the Collaboration Server file system is disabled in both Ultra Secure Mode and standard security mode.
- System Backup can only be performed by an administrator.
- The System Backup procedure creates a single backup file that can be viewed or modified only by developers.
- A System Backup file from one system can be restored on another system.



This applies only to one RealPresence Collaboration Server (RMX) 1800/2000/4000 system to another. Do not use a backup file from the RealPresence Collaboration Server (RMX) 1800/2000/4000 on any other model.

- To ensure file system consistency, do not perform any configuration changes as the system does not suspended them during the backup procedure.
- The following parameters, settings and files are backed up:
 - MCMS configuration files (/mcms/Cfg):
 - Network and service configurations,
 - Rooms,
 - Profiles
 - Reservations
 - System Flags
 - Resource Allocation
 - IVR messages, music
 - Collaboration Server Web Client user setting - fonts, windows
 - Collaboration Server Web Client global settings – notes, address book, language
 - Private keys and certificates (TLS)
 - Conference participant settings
 - Operation DB (administrator list)
 - SNMP settings
 - Time configuration
- CDR files are not included in the backup process and should be backed up manually by saving the CDR files to a destination device.

Using Software Management

To backup configuration files:

- 1 On the Collaboration Server menu, select **Administration > Software Management > Backup Configuration**.

The **Backup Configuration** dialog box opens.



- 2 Click **Browse**.
The **Browse To File** dialog box opens.
- 3 Select the **Backup Directory Path** and then click **Backup**.



When the Collaboration Server system backs up the current configuration, if any changes occur immediately or during the request, then additional changes are not registered.

To restore configuration files:

- 1 On the Collaboration Server menu, select **Administration > Software Management > Restore Configuration**.
- 2 Browse to the **Restore Directory Path** where the backed up configuration files are stored and then click **Restore**.

To download MCU software files:

- 1 On the Collaboration Server menu, select **Administration > Software Management > Software Download**.
- 2 Browse to the **Install Path** and then click **Install**.

Ping the Collaboration Server

The Ping administration tool enables the Collaboration Server Signaling Host to test network connectivity by Pinging IP addresses.

Guidelines


- The IP addressing mode can be either IPv4 or IPv6.
- Both explicit IP addresses and Host Names are supported.
- The Collaboration Server Web Client blocks any attempt to issue another Ping command before the current Ping command has completed. Multiple Ping commands issued simultaneously from multiple Collaboration Server Web Clients are also blocked.

Using Ping

To Ping a network entity from the Collaboration Server:

- 1 On the Collaboration Server menu, select **Administration > Tools > Ping**.

The **Ping** dialog box is displayed:

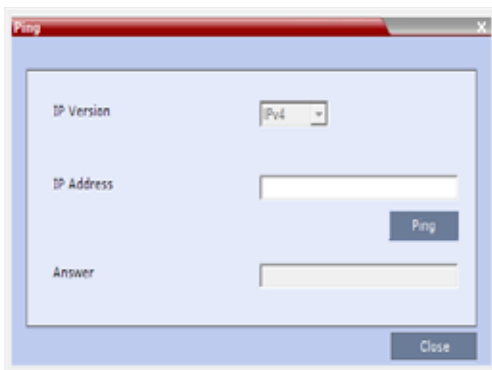

- 2 Modify or complete the following fields:

Ping Parameters

Field	Description
IP Version	Select IPv4 or IPv6 from the drop-down menu.
IP Address	Enter the IP Address of the network entity to be Pinged.

- 3 Click **Ping**.

The Ping request is sent to the IP Address of the Collaboration Server entity.

The Answer is either:

➤ **OK**

or

➤ **FAILED**

Notification Settings

The Collaboration Server can display notifications when:


- A new Collaboration Server user connects to the MCU.
- A new conference is started.
- Not all defined participants are connected to the conference or when a single participant is connected.
- A change in the MCU status occurs and an alarm is added to the alarms list.

A welcome message is displayed to the Collaboration Server user upon connection.

To configure the notifications:

- 1 On the Collaboration Server menu, select **Setup > Notification Settings**.

The **Notification Settings** dialog box is displayed.

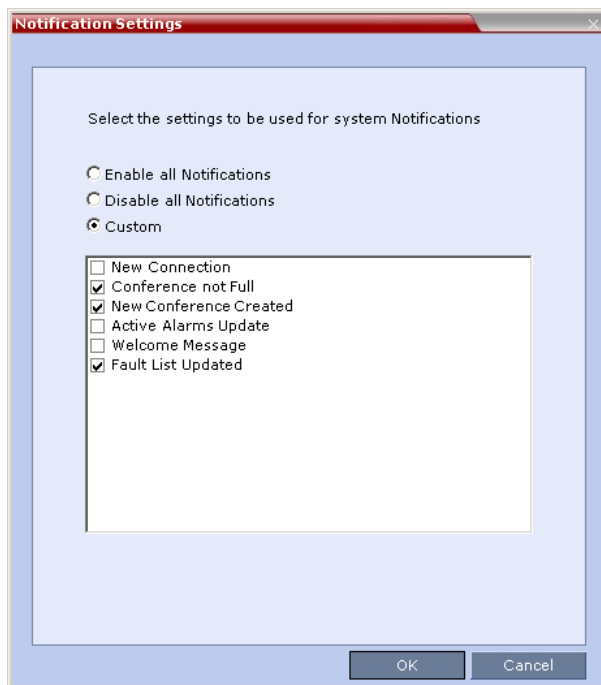

The following notification options are displayed.

Notification Settings Parameters

Field	Description
New Connection	Notification of a new user/administrator connecting to the Collaboration Server.
New Conference Created	New conference has been created.
Conference Not Full	The conference is not full and additional participants are defined for the conference.
Welcome Message	A welcome message after user/administrator logon.

Notification Settings Parameters

Field	Description
Active Alarms Update	Updates you of any new alarm that occurred.
Fault List Updated	Updates you when the faults list is updated (new faults are added or existing faults are removed).

- 2 Enable/Disable All Notifications or **Custom** to select specific notifications to display.
- 3 Click **OK**.

Logger Diagnostic Files


The Logger utility is a troubleshooting tool that continually records MCU system messages and saves them to files in the MCU hard drive. For each time interval defined in the system, a different data file is created. The files may be retrieved from the hard drive for off-line analysis and debugging purposes.

The Logger utility is activated at the MCU startup. The Logger is disabled when the MCU is reset manually or when there is a problem with the Logger utility, e.g. errors on the hard drive where files are saved. In such cases, data cannot be retrieved.

When the MCU is reset via the Collaboration Server, the files are saved on the MCU hard drive.

To access the Logger Diagnostic Files:

- » On the Collaboration Server menu, select **Administration > Tools > Logger Diagnostic Files**.

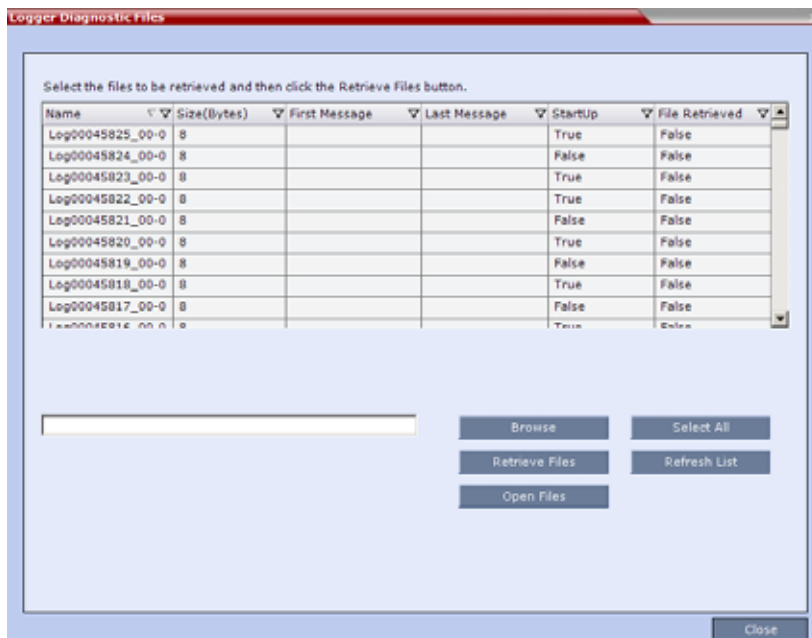

The following tasks can be performed:

Diagnostic File Button Options

Button	Description
Refresh List	Refreshes the list and adds newly generated logger files.
Select All	Selects all the logger files listed.
Browse	Selects the destination folder for download.
Retrieve Files	Saves files to the destination folder.

When retrieved, the log file name structure is as follows:

- Sequence number (starting with 1)
- Date and Time of first message
- Date and Time of last message
- File size
- Special information about the data, such as Startup

File name structure:

Log_SNxxxxxxxxxx_FMDddmmyyy_FMThhmm_LMDddmmyyyy_LMThhmm_SZxxxxxxxxxx_SUY.log

File name format:

- SN = Sequence Number
- FM = First Message, date and time
- LM = Last Message, date and time
- SZ = Size
- SU = Startup (Y/N) during the log file duration


Example:

Log_SN0000000002_FMD06032007_FMT083933_LMD06032007_LMT084356_SZ184951_SUY.log.

To Retrieve the Logger Files:

- 1 Select the log files to retrieve. Multiple selections of files are enabled using standard Windows conventions.
- 2 In the **Logger Diagnostic Files** dialog box, click **Browse**.
- 3 In the **Browse for Folder** window, select the directory location to save the Logger files and click **OK**. You will return to the **Logger Diagnostic Files** dialog box.

4 Click **Retrieve Files**.

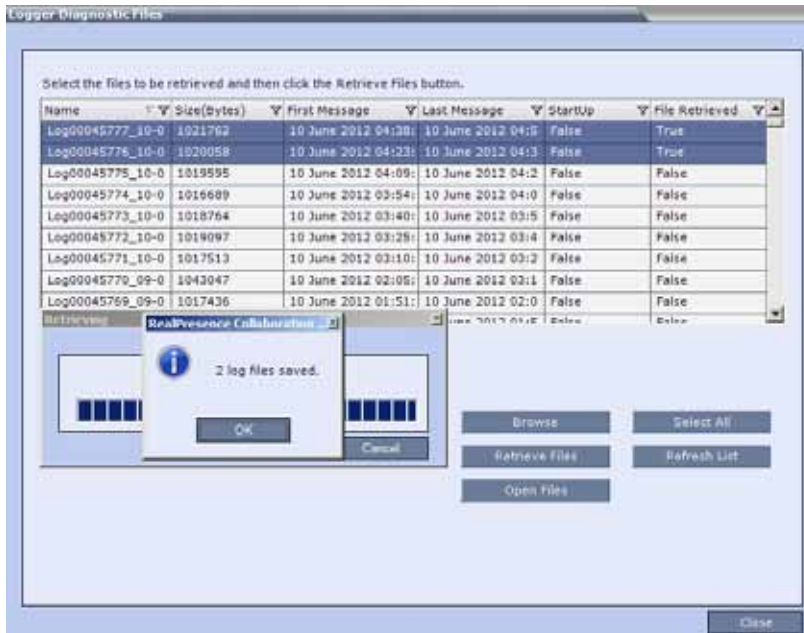

The log files (in *.txt format) are saved to the defined directory and a confirmation caption box is displayed indicating a successful retrieval of the log files.

To View the Logger Files:

To analyze the log files generated by the system, open the retrieved *.txt files in any text editor application, i.e. Notepad, Textpad or MS Word.

- 1 Using Windows Explorer, browse to the directory containing the retrieved log files.
- 2 Use any text editor application to open the log file(s).

Information Collector

Standard Security Mode

The Information Collector comprehensively attains all information from all the MCU internal entities for data analysis. That data, stored in a central repository, is logged from the following system components:

- System Log Files
- CDR
- OS (Core dumps, CFG - DNS, DHCP, NTP, kernel state, event logs)
- Signaling Trace files (H.323 & SIP)
- Central Signaling logs
- Processes internal state and statistics
- Full faults
- Apache logs
- CFG directory (without IVR)
- Cards info: HW version, state and status
- SW version number

The data collected is saved into a single compressed file containing all the information from each system component in its relative format (.txt, .xml, etc.). In case the disk is malfunctioning, the file will be written to the RAM (involves only a small amount of information where the RAM size is 1/2 a gigabyte). The zipped file (info.tgz) can be opened with the following applications: WinRAR and WinZip. The entire zipped file is then sent to Polycom's Network Systems Division for analysis and troubleshooting.

Ultra Secure Mode

The Information Collector logs information from the Collaboration Server's Network Intrusion Detection System (NIDS), saving it into a compressed disk file. (If the disk malfunctions, the file is written to RAM.) The zipped file (info.tgz) can be opened with either WinRAR or WinZip. The entire zipped file can be sent to Polycom for analysis.

Network Intrusion Detection System (NIDS)

The Collaboration Server system uses iptables for access control. For each different kind of packet processing, there is a table containing chained rules for the treatment of packets. Every network packet arriving at or leaving from the Collaboration Server must pass the rules applicable to it.

Depending on the nature of the suspect packets, the rules may reject, drop, or limit their arrival rate (dropping the rest).

The Collaboration Server maintains a log that includes all unpermitted access attempts blocked by the fire wall.

Unpermitted access includes:

- Access to ports which are not opened on the Collaboration Server.
- Invalid access to open ports.

Using the Information Collector

When the Information Collector is used the following steps are performed:

- **Step 1: Creating** the Information Collector file.
- **Step 2: Saving** the Information Collector file.
- **Step 3: Viewing** the information in the Information Collector file.

Step 1: Creating the Information Collector Compressed File

To create the compressed file:

- 1 In the Collaboration Server menu, select **Administration > Tools > Information Collector**.
The **Information Collector** dialog box is displayed.

Information Collector - Standard Security Mode



Information Collector - Ultra Secure Mode



- 2 In the **From Date** and **Until Date** fields, use the arrow keys to define the date range of the data files to be included in the compressed file.
- 3 In the **From Time** and **Until Time** fields, use the arrow keys to define the time range of the data files to be included in the compressed file.



If logs are being collected in order to troubleshoot a specific issue, it is important that the date and time range include the time and date in which the issue occurred. The default date and time ranges may not be sufficient.

For example, if a specific issue occurred on October 1, 2013 at 12:15, the **From Date** and **Until Date** should be October 1, 2013, the **From Time** should be around 12:10, and the **Until Time** should be around 12:20.

- 4 Select the check boxes of the information to be collected.
- 5 In the **Export Path** field, click **Browse**, and navigate to the directory path where the compressed file is to be saved.
- 6 Click **Collect Information**.

A progress indicator is displayed in the **Information Collector** dialog box while the file is being created.

Step 2: Saving the Compressed File

- 1 The compressed file is automatically saved in the directory selected in the **Information Collector** dialog box. The file is named **info.tgz**.
A success information box is displayed.
- 2 Click **OK**.

Step 3: Viewing the Compressed File

The compressed file is saved in .tgz format and can be viewed with any utility that can open files of that format, for example WinRAR® 3.80.

To view the compressed file:

- 1 Navigate to the directory on the workstation in which the file was saved.
- 2 Double click the **info.tgz** file to view the downloaded information.



Some browsers save the file as **info.gz** due to a browser bug. If this occurs, the file must be manually renamed to **info.tgz** before it can be viewed.

Auditor

An Auditor is a user who can view Auditor and CDR files for system auditing purposes.



The Auditor user must connect to the Collaboration Server using the RMX Web Client only.

The Event Auditor enables administrators and auditors to analyze configuration changes and unusual or malicious activities in the Collaboration Server system.

Auditor operates in real time, recording all administration activities and login attempts from the following Collaboration Server modules:

- Control Unit
- Shelf Manager

For a full list of monitored activities, see [Audit Events](#).

The Auditor must always be active in the system. A System Alert is displayed if it becomes inactive for any reason.

The Auditor tool is composed of the Auditor Files and the Auditor File Viewer that enables you to view the Auditor Files.



Time stamps of Audit Events are GMT.

Auditor Files

All audit events are saved to a buffer file on hard disk in real time and then written to a file on hard disk in XML in an uncompressed format.

A new current auditor event file is created when:

- The system is started
- The size of the current auditor event file exceeds 2 MB

- The current auditor event file's age exceeds 24 hours

Up to 1000 auditor event files are stored per Collaboration Server. These files are retained for at least one year and require 1.05 GB of disk space. The files are automatically deleted by the system (oldest first) when the system reaches the auditor event file limit of 1000.

A System Alert is displayed with Can't store data displayed in its Description field if:

- the system cannot store 1000 files
- the Collaboration Server does not have available disk space to retain files for one year

Audit Event Files are retained by the Collaboration Server for at least 1 year. Any attempt to delete an audit event file that is less than one year old raises a System Alert with File was removed listed in the Description field.

Using the Restore Factory Defaults of the System Restore procedure erases Audit Files.


Retrieving Auditor Files

You can open the Auditor file directly from the Auditor Files list or you can retrieve the files and save them to a local workstation.

To access Auditor Files:

- » On the Collaboration Server menu, select **Administration > Tools > Auditor Files**.

The **Auditor Files** dialog box is displayed.

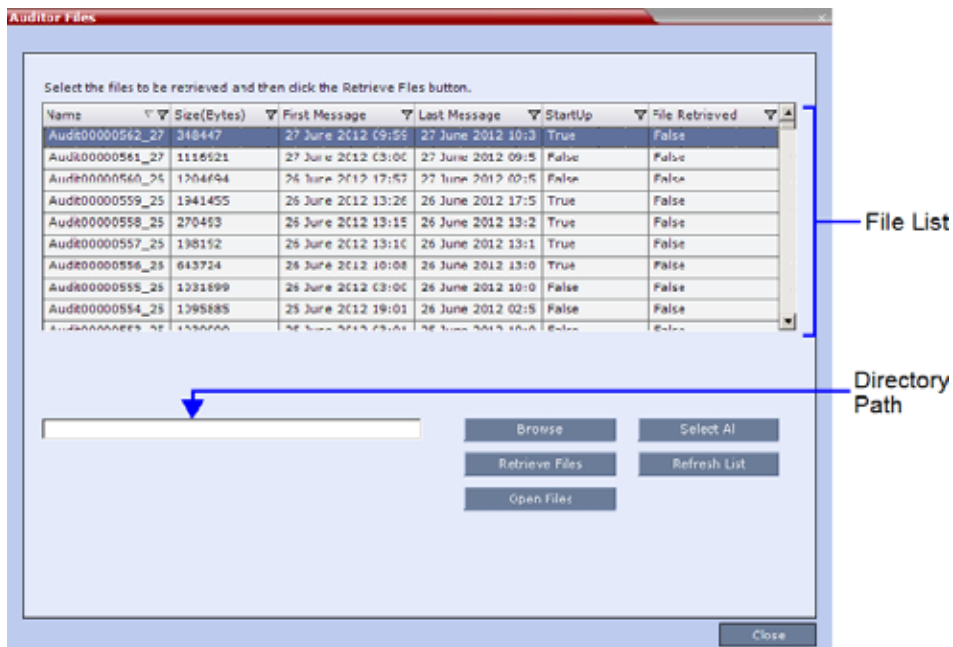

The **Auditor Files** dialogue box displays a file list containing the following file information:

- **Name**
- **Size (Bytes)**
- **First Message** – Date and time of the first audit event in the file

- **Last Message** – Date and time of the last audit event in the file
- **StartUp:**
 - ◆ True – File was created when the system was started
 - ◆ False – File was created when previous audit event file reached a size of 2 MB or was more than 24 hours old
- **File Retrieved:**
 - ◆ True - File was previously retrieved.
 - ◆ False - File was never previously retrieved.

The order of the **Auditor Files** dialog box field header columns can be changed and the fields can be filtered to enable searching.

For more information, see [Auditor File Viewer](#).

To retrieve files for storage on a workstation:

- 1 Click **Browse**, select the folder on the workstation to receive the files, and click **OK**.
The folder name is displayed in the directory path field.
- 2 Select the file(s) to be retrieved by clicking their names in the file list or click **Select All** to retrieve all the files. (Windows multiple selection techniques can be used.)
- 3 Click **Retrieve Files**.
The selected files are copied to the selected directory on the workstation.

To open the file in the Auditor File Viewer:

- » Double-click the file.

Auditor File Viewer

The Auditor File Viewer enables Auditors and Administrators to view the content of and perform detailed analysis on auditor event data in a selected Auditor Event File.

You can view an Auditor Event File directly from the Auditor Files list or by opening the file from the Auditor File Viewer.

To open the Auditor File Viewer from the Administration Menu:

- 1 On the Collaboration Server menu, select **Administration > Tools > Auditor File Viewer**.

The **Auditor File Viewer** is displayed.

If you previously double clicked an Auditor Event File in the Auditor Files list, that file is automatically opened.

The screenshot shows the Auditor File Viewer interface. At the top, a table lists events with columns: ID, Date, Time, User, Role, Status, Location, and Description. Below the table, there are two transaction trees: 'Request Transaction Tree' and 'Response Transaction Tree'. Blue arrows point from labels below to the corresponding parts of the interface.

ID	Date	Time	User	Role	Status	Location	Description
2889	6/3/2007	1:31 PM	SA	ADMIN	None	BASY_TRACKER	SA user logged into the RIM
2822	6/3/2007	1:31 PM	PC	ADMIN	None	BASY_TRACKER	PC user logged into the RIM
2823	6/3/2007	1:31 PM	SA	ADMIN	None	BASY_TRACKER	SA user logged into the RIM
2804	6/3/2007	1:31 PM	SA	ADMIN	None	BASY_TRACKER	SA user logged out of the RIM
2885	6/3/2007	1:31 PM	PC	ADMIN	None	BASY_TRACKER	PC user logged into the RIM
2886	6/3/2007	1:31 PM	PC	ADMIN	None	BASY_TRACKER	PC user logged into the RIM
2887	6/3/2007	1:31 PM	SA	ADMIN	None	BASY_TRACKER	SA user logged into the RIM
2890	6/3/2007	1:31 PM	PC	ADMIN	None	BASY_TRACKER	PC user logged into the RIM

Labels and arrows in the image:

- Local File**: Points to the top of the window.
- Event List (ID)**: Points to the ID column in the table.
- Request Transaction Tree**: Points to the left transaction tree.
- Response Transaction Tree**: Points to the right transaction tree.

The following fields are displayed for each event:

Auditor Event Columns



Field	Description
Event ID	The sequence number of the event generated by the Collaboration Server.
Date & Time	The date and time of the event taken from the Collaboration Server's Local Time setting.
User Name	The Username (Login Name) of the user who triggered the event.
Reporting Module	The Collaboration Server system internal module that reported the event: <ul style="list-style-type: none"> • MCMS • MPL • Central Signaling • MPL Simulation • Collaboration Server Web Client • CM Switch • Shelf Management • ART • Video • Card Manager • RTM • MUX
Workstation	The name (alias) of the workstation used to send the request that triggered the event.
IP Address (Workstation)	The IP address of the workstation used to send the request that triggered the event.
Event Type	Auditor events can be triggered by: <ul style="list-style-type: none"> • API • HTTP • Collaboration Server Internal Event
Event	The process, action, request or transaction that was performed or rejected. <ul style="list-style-type: none"> • POST:SET transactions (API) • Configuration changes via XML (API) • Login/Logout (API) • GET (HTTP) • PUT (HTTP) • MKDIR (HTTP) • RMDIR (HTTP) • Startup (Collaboration Server Internal Event) • Shutdown (Collaboration Server Internal Event) • Reset (Collaboration Server Internal Event) • Enter Diagnostic Mode (Collaboration Server Internal Event) • IP address changes via USB (Collaboration Server Internal Event)

Auditor Event Columns


Field	Description
Process Completed	Status of the process, action, request or transaction returned by the system: <ul style="list-style-type: none"> • Yes – performed by the system. • No – rejected by the system.
Description	A text string describing the process, action, request or transaction.
Additional Information	An optional text string describing the process, action, request or transaction in additional detail.

The order of the **Auditor File Viewer** field header columns can be changed and the fields can be sorted and filtered to facilitate different analysis methods.

- 2 In the event list, click the events or use the keyboard's Up and Down arrow keys to display the Request Transaction and Response Transaction XML trees for each audit event.

The transaction XML trees can be expanded and collapsed by clicking the expand () and collapse () buttons.

To open an auditor event file stored on the workstation:

- 1 Click **Local File** () to open the **Open** dialogue box.
- 2 Navigate to the folder on the workstation that contains the audit event file.
- 3 Select the audit event file to be opened.
- 4 Click **Open**.

The selected file is opened in the **Auditor Viewer**.

Audit Events**Alerts and Faults**

Alerts and Faults that are recorded by the Auditor.

Alerts and Faults recorded by the Auditor

Event
Attempt to exceed the maximum number of management session per user
Attempt to exceed the maximum number of management sessions per system
Central Signaling indicating Recovery status.
Failed login attempt
Failed to open Apache server configuration file.
Failed to save Apache server configuration file.
Fallback version is being used.

Alerts and Faults recorded by the Auditor

Event
File system scan failure.
File system space shortage.
Internal MCU reset.
Internal System configuration during startup.
Invalid date and time.
Invalid MCU Version.
IP addresses of Signaling Host and Control Unit are the same.
IP Network Service configuration modified.
IP Network Service deleted.
Login
Logout
Management Session Time Out
MCU Reset to enable Diagnostics mode.
MCU reset.
Music file error.
New activation key was loaded.
New version was installed.
NTP synchronization failure.
Polycom default User exists.
Private version is loaded.
Restoring Factory Defaults.
Secured SIP communication failed.
Session disconnected without logout
SSH is enabled.
System Configuration modified.
System is starting.
System Resets.
TCP disconnection
Terminal initiated MCU reset.

Alerts and Faults recorded by the Auditor

Event
The Log file system is disabled.
The software contains patch(es).
USB key used to change system configuration.
User closed the browser
User initiated MCU reset.

Transactions

Transactions that are recorded by the Auditor.

Transactions recorded by the Auditor

Transaction
TRANS_CFG:SET_CFG
TRANS_IP_SERVICE:DEL_IP_SERVICE
TRANS_IP_SERVICE:NEW_IP_SERVICE
TRANS_IP_SERVICE:SET_DEFAULT_H323_SERVICE
TRANS_IP_SERVICE:SET_DEFAULT_SIP_SERVICE
TRANS_IP_SERVICE:UPDATE_IP_SERVICE
TRANS_IP_SERVICE:UPDATE_MANAGEMENT_NETWORK
TRANS_ISDN_PHONE:ADD_ISDN_PHONE
TRANS_ISDN_PHONE:DEL_ISDN_PHONE
TRANS_ISDN_PHONE:UPDATE_ISDN_PHONE
TRANS_ISDN_SERVICE:DEL_ISDN_SERVICE
TRANS_ISDN_SERVICE:NEW_ISDN_SERVICE
TRANS_ISDN_SERVICE:SET_DEFAULT_ISDN_SERVICE
TRANS_ISDN_SERVICE:UPDATE_ISDN_SERVICE
TRANS_MCU:BEGIN_RECEIVING_VERSION
TRANS_MCU:COLLECT_INFO
TRANS_MCU:CREATE_DIRECTORY
TRANS_MCU:FINISHED_TRANSFER_VERSION
TRANS_MCU:LOGIN
TRANS_MCU:LOGOUT

Transactions recorded by the Auditor

Transaction
TRANS_MCU:REMOVE_DIRECTORY
TRANS_MCU:REMOVE_DIRECTORY_CONTENT
TRANS_MCU:RENAME
TRANS_MCU:RESET
TRANS_MCU:SET_PORT_CONFIGURATION
TRANS_MCU:SET_RESTORE_TYPE
TRANS_MCU:SET_TIME
TRANS_MCU:TURN_SSH
TRANS_MCU:UPDATE_KEY_CODE
TRANS_OPERATOR:CHANGE_PASSWORD
TRANS_OPERATOR:DELETE_OPERATOR
TRANS_OPERATOR:NEW_OPERATOR
TRANS_RTM_ISDN_SPAN:UPDATE_RTM_ISDN_SPAN
TRANS_SNMP:UPDATE

ActiveX Bypass

At sites that, for security reasons, do not permit Microsoft® ActiveX® to be installed, the MSI (Windows Installer File) utility can be used to install .NET Framework and .NET Security Settings components on workstations throughout the network.

All workstation that connect to Collaboration Server systems must have both .NET Framework and .NET Security Settings running locally. These components are used for communication with the Collaboration Server and can only be installed on workstations by users with administrator privileges.

The MSI utility requires the IP addresses of all the Collaboration Server systems (both control unit and Shelf Management IP addresses) that each workstation is to connect to.

If the IP address of the any of the target Collaboration Servers is changed, the ActiveX components must be reinstalled.


Installing ActiveX

To install ActiveX components on all workstations in the network:

- 1 Download the MSI file **EMA.ClassLoaderInstaller.msi** from the Polycom Resource Center.
The MSI file contains installation scripts for both .NET Framework and .NET Security Settings.

- 2 Create a text file to be used during the installation containing the IP addresses of all the Collaboration Server systems (both control unit and Shelf Management IP addresses) that each workstation in the network is to connect to.

The file must be named **url_list.txt** and must be saved in the same folder as the downloaded MSI file.

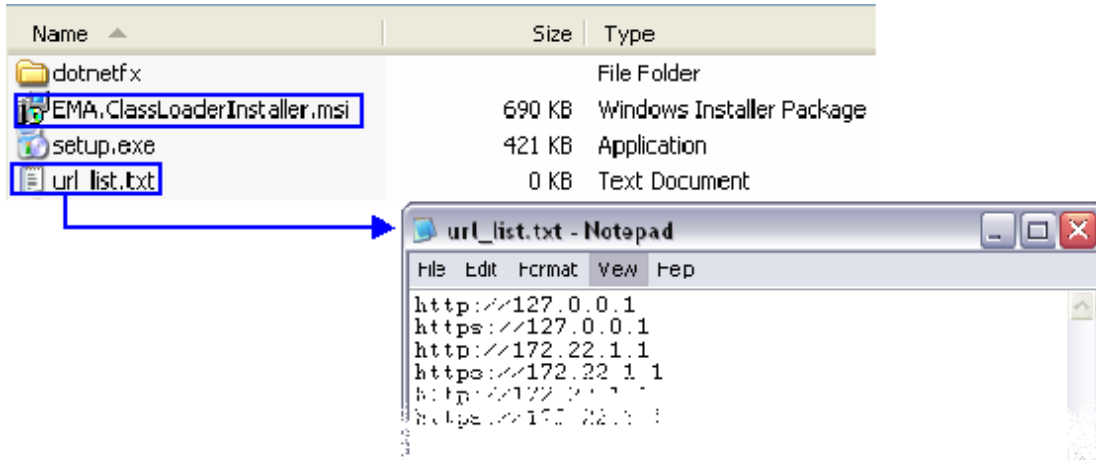

- 3 Install the ActiveX components on all workstations on the network that connect to Collaboration Server systems.

The installation is done by the network administrator using a 3rd party network software installation utility and is transparent to all other users.

Resetting the Collaboration Server


System Reset saves system configuration changes and restarts the system with the latest settings.

To reset the RMX:

- 1 In the **RMX Management** pane, click **Hardware Monitor**.
The **Hardware Monitor** pane is displayed.
- 2 Click **Reset** (🔧).

Slot	Type	Status	Temperature	Voltage
0	RMX 2000	-	-	-
1	MPM-F	Normal	Normal	Major
1	RTM ISDN	Normal	Normal	Normal
2	RTM ISDN	Normal	Normal	Normal
2	MPM-F	Normal	Normal	Major
3	CPU	Normal	Normal	Major
4	Empty	Empty	-	-

When the Collaboration Server system is reset, during Collaboration Server startup the Progress Bar appears at the bottom of the Collaboration Server **Status** pane, displaying the amount of time remaining for the reset process to complete:

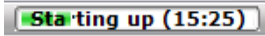A screenshot of a progress bar with the text "Starting up (15:25)" inside. The bar is partially filled with green, indicating the progress of the startup process.

The Startup progress is also indicated by a green bar moving from left to right.

The duration of the Startup depends on the type of activity that preceded the MCU reset. For example: Fast Configuration Wizard, New Version installation, Version Upgrade, Restore Last Configuration etc.



When resetting the Collaboration Server from the Hardware Monitor, sometimes SIP endpoints may remain connected although the conference ended.

System Configuration Flags

The system's overall behavior can be configured by modifying the default values of the System Flags.



Generally, for flag changes (including deletion) to take effect, the MCU must be reset, unless indicated otherwise.

For information on system reset see [Resetting the Collaboration Server](#).

Controlling System Flag Values


In most cases, you may modify a system flag value as described in the procedure below. However, some of the flags require manual addition, before you can modify their value from their default setting (see [Manually Adding a System Flag](#)).

Modifying System Flags

To modify system flags:


- 1 On the Collaboration Server menu, select **Setup > System Configuration**.

The **System Flags** dialog opens.

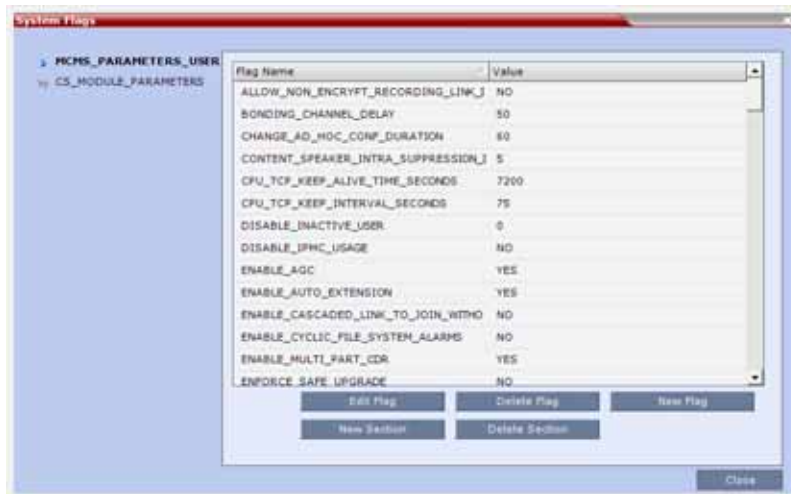

- 2 In the **MCMS_PARAMETERS_USER** tab, the flags listed in the **MCMS_PARAMETERS_USER Flags** table can be modified.
- 3 To modify a flag value, select the flag and click **Edit Flag**, or double-click it.

- 4 In the **New Value** field, enter the flag's new value.

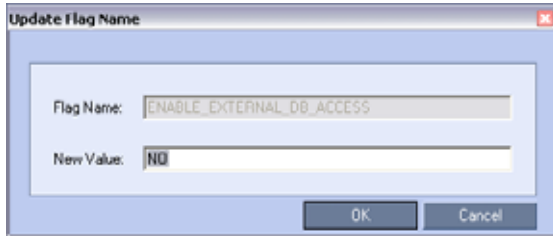


- 5 Click **OK** to close the **Update Flag** dialog.
- 6 Repeat steps 2–5 to modify additional flags.
- 7 Click **OK** to close the **System Flags** dialog.
- 8 Unless otherwise indicated, reset the MCU for flag changes (including deletion) to take effect. For more information see [Resetting the Collaboration Server](#).

Manually Adding a System Flag

To add a flag:

- 1 Open the **System Flags** dialog as described in the procedure above.
- 2 Click **New Flag**.

The **New Flag** dialog box is displayed.

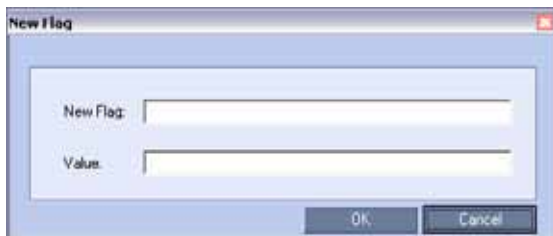

- 3 In the **New Flag** field enter the flag name.
- 4 In the **Value** field enter the flag value.
The flags in the **Manually Added, Modified, Deleted System Flags** table can be manually added to the **MCMS_PARAMETERS_USERS** tab.
- 5 Click **OK** to close the **New Flag** dialog.
The new flag is added to the flags list.
- 6 Click **OK** to close the **System Flags** dialog.

Deleting a System Flag

To delete a flag:

- 1 In the **System Flags** dialog box, select the flag to delete and click **Delete Flag**.
- 2 In the confirmation message box, click **Yes** to confirm.

- 3 Click **OK** to close the **System Flags** dialog box.

The System Flags

This section describes the system flag throughout the system.

The MCMS System Flags

The MCMS system flags, viewed via the **MCMS_PARAMETERS_USER** tab, are responsible for the general system logic.

The table below summarizes the general MCMS system flags active in the system, alphabetically.



The Add? Column

The **Add?** column indicates whether the flag requires manual addition before its value can be modified to values other than the default.

It is usually applicable to flags the user is not likely to require modifying their default value, but under more unusual circumstances.

The MCMS System Flags

Flag	Description	Add?
802_FIPS_MODE	Controls availability of MD5 Authentication Protocol. Range: <ul style="list-style-type: none"> • YES - MD5 is not available for selection in the user interface. • NO - MD5 is available for selection in the user interface. Default: <ul style="list-style-type: none"> • Standard Security Mode - NO • Ultra Secure Mode - YES 	✓
ACCEPT_VOIP_DTMF_TYPE	Defines the type of DTMF tones (inband) or digits (outband) that the Collaboration Server will accept in VOIP calls. Range: <ul style="list-style-type: none"> • 0 - Auto (default): Inband or outband DTMF tones/digits are accepted depending on the endpoint's current setting. If the endpoint switches from inband to outband, and vice versa, the value of the SET_DTMF_SOURCE_DIFF_IN_SEC flag determines the time interval after which both inband and outband tones/digits will be accepted. • 1 - Outband (H.245) only • 2 - Inband only 	✓

The MCMS System Flags

Flag	Description	Add?
ALLOW_NON_ENCRYPT_RECORDING_LINK_IN_ENCRYPT_CONF	<p>When set to NO (default), the Recording Link inherits the encryption settings of the conference. If the conference is encrypted, the recording link will be encrypted.</p> <p>When set to YES, it disables the encryption of the recording link, regardless of the Encryption settings of the conference and the Polycom® RealPresence® Media Suite recorder.</p>	✘
ALLOW_SIREN7_CODEC	<p>When a Lync server is configured to allow 33Kbps audio rate, Lync clients connecting the MCU, and using audio rates smaller than 42Kbps, fail, thus disconnecting the call.</p> <p>To prevent that, Siren7 audio codec is supported by the MCU, and is the preferred codec for SIP/Lync calls.</p> <p>Range:</p> <ul style="list-style-type: none"> • YES - Siren7 is the preferred audio codec for SIP/Lync calls. • NO - Siren7 audio codec is not supported. <p>Default value: NO</p> <p>Note: No system is required for the flag changed value to take effect.</p>	✓
ALWAYS_FORWARD_DTMF_IN_GW_SESSION_TO_ISDN	<p>When set to YES, all DTMF codes sent by participants in the GW session will be forwarded to all PSTN and ISDN participants in the same GW session.</p> <p>Range: YES / NO</p> <p>Default Value: NO</p>	✓
ANAT_IP_PROTOCOL	<p>If YES, enables Alternative Network Address Types. For more information, see Alternative Network Address Types (ANAT).</p> <p>Range: DISABLED, AUTO, PREFER_IPv4, PREFER_IPv6</p> <p>Default:</p> <ul style="list-style-type: none"> • ULTRA SECURE MODE: NO • STANDARD SECURITY MODE: YES 	✓
APACHE_KEEP_ALIVE_TIMEOUT	<p>If the connection is idle for longer than the number of seconds specified by this flag, the connection to the Collaboration Server is terminated.</p> <p>Value: 1 - 999</p> <p>Default: 15</p> <p>Default (ULTRA_SECURE_MODE=YES): 15</p>	✓
AVOID_VIDEO_LOOP_BACK_IN_CASCADE	<p>When set to YES the current speaker's image is not sent back through the participant link in cascaded conferences with conference layouts other than 1x1.</p> <p>Default: YES</p> <p>Range: YES / NO</p>	✓

The MCMS System Flags

Flag	Description	Add?
BLOCK_CONTENT_LEGACY_FOR_LYNC	<p>This flag is used to control the system behavior in an environment where some Lync clients use the Polycom CCS plug-in and some do not.</p> <p>When set to NO (default), Content is sent to all Lync clients over the video channel, including those with the plug-in installed, even when the Send Content to Legacy Endpoints is disabled. Other, non-Lync legacy endpoints will not be affected by this flag and will receive content according to the Send Content to Legacy Endpoints settings in the conference Profile.</p> <p>When set to YES, Content is not sent to Lync clients over the video channel including those with the Polycom CCS plug-in installed, even when the Send Content to Legacy Endpoints is enabled. Other, non-Lync legacy endpoints will not be affected by this flag and will receive content according to the Send Content to Legacy Endpoints settings in the conference Profile.</p>	✓
BONDING_CHANNEL_DELAY	<p>When connecting a bonding group, this is the delay (number of 1/100 seconds) between dialing attempts to connect sequential channels.</p> <p>The channel per second connection performance of ISDN switches can vary and can cause timing issues that result in bonding channel disconnection.</p> <p>Default: 50</p>	✗
BONDING_DIALING_METHOD	<p>When set to:</p> <ul style="list-style-type: none"> • SEQUENTIAL The MCU initiates channel connections sequentially until it reaches the number of channels defined by the BONDING_NUM_CHANNELS_IN_GROUP flag. When a channel is connected, dialing begins for the next channel in the group. • BY_TIMERS The MCU initiates channel connections sequentially using the values of the BONDING_CHANNEL_DELAY and BONDING_GROUP_DELAY flags. The first group of channels is dialed, using the BONDING_CHANNEL_DELAY between dialing attempts for each channel in the group. The Collaboration Server then implements the BONDING_GROUP_DELAY, before dialing the first channel of the next group. <p>Default: SEQUENTIAL</p>	✓
BONDING_GROUP_DELAY (ISDN)	<p>When connecting several bonding groups, this is the delay (number of 1/100 seconds) preceding the first dialing attempt to connect the next bonding group.</p> <p>Default: 500</p>	✓

The MCMS System Flags

Flag	Description	Add?
BONDING_NUM_CHANNELS_IN_GROUP (ISDN)	The number of channels in the bonding group to be connected before dialing the next sequential channel. Default: 50	✓
BURN_BIOS	Although <u>not recommended</u> , setting this flag's value to NO will prevent BIOS upgrade. Default: YES.	✓
CAC_ENABLE	When set to YES, enables the Call Admission Control implementation in the Collaboration Server. Default: NO (CAC is disabled)	✓
CASCADE_LINK_PLAY_TONE_ON_CONNECTION	When set to YES , the RealPresence Collaboration Server plays a tone when a cascading link between conferences is established. The tone is played in both conferences. This tone is not played when the cascading link disconnects from the conferences. The tone used to notify that the cascading link connection has been established cannot be customized. Default value: NO . The tone volume is controlled by the same flag as the IVR messages and tones: IVR_MESSAGE_VOLUME.	✓
CELL_IND_LOCATION	Change the location of the display of Network Quality Indicators displayed in the cells of the conference Video Layout. Default: TOP_RIGHT Range: <ul style="list-style-type: none"> • BOTTOM_LEFT • BOTTOM_RIGHT • TOP_LEFT • TOP_RIGHT 	✓
CFG_KEY_ENABLE_FLOW_CONTROL_REINVITE	Used to enable or disable sending a re-INVITE to endpoints to adjust their data rate. When set to YES, re-INVITE is used for endpoints that do not support flow control in SIP using either the Information or RTCP Feedback mechanisms. Default: NO.	✓
CHANGE_AD_HOC_CONF_DURATION	The duration of an ad-hoc conference* can be configured on a system level by setting the flag to one of the following values (in minutes): 60 (default), 90, 180 and 270. * An ad-hoc conference is automatically created when the participant dials into an Ad-hoc Entry Queue and enters a conference ID that is not being used by any other conferencing entity. It is based on the Conference Profile assigned to the EQ.	✗

The MCMS System Flags

Flag	Description	Add?
CONF_GATHERING_DURATION_SECONDS	<p>The value of this System Flag sets the duration of the Gathering Phase in seconds. The Gathering Phase duration of the conference is measured from the scheduled start time of the conference.</p> <p>Range: 0 - 3600</p> <p>Default: 180</p> <p>For more information see Video Preview (AVC Participants Only)</p>	✓
CONTENT_SLAVE_LINKS_INTRA_SUPPRESSION_IN_SECONDS	<p>Defines the interval, in seconds, during which the Collaboration Server is allowed to forward an Intra Request received from any of the Slave Cascading Links. The Slave Cascading Link can be connected to the local Collaboration Server, to an MCU on a higher cascade level or to the Content sharer.</p> <p>The first Intra request that is received from any of the Slave MCUs connected to the Collaboration Server starts the interval counter and is forwarded to the next level MCU or to the Content sharer. All other Intra requests that are received within this interval are registered but ignored. After an interval of <flag value> seconds, the system checks if during the last interval any additional Intra requests were registered. If there is at least one Intra request it will be forwarded. If there is no additional Intra request no action is taken other than to wait for the next cycle.</p> <p>This filtering process is repeated every <flag value> seconds.</p> <p>Default: 30</p>	✗
CONTENT_SPEAKER_INTRA_SUPPRESSION_IN_SECONDS	<p>This flag controls the requests to refresh (intra) the content sent from the Collaboration Server system to the content sender as a result of refresh requests initiated by other conference participants.</p> <p>Enter the interval in seconds between the Intra requests sent from the Collaboration Server to the endpoint sending the content to refresh the content display. Refresh requests that will be received from endpoints within the defined interval will be postponed to the next interval.</p> <p>Default setting: 5</p>	✗
CP_REGARD_TO_INCOMING_SETUP_RATE	<p>For use in the Avaya Environment.</p> <p>If set to YES, the RealPresence Collaboration Server calculates the line rate for incoming calls in CP conferences, according to the line rate which is declared by the endpoint in the H.225 setup message.</p> <p>If set to NO, the rate is calculated according to the conference line rate regardless of the rate in the H.225 setup message.</p> <p>Default: YES.</p>	✓
CPU_BONDING_LINK_MONITORING_FREQUENCY	<p>Used when using the MII Monitor for troubleshooting networks. This flag sets the MII Polling Interval in milliseconds. A value of zero disables MII monitoring.</p> <p>Default: 100</p>	✓

The MCMS System Flags

Flag	Description	Add?
CPU_BONDING_MODE	<p>Sets the Bonding Mode of the Signalling and Management network interface controllers.</p> <p>Mode=6, balance-alb, (Adaptive Load Balancing) includes balance-tlb, (Transmit Load Balancing) and balance-rlb (Receive Load Balancing) for IPV4 traffic. No special switch support is required.</p> <p>Receive Load Balancing is achieved by ARP negotiation.</p> <p>Outbound ARP Replies are intercepted and their source hardware address is overwritten with the unique hardware address of one of the slaves in the bond. In this way different peers will use different hardware addresses for the server.</p> <p>Note: balance-alb is the only supported value. All other possible values are for troubleshooting purposes only.</p> <p>Default: balance-alb</p> <p>Possible values:</p> <ul style="list-style-type: none"> • balance-alb • balance-rr • active-backup • balance-xor • broadcast • 802.3ad • balance-tlb 	✓
CPU_TCP_KEEP_ALIVE_TIME_SECONDS	<p>This flag indicates when to send the first KeepAlive indication to check the TCP connection.</p> <p>Default value: 7200 second (120 minutes)</p> <p>Range: 600-18000 seconds</p> <p>When there are NAT problems, this default may be too long and the TCP connection is lost. In such a case, the default value should be changed to 3600 seconds (60 minutes) or less.</p>	✗
CPU_TCP_KEEP_INTERVAL_SECONDS	<p>This flag indicates the interval in seconds between the KeepAlive requests.</p> <p>Default value: 75 second</p> <p>Range: 10-720 seconds.</p>	✗
DEFAULT_USER_ALERT	<p>Alerts the administrator that the default user (POLYCOM) exists.</p> <p>Range: YES/NO</p> <p>Default value: NO</p> <p>Default Ultra Secure Mode: YES</p>	✓
DELAY_BETWEEN_H320_DIAL_OUT_PARTY	<p>The delay in milliseconds that the MCU waits when connecting dial out ISDN and PSTN participants.</p> <p>Default: 1000</p>	✓

The MCMS System Flags

Flag	Description	Add?
DETECT_H323_EP_DISCONNECT_TIMER	On detecting a H.323 endpoint disconnection, a new system flag, DETECT_H323_EP_DISCONNECT_TIMER allows you to specify the amount of time the MCU waits before disconnecting the endpoint.	✓
DETECT_SIP_EP_DISCONNECT_TIMER	On detecting a SIP endpoint disconnection, a new system flag, DETECT_SIP_EP_DISCONNECT_TIMER allows you to specify the amount of time the MCU waits before disconnecting the endpoint	✓
DISABLE_CELLS_NETWORK_IND	Disable the display of Network Quality Indicators displayed in the cells of the conference Video Layout. Default: YES Range: YES / NO	✓
DISABLE_DUMMY_REGISTRATION	Enables or disables SIP dummy registration on the domain. Possible Values: NO (Default) - Disables SIP dummy registration. YES - Enables SIP dummy registration. Note: For homologation and certification testing, the flag must be set to YES.	✓
DISABLE_GW_OVERLAY_INDICATION	When set to NO (default), displays progress indication during the connection phase of a gateway call. Set the value to YES to hide the connection indications displayed on the participant's screen during the connection phase of a gateway call.	✓
DISABLE_INACTIVE_USER	Users can be automatically disabled by the system when they do not log into the Collaboration Server application for a predefined period. Possible Values: 0 - 90 days. Default: 0 (disables this option). Default (ULTRA_SECURE_MODE=YES): 30	✗
DISABLE_SELF_NETWORK_IND	Disable the display of the Network Quality Indicator of the participant's own endpoint. Default: NO Range: YES / NO NOTE: This flag's function has been replaced by the Network Quality check box in the Layout Indications tab of the New Profile / Profile Properties dialog.	✓

The MCMS System Flags

Flag	Description	Add?
DISABLE_WIDE_RES_TO_SIP_DIAL_OUT	<p>When set to NO (default), the RealPresence Collaboration Server sends wide screen resolution to dial-out SIP endpoints. Endpoint types that do not support wide screen resolutions are automatically identified by the Collaboration Server according to their product type and version and will not receive the wide resolution even if the flag is set to YES.</p> <p>When manually added and set to YES, the RealPresence Collaboration Server does not send wide screen.</p> <p>Default: NO.</p>	✓
DTMF_FORWARD_ANY_DIGIT_TIMER_SECONDS	<p>Used for DTMF code suppression in cascading conferences. Determines the time period (in seconds) that MCU A will forward DTMF inputs from conference A participants to MCU B.</p> <p>Flag range (in seconds): 0 - 360000</p> <p>This flag is defined on MCU A (the calling MCU).</p> <p>For more information, see Setting the Video Layout in Cascading conferences.</p>	✓
ENABLE_ACCEPTING_ICMP_REDIRECT	<p>When set to YES, allows the RMX to accept ICMP Redirect Messages (ICMP message type #5).</p> <p>Range: YES / NO</p> <p>Default: NO</p>	✗
ENABLE_AGC	<p>Set this flag to YES to enable the AGC option. (Default setting is NO.) When disabled, selecting the AGC option in the Participant Properties has not effect on the participant audio. For more information see Managing the Address Book.</p> <p>The Auto Gain Control mechanism regulates noise and audio volume by keeping the received audio signals of all participants balanced.</p> <p>Note: Enabling AGC may result in amplification of background noise.</p>	✗
ENABLE_AUTO_EXTENSION	<p>When set to YES, allows conferences running on the Collaboration Server to be automatically extended as long as there are participants connected and the system has free resources.</p> <p>Set this flag to NO prevent conference duration from being automatically extended.</p> <p>Default: YES</p> <p>Note: If this flag is set to:</p> <ul style="list-style-type: none"> • YES, Gateway Calls are not limited in duration while endpoints are connected. • NO, Gateway Calls are limited to 60 minutes. <p>For more information see Gateway Functionality.</p>	✗
ENABLE_CASCADE_LINK_TO_JOIN_WITHOUT_PASSWORD	<p>Enables a cascaded link to enter a conference without a password.</p> <p>Default: NO, for security reasons.</p>	✗

The MCMS System Flags

Flag	Description	Add?
ENABLE_CISCO_GK	When set to YES, it enables the use of an identical prefix for different Collaboration Servers when registering with a Cisco MCM Gatekeeper. Default: NO.	✓
ENABLE_CLOSED_CAPTION	Enables or disables the Closed Captions option that allow endpoints to endpoints to provide real-time text transcriptions or language translations of the video conference. When set to NO (default), Closed Captions are disabled. When set to YES, Closed Captions are enabled.	✓
ENABLE_CONTENT_OF_768_FOR_1024_LV	Generally, the content rate used for 1024 Kbps conferences with a Live Video settings is 512 Kbps. Set this flag to YES, to increase the content rate in this scenario to 768 Kbps. This flag is applicable for protocols supporting H.264 media protocol usage: <ul style="list-style-type: none"> • H.263 and H.264 auto selection • H.264 HD • H.264 Cascade Optimized Range: YES, NO Default: NO Modifying flag values requires manual addition with no system reset.	✓
ENABLE_CONTENT_SNATCH_OVER_CASCADE	When the system flag value is YES in all the MCUs within the H.323 cascaded topology, and these MCUs using Collaboration Servers version 8.6 and up, content snatching is enabled. Default value: NO . No system restart is required for flag modified value to take effect.	✓
ENABLE_CYCLIC_FILE_SYSTEM_ALARMS	Enables or disables the display of Active Alarms before overwriting the older CDR/Auditor/Log files, enabling the users to backup the older files before they are deleted. Default: NO Default (ULTRA_SECURE_MODE=YES): YES	✗
ENABLE_EPC	When set to YES (default), enables Polycom proprietary People+Content. When set to NO, disables this feature for all conferences and participants.	✓
ENABLE_EXTERNAL_DB_ACCESS	If YES, the Collaboration Server connects to an external database application, to validate the participant's right to start a new conference or access a conference. Default: NO	✓

The MCMS System Flags

Flag	Description	Add?
ENABLE_FLOW_CONTROL_REINVITE	Used to enable or disable sending a re-INVITE to endpoints to adjust their data rate. When set to YES, re-INVITE is used for endpoints that do not support flow control in SIP using either the Information or RTCP Feedback mechanisms. Default: NO	✓
ENABLE_G729	Enables using G.729 audio codec. Modifying its value to NO ensures that the G.729 codec is disabled, and G.711 is used instead. This is useful in calls where audio quality is affected by lower line rates. Range: YES (default) / NO System Reset is not required after changing the flag's value. The modified flag setting will affect new calls.	✓
ENABLE_H239	When set to YES, Content is sent via a separate Content channel. Endpoints that do not support H.239 Content sharing will not be able to receive When set to NO, the Content channel is closed. In such a case, H.239 Content is sent via the video channel ("people" video) enabling endpoints that do not support H.239 Content sharing to receive the Content in their video channel. Default: YES	✓
ENABLE_H239_ANNEX_T	In H.239-enabled MIH Cascading, when MGC is on level 1, enables sending Content using Annex T.	✓
ENABLE_LYNC_RTCP_INTRA	When set to YES, RTCP FIR is used for sending Intra Requests. When set to NO Intra Requests are sent using SIP INFO Messages. Range: YES / NO Default: NO	✓
ENABLE_MCCF	Enables or disables the support of External IVR Services via the MCCF-IVR package is enabled. In Ultra Secure Mode and in secured environments where the External IVR Services via the MCCF-IVR package is not required and unused ports should be closed, this flag should be set to NO. Range: YES / NO Default: YES (in Standard security Mode) or NO (in Ultra Secure Mode)	✓
ENABLE_MS_FEC	Enables the Microsoft FEC (Forward Error Correction) support for RTV. Range: Auto/No Default: Auto When set to Auto , FEC support is enabled. FEC uses the DV00 option (DV=00 - one FEC per frame using XOR). When set to No , FEC support is disabled.	✓

The MCMS System Flags

Flag	Description	Add?
ENABLE_NO_VIDEO_RESOURCE S_AUDIO_ONLY_MESSAGE	Enables playing a voice message that Informs the participant of the lack of Video Resources in the RealPresence Collaboration Server and that he/she is being connected as Audio Only. Default: YES	✓
ENABLE_RECORDING_ OPERATION_VIA_SIPINFO	Allows recording control operations to be performed using either DTMF tones or a SIP INFO request. When set to NO: The Collaboration Server will send Recording Control Operation commands to the Polycom® RealPresence® Media Suite using DTMF as in all previous version. When set to YES: The Collaboration Server will send Recording Control Operation commands to the Media Suite using a SIP INFO request. Default: NO	✓
ENABLE_RTP_TRAFFIC_SHAPING	Indicates whether traffic shaping, which is responsible for flattening packet bursts within 100 msec time intervals, is enabled. When set to YES, traffic shaping is applied to all ports, resulting in some port capacity reduction in MCUs with MPMRx cards (see Capacity Reduction During Traffic Shaping). When set to NO, traffic shaping is disabled. Range: YES, NO Default: NO	✓
ENABLE_SELECTIVE_MIXING	Enables (default) or disables the Automatic muting of noisy AVC endpoints. For more details, see Automatic Muting of Noisy Endpoints . When set to YES, the automatic muting of noisy endpoints can be enabled or disabled at the conference level in the Conference Profile - Audio Settings dialog box. When set to NO, the automatic muting of noisy endpoints is disabled at the conference level and cannot be enabled in the Conference Profile - Audio Settings dialog box. Default: YES Note: MCU reset is not required when changing the flag value, though change will apply only for conferences created from that point onward.	✓
ENABLE_SIP_PEOPLE_PLUS_CO NTENT	If security is of higher priority than SIP Content sharing, SIP People+Content can be disabled by setting this System Flag to NO. (The content management control (BFCP) utilizes an unsecured channel (60002/TCP) even when SIP TLS is enabled.) Default: YES	✓
ENABLE_SIP_PPC_FOR_ALL_USE R_AGENT	When set to YES, SIP People+Content and BFCP capabilities are declared with all vendors' endpoints. Default: YES Range: YES / NO	✓

The MCMS System Flags

Flag	Description	Add?
ENABLE_SIRENLPR	Enable / disable SirenLPR Audio Algorithm for use in IP (H.323, SIP) calls in both CP and VSW conferences. Range: YES / NO Default: NO	✓
ENABLE_SIRENLPR_SIP_ENCRYPTION	Enables the SirenLPR audio algorithm when using encryption with the SIP protocol. Range: YES / NO Default: NO	✓
ENABLE_TC_PACKAGE	Enables or disables Network Traffic Control. Range: YES / NO Default: NO	✓
ENABLE_TEXTUAL_CONFERENCE_STATUS	Set the value of this flag to NO to disable Text Indication. This setting is recommended for MCUs running Telepresence conferences. Default: YES.	✓
ENABLE_VIDEO_PREVIEW	Enables the Video Preview feature. Default: YES. For more details, see Video Preview (AVC Participants Only) .	✓
ENFORCE_SAFE_UPGRADE	When set to YES this flag enables the Collaboration Server system to notify users when an incorrect version upgrade/downgrade or upgrade/downgrade path is selected. When set to NO, after initiating an upgrade or downgrade software installation, the Collaboration Server activates a fault alert in the Faults List: Warning: Upgrade started and SAFE Upgrade protection is turned OFF and the upgrade/downgrade process continues. Range: YES / NO Default: YES	✗
EXT_DB_IVR_PROV_TIME_SECONDS	When an Entry Queue is set as IVR Service Provider for the RealPresence DMA system, the value here indicates the time interval in seconds in which the database is accessed for the ID. Default: 300	✗
EXTERNAL_CONTENT_DIRECTORY	The Web Server folder name. Change this name if you have changed the default names used by the XMA application. Default: /P1cmWebServices	✓

The MCMS System Flags

Flag	Description	Add?
EXTERNAL_CONTENT_IP	Enter the IP address of the XMA server in the format: http://[IP address of the XMA server] . For example, http://172.22.185.89 . This flag is also the trigger for replacing the internal Collaboration Server address book with the XMA global Address Book. When empty, the integration of the XMA address book with the Collaboration Server is disabled.	✓
EXTERNAL_CONTENT_PASSWORD	The password associated with the user name defined for the Collaboration Server in the XMA server.	✓
EXTERNAL_CONTENT_PORT	The XMA port used by the Collaboration Server to send and receive XML requests/responses. Default: 80.	✓
EXTERNAL_CONTENT_USER	The login name defined for the Collaboration Server in the XMA server defined in the format: domain name/user name.	✓
EXTERNAL_DB_DIRECTORY	Applicable to the RealPresence Collaboration Server (RMX) 2000/4000 only. The URL of the external database application. For the sample script application, the URL is: <virtual directory>/SubmitQuery.asp	✓
EXTERNAL_DB_IP	Applicable to the RealPresence Collaboration Server (RMX) 2000/4000 only. The IP address of the external database server, if one is used. Default: 0.0.0.0	✓
EXTERNAL_DB_LOGIN	Applicable to the RealPresence Collaboration Server (RMX) 2000/4000 only. The login name defined for the Collaboration Server in the external database server. Default: POLYCOM	✓
EXTERNAL_DB_PASSWORD	Applicable to the RealPresence Collaboration Server (RMX) 2000/4000 only. The password associated with the user name defined for the Collaboration Server on the external database server. Default: POLYCOM	✓
EXTERNAL_DB_PORT	Applicable to the RealPresence Collaboration Server (RMX) 2000/4000 only. The external database server port used by the Collaboration Server to send and receive XML requests/responses. For secure communications set the value to 443. Default: 5005.	✓

The MCMS System Flags

Flag	Description	Add?
FORCE_1X1_LAYOUT_ON_CASC ADED_LINK_CONNECTION	<p>When set to YES, the cascaded link is automatically set to Full Screen (1x1) in CP conferences forcing the speaker in one cascaded conference to display in full window in the video layout of the other conference.</p> <p>Set this flag to NO when connecting to an MGC using a cascaded link, if the MGC is functioning as a Gateway and participant layouts on the other network are not to be forced to 1X1.</p> <p>Default: YES</p>	✓
FORCE_AUDIO_CODEC_FOR_MS _SINGLE_CORE	<p>This flag is used to force the use of a specific Audio algorithm when a Microsoft Office Communicator R2 or Lync Client is hosted on a workstation with a single core processor. The flag value overrides the default audio algorithm selection (G.722.1) that may cause audio quality problems when G.722.1 is used by Microsoft Clients running on single processor workstations.</p> <p>This flag can be set to:</p> <ul style="list-style-type: none"> • AUTO – No forcing occurs and the Collaboration Server negotiates a full set of Audio algorithm during capabilities exchange. • G711A/U or G722 – Set this flag value according to the hosting workstation capabilities. If the Collaboration Server detects single core host during capabilities exchange it will assign a G.711 or G.722 Audio algorithm according to the flag value. <p>Possible values: AUTO, G711A, G711U, G722</p> <p>Default: G711A</p>	✓
FORCE_CIF_PORT_ALLOCATION	<p>Sets the MCU to allocate one CIF video resource to an endpoint, regardless of the resolution determined by the Conference Profile parameters. You can specify the endpoint types for which resource allocation can be forced to CIF resource, enabling other types of endpoints to use higher resolutions in the same conference.</p> <p>Enter the product type to which the CIF resource should be allocated. Possible values are VSX nnnn - where nnnn represents the model number for example, VSX 8000.</p>	✗
FORCE_ENCRYPTION_FOR_UNDE FINED_PARTICIPANT_IN_WHEN _AVAILABLE_MODE	<p>When set to YES, Undefined participants must connect encrypted, otherwise they are disconnected.</p> <p>When set to NO (default) and the conference Encryption in the Profile is set to Encrypt When Possible, both Encrypted and Non-encrypted Undefined participants can connect to the same conferences, where encryption is the preferred setting.</p> <p>Default: NO</p>	✓
FORCE_G711A	<p>Setting this flag forces the use of the G711A Audio Codec.</p> <p>Possible values: YES / NO</p> <p>Default: NO</p>	✓

The MCMS System Flags

Flag	Description	Add?
FORCE_RESOLUTION	Use this flag to specify IP (H.323 and SIP) endpoint types that cannot receive wide screen resolution and that were not automatically identified as such by the Collaboration Server. Possible values are endpoint types, each type followed by a semicolon. For example, when disabling Wide screen resolution in an HDX endpoint enter the following string: HDX ; Note: Use this flag when the flag SEND_WIDE_RES_TO_IP is set to YES.	✓
FORCE_STATIC_MB_ENCODING	This flag supports Tandberg MXP mode of sending and receiving video by IP endpoint in HD 720p resolution and Video Quality set to Motion. This mode is not supported for ISDN endpoints. Default value: Tandberg MXP . To disable this flag, enter NONE .	✓
FORCE_STRONG_PASSWORD_POLICY	When set to YES, implements the Strong Password rules. For more details, Changing a User's Password . Default: NO (default when ULTRA_SECURE_MODE=YES),	✗
FORCE_SYSTEM_BROADCAST_VOLUME	If set to YES, the level of broadcasting volume of the connected participant is value taken from the system flag SYSTEM_BROADCAST_VOLUME. If set to NO (default), the broadcasting volume level is 5.	✗
FORCE_SYSTEM_LISTENING_VOLUME	If set to YES, the level of listening volume of the connected participant is value taken from the system flag SYSTEM_LISTENING_VOLUME. If set to NO (default), the listening volume level is 5.	✗
G728_IP	Enables or disables declaration of G.728 Audio Algorithm capabilities in IP calls. Range: YES / NO Default: NO	✓
G728_ISDN	Enables or disables declaration of G.728 Audio Algorithm capabilities in ISDN calls. Range: YES / NO Default: NO	✓
GK_MANDATORY_FOR_CALLS_IN	If set to YES, a gatekeeper is required to receive incoming H.323 calls. If a gatekeeper is not configure in the Collaboration Server, the calls will fail. If set to NO (default), gatekeeper is not required to process H.323 incoming calls and H.323 participants can dial in with or without a gatekeeper.	✗

The MCMS System Flags

Flag	Description	Add?
GK_MANDATORY_FOR_CALLS_OUT	<p>If set to YES, a gatekeeper is required to perform H.323 outgoing calls. If a gatekeeper is not configured on the Collaboration Server, the calls will fail.</p> <p>If set to NO (default), gatekeeper is not required to dial out to H.323 participants and calls can be dialed out with or without a gatekeeper.</p>	✗
H239_FORCE_CAPABILITIES	<p>When the flag is set to NO, the Collaboration Server only verifies that the endpoint supports the Content protocols: Up to H.264 or H.263.</p> <p>When set to YES, the Collaboration Server checks frame rate, resolution and all other parameters of the Content mode as declared by an endpoint before receiving or transmitting Content. Default: NO.</p>	✓
H263_ANNEX_T	<p>Set to NO to send the content stream without Annex T and enable Aethra and Tandberg endpoints, that do not support Annex T, to process the content.</p> <p>Default: YES</p>	✗
H264_HD_GRAPHICS_MIN_CONTENT_RATE	<p>Determines the minimum content rate (in kbps) required for endpoints to share H.264 high quality content via the Content channel When Content Setting is Graphics.</p> <p>Range: 0-1536 Default: 128</p>	✓
H264_HD_HIGHRES_MIN_CONTENT_RATE	<p>Determines the minimum content rate (in kbps) required for endpoints to share H.264 high quality content via the Content channel When Content Setting is Hi Resolution Graphics.</p> <p>Range: 0-1536 Default: 256</p>	✓
H264_HD_LIVEVIDEO_MIN_CONTENT_RATE	<p>Determines the minimum content rate (in kbps) required for endpoints to share H.264 high quality content via the Content channel When Content Setting is Live Video.</p> <p>Range: 0-1536 Default: 384</p>	✓
H323_FREE_VIDEO_RESOURCES	<p>For use in the Avaya Environment.</p> <p>In the Avaya Environment there are features that involve converting undefined dial-in participants' connections from video to audio (or vice versa). To ensure that the participants' video resources remain available for them, and are not released for use by Audio Only calls, set this flag to NO.</p> <p>If set to YES, the Collaboration Server will release video resources for Audio Only calls.</p> <p>Default: YES.</p>	✓

The MCMS System Flags

Flag	Description	Add?
HD_THRESHOLD_BITRATE	Sets the minimum bit rate required by endpoints to connect to an HD Conference. Endpoints that cannot support this bit rate are connected as audio only. Range: 384kbps - 4Mbps (Default: 768)	✘
HIDE_CONFERENCE_PASSWORD	If set to YES (default in Ultra Secure Mode): <ul style="list-style-type: none"> Conference and Chairperson Passwords that are displayed in the Collaboration Server Web Client or RMX Manager are hidden when viewing the properties of the conference. Automatic generation of passwords (both conference and chairperson passwords) is disabled, regardless of the settings of the flags: <ul style="list-style-type: none"> ▲ NUMERIC_CONF_PASS_DEFAULT_LEN ▲ NUMERIC_CHAIR_PASS_DEFAULT_LEN. For more information see Automatic Password Generation Flags . Default: NO.	✓
HW_FOLLOW_SPEAKER_RESOLUTION_ON_1X1_LAYOUT	Enables endpoints capable of higher resolution In a conference where some endpoints are lower than 4CIF and others are higher to receive the Indication icons. Range: <ul style="list-style-type: none"> AUTO (default) - When any of the Indication Icons are configured for display, do not follow the speaker. When the Indication Icons are not configured for display, follow the speaker. YES - Always follow the speaker in 1x1 layout. NO - Never follow the speaker in 1x1 layout. 	✘
IGNORE_AIM	Audio Indicate Muted (AIM) is Relevant to H.323 endpoints. When an endpoint mutes its microphone, it does not necessarily mute its entire audio stream. This allows sharing of Content that includes audio while microphones are muted. When set to: NO - When the AIM signal is received, the participant is muted and a mute icon is displayed in the RMX Web Client / RMX Manager. YES - When the AIM signal is received, the participant is not muted and a mute icon is not displayed in the RMX Web Client / RMX Manager. Range: YES, NO Default: NO	✓
INTERNAL_SCHEDULER	When set to NO (default) this flag prevents potential scheduling conflicts from occurring as a result of system calls from external scheduling applications such as Polycom ReadManager®, and others via the API. Set to YES to schedule conference reservations using an external scheduling application.	✘

The MCMS System Flags

Flag	Description	Add?
IP_LINK_ENVIRONMENT	In H.239-enabled MIH Cascading, when MGC is on level 1, setting this flag to YES will adjust the line rate of HD Video Switching conferences run on the RealPresence Collaboration Server (RMX) 1800/2000/4000 from 1920Kbps to 18432, 100bits/sec to match the actual rate of the IP Only HD Video Switching conference running on the MGC. Note: If the flag MIX_LINK_ENVIRONMENT is set to NO, the IP_ENVIRONMENT_LINK flag must be set to YES.	✓
IP_RESPONSE_ECHO	When the System Flag value is YES , the Collaboration Server will respond to ping (IPv4) and ping6 (IPv6) commands. When set to NO , the Collaboration Server will not respond to ping and ping6 commands.	✓
IPV6_AUTO_ADDRESS_CONFIGURATION_METHOD	SLAAC (Stateless Address Auto Configuration) and DHCPv6 related system behavior is controlled by setting this flag's value as required. Range: AUTO / SLAAC AUTO—(default) Use DHCPv6 first in case of failure use SLAAC. SLAAC—Use SLAAC only.	✓
ISDN_COUNTRY_CODE	The name of the country in which the MCU is located. Default: COUNTRY_NIL	✗
ISDN_IDLE_CODE_E1	The Idle code (silent), transmitted on the ISDN E1 B channels, when there is no transmission on the channels. Default: 0x54	✗
ISDN_IDLE_CODE_T1	The Idle code (silent), transmitted on the ISDN T1 B channels, when there is no transmission on the channels. Default: 0x13	✗
ISDN_NUM_OF_DIGITS	When using ISDN Overlap sending dialing mode, this field holds the number of digits to be received by the MCU. Default: 9	✗

The MCMS System Flags

Flag	Description	Add?
ISDN_RESOURCE_POLICY	<p>The flag value determines how the ISDN B-channels within configured spans are allocated.</p> <p>The robustness of the ISDN network can be improved by allocating channels evenly (load balancing) among the spans, minimizing the effect of channel loss resulting from the malfunction of a single span.</p> <p>Set the flag value to:</p> <ul style="list-style-type: none"> LOAD_BALANCE - To allocate channels evenly among all configured spans. FILL_FROM_FIRST_CONFIGURED_SPAN - To allocate all channels on the first configured span before allocating channels on other spans. FILL_FROM_LAST_CONFIGURED_SPAN - To allocate all channels on the last configured span before allocating channels on other spans. <p>Default: LOAD_BALANCE</p>	✘
ITP_CERTIFICATION	<p>When set to NO (default), this flag disables the telepresence features in the Conference Profile.</p> <p>Set the flag to YES to enable the telepresence features in the Conference Profile (provided that the appropriate License is installed).</p>	✓
ITP_CROPPING	<p>If the conference is set to TelePresence mode, cropping of the image is done according to this flag value:</p> <ul style="list-style-type: none"> ITP (default) - No cropping of left-right, symmetric cropping of top-bottom. CP - Symmetric cropping of both left-right and top-bottom areas (separately calculated). MIXED - Symmetric cropping of left-right areas and asymmetric cropping of top-bottom areas (16% from top, 84% of bottom). <p>For illustrations of these three options, see Cropping.</p> <p>Note: If the flag was added with no value, and the conference is set to TelePresence mode, left-right areas are not cropped, and top-bottom areas are asymmetric cropped (16% from top, 84% from bottom),</p>	✘
IVR_MESSAGE_VOLUME	<p>The volume of IVR messages varies according to the value of this flag.</p> <p>Possible value range: 0-10 (Default: 6).</p> <p>0 – disables playing the IVR messages 1 – lowest volume 10 – highest volume</p> <p>Notes:</p> <ul style="list-style-type: none"> It is not recommended to disable IVR messages by setting the flag value to 0. System reset is not required for flag changes to take effect. 	✘

The MCMS System Flags

Flag	Description	Add?
IVR_MUSIC_VOLUME	<p>The volume of the IVR music played when a single participant is connected to the conference varies according to the value of this flag.</p> <p>Possible value range: 0-10 (Default: 5).</p> <p>0 – disables playing the music 1 – lowest volume 10 – highest volume</p> <p>Note: System reset is not required for flag changes to take effect.</p>	✘
IVR_ROLL_CALL_VOLUME	<p>The volume of the Roll Call varies according to the value of this flag.</p> <p>Possible value range: 0-10 (Default: 6).</p> <p>0 – disables playing the Roll Call 1 – lowest volume 10 – highest volume</p> <p>Note:</p> <ul style="list-style-type: none"> It is not recommended to disable the Roll Call by setting the flag value to 0. System reset is not required for flag changes to take effect. 	✘
LAN_REDUNDANCY	<p>Enables Local Area Network port redundancy on RealPresence Collaboration Server (RMX) 2000/4000 RTM LAN Card.</p> <p>Range: YES / NO</p> <p>Default: NO</p> <p>Note: If the flag value is set to YES and either of the LAN connections (LAN1 or LAN2) experiences a problem, an active alarm is raised stating that there is no LAN connection, specifying both the card and port number.</p>	✓
LAST_LOGIN_ATTEMPTS	<p>If YES, the system displays a record of the last Login of the user.</p> <p>Default: NO.</p> <p>For more details, see User Login Record.</p>	✘
LEGACY_EP_CONTENT_DEFAULT_LAYOUT	<p>Defines the video layout to be displayed on the screen of the legacy endpoints when switching to Content mode.</p> <p>Default value: CP_LAYOUT_1P7 (1+7).</p> <p>For a detailed list of possible flag values for the various video layouts, see Legacy Endpoint Content Default Layout Flag Values.</p>	✘

The MCMS System Flags

Flag	Description	Add?
LPR_CONTENT_RATE_ADJUST_WEAK_LPR	<p>When LPR is initiated by an endpoint in an AVC-CP conference due to experienced packet loss, the MCU reduces video rate (minimum is 64K) to avoid exceeding bandwidth.</p> <p>At times, further reduction is required to preserve the bandwidth, which is regulated by this system flag.</p> <p>Set this flag value to YES, to enable H.323 endpoints to reduce their content rate or LPR strength as follows:</p> <ul style="list-style-type: none"> • For single MCU conferences: <ul style="list-style-type: none"> ▲ VSW content - Drop content rate upon packet loss condition. ▲ Transcoding - Drop content rate upon packet loss condition for the protocol used by the endpoint experiencing the packet loss. • For cascaded conferences: <ul style="list-style-type: none"> ▲ VSW content - Decrease LPR strength (from 5% to 2%). ▲ Transcoding: <ul style="list-style-type: none"> <u>If packet loss occurs at one of the local endpoints</u>, drop content rate upon packet loss condition for the protocol used by the endpoint experiencing the packet loss. <u>If packet loss occurs at the cascaded link</u>, Decrease LPR strength (from 5% to 2%). <p>If you set this flag to NO, the content rate is not reduced, and MCU packet loss protection is guaranteed for 5%.</p> <p>Range: YES / NO Default: NO</p> <p>Notes:</p> <ul style="list-style-type: none"> • No system restart is required for this flag new value to take effect. • This flag should not be set to YES in systems using TIP conferencing. 	✓
LYNC_AVMCU_1080p30_ENCODE_RESOLUTION	<p>MS AV MCU Cascade deployment supports HD1080p30 video resolution according to the settings of this flag only if Video Optimized mode is selected.</p> <p>Range: YES / NO Default: NO</p> <ul style="list-style-type: none"> • NO—Video streams sent to and received from the MS AV MCU are HD720p30, SD, and CIF. • YES—Video streams sent to the MS AV MCU are HD1080p30, SD, CIF. Video streams received from the MS AV MCU are 720p30, SD, and CIF. <p>For more information see Video Resource Requirement Selection in Lync 2013 AVMCU Cascade.</p>	✓

The MCMS System Flags

Flag	Description	Add?
MANAGE_TELEPRESENCE_ROOM_SWITCH_LAYOUTS	<p>Determines whether the MLA or the RMX controls the Room Switch Telepresence Layouts.</p> <ul style="list-style-type: none"> When set to NO, the RMX does not manage Telepresence Room Switch Layouts and they continue to be managed by the MLA. When set to YES, the RMX manages Telepresence Room Switch Layouts. <p>Default: NO Range: YES / NO Note: System re-start is not required for this flag's settings to take effect. For more information see Room Switch Telepresence Layouts.</p>	✓
MAX_ALLOWED_RTV_HD_FRAME_RATE	<p>Defines the threshold Frame Rate (fps) in which RTV Video Protocol initiates HD resolutions.</p> <p>Flag values are as follows: Range: 0-30 (fps) Default: 0 (fps) - Implements any Frame Rate based on Lync RTV Client capabilities</p>	✓
MAX_CONF_PASSWORD_REPEAT_DIGITS	<p>Allows the administrator to configure the maximum number of consecutive repeating characters that are to be allowed in a conference password.</p> <p>Range: 1 - 4 Default: 2</p>	✗
MAX_CP_RESOLUTION	<p>The MAX_CP_RESOLUTION flag value is applied to the system during First Time Power-on and after a system upgrade. The default value is HD1080.</p> <p>All subsequent changes to the Maximum CP Resolution of the system are made using the Resolution Configuration dialog box.</p> <p>Possible flag values:</p> <ul style="list-style-type: none"> HD1080 – High Definition at 60 fps HD1080 - High Definition at 30 fps HD720 – High Definition at 60 fps HD – High Definition at 30 fps SD30 – Standard Definition at 30 fps SD15 – Standard Definition at 15 fps CIF – CIF resolution <p>Default: HD1080 For more information see Video Resolutions in AVC CP Conferencing.</p>	✗

The MCMS System Flags

Flag	Description	Add?
MAX_INTRA_REQUESTS_PER_INTERVAL	Enter the maximum number of refresh (intra) requests for the Content channel sent by the participant's endpoint in a 10 seconds interval that will be dealt by the Collaboration Server system. When this number is exceeded, the Content sent by this participant will be identified as noisy and his/her requests to refresh the Content display will be suspended. Default setting: 3	✘
MAX_INTRA_SUPPRESSION_DURATION_IN_SECONDS	Enter the duration in seconds to ignore the participant's requests to refresh the Content display. Default setting: 10	✘
MAX_MS_SVC_RESOLUTION	Used to minimizing the resource usage by overriding the default resolution selection and limiting it to a lower resolution. Range: AUTO, CIF, VGA, HD720, HD1080 Default: AUTO The MAX_MS_SVC_RESOLUTION System Flag operates independently from the MAX_RTV_RESOLUTION System Flag allowing differing maximum resolutions to be selected for the MS SVC and RTV protocols.	✓
MAX_NUMBER_OF_MANAGEMENT_SESSIONS_PER_SYSTEM	Defines the maximum number of concurrent management sessions (http and https connections) per system. Value: 4 - 80 Default: 80	✘
MAX_NUMBER_OF_MANAGEMENT_SESSIONS_PER_USER	Defines the maximum number of concurrent management sessions (http and https connections) per user. Value: 4 - 80 Default: 10 (20 in Ultra Secure Mode)	✘
MAX_PASSWORD_REPEATED_CHARACTER	Allows the administrator to configure the maximum number of consecutive repeating characters to be allowed in a user password. Range: 1 - 4 Default: 2	✘
MAX_PASSWORD_REPEATED_CHARACTER	Allows the administrator to configure the maximum number of consecutive repeating characters to be allowed in a password. Range: 1 - 4 Default: 2	✘
MAX_RTV_RESOLUTION	Enables you to override the Collaboration Server resolution selection and limit it to a lower resolution, hence minimizing the resource usage to 1 or 1.5 video resources per call instead of 3 resources. Possible flag values are: AUTO (default), QCIF, CIF, VGA or HD720.	✓

The MCMS System Flags

Flag	Description	Add?
MAX_TRACE_LEVEL	<p>This flag indicates the debugging level for system support.</p> <p>Possible values: TRACE = t DEBUG = d INFO_NORMAL = n INFO_HIGH = i WARN = w ERROR = e FATAL = f OFF = o</p> <p>Default: n</p>	✓
MAXIMUM_RECORDING_LINKS	<p>The maximum number of Recording Links available for selection in the Recording Links list and the Conference Profile - Recording dialog box.</p> <p>Range: 1 - 100 Default: 20</p>	✓
MAX_KEEP_ALIVE_REQUESTS	<p>The number of <i>KeepAliveTimeout</i> request intervals for the <i>Apache</i> server.</p> <p>In a <i>Maximum Security Environment</i> this value must be set to a value of 1814400 to ensure that the <i>RMX Manager</i> will remain connected for several hours, but not indefinitely. The exact time period depends on the type of client that is connected and the number of requests.</p> <p>Default: 0 (This value should never be used as the connection time is unlimited.)</p> <p>(If the <i>SESSION_TIMEOUT_IN_MINUTES</i> System Flag is configured, the <i>RMX Manager</i> will disconnect after the specified period if there is no keyboard or mouse activity.)</p> <p>This flag is configurable regardless of security mode.</p>	✓
MCU_DISPLAY_NAME	<p>The name of the MCU that is displayed on the endpoint's screen when connecting to the conference.</p> <p>Default: POLYCOM RealPresence Collaboration Server 1800/2000/4000 (the last depends on the product type).</p>	✗
MEDIA_NIC_MTU_SIZE	<p>The maximum data payload size (bytes) transmitted in a single packet over the network, and should be minimally the <i>MTU_SIZE</i> (see below) to avoid fragmenting of data packets.</p> <p>The Collaboration Server sends large amount of data over the network and may be required to adjust its MTU size according to the network environment in which it is deployed.</p> <p>Range: 500-20,000. Values outside that range are treated as 1,500.</p> <p>Default: 1,500</p>	✓

The MCMS System Flags

Flag	Description	Add?
MIN_H239_HD1080_RATE	Used to set the threshold line rate for HD Resolution Content: the line rate at which the Collaboration Server will send Content at HD1080 Resolution. Setting the flag to 0 disables HD Resolution Content. Default: 768 kbps.	✓
MIN_PASSWORD_LENGTH	The length of passwords. Possible value: between 0 and 20. 0 means this rule is not enforced. For more details, see Password Length .	✗
MIN_PWD_CHANGE_FREQUENCY_IN_DAYS	Defines the frequency with which a user can change a password. Values: 0 -7. 0 (standard default) - users do not have to change their passwords. For details, see Defining Password Change Frequency .	✗
MIN_SYSTEM_DISK_SPACE_TO_ALERT	Defines a minimum remaining Collaboration Server disk capacity in megabytes. If the remaining disk capacity falls below this level an active alarm is raised. Default: 2048	✗
MIN_TIP_COMPATIBILITY_LINE_RATE	This flag determines the minimum line rate at which conferencing entities such as an Entry Queue or Meeting Room can be TIP-enabled and TIP-enabled endpoints can connect to them. CTS version 7 requires a minimum line rate of 1024 kbps and will reject calls at lower line rates, therefore the System Flag value should be 1024 kbps or higher. 0 means that no minimum line rate is enforced on the conference for TIP connectivity. Default: 1024	✗
MINIMUM_FRAME_RATE_THRESHOLD_FOR_SD	Low quality, low frame rate video is prevented from being sent to endpoints by ensuring that an SD channel is not opened at frame rates below the specified value. Range: 0 -30 Default: 15	✓
MIX_LINK_ENVIRONMENT	In H.239-enabled MIH Cascading, when MGC is on level 1, setting this flag to YES will adjust the line rate of HD Video Switching conferences run on the RealPresence Collaboration Server (RMX) 1800/2000/4000 from 1920Kbps to 17897, 100bits/sec to match the actual rate of the HD Video Switching conference running on the MGC. Note: If the flag MIX_LINK_ENVIRONMENT is set to YES, the IP_ENVIRONMENT_LINK flag must be set to NO.	✓

The MCMS System Flags

Flag	Description	Add?
MS_CAC_AUDIO_MIN_BR	The minimum bit rate for audio using the Microsoft CAC (Call Admission Control) protocol. When the bit rate is lower than the MS_CAC_AUDIO_MIN_BR, the call is not connected. Range: 0 - 384 Default: 30	✓
MS_CAC_VTDEO_MIN_BR	The minimum bit rate for video using the Microsoft CAC (Call Admission Control) protocol. When the bit rate is lower than the MS_CAC_VIDEO_MIN_BR, the call is not connected as a video call.. Range: 0 - 384 Default: 40	✓
MS_ENVIRONMENT	If YES , sets the Collaboration Server SIP environment to integrate with Microsoft OCS solution. Default: NO	✗
MS_PROXY_REPLACE	Enables the proxy=replace parameter in the SIP Header. When set to YES the outbound proxy to replaces the contact information in the contact header with its own enabling other clients and servers to reach the client using the proxy's IP address, even if the client is behind a firewall. Possible Values: YES / NO Default: YES	✓
MTU_SIZE	Determines the maximum packet size created by the encoder. Range: 400 - 1440 Default: 1120 Note: Maximum MTU size in multiple services environments is 1120.	✓
MULTIPLE_SERVICES	Determines whether the Multiple Services option is be activated once the appropriate license is installed. Possible Values: YES / NO Default: NO Note: If the MULTIPLE_SERVICES System Flag is set to YES and no RTM ISDN or RTM LAN card is installed in the RealPresence Collaboration Server , an Active Alarm is displayed.	✗
NETWORK_IND_CRITICAL_PERCENTAGE	The percentage degradation due to packet loss required to change the indicator from Major to Critical. Default: 5	✓
NETWORK_IND_MAJOR_PERCENTAGE	The percentage degradation due to packet loss required to change the indicator from Normal to Major. Default: 1	✓

The MCMS System Flags

Flag	Description	Add?
NUM_OF_INITIATE_HELLO_MESSAGE_IN_CALL_ESTABLISHMENT	Indicates how many times the Hello (keep alive) message is sent from the Collaboration Server to the endpoint in an environment that includes a Session Border Controller (SBC) with a 3-second interval between messages. Range: 1 to 10. Default:3	✓
NUM_OF_LOWER_CASE_ALPHABETIC	The minimum number of lower case alphabetic characters required in a Login password in Ultra Secure Mode. Default: 0	✗
NUM_OF_NUMERIC	The minimum number of numeric characters required in a Login password in Ultra Secure Mode. Default: 0	✗
NUM_OF_SPECIAL_CHAR	The minimum number of special characters (asterisks, brackets, periods etc.) required in a Login password in Ultra Secure Mode. Default: 0	✗
NUM_OF_UPPER_CASE_ALPHABETIC	The minimum number of upper case alphabetic characters required in a Login password in Ultra Secure Mode. Default: 0	✗
NUMBER_OF_REDIAL	Enter the number re dialing attempts required. Dialing may continue until the conference is terminated. Default: 3	✓
NUMERIC_CHAIR_PASSWORD_DEFAULT_LEN	This flag enables or disables the automatic generation of chairperson passwords and determines the number of digits in the chairperson passwords assigned by the MCU. Possible values are: <ul style="list-style-type: none"> • 0 disables the automatic password generation in both Standard Security Mode or Ultra Secure Mode. Any value other than 0 enables the automatic generation of chairperson passwords if the flag <code>HIDE_CONFERENCE_PASSWORD</code> is set to NO. • 1 – 16, default: 6 (Standard Security Mode) • 9 – 16, default: 9 (Ultra Secure Mode). If the default is used, in non-secured mode the system will automatically generate chairperson passwords that contain 6 characters.	✗
NUMERIC_CHAIR_PASSWORD_MAX_LENGTH	The maximum number of digits that the user can enter when manually assigning a password to the chairperson. Range: 0 – 16 Default: 16	✗

The MCMS System Flags

Flag	Description	Add?
NUMERIC_CHAIR_PASS_MIN_LENGTH	Defines the minimum length required for the Chairperson password. Value: 0-16 Default: 0 - This rule is not enforced.	✘
NUMERIC_CONF_ID_LENGTH	Defines the number of digits in the Conference ID that will be assigned by the MCU. Enter 0 to disable the automatic assignment of IDs by the MCU and let the Collaboration Server user manually assign them. Range: 2-16 (Default: 4).	✘
NUMERIC_CONF_ID_MAX_LENGTH	The maximum number of digits that the user can enter when manually assigning an ID to a conference. Range: 2-16 (Default: 8) Note: Selecting 2 limits the number of simultaneous ongoing conferences to 99.	✘
NUMERIC_CONF_ID_MIN_LENGTH	The minimum number of digits that the user must enter when manually assigning an ID to a conference. Range: 2-16 (Default: 4) Note: Selecting 2 limits the number of simultaneous ongoing conferences to 99.	✘
NUMERIC_CONF_PASS_DEFAULT_LENGTH	This flag enables or disables the automatic generation of conference passwords and determines the number of digits in the conference passwords assigned by the MCU. Possible values are: <ul style="list-style-type: none"> 0 disables the automatic password generation in both Standard Security Mode or Ultra Secure Mode. Any value other than 0 enables the automatic generation of conference passwords if the flag HIDE_CONFERENCE_PASSWORD is set to NO. 1 – 16, default: 6 (Standard Security Mode) 9 – 16, default: 9 (Ultra Secure Mode). If the default is used, in non-secured mode the system will automatically generate conference passwords that contain 6 characters.	✘
NUMERIC_CONF_PASS_MAX_LENGTH	The maximum number of digits that the user can enter when manually assigning a password to the conference. Range: <ul style="list-style-type: none"> 0 – 16 (Standard Security Mode) 9 – 16 (Ultra Secure Mode). Default (both Modes): 16	✘

The MCMS System Flags

Flag	Description	Add?
NUMERIC_CONF_PASS_MIN_LEN	<p>Defines the minimum length required for the Conference password.</p> <p>Value: 0-16</p> <p>Default:</p> <ul style="list-style-type: none"> • 0 - (Standard Security Mode) this rule is not enforced. However this rule cannot be disabled when the Collaboration Server is in Ultra Secure Mode. • 9 - (Ultra Secure Mode) Conference password must be at least 9 characters in length (default). 	✘
OCSP_RESPONDER_TIMEOUT	<p>Not Supported in RMX 1800.</p> <p>Determines the number of seconds the RMX is to wait for an OCSP response from the OCSP Responder before failing the connection.</p> <p>Network latency or slow WAN links can cause login problems when logging in to the RMX's Management Network. This System Flag's value determines the number of seconds the MCU is to wait for an OCSP response from the OCSP Responder before failing the connection.</p> <p>Default: 3 (seconds)</p> <p>Range: 1-20 (seconds)</p>	✓
PAL_NTSC_VIDEO_OUTPUT	<p>When set to AUTO (default), the video output sent by the Collaboration Server is either PAL or NTSC format, depending on the current speaker in the layout. This ensures full synchronization between the frame rate of the speaker and the video encoder, ensuring smoother video.</p> <p>In environments where the majority of endpoints are configured to either NTSC or PAL, the flag can be set accordingly to change the video encoding of the Collaboration Server to be compatible with the majority of endpoints in the call.</p> <p>Possible Values: AUTO, PAL, NTSC</p>	✘
PARTY_GATHERING_DURATION_SECONDS	<p>The value of this System Flag sets the duration, in seconds, of the display of the Gathering slide for participants that connect to the conference after the conference start time.</p> <p>Range: 0 - 3600</p> <p>Default: 15</p> <p>For more information see Video Preview (AVC Participants Only).</p>	✓
PASSWORD_EXPIRATION_DAYS	<p>Determines the duration of password validity.</p> <p>Value: between 0 and 90 days.</p> <p>0 - user passwords do not expire. In Ultra Secure Mode: default - 60 days, the minimum duration is 7 days.</p> <p>For details, see Defining Password Aging.</p>	✘
PASSWORD_EXPIRATION_DAYS_MACHINE	<p>Enables the administrator to change the password expiration period of Application-user's independently of regular users.</p> <p>Default: 365 (days).</p>	✘

The MCMS System Flags

Flag	Description	Add?
PASSWORD_EXPIRATION_WARNING_DAYS	Determines the display of a warning to the user of the number of days until password expiration. Value: between 0 and 14 days. 0 - password expiry warnings are not displayed. In Ultra Secure Mode, the earliest display - 14 days, the latest 7 days (default). For details, see Defining Password Aging .	✗
PASSWORD_FAILURE_LIMIT	The number of unsuccessful Logins permitted in Ultra Secure Mode. Default: 3	✓
PASSWORD_HISTORY_SIZE	The number of passwords that are recorded to prevent users from re-using their previous passwords. Values are between 0 and 16. For more details, see Implementing Password Re-Use / History Rules .	✗
PCM_FECC	Determines whether the DTMF Code, ##, the Far/Arrow Keys (FECC) or both will activate the PCM interface. This flag can be also be used in combination with DTMF code definitions to disable PCM. Possible Values: YES / NO Default: YES.	✓
PCM_LANGUAGE	Determines the language of the PCM interface. Possible Values are: ENGLISH, CHINESE_SIMPLIFIED, CHINESE_TRADITIONAL, JAPANESE, GERMAN, FRENCH, SPANISH, KOREAN, PORTUGUESE, ITALIAN, RUSSIAN, NORWEGIAN Default: Current Collaboration Server Web Client language.	✓
PORT_GAUGE_ALARM	When set to YES, if system resource usage reaches the High Port Usage Threshold as defined for the Port Gauges, System Alerts in the form of an Active Alarm and an SNMP trap are generated.	✓
PRESERVE_ICE_CHANNEL_IN_CASE_OF_LOCAL_MODE	When set to NO (default), local the ICE channel is closed after applying CAC bandwidth management when Call Admission Control is enabled in the local network. When set to YES, the ICE channel is preserved open throughout the call. Default: NO	✓

The MCMS System Flags

Flag	Description	Add?
PRESERVE_PARTY_CELL_ON_FORCE_LAYOUT	<p>Used to prevent reassignment of cells in a forced layout that were assigned to endpoints that have disconnected, paused their video, or have been removed from the conference. The cell will remain black until the endpoint reconnects or a new layout is used, or the conference ends.</p> <p>Range: YES / NO Default: NO</p> <ul style="list-style-type: none"> NO - Cells of dropped endpoints are reassigned. Endpoints that reconnect will be treated as new endpoints. YES - Cells of dropped endpoints are not reassigned, but will be reserved until the endpoint reconnects. <p>Forced Layout Guidelines:</p> <ul style="list-style-type: none"> It is recommended that this flag be set to YES if the Collaboration Server is used primarily for ITP conferences with MLA. When a new forced layout is sent to the MCU, the MCU no longer preserves the cells for disconnected participants. The layout is redrawn using the currently connected participants only. If the dropped endpoint was forced to use a particular cell, and that cell is switched from forced layout to automatically assigned, the MCU no longer preserves the cell. Any other endpoint can be assigned that particular cell. This feature works the same way in Telepresence conferences, even where the layouts are controlled by MLA. 	✓
PSTN_RINGING_DURATION_SECONDS	<p>If there is a slow response from the ISDN switch, the PSTN dial-out ringing duration (in seconds) is used by the Collaboration Server to disconnect the call.</p> <p>Default: 45</p>	✓
QOS_IP_AUDIO	<p>Used to select the Diffserv priority of audio packets when DiffServ is the selected method for packet priority encoding.</p> <p>For any given DSCP level, the flag must be set to the full 8-bit hexadecimal value of the DS/TOS byte, which contains the DSCP level as its upper six bits.</p> <p>For example, assuming that a DSCP level of 34 decimal is required: the binary representation of 34 is 0b100010, which, when placed into the upper six bits of the DS/TOS byte, becomes 0b[100010]00, or 0b1000 1000 = 0x88 hex. Thus the flag value should be set equal to 0x88.</p> <p>Default: 0x30</p>	✓

The MCMS System Flags

Flag	Description	Add?
QOS_IP_VIDEO	Used to select the Diffserv priority of video packets when DiffServ is the selected method for packet priority encoding. For any given DSCP level, the flag must be set to the full 8-bit hexadecimal value of the DS/TOS byte, which contains the DSCP level as its upper six bits. For example, assuming that a DSCP level of 34 decimal is required: the binary representation of 34 is 0b100010, which, when placed into the upper six bits of the DS/TOS byte, becomes 0b[100010]00, or 0b1000 1000 = 0x88 hex. Thus the flag value should be set equal to 0x88. Default: 0x30	✓
QOS_MANAGEMENT_NETWORK	Enter the DSCP value for the RMX Management Network. Default: 0x10 Range: 0x00 - 0x3F	✓
REDIAL_INTERVAL_IN_SECONDS	Enter the number of seconds that the Collaboration Server should wait before successive re dialing attempts. Range: 0-30 (Default: 10)	✓
REDUCE_CAPS_FOR_REDCOM_SIP	To accommodate deployments where some devices have limits on the size of the SDP payload in SIP messages (such as LSCs from Redcom running older software versions), when the flag value = YES, the SDP size is less than 2kb and includes only one audio and one video media line. Default: NO	✓
REDUCE_CAPS_FOR_REDCOM_SIP	To accommodate Redcom's SDP size limit, when the flag value = YES, the SDP size is less than 2kb and includes only one audio and one video media line. Default: NO	✓
REJECT_INCORRECT_PRECEDENCE_DOMAIN_NAME	When set to YES, when the Precedence Domain of a SIP dial-in call does not match the Precedence Domain of the RMX, the call is rejected. For more information, see MLPP (Multi Level Precedence and Preemption) . Possible values: YES/NO Default: No	✓
REMOVE_EP_FROM_LAYOUT_ON_NO_VIDEO_TIMER	Enables the removal of empty video cells from a Video Layout.	✓
REMOVE_H323_EPC_CAP_TO_NON_POLYCOM_VENDOR	Used to disable EPC protocol. Use of Polycom's proprietary protocol, High Profile, EPC, may result in interoperability issues when used with other vendors' endpoints. Possible values: YES / NO Default: NO	✓

The MCMS System Flags

Flag	Description	Add?
REMOVE_H323_HIGH_PROFILE_CAP_TO_NON_POLYCOM_VENDOR	Used to disable High Profile protocol. Use of Polycom's proprietary protocol, High Profile, may result in interoperability issues when used with other vendors' endpoints. Possible values: YES / NO Default: NO	✓
REMOVE_H323_HIGH_QUALITY_AUDIO_CAP_TO_NON_POLYCOM_VENDOR	Used to disable the following Audio Codecs: <ul style="list-style-type: none"> • G231 • G7221C • G7221 • G719 • Siren22 • Siren14 Possible values: YES / NO Default: NO	✓
REMOVE_H323_LPR_CAP_TO_NON_POLYCOM_VENDOR	Used to disable H.323 LPR protocol. Use of Polycom's proprietary protocol, H.323 LPR, may result in interoperability issues when used with other vendors' endpoints. Possible values: YES / NO Default: NO	✓
REMOVE_IP_IF_NUMBER_EXISTS	Between the time a conference is scheduled and when it becomes active, the IP of an endpoint may change, especially in an environment that uses DHCP. This flag determines if the E.164 number is to be substituted for the IP address in the dial string. Range: YES / NO Default: YES - The IP address will be substituted with the E.164 number.	✓
RESTRICT_CONTENT_BROADCAST_TO_LLECTURER	If set to YES , only the conference lecturer may send content to the conference. If set to NO , any conference participant can send content. Default: YES	✗
RFC2833_DTMF	Controls the receipt of in-band and out-of-band DTMF Codes. When set to: <ul style="list-style-type: none"> • YES The RMX will receive DTMF Codes sent in-band. • NO The RMX receive DTMF Codes sent out-of-band. The RMX always sends DTMF Codes in-band (as part of the Audio Media stream) and not as an RTP event. Range: YES/NO Default YES	✓
RMX_MANAGEMENT_SECURITY_PROTOCOL	Enter the protocol to be used for secure communications. Default: TLSV1_SSLV3 (both). Default for U.S. Federal licenses: TLSV1.	✓

The MCMS System Flags

Flag	Description	Add?
RMX2000_RTM_LAN	This flag is used after installation on and RTM-LAN card to activate the card. The flag must be set to YES . (RealPresence Collaboration Server (RMX) 2000 only.)	✗
RRQ_WITHOUT_GRQ	To enable registration, some gatekeepers require sending first RRQ and not GRQ. Set flag to YES , if this behavior is required by the gatekeeper in your environment. Default: NO . GRQ (Gatekeeper Request) - Gatekeeper discovery is the process an endpoint uses to determine which gatekeeper to register with. RRQ - registration request sent to the gatekeeper.	✗
RTCP_FIR_ENABLE	When set to YES, the Full Intra Request (FIR) is sent as INFO (and not RTCP). Default = YES	✓
RTCP_FLOW_CONTROL_TMMBR_ENABLE	Enables/disables the SIP RTCP flow control parameter. Default: YES	✓
RTCP_FLOW_CONTROL_TMMBR_INTERVAL	Modifies the interval (in seconds) of the TMMBR (Temporary Maximum Media Stream Bit Rate) parameter for SIP RTCP flow control. Range: 5 - 999 (seconds) Default: 180	✓
RTCP_PLI_ENABLE	When set to YES, the (Picture Loss Indication (PLI) is sent as INFO (and not RTCP). Default = YES	✓
RTCP_QOS_IS_EQUAL_TO_RTP	Range: YES/NO Default: YES	✓
RTV_MAX_BIT_RATE_FOR_FORCE_CIF_PARTICIPANT	Enables the removal of empty video cells from a Video Layout.	✓

The MCMS System Flags

Flag	Description	Add?
SELF_IND_LOCATION	<p>Change the location of the display of the Network Quality Indicator of the participant's own endpoint.</p> <p>Default: BOTTOM_RIGHT</p> <p>Range:</p> <ul style="list-style-type: none"> • TOP_LEFT • TOP • TOP_RIGHT • BOTTOM_LEFT • BOTTOM • BOTTOM_RIGHT <p>NOTE: This flag's function has been replaced by the Network Quality check box in the Layout Indications tab of the New Profile / Profile Properties dialog.</p>	✓
SEND_SIP_BUSY_UPON_RESOURCE_THRESHOLD	<p>When set to YES, it enables the Collaboration Server to send a busy notification to a SIP audio endpoint or a SIP device when dialing in to the Collaboration Server whose audio resource usage exceeded the Port Usage threshold.</p> <p>When set to NO, the system does limit the SIP audio endpoint connections to a certain capacity and will not send a busy notification when the resource capacity threshold is exceeded.</p> <p>Default: NO</p>	✓

The MCMS System Flags

Flag	Description	Add?
SEND_SRTP_MKI	<p>Enables or disables the inclusion of the MKI field in SRTP packets sent by the Collaboration Server. Setting the value to NO to disables the inclusion of the MKI field in SRTP packets sent by the Collaboration Server.</p> <p>Set this flag to:</p> <ul style="list-style-type: none"> • NO <ul style="list-style-type: none"> ▲ When all conferences on the RMX will not have MS-Lync clients participating and will have 3rd party endpoints participating. ▲ When using endpoints (eg. CounterPath Bria 3.2 Softphone) that cannot decrypt SRTP-based audio and video streams if the MKI (Master Key Identifier) field is included in SRTP packets sent by the Collaboration Server. • YES <ul style="list-style-type: none"> ▲ When any conferences on the RMX will have both MS-Lync clients and Polycom endpoints participating. ▲ Some 3rd party endpoints may be unsuccessful in participating in conferences with this setting. <p>Notes:</p> <ul style="list-style-type: none"> • This System Flag must be added and set to YES (default) when Microsoft Office Communicator and Lync Clients are used as they all support SRTP with MKI. • The system flag must be added and set to NO when Siemens phones (Openstage and ODC WE) are used in the environment as they do not support SRTP with MKI. • Polycom endpoints function normally regardless of the setting of this flag. <p>Default: YES</p>	✓
SEND_WIDE_RES_TO_IP	<p>When set to YES (default), the Collaboration Server sends wide screen resolution to IP endpoints. Endpoint types that do not support wide screen resolutions are automatically identified by the Collaboration Server according to their product type and version and will not receive the wide resolution even when the flag is set to YES.</p> <p>When manually added and set to NO, the Collaboration Server does not send wide screen resolution to all IP endpoints.</p> <p>Default: YES.</p>	✓
SEND_WIDE_RES_TO_ISDN	<p>When set to YES, the Collaboration Server sends wide screen resolution to ISDN endpoints.</p> <p>When set to NO (default), the Collaboration Server does not send wide screen resolution to ISDN endpoints.</p> <p>Default: NO.</p>	✓

The MCMS System Flags

Flag	Description	Add?
SEPARATE_MANAGEMENT_NETWORK	Enables/disables the Network Separation. Can only be disabled in the Ultra Secure Mode (ULTRA_SECURE_MODE=YES). Default: NO .	✗
SESSION_TIMEOUT_IN_MINUTES	If there is no input from the user or if the connection is idle for longer than the number of minutes specified by this flag, the connection to the Collaboration Server is terminated. If the ULTRA_SECURE_MODE = NO : <ul style="list-style-type: none"> • Range: 0-999 • Default: 0 (Feature is disabled.) If the ULTRA_SECURE_MODE = YES : <ul style="list-style-type: none"> • Range: 0-999 • Default: 10 	✗
SET_AUDIO_CLARITY	Audio Clarity improves received audio from participants connected via low audio bandwidth connections, by stretching the fidelity of the narrowband telephone connection to improve call clarity. The enhancement is applied to the following low bandwidth (4kHz) audio algorithms: <ul style="list-style-type: none"> • G.729a • G.711 Note: This flag sets the initial value for Audio Clarity during First-time Power-up. Thereafter the feature is controlled via the Profile Properties > Audio Settings dialog box. Possible Values: ON / OFF Default: OFF For more information see Defining New Profiles .	✓
SET_AUDIO_PLC	Packet Loss Concealment (PLC) for Siren audio algorithms improves received audio when packet loss occurs in the network. The following audio algorithms are supported: <ul style="list-style-type: none"> • Siren 7 (mono) • Siren 14 (mono/stereo) • Siren 22 (mono/stereo) Possible Values: ON / OFF Default: ON Note: The speaker's endpoint must use a Siren algorithm for audio compression.	✓

The MCMS System Flags

Flag	Description	Add?
SET_AUTO_BRIGHTNESS	<p>Auto Brightness detects and automatically adjusts the brightness of video windows that are dimmer than other video windows in the conference layout. Auto Brightness only increases brightness and does not darken video windows.</p> <p>Note: This flag sets the initial value for Auto Brightness during First-time Power-up. Thereafter the feature is controlled via the New Profile - Video Quality dialog box. Possible Values: YES / NO Default: NO For more information see Defining New Profiles.</p>	✓
SET_DTMF_SOURCE_DIFF_IN_SECONDS	<p>If the ACCEPT_VOIP_DTMF_TYPE flag is set to 0 (Auto) this flag determines the interval, in seconds after which the Collaboration Server will accept both DTMF tones (inband) and digits (outband). Default: 120</p>	✓
SIP_AUTO_SUFFIX_EXTENSION	<p>Used to automatically add a suffix to a SIP address (To Address) instead of adding it manually in the Collaboration Server Web Client (SIP address) when the SIP call is direct-dial and not through a Proxy.</p> <p>Example: Participant Name = john.smith Company Domain = maincorp.com SIP_AUTO_SUFFIX_EXTENSION flag value = @maincorp.com Entering john.smith will generate a SIP URI = john.smith@maincorp.com</p>	✗
SIP_BFCP_DIAL_OUT_MODE	<p>Controls BFCP's use of UDP and TCP protocols for dial-out SIP Client connections according to its value:</p> <ul style="list-style-type: none"> • AUTO (Default) If SIP Client supports UDP, TCP or UDP and TCP: - BFCP/UDP is selected as Content sharing protocol. • UDP If SIP Client supports UDP or UDP and TCP: - BFCP/UDP selected as Content sharing protocol. If SIP Client supports TCP - Cannot share Content. • TCP If SIP Client supports TCP or UDP and TCP - BFCP/TCP selected as Content sharing protocol. If SIP Client supports UDP - Cannot share Content. 	✓
SIP_DUAL_DIRECTION_TCP_CON	<p>In environments set to integration with Microsoft, if set to YES the system sends a new request on the same TCP connection (instead of opening a new one).</p>	✓

The MCMS System Flags

Flag	Description	Add?
SIP_ENABLE_FECC	By default, FECC support for SIP endpoints is enabled at the MCU level. You can disable it by manually adding this flag and setting it to NO.	✓
SIP_FAST_UPDATE_INTERVAL_ENV	Default setting is 0 to prevent the Collaboration Server from automatically sending an Intra request to all SIP endpoints. Enter n (where n is any number of seconds other than 0) to let the Collaboration Server automatically send an Intra request to all SIP endpoints every n seconds. It is recommended to set the flag to 0 and modify the frequency in which the request is sent at the endpoint level (as defined in the next flag).	✓
SIP_FAST_UPDATE_INTERVAL_ENDPOINT	Default setting is 6 to let the Collaboration Server automatically send an Intra request to Microsoft OC endpoints only, every 6 seconds. Enter any other number of seconds to change the frequency in which the Collaboration Server send the Intra request to Microsoft OC endpoints only. Enter 0 to disable this behavior at the endpoint level (not recommended).	✓
SIP_FIPS_MODE	Controls availability of PFX/PEM Certificate Method. Range: <ul style="list-style-type: none"> • YES - PFX/PEM is not available for selection in the user interface. • NO - PFX/PEM is available for selection in the user interface. Default: <ul style="list-style-type: none"> • Standard Security Mode - NO • Ultra Secure Mode - YES 	✓
SIP_FORMAT_GW_HEADERS_FOR_REDCOM	Controls whether the RMX adds special gateway prefix and postfix characters to the user portion of the SIP URI expressed in the From and Contact headers of SIP messages sent during calls involving Gateway Services. The addition of these characters can result in call failures with some SIP call servers. It is recommended to set this flag to YES whenever the RMX is deployed such that it registers its conferences to a SIP call server. Range: YES, NO Default: NO	✓

The MCMS System Flags

Flag	Description	Add?
SIP_FREE_VIDEO_RESOURCES	<p>For use in Avaya and Microsoft Environments.</p> <p>When set to NO (required for Avaya and Microsoft environments), video resources that were allocated to participants remain allocated to the participants as long as they are connected to the conference even if the call was changed to audio only. The system allocates the resources according to the participant's endpoint capabilities, with a minimum of 1 CIF video resource.</p> <p>Enter YES to enable the system to free the video resources for allocation to other conference participants. The call becomes an audio only call and video resources are not guaranteed to participants if they want to add video again.</p> <p>Default value in Microsoft environment: NO.</p>	✓
SIP_OMIT_DOMAIN_FROM_PARTY_NAME	<p>Enables the removal of Domain Names from SIP dial-in participants' Site Names. This prevents long domain names being appended to SIP participant names.</p>	✓

The MCMS System Flags

Flag	Description	Add?
SIP_TCP_KEEP_ALIVE_TYPE	<p>Possible Flag Values: 0, 1, 2, 3, 4</p> <p>0 (NONE)</p> <ul style="list-style-type: none"> No Keep Alive messages are sent. <p>1 (MS) (Default when Microsoft SIP Server Type is selected for the Network Service).</p> <ul style="list-style-type: none"> Keep Alive messages are sent only after successful registration. A Ping response is not expected. <p>2 (RFC5626)</p> <ul style="list-style-type: none"> In the SIP Header, the Flow-Timer Header Field is mandatory. Keep Alive messages are sent only after successful registration. A Ping response is expected and if none is received, the value of the SIP_TCP_KEEP_ALIVE_BEHAVIOR system flag is checked. <p>If its value is 0:</p> <ul style="list-style-type: none"> For a Register Dialog, a Reregister Message is sent. There is no disconnection. For a Call Dialog, no further messages are sent. There is no disconnection. <p>If its value is 1:</p> <ul style="list-style-type: none"> Both Register and Call Dialogs are disconnected. <p>3 (RFC6223)</p> <ul style="list-style-type: none"> Behavior is the same as for RFC5626 with the following differences: <ul style="list-style-type: none"> In the SIP Header, the Via Header “keep” is mandatory. In the SIP Header, the Flow-Timer Header Field is optional. <p>4 (PLCM) (Default when Generic SIP Server Type is selected for the Network Service).</p> <ul style="list-style-type: none"> For Call and successful Register Dialogues: <ul style="list-style-type: none"> Two CR LF character sequences are sent No Ping response is expected 	✓
SIP_TCP_KEEP_ALIVE_BEHAVIOR	<p>If the value of the System Flag, SIP_TCP_KEEP_ALIVE_TYPE=2 or 3 and no Ping is received, the value of this System Flag is checked.</p> <p>Possible Flag Values 0, 1:</p> <ul style="list-style-type: none"> 0 (RE_REGISTRATION_WHEN_NO_PONG_RESPONSE) 1 (DO_NOT_RE_REGISTRATION_WHEN_NO_PONG_RESPONSE) (Default) <p>For a full description see the description for the SIP_TCP_KEEP_ALIVE_TYPE flag (above).</p>	✓

The MCMS System Flags

Flag	Description	Add?
SIP_TCP_PORT_ADDR_STRATEGY	<p>Setting the flag to 1 prevents the use of two sockets for one SIP call - one for inbound traffic, one for outbound traffic. This is done by inserting port 5060/5061 into the Route[0] header.</p> <p>Possible values:</p> <ul style="list-style-type: none"> 0 - Inbound traffic on port 5060/5061 outbound traffic on port 60000 1 - Both inbound and outbound traffic on port 5060/5061 <p>Default: 0</p>	✓
SNMP_FIPS_MODE	<p>Controls availability of DES and MD5 Authentication Methods.</p> <p>Range:</p> <ul style="list-style-type: none"> YES - DES and MD5 are not available for selection in the user interface. NO - DES and MD5 are available for selection in the user interface. <p>Default:</p> <ul style="list-style-type: none"> Standard Security Mode - NO Ultra Secure Mode - YES 	✓
STAR_DELIMITER_ALLOWED	<p>When set to YES, an asterisk "*" can be used as a delimiter in Conference and Meeting Room dial strings.</p> <p>The dial string is first searched for "*" first followed by "#".</p> <p>Default: NO</p>	✗
SUPPORT_HIGH_PROFILE	<p>Enables or disables the support of High Profile video protocol in CP conferences. This flag is specific to CP conferences and has no effect on VSW conferences.</p> <p>Range: YES / NO</p> <p>Default: YES</p>	✓
SUPPORT_HIGH_PROFILE_WITH_ISDN	<p>Enables or disables the support of High Profile video protocol for ISDN participants in CP conferences. This flag is specific to CP conferences and has no effect on VSW conferences.</p> <p>Range: YES / NO</p> <p>Default: NO</p>	✓
SUPPORT_MULTIPLE_ICE_USERS	<p>Enables the configuration of multiple Lync registrations.</p>	✓

The MCMS System Flags

Flag	Description	Add?
SYSTEM_BROADCAST_VOLUME	<p>This value is used when the system flag FORCE_SYSTEM_BROADCAST_VOLUME is set to YES. Determines the default audio level with which the participants connects and sends audio to the conference. The volume scale is from 1 to 10, where 1 is the weakest and 10 is the strongest. The default connection value is 5. Each unit change represents an increase or decrease of 3 dB (decibel). Range: 1-10 Default: 5</p>	✗
SYSTEM_LISTENING_VOLUME	<p>This value is used when the system flag FORCE_SYSTEM_LISTENING_VOLUME is set to YES. Determines the default audio level with which the participants connects and receives audio from the conference. The volume scale is from 1 to 10, where 1 is the weakest and 10 is the strongest. The default value is 5. Each unit change represents an increase or decrease of 3 dB (decibel). Range: 1-10 Default: 5</p>	✗
TC_BURST_SIZE	<p>This flag regulates the Traffic Control buffer or maxburst size as a percentage of the participant line rate. Range: 1-30.</p>	✓
TC_LATENCY_SIZE	<p>This flag limits the latency (in milliseconds) or the number of bytes that can be present in a queue. Range: 1-1000 (in milliseconds).</p>	✓
TCP_RETRANSMISSION_TIMEOUT	<p>The number of seconds the server will wait for a TCP client to answer a call before closing the connection. Default = 5 (seconds)</p>	✓
TRAFFIC_SHAPING_MTU_FACTOR	<p>Used for the MTU (Maximum transmitting Unit - the size of transmitted packets) dynamic calculation:</p> $\text{New MTU} = \text{video bit rate} / \text{TRAFFIC_SHAPING_MTU_FACTOR}$ <p>where the new MTU value is guaranteed to be a minimum of 410, and a maximum of 1460 (MAX_MTU). The purpose of this calculation is to match video rate in outgoing video to call rate, yet force lower encoder bit rates to avoid overflow. This flag is applicable only when traffic shaping is enabled (see ENABLE_RTP_TRAFFIC_SHAPING). Range: 0-5000, where 0 signifies no change in MTU Default: 800</p>	✓

The MCMS System Flags

Flag	Description	Add?
ULTRA_SECURE_MODE	<p>When set to YES enables the Ultra Secure Mode. When enabled, affects the ranges and defaults of the System Flags that control:</p> <ul style="list-style-type: none"> • Network Security • User Management • Strong Passwords • Login and Session Management • Cyclic File Systems alarms <p>Default: NO</p> <p>For a list of flags affected when the Ultra Secure Mode is enabled, see System Flags affected by Ultra Secure Mode.</p>	✘
USE_GK_PREFIX_FOR_PSTN_CALLS	<p>When set to YES the Gatekeeper Prefix is included in the DTMF input string enabling PSTN participants to use the same input string when connecting to an Collaboration Server whether the Collaboration Server is a standalone MCU or part of a DMA solution deployment.</p> <p>Possible Values: YES / NO</p> <p>Default: NO</p> <p>For more information see PSTN Dial-in Using GK Prefix.</p>	✘
USER_LOCKOUT	<p>If YES, a user is locked out of the system after three consecutive Login failures with same User Name. The user is disabled and only the administrator can enable the user within the system.</p> <p>Default: NO (in Ultra Secure Mode: YES)</p> <p>For details, see User Lockout</p>	✘
USER_LOCKOUT_DURATION_IN_MINUTES	<p>Defines the duration of the Lockout of the user.</p> <p>Value: 0 - 480</p> <p>0 means permanent User Lockout until the administrator re-enables the user within the system.</p> <p>Default: 0</p>	✘
USER_LOCKOUT_WINDOW_IN_MINUTES	<p>Defines the time period during which the three consecutive Login failures occur.</p> <p>Value: 0 - 45000</p> <p>0 means that three consecutive Login failures in any time period will result in User Lockout.</p> <p>Default: 60</p>	✘
V35_MULTIPLE_SERVICES	<p>Not Supported in RMX 1800.</p> <p>If the connection of multiple Serial Gateways to RTM-LAN cards is required:</p> <p>The V35_MULTIPLE_SERVICES System Flag must be set to YES.</p> <p>The default value of the V35_MULTIPLE_SERVICES System Flag is NO, enabling only one Serial Gateway to be supported per RTM-LAN card.</p>	✓

The MCMS System Flags

Flag	Description	Add?
V35_ULTRA_SECURED_SUPPORT	This flag must be set to YES when deploying a Serial Gateway S4GW. This flag is applicable regardless of security mode.	✓
VIDEO_BIT_RATE_REDUCTION_PERCENT	Indicates the percentage of actual reduction in bit rate sent from the RMX to the endpoint (negotiated bit rate is not reduced). This flag is applicable only when traffic shaping is enabled (see ENABLE_RTP_TRAFFIC_SHAPING). Range: 0-60 Default: 15	✓
VSW_CIF_HP_THRESHOLD_BITRATE	Controls the Minimum Threshold Line Rate (kbps) for CIF resolution for High Profile-enabled VSW conferences. Default: 64	✓
VSW_HD_1080p_HP_THRESHOLD_BITRATE	Controls the Minimum Threshold Line Rate (kbps) for HD1080p resolution for High Profile-enabled VSW conferences. Default: 1024	✓
VSW_HD_720p30_HP_THRESHOLD_BITRATE	Controls the Minimum Threshold Line Rate (kbps) for HD720p30 resolution for High Profile-enabled VSW conferences. Default: 512	✓
VSW_HD_720p50_60_HP_THRESHOLD_BITRATE	Controls the Minimum Threshold Line Rate (kbps) for HD720p50 and HD720p60 resolutions for High Profile-enabled VSW conferences. Default: 832	✓
VSW_RATE_TOLERANCE_PERCENT	Determines the percentage of bandwidth that can be deducted from the required bandwidth to allow participants to connect to the conference. For example, a value of 20 will allow a participant to connect to the conference if the allocated line rate is up to 20% lower than the conference line rate (or between 80% to 100% of the required bandwidth). Range: 0 - 75 Default: 0	✓
VSW_SD_HP_THRESHOLD_BITRATE	Controls the Minimum Threshold Line Rate (kbps) for SD resolution for High Profile-enabled VSW conferences. Default: 128	✓
WRONG_NUMBER_DIAL_RETRIES	The number of re-dial attempts for a wrong destination number or a wrong destination number time-out. Range: 0 - 5 Default: 3 A flag value of 0 means that no redials are attempted.	✓

The CS System Flags

The Call Signaling (CS) parameters are responsible for implementing the call protocol and signaling.

You can use the same procedure to manually add flags in the **CS_MODULE_PARAMETERS** tab.

The CS System Flags

Flag	Description
CS_ENABLE_EPC	Add this flag with the value YES (default value is NO) to enable endpoints that support People+Content and require a different signaling (for example, FX endpoints) to receive Content.
H245_TUNNELING	For use in the Avaya Environment. In the Avaya Environment, set the flag to YES to ensure that H.245 is tunneled through H.225. Both H.245 and H.225 will use the same signaling port. Default: NO.
H323_RAS_IPV6	If the Collaboration Server is configured for IPv4 & IPv6 addressing, RAS (Registration, Admission, and Status) messages are sent in both IPv4 and IPv6 format. If the gatekeeper cannot operate in IPv6 addressing mode, registration fails and endpoints cannot connect using the Collaboration Server prefix. In such cases this System Flag should be set to NO . Default: YES
H323_TIMERS_SET_INDEX	Enables or disables H.323 index timer according to standard or proprietary H.323 protocol. Possible values: 0 (Default) - Sets the H.323 index timer to Polycom proprietary. 1 - Sets the H.323 index timer based on the H.323 Standard recommendation. Note: For homologation and certification testing, this flag must be set to 1.
MS_UPDATE_CONTACT_REMOVE	When the flag value is set to: <ul style="list-style-type: none"> YES - The Contact Header is removed from the UPDATE message that is sent periodically to the endpoints. This is required when the SIP Server Type field of the IP Network Service is set as Microsoft. Removal of the Contact Header from the UPDATE message is required specifically by OCS R2. NO - The Contact Header is included in the UPDATE message. This is the system behavior when the SIP Server Type is set as Generic. This is required when the Collaboration Server is configured to accept calls from both Microsoft LYNC and Cisco CUCM as CUCM requires the Contact Header.

The CS System Flags

Flag	Description
QOS_IP_SIGNALING	<p>Used to select the Diffserv priority of signaling packets when DiffServ is the selected method for packet priority encoding.</p> <p>For any given DSCP level, the flag must be set to the full 8-bit hexadecimal value of the DS/TOS byte, which contains the DSCP level as its upper six bits.</p> <p>For example, assuming that a DSCP level of 34 decimal is required: the binary representation of 34 is 0b100010, which, when placed into the upper six bits of the DS/TOS byte, becomes 0b[100010]00, or 0b1000 1000 = 0x88 hex. Thus the flag value should be set equal to 0x88.</p> <p>Default: 0xA0</p>
SIP_DUAL_DIRECTION_TCP_CONNECTION	<p>For use in Microsoft environments.</p> <p>When set to YES, sends a new request on the same TCP connection instead of opening a new connection.</p> <p>Range: YES/NO</p> <p>Default: NO</p>
SIP_ST_ENFORCE_VAL	<p>For use in Microsoft environments.</p> <p>Session timer interval in seconds.</p> <p>Default = YES</p>
SIP_TCP_TLS_TIMERS	<p>Determines the timeout characteristics of SIP TCP TLS connections.</p> <p>Format: SIP_TCP_TLS_TIMERS = <string></p> <p>The string contains the following parameters:</p> <p>Ct - Timeout of TCP CONNECT operation (seconds)</p> <p>Cs - Timeout of TLS CONNECT operation (seconds)</p> <p>A - Timeout of accept operation (seconds)</p> <p>D - Timeout of disconnect operation (nanoseconds)</p> <p>H - Timeout of handshake operation (seconds)</p> <p>Default: <1,5, 4,500000,5></p>
SIP_TIMERS_SET_INDEX	<p>SIP Timer type timeout settings according to standard or proprietary protocol.</p> <p>Possible values are:</p> <p>0 - Default</p> <p>1 - SIP Standard recommendation.</p> <p>Note: For homologation and certification testing, this flag must be set to 1.</p>
SIP_TO_TAG_CONFLICT	<p>For use in Microsoft environments.</p> <p>In case of forking, a tag conflict will be resolved when Status 200 OK is received from an answering UA.</p> <p>Default: YES</p>

Special System Flags

Auto Layout Configuration Flags

The Auto Layout option lets the Collaboration Server automatically select the conference video layout based on the number of participants currently connected to the conference. You can modify the default selection of the conference video layout to customize it to your conferencing preferences.

The default Auto Layout is controlled by 21 flags:







PREDEFINED_AUTO_LAYOUT_0, ... , PREDEFINED_AUTO_LAYOUT_20

Each of the 21 Auto Layout flags can be left at its default value, or set to any of the possible values listed in the following Default Auto Layouts table.


The flag that controls the Auto Layout you wish to modify must be manually added to the System Configuration file.

The table below lists the available layouts, and indicates those used as defaults for each number of participants. These defaults are the values of the system flags **PREDEFINED_AUTO_LAYOUT_<n>**.

Available Layouts



























No. of Participants	Auto Layout Flag	Layout	Default Value
0	PREDEFINED_AUTO_LAYOUT_0		
1	PREDEFINED_AUTO_LAYOUT_1		CP_LAYOUT_1X1
2	PREDEFINED_AUTO_LAYOUT_2		
3	PREDEFINED_AUTO_LAYOUT_3		CP_LAYOUT_1x2VER
4	PREDEFINED_AUTO_LAYOUT_4		CP_LAYOUT_2X2
5	PREDEFINED_AUTO_LAYOUT_5		
6	PREDEFINED_AUTO_LAYOUT_6		CP_LAYOUT_1P5
7	PREDEFINED_AUTO_LAYOUT_7		
8	PREDEFINED_AUTO_LAYOUT_8		CP_LAYOUT_1P7
9	PREDEFINED_AUTO_LAYOUT_9		
10	PREDEFINED_AUTO_LAYOUT_10		CP_LAYOUT_2P8
11	PREDEFINED_AUTO_LAYOUT_11		

Available Layouts




No. of Participants	Auto Layout Flag	Layout	Default Value
12	PREDEFINED_AUTO_LAYOUT_12		
13	PREDEFINED_AUTO_LAYOUT_13		
14	PREDEFINED_AUTO_LAYOUT_14		
15	PREDEFINED_AUTO_LAYOUT_15		
16	PREDEFINED_AUTO_LAYOUT_16		CP_LAYOUT_1P12
17	PREDEFINED_AUTO_LAYOUT_17		
18	PREDEFINED_AUTO_LAYOUT_18		
19	PREDEFINED_AUTO_LAYOUT_19		
20	PREDEFINED_AUTO_LAYOUT_20		

The table below lists the set of layouts supported by the Collaboration Server

Available Layouts

No. of Cells	Layout Flag Value	Layout
1	CP_LAYOUT_1X1	
2	CP_LAYOUT_1X2	
	CP_LAYOUT_1X2HOR	
	CP_LAYOUT_1x2VER	
	CP_LAYOUT_2X1	
3	CP_LAYOUT_1P2HOR	
	CP_LAYOUT_1P2HOR_UP	
	CP_LAYOUT_1P2VER	
4	CP_LAYOUT_2X2	
	CP_LAYOUT_1P3HOR_UP	
	CP_LAYOUT_1P3VER	
5	CP_LAYOUT_1P4HOR_UP	
	CP_LAYOUT_1P4HOR	
	CP_LAYOUT_1P4VER	
6	CP_LAYOUT_1P5	
8	CP_LAYOUT_1P7	
9	CP_LAYOUT_1P8UP	
	CP_LAYOUT_1P8CENT	
	CP_LAYOUT_1P8HOR_UP	
	CP_LAYOUT_3X3	
	CP_LAYOUT_1TOP_LEFT_P8	
10	CP_LAYOUT_2P8	
	CP_LAYOUT_2TOP_P8	
13	CP_LAYOUT_1P12	
16	CP_LAYOUT_4X4	
20	CP_LAYOUT_4X5	

Example:

The default for five participants is indicated by the PREDEFINED_AUTO_LAYOUT_5 system flag, whose default value is . However, you may select other layouts, with either less or more cells. Should you select a default layout with two cells for example (such as ), you will view only the speaker and the previous one. Should you select a default layout with six cells (such as ), you will view the participants on four of the layout cells (two cells remain empty).

Content Related Flags**LEGACY_EP_CONTENT_DEFAULT_LAYOUT Flag**

The LEGACY_EP_CONTENT_DEFAULT_LAYOUT system flag defines the video layout used in legacy endpoint when switching to Content mode.

For a list of available layouts see [Available Layouts](#).

CS_ENABLE_EPC Flag

Endpoints supporting **People+Content** (for example, FX endpoints) may require a different signaling when in content mode. For these endpoints, manually add the flag **CS_ENABLE_EPC** with the value YES (default value is NO) to the **CS_MODULE_PARAMETERS** tab.

Automatic Password Generation Flags

The Collaboration Server can be configured to automatically generate conference and chairperson passwords when the Conference Password and Chairperson Password fields are left blank.

Guidelines

- If the flag HIDE_CONFERENCE_PASSWORD is set to YES, the automatic generation of passwords (both conference and chairperson passwords) is disabled, regardless of the settings of the flags NUMERIC_CONF_PASS_DEFAULT_LEN and NUMERIC_CHAIR_PASS_DEFAULT_LEN.
- The automatic generation of conference passwords is enabled/disabled by the flag NUMERIC_CONF_PASS_DEFAULT_LEN.
- The automatic generation of chairperson passwords is enabled/disabled by the flag NUMERIC_CHAIR_PASS_DEFAULT_LEN.
- The automatically generated passwords will be numeric and random.
- The passwords are automatically assigned to ongoing conferences, Reservations, and Meeting Rooms at the end of the creation process (once they are added to the Collaboration Server).
- Automatically assigned passwords can be manually changed through the Conference/Meeting Room/Reservation Properties dialog boxes.
- Deleting an automatically created password will not cause the system to generate a new password and the new password must be added manually or the field can be left blank.
- If a password was assigned to the conference via Microsoft Outlook using the PCO add-in, the system does not change these passwords and additional passwords will not be generated (for example, if only the conference password was assigned a chairperson password will not be assigned).

- If the flag values (i.e. the password lengths) are changed, passwords that were already assigned to conferences, Reservations, and Meeting Rooms will not change and they can be activated using the existing passwords. Only new conferencing entities will be affected by the change.



Do not enable this option in an environment that includes a Polycom DMA system.

Enabling the Automatic Generation of Passwords

The default password length is defined by the system flag NUMERIC_CONF_PASS_DEFAULT_LEN or by one of the Automatic Password Generation flags described in the table below.

Automatic Password Generation Flags

Flag	Description
HIDE_CONFERENCE_PASSWORD	<p>NO (default) - Conference and chairperson passwords are displayed when viewing the Conference/Meeting Room/Reservation properties. It also enables the automatic generation of passwords in general.</p> <p>Yes - Conference and Chairperson Passwords are hidden (they are replaced by asterisks). It also disables the automatic generation of passwords.</p>
NUMERIC_CONF_PASS_MIN_LEN	<p>Enter the minimum number of characters required for conference passwords.</p> <p>Possible values: 0 – 16.</p> <p>0 (default in non-secured mode) means no minimum length. However this setting cannot be applied when the Collaboration Server is in <i>Ultra Secure Mode</i>.</p> <p>9 (default in Ultra Secure Mode) Conference password must be at least 9 characters in length.</p>
NUMERIC_CHAIR_PASS_MIN_LEN	<p>Enter the minimum number of characters required for chairperson passwords.</p> <p>default: 0.</p>
NUMERIC_CONF_PASS_MAX_LEN	<p>Enter the maximum number of characters permitted for conference passwords.</p> <p>Possible values: 0 – 16</p> <p>Default: 16</p>
NUMERIC_CHAIR_PASS_MAX_LEN	<p>Enter the maximum number of characters permitted for chairperson passwords.</p> <p>Possible values: 0 – 16</p> <p>16 (default) - chairperson password maximum length is 16 characters.</p>

Automatic Password Generation Flags

Flag	Description
NUMERIC_CONF_PASS_DEFAULT_LEN	<p>This flag enables or disables the automatic generation of conference passwords. The length of the automatically generated passwords is determined by the flag value.</p> <p>Possible values:</p> <ul style="list-style-type: none"> • 0 – 16, 6 default (non-secured mode) • 0 and 9 – 16, 9 default (Ultra Secure Mode). <p>Enter 0 to disable the automatic generation of passwords. Any value other than 0 enables the automatic generation of conference passwords provided the flag HIDE_CONFERENCE_PASSWORD is set to NO.</p> <p>If the default is used, in non-secured mode the system will automatically generate conference passwords that contain 6 characters.</p>
NUMERIC_CHAIR_PASS_DEFAULT_LEN	<p>This flag enables or disables the automatic generation of chairperson passwords. The length of the automatically generated passwords is determined by the flag value.</p> <p>Possible values:</p> <ul style="list-style-type: none"> • 0 – 16, 6 default (non-secured mode) • 0 and 9 – 16, 9 default (Ultra Secure Mode). <p>Enter 0 to disable the automatic generation of passwords. Any value other than 0 enables the automatic generation of chairperson passwords provided the flag HIDE_CONFERENCE_PASSWORD is set to NO.</p> <p>If the default is used, in non-secured mode the system will automatically generate chairperson passwords that contain 6 characters.</p>

The default password length defined by the NUMERIC_CONF_PASS_DEFAULT_LEN or NUMERIC_CHAIR_PASS_DEFAULT_LEN does not fall within the range defined by the minimum and maximum length an appropriate fault is added to the Faults list.

Flags Specific to Maximum Security Environments - Ultra Secure Mode

The Collaboration Server can operate in one of two modes: Standard Security Mode or Ultra Secure Mode.

In Ultra Secure Mode the enhanced security features of the version are rigorously enforced.

The Ultra Secure Mode is enabled or disabled depending on the value of the ULTRA_SECURE_MODE System Flag.

Ultra Secure Mode, is enabled by manually adding the ULTRA_SECURE_MODE flag to the System Configuration and setting its value to YES.



WARNING!

Once Ultra Secure Mode is enabled it can only be undone by performing a Restore to Factory Defaults. Also, to implement a Maximum Security environment, other Polycom products on the network must be similarly configured.

For more information see [Restoring Defaults](#).

Ultra Secure Mode



Warning:

- Once Ultra Secure Mode is enabled it can only be disabled by performing a Restore to Factory Defaults.
- Collaboration Server Shelf Management functions are not accessible when the MCU is in Ultra Secure Mode.
- To implement a Maximum Security Environment, other Polycom products on the network must be similarly configured.

For more information see [Restoring the RMX Using the USB Port](#) in the *RealPresence Collaboration Server (RMX) 1800/2000/4000 Deployment Guide for Maximum Security Environments*.

Ultra Secure Mode is the operating mode of the RealPresence Collaboration Server when deployed in a Maximum Security Environment. When the MCU is set to Ultra Secure Mode, all enhanced security features are activated and rigorously enforced.



- The RMX Manager is essential, and the only interface for accessing the Collaboration Server's management console in Maximum Security Environments.
- From version 8.6, only MPMRx media cards are supported.


To download and install the RMX Manager onto a workstation

- » The RMX Manager specific to the installed version must be downloaded from the Support section of the Polycom website at <http://www.polycom.com/forms/rmx-sw-fed-thankyou.html>

To install the RMX Manager:


- 1 Obtain the RMX Manager specific to Version 8.6 from the Polycom Software Distribution website.
- 2 Install the RMX Manager on the workstation:
 - a Using Windows, navigate to the folder where the downloaded RMX Manager has been saved.
 - b Double-click on the downloaded install file and follow the on-screen instructions to complete the installation.

- 3 When the installation of the RMX Manager is completed, launch the RMX Manager using the Windows **Start** menu.)

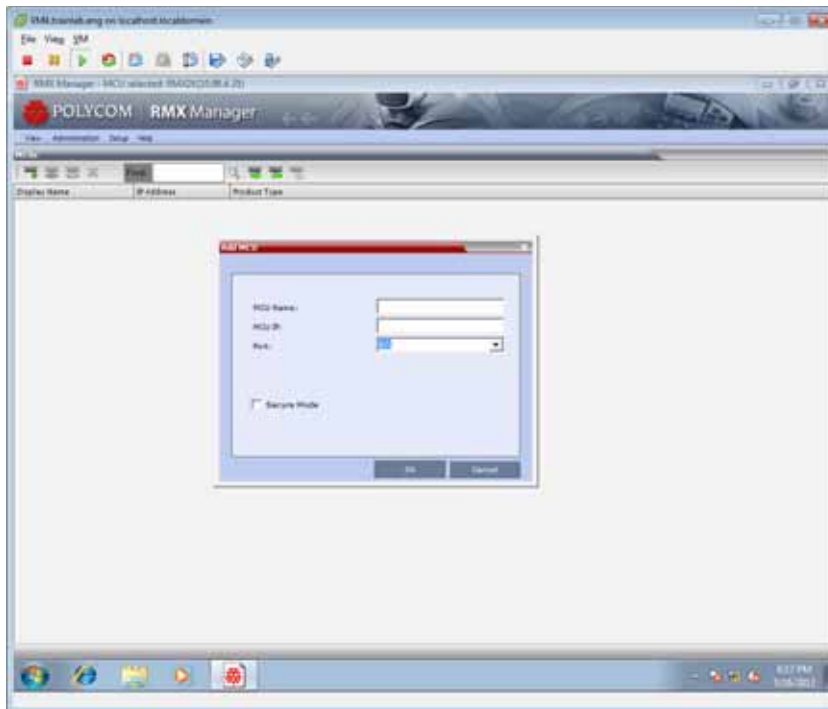

- 4 If needed, add the MCU to the RMX Manager's MCUs list (if the MCUs list was not pre-populated during installation).
 - a Right-click in the RMX Manager window.
 - b Select **Add MCU**.
 - c Enter the **MCU Name**.
 - d Enter the of the **MCU IP** address.
 - e Leave the **Port** as port 80 until the Collaboration Server is set to Ultra Secure Mode.

- 5 Click **OK**.

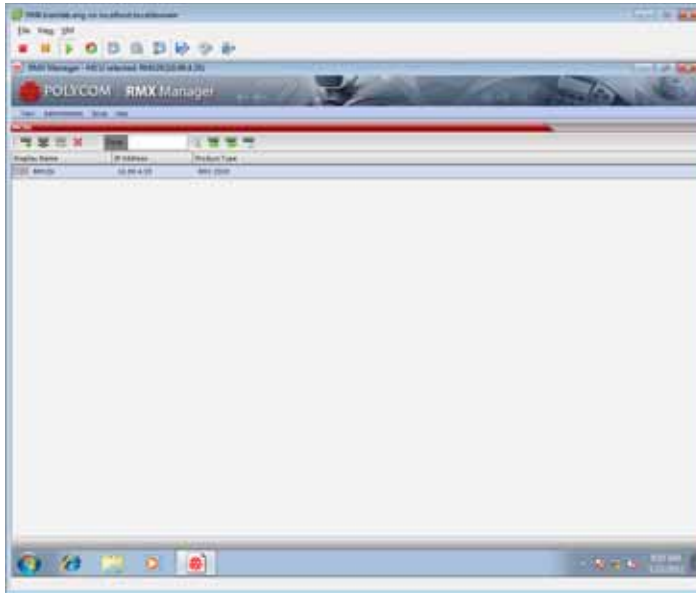

- 6 The **Username** and **Password** dialog box is displayed.



- 7 Enter the default **Username** —POLYCOM and default **Password** —POLYCOM.
8 Click **OK**.

Enable Ultra Secure Mode

The Ultra Secure Mode is disabled by default and can be enabled by adding the ULTRA_SECURE_MODE System Flag and setting its value of to YES using the **Setup > System Configuration** menu. Doing so affects the ranges and defaults of other System Flags that control:

- Network Security
- User Management
- Strong Passwords
- Login and Session Management
- Cyclic File Systems alarms

For a detailed description of the installation and configuration of an MCU in a Maximum Security Environment see [First Time Installation and Configuration](#) in the *RealPresence Collaboration Server (RMX) 1800/2000/4000 Deployment Guide for Maximum Security Environments*.

ULTRA_SECURE_MODE System Flag

Guidelines

- After modifying the value of the ULTRA_SECURE_MODE System Flag to YES, all Collaboration Server users are forced to change their Login passwords.
- In previous versions the ULTRA_SECURE_MODE System Flag was named JITC_MODE:
 - When upgrading from a version that used the JITC_MODE System Flag, the system will automatically create an ULTRA_SECURE_MODE System Flag and set it to the same value as that of the JITC_MODE flag before the upgrade. The system will then delete the JITC_MODE System Flag.
 - When downgrading to a version that utilizes the JITC_MODE System Flag, the administrator will need to set the JITC_MODE flag to that of the ULTRA_SECURE_MODE flag before the downgrade.



Note: Not Supported in Ultra Secure Mode

When the ULTRA_SECURE_MODE flag is set to YES, the following are not supported:


- Connection to Alternate Management Network via LAN3 port
- IP Sec security protocols
- SSH server
- USB key configuration
- QoS with IPv6
- Serial connection
- Modem connection

Modifying the Ultra Secure Mode System Flag Value


Ultra Secure Mode is enabled by changing the value of the ULTRA_SECURE_MODE System Flag to **YES** during First Entry Configuration or at any time using the **Setup > System Configuration** menu.

To modify the **ULTRA_SECURE_MODE** System flag value:

- 1 On the Collaboration Server menu, click **Setup > System Configuration**.
The **System Flags** dialog box opens.

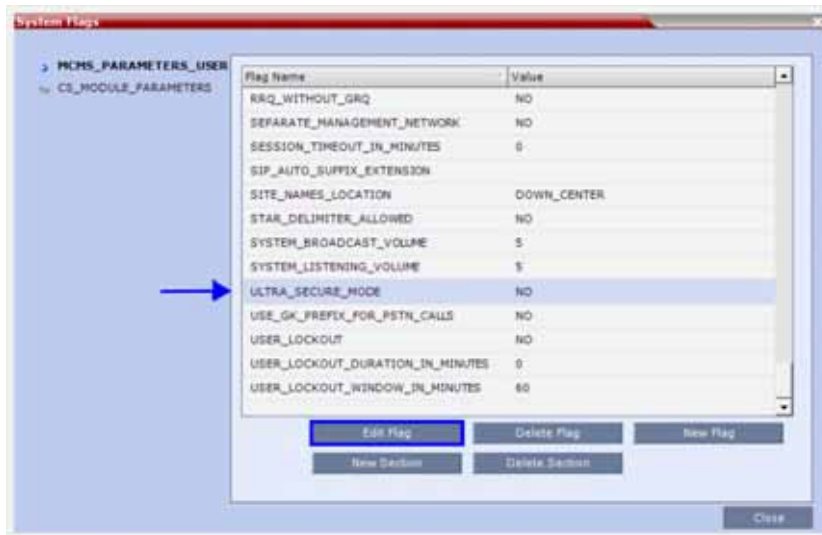

- 2 Double-click or select the **ULTRA_SECURE_MODE** flag and click the **Edit Flag** button.
- 3 In the **New Value** field, enter the flag's new value - **YES** or **NO**.

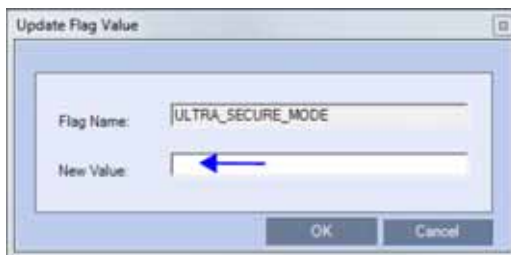

- 4 Click **OK** to close the **Update Flag** dialog box.
- 5 Click **OK** to close the **System Flags** dialog box.



Note: Requires Reset

For flag changes (including deletion) to take effect, reset the MCU. For more information see [Resetting the Collaboration Server](#).

System Flags affected by Ultra Secure Mode

When the **ULTRA_SECURE_MODE** flag is set to **YES** the default and range values of the following flags are affected.

ULTRA_SECURE_MODE Flag Value – Effect on System Flags

Flag	ULTRA_SECURE_MODE Value			
	YES		NO	
	Range	Default	Range	Default
Network Security				
ENABLE_ACCEPTING_ICMP_REDIRECT	YES/NO	NO	YES/NO	NO
ENABLE_SENDING_ICMP_DESTINATION_UNREACHABLE	YES/NO	NO	YES/NO	YES
ICMP_ECHO	YES/NO	NO	YES/NO	YES
SEPARATE_MANAGEMENT_NETWORK	YES/NO	YES	NO	NO
802_FIPS_MODE	YES/NO	YES	YES/NO	NO
SIP_FIPS_MODE	YES/NO	YES	YES/NO	NO
SNMP_FIPS_MODE	YES/NO	YES	YES/NO	NO
Login and Session Management				
APACHE_KEEP_ALIVE_TIMEOUT	1-999	15	1-999	15
LAST_LOGIN_ATTEMPTS	YES/NO	YES	YES/NO	NO
MAX_KEEP_ALIVE_REQUESTS	0 - >	0		
MAX_NUMBER_OF_MANAGEMENT_SESSIONS_PER_SYSTEM	4-80	80	4-80	80
MAX_NUMBER_OF_MANAGEMENT_SESSIONS_PER_USER	4-80	20	4-80	10
SESSION_TIMEOUT_IN_MINUTES	0-999	10	0-999	0
USER_LOCKOUT	YES/NO	YES	YES/NO	NO
USER_LOCKOUT_DURATION_IN_MINUTES	0-480	0	0-480	0
USER_LOCKOUT_WINDOW_IN_MINUTES	0-45000	60	0-45000	60
User Management				
DISABLE_INACTIVE_USER	0-90	30	0-90	0
DEFAULT_USER_ALERT	YES/NO	YES	YES/NO	NO
Strong Passwords				
FORCE_STRONG_PASSWORD_POLICY	YES/NO	YES	YES/NO	NO
HIDE_CONFERENCE_PASSWORD	YES/NO	YES	YES/NO	NO
MAX_CONF_PASSWORD_REPEATED_DIGITS	1-4	2	0-4	0

ULTRA_SECURE_MODE Flag Value – Effect on System Flags

Flag	ULTRA_SECURE_MODE Value			
	YES		NO	
	Range	Default	Range	Default
MAX_PASSWORD_REPEATED_CHAR	1-4	2	0-4	2
MIN_PASSWORD_LENGTH	0-20	15	0-20	0
MIN_PWD_CHANGE_FREQUENCY_IN_DAYS	0-7	1	0-7	0
NUM_OF_LOWER_CASE_ALPHABETIC	0-2	2	0-2	0
NUM_OF_UPPER_CASE_ALPHABETIC	0-2	2	0-2	0
NUM_OF_NUMERIC	1-2	2	0-2	0
NUM_OF_SPECIAL_CHAR	0-2	2	0-2	0
NUMERIC_CHAIR_PASS_DEFAULT_LEN	0-16	9	0-16	6
NUMERIC_CHAIR_PASS_MAX_LEN	0-16	16	0-16	16
NUMERIC_CONF_PASS_DEFAULT_LEN	0-16	9	0-16	6
NUMERIC_CONF_PASS_MAX_LEN	0-16	16	0-16	16
NUMERIC_CHAIR_PASS_MIN_LEN	0-16	9	0-16	0
NUMERIC_CONF_PASS_MIN_LEN	0-16	9	0-16	0
PASS_EXP_DAYS_MACHINE		365		
PASSWORD_EXPIRATION_DAYS	0-90	60	0-90	0
PASSWORD_EXPIRATION_WARNING_DAYS	0-14	7	0-14	0
PASSWORD_FAILURE_LIMIT	0-999	3	0-999	3
PASSWORD_HISTORY_SIZE	0-16	10	0-16	0
Cyclic File Systems				
ENABLE_CYCLIC_FILE_SYSTEM_ALARMS	YES/NO	YES	YES/NO	NO
PCM				
PCM_FECC	YES/NO	NO	YES/NO	YES
Content Sharing				
SIP_BFCP_DIAL_OUT_MODE	AUTO/UDP	UDP	AUTO/UDP	UDP
SIP_BFCP_DIAL_IN_MODE	AUTO/UDP	UDP	AUTO/UDP	UDP
Video Preview				
ENABLE_VIDEO_PREVIEW	YES/NO	NO	YES/NO	YES

Certificate Management


(PKI) Public Key Infrastructure

PKI (Public Key Infrastructure) is a set of tools and policies deployed to enhance the security of data communications between networking entities.

The implementation of PKI on the Collaboration Server has been enhanced to ensure that all networked entities are checked for the presence of unique certificates by implementing the following rules and procedures during the TLS negotiation:

- The Collaboration Server identifies itself with the same certificate when operating as a server and as a client.
- The Collaboration Server's management applications: Collaboration Server Web Client and RMX Manager, identify themselves with certificates.
- While establishing the required TLS connection, there is an exchange of certificates between all entities.
- Entities such as the DMA that function as both client and server within the Management Network identify themselves with the same certificate for both their client and server functions.
- A single Certificate Repository is maintained for:
 - The Management Network Service.
 - SIP TLS Personal Certificates for each defined IP Network Service.
 - Trusted (Certificate Authority (CA)) certificate for all TLS connections.
 - CRL for all TLS connections.
- SIP TLS certificates are validated against the CA.
- SIP TLS certificates are managed using CRL and Online Certificate Status Protocol (OCSP).
 - Certificate revocation mode, whether by OCSP or CRL is managed using the `i` setting of the Management Network.
 - SIP TLS is managed using the General TLS setting.
- The following certificate file formats are supported:
 - PEM
 - DER
 - PKCS#7/P7B
 - PKCS#12PFX

The following diagram illustrates the certificate exchange during the TLS connection procedure.

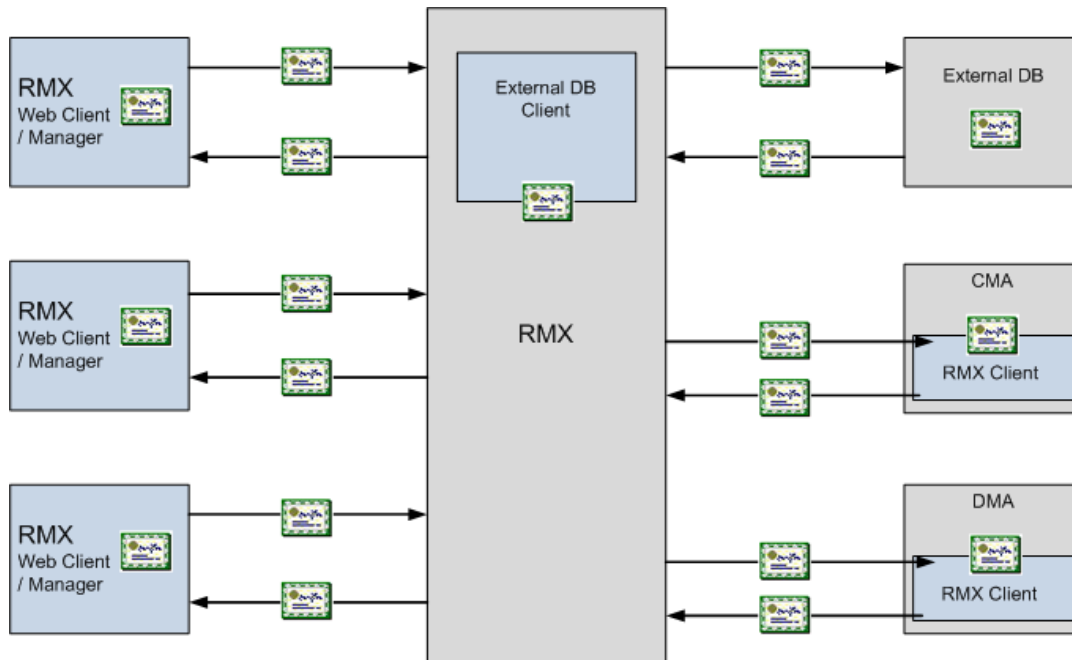

Adding Certificates to the Certificate Repository

To access the Certification Repository:

- » In the Collaboration Server Web Client, click **Setup > RMX Secured Communication > Certification Repository**.


The **Certification Repository** dialog box contains tabs that display the following lists:

- Trusted Certificates
- Personal Certificates (Management and Signaling Certificates)
- CRL (Certificate Revocation List)

Double-clicking on a certificate in any if the displayed lists, displays the certificate's properties:



Trusted Certificates

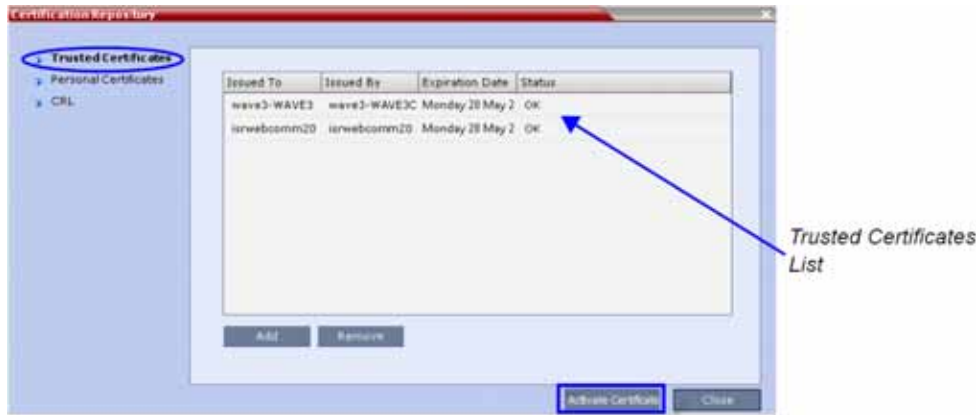

By clicking the column headers the Trusted Certificates can be sorted by:

- Issued To
- Issued By
- Expiration Date
- Status

To add a certificate to the repository:

Repeat steps 1 - 4 for each certificate you wish to add to the **Certification Repository**.

- 1 In the **Trusted Certificates** tab click the **Add** button.
The **Send Certificate** dialog box is displayed.



- 2 Send the certificate to the Collaboration Server.
Two options are available for sending the certificate to the Collaboration Server:

➤ **Paste Certificate and Send Certificate**

Use this option if the certificate has been received from the **Certification Authority** in text format.

➤ **Send Certificate File**

Use this option if the certificate has been received from the Certification Authority in file format.

Paste Certificate and Send Certificate

After you have received the certificate from the **Certificate Authority**:


- a Copy (**Ctrl + C**) the certificate information from the **Certificate Authority's** e-mail to the clipboard.
- b Click **Paste Certificate** to paste the clipboard content into the **Send Certificate** dialog box.
- c Click the **Send Certificate** button to send the certificate to the Collaboration Server.

Send Certificate File

After you have received the certificate file from the **Certificate Authority**:

- d Click **Send Certificate File**.


The **Install File** dialog box is displayed.

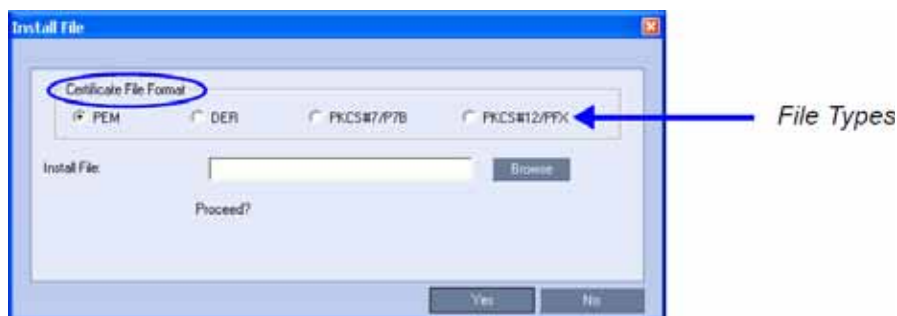

- e Select the **Certificate File Format: PEM, DER, PKCS#7/P7B or PKCS#12/PFX**.

- f Enter the certificate file name in the **Install File** field or click the **Browse** button.

The **Open** file dialog box is displayed. The files are filtered according to the file type selected in Step e.

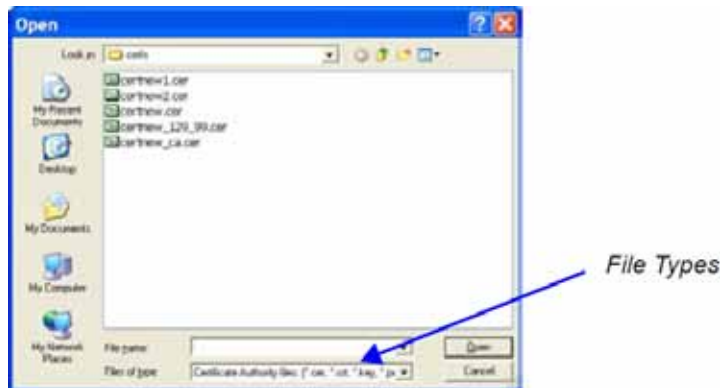


- g Enter the certificate file name in the **File name** field or click to select the certificate file entry in the list.
- h Click the **Open** button.
- i In the **Install File** dialog box, click the **Yes** button to proceed.
- The certificate is added to the **Trusted Certificate List** in the **Certification Repository**.
- 3 If there are additional Trusted Certificates to be added to the **Certification Repository**, repeat steps 1 - 2, otherwise click the **Update Repository** button to complete Trusted Certificate / CRL installation.



Before clicking the **Activate Certificate** button ensure that all CRLs have also been added to the Certification Repository.

When the **Activate Certificate** button is clicked, all added Trusted Certificates and CRLs are installed and the Collaboration Server displays a disconnection confirmation dialog box.

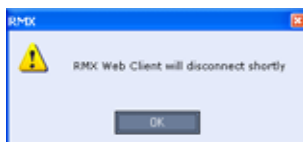

- 4 Click **OK**.
- 5 Login to the Collaboration Server to proceed with further management tasks.


Trusted Certificates added to the Certification Repository are not automatically activated. They remain in the Trusted Certificates List until the Activate Certificate button is clicked, at which time all Trusted Certificates in the list are activated simultaneously.

Personal Certificates

Default Management and Default IP Network Service certificates can be viewed in the Personal Certificates dialog box.

They are listed alongside the service to which they are attached. By clicking the column headers the Trusted Certificates can be sorted by:


- Network Service
- Issued To
- Issued By
- Expiration Date
- Status

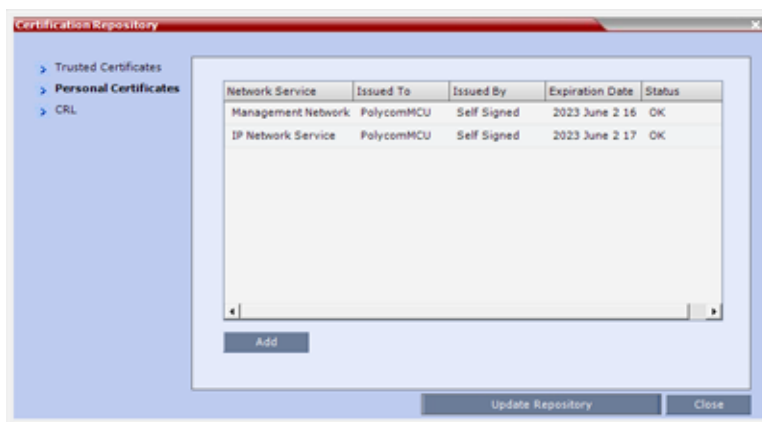

To add a Personal Certificate to the Certificate Repository:

- 1 In the **Certification Repository - Personal Certificates** dialog box select the **Network Service**.
- 2 Click the **Add** button.

The **Add** dialog box is displayed with the configured parameters of the selected **Network Service** filled in.

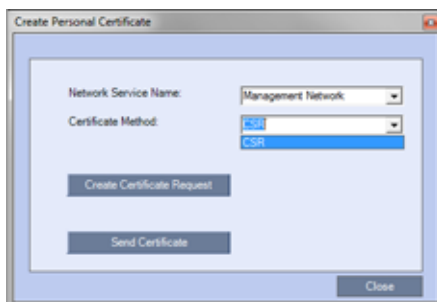

- 3 Select the **Certificate Method**. (Default is **CSR**)
 - Only **CSR** can be selected for the Default Management Network Service.
 - **CSR** or **PFX/PEM** can be selected for IP Network Services.

4 Optional. If **CSR** was selected as the Certificate Method:

a Click **Create Certificate Request**.

The **Create Certificate Request** dialog box is displayed with the **Common Name** field filled in. Your network administrator may have specific requirements for the content of these fields. In the absence of any other guidance, it is recommended that the following information be contained in this field:


- ◆ If DNS is being used, enter the DNS Fully Qualified Domain Name (FQDN) of the Collaboration Server Management Network Interface. This should match the Host Name and Domain configured in the Management Network Properties dialog box.
- ◆ If DNS is not being used in your deployment, enter the IP Address of the Collaboration Server Management Network Interface.

b Complete the **Certificate Request** fields.

The two additional fields are defined as:

- ◆ **Subject Alternative Name (SAN)** - This field is required when using EAP-TLS in conjunction with a Network Policy Server (MS-NPS). It allows the optional inclusion of:
 - Principle Name
 - DNS Name:
 - Long – FQDN
 - Short - Host only
 - IP Address (IPv4 and IPv6)

When the **Subject Alternative Name (SAN)** check box is selected the input box becomes active, allowing the user to modify the example values provided, to match local certificate requirements and delete those that are not applicable.



The user can add up to 20 different SANs.

Your network administrator may have specific requirements for the content of these fields. In the absence of any other guidance, it is recommended that the following information be contained in the SAN fields: Collaboration Server

- If DNS is being used, include a SAN field with “DNS Name=<FQDN of the Collaboration Server Management Network Interface>”, for example: DNS Name=rmx@example.com
- If Principal Names are being used, include a SAN field with “Principal Name=<Principal Name assigned to your Collaboration Server>”, for example: Principal Name=rmx@example.com
- If IPv4 is enabled on the interface, include an IP Address field, for example: IP Address=1.1.1.1
- If IPv6 is enabled on the interface, include an IP Address field, for example: IP Address= 2001:DB8:1::100

If an incorrect SAN type is entered, an error message, Unsupported SAN type, is displayed when the **Send Details** button is clicked.



The SAN field option - DNS Name (FQDN) is not used for Machine Account validation. For example, the DMA will not validate the Collaboration Server unless the FQDN field in the User Properties dialog box is correctly filled in.

◆ **Hash Method** - Select the output value for the Secure Hash Algorithm:

- **SHA-256** the output value is 256 bits.
- **SHA-1** the output value is 160 bits.

For backward compatibility, with previous versions, either SHA-1 or SHA-256 can be selected as the hash algorithm used in the creation of CSRs (Certificate Signing Requests).


5 Click Send Certificate.

For all certificates, both Management and SIP TLS:

- Once the certificate is sent a message is displayed indicating successful installation of the certificate and the new certificate replaces the old certificate.
- If the certificate installation fails the old certificate continues to function and a message is displayed indicating one of the following the reasons for the failure:
 - Invalid password.
 - Certificate expired.
 - Certificate DNS name does not match Collaboration Server (service) DNS name.
 - Chain is not trusted
 - General - <Error message from the SSL library>.


Certificate Validation

The credentials of each certificate received from a networked peer are verified against a repository of trusted certificates. Each networked entity contains a repository of trusted certificates. The digital signature of the certificate's issuing authority is checked along with the certificate's expiration date.

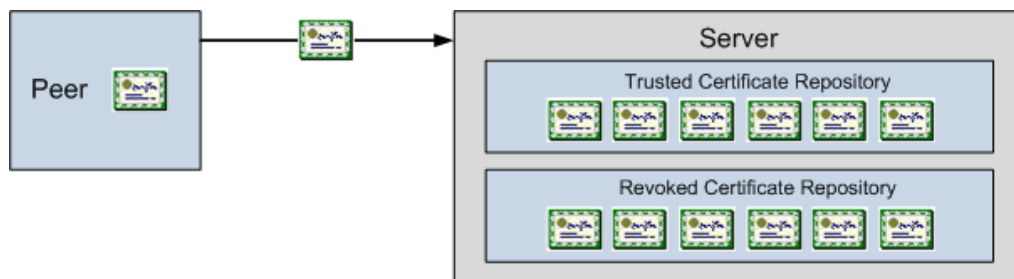


Validation of peer SIP TLS certificates against one or several installed CA certificates can be enabled or disabled for the Default Management and each defined IP Service by selecting or clearing the Skip certificate validation check box.

The check box is checked by default to Skip certificate validation for user logging session and no validation of expiration, CA signature or CRL/OCSP checking is performed.

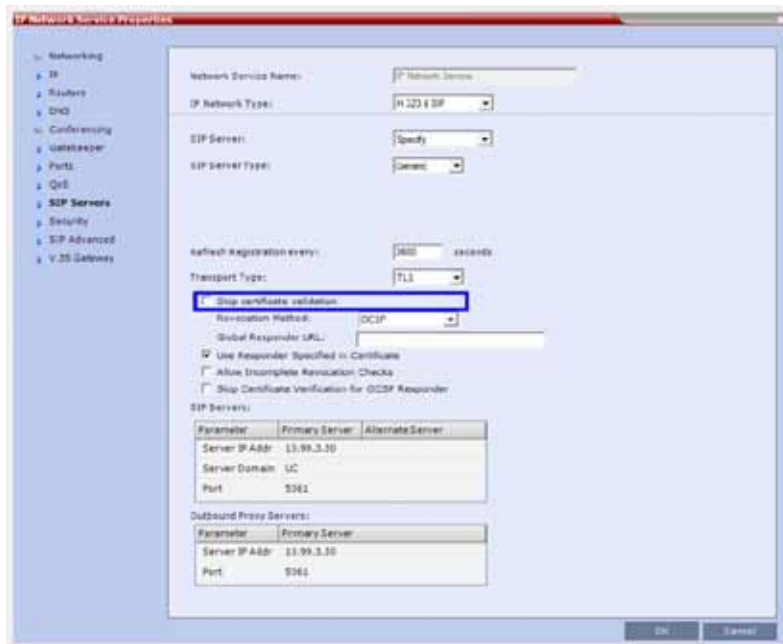

Clearing the check box enables full validation requires that there be at least one CA certificate in the certificate repository, failing which a message At least one CA certificate should be installed is displayed.

If the Secured Communication option is unchecked in the Management Network - Security dialog box all Certificate Validation and Revocation fields are disabled.

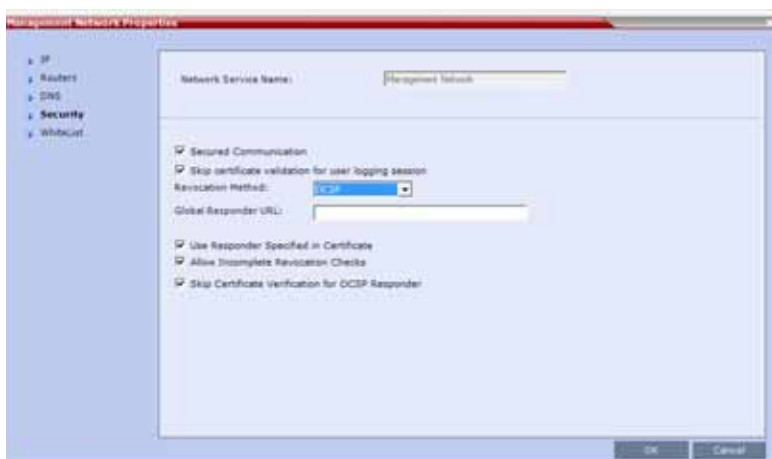


CRL (Certificate Revocation List)

A CRL contains a summary of the installed Certificate Revocation Lists.

By clicking the column headers the Certificate Revocation List can be sorted by:

- Issued To

- Issued By
- Expiration Date
- Status

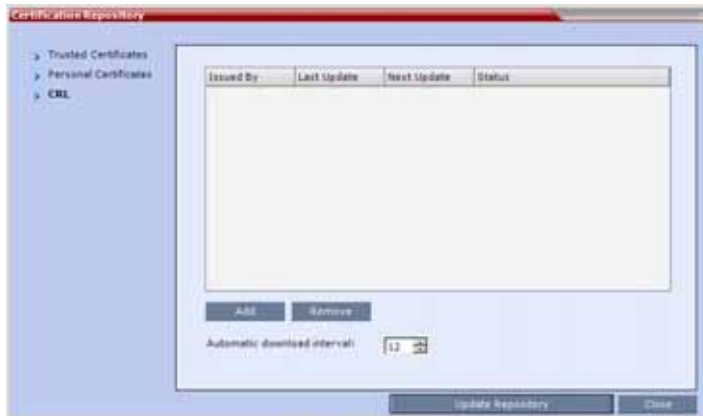

The **Automatic download interval** can be set for automatically downloaded CRLs. For more information see [Adding a CRL from a CDP \(CRL Distribution Point\)](#).

If the CRL List is not valid for any reason an Active Alarm is created and a message is displayed. The Collaboration Server Web Client/RMX Manager connection to the Collaboration Server is not disabled.

Adding a CRL


CRLs can be manually downloaded, or downloaded automatically from a CDP (CRL Distribution Point). For more information see [Adding a CRL from a CDP \(CRL Distribution Point\)](#).

Adding a CRL Manually


Repeat steps 1 - 5 below for each CRL that is to be added to the Certification Repository.

To add a CRL to the repository:

- 1 In the **CRL List** dialog box, click the **Add** button.
The **Install File** dialog box is displayed.

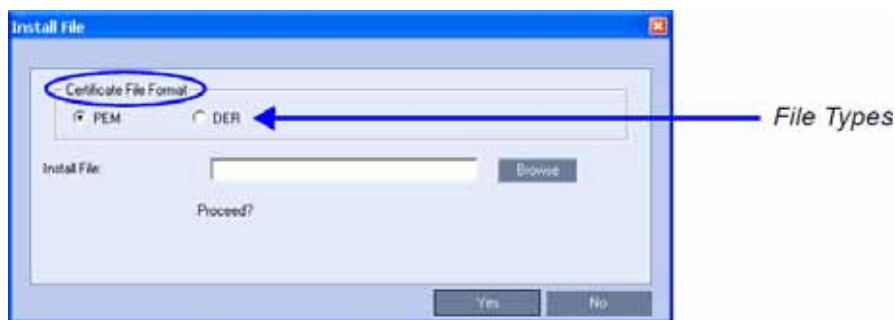

- 2 Select the **Certificate File Format: PEM or DER**.
- 3 Enter the certificate file name in the **Install File** field or click the **Browse** button.
The **Open** file dialog box is displayed. The files are filtered according to the file type selected in Step e.

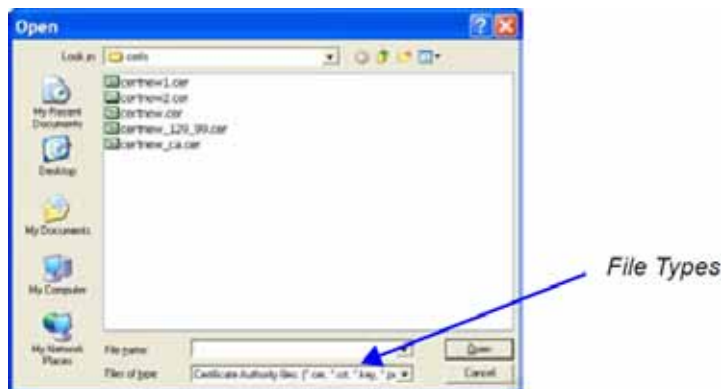


- 4 Enter the Certificate file name in the **File name** field or click to select the certificate file entry in the list.
- 5 Click the **Open** button.
The certificate is added to the **CRL List** in the **Certification Repository**.

If there are additional CRLs to be added to the Certification Repository, repeat steps 1 - 5, otherwise click the **Activate Certificate** button to complete CRL / Trusted Certificate installation.



Before clicking the **Activate Certificate** button ensure that all Trusted Certificates have also been added to the Certification Repository.

When the Activate Certificate button is clicked, all added Trusted Certificates and CRLs are installed and the Collaboration Server displays a disconnection confirmation dialog box.

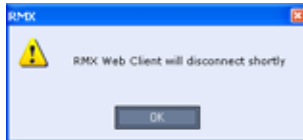

6 Click the **OK** button.

7 Login to the Collaboration Server to proceed with further management tasks


CRLs added to the Certification Repository are not automatically activated. They remain in the CRL List until the **Activate Certificate** button is clicked, at which time all CRLs in the list are activated simultaneously.

Adding a CRL from a CDP (CRL Distribution Point)

CRLs can be automatically downloaded from a CDP (CRL Distribution Point). An Automatic Download Interval can be specified. Both HTTP and LDAP URIs are supported.

In previous versions there was a risk that if manual updates were not timeously performed, expired CRLs and Certificate validation failures would necessitate a system reset to delete all Certificates and CRLs, followed by re-installation of all Certificates and CRLs.

Where CAs include multiple CDPs in a Certificate, the MCU will try each URI successively until a response with a new CRL is found.

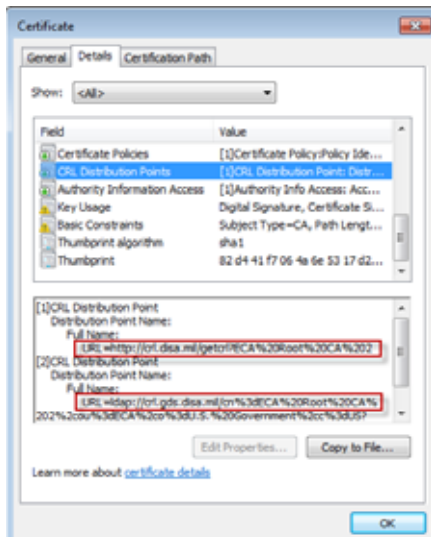

- A CRL is automatically installed when the administrator installs a CA that has an existing CDP.
- Manual installation of CRLs is supported as in previous versions.

- The MCU will always use the latest CRL if a conflict should arise.
- The automatic CRL download procedure is run after every system reset. A CRL will only be downloaded if it supersedes the current CRL.
- An Automatic Download Interval can be specified in the **Certification Repository - CRL** dialog.



- The Automatic Download Interval range is 0-168 hours, the default is 12. A value of 0 disables automatic CRL download.

Propagate New CRL

The **FORCE_APACHE_REBOOT_UPON_CRL_UPLOAD** System Flag allows the administrator to choose the method of propagating a new, automatically downloaded CRL to the various Apache Server clients.

Range: YES/NO

Default: NO

- If the value of **FORCE_APACHE_REBOOT_UPON_CRL_UPLOAD** is NO, the Apache Server is not rebooted when a new CRL is automatically uploaded.
- If the value of **FORCE_APACHE_REBOOT_UPON_CRL_UPLOAD** is YES the Apache Server will be rebooted when a new CRL is automatically uploaded.
 - Applicable to automatically uploaded CRLs only, manual CRL upload includes the option of updating the Certification Repository by rebooting the Apache Server.
 - Applies to Default Management Network Service CRL only.


If you want to modify System Flag values, the flags must be added to the System Configuration file. For more information see [Modifying System Flags](#).

Removing a CRL

To remove a CRL:

- 1 In the certificate list, select the CRL List to be removed.
- 2 Click the **Remove** button.

The certificate is removed and the Collaboration Server displays a disconnection confirmation dialog box.

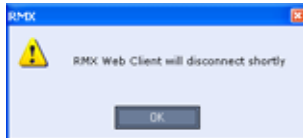


- 3 Click the **OK** button.

Login to the Collaboration Server to proceed with further management tasks.

Certificate Revocation

Certificate Revocation of IP Network and peer SIP TLS certificates for each defined IP Service can be enabled, disabled and configured:

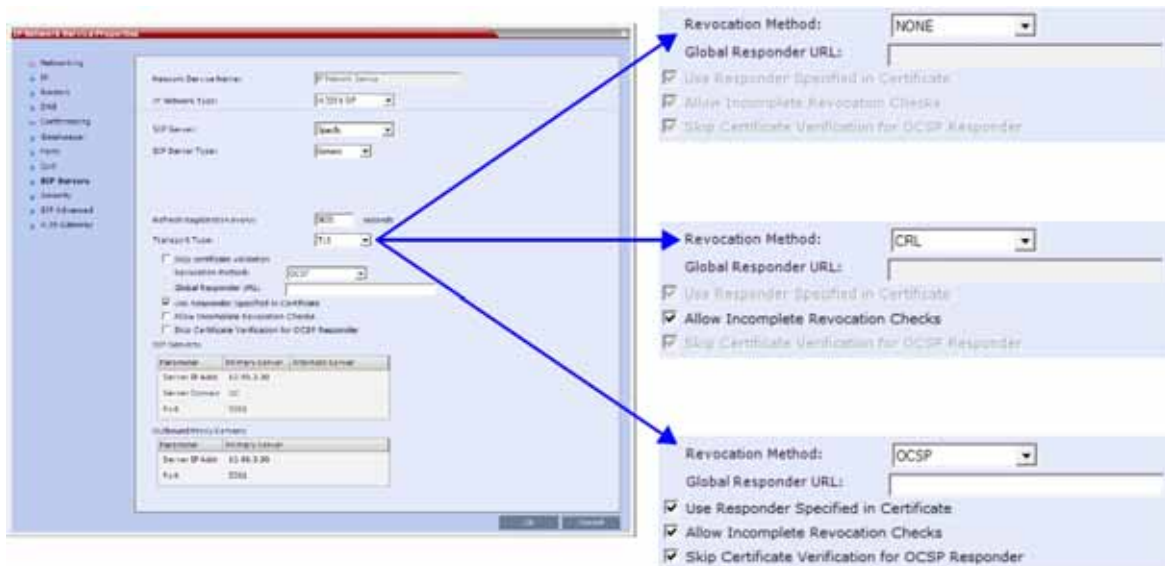

Revocation Method

One of three **Certificate Revocation Methods** can be selected:

- **NONE** (Default) - Certificate Revocation is not implemented.
- **CRL** - Requires at least one CRL file be installed, failing which an error message, At least one CRL should be installed, is displayed.
- **OCSP** - When selected, additional configuration options are displayed.
 - **Global Responder URL**

- ◆ The format of the URL is validated and must be of the format:
[http\(s\)://responder.example.com/ocsp](http(s)://responder.example.com/ocsp)
- ◆ The URL can be either **http** or **https**.
- ◆ If the Global Responder URL does not respond an Active Alarm is raised.
- **Use Responder Specified in Certificate**
 - ◆ The default for this check box is unchecked.
 - ◆ If the check box is checked Responder URL is taken from the certificate. If the certificate does not contain a Responder URL, the Global Responder URL is used.
 - ◆ If the check box is unchecked the Global Responder URL is used. If the Global Responder URL is incorrectly configured a message, Global responder URL must be configured, is displayed.
- Allow Incomplete Revocation Checks
 - If **OCSP** is selected:
 - ◆ If the check box is checked and the **Global Responder** or the **Responder Specified in the Certificate** does not respond for any reason the certificate is not considered revoked.
 - ◆ If the check box is unchecked and the **Global Responder** or the **Responder Specified in the Certificate** does not respond for any reason the certificate is considered revoked.
 - If **CRL** is selected:
 - ◆ If the check box is checked and the **CRL** of the specific **CA** is not loaded, all **Certificates** are the **CA** are not considered revoked.
 - ◆ If the check box is unchecked and the **CRL** of the specific **CA** is not loaded, all **Certificates** are the **CA** are considered revoked.
- Skip Certificate Validation for OSCP Responder
 - ◆ No **Certificate Validation** is performed.
- System Flag:
 - Should intermittent login problems occur when logging in to the Collaboration Server's Management Network, the **OCSP_RESPONDER_TIMEOUT** system flag can be manually added to system.cfg and its value set to the number of seconds the Collaboration Server is to wait for an OCSP response from the OCSP Responder before failing the connection.
 - Default: **3** (seconds)
 - Range: **1-20** (seconds)

Self-signed Certificate

In compliance with UC APL requirements, PKI Self-signed Certificates are supported for the both the Default Management and IP Network Services.

A mixture of Self-signed and CA-signed Certificates is supported, however a CA-signed certificate will always override a Self-signed Certificate.

Self-signed Certificate Creation

Self-signed Certificates are created during:

- Initial system start-up before any CA-signed Certificates have been installed.


- IP Network Services creation.
- Network Services updates that result in Host Name changes.
- Daily validity checks of Self-signed Certificates.
- Backup and Restore of the system configuration.

Self-signed Certificate field values are automatically inserted when the certificate is created:

Self-signed Certificate Field Values - Creation

Field	Value
Signature Algorithm	SHA1
Issuer / Issued To	Service Host Name Both the Issuer and Issued To fields have the same values. CN = host name of the service name DC = Polycom OU = Self Signed Certificate O = Polycom MCU Note: The value of CN is derived from the IP Network Service Name, while the values of DC, OU and O are hard coded. For a full description of these fields see <i>RFC 5280</i> .
Valid from	Date of creation
Valid to	Date of creation + 10 years
Subject (Common Name)	Service Host Name
Public Key	2048 bits

Self-signed Certificates are indicated in the Certification Repository - Issued By field.

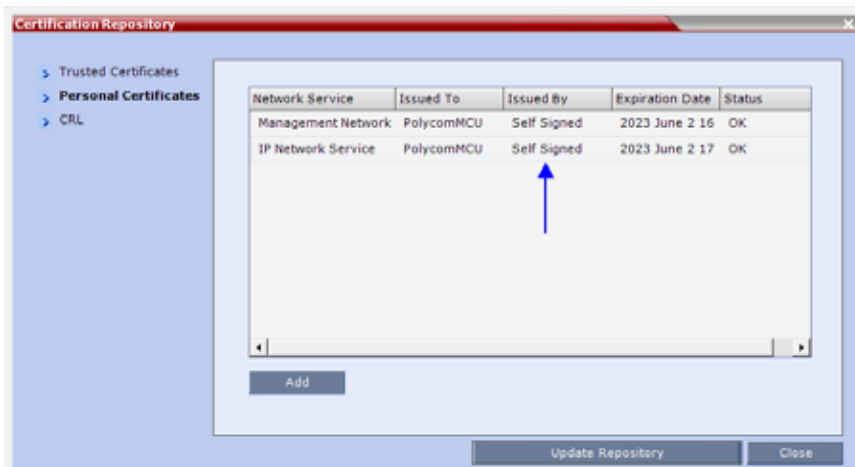

Emergency CRL (Certificate Revocation List) Update

Administrators maintaining RMX systems are required to perform an update of the CRLs used on the systems within the validity period of the current CRLs.

Should the current CRLs expire; the system will not allow administrators to login and perform administrative tasks using the RMX Web Client or RMX Manager.

The Emergency CRL Update procedure disables client certificate validation enabling an administrator to access the system and install an updated CRL file without having to perform a full system rebuild.



This procedure must only be performed on a secured network as the system must disable the client certificate validation process resulting in management traffic being sent over the network without the use of SSL encryption.



The RMX must be powered on before starting this procedure.

To perform an Emergency CRL Update procedure:

Step 1: Download and save the updated CRL files from the CA Server.

Step 2: Disable **Secured Communications Mode**.

Step 3: Open the **Certification Repository** and update the CRL files.

Step 5: Update the **Repository**.

Step 6: Re-connect to the RMX.

Step 7: Re-enable **Secured Communications Mode**.

Step 1: Download and save the updated CRL files from the CA Server

These files are saved on the workstation.



The RMX supports the use of PEM and DER formats.

Take note of the format you download as you will need to make a selection later in this process when uploading the new CRL files.

Step 2: Disable Secure Communications mode

- a** Connect a USB keyboard or mouse to the USB port of RMX.

The USB port locations for RMX 1800/2000/4000 are shown in [USB Restore](#).

- b** Power the RMX **Off** and then **On** using the power switch and allow the RMX to complete its startup.

System restart can take 5 - 10 minutes, depending on the RMX's configuration.


Using the RMX Manager:

- c** In the **MCUs** list, select the RMX to be updated.
- d** In **MCU Properties**, change the **Port** number from **443** to **80**.

- e Click **OK**.
- f In the **MCUs** list, select the RMX to be updated.
- g Right-click in the **MCUs** list entry and select **Connect**.
- h Click **Accept** to accept the warning banner.
- i Enter an administrator **Username** and **Password**.
- j Click **OK**.

Step 3: Open the Certification Repository and Update the CRL files

- a On the RMX menu, click **Setup > RMX Secured Communication > Certification Repository**.
- b Click the **CRL** tab.
- c Click **Add**.

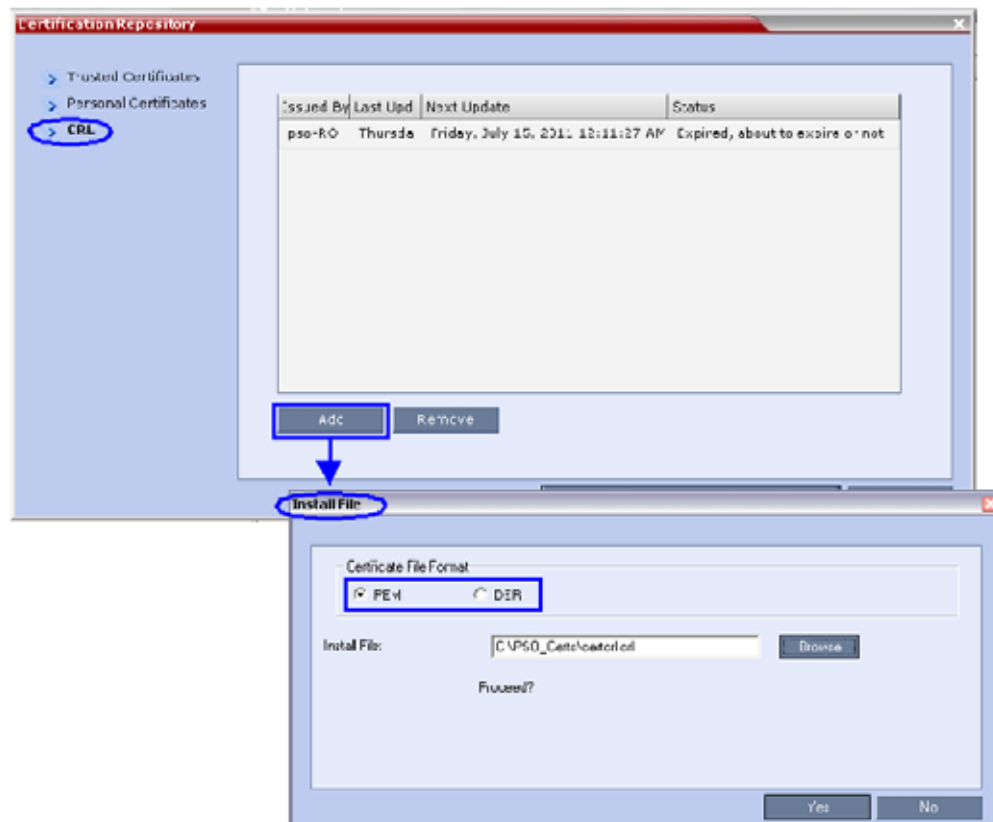

- d In the **Install File** dialog box, select the **DER** or **PEM** format depending on which file format was chosen in Step 1 of this procedure.
- e Click the **Browse** button to navigate to the folder on the workstation where you saved the CRL files in Step 1 of this procedure.
- f Select the CRL file that you want to upload.

- g Click **Yes** to proceed.
The system checks the CRL file and displays a message that the certificate was loaded successfully.
- h Repeat Steps d through f until all of the required CRL files has been updated.

Step 4: Update the repository.

When all the CRL files have been updated as described in Step 3.

- a Click **Update Repository**.
A repository update confirmation message is displayed.
- b Click **OK** to update the repository.

Step 5: Re-connect to the RMX.

- a Remove the USB device that was connected in Step 2a.
- b Restart the RMX.
- c In the **RMX Management** pane, click the **Hardware Monitor** button.
The **Hardware Monitor** pane is displayed.




- d Click the **Reset** button.
The RMX restarts. System restart can take 5 - 10 minutes, depending on the RMX's configuration.
Using the RMX Manager:
- e In the **MCUs** list, select the RMX to be updated.
- f Right-click in the **MCUs** list entry and select **Connect**.
- g Click **Accept** to accept the warning banner.
- h Enter an administrator **Username** and **Password**.
- i Click **OK**.

Step 6: Re-enable Secured Communications Mode.

Using the RMX Manager:

- a In the **RMX Management** pane, click the **IP Network Services** button. (Depending on the RMX Manager configuration, you may have to click **Rarely Used** first.)
- b In the **IP Network Services** list pane, double-click **Management Network**.

The **Management Network Properties** dialog box is displayed.

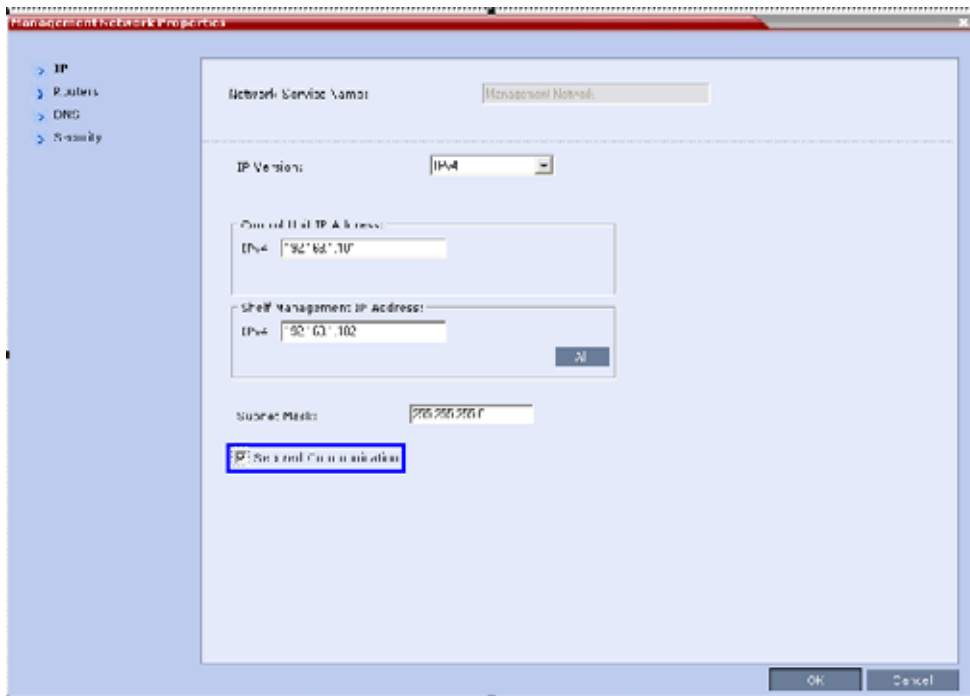

c Select the **Secured Communication** check box.

d Click **OK**.

A message informs you that your session will be disconnected and that you must re-connect the RMX using **https** in the browser URL.

e Click **OK**.

A system restart confirmation message is displayed.

f Click **Yes** to restart the RMX.

The RMX restarts. System restart can take 5 - 10 minutes, depending on the RMX's configuration.

g In the **MCUs** list, select the RMX to be updated.

h In **MCU Properties**, change the **Port** number from **80** to **443**.

i Click **OK**.

SIP TCP Keep-Alive

In compliance with UC APL requirements, the NAT Keep Alive method has been enhanced according to IETF RFC 5626 and For a full description of Keep Alive see IETF RFC 5626 and IETF RFC 6223.

Keep Alive behavior is defined for each IP Network Service and can be modified by adding the following system flags and modifying their values according to System Flags: SIP_TCP_KEEP_ALIVE_TYPE / BEHAVIOR. For more information see [IP Network Services](#).

System Flags - SIP_TCP_KEEP_ALIVE_TYPE / BEHAVIOR

Flag	Possible Flag Values
SIP_TCP_KEEP_ALIVE_TYPE	<p>NONE</p> <ul style="list-style-type: none"> No Keep Alive messages are sent. <hr/> <p>MS (Default when Microsoft SIP Server Type is selected for the Network Service).</p> <ul style="list-style-type: none"> Keep Alive messages are sent only after successful registration. A Ping response is not expected. <hr/> <p>RFC5626</p> <ul style="list-style-type: none"> In the SIP Header, the Flow-Timer Header Field is mandatory. Keep Alive messages are sent only after successful registration. A Ping response is expected and if none is received, the value of the SIP_TCP_KEEP_ALIVE_BEHAVIOR system flag is checked. <p>If its value is</p> <p>DO_NOT_RE_REGISTRATION_WHEN_NO_PONG_RESPONSE:</p> <ul style="list-style-type: none"> ▲ For a Register Dialog, a Reregister Message is sent. There is no disconnection. ▲ For a Call Dialog, no further messages are sent. There is no disconnection. <p>If its value is RE_REGISTRATION_WHEN_NO_PONG_RESPONSE:</p> <ul style="list-style-type: none"> ▲ Both Register and Call Dialogs are disconnected. <hr/> <p>RFC6223</p> <ul style="list-style-type: none"> Behavior is the same as for RFC5626 with the following differences: <ul style="list-style-type: none"> ▲ In the SIP Header, the Via Header “keep” is mandatory. ▲ In the SIP Header, the Flow-Timer Header Field is optional. <hr/> <p>PLCM (Default when Generic SIP Server Type is selected for the Network Service).</p> <ul style="list-style-type: none"> For Call and successful Register Dialogues: <ul style="list-style-type: none"> ▲ Two CR LF character sequences are sent ▲ No Ping response is expected

System Flags - SIP_TCP_KEEP_ALIVE_TYPE / BEHAVIOR

Flag	Possible Flag Values
SIP_TCP_KEEP_ALIVE_BEHAVIOR	<p>If the value of the System Flag, SIP_TCP_KEEP_ALIVE_TYPE= RFC5626 or RFC6223 and no Ping is received, the value of this System Flag is checked.</p> <p>Possible Values:</p> <ul style="list-style-type: none">• RE_REGISTRATION_WHEN_NO_PONG_RESPONSE• DO_NOT_RE_REGISTRATION_WHEN_NO_PONG_RESPONSE (Default) <p>For a full description see the description for the SIP_TCP_KEEP_ALIVE_TYPE flag (above).</p>

Keep Alive Frequency

The Keep Alive frequency is set by the SIP Server using the Via Header keep and Flow Timer fields of the SIP Header.

If the Collaboration Server is functioning as the server, the Keep Alive frequency is set according to the hard coded values listed in the following table.

Keep Alive - Frequency

Field	Seconds
SIP_TCP_KEEP_ALIVE_DISABLE	None
SIP_TCP_KEEP_ALIVE_MS	300
SIP_TCP_KEEP_ALIVE_5626	60
SIP_TCP_KEEP_ALIVE_6223	
SIP_TCP_KEEP_ALIVE_PLCM	

User and Connection Management

In Ultra Secure Mode (ULTRA_SECURE_MODE=YES), Users can be automatically disabled or locked out by the system when they do not log into the Collaboration Server application for a predefined period or if their login session does not meet Enhanced Security requirements. Users can be manually disabled by the administrator.

An administrator can enable a User who was disabled automatically by the system (in the Ultra Secure Mode) or manually by the administrator.

Additional security measures can be implemented in the Collaboration Server by setting the appropriate system flags. These measures control the system users, the user connections to the MCU and the user login process.

Managing system users includes:

- User types that are not supported when the Ultra Secure Mode is enabled.
- Disabling and enabling system Users.
- Renaming Users.
- Disabling inactive users.

Managing the user login process includes:

- Implementing Strong Passwords.
- Implementing password re-use / history rules.
- Defining password aging rules.
- Defining password change frequency.
- Forcing password change.
- Conference and Chairman Passwords.

- Locking out User.
- Displaying the User Login record.

Controlling the user sessions includes:

- Limiting the maximum number of concurrent user sessions.
- User session timeout.
- Limiting the maximum number of users that can connect to the system.

Managing the System Users

When the MCU is configured to Ultra Secure Mode (the ULTRA_SECURE_MODE is set to YES), the following user management rules are automatically enforced:

Disabling/Enabling Users

- An administrator can disable a user or enable a disabled user, including administrators.
- The last administrator cannot be disabled.

For more information see [Disabling Inactive Users](#).

Renaming Users

- An administrator can rename any user, including administrators.
- A renamed user is considered by the system to be a new user and is forced to change his/her password.

Disabling Inactive Users

Users can be automatically disabled by the system when they do not log into the Collaboration Server application for a predefined period. When the Collaboration Server is configured to Ultra Secure Mode this option is enforced.

- To enable this option, the DISABLE_INACTIVE_USER system flag to a value between 1 to 90. This value determines the number of consecutive days a user can be inactive before being disabled.
When flag value is set to 0 (default in standard security environment), this option is disabled.
The flag value is automatically set to 30 days when Ultra Secure Mode is enforced.
- The user is marked as disabled but is not deleted from the system administrator/operator database.
- The user remains disabled until re-enabled by an administrator.
- If a disabled user attempts to Login, an error message, Account is disabled, is displayed.
- The last remaining administrator cannot be disabled.

Managing the User Login Process**Implementing Strong Passwords**

Strong Passwords can be implemented for logging into the Collaboration Server management applications. They can be implemented when the system is in standard security mode or when in Ultra Secure Mode.

If an administrator modifies any of the Strong Passwords flag settings, all users are forced to perform the password change procedure, ensuring that all user passwords conform to the modified Strong Passwords settings.

Administrators can change passwords for users and other administrators. When changing passwords for him/herself, other administrators or other users, the administrator is required to enter his/her own administrator's password.

Strong Passwords rules are enforced according to the settings of the various Strong Passwords flags as described in [System Flags affected by Ultra Secure Mode](#). Default settings of these flag change according to the system security mode.

Password Character Composition

- When the FORCE_STRONG_PASSWORD_POLICY System Flag is set to YES:
 - A Strong Password must contain at least one of all of the following character types:
 - ◆ Upper case letters
 - ◆ Lower case letters
 - ◆ Numbers
 - ◆ Special characters: @ # \$ % ^ & * () _ - = + | } { : " \] [; / ? > < , . (space) ~
- When the FORCE_STRONG_PASSWORD_POLICY and ULTRA_SECURE_MODE System Flags are set to YES:
 - A Strong Password must contain at least two of all of the following character types:
 - ◆ Upper case letters
 - ◆ Lower case letters
 - ◆ Numbers
 - ◆ Special characters: @ # \$ % ^ & * () _ - = + | } { : " \] [; / ? > < , . (space) ~
 - Passwords cannot contain the User ID (User Name) in any form. Example: A user with a User ID, ben, is not permitted to use "123BeN321" as a password because BeN is similar to the User ID.
 - Passwords cannot contain more than four digits in succession.

When the strong password option is enabled and the password does not meet the Strong Password requirements the error Password characteristics do not comply with Enhance Security requirements is displayed.

Password Length

The length of passwords is determined by the value of the `MIN_PASSWORD_LENGTH` System Flag.

- Possible flag values are between 0 and 20.
- A System Flag value of 0 means this rule is not enforced, however this rule cannot be disabled when the Collaboration Server is in Ultra Secure Mode.
- In Ultra Secure Mode, passwords must be at least 15 characters in length (default) and can be up to 20 characters in length.
- If the `MIN_PASSWORD_LENGTH` flag is enabled and the password does not meet the required length the error `Password is too short` is displayed.

If the minimum password length is increased, valid pre-existing passwords remain valid until users are forced to change their passwords.

Implementing Password Re-Use / History Rules

Users are prevented from re-using previous passwords by keeping a list of previous passwords. If a password is recorded in the list, it cannot be re-used. The list is cyclic, with the most recently recorded password causing the deletion of the oldest recorded password.

- The number of passwords that are recorded is determined by the value of the `PASSWORD_HISTORY_SIZE` System Flag. Possible values are between 0 and 16.
- A flag value of 0 means the rule is not enforced, however this rule cannot be disabled when the Collaboration Server is in Ultra Secure Mode.
- In Ultra Secure Mode, at least 10 passwords (default) and up to 16 passwords must be retained.

If the password does not meet this requirement, the error `New password was used recently` is displayed.

Defining Password Aging

The duration of password validity is determined by the value of the `PASSWORD_EXPIRATION_DAYS` System Flag.

- Passwords can be set to be valid for durations of between 0 and 90 days.
- If the System Flag is set to 0, user passwords do not expire. The System Flag cannot be set to 0 when the Collaboration Server is in Ultra Secure Mode.
- In Ultra Secure Mode, the minimum duration can be set to 7 days and the default duration is 60 days.

The display of a warning to the user of the number of days until password expiration is determined by the value of the `PASSWORD_EXPIRATION_WARNING_DAYS` System Flag.

- Possible number of days to display expiry warnings is between 0 and 14.
- If the System Flag is set to 0, password expiry warnings are not displayed. The System Flag cannot be set to 0 when the Collaboration Server is in Ultra Secure Mode.
- In Ultra Secure Mode, the earliest warning can be displayed 14 days before passwords are due to expire and the latest warning can be displayed 7 days before passwords are due to expire (default setting).
- If a user attempts to log in after his/her password has expired, an error is displayed: `User must change password`.

Maximum Repeating Characters

There are two separate flags that control the maximum number of repeated characters permitted in a password, one for the user password and one for the chairperson (conference) password.

- `MAX_PASSWORD_REPEATED_CHAR` allows the administrator to configure the maximum number of consecutive repeating characters to be allowed in a user password.

Range: 1 - 4

Default: 2

- `MAX_CONF_PASSWORD_REPEATED_DIGITS` allows the administrator to configure the maximum number of consecutive repeating digits to be allowed in a conference password.

Range: 1 - 4

Default: 2

Defining Password Change Frequency

The frequency with which a user can change a password is determined by the value of the `MIN_PWD_CHANGE_FREQUENCY_IN_DAYS` System Flag. The value of the flag is the number of days that users must retain a password.

- Possible retention period is between 0 and 7 days. In Ultra Secure Mode the retention period is between 1 (default) and 7.
- If the System Flag is set to 0, users do not have to change their passwords. The System Flag cannot be set to 0 when the Collaboration Server is in Ultra Secure Mode.
- If a user attempts to change a password within the time period specified by this flag, the error `Password change is not allowed before defined min time has passed` is displayed.

An administrator can assign a new password to a user at any time.

Forcing Password Change

When the system is in Ultra Secure Mode the user is forced to change his/her password as follows:

- After modifying the value of the `ULTRA_SECURE_MODE` System Flag to YES, all Collaboration Server users are forced to change their Login passwords.
- When an administrator creates a new user, the user is forced to change his/her password on first Login.
- If an administrator changes a user's User ID name, that user is forced to change his/her password on his/her next Login.
- If a user logs in using his/her old or default password, the Login attempt will fail. The error `User must change password` is displayed.
- Changes made by the administrator to any of the Strong Password enforcement System Flags render users' passwords invalid.

Example: A user is logged in with a fifteen character password. The administrator changes the value of the `MIN_PASSWORD_LENGTH` System Flag to 20.

The next time the user tries to log in, he/she is forced to change his/her password to meet the updated Strong Password requirements.

Temporary User Lockout

When the ULTRA_SECURE_MODE System Flag is set to YES, Temporary User Lockout is implemented as a defense against Denial of Service Attacks or Brutal Attacks. Such attacks usually take the form of automated rapid Login attempts with the aim of gaining access to or rendering the target system (any network entity) unable to respond to users.

If a user tries to log in to the system and the Login is unsuccessful, the user's next Login attempt only receives a response from the Collaboration Server after 4 seconds.

User Lockout

User Lockout can be enabled to lock a user out of the system after three consecutive Login failures with same User Name. The user is disabled and only the administrator can enable the user within the system. User Lockout is enabled when the USER_LOCKOUT System Flag is set to YES.

If the user tries to login while the account is locked, the error message `Account is disabled` is displayed.

User Lockout is an Audit Event.


A system reset does not reset the Login attempts counter.

The time period during which the three consecutive Login failures occur is determined by the value of the USER_LOCKOUT_WINDOW_IN_MINUTES System Flag. A flag value of 0 means that three consecutive Login failures in any time period will result in User Lockout. Value can be between 0 and 45000.

The duration of the Lockout of the user is determined by the value of the USER_LOCKOUT_DURATION_IN_MINUTES System Flag. A flag value of 0 means permanent User Lockout until the administrator re-enables the user within the system. Value can be between 0 and 480.

User Login Record

The system can display a record of the last Login of the user. It is displayed in the Main Screen of the Collaboration Server Web Client or Collaboration Server Manager. The user Login Record display is enabled when the LAST_LOGIN_ATTEMPTS System Flag is set to YES.

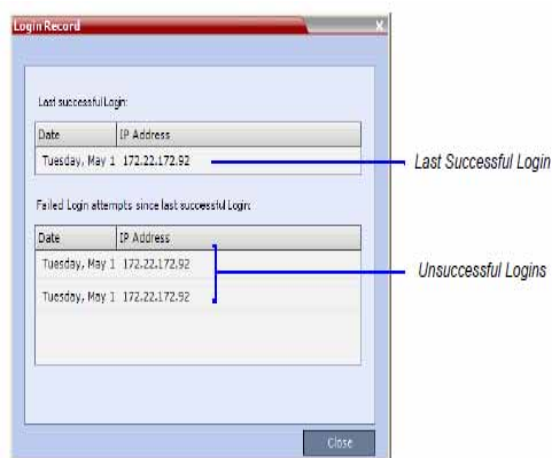

Both lists display the:

- Date and Time of the Login attempt.

- IP Address of the workstation initiating the Login attempt.

The list of unsuccessful Logins can contain up to ten records.

Failed Login attempts are written to the system Log Files and are recorded as Audit Events. The Audit files can be retrieved by the Administrator User.

Controlling User Sessions

Management Sessions per System

It is possible for a several users to simultaneously log in to the Collaboration Server and initiate management sessions from different instances of the Collaboration Server Web Client or Collaboration Server Manager that are running on a single or several workstations.

The maximum number of concurrent management sessions (http and https connections) per system is determined by the value of the `MAX_NUMBER_OF_MANAGEMENT_SESSIONS_PER_SYSTEM` System Flag.

Any attempt to exceed the maximum number of management sessions per system results in the display of an error message: `Maximum number of permitted user connections has been exceeded. New connection is denied.`

The log in attempt is recorded as an Audit Event.

Sessions per User

It is possible for a user to log in to the Collaboration Server and initiate multiple management sessions from different instances of the Collaboration Server Web Client or Collaboration Server Manager that are running on a single or several workstations.

The maximum number of concurrent management sessions per user (http and https connections) is determined by the value of the `MAX_NUMBER_OF_MANAGEMENT_SESSIONS_PER_USER` System Flag.

Any attempt to exceed the maximum number of management sessions per user results in the display of an error message: `A user with this name is already logged into the system. Additional connection is denied.`

The log in attempt is recorded as an Audit Event.

Connection Timeout

If the connection is idle for longer than the number of seconds specified by the setting of the `APACHE_KEEP_ALIVE_TIMEOUT` System Flag, the connection to the Collaboration Server is terminated.

Session Timeout

If there is no input from the user or if the connection is idle for longer than the number of minutes specified by the setting of the `SESSION_TIMEOUT_IN_MINUTES` System Flag, the connection to the MCU is terminated.

A flag value of 0 means Session Timeout is disabled, however this feature cannot be disabled when the MCU is in Ultra Secure Mode.

Erase Session History After Logout

In Ultra Secure Mode, the Collaboration Server Web Client and RMX Manager leave no session information on the user's workstation or the MCU after the user logs off.

Banner Display and Customization


The Login Screen and Main Screen of the Collaboration Server Web Client and the Collaboration Server Manager can display informative or warning text banners. These banners can include general information or they can be cautioning users to the terms and conditions under which they may log into and access the system, as required in many secured environments.

Banner display is enabled using **Setup > Customize Display Settings > Banners Configuration**.

The administrator can choose one of four alternative login banners to be displayed. The four alternative banners cannot be modified. A Custom banner (default) can also be defined.

The Main Page Banner is blank and can be defined.

The Banner Configuration dialog box allows the administrator to select a Login Page Banner from a drop-down menu.

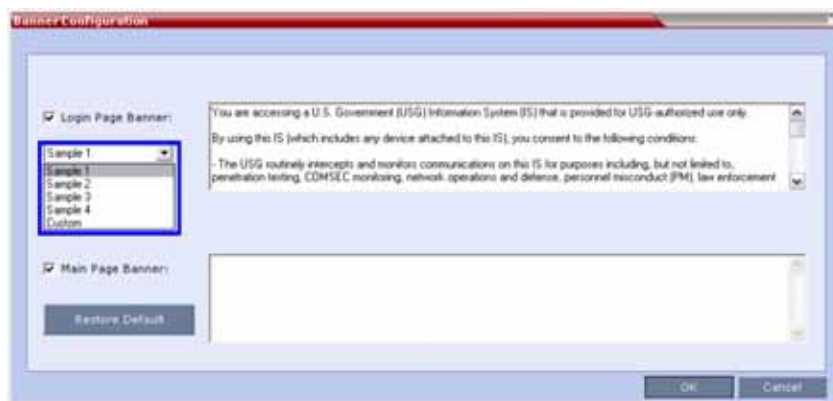

One of the following Login Page Banners can be selected:

- Non-Modifiable Banners
 - Sample 1
 - Sample 2
 - Sample 3
 - Sample 4
- Modifiable Banner
 - Custom (Default)

Guidelines for Customizing the Login Page Banner

- If enabled, the Login Page Banner must be acknowledged before the user is permitted to log in to the system.
- If a Custom banner has been created, and the user selects one of the alternative, non-modifiable banners the Custom banner is not deleted.

- The Custom Login Page Banner banner may contain up to 1300 characters.
- An empty Login Page Banner is not allowed.
- Any attempt to modify a non-modifiable banner results in it automatically being copied to the Custom banner.

Non-Modifiable Banner Text

Sample 1 Banner

You are accessing a U.S. Government (USG) Information System (IS) that is provided for USG-authorized use only.

By using this IS (which includes any device attached to this IS), you consent to the following conditions:

- The USG routinely intercepts and monitors communications on this IS for purposes including, but not limited to, penetration testing, COMSEC monitoring, network operations and defense, personnel misconduct (PM), law enforcement (LE), and counterintelligence (CI) investigations.
- At any time, the USG may inspect and seize data stored on this IS.
- Communications using, or data stored on, this IS are not private, are subject to routine monitoring, interception, and search, and may be disclosed or used for any USG authorized purpose.
- This IS includes security measures (e.g., authentication and access controls) to protect USG interests--not for your personal benefit or privacy.
- Notwithstanding the above, using this IS does not constitute consent to PM, LE or CI investigative searching or monitoring of the content of privileged communications, or work product, related to personal representation or services by attorneys, psychotherapists, or clergy, and their assistants. Such communications and work product are private and confidential. See User Agreement for details.

Sample 2 Banner

This system is for the use of authorized users only. Individuals using this computer system without authority, or in excess of their authority, are subject to having all of their activities on this system monitored and recorded by systems personnel. In the course of monitoring individuals improperly using this system, or in the course of system maintenance, the activities of authorized users also may be monitored. Anyone using this system expressly consents to such monitoring and is advised that if such monitoring reveals possible criminal activity, system personnel may provide the evidence of such monitoring to law enforcement officials.

Sample 3 Banner

You are about to access a system that is intended for authorized users only. You should have no expectation of privacy in your use of this system. Use of this system constitutes consent to monitoring, retrieval, and disclosure of any information stored within the system for any purpose including criminal prosecution.

Sample 4 Banner

This computer system including all related equipment, network devices (specifically including Internet access), is provided only for authorized use. All computer systems may be monitored for all lawful purposes, including ensuring that their use is authorized, for management of the system, to facilitate protection against unauthorized access, and to verify security procedures, survivability and operational security. Monitoring includes active attacks by authorized personnel and their entities to test or verify the security of the system. During monitoring, information may be examined, recorded, copied and used for authorized purposes. All information including personal information, placed on or sent over this system may be monitored. Use of this system, authorized or unauthorized, constitutes consent to monitoring of this system. Unauthorized use may subject you to criminal prosecution. Evidence of any such unauthorized use collected during monitoring may be used for administrative, criminal or other adverse action. Use of this system constitutes consent to monitoring for these purposes.


Customizing Banners

The Login and Main Screen banners can be customized to display conference information, assistance information or warning text as required in the Ultra Secure Mode.

To customize the banners:

- 1 In the Collaboration Server menu, click **Setup > Customize Display Settings > Banners Configuration**.

The **Banners Configuration** dialog box opens.

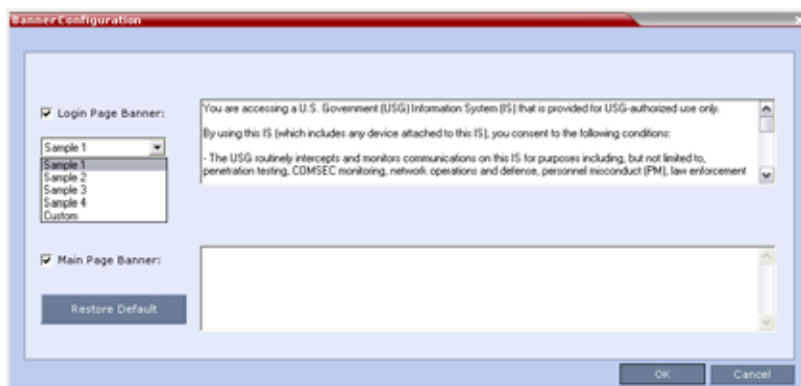

- 2 Customize the banners by modifying the following fields:

Banner Configuration

Field	Description		
	Check Box	Text Field	Restore Default Button
Login Page Banner	Select or clear the check box to enable or disable the display of the banner.	Edit the text in this field to meet local requirements: <ul style="list-style-type: none"> Banner content is multilingual and uses Unicode, UTF-8 encoding. All text and special characters can be used. 	Click the button to restore the default text to the banner
Main Page Banner		<ul style="list-style-type: none"> Maximum banner size is 100KB. 	

- 3 Click the **OK** button.

Banner Display

Login Screen Banner


The Login screen banner can display any text, for example the terms and conditions for system usage. The default text is that required in Ultra Secure Mode. The user must acknowledge that the information was read and click the Accept button to proceed to the Login screen as shown in the following screen:



When the Collaboration Server is configured to work in Ultra Secure Mode, and banner display is enabled, the display banner includes the terms and conditions for system usage as detailed in the default text: contained in Sample Banner 1.

Main Screen Banner

The Main Screen banner is displayed at the bottom of the screen, as follows:

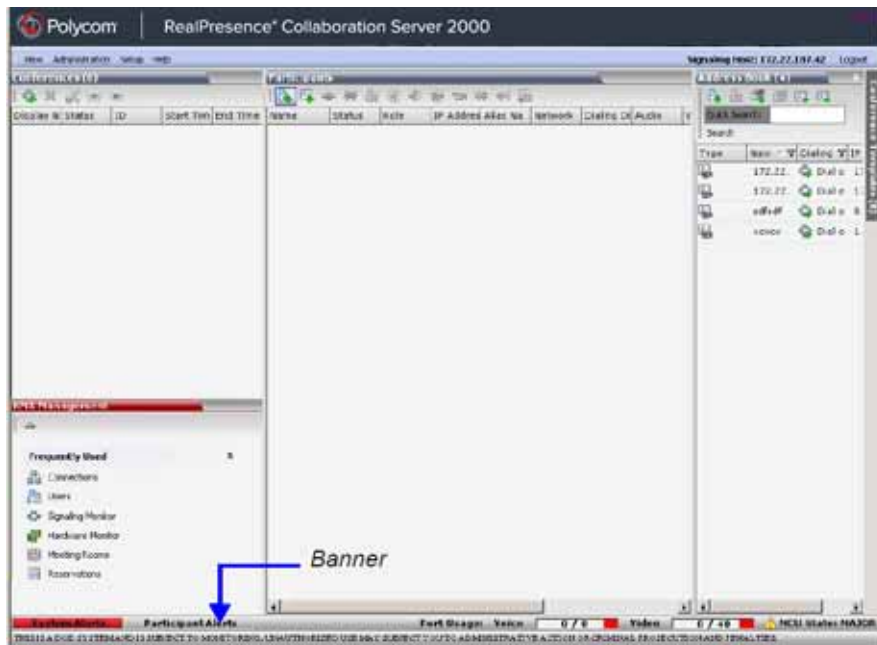

When the Collaboration Server is configured to work in **Ultra Secure Mode**, and banner display is enabled, the display banner includes the following default text:

```
THIS IS A DOD SYSTEM AND IS SUBJECT TO MONITORING, UNAUTHORIZED USE MAY SUBJECT YOU TO ADMINISTRATIVE ACTION OR CRIMINAL PROSECUTION AND PENALTIES.
```

Securing an External Database

TLS 1.0 is used when securing communications between the Collaboration Server and an external database. The certificate is installed on the database server and the Collaboration Server is the client. When the certificate is installed on the database server, all client requests and responses are transferred via secure port 443.

It is important to verify that the external database application is operating in secure mode before enabling secure external database communications on the Collaboration Server. The Collaboration Server checks the validity of external database's certificate before communicating. If there is a certificate error an Active Alarm is raised with Error in external database certificate in the description field.

To enable secure Collaboration Server Communications with an External Database:


- Set the Collaboration Server to communicate with the database server via port 443 by setting the value of the System Flag `EXTERNAL_DB_PORT` in `system.cfg` to 443.

For more information see [Modifying System Flags](#).

MS Active Directory Integration

It is possible to configure direct interaction between the Collaboration Server and Microsoft Active Directory for Authentication and Authorization of Management Network users.

The following diagram shows a typical user authentication sequence between a User, Collaboration Server and Active Directory.

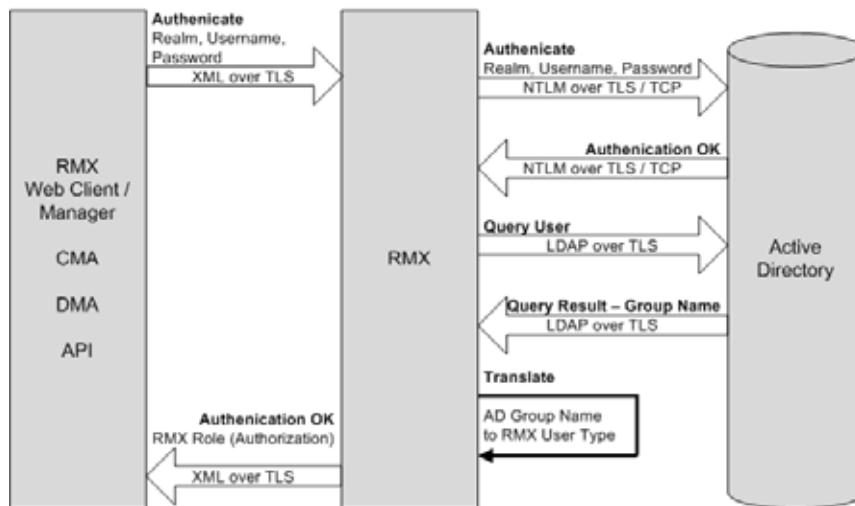

Directory and Database Options

Ultra Secure Mode

Internal Collaboration Server database and Active Directory

Authentication is first attempted using the internal Collaboration Server database. If it is not successful authentication is attempted using the Active Directory.

Standard Security Mode

Internal Collaboration Server database + External Database

First authentication is via the internal Collaboration Server database. If it is not successful, authentication is via the External Database.

Internal Collaboration Server database + External Database + Active Directory

- **Management Logins**

First authentication is via the internal Collaboration Server database. If it is not successful, authentication is via the Active Directory.

- **Conference Queries** (Chairperson Password, Numerical ID etc.)

First authentication is via the internal Collaboration Server database. If it is not successful, authentication is via the External Database.

Guidelines

- The Collaboration Server maintains a local record of:
 - Audit Events – users that generate these events are marked as being either internal or external.
 - Successful user logins
 - Failed user login attempts
- User passwords and user lockout policy for external users are managed via Active Directory's integration with the user's host machine.
- Enabling or disabling Active Directory integration does not require a reset.
- In Standard Security Mode multiple accounts of all user types are supported. In Ultra Secure Mode, enabling Active Directory integration is only permitted if the Collaboration Server only has one local Administrator User.
- Multiple Machine Accounts with various roles are supported.
- Microsoft Active Directory is the only directory service supported.
- Active Directory integration is configured as part of the Management Network.
- Both IPv4 and IPv6 addressing are supported.
- In Standard Security Mode, the Active Directory can be queried using NTLM with or without TLS encryption. In Ultra Secure Mode, TLS encryption is required.
- Server and client certificate validation requests use LDAP with or without TLS encryption.




- When using LDAP over TLS, in addition to using port 389 with STARTTLS, the administrator has the option of using port 636.
- LDAP is not supported by Collaboration Server (RMX) 1800-0.
- The Active Directory setting define Send NTLMv2 response only. Refuse LM & NTLM (in the **group policy management > forest > polycomdemo.com > group policy objects > default domain policy > edit > computer configuration > policies > windows settings > security settings > local policies > security options > network security**: Lan Manager authentication level) is not supported with the Collaboration Server.
- Active Directory is not supported by Collaboration Server (RMX) 1800-0.

Enabling Active Directory Integration

To configure Directory Services:

- 1 On the Collaboration Server **Menu**, click **Setup > Directory Services**.
The **Directory Services - Configuration** dialog box is displayed.

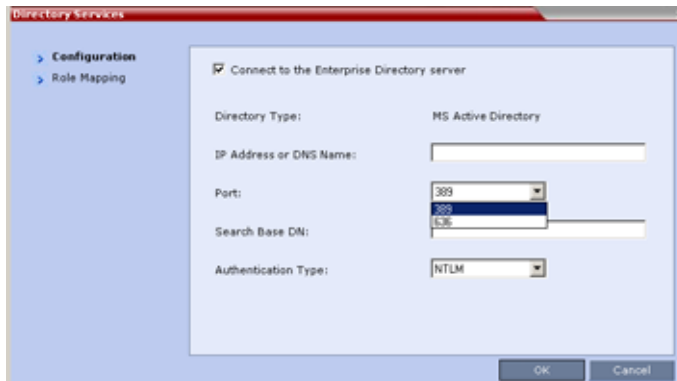


- 2 Modify the following fields.

Directory Services - Configuration

Field	Description
Connect to the Enterprise Directory Server	Select this check box to enable or disable the Active Directory feature.
IP Address or DNS Name	Enter the IP address or DNS name of the Enterprise Directory Server (Active Directory).
Port	Select the Port according to the Authentication Protocol to be used: <ul style="list-style-type: none"> • 389 - NTLM over TCP • 636 - NTLM over TLS
Search Base DN	Enter the starting point when searching for User and Group information in the Active Directory. For example if the Domain Name is: mainoffice.bigcorp.com.uk The entry in this field should be: CN=Users,DC=mainoffice,DC=bigcorp,DC=come,DC=uk
Authentication Type	Only NTLM can be used.

- 3 Click the **Role Mapping** tab.

The **Directory Services - Role Mapping** dialog box is displayed.

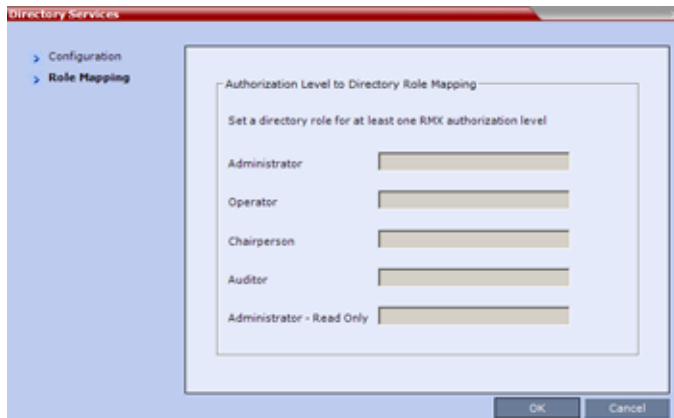

Each of the Collaboration Server user types: **Administrator**, Administrator Read-Only, **Auditor**, **Operator** and **Chairperson** can be mapped to only one **Active Directory Group** or **Role** according to the customer's specific implementation.

A Collaboration Server user that belongs to multiple **Active Directory Groups** is assigned to the **Group** with the least privileges.

- 4 Map the Collaboration Server **User Types**, to their **Active Directory** roles by modifying the following fields.

Directory Services - Role Mapping

Field	Description
Administrator	At least one of these User Types must be mapped to an Active Directory Role.
Administrator Read-Only	
Operator	
Chairperson	
Auditor	

- 5 Click **OK**.

Restoring the Collaboration Server Using the USB Port

When the RMX is in Ultra Secure Mode, restoring the RealPresence® Collaboration Server 1800/2000/4000 using the USB port can be used to set the RMX back to its factory default settings, if for any combination of factors the system becomes unstable or unmanageable.

For a full description of this procedure see [Restoring the RMX Using the USB Port](#) in the *RealPresence® Collaboration Server (RMX®) 1800/2000/4000 Deployment Guide for Maximum Security Environments*.

MLPP (Multi Level Precedence and Preemption)

In compliance with UC APL requirements, Quality of Service (QoS) can be more accurately modified to suit local needs with the addition of Multi Level Precedence and Preemption methods for call prioritizing and call handling.

QoS is important when transmitting high bandwidth audio and video information. QoS can be measured and guaranteed in terms of:


- Latency
- Low packet throughput
- Average delay between packets
- Jitter (variation in delay)
- Transmission error rate
- Order of packet delivery

Precedence is the method by which a call is assigned a priority level. The RMX supports two separately defined and configurable Domains, each having its own Precedence policy.

For a full description of Precedence see IETF RFC 2474.

One of the following Precedence Levels is assigned to all calls:

Precedence Levels

Highest Priority	FLASH-OVERRIDE-OVERRIDE (Classified Networks only)
	FLASH-OVERRIDE
	FLASH
	IMMEDIATE
	PRIORITY
Lowest Priority	ROUTINE


Conferences can have a mix of participants from different Precedence domains and network domains.

Precedence is supported for both IPv4 and IPv6.

Preemption is the method whereby, when system resources are insufficient, lower priority calls are terminated and their resources assigned to higher priority calls. Preemption is typically a function of network components such as the Local Session Controller (LSC). To the RMX, a preempted call appears as a disconnected call.

Enabling Precedence

Precedence is disabled by default. It is enabled by using the **Setup > Precedence Settings** menu to display the Precedence Settings dialog box. Precedence is enabled by selecting the Use Precedence check box.

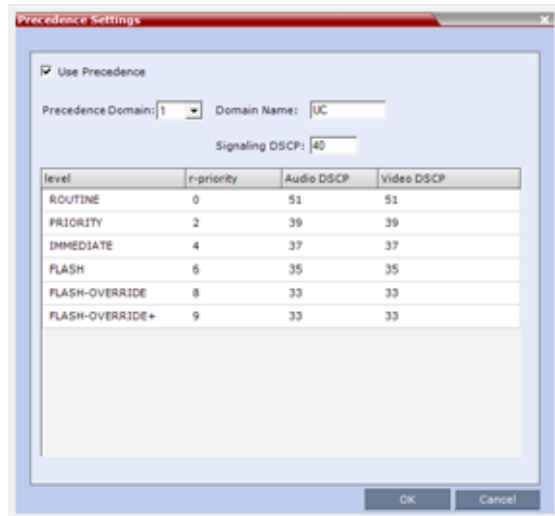

See [Configuring and Modifying Precedence Domains and DSCP Values](#).

When Precedence is enabled, all other QoS system settings are overridden by the parameters sent in the SIP Message. For more information about QoS, see [Modifying the Default IP Network Service](#).

SIP Message

A SIP Message is a request or a response between network entities that communicate using the SIP protocol. The SIP Message header contains Precedence and Resource Priority (r-value) information and an optional Require tag for each call.

For a full description of SIP Messages see IETF RFC 3261.

For a full description of Resource Priority (DSCP) see IETF RFC 2474.

For a full description of SIP r-priority see IETF RFC 4412.

Dial-in calls

If the Use Precedence check box in Precedence Settings is selected:

- The RMX uses the information in the SIP Message header to match the call to a Precedence Domain and a Precedence Level. The table below summarizes the default values.

Precedence Domain and Resource Priority - DSCP Default Values

Resource Priority	Precedence Level	DSCP Value	
		Audio	Video
9	FLASH-OVERRIDE-OVERRIDE	33 (0x21)	33 (0x21)
8	FLASH-OVERRIDE	33 (0x21)	33 (0x21)

Precedence Domain and Resource Priority - DSCP Default Values

Resource Priority	Precedence Level	DSCP Value	
		Audio	Video
6	FLASH	35 (0x23)	35 (0x23)
4	IMMEDIATE	37 (0x25)	37 (0x25)
2	PRIORITY	39 (0x27)	39 (0x27)
0	ROUTINE	51 (0x33)	51 (0x33)
NONE	No Resource Priority header for backward compatibility		

- SIP Dial in participants, both defined and undefined, do not inherit Precedence or Domain characteristics from the Participant's Address Book. (Additional fields, added to the Participant's Properties - Advanced and Address Book - Advanced dialog boxes are used to enter and modify Precedence or Domain characteristics for SIP Dial-out participants.)
- For backward compatibility, calls received with a SIP Message header that contains no Precedence Domain and the Resource Priority information, are assigned ROUTINE priority in the first defined Precedence Domain.
- Incoming calls are accepted or rejected depending on the:
 - Value of the REJECT_INCORRECT_PRECEDENCE_DOMAIN_NAME System Flag.
 - Match or mismatch of the Precedence Domains, set in the RMX and contained in the incoming SIP Message r-value.
 - ◆ The r-value is of the following format:

```
r-value = <domain name>-<subdomain>.<r-priority>
```

The table below shows an example of calls accepted or rejected assuming:

- **Domain Name = UC**
- **Sub Domain = 000000**
- **r-priority = 2**

Example - Call Acceptance by System Flag Value and Precedence Domain Matching

Call Acceptance			
Precedence Domain		Flag Value: REJECT_INCORRECT_PRECEDENCE_DOMAIN_NAME	
RMX	Incoming SIP Message	YES	NO (Default)
UC	UC		
UC	UC.00001		
UC	UC.00002		
UC-00000	UC-00000	Call Accepted	
UC-00000	UC-00001		Call Accepted and assigned ROUTINE priority
UC-00000	UC		
UC	UC00002		
UC	UCC	Call Rejected	
UCC	UC		


- Rejected calls receive a 417 Error response.
- If the Require tag is null, the call is connected and assigned ROUTINE priority in the first defined Precedence Domain
- If the Use Precedence check box in Precedence Settings is cleared, the RMX will not reject such calls. The LSC is responsible for rejecting such calls.

Dial-out calls

For Dial-out calls, the SIP Message header information for the Precedence Domain and Resource Priority (r-priority) of the call is configurable.

Additional fields in the Participant's Properties - Advanced and Participant's Address Book - Advanced dialog box are used to modify these parameters:

- Precedence Domain Name
- Precedence level

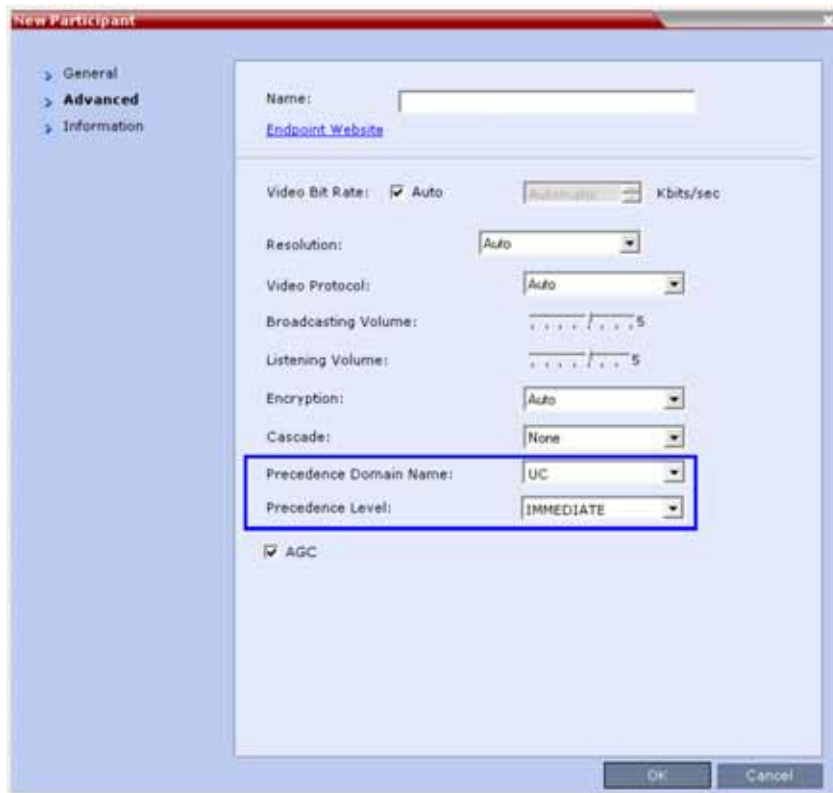

Precedence Level Change

The Precedence Level of all calls can only be changed by the LSC sending a Re-Invite or similar SIP Message to the Collaboration Server.


Configuring and Modifying Precedence Domains and DSCP Values

The Precedence Domains and DSCP values for each Precedence Domain can be configured and modified per MCU.

To configure Precedence Settings:

- 1 On the RMX menu, click **Setup > Precedence Settings**

The **Precedence Settings** dialog box is displayed.

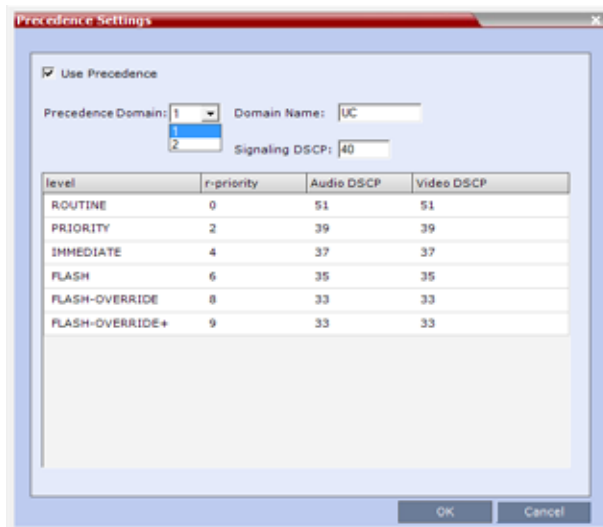

- 2 **Optional:** Modify the values if required.

Precedence Settings - Domains, Levels and DSCP Values

Field	Description
Use Precedence	Select or clear the check box to enable or disable Precedence . Default: Cleared (Precedence disabled)
Precedence Domain	Select the Precedence Domain to be modified, 1 or 2 , from the drop-down menu. Possible Values: 1 / 2
Domain Name	Enter the required Domain Name .
Signaling DSCP	Modify the DSCP value of the Signaling DSCP . A single Signaling Proxy is used for all Precedence Levels. Default: 40 Range: 0 - 63

Precedence Settings - Domains, Levels and DSCP Values

Field	Description
Level	r-priority, Audio DSCP and Video DSCP values can be modified for each of the six Precedence Levels: <ul style="list-style-type: none"> • ROUTINE • PRIORITY • IMMEDIATE • FLASH • FLASH-OVERRIDE • FLASH-OVERRIDE+
r-priority	Modify the r-priority value for the Level . Range: 0 - 255. Default: ROUTINE - 0, PRIORITY - 2, IMMEDIATE - 4, FLASH - 6, FLASH-OVERRIDE - 8, FLASH-OVERRIDE+ - 9
Audio/Video DSCP	Modify the DSCP value for the Audio/Video DSCP . Range: 0 - 63. Default: ROUTINE - 51, PRIORITY - 39, IMMEDIATE - 37, FLASH - 35, FLASH-OVERRIDE - 33, FLASH-OVERRIDE+ - 31

- 3 Click **OK**.


System Flags

The following System Flags must be added to system.cfg if their values are to be modified:

- QOS_MANAGEMENT_NETWORK - the overall hex value of the DiffServ field (not just the value of the DSCP portion) is used as the DSCP value for the RMX Management Network.
 - Default: 0x10
 - Range: 0x00 - 0xFC
- REJECT_INCORRECT_PRECEDENCE_DOMAIN_NAME - see [Dial-in calls](#) (above) for a description of this flag.
 - Default: NO
 - Range: YES / NO

Monitoring Precedence Level

The Precedence Level of each connected participant is listed in the Participants list pane.

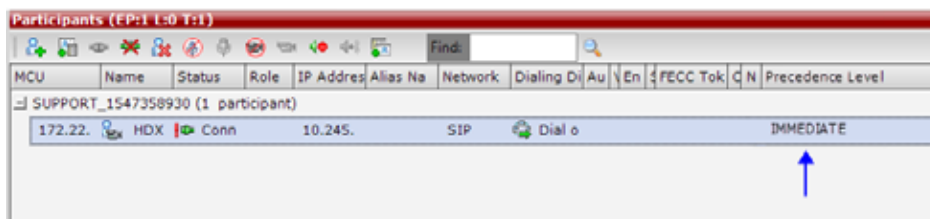

IEEE 802.1X Authentication

In compliance with UC APL requirements for enhanced security of wireless local area networks that follow the IEEE 802.11 standard, support for 802.1X Authentication has been included in this version.

802.1X Authentication requires that the RMX registers with a 802.1X Authentication Server and is supported on RMX 1800/2000/4000. The authentication protocol is applied to each of the following Network Interface Controllers (NICs):

- Management
- Signaling
- Media



For RMX 2000, Network Separation must be implemented before configuring 802.1X Authentication. 802.1X Authentication is not supported in Microsoft environments.

The following **802.1X Authentication** methods are supported:

- EAP-MD5
- EAP-TLS
- PEAPv0
- MSCHAPv2

Certificate Repository


Implementation of 802.1X Authentication requires a certificate, which is obtained from the Certificate Repository.

- Either one TLS certificate is retrieved for all IP services and their associated NICs,
 - If one certificate is retrieved for all NICs, the RMX will use the Management Certificate for all the NICs.
- or
- A TLS certificate for each IP service and their associated NICs is retrieved from the Certificate Repository:
 - If several different TLS certificates are retrieved, each NIC will use the certificate of the service that it is associated with.
 - ◆ In a system configured with Multiple Network Services each IP service will use its own certificate.
 - ◆ A NIC that does not have its own certificate will first attempt to use the Management Certificate before using a self-signed certificate.

Enabling and Configuring 802.1X Authentication

802.1X Authentication for each NIC is enabled or disabled in the **Setup > Ethernet Settings** dialog box. The following additional table columns are used to modify these parameters:

- 802.1X Authentication
- User Name
- Password

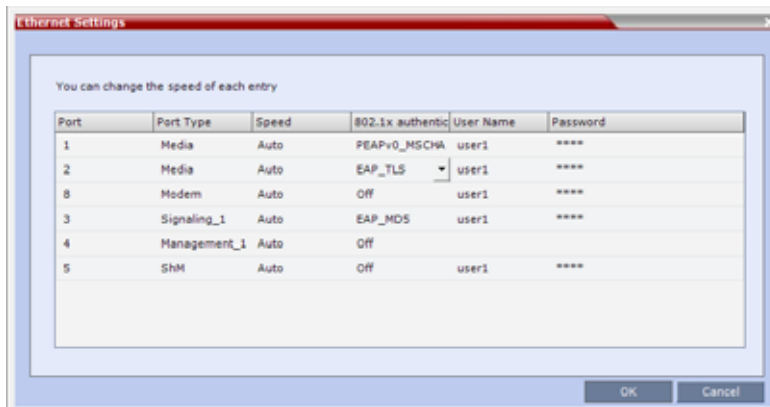

Modify the Ethernet Settings table fields as set out below:

802.1X Authentication - Configuration

Field	Description
802.1x Authentication	For each NIC, click the arrow to open the drop-down menu and select (or disable) the 802.1X Authentication method : <ul style="list-style-type: none"> • Off • EAP-MD5 • EAP-TLS • PEAPv0 • MSCHAPv2
User Name	Enter the User name that the RMX will use to register with the 802.1X Authentication Server. This must be the RMX's DNS name and can be up to 256 characters. Note: If the Domain Name (DC) field was completed in the Certificate Request, the User must be: <Common Name (DNS)>@<Domain Name (DC)> as set out in the Certificate Request.
Password (EAP-MD5, PEAPv0 and MSCHAPv2 only)	Enter the Password , that the RMX will use to register with the 802.1X Authentication Server. Up to 256 Unicode characters can be used. The Password is always displayed as four asterisks.

Enabling 802.1X Authentication can result in the RMX being disconnected from the network and a warning message is displayed:



System Flags

The following system flags are used to manage the 802.1X Authentication process. They must be manually added to system.cfg if their default values need to be modified.

802.1X Authentication System Flags


Flag name	Description
802_1X_CERTIFICATE_MODE	Determines whether one TLS certificate is retrieved from the Certificate Repository for all IP services or if multiple certificates will be retrieved, one for each IP service. Range: ONE_CERTIFICATE, MULTIPLE_CERTIFICATE Default: ONE_CERTIFICATE.
802_1X_SKIP_CERTIFICATE_VALIDATION	If the flag value is: <ul style="list-style-type: none"> YES - The retrieved certificate is not validated against the CA certificate. NO - The retrieved certificate is validated against the CA certificate. Validation failure raises an Active Alarm and is reported in the Ethernet Monitoring dialog box. Range: YES, NO. Default: YES.
802_1X_CRL_MODE	If the flag value is: <ul style="list-style-type: none"> ENABLED - Forces CRL checking. The system fails the connection request if the certificate has been revoked or if there is no CRL. OPTIONAL - The system fails the connection request if the certificate is revoked but does not fail the connection request if there is no CRL. DISABLED - Does not check the CRL and does not fail the connection request based on the CRL content. Range: ENABLED, OPTIONAL, DISABLED Default: DISABLED.
802_FIPS_MODE	If the flag value is YES, the availability of the MD5 Authentication Protocol will neither be displayed as selectable option nor supported. Range: YES/NO. Default: NO Default Ultra Secure Mode: YES

Disabling 802.1X Authentication

Switching to http mode from https mode by inserting a USB key containing a file named RestoreFactorySecurityDefaults.txt into the RTM-IP USB port disables 802.1X functionality

Ethernet Monitoring

802.1X Status is displayed in the Hardware Monitor - LAN List.

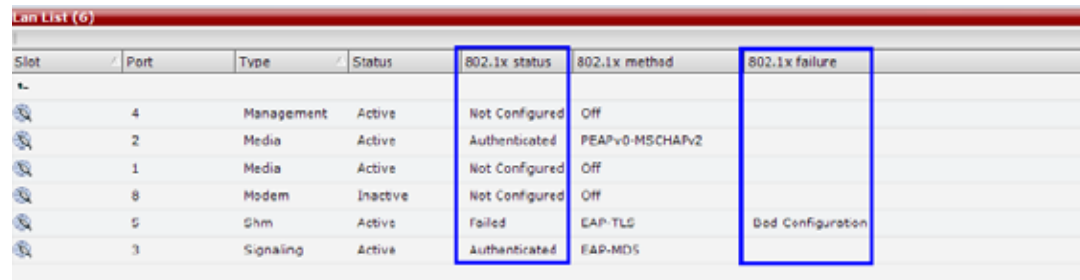

Slot	Port	Type	Status	802.1x status	802.1x method	802.1x failure
4		Management	Active	Not Configured	Off	
2		Media	Active	Authenticated	PEAPv0-MSCHAPv2	
1		Media	Active	Not Configured	Off	
8		Modem	Inactive	Not Configured	Off	
5		Shm	Active	Failed	EAP-TLS	Bad Configuration
3		Signaling	Active	Authenticated	EAP-MD5	

The following 802.1X Statuses are possible:

- Authenticated
- Not Configured
- Failed

The following 802.1X Failure reasons are possible:

- Bad Configuration
- Link Status not Detected

802.1X status can also be determined by examining the status of the port at the 802.1X server.

White List Access

In compliance with UC APL requirements for enhanced security of web access to the RMX, a White List containing the addresses of IP Networking Entities permitted to connect to the RMX's Management Network is implemented - Networking Entities such as Network Hosts, Control Workstations, Gatekeepers SIP/ DNS Servers, etc.

Guidelines

- Only administrators can access and modify the **White List**.
- During First Time Installation and Configuration, when enabling the White List, the IP address of the workstation used to run the RMX Web Client is automatically added to the White List.
- The last White List entry cannot be deleted to prevent lock out. Any attempt to enable an empty White List results in the display of an error message: WhiteList is empty please add IP's to the list if you want to enable WhiteList.
- Both IPv4 and IPv6 are supported.
- Web access to the RMX for http and https is through ports 80 and 443 respectively.


- The White List can hold up to 100 entries. An error message is displayed when exceeding this limit.
- Access is blocked at the firewall for devices with IP addresses not listed in the White List.
- The White List is saved during Backup, Restore and Upgrade processes.
- Changes to the White List are written to the Auditor Event File.
- Alterations to the White List do not require a system reset.

Enabling, Disabling and Modifying the White List

The use of White List in the environment can be enabled or disabled in the Management Network Service - White List dialog box.

To enable, disable, view or modify the White List:

- 1 In the **RMX Management** pane, click the **IP Network Services**.
The **IP Network Services** pane is displayed.
- 2 In the **IP Network Services** list pane, double-click the **Management Network** entry.
The **Management Network** dialog box is displayed.
- 3 Click the **WhiteList** tab.
The **WhiteList** dialog box is displayed.
 - If there are no entries in the **White List**, it is disabled to prevent lock out.
 - If the **White List** is disabled none of the **IP** addresses in the list are displayed.
 - The **Add** and **Remove** buttons are only active if the **Enable Whitelist** check box is selected.
- 4 Select the **Enable Whitelist** check box.

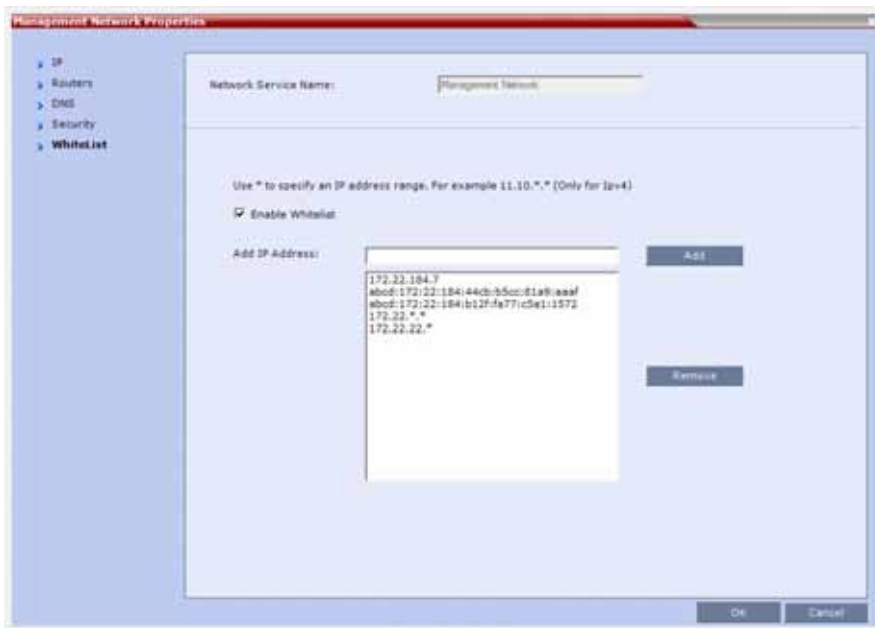

All **IP** addresses in the list are displayed and the **Add** and **Remove** buttons become active.

5 Modify the **White List**.

Both **IPv4** and **IPv6** addresses are supported and the system will only allow an entry of the type of **IP** addresses for which the **Management Network Service** is configured according to the table below.

IP Address Modes

IP Address Modes	
RMX	Workstation / Device
IPv4	IPv4
	IPv4 & IPv6
IPv6	IPv6
	IPv4 & IPv6
IPv4 & IPv6	IPv4
	IPv6
	IPv4 & IPv6

- If the system changes its **IP** addressing mode (e.g. from **IPv4** only to both **IPv4 & 6**) while the **White List** is enabled, the **White List** is disabled and a message, **White list has been disabled please reconfigure**, is displayed.
- **IPv4** addresses can be added as a range by using the wildcard character, *, to substitute the 3rd and 4th dotted decimal numbers of the **IP** address, e.g. 11.10.*.*

a To **Add IP** addresses:

For each **IP** address to be added to the **White List**:

- i In the **Add IP Address** field enter an **IP** address to be added to the **White List** and click the **Add** button.
If an invalid **IP** address is entered, an error message is displayed and the administrator is prompted to enter a correct IP address.
If a duplicate **IP** address is entered, a message: **Duplicate IP's are not allowed in WhiteList** is displayed.
- ii When all the **IP** addresses have been added, click **OK**.
A message is displayed: **Applying white list will limit RMX web access to the configured IP list, are you sure you want to continue?**
- iii Click **Yes** to apply the modified **White List**.

b To **Remove IP** addresses:

For each **IP** address to be removed from the **White List**:

- i In the **White List**, click to select an **IP** address to be removed from the **White List**.
Click the **Remove** button.

- ii When all the IP necessary addresses have been removed, click **OK**.

A message is displayed: **Applying white list will limit RMX web access to the configured IP list, are you sure you want to continue?**

- iii Click **Yes** to apply the modified **White List**.

Alternative Network Address Types (ANAT)

In compliance with UC_APL_NET_0007 Alternative Network Address Types (ANAT) is supported.

When the RMX is configured for IPv4 and IPv6 Addressing, the addition of the sdp-anat option tag in the SIP Require and SIP Supported headers allows a mixture of IPv4 and IPv6 addressing to be specified by the Session Description Protocol (SDP).

For a full description of ANAT see IETF RFCs 4091 and 4092.

Guidelines

- If the RMX is configured for both IPv4 and IPv6, IPv4 addressing is given preference when establishing the connection.
- If an Outbound Proxy is configured, its transport type is used.
- If an Outbound Proxy is not configured, the SIP Server's (Registrar) transport type is used.

The Outbound Proxy and the SIP Server must be configured with one type only either according to the IP address type or according to the DNS Resolution type. However, if the RMX is configured for IPv4&IPv6 then the SIP Contact field will contain both IPv4 and IPv6 addresses.

System Flag

The ANAT Protocol selection is controlled by the ANAT_IP_PROTOCOL System Flag.

To modify it, manually add it to system.cfg and set its value as described in the table below.

Range: DISABLED, AUTO, PREFER_IPv4, PREFER_IPv6

Default:

- If the ULTRA_SECURE_MODE System Flag is set to NO: DISABLED.
- If the ULTRA_SECURE_MODE System Flag is set to YES: AUTO.

ANAT_IP_PROTOCOL System Flag Values for Dial in Dial out

Value	Behavior - Dial in and Dial out
DISABLED	sdp-anat does not appear in SIP headers and the SDP does not contain a mixture of IPv4 and IPv6. If an endpoint requests ANAT (sends the Require: sdp-anat tag) the RMX will accept the call.
AUTO	sdp-anat appears in SIP headers. Dial in: The IP Version preference is according to the SDP priority. Dial out: IPv4 is advertised first.

ANAT_IP_PROTOCOL System Flag Values for Dial in Dial out

Value	Behavior - Dial in and Dial out
PREFER_IPv4	sdp-anat appears in SIP headers. Dial in: IPv4 is the IP Version preference. Dial out: IPv4 is advertised first.
PREFER_IPv6	sdp-anat appears in SIP headers. Dial in: IPv6 is the IP Version preference Dial out: IPv6 is advertised first.

BFCP Over UDP – AS-SIP Content

In compliance with UCR 2008 Change 3, AS-SIP (Assured Services-Session Initiation Protocol) Content flow is an implementation of SIP that utilizes SIP's built in security features.

When using AS-SIP Content, the media line of the content channel is not sent as part of the initial SDP Offer/Answer message sequence. The media line of the Content channel is only sent to the MCU when an endpoint wanting to share Content initiates Content sharing. The Collaboration Server (RMX) then sends the Content media line to all conference participants using an SDP Re-invite.


Guidelines

- AS-SIP Content is shared using Multiple Resolutions (Content Transcoding) and is not supported in any other Content sharing mode such as H.263 Content and H.264 Cascade Optimized Content Protocol.
- Multiple Resolutions consumes system video resources. If sufficient system video resources are not available, a conference with AS-SIP Content enabled in its Profile, will not be created. An error: Conference could not be created due to lack of Content DSP resources, is displayed.
- The SIP BFCP UDP application line is included in SDP Offer/Answer message sequence.
- An endpoint declaring SIP BFCP TCP is connected with video and audio but without Content. The SIP BFCP TCP channel will not be connected.
- The following resolutions are supported with H.264 HD Content protocol. Only when H.264 HD is selected, these resolutions are enabled for selection:
 - HD 720p5
 - HD 720p30
 - HD 1080p15
- Endpoints that do not support receiving H.264 Content at a resolution of HD 720p5 or greater are considered Legacy Endpoints and will receive Content using the people video channel.
- Endpoints that do not support transmitting H.264 Content at a resolution of HD 720p5 or greater are considered Legacy Endpoints and will transmit Content using the people video channel. Depending on the endpoint type, these endpoints may not be able to transmit Content at all - this is dependent on the endpoint and is not controlled by the RMX.
- A mixture of older, non AS-SIP compliant and AS-SIP compliant endpoints are supported in the same conference and are able to share Content.
- An endpoint connecting during a Content session is immediately sent an SDP Re-invite that includes the connect media line and will receive Content.

- An endpoint connecting after Content started and was stopped will receive the SDP Re-invite and the content media line only after a new Content request is sent.
- Once Content has been initiated by one of the endpoints, the Content channel will be opened to all endpoints and remain open even if the Content sharing endpoint stops sharing Content.

Enabling AS-SIP Content

AS-SIP Content is enabled in the New Profile / Profile Properties - Video Quality tab.

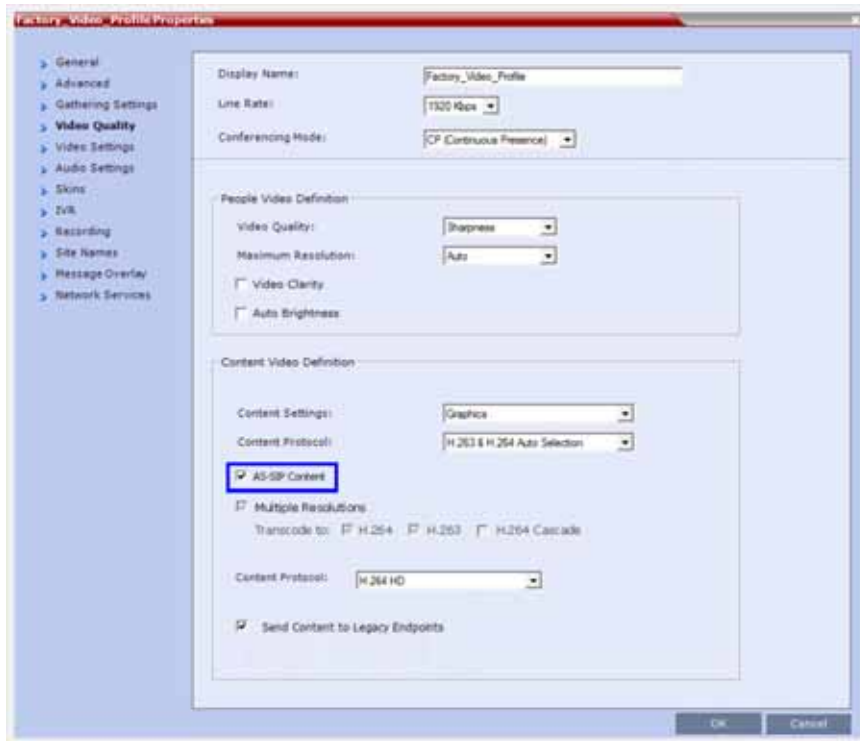

When the **AS-SIP Content** check box is selected the following are automatically enabled and cannot be disabled:

- Send Content to Legacy Endpoints
- Multiple Resolutions

System Flag

The time that the RMX waits for endpoints to respond to its SDP Re-invite is determined by a timer. The timer duration, in seconds, is controlled by the AS_SIP_CONTENT_TIMER System Flag. Its default value is 10 seconds. To modify the timer value, manually add this flag to system.cfg and modifying its value as required:

Range: 1 - 60 seconds. (Values outside this range are rejected and an error message is displayed.)

Internet Control Message Protocol (ICMP)

ICMP (Internet Control Message Protocol) is used to send messages between networked entities. It is typically used to send and receive information concerning:

- Communications errors in network applications
- Remote host reachability and availability
- Network congestion (latency)
- Traffic redirection

Malicious devices can however use these capabilities in order to divert, intercept, detect, network traffic.

The following System Flags have been added to enable the administrator to control ICMP Redirect and Destination Unreachable messages:

- `ENABLE_ACCEPTING_ICMP_REDIRECT`
- `ENABLE_SENDING_ICMP_DESTINATION_UNREACHABLE`

By setting the value of these flags to NO the risk of malicious behavior can be mitigated.

For a full description of ICMP see RFC 792.

Guidelines

- Both flags apply to all MCU platforms: RealPresence Collaboration Server (RMX) 1800/2000/4000/1800).
- Both flags apply to all Ethernet connections: Management, Signaling, Media, Modem, etc.

System Flag: `ENABLE_ACCEPTING_ICMP_REDIRECT`

This System Flag enables the administrator to control whether the RMX accepts or rejects ICMP Redirect Messages (ICMP message type #5), typically used to instruct routers to redirect network traffic through alternate network elements.

- **Range:** YES / NO
- **Default:** NO

System Flag: `ENABLE_SENDING_ICMP_DESTINATION_UNREACHABLE`

This System Flag enables the administrator to control whether the RMX sends ICMP Destination Unreachable Messages (ICMP message type #3).

Destination Unreachable Messages are sent when the RMX receives a UDP packet on a port configured for TCP, or receives a UDP packet on a port configured for TCP, or when, in real time, a packet is not processed in the prescribed time interval. The prescribed time interval is determined by the comparison of timestamps. The timestamp is a 32-bit field, representing milliseconds since midnight UT. For detailed timestamp information see RFC 792.

The Destination Unreachable Message may also be sent when Network or Host is unreachable (sent by the router) or the Port is unreachable (sent by the RMX).

- **Range:** YES / NO
- **Default:**
 - **Ultra Secure Mode:** NO - Destination Unreachable Message is never sent.

- **Default Security Mode:** YES - Destination Unreachable Message is sent when needed.

Modifying the flag values

To modify the System Flags values, the flags must first be manually added to system.cfg.

For more information about System Flags, see .


Password Encryption

In compliance with UC APL, FIPS 140-2 the SHA-256 (Secure Hash Algorithm) is applied to:

- Application login passwords.
- Linux operating system passwords.
- CSRs (Certificate Signing Requests).

The output value for SHA-256 is 256 bits whereas for SHA-1 the output value is 160 bits.

For backward compatibility with previous versions, either SHA-1 or SHA-256 can be selected as the hash algorithm used in the creation of CSRs.

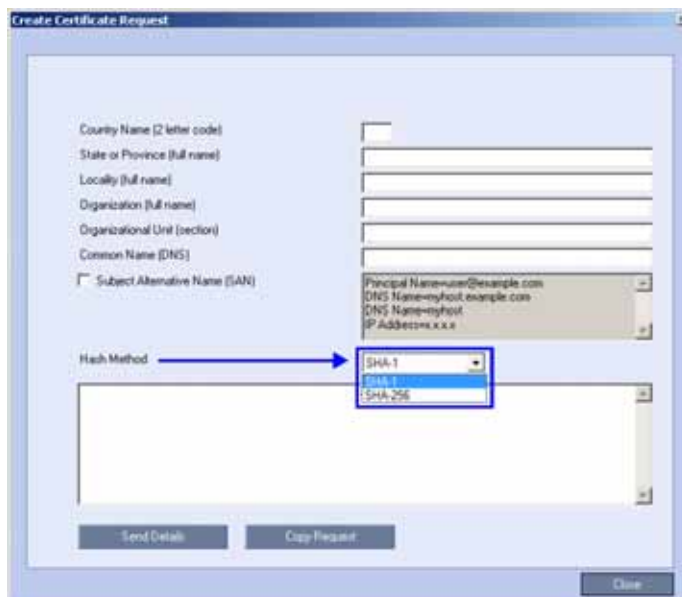

Upgrade / Downgrade Guidelines

The RMX configuration, including users and passwords, should be backed up before upgrading or downgrading.

The table below summarizes the system behavior with regard to passwords and certificates when upgrading to or downgrading from this version.

Version Change - Password and Certificate Compatibility

Version Change	Behavior	
	Passwords	Certificates
Upgrade from old version to new version	<p>On user login:</p> <ul style="list-style-type: none"> All new-user passwords are hashed and saved using <i>SHA-256</i>. Existing user passwords remain saved using the SHA-1 signature, however: <ul style="list-style-type: none"> ⤴ On first login after the upgrade the SHA-1 hashed password is automatically replaced with SHA-256 hashed password. <p>Note: After an upgrade to version 8.1.4.J there will be still passwords saved with the SHA-1 signature.</p> <p>In order not to rely on automatic password signature conversion and replacement, and to ensure that the system only has SHA-256 hashed passwords saved, the administrator should:</p> <p>Either:</p> <ul style="list-style-type: none"> Ensure that all the users login to the system at least once to ensure automatic replacement of SHA-1 hashed passwords with SHA-256 hashed passwords. <p>Or:</p> <ul style="list-style-type: none"> Delete and recreate all users. 	<p>The new version accepts certificates issued with SHA-1 hashing.</p>
Downgrade from new version to old version	<p>Before the downgrade procedure begins, the administrator receives a popup warning message</p> <p>Passwords will change to factory default would you like to proceed?</p> <p>All users and SHA-256 hashed passwords are deleted.</p> <p>The administrator's User Name and Password reverts to the Factory Default: POLYCOM / POLYCOM.</p>	<p>The old version accepts certificates issued with <i>SHA-1</i> hashing.</p> <p>For certificates issued with SHA-256 hashing:</p> <ul style="list-style-type: none"> The administrator receives a popup warning message TLS certificate will be deleted and the system will switch to non-secured connection, would you like to proceed? For each certificate that is hashed with SHA-256: <ul style="list-style-type: none"> ⤴ RMX Web Client / RMX Manager connections to the RMX are switched to non-secured mode. ⤴ LDAP services are changed from 636 to port 389. ⤴ SIP TLS sessions are changed to SIP UDP. ⤴ The certificate is deleted.

Non-hashed Passwords

All non-hashed passwords are stored encrypted as set out in the table below.

Non-hashed Passwords - Encryption

Connection	Storage type	Previous Versions	From Version 8.1
SNMPv3 Two passwords: Authentication / Privacy	Community permissions which are not the PW to connect to SNMP are not Saved Encrypted	Non encrypted	AES 256
Exchange	Non encrypted – Feature disabled in Ultra Secure Mode	Non encrypted	AES 256
RV v.35 serial ports – password for login	Reversible – AES_128 with 256 Bytes Key (2048 Bits)	AES 256	AES 256
H.323 authentication – password	Reversible – AES_128 with 256 Bytes Key (2048 Bits)	AES 256	AES 256
SIP digest – password	Reversible – AES_128 with 256 Bytes Key (2048 Bits)	AES 256	AES 256

In compliance with UC APL requirements, PKI Self-signed Certificates are supported for the both the Default Management and IP Network Services.

A mixture of Self-signed and CA-signed Certificates is supported, however a CA-signed certificate will always override a Self-signed Certificate.

Self-signed Certificate Creation


Self-signed Certificates are created during:

- Initial system start-up before any CA-signed Certificates have been installed.
- IP Network Services creation.
- Network Services updates that result in Host Name changes.
- Daily validity checks of Self-signed Certificates.
- Backup and Restore of the system configuration

Self-signed Certificate field values are automatically inserted when the certificate is created Self-signed Certificates are indicated in the Certification Repository - Issued By field.

Self-signed Certificate - Creation

Field	Value
Signature Algorithm	SHA1
Issuer / Issued To	Service Host Name Both the Issuer and Issued To fields have the same values. CN = host name of the service name DC = Polycom OU = Self Signed Certificate O = Polycom RMX Note: The value of CN is derived from the IP Network Service Name, while the values of DC, OU and O are hard coded. For a full description of these fields see RFC 5280.
Valid from	Date of creation
Valid to	Date of creation + 10 years
Subject (Common Name)	Service Host Name
Public Key	2048 bits

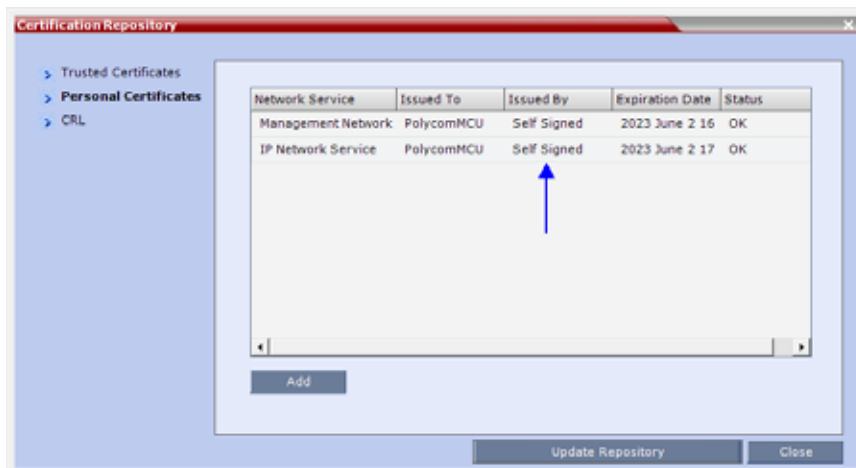

Media Encryption and Authentication

In compliance with UC_APL_SEC_0013, the RMX supports the Privacy Protocols:

- AES_CM_128_HMAC_SHA1_32
- AES_CM_128_HMAC_SHA1_80

System Flags

The Privacy Protocol selection is controlled by the SRTP_SRTCP_HMAC_SHA_LENGH System Flag. To modify its setting, manually add it to system.cfg and set its value as summarized in the table below.

Range: 80, 32, 80_32

Default: 80

Privacy Protocols - Flag Settings

SRTP_SRTCP_HMAC_SHA_LENGH Flag Value	Negotiation Protocol SDP	Authentication Tag Length	
		RTP	RTCP
80	AES_CM_128_HMAC_SHA1_80	80	80
32	AES_CM_128_HMAC_SHA1_32	32	80
80_32	First: AES_CM_128_HMAC_SHA1_32 Second: AES_CM_128_HMAC_SHA1_80	32 or 80 (Depending on negotiation result)	80

Dial-in / Dial-out Connections

For dial-out and dial-in connections to and from SIP Clients, BFCP/UDP or BFCP/TCP protocol can be given priority by adding the adding the SIP_BFCP_DIAL_OUT_MODE and SIP_BFCP_DIAL_IN_MODE System Flag to system.cfg and setting their values to UDP, TCP or AUTO.

The Collaboration Server's content sharing, as determined by the system flags settings and SIP client capabilities, is summarized in the following table:

Collaboration Server Hardware Monitoring

The status and properties of the Collaboration Server hardware components can be viewed and monitored in the Hardware Monitor list pane.

Viewing the Status of the Hardware Components

The Hardware Monitor's status column displays the present status of the hardware components. In addition to the status, temperature and voltage indications are provided for each component.

For RMX 2000/4000 systems, the MCU's Shelf Management Server is what users are connecting to when accessing the Hardware Monitor pane. This pane can be accessed in either two ways: through the RMX Web Client or the Shelf Management Server. Connection via the Shelf Management Server enables users to access the Hardware Monitor even when the connection through the Collaboration Server Web Client is unavailable. The ability to connect directly via the Shelf Management Server enables users to: enter the Hardware Monitor and view the problematic hardware components, reset and restart the MCU and run diagnostics. Running diagnostics and restarting the MCU can only be done via direct connection to the Shelf Management Server.














- When accessing the Shelf Management server, the content displayed will be available in English only.
- Shelf Management is not supported on the RMX 1800.

To access Hardware Monitor:

- » In the **RMX Management** pane, click the **Hardware Monitor**  button.



The **Hardware Monitor** pane displays. Depending on your product model, available hardware components may vary.



Hardware Monitor (19)				
Slot	Type	Status	Temperature	Voltage
 0	RMX 4000	-	-	-
 1	MPMRX	Major	Normal	Normal
 2	MPMRX	Startup	Normal	Normal
 3	MPMRX	Normal	Normal	Normal
 4	MPMRX	Normal	Normal	Normal
 5	FSM4000	Normal	Normal	Normal
 6	Empty	Empty	-	-
 8	CNTL4000	Normal	Normal	Normal
 9	PWR1	Normal	-	Normal
 10	PWR2	Normal	-	Normal
 11	PWR3	Normal	-	Normal



In the Hardware Monitor, slots 1 & 2 may sometimes appear as duplicates in the Slot list.

The Hardware Monitor pane displays the following hardware component's status columns:

HW Monitor Pane Status Columns

Field	Description
Slot	Displays an icon according to the HW component type and the slot number. The icon displays the hardware status as follows: <ul style="list-style-type: none"> • An exclamation point (!) indicates errors in the HW component. • Card icon with the reset button () indicates that the HW component is currently resetting. • Card icon with diagnostic tools () indicates that the HW component is in diagnostic mode.
Type	The type of hardware component card.




HW Monitor Pane Status Columns

Field	Description
Status	The current status of the HW component; Normal, Major, Critical, Resetting, Diagnostics, or Empty.
Temperature	Monitors the temperature of the hardware components; Normal, Major, and Critical. Note: Critical condition invokes a system shut down.
Voltage	The voltage threshold of the hardware component; either Normal or Major.

HW Monitor Pane Toolbar

The following buttons appear in the tool bar of the Hardware Monitor. Depending on your product model, available buttons may vary.

HW Monitor Pane Tool Bar Buttons

Button	Name	Description
	System Reset	Resets and restarts the system. Resetting saves settings and information that you changed in the system, i.e. IP Services, etc...
	System Shut Down	Shuts down the system into a standby mode. When the user in the Collaboration Server Manager/Client presses the System Shut Down (red) button in the Hardware Monitor tool bar, the system should enter a standby mode and the LED turns ON. Only the media and control unit cards are in a standby mode. Shelf Manager remains active. Turn the system OFF/ON to exit the standby mode.
	Active Diagnostic Mode	Sets the MFA, CPU and switches cards such as /MPMRx, CNTL and RTM IP into diagnostic mode. For more information, see Diagnostic Mode .

Viewing the Properties of Hardware Components


Depending on your product model, available hardware components may vary. The properties displayed for the hardware components will vary according to the type of component viewed. Hardware component properties can be grouped as follows:

- MCU Properties
- Card Properties (MPMRx, CNTL/CNTL 4000, RTM IP, RTM ISDN, DSP card, RTM LAN, RTM-IP 4000)
- Supporting Hardware Components Properties (Backplane, FANS, LAN, PWR)



No properties are provided for Power Supply (PWR). For more information, see your product Hardware Guide.

The Hardware Properties dialog box has the following structure:

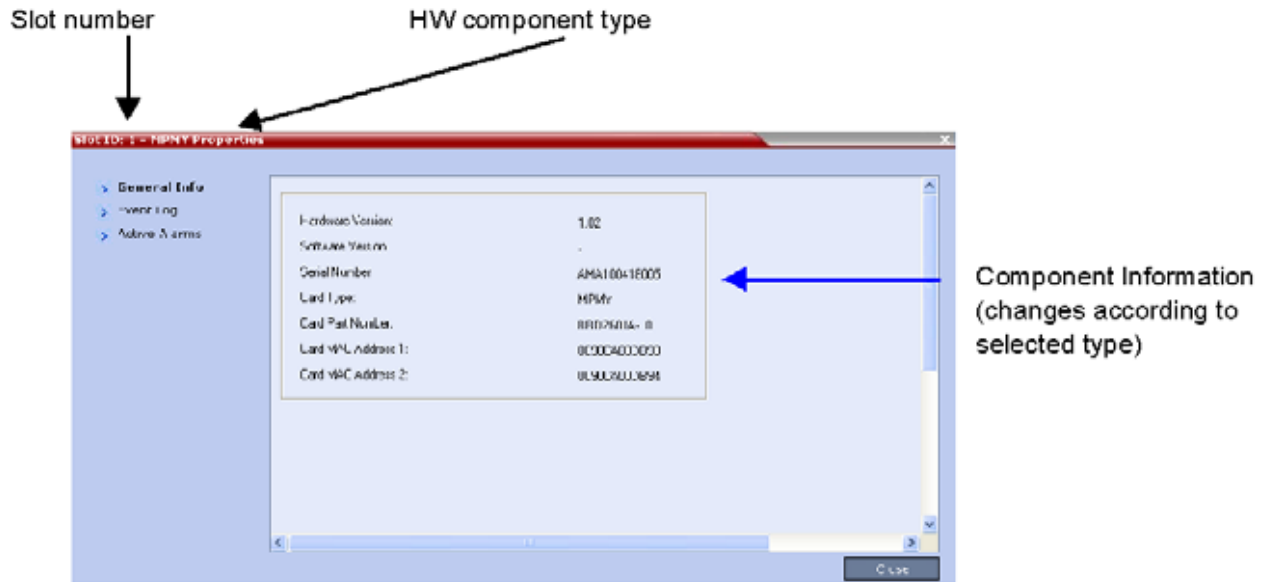

Note: DSP Cards


In Collaboration Server (RMX) 1800, the mapping between DSP media card IDs and the physical slots is as the following:

- ID 1: Slot 0 (in the middle)
- ID 2: Slot 1 (bottom)
- ID 3: Slot 2 (top)

Collaboration Server (RMX) 1800-0 does not contain DSP cards.

To view the MCU Properties:

- 1 In the **Hardware Monitor** pane, right-click your MCU entry, for example, RMX 2000, and select **Properties**.

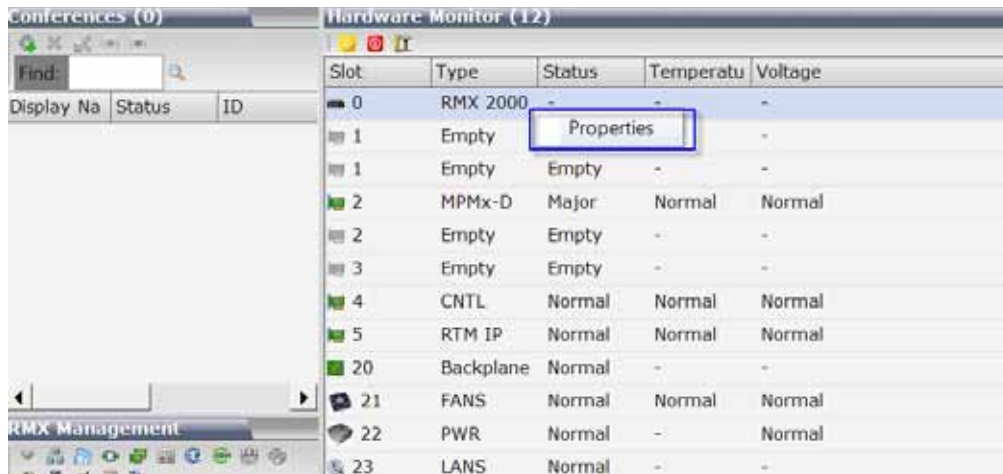

2 General information is displayed:

Chassis ID:	VR2120417130
Chassis Serial Number:	VR2120417130
Part Number:	ASY2100D-L0
Card Type:	RMX 2000
Chassis Hardware Version:	1.23

MCU 2000/4000 Properties - General Info

Field	Description
Chassis ID	The ID assigned to the MCU's chassis file.
Chassis Serial Number	The serial number assigned to the MCU's chassis.
Part Number	The chassis part number. The Part Number contains the letter A/B/C/D that represents the chassis type.
Card Type	The name of the hardware product or component, i.e. RMX 2000, Backplane.
Chassis Hardware Version	Indicates the MCU's current chassis hardware version.

MCU 1800 Properties - General Info

Field	Description
Hardware Version	The version of the system hardware.
Firmware Version	The version of the firmware installed on the system.
Serial Number	The serial number of the system hardware.
Card Type	Displays the type of the media card that occupies the slot.
Card Part Number	The part number of this media card.
Card MAC Address 1	Specific hardware address of the component. This address is burnt onto the component and is automatically identified by the system.
Card MAC Address 2	(If applicable) second MAC address.

- (RMX 2000/4000 only) Click the **Event Log** tab to view a log of events that were recorded by the system.

Slot ID: 1 - MPMY Properties

- > General Info
- > **Event Log**
- > Active Alarms

Record ID ▲	Time Stamp	Type	Sensor Number	Sensor Description	Status
91	30/07/2010 19	Temperature	11	Temp Bottom Exh	Uppe
92	30/07/2010 19	Temperature	11	Temp Bottom Exh	Norm
93	30/07/2010 19	Temperature	11	Temp Bottom Exh	Uppe
94	30/07/2010 19	Temperature	11	Temp Bottom Exh	Norm
95	30/07/2010 19	Temperature	11	Temp Bottom Exh	Uppe
96	30/07/2010 19	Temperature	11	Temp Bottom Exh	Norm
97	30/07/2010 19	Temperature	11	Temp Bottom Exh	Uppe
98	30/07/2010 19	Temperature	11	Temp Bottom Exh	Norm
99	30/07/2010 19	Temperature	11	Temp Bottom Exh	Uppe
100	30/07/2010 19	Temperature	11	Temp Bottom Exh	Norm
101	30/07/2010 19	Temperature	11	Temp Bottom Exh	Uppe
102	30/07/2010 19	Temperature	11	Temp Bottom Exh	Norm
103	30/07/2010 19	Temperature	11	Temp Bottom Exh	Uppe
104	30/07/2010 19	Temperature	11	Temp Bottom Exh	Norm

Save Event Log

The logged events can be saved to a *.xls file by clicking the **Save Event Log** button. It is not possible to save individual or multiple selected events; the entire log file must be saved.

MCU Properties - Event Log

Column	Description
Record ID	The recorded ID number of the logged event.
Time Stamp	Lists the date and time that the event occurred.
Type	Displays the type of event recorded in the log.
Sensor Number	The number of the LED sensor on the Collaboration Server unit.
Sensor Description	Describes which sensor the event is being logged.
Status	The sensor's active status.
Ipmb Address(hex)	Contains all the internal IPMI network addresses on the IPMB bus, i.e. 0x20 (Switch), 0x86 (MFA), etc...

- Click the **Active Alarms** tab to view alarms related to the Collaboration Server, i.e. temperatures and main power sensors.

Slot ID	Sensor N	Descriptio	Current Se	Status	Nominal V	Sensor Ty	Lower Criti	Lower Maj
2	0	Hot Swap	0		0	Hot Swap	0	0
4	0	Hot Swap	0		0	Hot Swap	0	0
5	0	Hot Swap	0		0	Hot Swap	0	0
2	1	IPMB Phys	136		0	IPMB Link	0	0
4	1	IPMB Phys	136		0	IPMB Link	0	0
5	1	IPMB Phys	136		0	IPMB Link	0	0
2	2	BMC Watc	255		0	WATCHD	0	0
5	2	BMC Watc	255		0	WATCHD	0	0
4	2	BMC Watc	255		0	WATCHD	0	0
2	3	+3.3V I/O	3.33		3.3	Voltage	2.8	2.97
4	3	+3.3V CP	3.38		3.3	Voltage	2.8	2.97
5	3	AC Power	0		0	Power Su	0	0
2	4	+2.5V	2.54		2.5	Voltage	2.12	2.25
4	4	+3.3V IP	3.34		3.3	Voltage	2.8	2.97
5	4	AC Power	0		0	Power Su	0	0
2	5	+1.8V DD	1.82		1.8	Voltage	1.53	1.62
4	5	+5.0V	5.04		5.0	Voltage	4.26	4.5

Save Hardware Alarm List

Index: ■ Critical

The **Active Alarms** dialog box displays fields that relate to faults and errors detected on the Collaboration Server by sensors. The **Active Alarms** dialog box is divided into two sections: **Hardware Alarm List** and **Software Alarm List**.

Each section's alarm list can be saved as a *.xls file by clicking the **Save Hardware Alarm List** and **Save Software Alarm List** buttons respectively. Each alarm list color codes the severity of the alarm; **Critical** (RED), **Major** (ORANGE) and **Normal** (GREEN).




For RMX 2000/4000 systems, if you are connected to the Hardware Monitoring via the Shelf Management server, the **Software Alarm List** section will not be displayed.

To view a card properties:

- In the **Hardware Monitor** pane, right-click a desired card and select **Properties**.
Depending on your card type, available properties may vary.

2 The card property window may look like this:

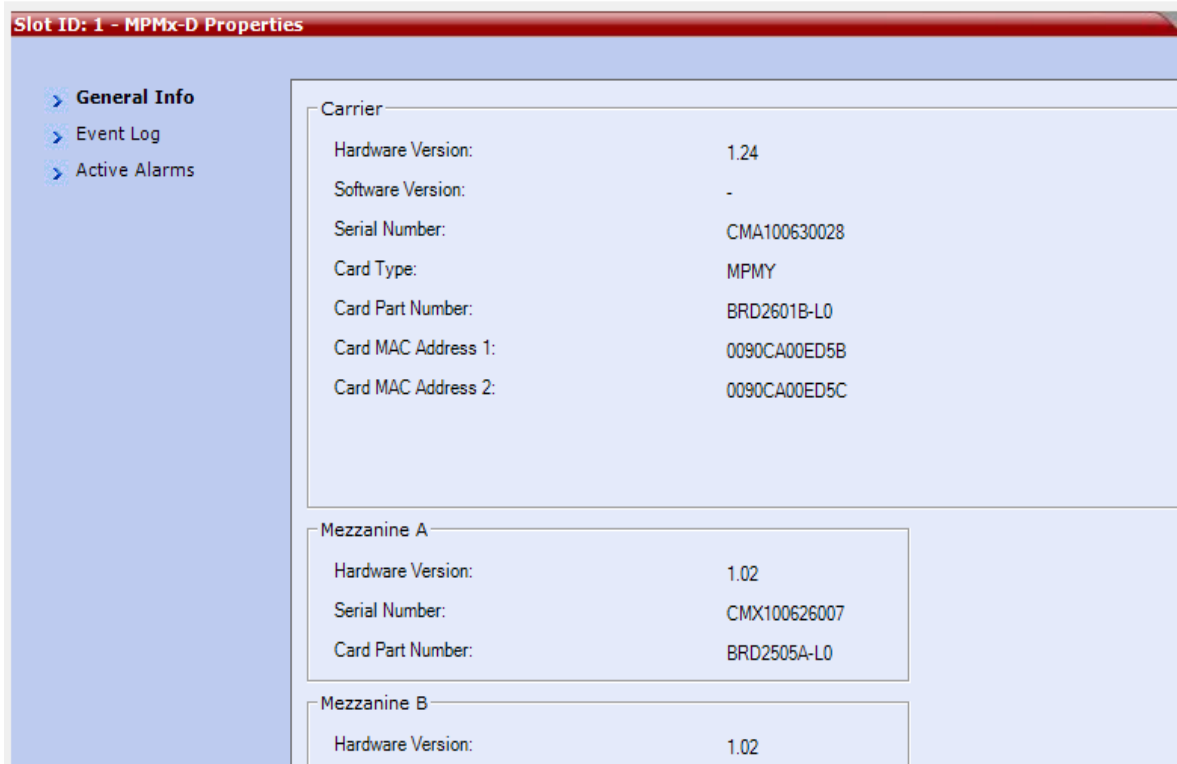

Depending on the card type, the following information may be available:

Card Properties - General Info

Field	Description
Hardware Version	The hardware component's version number.
Software Version	The version number of the software installed on card.
Serial Number	The hardware component's serial number.
Card Type	Displays the type of card that occupies the slot.
Card Part Number	The part number of the HW component's board.
Card Mac Address 1	Specific hardware address of the component. This address is burnt onto the component and is automatically identified by the system.
Card MAC Address 2	(If applicable) second MAC address.
Mezzanine x	
Hardware Version	The Mezzanine x hardware component's version number.
Serial Number	The Mezzanine x hardware component's serial number.
Card Part Number	The part number of the Mezzanine x hardware component's board.

- 3 Click the **Event Log** tab (if any) to view a log of events recorded by the system on the HW component.
- 4 Click the **Active Alarms** tab (if any) to view alarms related to the hardware component, i.e. temperatures and main power sensors.
For more information, see [Appendix B - Active Alarms](#).
- 5 Click **Close** to return to the **Hardware Monitor** pane.

To view the supporting hardware components properties:

- » In the **Hardware Monitor** pane, right-click and select **Properties** for the desired supporting hardware component.

The component’s properties dialog box will appear with the **General Info** tab displayed.

View Backplane Properties


The Collaboration Server unit’s backplane properties provides the following information:

Backplane Properties - General Info

Field	Description
HW Version	The Backplane’s current hardware version.
SW Version	The Backplane’s current software version.
Serial Number	The Backplane’s serial number.
Card Type	The name of the hardware component for which information is displayed, e.g. Backplane.
Card Part Number	The Backplane’s part number.
Card MAC Address 1	The Backplane’s hardware address.
Card MAC Address 2	(If applicable) second Backplane MAC address.

View FAN Properties

The Collaboration Server unit’s chassis contains 3 fans that regulate the unit’s temperature. If the temperature increases, the fans speed will increase and vice-versa. A “Critical” condition in the fans operation will result in a system shut down.

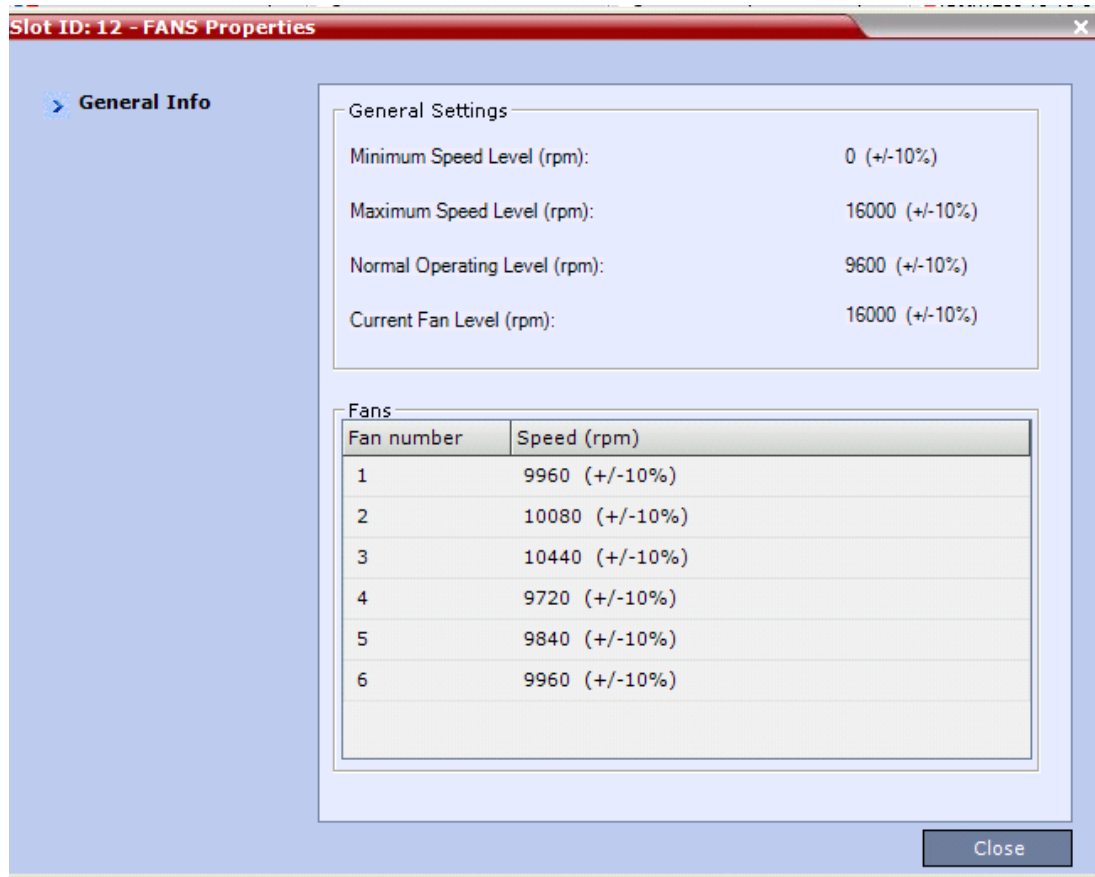

FAN Properties - General Info

Field	Description
General Settings	
Min. Speed Level (rpm)	The minimum speed level of the fans.
Max. Speed Level (rpm)	The maximum speed level of the fans.
Normal Operating Level (rpm)	The normal operating level defined for the fans.
Current Fan Level (rpm)	The current operating level of the fans.
Fans	
Fan 1 Speed (rpm)	Present speed of fan 1.
Fan 2 Speed (rpm)	Present speed of fan 2.
Fan 3 Speed (rpm)	Present speed of fan 3.

View LAN Properties

Depending on your product model, a Collaboration Server may contain various numbers of external LAN connectors.

To view a LAN connector properties:

- 1 In the **Hardware Monitor** pane, double-click **LANS**.

The LAN list opens.





- 2 Double-click a desired LAN to view its properties.

The information will be refreshed every eight seconds and also contains a peek detector to log the maximal values, since the last peek values reset.



Temperature Thresholds

On each Collaboration Server card or there are temperature sensors that are placed near specific components on the media card. In the **Hardware Monitor** you can view the properties of each card together with their temperature statuses. By right clicking on any card and viewing the cards **Properties**, the **Active Alarms** tab displays all the card sensors, their statuses and lists each sensor's temperature specifications. When the temperature on the cards initially rises, a fault could be triggered and can viewed in the System Alerts, Faults List. Load issues can arise when the system nears the maximum conference mark or high port capacity occurs on an Collaboration Server resulting in Upper Major or Upper Critical faults.

Hardware Monitor (4)				
Slot	Type	Status	Temperature	Voltage
	RMX	Normal	Normal	Normal
	FANS	Normal	Normal	Normal
	PWR	Normal	-	Normal
	LANS	Normal	-	-



With an Upper Major alarm activation it is recommended to perform the following checks:

- Fans/fan tray functions
- Overall System Ventilation
- Filter (top, bottom & sides free and no dust)
- Room temperature (cool).

When no apparent cause can be found, then contact your next level of support.



Diagnostic Mode


Diagnostic Mode is a debugging tool for performing hardware diagnostics that detect malfunctions in the hardware component's performance. Diagnostics are performed only for the MFA, CPU and Switch (Cards: MPMRx, DSP media cards, CPU, RTM IP, and RTM ISDN).

A user using an Administrator Login can view and access the *Diagnostic Mode*. When Diagnostic Mode is initialized, the MCU is reset and upon restarting, the MCU will enter Diagnostic Mode. Entering this mode causes the MCU to terminate all active conferences and prohibits conferences from being established.


RMX 2000/4000 Administrator users must access the system in Diagnostic Mode using the system Shelf Management IP address.

To run Diagnostics on a card:

- 1 On the **Hardware Monitor** toolbar, click the **Active Diagnostic Mode**  button.
- 2 If asked whether to continue this operation, click **Yes**.
- 3 The Collaboration Server restarts.
- 4 For RMX 2000/4000, the web client reopens using the **Shelf Manager IP address**; For RMX 1800, you need to re-enter the system management IP in the browser to access the web client again.
- 5 Log in using an Administrator account.
- 6 On the **Hardware Monitor** toolbar, click the **Active Diagnostic Mode**() button.

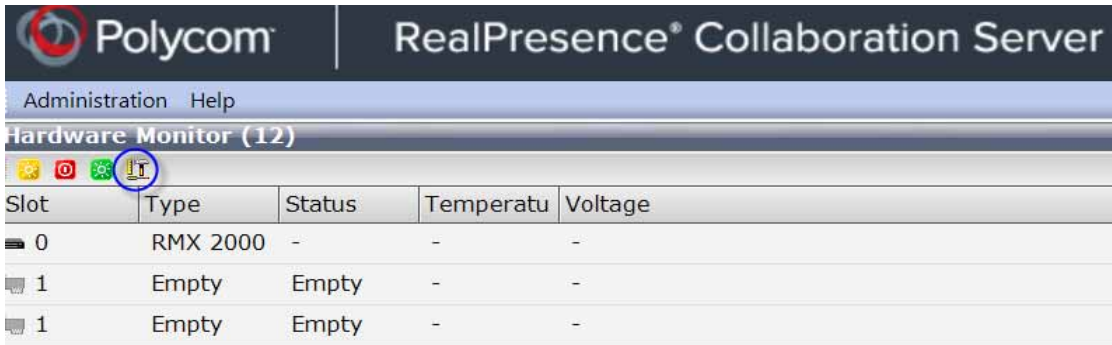


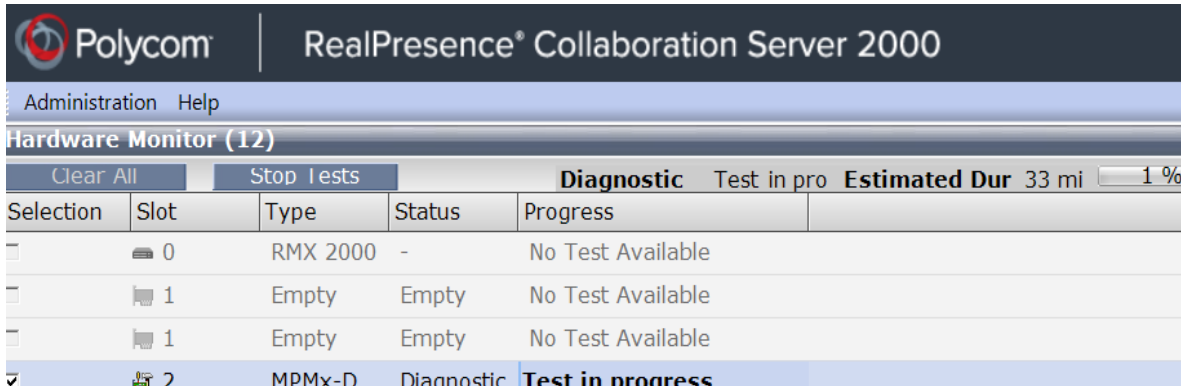
- 7 When asked whether to continue, click **Yes**.
- 8 The Collaboration Server resets and enters the Diagnostic mode.
- 9 For RMX 2000/4000, the web client reopens using the **Shelf Manager IP address**; For RMX 1800, you need to re-enter the system management IP in the browser to access the web client again.
- 10 Log in again using an Administrator account.
- 11 To run diagnostics on one or several cards, select the desired cards and select **Run Tests**.
- 12 You can view diagnostic status, progress, and summary from the Hardware Monitor pane.
- 13 To stop the diagnostic tests, click **Stop Tests**.

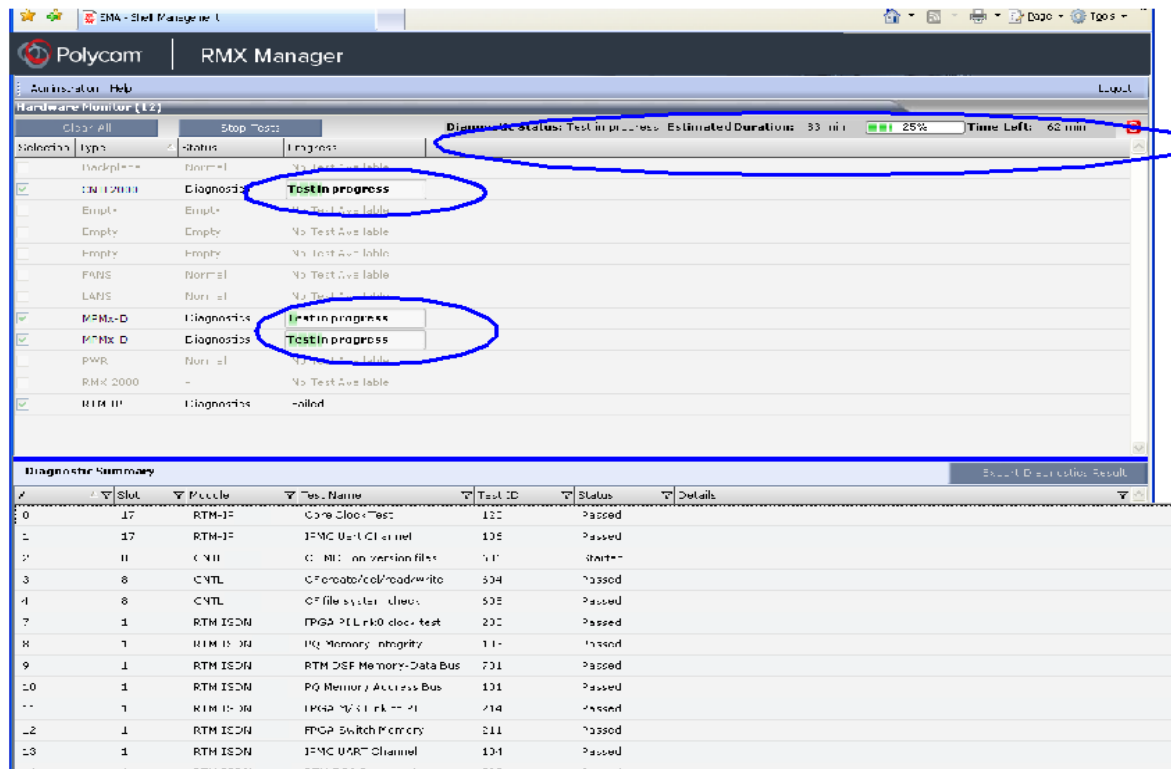

- 14 When the tests are completed, you can download a report in Excel format for analysis by your next level of support by clicking the **Export Diagnostics Result** button.

To exit the Diagnostics Mode:

- » To exit the Diagnostic Mode and reset the system to normal working status, click  on the upper-right of the Hardware Monitor window.



		Clear All		Stop Tests		Diagnostic		Test in pro	Estimated Dur	33 mi	1 %
Selection	Slot	Type	Status	Progress							
<input type="checkbox"/>	0	RMX 2000	-	No Test Available							
<input type="checkbox"/>	1	Empty	Empty	No Test Available							
<input type="checkbox"/>	1	Empty	Empty	No Test Available							
<input checked="" type="checkbox"/>	2	MPMx-D	Diagnostic	Test in progress							

Appendix A - Disconnection Causes

If a participant was unable to connect to a conference or was disconnected from a conference, the Connection Status tab in the Participant Properties dialog box indicates the call disconnection cause. In some cases, a possible solution may be displayed.

A video participant who is unable to connect the video channels, but is able to connect as an audio only participant, is referred to as a Secondary participant. For Secondary participants, the Connection Status tab in the Participant Properties dialog box indicates the video disconnection cause. In some cases, a possible solution may be indicated.

The table below lists the call disconnection causes that can be displayed in the Call Disconnection Cause field and provides an explanation of each message

IP Disconnection Causes

Call Disconnection Causes

Disconnection Cause	Description
Disconnected by User	The user disconnected the endpoint from the conference.
Remote device did not open the encryption signaling channel	The endpoint did not open the encryption signaling channel.
Remote devices selected encryption algorithm does not match the local selected encryption algorithm	The encryption algorithm selected by the endpoint does not match the MCU's encryption algorithm.
Resources deficiency	Insufficient resources available.
Call close. Call closed by MCU	The MCU disconnected the call.
H323 call close. No port left for audio	Insufficient audio ports.
H323 call close. No port left for video	The required video ports exceed the number of ports allocated to video in fixed ports.
H323 call close. No port left for FECC	The required data ports exceed the number of ports allocated to data in fixed ports.
H323 call close. No control port left	The required control ports exceed the number of ports allocated to control data in fixed ports.
H323 call close. No port left for videocont	The required video content ports exceed the number of ports allocated to video content in fixed ports.
H323 call closed. Small bandwidth	The gatekeeper allocated insufficient bandwidth to the connection with the endpoint.
H323 call closed. No port left	There are no free ports left in the IP card.

Call Disconnection Causes

Disconnection Cause	Description
Caller not registered	The calling endpoint is not registered in the gatekeeper.
H323 call closed. ARQ timeout	The endpoint sent an ARQ message to the gatekeeper, but the gatekeeper did not respond before timeout.
H323 call closed. DRQ timeout	The endpoint sent a DRQ message to the gatekeeper, but the gatekeeper did not respond before timeout.
H323 call closed. Alt Gatekeeper failure	An alternate gatekeeper failure occurred.
H323 call closed. Gatekeeper failure	A gatekeeper failure occurred.
H323 call closed. Remote busy	The endpoint was busy. (Applicable only to dial-out)
H323 call closed. Normal	The call ended normally, for example, the endpoint disconnected.
H323 call closed. Remote reject	The endpoint rejected the call.
H323 call closed. Remote unreachable	The call remained idle for more than 30 seconds and was disconnected because the destination device did not answer. Possible causes can be due to network problems, the gatekeeper could not find the endpoint's address, or the endpoint was busy or unavailable (for example, the "do not disturb" status is selected).
H323 call closed. Unknown reason	The reason for the disconnection is unknown, for example, the endpoint disconnected without giving a reason.
H323 call closed. Faulty destination address	Incorrect address format.
H323 call closed. Small bandwidth	The gatekeeper allocated insufficient bandwidth to the connection with the endpoint.
H323 call closed. Gatekeeper reject ARQ	The gatekeeper rejected the endpoint's ARQ.
H323 call closed. No port left	There are no ports left in the IP card.
H323 call closed. Gatekeeper DRQ	The gatekeeper sent a DRQ.
H323 call closed. No destination IP address	For internal use.
H323 call. Call failed prior or during the capabilities negotiation stage	The endpoint did not send its capabilities to the gatekeeper.
H323 call closed. Audio channels didn't open before timeout	The endpoint did not open the audio channel.
H323 call closed. Remote sent bad capability	There was a problem in the capabilities sent by the endpoint.
H323 call closed. Local capability wasn't accepted by remote	The endpoint did not accept the capabilities sent by the gatekeeper.
H323 failure	Internal error occurred.

Call Disconnection Causes

Disconnection Cause	Description
H323 call closed. Remote stop responding	The endpoint stopped responding.
H323 call closed. Master slave problem	A People + Content cascading failure occurred.
SIP bad name	The conference name is incompatible with SIP standards.
SIP bad status	A general IP card error occurred.
SIP busy everywhere	The participant's endpoints were contacted successfully, but the participant is busy and does not wish to take the call at this time.
SIP busy here	The participant's endpoint was contacted successfully, but the participant is currently not willing or able to take additional calls.
SIP capabilities don't match	The remote device capabilities are not compatible with the conference settings.
SIP card rejected channels	The IP card could not open the media channels.
SIP client error 400	The endpoint sent a SIP Client Error 400 (Bad Request) response. The request could not be understood due to malformed syntax.
SIP client error 402	The endpoint sent a SIP Client Error 402 (Payment Required) response.
SIP client error 405	The endpoint sent a SIP Client Error 405 (Method Not Allowed) response. The method specified in the Request-Line is understood, but not allowed for the address identified by the Request-URI.
SIP client error 406	The endpoint sent a SIP Client Error 406 (Not Acceptable) resources. The remote endpoint cannot accept the call because it does not have the necessary responses. The resource identified by the request is only capable of generating response entities that have content characteristics not acceptable according to the Accept header field sent in the request.
SIP client error 407	The endpoint sent a SIP Client Error 407 (Proxy Authentication Required) response. The client must first authenticate itself with the proxy.
SIP client error 409	The endpoint sent a SIP Client Error 409 (Conflict) response. The request could not be completed due to a conflict with the current state of the resource.
SIP client error 411	The endpoint sent a SIP Client Error 411 (Length Required) response. The server refuses to accept the request without a defined Content Length.

Call Disconnection Causes

Disconnection Cause	Description
SIP client error 413	The endpoint sent a SIP Client Error 413 (Request Entity Too Large) response. The server is refusing to process a request because the request entity is larger than the server is willing or able to process.
SIP client error 414	The endpoint sent a SIP Client Error 414 (Request-URI Too Long) response. The server is refusing to service the request because the Request-URI is longer than the server is willing to interpret.
SIP client error 420	The endpoint sent a SIP Client Error 420 (Bad Extension) response. The server did not understand the protocol extension specified in a Require header field.
SIP client error 481	The endpoint sent a SIP Client Error 481 (Call/Transaction Does Not Exist) response.
SIP client error 482	The endpoint sent a SIP Client Error 482 (Loop Detected) response.
SIP client error 483	The endpoint sent a SIP Client Error 483 (Too Many Hops) response.
SIP client error 484	The endpoint sent a SIP Client Error 484 (Address Incomplete) response. The server received a request with a To address or Request-URI that was incomplete.
SIP client error 485	The endpoint sent a SIP Client Error 485 (Ambiguous) response. The address provided in the request (Request-URI) was ambiguous.
SIP client error 488	The endpoint sent a SIP Client Error 488 (Not Acceptable Here) response.
SIP forbidden	The SIP server rejected the request. The server understood the request, but is refusing to fulfill it.
SIP global failure 603	A SIP Global Failure 603 (Decline) response was returned. The participant's endpoint was successfully contacted, but the participant explicitly does not wish to or cannot participate.
SIP global failure 604	A SIP Global Failure 604 (Does Not Exist Anywhere) response was returned. The server has authoritative information that the user indicated in the Request-URI does not exist anywhere.
SIP global failure 606	A SIP Global Failure 606 (Not Acceptable) response was returned.
SIP gone	The requested resource is no longer available at the Server and no forwarding address is known.
SIP moved permanently	The endpoint moved permanently. The user can no longer be found at the address in the Request-URI.
SIP moved temporarily	The remote endpoint moved temporarily.

Call Disconnection Causes

Disconnection Cause	Description
SIP not found	The endpoint was not found. The server has definitive information that the user does not exist at the domain specified in the Request-URI.
SIP redirection 300	A SIP Redirection 300 (Multiple Choices) response was returned.
SIP redirection 305	A SIP Redirection 305 (Use Proxy) response was returned. The requested resource MUST be accessed through the proxy given by the Contact field.
SIP redirection 380	A SIP Redirection 380 (Alternative Service) response was returned. The call was not successful, but alternative services are possible.
SIP remote cancelled call	The endpoint canceled the call.
SIP remote closed call	The endpoint ended the call.
SIP remote stopped responding	The endpoint is not responding.
SIP remote unreachable	The endpoint could not be reached.
SIP request terminated	The endpoint terminated the request. The request was terminated by a BYE or CANCEL request.
SIP request timeout	The request was timed out.
SIP server error 500	The SIP server sent a SIP Server Error 500 (Server Internal Error) response. The server encountered an unexpected condition that prevented it from fulfilling the request.
SIP server error 501	The SIP server sent a SIP Server Error 501 (Not Implemented) response. The server does not support the functionality required to fulfill the request.
SIP server error 502	The SIP server sent a SIP Server Error 502 (Bad Gateway) response. The server, while acting as a gateway or proxy, received an invalid response from the downstream server it accessed in attempting to fulfill the request.
SIP server error 503	The SIP server sent a SIP Server Error 503 (Service Unavailable) response. The server is temporarily unable to process the request due to a temporary overloading or maintenance of the server.
SIP server error 504	The SIP server sent a SIP Server Error 504 (Server Time-out) response. The server did not receive a timely response from an external server it accessed in attempting to process the request.

Call Disconnection Causes

Disconnection Cause	Description
SIP server error 505	The SIP server sent a SIP Server Error 505 (Version Not Supported) response. The server does not support, or refuses to support, the SIP protocol version that was used in the request.
SIP temporarily not available	The participant's endpoint was contacted successfully but the participant is currently unavailable (e.g., not logged in or logged in such a manner as to preclude communication with the participant).
SIP remote device did not respond in the given time frame	The endpoint did not respond in the given time frame.
SIP trans error TCP Invite	A SIP Invite was sent via TCP, but the endpoint was not found.
SIP transport error	Unable to initiate connection with the endpoint.
SIP unauthorized	The request requires user authentication.
SIP unsupported media type	The server is refusing to service the request because the message body of the request is in a format not supported by the requested resource for the requested method.

ISDN Disconnection Causes**ISDN Disconnection Causes**

Number	Summary	Description
1	Unallocated (unassigned number)	No route to the number exists in the ISDN network or the number was not found in the routing table. <ul style="list-style-type: none"> Ensure that the number appears in the routing table. Ensure that it is a valid number and that correct digits were dialed.
2	No route to specified transit network (national use)	The route specified (transit network) between the two networks does not exist.
3	No route to destination	No physical route to the destination number exists although the dialed number is in the routing plan. <ul style="list-style-type: none"> The PRI D-Channel is malfunctioning. Incorrect connection of the span or WAN.
4	Send special information tone	Return the special information tone to the calling party indicating that the called user cannot be reached.
5	Misdialed trunk prefix (national use)	A trunk prefix has erroneously been included in the called user number.
6	Channel Unacceptable	The sending entity in the call does not accept the channel most recently identified.

ISDN Disconnection Causes

Number	Summary	Description
7	Call awarded and being delivered in an Established channel	The incoming call is being connected to a channel previously established for similar calls.
8	Pre-Emption	The call has been pre-empted.
9	Pre-Emption – Circuit reserved for reuse	Call is being cleared in response to user request.
16	Normal Call Clearing	Call cleared normally because user hung up.
17	User Busy	Dialed number is busy.
18	No User Responding	The called user has not answered the call.
19	No Answer from User (User Alerted)	Called user has received call alert, but has not responded within a prescribed period of time. Internal network timers may initiate this disconnection.
20	Subscriber Absent	User is temporarily absent from the network - as when a mobile user logs off.
21	Call Rejected	Called number is either busy or has compatibility issues. Supplementary service constraints in the network may also initiate the disconnection.
22	Number Changed	Same as Cause 1. The diagnostic field contains the new called user number. Cause 1 is used if the network does not support this cause value.
26	Non-Selected User Clearing	The incoming call has not been assigned to the user.
27	Destination Out-of-Order	Messages cannot be sent to the destination number because the span may not be active.
28	Invalid Number Format (address incomplete)	The Type of Number (TON) is incorrect or the number is incomplete. Network, Unknown and National numbers have different formats.
29	Facility Rejected	User requested supplementary service which cannot be provided by the network.
30	Response to STATUS ENQUIRY	A STATUS message has been received in response to a prior STATUS ENQUIRY.
31	Normal, Unspecified	A normal, unspecified disconnection has occurred.
34	No Circuit/Channel Available	No B-Channels are available for the call.
38	Network Out-of-Order	Network is out-of-order because due to a major malfunction.
39	Permanent Frame Mode Connection Out-of-Service	A permanent frame mode connection is out-of-service. This cause is part of a STATUS message.

ISDN Disconnection Causes

Number	Summary	Description
40	Permanent Frame Mode Connection Operational	A permanent frame mode connection is operational. This cause is part of a STATUS message.
41	Temporary Failure	Minor network malfunction. Initiate call again.
42	Switching Equipment Congestion	High traffic has congested the switching equipment. Cause 43 is included.
43	Access Information Discarded	Access Information elements exceed maximum length and have been discarded. Included with Cause 42.
44	Requested Circuit/Channel not Available	The requested circuit or channel is not available. Alternative circuits or channels are not acceptable.
47	Resource Unavailable, Unspecified	The resource is unavailable. No other disconnection cause applies.
49	Quality of Service Not Available	Quality of Service, as defined in Recommendation X.213, cannot be provided.
50	Requested Facility Not Subscribed	A supplementary service has been requested that the user is not authorized to use.
53	Outgoing Calls Barred Within Closed User Group (CUG)	Outgoing calls are not permitted for this member of the CUG.
55	Incoming Calls Barred within CUG	Incoming calls are not permitted for this member of the CUG.
57	Bearer Capability Not Authorized	A bearer capability has been requested that the user is not authorized to use.
58	Bearer Capability Not Presently Available	A bearer capability has been requested that the user is not presently available.
62	Inconsistency in Designated Outgoing Access Information and Subscriber Class	Outgoing Access and Subscriber Class information is inconsistent
63	Service or Option Not Available, Unspecified	The service or option is unavailable. No other disconnection cause applies.
65	Bearer Capability Not Implemented	The requested bearer capability is not supported.
66	Channel Type Not Implemented	The requested channel type is not supported.
69	Requested Facility Not Implemented	The requested supplementary service is not supported.

ISDN Disconnection Causes

Number	Summary	Description
70	Only Restricted Digital Information Bearer Capability is Available (national use)	Unrestricted (64kb) bearer service has been requested but is not supported by the equipment sending this cause.
79	Service or Option Not Implemented, Unspecified	An unsupported service or unimplemented option has been requested. No other disconnection cause applies.
81	Invalid Call Reference Value	A message has been received which contains a call reference which is currently unassigned or not in use on the user-network interface.
82	Identified Channel Does Not Exist	A request has been received to use a channel which is currently inactive or does not exist.
83	A Suspended Call Exists, but This Call Identity Does Not Exist	A RESUME message cannot be executed by the network as a result of an unknown call identity.
84	Call Identity in Use	A SUSPEND message has been received with a call identity sequence that is already in use.
85	No Call Suspended	A RESUME message cannot be executed by the network as a result of no call suspended.
86	Call Having the Requested Call Identity Has Been Cleared	A RESUME message cannot be executed by the network as a result of the call having been cleared while suspended.
87	User Not Member of CUG	A CUG member was called by a user who is not a member of the CUG or a CUG call was made to a non CUG member.
88	Incompatible Destination	User-to-user compatibility checking procedures in a point-to-point data link have determined that an incompatibility exists between Bearer capabilities.
90	Non-Existent CUG	CUG does not exist.
91	Invalid Transit Network Selection (national use)	The transit network selection is of an incorrect format. No route (transit network) exists between the two networks.
95	Invalid Message, Unspecified	Invalid message received. No other disconnection cause applies.
96	Mandatory Information Element is Missing	A message was received with an information element missing.
97	Message Type Non-Existent or Not Implemented	A message was received that is of a type that is not defined or of a type that is defined but not implemented.
98	Message is Not Compatible with the Call State, or the Message Type is Non-Existent or Not Implemented	An unexpected message or unrecognized message incompatible with the call state has been received

ISDN Disconnection Causes

Number	Summary	Description
99	An Information Element or Parameter Does Not Exist or is Not Implemented	A message was received containing elements or parameters that are not defined or of a type that is defined but not implemented.
100	Invalid Information Element Contents	A message other than SETUP, DISCONNECT, RELEASE, or RELEASE COMPLETE has been received which has one or more mandatory information elements containing invalid content.
101	The Message is Not Compatible with the Call State	A STATUS message indicating any call state except the Null state has been received while in the Null state.
102	Recovery on Timer Expired	An error handling procedure timer has expired.
103	Parameter Non-Existent or Not Implemented – Passed On (national use)	A message was received containing parameters that are not defined or of a type that is defined but not implemented.
110	Message with Unrecognized Parameter Discarded	A message was discarded because it contained a parameter that was not recognized.
111	Protocol Error, Unspecified	A protocol error has occurred. No other disconnection cause applies.
127	Interworking, Unspecified	An interworking call has ended.

Appendix B - Active Alarms

Active Alarms

Alarm Text	Alarm Description
A matching activation key is required. To cancel the upgrade process, reset the Collaboration Server	The system upgrade requires that a valid activation key be entered. If none is available, resetting the Collaboration Server will cancel the upgrade and return the Collaboration Server to the previous version.
The card type in slot <n> is not compatible with RMX version, card will not be powered on	A Collaboration Server Appliance Edition was upgraded to versions 8.6, yet it contains an MPMx media card(s) which is not supported. The card is not powered on.
A new activation key was loaded. Reset the system.	A new activation key was loaded: Reset the MCU.
A new version was installed. Reset the system.	A new version was installed: Reset the MCU.
Alarm generated by a Central Signaling component	A system alert was generated by a component of the Central Signaling.
Alarm generated by an internal component	A system alert was generated by an internal system component.
Allocation mode was modified	
Automatic reset is unavailable in Safe Mode	The system switches to safe mode if many resets occur during startup. To prevent additional resets, and allow the system to complete the startup process the automatic system resets are blocked.
Backup of audit files is required	If the ENABLE_CYCLIC_FILE_SYSTEM_ALARMS is set to YES (default setting when ULTRA_SECURE_MODE System Flag is set to YES) and a Cyclic File reaches a file retention time or file storage capacity limit, the user is alerted that audit files need to be backed up.
Backup of CDR files is required	If the ENABLE_CYCLIC_FILE_SYSTEM_ALARMS is set to YES (default setting when ULTRA_SECURE_MODE System Flag is set to YES) and a Cyclic File reaches a file retention time or file storage capacity limit, the user is alerted that CDR files need to be backed up.
Backup of log files is required	If the ENABLE_CYCLIC_FILE_SYSTEM_ALARMS is set to YES (default setting when ULTRA_SECURE_MODE System Flag is set to YES) and a Cyclic File reaches a file retention time or file storage capacity limit, the user is alerted that log files need to be backed up.
Bios version is not compatible with Ultra Secure Mode.	The current BIOS version is not compatible with Ultra Secure Mode (ULTRA_SECURE_MODE=YES).
Card configuration event	

Active Alarms

Alarm Text	Alarm Description
Card failed to switch to Enhanced Secure Mode	Card failure occurred when the system was set to Ultra Secure Mode (ULTRA_SECURE_MODE=YES).
Card failure	Possible reasons for the card failure: <ul style="list-style-type: none"> • Resetting Card • Resetting component • Unknown shelf error • Unknown card error
Card not found	This occurs when: the system does not receive an indication about the card (since it does not exist...) usually when the card was removed from the MCU and the system did not have a chance to recalculate its resources.
Card not responding	Possible reasons for the card not responding: <ul style="list-style-type: none"> • No connection with MPM card. • No connection with the Switch.
Cards wrong file's mode	
Central signaling component failure	Possible explanations: <ul style="list-style-type: none"> • Central signaling component failure; unit type: [NonComponent\CSMngnt\CSH323\Polycom® ContentConnect™IP] • Central signaling component failure; unit type: (invalid: [NonComponent\CSMngnt\CSH323\Polycom® ContentConnect™IP]) • Central signaling component failure - Invalid failure type. Unit id: [id], Type: [NonComponent\CSMngnt\CSH323\Polycom® ContentConnect™IP], Status: [Ok\Failed\Recovered] • Central signaling component failure - Invalid failure type
Central Signaling indicating Faulty status	Central signaling failure detected in IP Network Service.
Central Signaling indicating Recovery status	
Central Signaling startup failure	Central Signaling component is down.
Conference Encryption Error	
Configuration of external database did not complete.	Check the configuration of the external DB.
Could not complete MPM Card startup procedure	Possible explanations: <ul style="list-style-type: none"> • Unit loading confirmation was not received. • No Media IP for this card. • Media IP Configuration confirmation was not received. • Unspecified problem. Check the card slot and reset the card.

Active Alarms

Alarm Text	Alarm Description
Could not complete RTM ISDN Card startup procedure	The RTM ISDN card cannot complete its startup procedure (usually after system reset). Check the card slot and reset the card.
CPU IPMC software was not updated.	Turn off the MCU and then turn it on.
CPU slot ID not identified	The CPU slot ID required for Ethernet Settings was not provided by the Shelf Management.
D channel cannot be established	
DEBUG mode enabled	Possible explanations: <ul style="list-style-type: none"> • System is running in DEBUG mode. • System DEBUG mode initiated. In this mode, additional prints are added and Startup and Recovery Conditions are different then Non Debug Mode. Change the DEBUG_MODE flag value to NO and reset the Collaboration Server.
DEBUG mode flags in use	The system is using the DEBUG CFG flags.
DMA not supported by IDE device	Possible explanations: <ul style="list-style-type: none"> • DMA (direct memory access) not supported by IDE device: Incompatible flash card / hard disk being used. • Flash card / hard drive are not properly connected to the board / one of the IDE channels is disconnected. • DMA was manually disabled for testing.
DNS configuration error	Check the DNS configuration.
DNS not configured in IP Network Service	Configure the DNS in the IP Network Services.
Encryption Server Error. Failed to generate the encryption key	FIPS 140 test failed while generating the new encryption key.
Error in external database certificate	
Error reading MCU time	Failed to read MCU time configuration file ([status]). Manually configure the MCU Time in the Collaboration Server Web Client or RMX Manager Manager application.
eUserMsgCode_Cs_EdgeServerDnsFailed	
eUserMsgCode_Cs_SipTLS_CertificateHasExpired	
eUserMsgCode_Cs_SipTLS_CertificateSubjNameIsNotValid_Or_DnsFailed	
eUserMsgCode_Cs_SipTLS_CertificateWillExpireInLessThanAWeek	

Active Alarms

Alarm Text	Alarm Description
eUserMsgCode_Cs_SipTLS_FailedToLoadOrVerifyCertificateFiles	
eUserMsgCode_Cs_SipTLS_Registrat ionHandshakeFailure	
eUserMsgCode_Cs_SipTLS_Registrat ionServerNotResponding	
Event Mode Conferencing resources deficiency due to inappropriate license. Please install a new license	
External NTP servers failure	The MCU could not connect to any of the defined NTP server for synchronization due to the remote server error or network error or configuration error. Change the configuration of the NTP server.
Failed to access DNS server	Failed to access DNS server.
Failed to configure the Media card IP address	Possible reasons for the failure: <ul style="list-style-type: none"> • Failure type: [OK Or Not supported. • Does not exist Or IP failure. • Duplicate IP Or DHCP failure. • VLAN failure Or Invalid: [status_Number].
Failed to configure the Users list in Linux	The authentication process did not start. Use the Restore to factory Defaults to recover.
Failed to connect to application server	Possible reasons for the failure: <ul style="list-style-type: none"> • Failed to connect to application server: • Failed to establish connection to server, url = [url].
Failed to connect to recording device	The MCU could not connect to the defined recording device due to configuration error or network error.
Failed to connect to SIP registrar	Cannot establish connection with SIP registrar.
Failed to create Default Profile	Possible reasons for the failure: <ul style="list-style-type: none"> • Failed to validate the default Profile. • Failed to add the default Profile. Possible action: <ul style="list-style-type: none"> • Restore the Collaboration Server configuration from the Backup. • Use the Non-Comprehensive Restore To Factory Defaults operation.
Failed to initialize system base mode	
Failed to initialize the file system	Possible reasons for the failure: <ul style="list-style-type: none"> • Failed to initialize the file system. • Failed to initialize the file system and create the CDR index. Reset the MCU.

Active Alarms

Alarm Text	Alarm Description
Failed to open Users list file	Restore the MCU configuration or re-define the user.
Failed to register with DNS server	Check the DNS configuration.
Failed to subscribe with the OCS, therefore the A/V Edge Server URI was not received	
Failure in initialization of SNMP agent.	
Fallback version is being used	Fallback version is being used. Restore current version. Version being used: [running version]; Current version: [current version].
Fan Problem Level Critical	
Fan Problem Level Major	
File error	Possible reasons for the file error: <ul style="list-style-type: none"> • XML file does not exist [file name]; Error no: [error number]. • Not authorized to open XML file [file name]; Error no: [error number]. • Unknown problem in opening XML file [file name]; Error no: [error number]. • Failed to parse XML file [file name].
File system scan failure	File system scan failure: Failed to scan [file system path]. Multiple occurrences may point to a hardware problem. System is functioning.
File system space shortage	File system space shortage: Out of file system space in [file system path]; Free space: [free space percentage]% ([free space] Blocks) - Minimum free space required: [minimum free space percentage]% ([minimum free space] Blocks).
FIPS 140 failure	
FIPS 140 test result not received	

Active Alarms

Alarm Text	Alarm Description
Gatekeeper failure	<p>Possible reasons for the Gatekeeper failure:</p> <ul style="list-style-type: none"> • Failed to register to alternate Gatekeeper. • Gatekeeper discovery state. <ul style="list-style-type: none"> - Check GK IP address (GUI, ping) • Gatekeeper DNS Host name not found. • Gatekeeper Registration Timeout. • Gatekeeper rejected GRQ due to invalid revision. • Gatekeeper rejected GRQ due to resource unavailability. • Gatekeeper rejected GRQ due to Terminal Exclusion. • Gatekeeper rejected GRQ due to unsupported feature. • Gatekeeper rejected GRQ. Reason 18. • Gatekeeper rejected RRQ due to Discovery Required. • Gatekeeper rejected RRQ due to duplicate alias. <ul style="list-style-type: none"> - Check duplicate in aliases or in prefixes • Gatekeeper rejected RRQ due to Generic Data. • Gatekeeper rejected RRQ due to invalid alias. • Gatekeeper rejected RRQ due to invalid call signaling address. • Gatekeeper rejected RRQ due to invalid endpoint ID. • Gatekeeper rejected RRQ due to invalid RAS address. • Gatekeeper rejected RRQ due to invalid revision. • Gatekeeper rejected RRQ due to invalid state. • Gatekeeper rejected RRQ due to invalid terminal alias. • Gatekeeper rejected RRQ due to resource unavailability. • Gatekeeper rejected RRQ due to Security Denial. • Gatekeeper rejected RRQ due to terminal type. • Gatekeeper rejected RRQ due to unsupported Additive Registration. • Gatekeeper rejected RRQ due to unsupported feature. • Gatekeeper rejected RRQ due to unsupported QOS transport. • Gatekeeper rejected RRQ due to unsupported transport. • Gatekeeper rejected RRQ. Full registration required. • Gatekeeper rejected RRQ. Reason 18. • Gatekeeper Unregistration State. • Registration succeeded. <p>Check the Gatekeeper configuration.</p>
GUI System configuration file is invalid xml file	The XML format of the system configuration file that contains the user interface settings is invalid.
Hard disk error	Hard disk not responding.
Hot Backup: Master-Slave configuration conflict.	<p>Possible reasons:</p> <ul style="list-style-type: none"> • When both the MCUs are configured as Master or as Slave • The slave Collaboration Server is defined with the same IP as the Master.

Active Alarms

Alarm Text	Alarm Description
Hot backup: Network issue	
Hot Backup: Paired MCU is unreachable.	
Initialization of ice stack failed	
Insufficient resources	The number of resources in the license is higher than the actual system resources. Check the media cards or insert a media card.
Insufficient UDP Ports	When defining fixed port, the number of defined UDP ports is lower than the required ports. Configure additional ports.
Internal System configuration during startup	System configuration during startup. Wait until Collaboration Server startup is completed.
Invalid System Configuration	
IP addresses of Signaling Host and Control Unit are the same	IP addresses of Signaling Host and Control Unit are identical. Assign different IP addresses to the Signaling Host and Control Unit.
IP Network Service added	
IP Network Service configuration modified	IP Network Service was modified. Reset the MCU.
IP Network Service deleted	IP Network Service was deleted. Reset the MCU.
IP Network Service not found	IP Service not found in the Network Services list. Configure the IP Network Service.
IPMC software upgrade in component	
IPS 140 test result not received	
ISDN/PSTN Network Services configuration changed	New ISDN/PSTN configuration. Reset the MCU for the change to take effect.
LDAP TLS: Failed to connect to OSCP responder	
Management Network not configured	Configure the Management Network.
Missing Central Signaling configuration	Configure the central signaling.
Missing Central Signaling IP configuration	
MPL startup failure. Authentication not received.	Authentication was not received from Switch. Check the switch card.
MPL startup failure. Management Network configuration not received.	Management Network message was not received. Check the Switch card.

Active Alarms

Alarm Text	Alarm Description
Network interface is not configured. New interface need to be chosen	
Network traffic capture is on	
New certificate for CS need Collaboration Server reset to take effect	
No clock source	The system could not use any of the connected ISDN spans as clock source. Check the ISDN Settings.
No default ISDN/PSTN Network Service defined in ISDN/PSTN Network Services list	Set a default ISDN/PSTN Network Service.
No default IVR Service in IVR Services list	No default IVR Service in IVR Services list. Ensure that one conference IVR Service and one EQ IVR Service are set as default.
No IP Network Services defined	IP Network Service parameters missing. Configure the IP Network Service.
No ISDN/PSTN Network Services defined	No ISDN/PSTN Network Services were defined or no default ISDN/PSTN Network was defined.
No LAN connection	
No License for ISDN/PSTN. Please activate the RTM ISDN card through Polycom website	Configure the ISDN Network Service.
No response from Central Signaling	No connection with central signaling.
No response from RTM ISDN card	
No RTM-LAN or RTM-ISDN installed. One of these cards must be installed in the RealPresence Collaboration Server (RMX) 4000	
No usable unit for audio controller	No media card is installed, or the media card installed is not functioning. Install the appropriate media card.
OCS Registration failed	
Password expiration warning	
Please install a newer version	
Port configuration was modified	
Power off	
Power Problem Level Critical	
Power Problem Level Major	

Active Alarms

Alarm Text	Alarm Description
Product activation failure	Assign a new activation key.
Product Type mismatch. System is restarting.	The user is alerted to a mismatch between the product type that is stored in MCU software and the product type received from another system component. In such a case the system is automatically restarted.
Received Notification failed	
Recording device has disconnected unexpectedly	
Red Alarm	When a certain timeout will be reached (after startup), MCMS will go over the configured Spans. A configured Span that is related to nonexistent card – will produce a 'RED_ALARM' Alert. Similarly on HotSwap: if an RTM card (or an MPM that has an RTM extension) is removed, MCMS will go over the configured Spans. A configured Span that is related to the removed card – will produce a 'RED_ALARM' Alert.
Requested changes to the certification repository were not completed. Repository must be updated to implement these changes.	
Resource process failed to request the Meeting Room list during startup.	Without the Meeting Rooms list, the system cannot allocate the appropriate dial numbers, Conference ID etc. and therefore cannot run conferences.
Restore Failed	Restoring the system configuration has failed as the system could not locate the configuration file in the selected path, or could not open the file.
Restore Succeeded	Restoring the system configuration has succeeded. Reset the MCU.
Restoring Factory Defaults. Default system settings will be restored once Reset is completed	Default system settings will be restored once Reset is completed.
Collaboration Server fails to connect to Active Directory server.	
Collaboration Server is uploading the version file. To cancel the upload and the upgrade, reset the Collaboration Server	
Collaboration Server user/password list will be reset	
RTM ISDN card not found	RTM ISDN card is missing. Install the RTM ISDN card.
RTM ISDN card startup procedure error	The RTM ISDN card cannot complete its startup procedure (usually after system reset). Check the card and/or reset the card.
Secured SIP communication failed	Error status (408) received from SIP proxy.

Active Alarms

Alarm Text	Alarm Description
Security mode failed. Certificate has expired.	
Security mode failed. Certificate host name does not match the Collaboration Server host name.	
Security mode failed. Certificate is about to expire.	
Security mode failed. Certificate not yet valid.	
Security mode failed. Error in certificate file.	
Service Request failed	
Sip connection for conference event package fail	The EventPackage SIP connection to this Collaboration Server within the cascading topology, failed to establish following 3 consecutive attempts. The conference and VMR are specified.
SIP registrations limit reached	SIP registrations limit reached.
SIP TLS: Certificate has expired	The current TLS certificate files have expired and must be replaced with new files.
SIP TLS: Certificate is about to expire	The current TLS certificate files will expire shortly and will have to be replaced to ensure the communication with the OCS.
SIP TLS: Certificate subject name is not valid or DNS failed to resolve this name	This alarm is displayed if the name of the Collaboration Server in the certificate file is different from the FQDN name defined in the OCS.
SIP TLS: Failed to load or verify certificate files	<p>This alarm indicates that the certificate files required for SIP TLS could not be loaded to the Collaboration Server. Possible causes are:</p> <ul style="list-style-type: none"> • Incorrect certificate file name. Only files with the following names can be loaded to the system: rootCA.pem, pkey.pem, cert.pem and certPassword.txt • Wrong certificate file type. Only files of the following types can be loaded to the system: rootCA.pem, pkey.pem and cert.pem and certPassword.txt • The contents of the certificate file does not match the system parameters
SIP TLS: Registration handshake failure	This alarm indicates a mismatch between the security protocols of the OCS and the Collaboration Server, preventing the Registration of the Collaboration Server to the OCS.

Active Alarms

Alarm Text	Alarm Description
SIP TLS: Registration server not responding	<p>This alarm is displayed when the Collaboration Server does not receive a response from the OCS to the registration request in the expected time frame. Possible causes are:</p> <ul style="list-style-type: none"> • The Collaboration Server FQDN name is not defined in the OCS pool, or is defined incorrectly. • The time frame for the expected response was too short and it will be updated with the next data refresh. The alarm may be cleared automatically the next time the data is refreshed. • The Collaboration Server FQDN name is not defined in the DNS server. Ping the DNS using the Collaboration Server FQDN name to ensure that the Collaboration Server is correctly registered to the DNS.
SIP TLS: Registration transport error	<p>This alarm indicates that the communication with the SIP server cannot be established. Possible causes are:</p> <ul style="list-style-type: none"> • Incorrect IP address of the SIP server • The SIP server listening port is other than the one defined in the system • The OCS services are stopped
Software upgrade in component	
SSH is enabled	
SWITCH not responding	Check the Switch card.
System Cards MPM Plus mode are not supported in Event mode	
System configuration changed. Please reset the MCU	
System Configuration modified	System configuration flags were modified. Reset the MCU.
System resources of Audio ports usage has exceeded Port Gauge threshold	
System resources of Video ports usage has exceeded Port Gauge threshold	
System resources usage has exceeded Port Gauge threshold	
Temperature Level - Critical	Temperature has reached a critical level.
Temperature Level - Major	Temperature has reached a problematic level and requires attention.
The Log file system is disabled because of high system CPU usage	
The MCCF channel is not connected	
The software contains patch(es)	The software contains patch(es).

Active Alarms

Alarm Text	Alarm Description
The system has been configured for Ultra Secure Mode, but communication is not secured until a TLS certificate is installed and the MCU is set to Secured Communication.	Although the System Flag ULTRA_SECURE_MODE is set to YES, the Ultra Secure Mode is not fully implemented as the TLS certificate was not installed. Please install the TLS certificate and set the MCU to Secured Communication Mode to fully enable the Enhanced Security Environment.
Unable to connect to Exchange Server.	
User Name SUPPORT cannot be used in Enhanced Security Mode	
Version upgrade is in progress	
Voltage problem	Possible reasons for the problem: <ul style="list-style-type: none"> • Card voltage problem. • Shelf voltage problem. • Voltage problem
Warning: Upgrade started and SAFE Upgrade protection is turned OFF	
Yellow Alarm	Problem sending/receiving data from/to network. Check the cables.

Appendix C - CDR Fields Unformatted File

The CDR (Call Detail Records) utility is used to retrieve conference information to a file. The CDR utility can retrieve conference information to a file in both formatted and unformatted formats.

Unformatted CDR files contain multiple records. The first record in each file contains information about the conference in general, such as the conference name and start time. The remaining records each contain information about one event that occurred during the conference, such as a participant connecting to the conference, or a user extending the length of the conference. The first field in each record identifies the event type, and this is followed by values containing information about the event. The fields are separated by commas.

Formatted files contain basically the same information as unformatted files, but with the field values replaced by descriptions. Formatted files are divided into sections, each containing information about one conference event. The first line in each section is a title describing the type of event, and this is followed by multiple lines, each containing information about the event in the form of a descriptive field name and value.



The field names and values in the formatted file will appear in the language being used for the Collaboration Server Web Client user interface at the time when the CDR information is retrieved. The value of the fields that support Unicode values, such as the info fields, will be stored in the CDR file in UTF8. The application that reads the CDR file must support Unicode.

The MCU sends the entire CDR file via API or HTTP, and the Collaboration Server or external application does the processing and sorting. The Collaboration Server ignores events that it does not recognize, that is, events written in a higher version that do not exist in the current version. Therefore, to enable compatibility between versions, instead of adding new fields to existing events, new fields are added as separate events, so as not to affect the events from older versions. This allows users with lower versions to retrieve CDR files that were created in higher versions.



This appendix describes the fields and values in the unformatted CDR records. Although the formatted files contain basically the same information, in a few instances a single field in the unformatted file is converted to multiple lines in the formatted file, and in other cases, multiple fields in the unformatted file are combined into one line in the formatted file.

The Conference Summary Record

The conference summary record (the first record in the unformatted CDR file) contains the following fields.

Conference Summary Record Fields

Field	Description
File Version	The version of the CDR utility that created the file.
Conference Routing Name	The Routing Name of the conference.
Internal Conference ID	The conference identification number as assigned by the system.

Conference Summary Record Fields

Field	Description
Reserved Start Time	The time the conference was scheduled to start in Greenwich Mean Time (GMT). The reservation time of a reservation that was started immediately or of an ongoing conference is the same as the Actual Start Time.
Reserved Duration	The amount of time the conference was scheduled to last.
Actual Start Time	The actual time the conference started in GMT.
Actual Duration	The actual conference duration.
Status	<p>The conference status code as follows:</p> <ul style="list-style-type: none"> 1 - The conference is an ongoing conference. 2 - The conference was terminated by a user. 3 - The conference ended at the scheduled end time. 4 - The conference ended automatically because no participants joined the conference for a predefined time period, or all the participants disconnected from the conference and the conference was empty for a predefined time period. 5 - The conference never started. 6 - The conference could not start due to a problem. 8 - An unknown error occurred. 9 - The conference was terminated by a participant using DTMF codes. <p>Note: If the conference was terminated by an MCU reset, this field will contain the value 1 (ongoing conference).</p>
File Name	The name of the conference log file.
GMT Offset Sign	<p>Indicates whether the GMT Offset is positive or negative. The possible values are:</p> <ul style="list-style-type: none"> 0 - Offset is negative. GMT Offset will be subtracted from the GMT Time. 1 - Offset is positive. GMT Offset will be added to the GMT Time.
GMT Offset	<p>The time zone difference between Greenwich and the Collaboration Server's physical location in hours and minutes.</p> <p>Together with the GMT Offset Sign field the GMT Offset field is used to define the Collaboration Server local time. For example, if the GMT Offset Sign is 0 and GMT Offset is 3 hours then the time zone of the Collaboration Server's physical location is -3, which will be subtracted from the GMT time to determine the local time. However, if the GMT Offset Sign is 1 and GMT Offset is 4 hours then the time zone of the Collaboration Server's physical location is +4, which will be added to the GMT time to determine the local time.</p>
File Retrieved	<p>Indicates if the file has been retrieved and saved to a formatted file, as follows:</p> <ul style="list-style-type: none"> 0 - No 1 - Yes

Event Records

The event records, that is, all records in the unformatted file except the first record, contain standard fields, such as the event type code and the time stamp, followed by fields that are event specific.

The event fields are separated by commas. Two consecutive commas with nothing between them (,,), or a comma followed immediately by a semi-colon (;), indicates an empty field, as in the example below:

```
SUPPORT_1422547546.c151.cdr - WordPad
File Edit View Insert Format Help
11001,22.07.2007,13:00:54,0,SUPPORT_1422547546;
101,22.07.2007,13:00:56,0,SUPPORT,igal pvx,0,0,0,1,0,Default IP Service,0,0,0,0,0,1,3;
2101,22.07.2007,13:00:56,0,2,,0,2,S,0,1,,4294967295,2887167150,1720,8,,2;
3010,22.07.2007,13:00:56,0,,,,,0;
17,22.07.2007,13:01:02,0,igal pvx,0,1,0,0,0;
7,22.07.2007,13:01:11,0,igal pvx,0,192,0;
7,22.07.2007,14:00:49,0,igal pvx,0,14,0;
2,22.07.2007,14:00:49,0,3;
For Help, press F1
```

Standard Event Record Fields

All event records start with the following fields:

- The CDR event type code. For a list of event type codes and descriptions, refer to .
- The event date.
- The event time.
- The structure length. This field is required for compatibility purposes, and always contains the value 0.

Event Types

The table below contains a list of the events that can be logged in the CDR file, and indicates where to find details of the fields that are specific to that type of event.



The event code identifies the event in the unformatted CDR file, and the event name identifies the event in the formatted CDR file.

Event Specific Fields

CDR Event Types

Event Code	Event Name	Description
1	CONFERENCE START	The conference started. Note: There is one CONFERENCE START event per conference. It is always the first event in the file, after the conference summary record. It contains conference details, but not participant details.
2	CONFERENCE END	The conference ended. Note: There is one CONFERENCE END event per conference, and it is always the last event in the file.
3	ISDN/PSTN CHANNEL CONNECTED	An ISDN/PSTN channel connected.
4	ISDN/PSTN CHANNEL DISCONNECTED	An ISDN/PSTN channel disconnected.
5	ISDN/PSTN PARTICIPANT CONNECTED	An ISDN/PSTN participant connected to the conference.
7	PARTICIPANT DISCONNECTED	A participant disconnected from the conference.
10	DEFINED PARTICIPANT	Information about a defined participant, that is, a participant who was added to the conference before the conference started. Note: There is one event for each participant defined before the conference started.
15	H323 CALL SETUP	Information about the IP address of the participant.
17	H323 PARTICIPANT CONNECTED	An H.323 participant connected to the conference.
18	NEW UNDEFINED PARTICIPANT	A new undefined participant joined the conference.
20	BILLING CODE	A billing code was entered by a participant using DTMF codes.
21	SET PARTICIPANT DISPLAY NAME	A user assigned a new name to a participant, or an end point sent its name.
22	DTMF CODE FAILURE	An error occurred when a participant entered a DTMF code.

CDR Event Types

Event Code	Event Name	Description
23	SIP PARTICIPANT CONNECTED	A SIP participant connected to the conference.
26	RECORDING LINK	A recording event, such as recording started or recording resumed, occurred.
28	SIP PRIVATE EXTENSIONS	Contains SIP Private Extensions information.
30	GATEKEEPER INFORMATION	Contains the gatekeeper caller ID, which makes it possible to match the CDR in the gatekeeper and in the MCU.
31	PARTICIPANT CONNECTION RATE	Information about the line rate of the participant connection. This event is added to the CDR file each time the endpoint changes its connection bit rate.
32	EVENT NEW UNDEFINED PARTY CONTINUE IPV6 ADDRESS	Information about the IPv6 address of the participant's endpoint.
33	PARTY CHAIR UPDATE	Participants connect to the conferences as standard participants and they are designated as chairpersons either by entering the chairperson password during the IVR session upon connection, or while participating in the conference using the appropriate DTM code.
34	PARTICIPANT MAXIMUM USAGE INFORMATION	This event includes information of the maximum line rate, maximum resolution and maximum frame rate used by H.323 or SIP participant during the conference.
35	SVC SIP PARTICIPANT CONNECTED	An SVC user connected over SIP.
100	USER TERMINATE CONFERENCE	A user terminated the conference.
101	USER ADD PARTICIPANT	A user added a participant to the conference during the conference.
102	USER DELETE PARTICIPANT	A user deleted a participant from the conference.
103	USER DISCONNECT PARTICIPANT	A user disconnected a participant.
104	USER RECONNECT PARTICIPANT	A user reconnected a participant who was disconnected from the conference.

CDR Event Types

Event Code	Event Name	Description
105	USER UPDATE PARTICIPANT	A user updated the properties of a participant during the conference.
106	USER SET END TIME	A user modified the conference end time.
107	OPERATOR MOVE PARTY FROM CONFERENCE	The participant moved from an Entry Queue to the destination conference or between conferences.
108	OPERATOR MOVE PARTY TO CONFERENCE	The Collaboration Server User moved the participant from an ongoing conference to another conference.
109	OPERATOR ATTEND PARTY	The Collaboration Server User moved the participant to the Operator conference.
111	OPERATOR BACK TO CONFERENCE PARTY	The Collaboration Server User moved the participant back to his Home (source) conference.
112	OPERATOR ATTEND PARTY TO CONFERENCE	The Collaboration Server User moved the participant from the Operator conference to another conference.
1001	NEW UNDEFINED PARTICIPANT CONTINUE 1	Additional information about a NEW UNDEFINED PARTICIPANT event.
2001	CONFERENCE START CONTINUE 1	Additional information about a CONFERENCE START event.
2007	PARTICIPANT DISCONNECTED CONTINUE 1	Additional information about a PARTICIPANT DISCONNECTED event.
2010	DEFINED PARTICIPANT CONTINUE 1	Additional information about a DEFINED PARTICIPANT event.
2011	RESERVED PARTICIPANT CONTINUE PV6 ADDRESS	Additional information about a DEFINED PARTICIPANT event that includes the IPv6 addressing of the defined participant.
2012	RESERVED PARTICIPANT CONTINUE 2	Additional information about a DEFINED PARTICIPANT event.

CDR Event Types

Event Code	Event Name	Description
2101	USER ADD PARTICIPANT CONTINUE 1	Additional information about a USER ADD PARTICIPANT event.
2102	USER ADD PARTICIPANT CONTINUE 2	Additional information about a USER ADD PARTICIPANT event.
2105	USER UPDATE PARTICIPANT CONTINUE 1	Additional information about a USER UPDATE PARTICIPANT event.
2106	USER UPDATE PARTICIPANT CONTINUE 2	Additional information about a USER UPDATE PARTICIPANT event.
3010	PARTICIPANT INFORMATION	The contents of the participant information fields.
5001	CONFERENCE START CONTINUE 4	Additional information about a CONFERENCE START event. Note: An additional CONFERENCE START CONTINUE 4 event will be written to the CDR each time the value of one of the following conference fields is modified: <ul style="list-style-type: none"> • Conference Password • Chairperson Password • Info1, Info2 or Info3 • Billing Info These additional events will only contain the value of the modified field.
6001	CONFERENCE START CONTINUE 5	Additional information about a CONFERENCE START event.
11001	CONFERENCE START CONTINUE 10	Additional information about a CONFERENCE START event. This event contains the Display Name.

Event Fields for Event 1 - CONFERENCE START

Field	Description
Dial-Out Manually	Indicates whether the conference was a dial-out manually conference or not. Currently the only value is: 0 - The conference was <i>not</i> a dial-out manually conference, that is, the MCU initiates the communication with dial-out participants, and the user does not need to connect them manually.
Auto Terminate	Indicates whether the conference was set to end automatically if no participant joins the conference for a predefined time period after the conference starts, or if all participants disconnect from the conference and the conference is empty for a predefined time period. Possible values are: 0 - The conference was <i>not</i> set to end automatically. 1 - The conference was set to end automatically.
Line Rate	The conference line rate, as follows: 0 - 64 kbps 6 - 384 kbps 12 - 1920 kbps 13 - 128 kbps 15 - 256 kbps 23 - 512 kbps 24 - 768 kbps 26 - 1152 kbps 29 - 1472 kbps 32 - 96 kbps
Line Rate (cont.)	33 - 1024 kbps 34 - 4096 kbps
Restrict Mode	Not supported. Always contains the value 0 .
Audio Algorithm	The audio algorithm. Currently the only value is: 255 - Auto
Video Session	The video session type. Currently the only value is: 3 - Continuous Presence
Video Format	The video format. Currently the only value is: 255 - Auto
CIF Frame Rate	The CIF frame rate. Currently the only value is: 255 -Auto

Event Fields for Event 1 - CONFERENCE START

Field	Description
QCIF Frame Rate	The QCIF frame rate: Currently the only value is: 255 - Auto
LSD Rate	Not supported. Always contains the value 0 .
HSD Rate	Not supported. Always contains the value 0 .
T120 Rate	Not supported. Always contains the value 0 .

Event Fields for Event 2001 - CONFERENCE START CONTINUE 1

Field	Description
Audio Tones	Not supported. Always contains the value 0 .
Alert Tone	Not supported. Always contains the value 0 .
Talk Hold Time	The minimum time that a speaker has to speak to become the video source. The value is in units of 0.01 seconds. Currently the only value is 150 , which indicates a talk hold time of 1.5 seconds.
Audio Mix Depth	The maximum number of participants whose audio can be mixed. Collaboration Servers 2000/4000: 5 Soft MCUs and Collaboration Server 1800: AVC, 4; SVC, 5.
Operator Conference	Not supported. Always contains the value 0 .
Video Protocol	The video protocol. Currently the only value is: 255 - Auto
Meet Me Per Conference	Indicates the Meet Me Per Conference setting. Currently the only value is: 1 - The Meet Me Per Conference option is enabled, and dial-in participants can join the conference by dialing the dial-in number.
Number of Network Services	Not supported. Always contains the value 0 .
Chairperson Password	The chairperson password for the conference. An empty field "" means that no chairperson password was assigned to the conference.

Event Fields for Event 2001 - CONFERENCE START CONTINUE 1

Field	Description
Chair Mode	Not supported. Always contains the value 0 .
Cascade Mode	The cascading mode. Currently the only value is: 0 - None
Master Name	Not supported. This field remains empty.
Minimum Number of Participants	The number of participants for which the system reserved resources. Additional participants may join the conference without prior reservation until all the resources are utilized. Currently the only value is 0 .
Allow Undefined Participants	Indicates whether or not undefined dial-in participants can connect to the conference. Currently the only value is: 1 - Undefined participants can connect to the conference
Time Before First Participant Joins	Note: This field is only relevant if the Auto Terminate option is enabled. Indicates the number of minutes that should elapse from the time the conference starts, without any participant connecting to the conference, before the conference is automatically terminated by the MCU.
Time After Last Participant Quits	Note: This field is only relevant if the Auto Terminate option is enabled. Indicates the number of minutes that should elapse after the last participant has disconnected from the conference, before the conference is automatically terminated by the MCU.
Conference Lock Flag	Not supported. Always contains the value 0 .
Maximum Number of Participants	The maximum number of participants that can connect to the conference at one time. The value 65535 (auto) indicates that as many participants as the MCU's resources allow can connect to the conference, up to the maximum possible for the type of conference.
Audio Board ID	Not supported. Always contains the value 65535 .
Audio Unit ID	Not supported. Always contains the value 65535 .
Video Board ID	Not supported. Always contains the value 65535 .
Video Unit ID	Not supported. Always contains the value 65535 .
Data Board ID	Not supported. Always contains the value 65535 .

Event Fields for Event 2001 - CONFERENCE START CONTINUE 1

Field	Description
Data Unit ID	Not supported. Always contains the value 65535 .
Message Service Type	The Message Service type. Currently the only value is: 3 - IVR
Conference IVR Service	The name of the IVR Service assigned to the conference. Note: If the name of the IVR Service contains more than 20 characters, it will be truncated to 20 characters.
Lecture Mode Type	Indicates the type of Lecture Mode, as follows: 0 - None 1 - Lecture Mode 3 - Presentation Mode
Lecturer	Note: This field is only relevant if the Lecture Mode Type is Lecture Mode. The name of the participant selected as the conference lecturer.
Time Interval	Note: This field is only relevant if Lecturer View Switching is enabled. The number of seconds a participant is to be displayed in the lecturer window before switching to the next participant. Currently the only value is 15 .
Lecturer View Switching	Note: This field is only relevant when Lecture Mode is enabled. Indicates the lecturer view switching setting, as follows: 0 - Automatic switching between participants is disabled. 1 - Automatic switching between participants is enabled.
Audio Activated	Not supported. Always contains the value 0 .
Lecturer ID	Not supported. Always contains the value 4294967295 .

Event Fields for Event 5001 - CONFERENCE START CONTINUE 4

Field	Description
Note: When this event occurs as the result of a change to the value of one of the event fields, the event will only contain the value of the modified field. All other fields will be empty.	
Conference ID	The conference ID.
Conference Password	The conference password. An empty field "" means that no conference password was assigned to the conference.
Chairperson Password	The chairperson password. An empty field "" means that no chairperson password was assigned to the conference.

Event Fields for Event 5001 - CONFERENCE START CONTINUE 4

Field	Description
Info1 Info2 Info3	The contents of the conference information fields. These fields enable users to enter general information for the conference, such as the company name, and the contact person's name and telephone number. The maximum length of each field is 80 characters.
Billing Info	The billing code.

Event Fields for Event 6001 - CONFERENCE START CONTINUE 5

Field	Description
Encryption	Indicates the conference encryption setting, as follows: 0 - The conference is not encrypted. 1 - The conference is encrypted.

Event Fields for Event 11001 - CONFERENCE START CONTINUE 10

Field	Description
Display Name	The Display Name of the conference.

Event Fields for Event 2 - CONFERENCE END

Field	Description
Conference End Cause	Indicates the reason for the termination of the conference, as follows: 1 - The conference is an ongoing conference or the conference was terminated by an MCU reset. 2 - The conference was terminated by a user. 3 - The conference ended at the scheduled end time. 4 - The conference ended automatically because no participants joined the conference for a predefined time period, or all the participants disconnected from the conference and the conference was empty for a predefined time period. 5 - The conference never started. 6 - The conference could not start due to a problem. 8 - An unknown error occurred. 9 - The conference was terminated by a participant using DTMF codes.

Event fields for Event 3 - ISDN/PSTN CHANNEL CONNECTED

Field	Description
Participant Name	The name of the participant.
Participant ID	The identification number assigned to the participant by the MCU.
Channel ID	The channel identifier.
Number of Channels	The number of channels being connected for this participant.
Connect Initiator	Indicates who initiated the connection, as follows: 0 - Collaboration Server 1 - Participant Any other number - Unknown
Call Type	The call type, as follows: 68 - 56 KBS data call 72 - 1536kbs data call (PRI only) 75 - 56 KBS data call 77 - Modem data service 79 - 384kbs data call (PRI only) 86 - Normal voice call
Network Service Program	The Network Service program, as follows: 0 - None 1 - ATT_SDN or NTI_PRIVATE 3 - ATT_MEGACOM or NTI_OUTWATS 4 - NTI FX 5 - NTI TIE TRUNK 6 - ATT ACCUNET 8 - ATT 1800 16 - NTI_TRO
Preferred Mode	The value of the preferred/exclusive field for B channel selection (the PRF mode), as follows: 0 - None 1 - Preferred 2 - Exclusive For more details refer to the Q.931 standard.
Calling Participant Number Type	The type of calling number, as follows: 0 - Unknown, default 1 - International 2 - National 3 - Network specific 4 - Subscriber 6 - Abbreviated

Event fields for Event 3 - ISDN/PSTN CHANNEL CONNECTED

Field	Description
Calling Participant Number Plan	The calling participant number plan. 0 - Unknown 1 - ISDN/PSTN 9 - Private
Calling Participant Presentation Indicator	The calling participant presentation indicator, as follows: 0 - Presentation allowed, default 1 - Presentation restricted 2 - Number not available 255 - Unknown
Calling Participant Screening Indicator	The calling participant screening indicator, as follows: 0 - Participant not screened, default 1 - Participant verification succeeded 2 - Participant verification failed 3 - Network provided 255 - Unknown
Calling Participant Phone Number	The telephone number used for dial-in.
Called Participant Number Type	The type of number called, as follows: 0 - Unknown, default 1 - International 2 - National 3 - Network specific 4 - Subscriber 6 - Abbreviated
Called Participant Number Plan	The called participant number plan, as follows: 0 - Unknown 1 - ISDN/PSTN 9 - Private
Called Participant Phone Number	The telephone number used for dial-out.

Event fields for Event 4 - ISDN/PSTN CHANNEL DISCONNECTED

Field	Description
Participant Name	The participant name.
Participant ID	The identification number assigned to the participant by the MCU.
Channel ID	The channel identifier.

Event fields for Event 4 - ISDN/PSTN CHANNEL DISCONNECTED

Field	Description
Disconnect Initiator	Indicates who initiated the disconnection, as follows: 0 - Collaboration Server 1 - Participant Any other number - Unknown
Disconnect Coding Standard	The disconnection cause code standard. For values and explanations, see the Q.931 Standard.
Disconnect Location	The disconnection cause location. For values and explanations, see the Q.931 Standard.
Q931 Disconnection Cause	The disconnection cause value. For values and explanations, see the Q.931 Standard.

Event fields for Event 5 - ISDN/PSTN PARTICIPANT CONNECTED

Field	Description
Participant Name	The name of the participant.
Participant ID	The identification number assigned to the participant by the MCU.
Participant Status	The participant status, as follows: 0 - Idle 1 - Connected 2 - Disconnected 3 - Waiting for dial-in 4 - Connecting 5 - Disconnecting 6 - Partially connected. Party has completed H.221 capability exchange 7 - Deleted by a user 8 - Secondary. The participant could not connect the video channels and is connected via audio only 10 - Connected with problem 11 - Redialing
Remote Capabilities	Note: This field is only relevant to ISDN video participants. The remote capabilities in H.221 format.
Remote Communication Mode	Note: This field is only relevant to ISDN video participants. The remote communication mode in H.221 format.

Event fields for Event 5 - ISDN/PSTN PARTICIPANT CONNECTED

Field	Description
Secondary Cause	<p>Note: This field is only relevant to ISDN video participants and only if the Participant Status is Secondary.</p> <p>The cause for the secondary connection (not being able to connect the video channels), as follows:</p> <p>0 - Default</p> <p>11 - The incoming video parameters are not compatible with the conference video parameters</p> <p>12 - H.323 card failure</p> <p>13 - The conference video settings are not compatible with the endpoint capabilities</p> <p>14 - The new conference settings are not compatible with the endpoint capabilities</p>
Secondary Cause (cont.)	<p>15 - Video stream violation due to incompatible annexes or other discrepancy.</p> <p>16 - Inadequate video resources</p> <p>17 - When moved to a Transcoding or Video Switching conference, the participant's video capabilities are not supported by the video cards</p> <p>18 - Video connection could not be established</p> <p>24 - The endpoint closed its video channels</p> <p>25 - The participant video settings are not compatible with the conference protocol</p> <p>26 - The endpoint could not re-open the video channel after the conference video mode was changed</p> <p>27 - The gatekeeper approved a lower bandwidth than requested</p> <p>28 - Video connection for the SIP participant is temporarily unavailable</p> <p>29 - AVF problem. Insufficient bandwidth.</p> <p>30 - H2.39 bandwidth mismatch</p> <p>255 - Other</p>

Event Fields for Event 7 - PARTICIPANT DISCONNECTED

Field	Description
Participant Name	The name of the participant.
Participant ID	The identification number assigned to the participant by the MCU.
Call Disconnection Cause	The disconnection cause. For more information about possible values, see .
Q931 Disconnect Cause	If the disconnection cause is "No Network Connection" or "Participant Hang Up", then this field indicates the Q931 disconnect cause.

Event Fields for Event 2007 - PARTICIPANT DISCONNECTED CONTINUE 1

Field	Description
Rx Synchronization Loss	The number of times that the general synchronization of the MCU was lost.
Tx Synchronization Loss	The number of times that the general synchronization of the participant was lost.
Rx Video Synchronization Loss	The number of times that the synchronization of the MCU video unit was lost.
Tx Video Synchronization Loss	The number of times that the synchronization of the participant video was lost.
Mux Board ID	Not supported. Always contains the value 0 .
Mux Unit ID	Not supported. Always contains the value 0 .
Audio Codec Board ID	Not supported. Always contains the value 0 .
Audio Codec Unit ID	Not supported. Always contains the value 0 .
Audio Bridge Board ID	Not supported. Always contains the value 0 .
Audio Bridge Unit ID	Not supported. Always contains the value 0 .
Video Board ID	Not supported. Always contains the value 0 .
Video Unit ID	Not supported. Always contains the value 0 .
T.120 Board ID	Not supported. Always contains the value 0 .
T.120 Unit ID	Not supported. Always contains the value 0 .
T.120 MCS Board ID	Not supported. Always contains the value 0 .
T.120 MCS Unit ID	Not supported. Always contains the value 0 .

Event Fields for Event 2007 - PARTICIPANT DISCONNECTED CONTINUE 1

Field	Description
H.323 Board ID	Not supported. Always contains the value 0 .
H323 Unit ID	Not supported. Always contains the value 0 .

Event Fields for Events 10, 101, 105 - DEFINED PARTICIPANT, USER ADD PARTICIPANT, USER UPDATE PARTICIPANT

Field	Description
User Name	The login name of the user who added the participant to the conference, or updated the participant properties.
Participant Name	The name of the participant.
Participant ID	The identification number assigned to the participant by the MCU.
Dialing Direction	The dialing direction, as follows: 0 - Dial-out 5 - Dial-in
Bonding Mode	Not supported. Always contains the value 0 .
Number Of Channels	Note: This field is only relevant to ISDN/PSTN participants. The number of channels being connected for this participant.
Net Channel Width	Not supported. Always contains the value 0 .
Network Service Name	The name of the Network Service. An empty field "" indicates the default Network Service.
Restrict	Not supported. Always contains the value 0 .
Audio Only	Indicates the participant's Audio Only setting, as follows: 0 - The participant is <i>not</i> an Audio Only participant 1 - The participant is an Audio Only participant 255 - Unknown

Event Fields for Events 10, 101, 105 - DEFINED PARTICIPANT, USER ADD PARTICIPANT, USER UPDATE PARTICIPANT

Field	Description
Default Number Type	<p>The type of telephone number, as follows:</p> <ul style="list-style-type: none"> 0 - Unknown 1 - International 2 - National 3 - Network specific 4 - Subscriber 6 - Abbreviated 255 - Taken from Network Service, default <p>Notes:</p> <ul style="list-style-type: none"> • For dial-in participants, the only possible value is 255 • This field is only relevant to ISDN/PSTN participants.
Net Sub-Service Name	<p>Not supported. This field remains empty.</p>
Number of Participant Phone Numbers	<p>The number of participant phone numbers.</p> <p>In a dial-in connection, the participant phone number is the CLI (Calling Line Identification) as identified by the MCU.</p> <p>In a dial-out connection, participant phone numbers are the phone numbers dialed by the MCU for each participant channel.</p> <p>Note: This field is only relevant to ISDN/PSTN participants.</p>
Number of MCU Phone Numbers	<p>The number of MCU phone numbers.</p> <p>In a dial-in connection, the MCU phone number is the number dialed by the participant to connect to the MCU.</p> <p>In a dial-out connection, the MCU phone number is the MCU (CLI) number as seen by the participant.</p> <p>Note: This field is only relevant to ISDN/PSTN participants.</p>
Party and MCU Phone Numbers	<p>No, one or more fields, one field for each participant and MCU phone number.</p> <p>The participant phone numbers are listed first, followed by the MCU phone numbers.</p> <p>Note: This field is only relevant to ISDN/PSTN participants.</p>
Identification Method	<p>The method by which the destination conference is identified, as follows:</p> <ul style="list-style-type: none"> 1 - Called phone number, IP address or alias 2 - Calling phone number, IP address or alias <p>Note: This field is only relevant to dial-in participants.</p>
Meet Me Method	<p>The meet-me per method. Currently the only value is:</p> <ul style="list-style-type: none"> 3 - Meet-me per participant <p>Note: This field is only relevant to dial-in participants.</p>

Event Fields for Events 2010, 2011, 2015 - DEFINED PARTICIPANT CONTINUE 1, USER ADD PARTICIPANT CONTINUE 1, USER UPDATE PARTICIPANT CONTINUE 1

Field	Description
Network Type	The type of network between the participant and the MCU, as follows: 0 - ISDN/PSTN 2 - H.323 5 - SIP
H.243 Password	Not supported. This field remains empty.
Chair	Not supported. Always contains the value 0 .
Video Protocol	The video protocol used by the participant, as follows: 1 - H.261 2 - H.263 4 - H.264 255 - Auto
Broadcasting Volume	The broadcasting volume assigned to the participant. The value is between 1 (lowest) and 10 (loudest). Each unit movement increases or decreases the volume by 3 dB .
Undefined Participant	Indicates whether are not the participant is an undefined participant, as follows: 0 - The participant is <i>not</i> an undefined participant. 2 - The participant is an undefined participant.
Node Type	The node type, as follows: 0 - MCU 1 - Terminal
Bonding Phone Number	The phone number for Bonding dial-out calls. Bonding is a communication protocol that aggregates from two up to thirty 64 Kbps B channels together, to look like one large bandwidth channel. Note: This field is only relevant to ISDN/PSTN participants.
Video Bit Rate	The video bit rate in units of kilobits per second. A value of 4294967295 denotes auto, and in this case, the rate is computed by the MCU.
IP Address	Note: This field is only relevant to IP participants. The IP address of the participant. An address of 4294967295 indicates that no IP address was specified for the participant, and the gatekeeper is used for routing. In all other cases the address overrides the gatekeeper.
Signaling Port	Note: This field is only relevant to IP participants. The signaling port used for participant connection.

Event Fields for Events 2010, 2011, 2015 - DEFINED PARTICIPANT CONTINUE 1, USER ADD PARTICIPANT CONTINUE 1, USER UPDATE PARTICIPANT CONTINUE 1

Field	Description
H.323 Participant Alias Type/SIP Participant Address Type	<p>Note: This field is only relevant to IP participants.</p> <p>For H.323 participants, the alias type, as follows:</p> <p>7 - E164</p> <p>8 - H.323 ID</p> <p>13 - Email ID</p> <p>14 - Participant number</p> <p>For SIP participants, the address type, as follows:</p> <p>1 - SIP URI</p> <p>2 - Tel URL</p>
H.323 Participant Alias Name/SIP Participant Address	<p>Note: This field is only relevant to IP participants.</p> <p>For H.323 participants:</p> <p>The participant alias. May contain up to 512 characters.</p> <p>For SIP participants:</p> <p>The participant address. May contain up to 80 characters.</p>

Event Fields for Event 2011 - DEFINED PARTICIPANT CONTINUE 2, Event 2012 - USER ADD PARTICIPANT CONTINUE 2, Event 2016 - USER UPDATE PARTICIPANT CONTINUE 2

Field	Description
Encryption	<p>Indicates the participant's encryption setting as follows:</p> <p>0 - The participant is not encrypted.</p> <p>1 - The participant is encrypted.</p> <p>2 - Auto. The conference encryption setting is applied to the participant.</p>
Participant Name	The name of the participant.
Participant ID	The identification number assigned to the participant by the MCU.

Event fields for Event 15 - H323 CALL SETUP

Field	Description
Participant Name	The name of the participant.
Participant ID	The identification number assigned to the participant by the MCU.
Connect Initiator	<p>Indicates who initiated the connection, as follows:</p> <p>0 - MCU</p> <p>1 - Remote participant</p> <p>Any other number - Unknown</p>

Event fields for Event 15 - H323 CALL SETUP

Field	Description
Min Rate	The minimum line rate used by the participant. The data in this field should be ignored. For accurate rate information, see CDR event 31.
Max Rate	The maximum line rate achieved by the participant. The data in this field should be ignored. For accurate rate information, see CDR event 31.
Source Party Address	The IP address of the calling participant. A string of up to 255 characters.
Destination Party Address	The IP address of the called participant. A string of up to 255 characters.
Endpoint Type	The endpoint type, as follows: 0 - Terminal 1 - Gateway 2 - MCU 3 - Gatekeeper 4 - Undefined

Event Fields for Events 17, 23 - H323 PARTICIPANT CONNECTED, SIP PARTICIPANT CONNECTED

Field	Description
Participant Name	The name of the participant. An empty field "" denotes an unidentified participant or a participant whose name is unspecified.
Participant ID	The identification number assigned to the participant by the MCU.
Participant Status	The participant status, as follows: 0 - Idle 1 - Connected 2 - Disconnected 3 - Waiting for dial-in 4 - Connecting 5 - Disconnecting 6 - Partially connected. Party has completed H.221 capability exchange 7 - Deleted by a user 8 - Secondary. The participant could not connect the video channels and is connected via audio only 10 - Connected with problem 11 - Redialing
Capabilities	Not supported. Always contains the value 0 .

Event Fields for Events 17, 23 - H323 PARTICIPANT CONNECTED, SIP PARTICIPANT CONNECTED

Field	Description
Remote Communication Mode	Not supported. Always contains the value 0 .
Secondary Cause	<p>Note: This field is only relevant if the Participant Status is Secondary.</p> <p>The cause for the secondary connection (not being able to connect the video channels), as follows:</p> <p>0 - Default</p> <p>11 - The incoming video parameters are not compatible with the conference video parameters</p> <p>13 - The conference video settings are not compatible with the endpoint capabilities</p> <p>14 - The new conference settings are not compatible with the endpoint capabilities</p> <p>15 - Video stream violation due to incompatible annexes or other discrepancy</p> <p>16 - Inadequate video resources</p> <p>17 - When moved to a Transcoding or Video Switching conference, the participant's video capabilities are not supported by the video cards</p> <p>18 - Video connection could not be established</p> <p>24 - The endpoint closed its video channels</p> <p>25 - The participant video settings are not compatible with the conference protocol</p> <p>26 - The endpoint could not re-open the video channel after the conference video mode was changed</p> <p>27 - The gatekeeper approved a lower bandwidth than requested</p> <p>28 - Video connection for the SIP participant is temporarily unavailable</p> <p>255 - Other</p>

Event Fields for Event 18 - NEW UNDEFINED PARTICIPANT

Field	Description
Participant Name	The name of the participant.
Participant ID	The identification number assigned to the participant by the MCU.
Dialing Direction	The dialing direction, as follows 0 - Dial-out 5 - Dial-in
Bonding Mode	Not supported. Always contains the value 0 .
Number of Channels	The number of channels being connected for this participant. Note: This field is only relevant to ISDN/PSTN participants.
Net Channel Width	Not supported. Always contains the value 0 .

Event Fields for Event 18 - NEW UNDEFINED PARTICIPANT

Field	Description
Network Service Name	The name of the Network Service. An empty field "" indicates the default Network Service.
Restrict	Not supported. Always contains the value 0 .
Audio Only	Indicates the participant's Audio Only setting, as follows: 0 - The participant is not an Audio Only participant 1 - The participant is an Audio Only participant 255 - Unknown
Default Number Type	The type of telephone number. Note: Since undefined participants are always dial-in participants, the only possible value is: 255 - Taken from Network Service Note: This field is only relevant to ISDN/PSTN participants.
Net Sub-Service Name	Not supported. This field remains empty.
Number of Participant Phone Numbers	The number of participant phone numbers. The participant phone number is the CLI (Calling Line Identification) as identified by the MCU. Note: This field is only relevant to ISDN/PSTN participants.
Number of MCU Phone Numbers	The number of MCU phone numbers. The MCU phone number is the number dialed by the participant to connect to the MCU. Note: This field is only relevant to ISDN/PSTN participants.
Party and MCU Phone Numbers	No, one or more fields, one field for each participant and MCU phone number. The participant phone numbers are listed first, followed by the MCU phone numbers. Note: This field is only relevant to ISDN/PSTN participants.
Identification Method	Note: This field is only relevant to dial-in participants. The method by which the destination conference is identified, as follows: 1 - Called phone number, IP address or alias 2 - Calling phone number, IP address or alias
Meet Me Method	Note: This field is only relevant to dial-in participants. The meet-me per method, as follows: 3 - Meet-me per participant
Network Type	The type of network between the participant and the MCU, as follows: 0 - ISDN/PSTN 2 - H.323 5 - SIP
H.243 Password	Not supported. This field remains empty.

Event Fields for Event 18 - NEW UNDEFINED PARTICIPANT

Field	Description
Chair	Not supported. Always contains the value 0 .
Video Protocol	The video protocol, as follows: 1 - H.261 2 - H.263 4 - H.264 255 - Auto
Broadcasting Volume	The broadcasting volume assigned to the participant. The value is between 1 (lowest) and 10 (loudest). Each unit movement increases or decreases the volume by 3 dB .
Undefined Participant	Indicates whether are not the participant is an undefined participant, as follows: 0 - The participant is <i>not</i> an undefined participant. 2 - The participant is an undefined participant.
Node Type	The node type, as follows: 0 - MCU 1 - Terminal
Bonding Phone Number	Note: This field is only relevant to ISDN/PSTN participants. The phone number for Bonding dial-out calls. Bonding is a communication protocol that aggregates from two up to thirty 64 Kbps B channels together, to look like one large bandwidth channel.
Video Bit Rate	The video bit rate in units of kilobits per second. A value of 4294967295 denotes auto, and in this case, the rate is computed by the MCU.
IP Address	Note: This field is only relevant to IP participants. The IP address of the participant. An address of 4294967295 indicates that no IP address was specified for the participant, and the gatekeeper is used for routing. In all other cases the address overrides the gatekeeper.
Signaling Port	Note: This field is only relevant to IP participants. The signaling port used for participant connection. A value of 65535 is ignored by MCU.
H.323 Participant Alias Type/SIP Participant Address Type	Note: This field is only relevant to IP participants. For H.323 participants, the alias type, as follows: 7 - E164 8 - H.323 ID 13 - Email ID 14 - Participant number For SIP participants, the address type, as follows: 1 - SIP URI 2 - Tel URL

Event Fields for Event 18 - NEW UNDEFINED PARTICIPANT

Field	Description
H.323 Participant Alias Name/SIP Participant Address	<p>Note: This field is only relevant to IP participants.</p> <p>For H.323 participants: The participant alias. May contain up to 512 characters.</p> <p>For SIP participants: The participant address. May contain up to 80 characters.</p>

Event Fields for Event 1001 - NEW UNDEFINED PARTY CONTINUE 1

Field	Description
Encryption	<p>Indicates the participant's encryption setting as follows:</p> <p>0 - The participant is <i>not</i> encrypted.</p> <p>1 - The participant is encrypted.</p> <p>2 - Auto. The conference encryption setting is applied to the participant.</p>
Participant Name	The name of the participant.
Participant ID	The identification number assigned to the participant by the MCU.

Event Fields for Event 20 - BILLING CODE

Field	Description
Participant Name	The name of the participant who added the billing code.
Participant ID	The identification number, as assigned by the MCU, of the participant who added the billing code.
Billing Info	The numeric billing code that was added (32 characters).

Event Fields for Event 21 - SET PARTICIPANT DISPLAY NAME

Field	Description
Participant Name	The original name of the participant, for example, the name automatically assigned to an undefined participant, such as, "<conference name>_(000)".
Participant ID	The identification number assigned to the participant by the MCU.
Display Name	The new name assigned to the participant by the user, or the name sent by the end point.

Event Fields for Event 22 - DTMF CODE FAILURE

Field	Description
Participant Name	The name of the participant.
Participant ID	The identification number assigned to the participant by the MCU.
Incorrect Data	The incorrect DTMF code entered by the participant, or an empty field "" if the participant did not press any key.
Correct Data	The correct DTMF code, if known.
Failure Type	The type of DTMF failure, as follows: 2 - The participant did not enter the correct conference password. 6 - The participant did not enter the correct chairperson password. 12 - The participant did not enter the correct Conference ID.

Event fields for Event 26 - RECORDING LINK

Field	Description
Participant Name	The name of the Recording Link participant.
Participant ID	The identification number assigned to the Recording Link participant by the MCU.
Recording Operation	The type of recording operation, as follows: 0 - Start recording 1 - Stop recording 2 - Pause recording 3 - Resume recording 4 - Recording ended 5 - Recording failed
Initiator	Not supported.
Recording Link Name	The name of the Recording Link.
Recording Link ID	The Recording Link ID.
Start Recording Policy	The start recording policy, as follows: 1 - Start recording automatically as soon as the first participant connects to the conference. 2 - Start recording when requested by the conference chairperson via DTMF codes or from the <i>Collaboration Server Web Client</i> , or when the operator starts recording from the <i>Collaboration Server Web Client</i> .

Event Fields for Event 28 - SIP PRIVATE EXTENSIONS

Field	Description
Participant Name	The name of the participant.
Participant ID	The participant's identification number as assigned by the system.
Called Participant ID	The called participant ID.
Asserted Identity	The identity of the user sending a SIP message as it was verified by authentication.
Charging Vector	A collection of charging information.
Preferred Identity	The identity the user sending the SIP message wishes to be used for the P-Asserted-Header field that the trusted element will insert.

Event Fields for Event 30 - GATEKEEPER INFORMATION

Field	Description
Participant Name	The name of the participant.
Participant ID	The identification number assigned to the participant by the MCU.
Gatekeeper Caller ID	The caller ID in the gatekeeper records. This value makes it possible to match the CDR in the gatekeeper and in the MCU.

Event fields for Event 31 - PARTICIPANT CONNECTION RATE

Field	Description
Participant Name	The participant name.
Participant ID	The identification number assigned to the participant by the MCU.
Participant Current Rate	The participant line rate in Kbps.

Event Fields for Event 32

Field	Description
IP V6	IPv6 address of the participant's endpoint.

Event fields for Event 33 - PARTY CHAIR UPDATE

Field	Description
Participant Name	The participant name.
Participant ID	The identification number assigned to the participant by the MCU.
Chairperson	Possible values: <ul style="list-style-type: none"> • True - participant is a chairperson • False - Participant is not a chairperson participant (is a standard participant)

Event fields for Event 34 - PARTICIPANT MAXIMUM USAGE INFORMATION

Field	Description
Participant Name	The name of the participant.
Participant ID	The identification number assigned to the participant by the MCU.
Maximum Bit Rate	The maximum bit rate used by the participant during the call.
Maximum Resolution	The maximum resolution used by the participant during the call. Note: The reported resolutions are: CIF, SD, HD720, and HD1080. Other resolutions are rounded up to the nearest resolution. For example, 2SIF is reported as SD resolution.
Maximum Frame Rate	The maximum frame rate used by the participant during the call.
Participant Address	Note: This field is only relevant to IP participants. For H.323 participants, the participant alias. The alias may contain up to 512 characters. For SIP participants, the participant address. The address may contain up to 80 characters.

Event Fields for Event 35 - SVC SIP PARTICIPANT CONNECTED

Field	Description
Participant Name	The name of the participant. An empty field "" denotes an unidentified participant or a participant whose name is unspecified
Participant ID	The identification number assigned to the participant by the MCU.

Event Fields for Event 35 - SVC SIP PARTICIPANT CONNECTED

Field	Description
Participant Status	The participant status, as follows: 0 - Idle 1 - Connected 2 - Disconnected 3 - Waiting for dial-in 4 - Connecting 5 - Disconnecting 6 - Partially connected. Party has completed H.221 capability exchange 7 - Deleted by a user 8 - Secondary. The participant could not connect the video channels and is connected via audio only 10 - Connected with problem 11 - Redialing
Receive line rate	Negotiated reception line rate
Transmit line rate	Negotiated transmission line rate
Uplink Video Capabilities	<ul style="list-style-type: none"> • Number of uplink streams • Video stream (multiple streams): <ul style="list-style-type: none"> ▲ Resolution width ▲ resolution height ▲ max frame rate ▲ max line rate
Audio Codec	SAC, Other
Secondary Cause	

Event Fields for Event 100 - USER TERMINATE CONFERENCE

Field	Description
Terminated By	The login name of the user who terminated the conference.

Event Fields for Events 102,103, 104 - USER DELETE PARTICIPANT, USER DISCONNECT PARTICIPANT, USER RECONNECT PARTICIPANT

Field	Description
User Name	The login name of the user who reconnected the participant to the conference, or disconnected or deleted the participant from the conference.

Event Fields for Events 102,103, 104 - USER DELETE PARTICIPANT, USER DISCONNECT PARTICIPANT, USER RECONNECT PARTICIPANT

Field	Description
Participant Name	The name of the participant reconnected to the conference, or disconnected or deleted from the conference.
Participant ID	The identification number assigned to the participant by the MCU.

Event Fields for Event 106 - USER SET END TIME

Field	Description
New End Time	The new conference end time set by the user, in GMT.
User Name	The login name of the user who changed the conference end time.

Event Fields for Events 107 and 109 - OPERATOR MOVE PARTY FROM CONFERENCE and OPERATOR ATTEND PARTY

Field	Description
Operator Name	The login name of the user who moved the participant.
Party Name	The name of the participant who was moved.
Party ID	The identification number of the participant who was moved, as assigned by the MCU.
Destination Conf Name	The name of the conference to which the participant was moved.
Destination Conf ID	The identification number of the conference to which the participant was moved.

Event Fields for Events 108, 112 - OPERATOR MOVE PARTY TO CONFERENCE, OPERATOR ATTEND PARTY TO CONFERENCE

Field	Description
Operator Name	The login name of the operator who moved the participant to the conference.
Source Conf Name	The name of the source conference.
Source Conf ID	The identification number of the source conference, as assigned by the MCU.
Party Name	The name of the participant who was moved.
Party ID	The identification number assigned to the participant by the MCU.
Connection Type	The connection type, as follows: 0 - Dial-out 5 - Dial-in

Event Fields for Events 108, 112 - OPERATOR MOVE PARTY TO CONFERENCE, OPERATOR ATTEND PARTY TO CONFERENCE

Field	Description
Bonding Mode	<p>Possible values are:</p> <p>0 - Bonding is disabled</p> <p>1 - Bonding is enabled</p> <p>255 - Auto</p> <p>Note: This field is only relevant to ISDN/PSTN participants.</p>
Number Of Channels	<p>The number of channels, as follows:</p> <p>255 - Auto</p> <p>Otherwise, in range of 1 - 30</p> <p>Note: This field is only relevant to ISDN/PSTN participants.</p>
Net Channel Width	<p>The bandwidth of each channel.</p> <p>This value is always 0, which represents a bandwidth of 1B, which is the only bandwidth that is currently supported.</p>
Net Service Name	<p>The name of the Network Service.</p> <p>An empty field "" indicates the default Network Service.</p>
Restrict	<p>Indicates whether or not the line is restricted, as follows:</p> <p>27 - Restricted line</p> <p>28 - Non restricted line</p> <p>255 - Unknown or not relevant</p>
Voice Mode	<p>Indicates whether or not the participant is an Audio Only participant, as follows:</p> <p>0 - The participant is <i>not</i> an Audio Only participant</p> <p>1 - The participant is an Audio Only participant</p> <p>255 - Unknown</p>
Number Type	<p>The type of telephone number, as follows:</p> <p>0 - Unknown</p> <p>1 - International</p> <p>2 - National</p> <p>3 - Network specific</p> <p>4 - Subscriber</p> <p>6 - Abbreviated</p> <p>255 - Taken from Network Service, default</p> <p>Note: This field is only relevant to dial-out, ISDN/PSTN participants.</p>
Net SubService Name	<p>The network sub-service name.</p> <p>An empty field "" means that MCU selects the default sub-service.</p> <p>Note: This field is only relevant to dial-out, ISDN/PSTN participants.</p>

Event Fields for Events 108, 112 - OPERATOR MOVE PARTY TO CONFERENCE, OPERATOR ATTEND PARTY TO CONFERENCE

Field	Description
Number of Party Phone Numbers	<p>The number of participant phone numbers.</p> <p>In a dial-in connection, the participant phone number is the CLI (Calling Line Identification) as identified by the MCU.</p> <p>In a dial-out connection, participant phone numbers are the phone numbers dialed by the MCU for each participant channel.</p> <p>Note: This field is only relevant to ISDN/PSTN participants.</p>
Number of MCU Phone Numbers	<p>The number of MCU phone numbers.</p> <p>In a dial-in connection, the MCU phone number is the number dialed by the participant to connect to the MCU.</p> <p>In a dial-out connection, the MCU phone number is the MCU (CLI) number as seen by the participant.</p> <p>Note: This field is only relevant to ISDN/PSTN participants.</p>
Party and MCU Phone Numbers	<p>The participant phone numbers are listed first, followed by the MCU phone numbers.</p> <p>Note: This field is only relevant to ISDN/PSTN participants.</p>
Ident. Method	<p>Note: This field is only relevant to dial-in participants.</p> <p>The method by which the destination conference is identified, as follows:</p> <ul style="list-style-type: none"> 0 - Password 1 - Called phone number, or IP address, or alias 2 - Calling phone number, or IP address, or alias
Meet Method	<p>Note: This field is only relevant to dial-in participants.</p> <p>The meet-me per method, as follows:</p> <ul style="list-style-type: none"> 1 - Meet-me per MCU-Conference 3 - Meet-me per participant 4 - Meet-me per channel
Net Interface Type	<p>The type of network interface between the participant and the MCU, as follows:</p> <ul style="list-style-type: none"> 0 - ISDN 2 - H.323 5 - SIP
H243 Password	<p>The H.243 password, or an empty field "" if there is no password.</p>
Chair	<p>Not supported.</p> <p>Always contains the value 0.</p>
Video Protocol	<p>The video protocol, as follows:</p> <ul style="list-style-type: none"> 1 - H.261 2 - H.263 3 - H.264* 4 - H.264 255 - Auto

Event Fields for Events 108, 112 - OPERATOR MOVE PARTY TO CONFERENCE, OPERATOR ATTEND PARTY TO CONFERENCE

Field	Description
Audio Volume	The broadcasting volume assigned to the participant. The value is between 1 (lowest) and 10 (loudest).
Undefined Type	The participant type, as follows: 0 - Defined participant. (The value in the formatted text file is "default".) 2 - Undefined participant. (The value in the formatted text file is "Unreserved participant".)
Node Type	The node type, as follows: 0 - MCU 1 - Terminal
Bonding Phone Number	Note: This field is only relevant to ISDN/PSTN participants. The phone number for Bonding dial-out calls.
Video Rate	Note: This field is only relevant to IP participants. The video rate in units of kilobits per second. A value of 4294967295 denotes auto, and in this case, the rate is computed by the MCU.
IP Address	Note: This field is only relevant to IP participants. The IP address of the participant. An address of 4294967295 indicates that no IP address was specified for the participant, and the gatekeeper is used for routing. In all other cases the address overrides the gatekeeper.
Call Signaling Port	Note: This field is only relevant to IP participants. The signaling port used for participant connection. A value of 65535 is ignored by MCU.
H.323 Party Alias Type/SIP Party Address Type	Note: This field is only relevant to IP participants. For H.323 participants, the alias type, as follows: 7 - E164 8 - H.323 ID 11 - URL ID alias type 12 - Transport ID 13 - Email ID 14 - Participant number For SIP participants, the address type, as follows: 1 - SIP URI 2 - Tel URL
H.323 Party Alias/SIP Party Address	Note: This field is only relevant to IP participants. For H.323 participants, the participant alias. The alias may contain up to 512 characters. For SIP participants, the participant address. The address may contain up to 80 characters.

Event Fields for Event 111 - OPERATOR BACK TO CONFERENCE PARTY

Field	Description
Operator Name	The login name of the operator moving the participant back to the conference.
Party Name	The name of the participant being moved.
Party ID	The identification number, as assigned by the MCU, of the participant being moved.

Event Fields for Events 2011, 2012, and 2016

Field	Description
IP V6	IPv6 address of the participant's endpoint.

Event Fields for Event 3010 - PARTICIPANT INFORMATION

Field	Description
Info1	The participant information fields.
Info2	These fields enable users to enter general information about the participant, such as the participant's e-mail address.
Info3	
Info4	The maximum length of each field is 80 characters.
VIP	Not supported. Always contains the value 0.

Disconnection Cause Values



For an explanation of the disconnection causes, see [Appendix A - Disconnection Causes](#).

Disconnection Cause Values

Value	Call Disconnection Cause
0	Unknown
1	Participant hung up
2	Disconnected by User
5	Resources deficiency
6	Password failure

Disconnection Cause Values

Value	Call Disconnection Cause
20	H323 call close. No port left for audio
21	H323 call close. No port left for video
22	H323 call close. No port left for FECC
23	H323 call close. No control port left
25	H323 call close. No port left for video content
51	A common key exchange algorithm could not be established between the MCU and the remote device
53	Remote device did not open the encryption signaling channel
59	The remote devices' selected encryption algorithm does not match the local selected encryption algorithm
141	Called party not registered
145	Caller not registered
152	H323 call close. ARQ timeout
153	H323 call close. DRQ timeout
154	H323 call close. Alt Gatekeeper failure
191	H323 call close. Remote busy
192	H323 call close. Normal
193	H323 call close. Remote reject
194	H323 call close. Remote unreachable
195	H323 call close. Unknown reason
198	H323 call close. Small bandwidth
199	H323 call close. Gatekeeper failure
200	H323 call close. Gatekeeper reject ARQ
201	H323 call close. No port left
202	H323 call close. Gatekeeper DRQ
203	H323 call close. No destination IP value
204	H323 call close. Remote has not sent capability
205	H323 call close. Audio channels not open
207	H323 call close. Bad remote cap
208	H323 call close. Capabilities not accepted by remote
209	H323 failure

Disconnection Cause Values

Value	Call Disconnection Cause
210	H323 call close. Remote stop responding
213	H323 call close. Master slave problem
251	SIP timer popped out
252	SIP card rejected channels
253	SIP capabilities don't match
254	SIP remote closed call
255	SIP remote cancelled call
256	SIP bad status
257	SIP remote stopped responding
258	SIP remote unreachable
259	SIP transport error
260	SIP bad name
261	SIP trans error TCP invite
300	SIP redirection 300
301	SIP moved permanently
302	SIP moved temporarily
305	SIP redirection 305
380	SIP redirection 380
400	SIP client error 400
401	SIP unauthorized
402	SIP client error 402
403	SIP forbidden
404	SIP not found
405	SIP client error 405
406	SIP client error 406
407	SIP client error 407
408	SIP request timeout
409	SIP client error 409
410	SIP gone

Disconnection Cause Values

Value	Call Disconnection Cause
411	SIP client error 411
413	SIP client error 413
414	SIP client error 414
415	SIP unsupported media type
420	SIP client error 420
480	SIP temporarily not available
481	SIP client error 481
482	SIP client error 482
483	SIP client error 483
484	SIP client error 484
485	SIP client error 485
486	SIP busy here
487	SIP request terminated
488	SIP client error 488
500	SIP server error 500
501	SIP server error 501
502	SIP server error 502
503	SIP server error 503
504	SIP server error 504
505	SIP server error 505
600	SIP busy everywhere
603	SIP global failure 603
604	SIP global failure 604
606	SIP global failure 606

Appendix D - Ad Hoc Conferencing and External Database Authentication

The RealPresence Collaboration Server (RMX) 1800/2000/4000 Ad Hoc conferencing feature enables participants to start ongoing conferences on-the-fly, without prior definition when dialing an Ad Hoc-enabled Entry Queue. The created conference parameters are taken from the Profile assigned to the Ad Hoc-enabled Entry Queue.



External Database Authentication is not supported in the RealPresence Collaboration Server 1800.

Ad Hoc conferencing is available in two the following modes:

- **Ad Hoc Conferencing without Authentication**
Any participant can dial into an Entry Queue and initiate a new conference if the conference does not exist. This mode is usually used for the organization's internal Ad Hoc conferencing.
- **Ad Hoc Conferencing with External Database Authentication**
In this mode, the participant's right to start a new conference is validated against a database.

The external database application can also be used to validate the participant's right to join an ongoing conference. Conference access authentication can be:

- Part of the Ad Hoc conferencing flow where the participants must be authorized before they can enter the conference created in the Ad Hoc flow.
- Independent of Ad Hoc conferencing where conference access is validated for all conferences running on the MCU regardless of the method in which the conference was started.


Ad Hoc Conferencing without Authentication

A participant dials in to an Ad Hoc-enabled Entry Queue and starts a new conference based on the Profile assigned to the Entry Queue. In this configuration, any participant connecting to the Entry Queue can start a new conference, and no security mechanism is applied. This mode is usually used in organizations where Ad Hoc conferences are started from within the network and without security breach.

A conference is started using one of the following method:

- 1 The participant dials in to the Ad Hoc-enabled Entry Queue.
- 2 The Conference ID is requested by the system.
- 3 The participant inputs a Conference ID via his/her endpoint remote control using DTMF codes.
- 4 The MCU checks whether a conference with the same Conference ID is running on the MCU. If there is such a conference, the participant is moved to that conference. If there is no ongoing conference with that Conference ID, the system creates a new conference, based on the Profile assigned to the Entry Queue, and connects this participant as the conference chairperson.

Ad Hoc Conference Initiation without Authentication

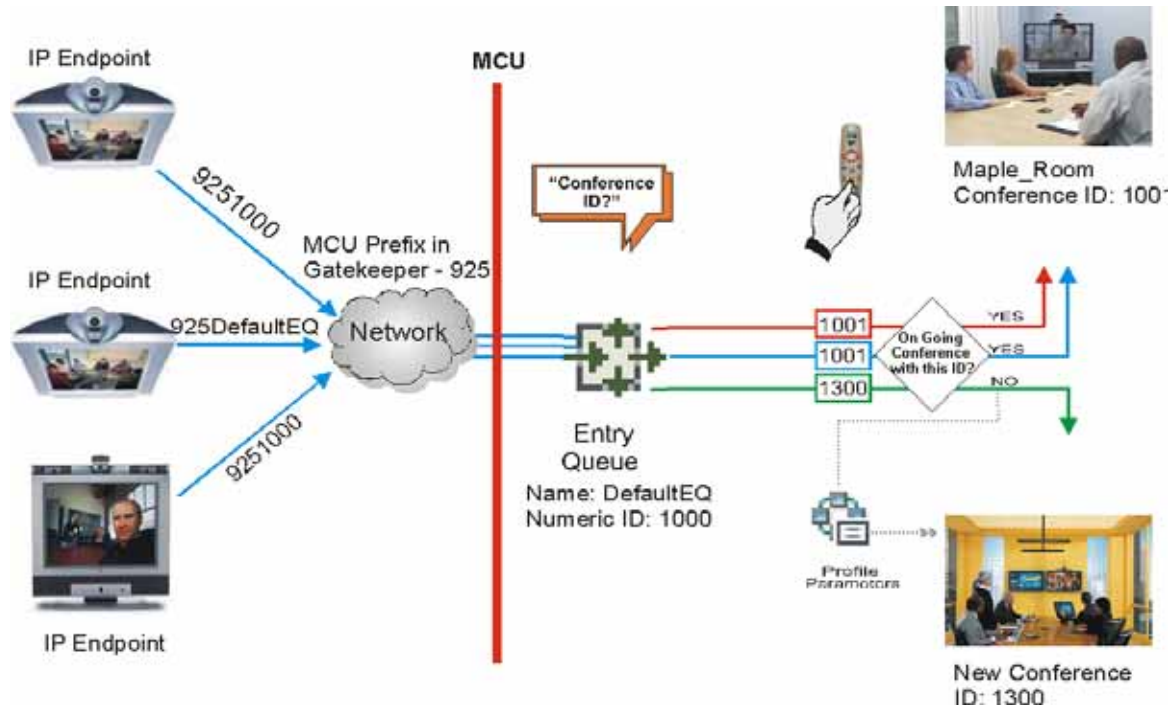

To enable this workflow, the following components must be defined in the system:

- An Entry Queue IVR Service with the appropriate audio file requesting the Conference ID
- An Ad Hoc-enabled Entry Queue with an assigned Profile

Ad Hoc Conferencing with Authentication


The MCU can work with an external database application to validate the participant's right to start a new conference. The external database contains a list of participants, with their assigned parameters. The conference ID entered by the participant is compared against the database. If the system finds a match, the participant is granted the permission to start a new conference.

To work with an external database application to validate the participant's right to start a new conference, the Entry Queue IVR Service must be configured to use the external database application for authentication. In the external database application, you must define all participants (users) with rights to start a new conference using Ad Hoc conferencing. For each user defined in the database, you enter the conference ID, Conference Password (optional) and Chairperson Password (when applicable), billing code, Conference general information (corresponding to the User Defined 1 field in the Profile properties) and user's PIN code. The same user definitions can be used for conference access authentication, that is, to determine who can join the conference as a participant and who as a chairperson.

Entry Queue Level - Conference Initiation Validation with an External Database Application

Starting a new conference with external database application validation entails the following steps:

Conference Initiation Validation with External Database Application

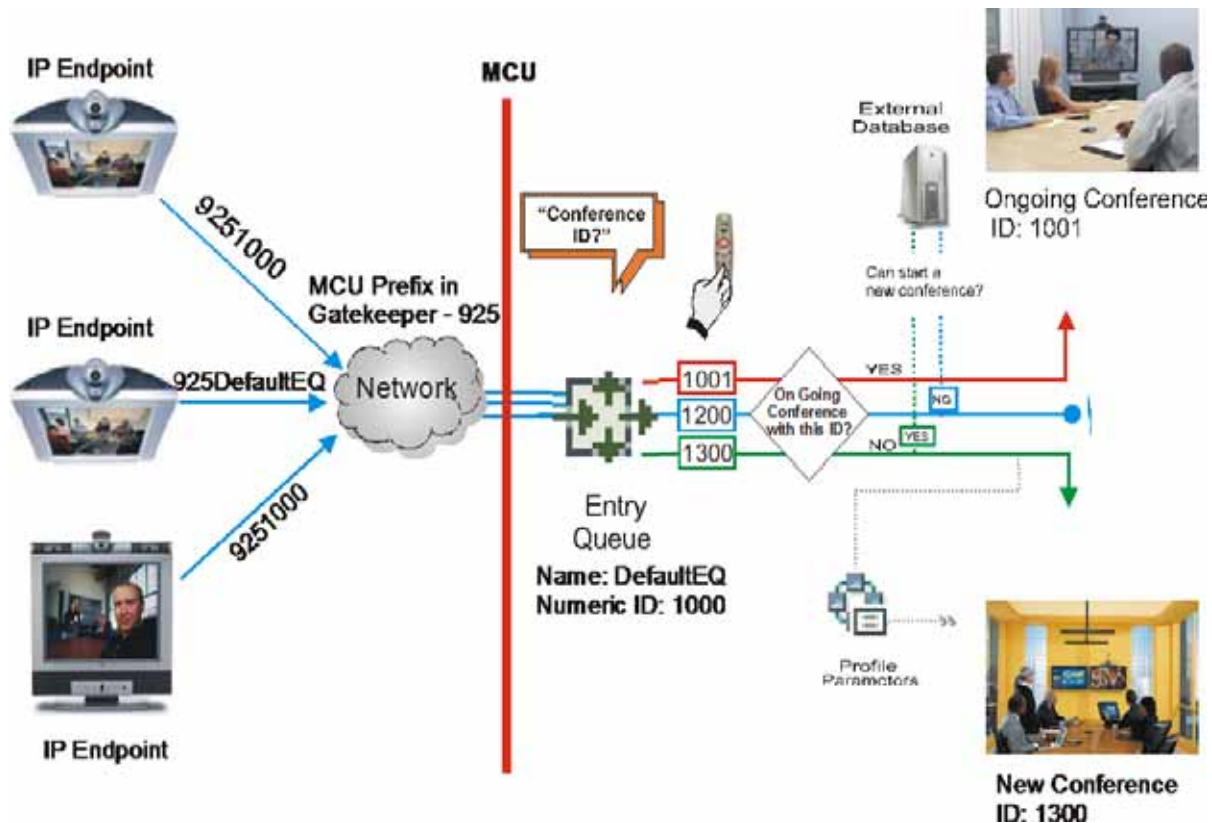

- The participant dials in to an Ad Hoc-enabled Entry Queue.
- The participant is requested to enter the Conference ID.
- The participant enters the conference ID via his/her endpoint remote control using DTMF codes. If there is an ongoing conference with this Conference ID, the participant is moved to that conference where another authentication process can occur, depending on the IVR Service configuration.
- If there is no ongoing conference with that Conference ID, the MCU verifies the Conference ID with the database application that compares it against its database. If the database application finds a match, the external database application sends a response back to the MCU, granting the participant the right to start a new ongoing conference.
- If this Conference ID is not registered in the database, the conference cannot be started and this participant is disconnected from the Entry Queue.
- The external database contains a list of participants (users), with their assigned parameters. Once a participant is identified in the database (according to the conference ID), his/her parameters (as defined in the database) can be sent to the MCU in the same response granting the participant the right to start a new ongoing conference. These parameters are:

- Conference Name
- Conference Billing code
- Conference Password
- Chairperson Password
- Conference Information, such as the contact person name. These fields correspond to Info 1, 2 and 3 fields in the Conference Properties - Information dialog box.
- Maximum number of participants allowed for the conference
- Conference Owner

These parameters can also be defined in the conference Profile. In such a case, parameters sent from the database overwrite the parameters defined in the Profile. If these parameters are not sent from the external database to the MCU, they will be taken from the Profile.

- 1 A new conference is started based on the Profile assigned to the Entry Queue.
- 2 The participant is moved to the conference.

If no password request is configured in the Conference IVR Service assigned to the conference, the participant that initiated the conference is directly connected to the conference, as its chairperson.

If the Conference IVR Service assigned to the conference is configured to prompt for the conference password and chairperson password, without external database authentication, the participant has to enter these passwords in order to join the conference.

To enable this workflow, the following components must be defined in the system:

- A Conference IVR Service with the appropriate prompts. If conference access is also validated with the external database application it must be configured to access the external database for authentication.
- An Entry Queue IVR Service configured with the appropriate audio prompts requesting the Conference ID and configured to access the external database for authentication.
- Create a Profile with the appropriate conference parameters and the appropriate Conference IVR Service assigned to it.
- An Ad Hoc-enabled Entry Queue with the appropriate Entry Queue IVR Service and Conference Profile assigned to it.
- An external database application with a database containing Conference IDs associated with participants and their relevant properties.
- Define the flags required to access the external database in System Configuration.

For more information, see [MCU Configuration to Communicate with an External Database Application](#).

Conference Access with External Database Authentication

The MCU can work with an external database application to validate the participant's right to join an existing conference. The external database contains a list of participants, with their assigned parameters. The conference password or chairperson password entered by the participant is compared against the database. If the system finds a match, the participant is granted the permission to access the conference.

To work with an external database application to validate the participant's right to join the conference, the Conference IVR Service must be configured to use the external database application for authentication.

Conference access authentication can be performed as:


- Part of the Ad Hoc conferencing flow where the participants must be authorized before they can enter the conference created in the Ad Hoc flow
- Independent of Ad Hoc conferencing where conference access is validated for all conferences running on the MCU regardless of the method in which the conference was started.

Conference access authentication can be implemented for all participants joining the conference or for chairpersons only.

Conference Access Validation - All Participants (Always)

Once the conference is created either via an Ad Hoc Entry Queue, or a standard ongoing conference, the right to join the conference is authenticated with the external database application for all participants connecting to the conference.

Conference Access - Conference Password validation with External Database Application

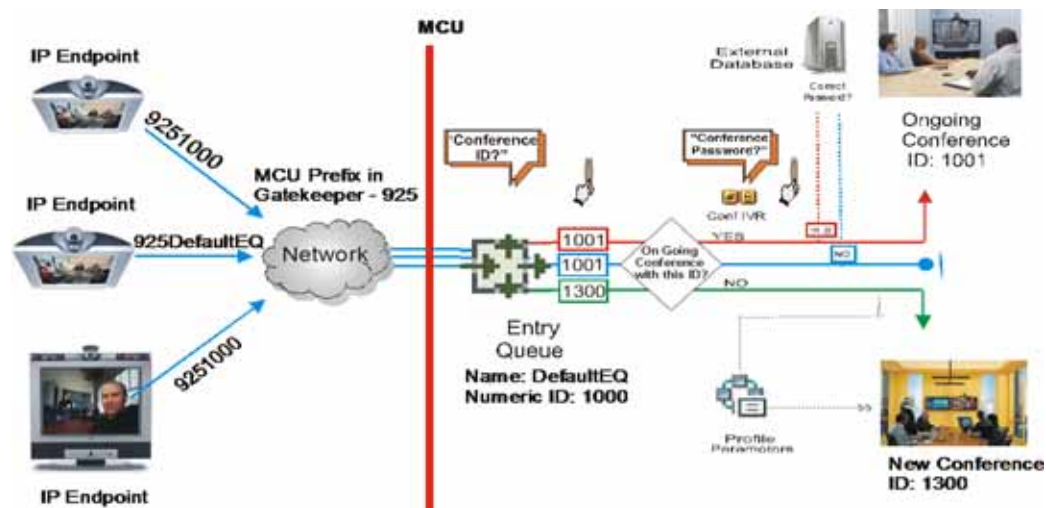

Joining the conference entails the following steps:

- When the conference is started (either in the Ad Hoc flow or in the standard method), all participants connecting to the conference are moved to the Conference IVR queue where they are prompted for the conference password.
- When the participant enters the conference password or his/her personal password, it is sent to the external database application for validation.
- If there is a match, the participant is granted the right to join the conference. In addition, the external database application sends to the MCU the following parameters:
 - Participant name (display name)
 - Whether or not the participant is the conference chairperson
 - Participant Information, such as the participant E-mail. These fields correspond to Info 1, 2, 3 and 4 fields in the Participant Properties - Information dialog box.

If there is no match (i.e. the conference or personal password are not defined in the database), the request to access the conference is rejected and the participant is disconnected from the MCU.

- If the Conference IVR Service is configured to prompt for the chairperson identifier and password, the participant is requested to enter the chairperson identifier.
If no identifier is entered, the participant connects as a standard, undefined participant.
- If the chairperson identifier is entered, the participant is requested to enter the chairperson password. In this flow, the chairperson password is **not** validated with the external database application, only with the MCU.
 - If the correct chairperson password is entered, the participant is connected to the conference as its chairperson.
 - If the wrong password is entered, he/she is disconnected from the conference.


To enable conference access validation for all participants the following conferencing components are required:

- The external database must hold the conference password or the participant personal password/PIN code or the participant's Alias.
- The Conference IVR Service assigned to the conference (defined in the Profile) must be configured to authenticate the participant's right to access the conference with the external database application for all requests. In addition it must be configured to prompt for the Conference Password.

Conference Access Validation - Chairperson Only (Upon Request)

An alternative validation method at the conference level is checking only the chairperson password with the external database application. All other participants can be checked only with the MCU (if the Conference IVR Service is configured to prompt for the conference password) or not checked at all (if the Conference IVR Service is configured to prompt only for the chairperson password).

Conference Access - Chairperson Password validation with external database application

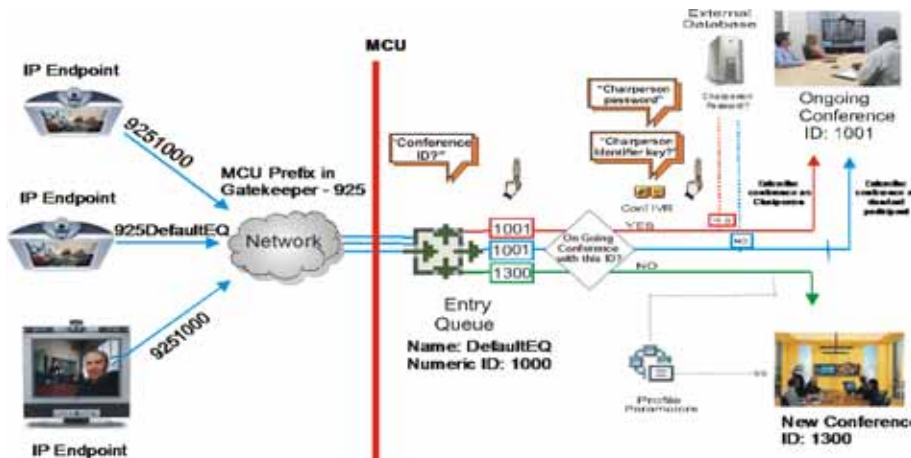

Joining the conference entails the following steps:

- When the conference is started (either in the Ad Hoc flow or in the standard method), all participants connecting to the conference are moved to the conference IVR queue where they are prompted for the conference password.

- If the Conference IVR Service is configured to prompt for the Conference password, the participant is requested to enter the conference password. In this flow, the conference password is **not** validated with the external database application, only with the MCU.
 - If the wrong password is entered, he/she is disconnected from the conference.
- If the correct conference password is entered, the participant is prompted to enter the chairperson identifier key.
 - If no identifier is entered, the participant is connected to the conference as a standard participant.
- If the chairperson identifier is entered, the participant is prompted to enter the chairperson password.
- When the participant enters the chairperson password or his/her personal password, it is sent to the external database application for validation.
 - If the password is incorrect the participant is disconnected from the MCU.
- If there is a match, the participant is granted the right to join the conference as chairperson. In addition, the external database application sends to the MCU the following parameters:
 - Participant name (display name)
 - Participant Information, such as the participant E-mail. These fields correspond to Info 1, 2, 3 and 4 fields in the Participant Properties - Information dialog box.

To enable conference access validation for all participants, the following conferencing components are required:

- The external database must hold the Chairperson Password or the participant's Alias.
- The Conference IVR Service assigned to the conference (defined in the Profile) must be configured to check the external database for the Chairperson password only when the participant enters the chairperson identifier key (either pound or star). In addition, it must be configured to prompt for the chairperson identifier key and password.

System Settings for Ad Hoc Conferencing and External Database Authentication

Ad Hoc Settings

Before a participant can initiate an Ad Hoc conference (with or without authentication), the following components must be defined:

- Profiles

Defines the conference parameters for the conferences that will be initiated from the Ad Hoc-enabled Entry Queue. For more details, see [Defining AVC-Based Conference Profiles](#) and [Defining SVC and Mixed CP and SVC Conference Profiles](#).
- Entry Queue IVR Service with Conference ID Request Enabled

The Entry Queue Service is used to route participants to their destination conferences, or create a new conference with this ID. For details, see [IVR Services](#).

In Ad Hoc conferencing, the Conference ID is used to check whether the destination conference is already running on the MCU and if not, to start a new conference using this ID.

- Ad Hoc - enabled Entry Queue

Ad Hoc conferencing must be enabled in the Entry Queue and a Profile must be assigned to the Entry Queue. In addition, an Entry Queue IVR Service supporting conference ID request. For details, see [Entry Queues](#).

Authentication Settings

- MCU Configuration

Usage of an external database application for authentication (for starting new conferences or joining ongoing conferences) is configured for the MCU in the System Configuration. For details, see [System Settings for Ad Hoc Conferencing and External Database Authentication](#).

- Entry Queue IVR Service with Conference Initiation Authentication Enabled

Set the Entry Queue IVR Service to send authentication requests to the external database application to verify the participant's right to start a new conference according to the Conference ID entered by the participant. For details, see [Enabling External Database Validation for Starting New Ongoing Conferences](#).

- Conference IVR Service with Conference Access Authentication Enabled

Set the Conference IVR Service to send authentication requests to the external database application to verify the participant's right to connect to the conference as a standard participant or as a chairperson. For details, see [Enabling External Database Validation for Conferences Access](#).

- External Database Application Settings

The external database contains a list of participants (users), with their assigned parameters. These parameters are:


- Conference Name
- Conference Billing code
- Conference Password
- Chairperson Password
- Conference Information, such as the contact person name. These fields correspond to Info 1, 2 and 3 fields in the Conference Properties - Information dialog box.
- Maximum number of participants allowed for the conference
- Conference Owner
- Participant name (display name)
- Participant Information, such as the participant E-mail. These fields correspond to Info 1, 2, 3 and 4 fields in the Participant Properties - Information dialog box.

MCU Configuration to Communicate with an External Database Application

To enable the communication with the external database application, several flags must be set in the System Configuration.

To set the System Configuration flags:

- 1 On the **Setup** menu, click **System Configuration**.
The **System Flags** dialog box opens.

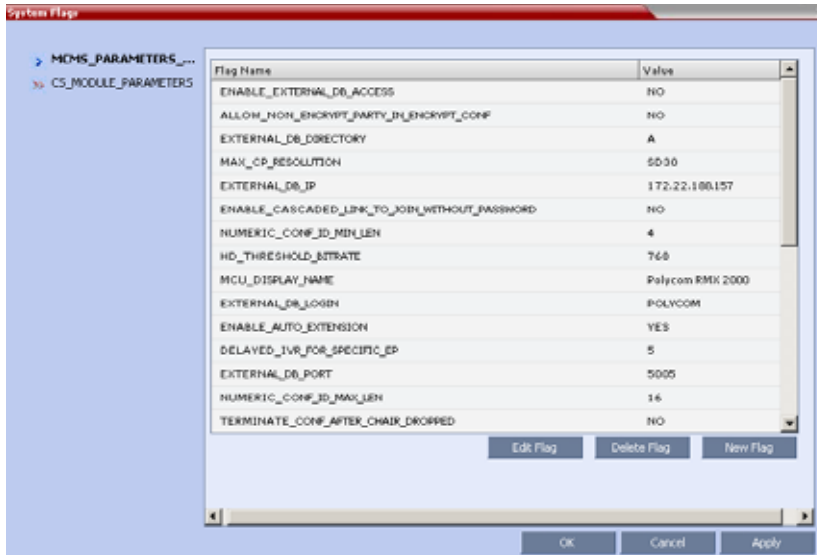

- 2 Modify the values of the following flags:

Flag Values for Accessing External Database Application

Flag	Description and Value
ENABLE_EXTERNAL_DB_ACCESS	The flag that enables the use of the external database application.
EXTERNAL_DB_IP	The IP address of the external database application server. default IP: 0.0.0.0.
EXTERNAL_DB_PORT	The port number used by the MCU to access the external application server. Default Port = 80.
EXTERNAL_DB_LOGIN	The user name defined in the external database application for the MCU.
EXTERNAL_DB_PASSWORD	The password associated with the user name defined for the MCU in the external database application.
EXTERNAL_DB_DIRECTORY	The URL of the external database application.

- 3 Click **OK**.
- 4 Reset the MCU for flag changes to take effect.

Enabling External Database Validation for Starting New Ongoing Conferences

The validation of the participant’s right to start a new conference with an external database application is configured in the Entry Queue IVR Service - Global dialog box.

- » Set the **External Server Authentication** field to **Numeric ID**.


The screenshot shows a window titled "New Entry Queue IVR Service". On the left is a navigation tree with "Global" selected. The main area contains several fields: "Entry Queue IVR Service Name" (text box), "Language" (dropdown menu set to "English"), "External Server Authentication" (dropdown menu highlighted with a blue box and set to "Numeric ID"), "Number of User Input Retries" (text box set to "3"), "Timeout for User Input (Sec)" (text box set to "6"), and "DTMF Delimiter" (dropdown menu set to "#"). "OK" and "Cancel" buttons are at the bottom right.

Enabling External Database Validation for Conferences Access

The validation of the participant's right to join an ongoing conference with an external database application is configured in the Conference IVR Service - Global dialog box.

You can set the system to validate all the participants joining the conference or just the chairperson.

- Set the **External Server Authentication** field to:
 - **Always** - To validate the participant's right to join an ongoing conference for all participants
 - **Upon Request** - To validate the participant's right to join an ongoing conference as chairperson

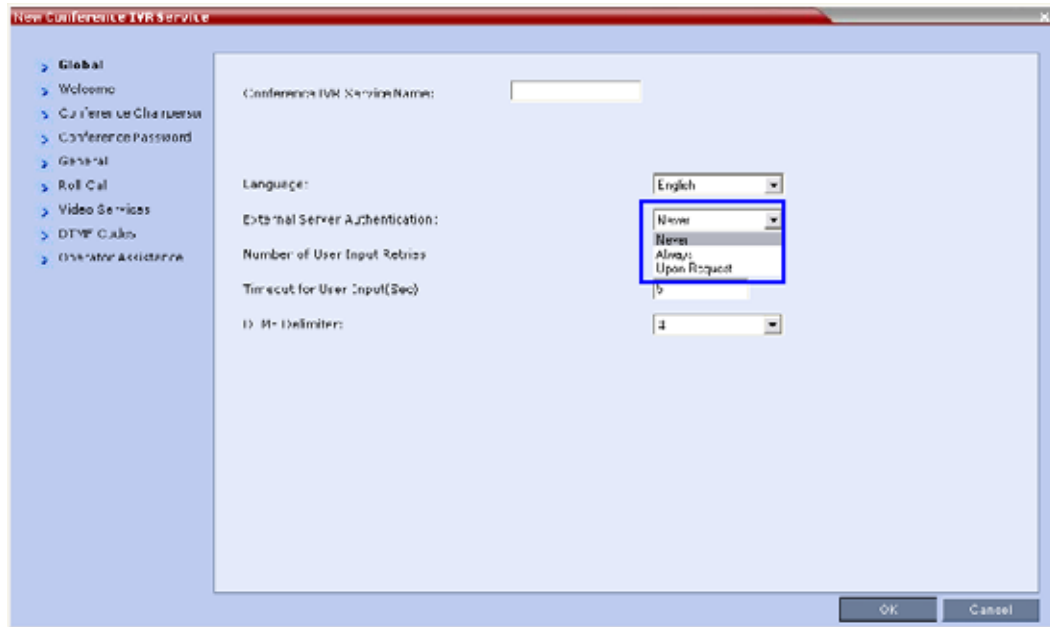

Appendix E - Participant Properties

Advanced Channel Information

The following appendix details the properties connected with information about audio and video parameters, as well as, problems with the network which can affect the audio and video quality.

Participant Properties - Channel Status Advanced Parameters

Field	Description
Media Info	
Algorithm	Indicates the audio or video algorithm and protocol.
Frame per packet (audio only)	The number of audio frames per packet that are transferred between the MCU and the endpoint. If the actual Frame per Packets are higher than Frame per Packets declared during the capabilities exchange, a Faulty flag is displayed.
Resolution (video only)	Indicates the video resolution in use. If the actual resolution is higher than resolution declared in the capabilities exchange, the Faulty flag is displayed. For example, if the declared resolution is CIF and the actual resolution is 4CIF, the Faulty flag is displayed.
Frame Rate (video only)	The number of video frames per second that are transferred between the MCU and the endpoint.
Annexes (video only)	Indicates the H.263 annexes in use at the time of the last RTCP report. If the actual annexes used are other than the declared annexes in the capabilities exchange, the Faulty flag is displayed.
Channel Index	For Polycom Internal use only.
RTP Statistics	
Actual loss	<p>The number of missing packets counted by the IP card as reported in the last RTP Statistics report. If a packet that was considered lost arrives later, it is deducted from the packet loss count. Packet loss is displayed with the following details:</p> <ul style="list-style-type: none"> • Accumulated N - number of lost packets accumulated since the channel opened. • Accumulated % - percentage of lost packets out of the total number of packets transmitted since the channel opened. • Interval N - number of packets lost in the last RTP report interval (default interval is 5 minutes). • Interval % - percentage of lost packets out of the total number of packets transmitted in the last RTP report interval (default interval is 5 minutes). • Peak - the highest number of lost packets in a report interval from the beginning of the channel's life span.

Participant Properties - Channel Status Advanced Parameters

Field	Description
Out of Order	<p>The number of packets arriving out of order. The following details are displayed:</p> <ul style="list-style-type: none"> • Accumulated N - total number of packets that arrived out of order since the channel opened. • Accumulated % - percentage of packets that arrived out of order out of the total number of packets transmitted since the channel opened. • Interval N - number of packets that arrived out of order in the last RTP report interval (default interval is 5 minutes). • Interval % - percentage of packets that arrived out of order out of the total number of packets transmitted in the last RTP report interval (default interval is 5 minutes). • Peak - the highest number of packets that arrived out of order in a report interval from the beginning of the channel's life span.
Fragmented	<p>Indicates the number of packets that arrived to the IP card fragmented (i.e., a single packet broken by the network into multiple packets). This value can indicate the delay and reordering of fragmented packets that require additional processing, but is not considered a fault.</p> <p>The Fragmented information is displayed with the following details:</p> <ul style="list-style-type: none"> • Accumulated N - total number of packets that were fragmented since the channel opened. • Accumulated % - percentage of fragmented packets out of the total number of packets transmitted since the channel opened. • Interval N - number of fragmented packets received in the last RTP report interval (default interval is 5 minutes). • Interval % - percentage of fragmented packets out of the total number of packets transmitted in the last RTP report interval (default interval is 5 minutes). • Peak - the highest number of fragmented packets in a report interval from the beginning of the channel's life span.

Appendix F - Secure Communication Mode

The RealPresence Collaboration Server can be configured to work in Secure Mode or Ultra Secure Mode. For more information see [Ultra Secure Mode](#) and [Flags Specific to Maximum Security Environments - Ultra Secure Mode](#).

In Secured mode the Collaboration Server and the Collaboration Server Web Client are configured to work with SSL/TLS.

In this mode, a SSL/TLS Certificate is installed on the MCU, setting the MCU Listening Port to secured port 443.

TLS is a cryptographic protocol used to ensure secure communications on public networks. TLS uses a Certificate purchased from a trusted third party Certificate Authority to authenticate public keys that are used in conjunction with private keys to ensure secure communications across the network.

The Collaboration Server supports:

- TLS 1.0
- SSL 3.0 (Secure Socket Layer)

SSL 3.0 utilizes 1024-bit RSA public key encryption.

TLS certificates can be generated using the following methods: CSR, PFX and PEM; each giving different options for Encryption Key length. The table below lists the SIP TLS Encryption Key length support for the various system components.

SIP TLS - Encryption Key Support by System Component

System Component	Key Generation Method	Key Length (bits)	Key generated by
SIP Signaling	CSR	2048	Collaboration Server
	PFX / PEM	1024 or 2048	User
Management LDAP	CSR	2048	Collaboration Server

Certificate Configuration and Management

All Polycom devices used in a Maximum Security Environment require security certificates.

For more details see the Ultra Secure Mode chapter, [Certificate Management](#).

Certificate Template Requirements

The specific security certificate requirements for Collaboration Servers used in Maximum Security Environments are:

- Support of 2048-bit encryption keys.

- Support of Extended Key Usage (EKU) for both:
 - Client Authentication
 - Server Authentication

The certificate template used by your CA server may need modification to meet the Collaboration Server requirements.

Certificate Requirements

Secure Mode

In Secure Mode, the certificate requirements depend on the Skip certificate validation for user logging session field.

Ultra Secure Mode

In Ultra Secure Mode, each Polycom device must have security certificates for the entire Chain Of Trust.

The Collaboration Server must have:

- The public certificate of each server in the CA Chain or hierarchy that issued its certificate.
For example: RootCA > IntermediateCA > SubCA
- The public certificates of the chain that issued the administrator's identity certificate.
For example: UserRootCA > UserIntermediateCA > UserSubCA

For more information see Ultra Secure Mode chapter, [Certificate Validation](#) and [Certificate Revocation](#).

Configure Certificate Management

Within a PKI environment, certificate revocation policies are used to ensure that certificates are valid. Certificates can expire or be revoked for various reasons (RFC 5280).

The Collaboration Server enforces these certificate revocation policies through Certificate Revocation Lists (CRLs). CRLs are required for each CA Chain in use by the Collaboration Server. These CRL files must be kept current. For more information see the Ultra Secure Mode chapter, [Certificate Configuration and Management](#) and [\(PKI\) Public Key Infrastructure](#).

Switching to Secure Mode

The following operations are required to switch the Collaboration Server to Secure Mode:

- Purchase and Install the SSL/TLS certificate
- Modify the Management Network settings
- Create/Modify the relevant System Flags

Purchasing and Installing a Certificate

Once a certificate is purchased and received it is stored in the Collaboration Server and used for all subsequent secured connections. For more information see the Ultra Secure Mode chapter, [Adding Certificates to the Certificate Repository](#).



Certificates are deleted when an administrator performs a Restore Factory Defaults with the Comprehensive Restore option selected.

Creating/Modifying System Flags

The following System Flags in system.cfg control secure communications.

- RMX_MANAGEMENT_SECURITY_PROTOCOL
- EXTERNAL_DB_PORT

The table below lists both flags and their settings.

If the System Flag, RMX_MANAGEMENT_SECURITY_PROTOCOL does not exist in the system, it must be created by using the Setup menu.

For more information see [Modifying System Flags](#).

System Flags

Flag	Description
RMX_MANAGEMENT_SECURITY_PROTOCOL	Enter the protocol to be used for secure communications. Default: TLSV1_SSLV3 (both). Default for U.S. Federal licenses: TLSV1.
EXTERNAL_DB_PORT	The external database server port used by the Collaboration Server to send and receive XML requests/responses. For secure communications set the value to 443. Default: 5005.

The Collaboration Server must be restarted for modified flag settings to take effect.

Enabling Secure Communication Mode

After the SSL/TLS Certificate is installed, secure communications are enabled by modifying the properties of the Management Network in the Management Network properties dialog box.

When Secure Communications Mode is enabled:


- Only `https://` commands from the browser to the Control Unit IP Address of the Collaboration Server are accepted.
- The Collaboration Server listens only on secured port 443.
- All connection attempts on port 80 are rejected.
- A secure communication indicator is displayed in the browser's status bar.

To enable secure communications mode:

- 1 In the **Collaboration Server Management** pane, click **IP Network Services**.
- 2 In the **IP Network Services** list pane, double-click the **Management Network** entry.

3 Click the **Security** tab.

The **Management Security Properties** dialog box is displayed.

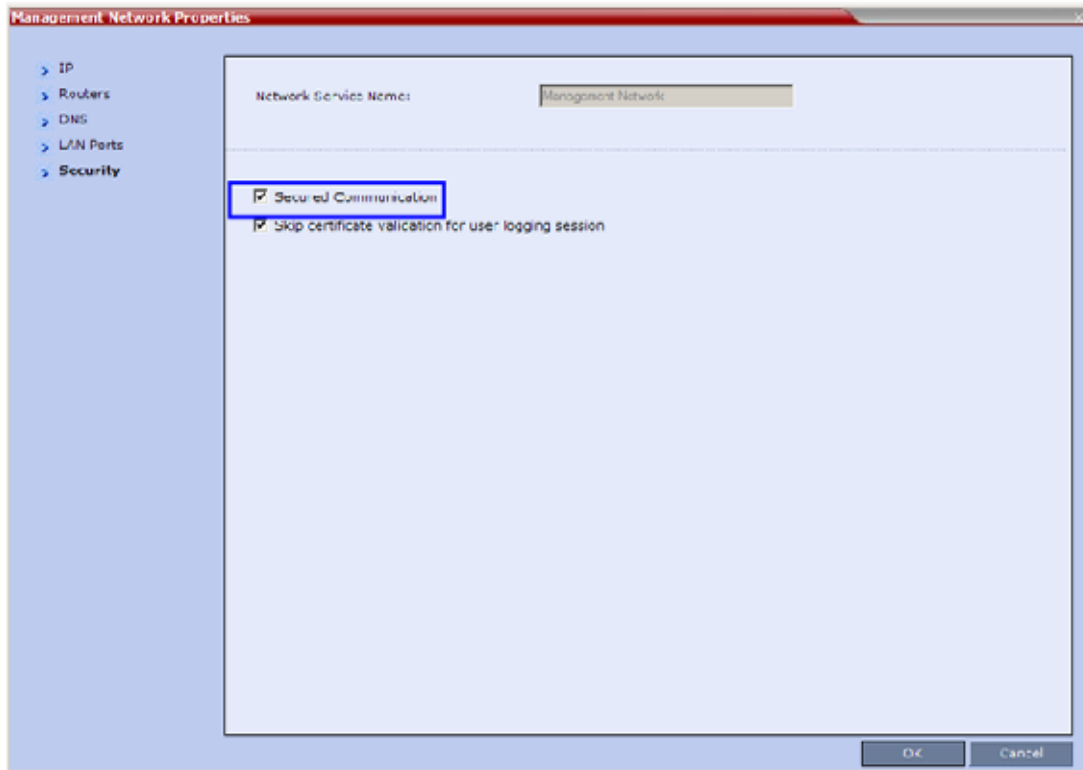

4 Select the **Secured Communication** check box. This box is checked by default when the MCU is in **Ultra Secure Mode**.

5 Select the **Certificate Validation** mode by checking or clearing the **Skip certificate validation for user logging session** field as set out in the following table:

Management Network Properties - Certificate Validation Mode

Field: Skip certificate validation for user logging session	
Status	RMX and Client Certificate Requirements
Un-checked (Restricted Mode)	<ul style="list-style-type: none"> The RMX must install a personal certificate issued by a CA. The Client must install a personal certificate issued by a CA. The public key of the CA must be installed in the RMX. <p>Note: When the RMX Manager is the Client, all Personal Certificates in the workstation's Certification Repository are sent to the RMX. When using the RMX Web Client, Internet Explorer gives the user the option to select the Personal Certificate to be used from the workstation's Certification Repository.</p>
Checked (Un-restricted Mode)	<ul style="list-style-type: none"> The RMX must install a personal certificate issued by a CA. No additional configuration is required for the Client.

6 Click **OK**.

Alternate Management Network

The Alternate Management Network enables direct access to the Collaboration Server for support purposes. Access to the Alternate Management Network is via a cable connected to a workstation. The Alternate Management Network is accessible only via the dedicated LAN 3 port.

For more information see:

- [Appendix G - Configuring Direct Connections to the Collaboration Server](#)
- [Connect to the Alternate Management Network \(2000/4000\)](#)



Connection to the Alternate Management Network bypasses LAN and Firewall security. Strict control of access to LAN 3 port is recommended.

Restoring Defaults

For details see [Appendix J - Restore Defaults](#).

Appendix G - Configuring Direct Connections to the Collaboration Server

Direct connection to the Collaboration Server is necessary if you want to:

- Modify the Collaboration Server's Factory Default Management Network settings without using the USB memory stick.
- Connect to the Collaboration Server's Alternate Management Network for support purposes.
- Connect to the Collaboration Server via a modem.



Note: Ultra Secure Mode

Direct connections to the Collaboration Server are not supported when the Collaboration Server is in Ultra Secure Mode. For more information see [Ultra Secure Mode](#).

Management Network (Primary)

If you do not want to use the USB memory stick method of modifying the Collaboration Server's Management Network parameters, it is necessary to establish a direct connection between a workstation and the Collaboration Server.

Alternate Management Network (2000/4000)

The Alternate Management Network enables direct access to the Collaboration Server (RMX) 2000/4000 for support purposes.

While being separate from all other networks, it has identical functionality to the Management Network.

Support personnel can log in and use it to manage the Collaboration Server if a connection to the Management Network cannot be made or if internet access to the host network is blocked by LAN security or a firewall.

The Alternate Management Network cannot be configured and operates according to factory defaults.

The administrator's Login name, Password, viewing and system permissions on the Alternate Management Network are the same as those on the Management Network.

Once logged in, the RP Collaboration Server Web Client behaves as if the administrator had logged in on the Management Network.



Note: Security

- Connection to the Alternate Management Network bypasses LAN and Firewall security. Strict control of access to LAN 3 port is recommended.
- The Alternate Management Network is only available if Network Separation has not been performed. For more information, see [Multiple Network Services](#).

Configure the Workstation


The following procedures show how to modify the workstation's networking parameters using the Windows New Connection Wizard.

For non-Windows operating systems an equivalent procedure must be performed by the system administrator.


Before connecting directly, you must modify the IP Address, Subnet Mask and Default Gateway settings of the workstation to be compatible with either the Collaboration Server's Default Management Network or Alternate Management Network.

To modify the workstation's IP addresses:


- 1 On the Windows **Start** menu, select **Settings > Network Connections**.
- 2 In the **Network Connections** window, double-click the **Local Area Connection** that has Connected status.

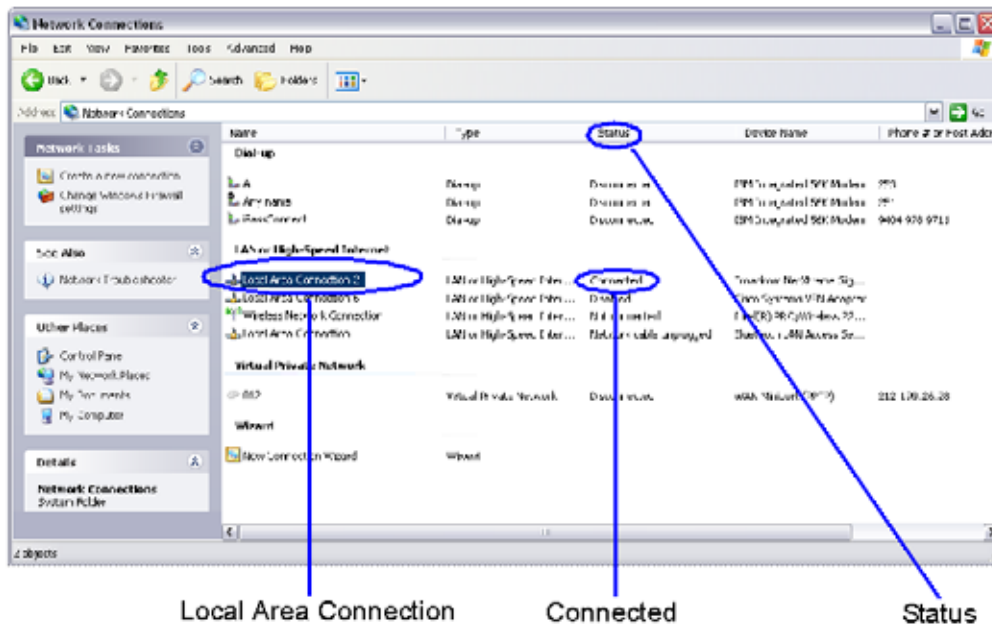

- 3 In the **Local Area Connection Status** dialog box, click **Properties**.

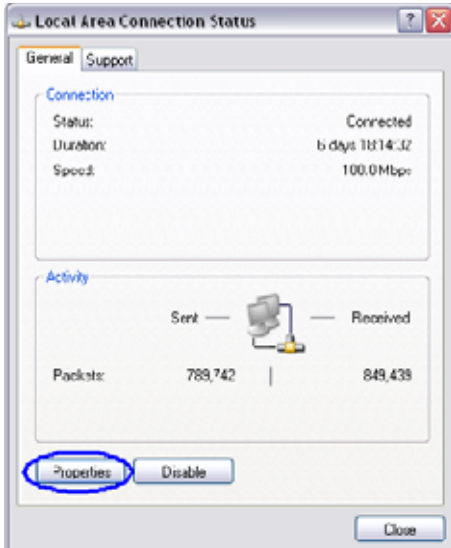


- 4 In the **Local Area Connection Properties** dialog box, select **Internet Protocol [TCP/IP] > Properties**.

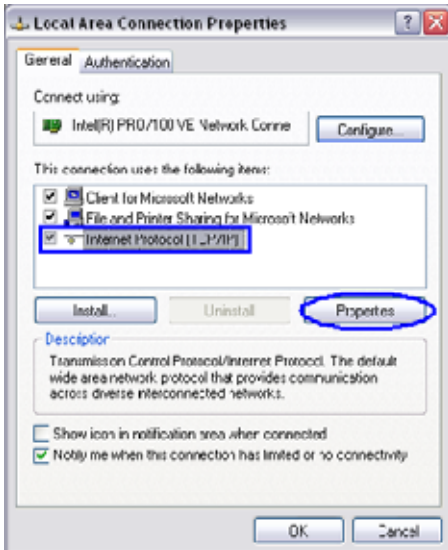

- 5 In the **Internet Protocol (TCP/IP) Properties** dialog box, select **Use the following IP address**.

6 Enter the **IP address**, **Subnet mask** and **Default gateway** for the workstation.

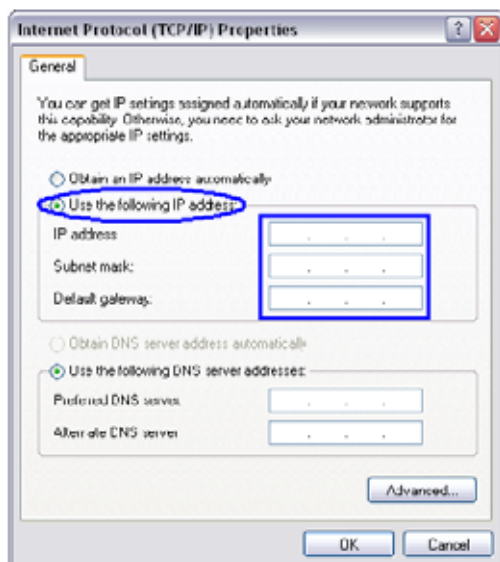

The workstation's IP address should be in the same network neighborhood as the Collaboration Server's Control Unit IP address.

Example: IP address – in the network neighborhood of 192.168.1.nn



Note: Reserved IP Addresses

None of the reserved IP addresses listed in [Reserved IP Addresses](#) list below should be used for the IP Address.

The Subnet mask and Default gateway addresses should be the same as those for the Collaboration Server's Management Network.

The addresses needed for connection to either the Collaboration Server's Default Management Network or Alternate Management Network are listed in the table below.

For more information about connecting to the Alternate Management Network, see [Appendix G - Configuring Direct Connections to the Collaboration Server](#).

Reserved IP Addresses

Network Entity	IP Address	
	Management Network (Factory Default)	Alternate Network
Control Unit IP Address	192.168.1.254	169.254.192.10
Control Unit Subnet Mask	255.255.255.0	255.255.240.0
Default Router IP Address	192.168.1.1	169.254.192.1
Shelf Management IP Address	192.168.1.252	169.254.192.16
Shelf Management Subnet Mask	255.255.255.0	255.255.240.0
Shelf Management Default Gateway	192.168.1.1	169.254.192.1

- 7 Click the **OK** button.


Connect to the Management Network

Connection to the Management Network is done using the following procedure.


To connect directly to the Collaboration Server:

- 1 Using a LAN cable, connect the workstation:
 - To the LAN 1 Port on the Collaboration Server (RMX) 1800 back panel.
 - To the LAN 2 Port on the Collaboration Server (RMX) 2000/4000 back panel.

Collaboration Server (RMX) 1800

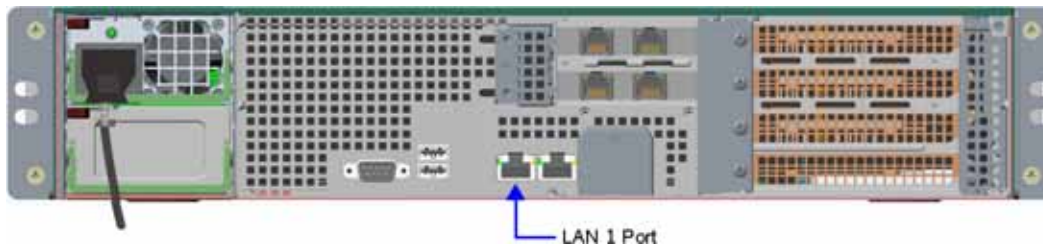

Collaboration Server (RMX) 2000

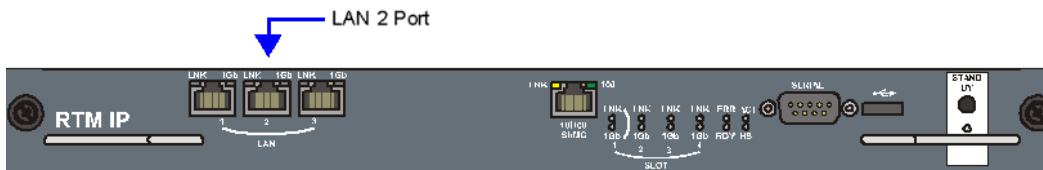


Collaboration Server (RMX) 4000



- 2 Connect the power cable and power the Collaboration Server **On**.
- 3 Start the Collaboration Server Web Client application on the workstation, by entering the factory setting Management IP address in the browser's address line and pressing **Enter**.

- 4 In the Collaboration Server Web Client Login screen, enter the default **Username** (POLYCOM) and **Password** (POLYCOM) and click the Login button.

The Fast Configuration Wizard starts.

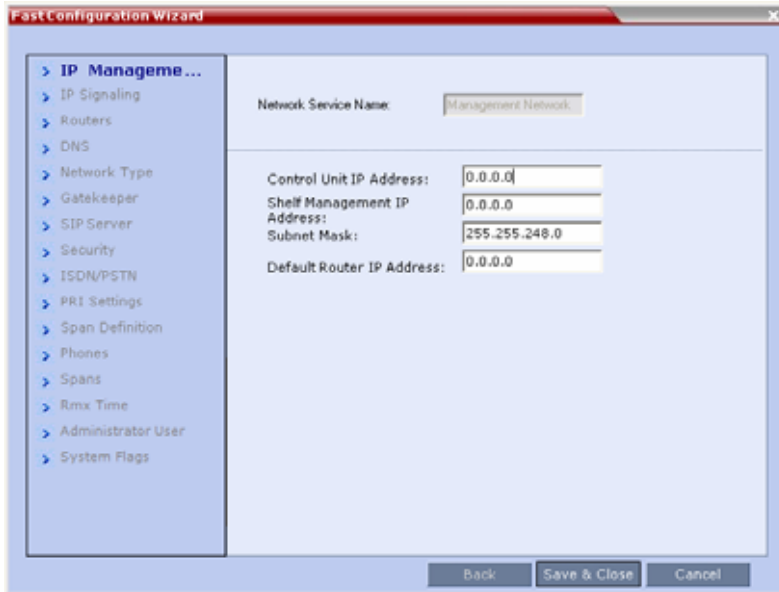

For more information about First-time Power-up and the Fast Configuration Wizard see [Procedure 1: First-time Power-up](#) in the *Polycom RealPresence Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*.

- 5 Enter the following parameters using the information supplied by your network administrator:
 - Control Unit IP Address
 - Shelf Management IP Address
 - Control Unit Subnet Mask
 - Default Router IP Address
- 6 Click the **Save & Close** button.
The system prompts you to sign in with the new **Control Unit IP Address**.
- 7 Disconnect the LAN cable between the workstation and the LAN 2 Port on the Collaboration Server's back panel.
- 8 Connect LAN 2 Port on the Collaboration Server's back panel to the local network using a LAN cable.
- 9 Enter the new **Control Unit IP Address** in the browser's address line, using a workstation on the local network, and press **Enter** to start the Collaboration Server Web Client application.
- 10 In the Collaboration Server Web Client Login screen, enter the default **Username** (POLYCOM) and **Password** (POLYCOM) and click the **Login** button.

Connect to the Alternate Management Network (2000/4000)

The Alternate Management Network enables direct access to the Collaboration Server for support purposes.



Note: Alternate Management Network

The Alternate Management Network cannot be configured and operates on factory defaults.


The Alternate Management Network is only accessible using a LAN cable, connecting the pre-configured workstation to the appropriate port on the Collaboration Server:

- Collaboration Server (RMX) 2000 — LAN 3 port
- Collaboration Server (RMX) 4000 — LAN 1 port

Collaboration Server (RMX) 2000



Collaboration Server (RMX) 4000

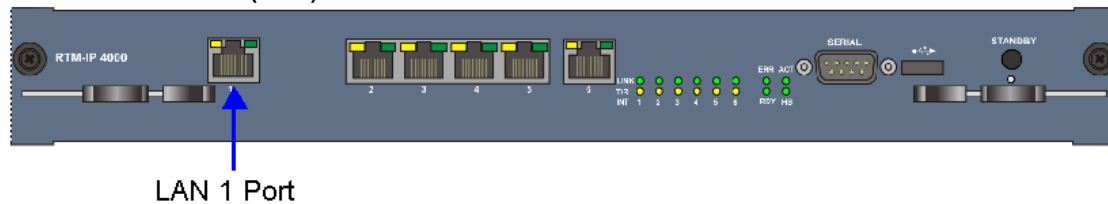

To connect to the Alternate Management Network:

- 1 Connect the cable between the relevant Collaboration Server port and the LAN port configured on the workstation.

- 2 Start the Collaboration Server Web Client application on the workstation, by entering `http://169.254.192.10` (the **Control Unit IP Address**) in the browser's address line and press **Enter**.

The **Login** dialog box is displayed.



- 3 In the **RealPresence Collaboration Server Welcome Screen**, enter the administrator's **Username** and **Password** and click the **Login** button.

The RealPresence Collaboration Server Web Client starts and the Collaboration Server can be managed in the same manner as if you had logged on to the Management Network.

Connect to the Collaboration Server using a Modem (2000/4000)

Remote access to the Collaboration Server's Alternate Management Network is supported via an external PSTN <=> IP modem.

To connect via modem to the Alternate Management Network perform the following procedures:

- 1 Procedure 1: Install the RMX Manager** – The web client enables direct access to the Collaboration Server for support purposes.
- 2 Procedure 2: Configure the modem** – By assigning it an IP address on a specific subnet in the Alternate Management Network.
- 3 Procedure 3: Create a dial-up connection** – Using Windows **New Connection Wizard**.
- 4 Procedure 4: Connect to the Collaboration Server** – Via the RMX Manager.

Procedure 1: Install the RMX Manager

Before installing the RMX Manager, verify that you have at least 150Mb of free space on your workstation.

For more information see [Installing the RMX Manager Application](#).

Procedure 2: Configure the Modem

Configure the modem with the following settings.

- **IP address** – near 169.254.192.nn
- **Subnet Mask** – 255.255.240.0


Procedure 3: Create a Dial-up Connection

This procedure is performed once. Only the **Dial** field in the **Connect** applet (see step 10 on [Click the Dial button to establish a connection to LAN 3 Port via the modem.](#)) is modified for connection to different modems.


To create a dial-up connection:

- 1** In Windows, navigate via the **Control Panel** to the **Network Connections** applet and select **Create a new connection**.

2 When the **New Connection Wizard** is displayed, click **Next**.

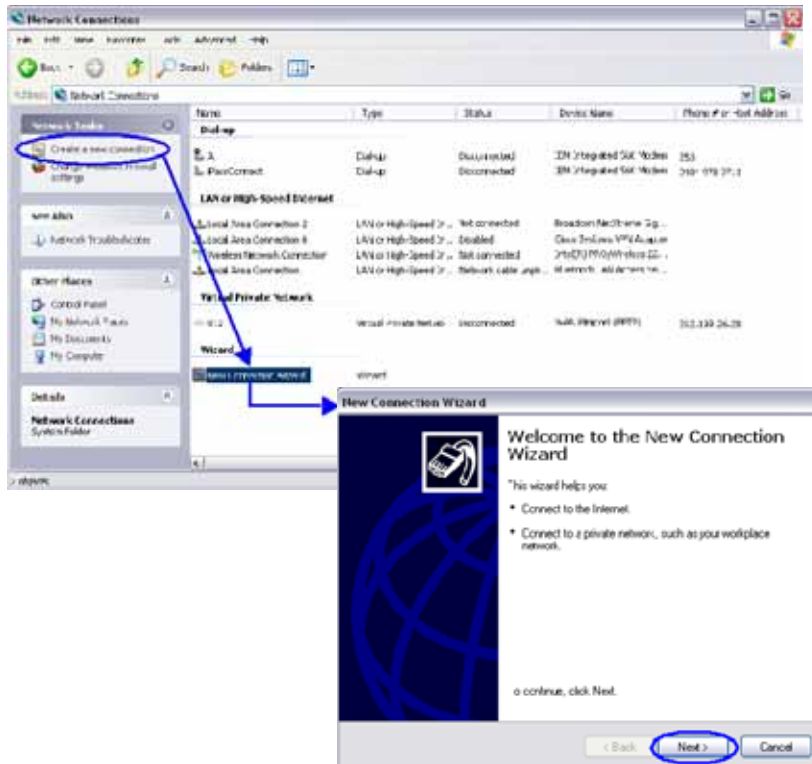


3 In the **Network Connection Type** box, select **Connect to the Internet** and click **Next**.

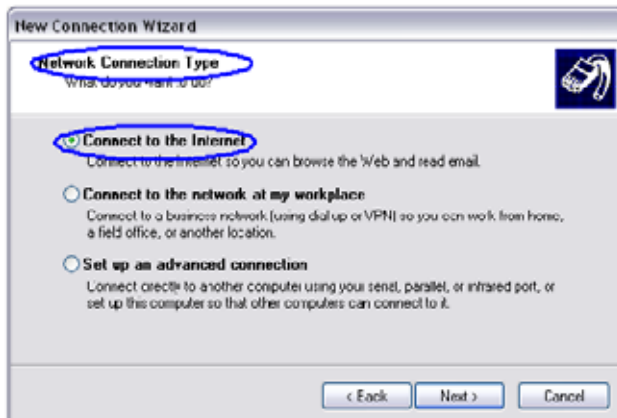


- 4 In the **Getting Ready** box, select **Set up my connection manually** and click the **Next** button.




- 5 In the **Internet Connection** box, select **Connect using a dial-up modem** and click the **Next** button.

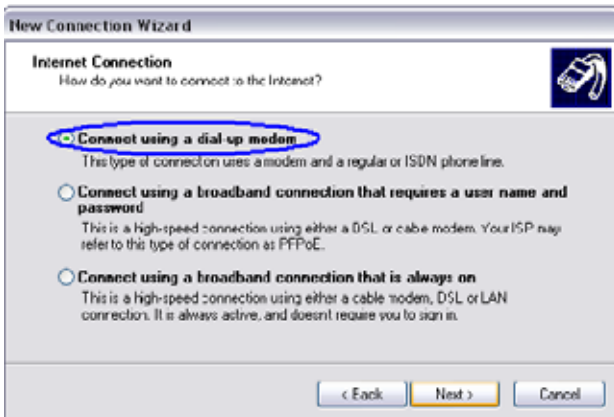


- 6 In the **Connection Name** box, enter a **Name** for the modem connection (e.g. **Modem Connection**) and click the **Next** button.

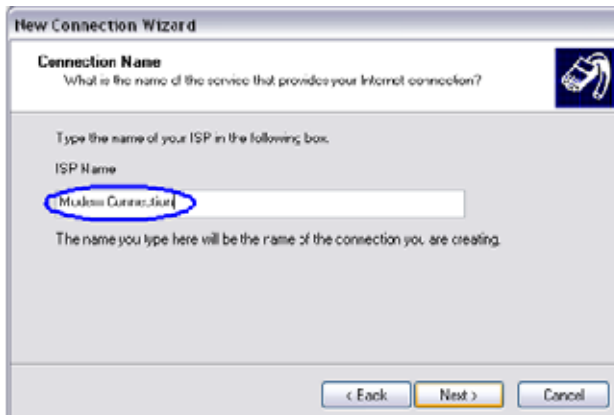


- In the **Phone Number to Dial** box, enter the **Phone Number** for the modem and click the **Next** button.

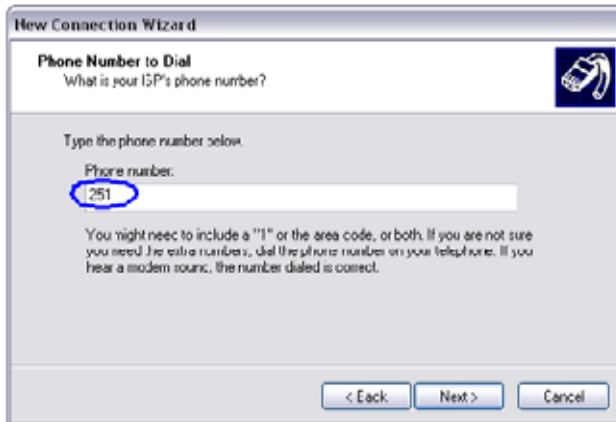

- In the **Connection Availability** box, select **Anyone's use** and click the **Next** button.

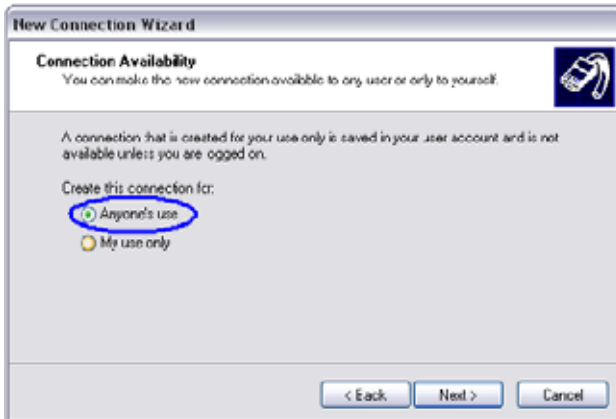


- In the **Internet Account Information** box, complete the **Username**, **Password** and **Confirm Password** fields and click the **Next** button.

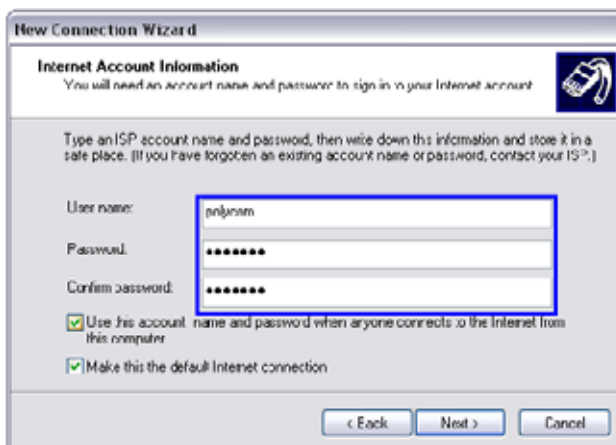

- 10 The **Connection** applet is displayed with the field values filled in as specified by the **New Connection Wizard**.



- 11 Click the **Dial** button to establish a connection to LAN 3 Port via the modem.
The **Windows – Network Connections** applet displays **Connected** status for the new connection.

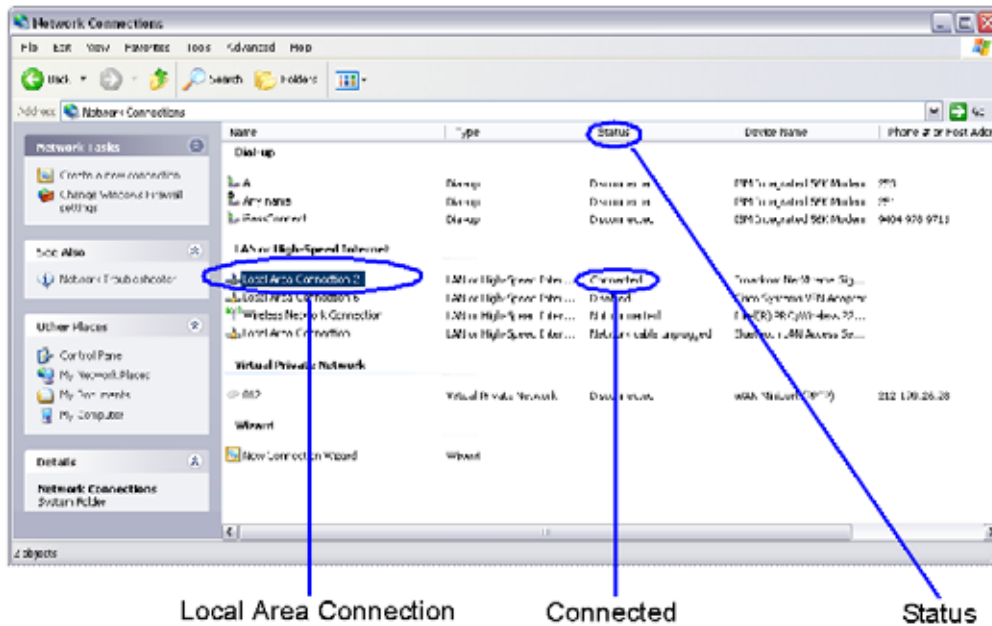

Procedure 4: Connect to the Collaboration Server

To Connect using the RMX Manager:

To use the browser:

- » In the browser's command line, enter `http://<MCU Control Unit IP Address>/RmxManager.html` and press **Enter**.

To use the Windows Start menu:

- 1 Click **Start**.
 - a If the RMX Manager is displayed in the **Recently used programs** list, click **RMX Manager** in the list to start the application.
or
 - b Click **All Programs**.
The **All Programs** list is displayed.
- 2 Select **Polycom** and then select **RMX Manager**.
The **RMX Manager – Welcome** screen is displayed.

Appendix H - Deployment Into Microsoft Environments



Note: System Applicability

Lync deployment is not supported by Collaboration Server 1800 Entry Level.

Overview

Polycom® RealPresence Collaboration Server platforms and Polycom Unified Communications (UC) software and products can be deployed in Microsoft® Lync™ 2010 and 2013 environments.

This chapter describes solution architecture options, and conferencing features supported in the deployment of Polycom's RealPresence Collaboration Server platforms into Microsoft® Lync™ 2010 and 2013 environments.



Note: Skype for Business Applicability

All the descriptions relating to Lync 2013 are also applicable for Skype for Business.

The following topics are covered in this chapter:

- Lync 2013 SVC Connectivity to RealPresence Collaboration Servers
- Connecting a Collaboration Server Meeting Room to a Microsoft AVMCU Conference
- Call Admission Control
- Active Alarms and Troubleshooting

A description of the full Polycom UC solution for Microsoft environments can be found in the [Polycom® Unified Communications in a Microsoft® Environment Solution Deployment Guide](#), which includes the following topics:

- Polycom Products Tested for use with this Solution
- Deploy Polycom® RealPresence Group Series® Systems
- Deploy Polycom® HDX® Systems
- Deploy Polycom® Immersive Telepresence (ITP) Systems
- Deploy Polycom® RealPresence Collaboration Server (RMX) Systems
- Deploy Polycom® RealPresence DMA® Systems
- Deploy Polycom® Conferencing for Microsoft® Outlook

This Solution Deployment Guide and additional reference material on Polycom solutions with Microsoft can be found at: <http://support.polycom.com/microsoft>

Lync 2013 SVC Connectivity to RealPresence Collaboration Servers

Microsoft's H.264/SVC solution has replaced RTV as the preferred video protocol for enabling video calls in the same manner as RTV replaced H.263 as the preferred codec in previous versions. For backward compatibility, RTV is still supported for Lync 2013.

Although similar, the Microsoft H.264/SVC solution is currently not compatible with Polycom's H.264 SVC implementation, due to the different signaling used.

The Collaboration Server considers Lync 2010 and H.264 SVC Lync 2013 clients to be AVC endpoints. The administrator must set the Conferencing Mode in the Conference Profile to **CP (Continuous Presence)** to enable Microsoft H.264/SVC Lync clients to connect to the conference. Resource-wise, the Collaboration Server allocates AVC ports for direct Lync clients.

Deployment Architectures

Single Premise Deployment

A single premise deployment relates to scenarios where the RealPresence Platform (RPP) solution along with any required Microsoft entities are located in a single site.

Two Deployment Architectures are presented as examples. Both require that a Polycom RealPresence Distributed Media Application (DMA) 7000 System be configured as part of the solution.

Although Cisco legacy endpoints are inter-operable with Collaboration Server (RMX) 1800 with no DSP cards, the MCU is not supported for integration into third-party and partner environments.



Note: Collaboration Server (RMX) 1800 with no DSP cards

Collaboration Server (RMX) 1800 with no DSP cards, is not supported for integration into third-party and partner environments.

- [RealPresence Hosted Conferences](#)

Both Lync clients and Standards-based video endpoints connect directly to the same conference hosted only on the Polycom RealPresence Collaboration Server.

- [RealConnect Cascaded Conferences](#)

Lync clients connect to a conference on the Lync 2013 AVMCU while Standards-based video endpoints connect to a separate conference on the Polycom RealPresence Collaboration Server. The two MCUs are cascaded together to form a single conference including all participants.

In this architecture, deployment depends on both RPP solution and a full Lync environment, specifically Microsoft AVMCU, being located on the same site, thus allowing the Collaboration Server to enjoy a Trusted Application Relationship with Lync.



RealConnect Cascaded Link Resiliency

The RealConnect mechanism for connecting between the conferences on the Collaboration Server (or Polycom RPP solution) and Microsoft AVMCU, in both the single premise - second architecture, and the remote premise architecture, ensures the resiliency of the connection between the two MCUs, and on the off chance of a link failure, is responsible for its re-establishment.


The following table summarizes current and legacy (non DMA) conferencing modes within the deployment architectures:

Conference Modes by Deployment Architecture

Conference Mode	Single Premise Deployments			
	RealPresence Hosted Conferences (Direct Dial In/Out)		Lync 2013 AVMCU Cascaded Conferences (Indirect Dial In)	
	With No DMA	With DMA	With DMA	Non DMA (Backward Compatibility)
AVC Only	Supported. Dial Out is supported. RTV is utilized as the video protocol.	Supported. Dial Out is not supported. For backward compatibility, Dial out from the RMX Web Client or RMX Manager can be used. In regular mode, H.264/SVC is utilized as the video protocol. In backward compatibility mode, RTV is utilized, provided it is not disabled on the Collaboration Server configuration via system flags (covered later in this section).	Supported. Simulcast transmitted. Multiple participants received.	Supported. One transmitted RTV stream. One received RTV stream.
Mixed Mode	Supported		Not Supported	
Polycom SVC	Supported	Not Supported		

RealPresence Hosted Conferences

Lync 1010 and 2013 clients connect to a conference hosted on a Polycom Collaboration Server.

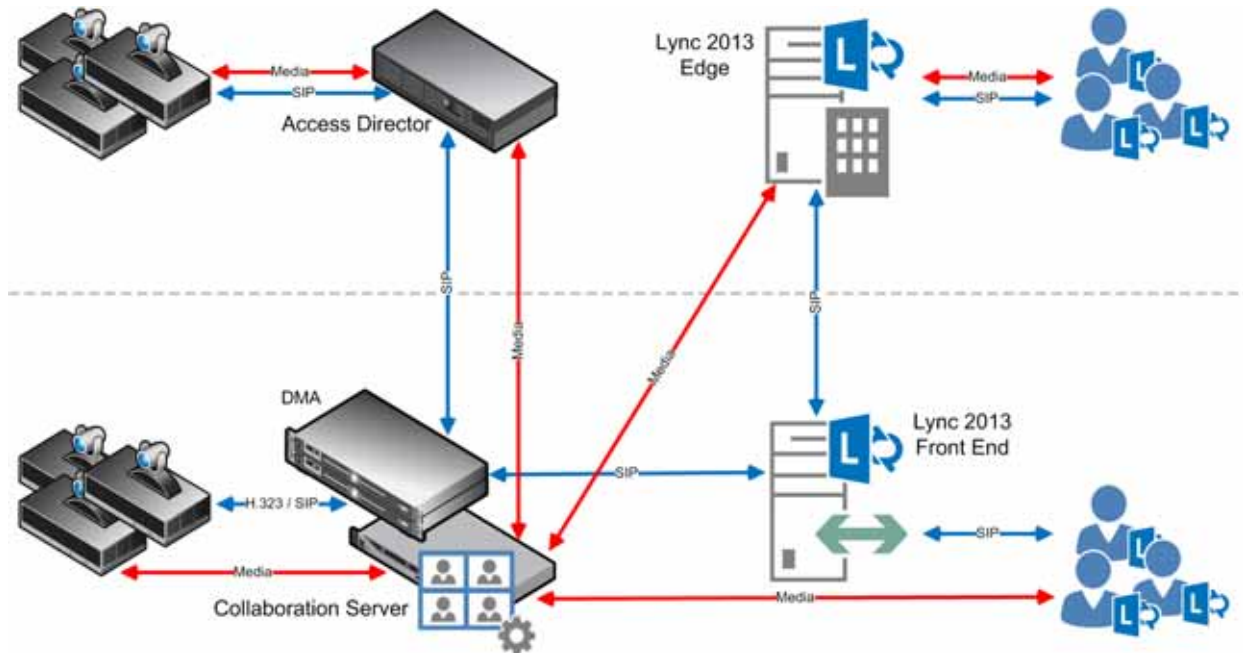

With this deployment architecture:

- Lync 2010 clients can join the conference using Lync 2010.
- Lync 2013 can use their SVC Codec's Temporal Scaling capability to send one video stream to and from the Collaboration Server at multiple frame rates.
- There is one audio stream per direction.
- Lync clients place calls to a Virtual Meeting Room provisioned on the DMA, for example, 1234@video.domain.com
- Lync 2013 clients can dial into both mixed AVC/SVC and AVC only conferences.
- Lync clients dialing to a VMR, where the type of the conference is SVC/AVC mixed and AVC CP only have their video decoded. The Collaboration Server sends encoded video to Lync 2013 participants.


Look and Feel

All participants experience a Microsoft Point to Point conference with Polycom video layouts.

Only Classic Skin is supported. For more information about Skins, see [Defining AVC CP Conferencing Profiles](#).

RealConnect Cascaded Conferences

The Collaboration Server enjoys a Trusted Application Relationship with the AVMCU, allowing cascaded VMR Participants (Lync 2013 clients) connecting to a conference on a Microsoft AVMCU, which is cascaded with a Collaboration Server paired with a DMA.

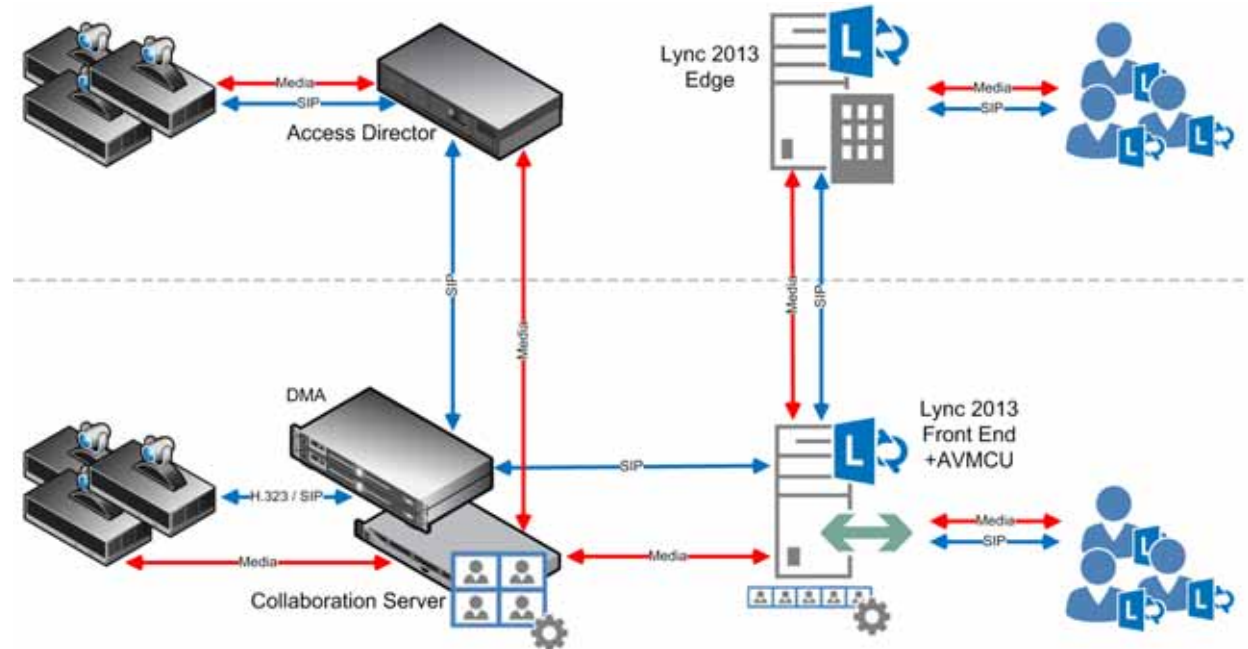


With this deployment architecture, participants connecting to the conference by way of the Collaboration Server are referred to as Cascaded VMR Participants.

- Lync clients connect to the Lync 2013 AVMCU in either ad hoc or scheduled scenarios.
- The Cascaded VMR connects as a Lync client to the AVMCU.
 - The Collaboration Server utilizes the Microsoft SVC Codec to send up to three simulcast video streams of different resolutions, of the current speaker to the AVMCU.
- The Collaboration Server receives media from up to five different Lync clients from the AVMCU.
- Lync clients experience a Microsoft Point to Point conference with Cascaded VMR Participants appearing as Lync clients.
- Cascaded VMR Participants experience a conference with Polycom video layouts.
- Lync clients will see the active speaker from the Cascaded VMR while Cascaded VMR Participants will see up to 5 Lync clients in addition to other participants.
- Lync clients can connect to Collaboration Server VMR participants by escalating the Lync call to a multipoint conference, including the Collaboration Server VMR meeting room and its participants.
 - The Contact List can be used to select participants followed by, right-clicking and selecting Start a Video Call.
 - An ad-hoc (Meet Now) Lync conference can be started; a drag-and-drop operation can then be used in the Contact List to add a Cascaded VMR to the conference.
- Cascaded VMR Participants, in point to point calls, can connect to Lync AVMCU participants by escalating the call to a multipoint Lync Conference.
 - The conference is escalated from point-to-point to multipoint.

- An ongoing audio conference is escalated to video, enabling connected participants to send video.
- Multiple Collaboration Server conferences cannot be cascaded into the same Lync 2013 AVMCU conference. Multiple concurrent cascades are supported in a 1:1 fashion between simultaneous, separate conferences.
- The Collaboration Server can host multiple conferences, each connected in cascade to a different AVMCU hosted conference.

Look and Feel for Lync Clients and Group Series Endpoints

Lync clients and Group Series endpoints with native Lync capability connect to the AVMCU directly and experience a Lync look and feel conference and can see all Lync clients; up to 5 simultaneously in Gallery View.

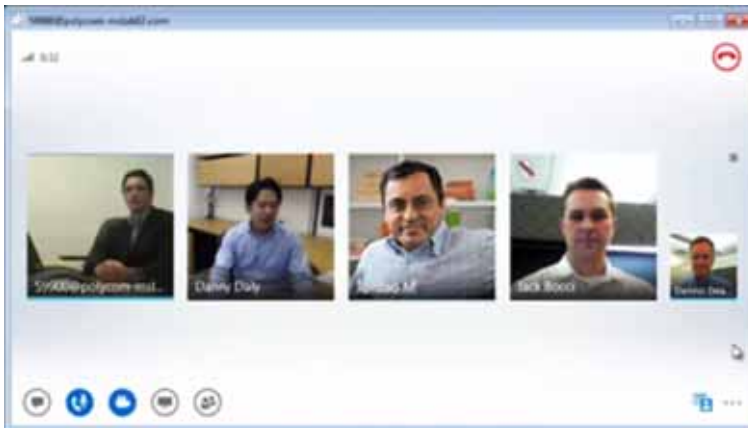

If the active speaker is a Cascaded VMR Participant, the participant is seen by Lync Clients in a video window in the Gallery View.

By default, Cascaded VMR Participants are forced to a 1x1 layout by the default setting of the FORCE_1X1_LAYOUT_ON_CASCADED_LINK_CONNECTION System Flag. The flag's default setting is YES, which prevents a VMR layout being displayed within a Gallery View video window. If required, alternative Personal Layouts can be forced only after this System Flag has been added and its value set to NO.

For more information see, [Modifying System Flags](#).

Look and Feel for Legacy Endpoints

Legacy endpoints will connect to the Collaboration Server and will be able to see all Lync clients; up to 5 simultaneously in Polycom video layouts. Only Classic Skin is supported. For more information about Skins, see [Defining AVC CP Conferencing Profiles](#).

Remote Premise Deployment - RealConnect via Service Provider

Polycom® RealPresence® Collaboration Server supports a new RealConnect® federation mode, which enables both Lync and non-Lync endpoints to participate in Lync-initiated meetings, even in scenarios where those endpoints reside in remote Lync organizations.

The RealConnect mode provides a mechanism whereby a conference hosted on the Collaboration Server is capable of connecting a Lync meeting scheduled in a remote Lync organization via the RealConnect federation mode. This capability allows people in Lync-deployed organizations to schedule Lync meetings from their respective organizations, where the meeting participants can join the scheduled meeting via a Service Provider, and using the conference connection data included in the standard Outlook Lync meeting invite. In such conferences, participants connected via the RPP enjoy Polycom's prime conferencing experience, whereas the Lync participants enjoy a wholly Microsoft Lync conferencing experience.

RealConnect for remote site requires:

- **On Organization side** - Lync full infrastructure, which includes an AVMCU.
- **On Service Provider side** - Lync-enabled Polycom® RealPresence® Platform (RPP) solution, and Lync On-Premises (specifically On-Edge, and Front End).

In inter-organization scenarios RealConnect utilizes the Trusted Application Relationship, which is available only within the same organization. RealConnect for remote-premise scenarios, involves a new mechanism bypassing the necessity in the Trusted Application Relationship and utilizing the Conference Auto Attendant (CAA) service. Thus, it allows the Collaboration Server to use the Lync Edge server either at the Service Provider or at the federated organization (depending on the RPP location) to connect to the remote Lync (AVMCU) meeting.

In addition, a mechanism was created for identifying the various organizations involved in Lync meetings (see [Organization Identification](#)).

The following table summarizes conferencing modes capabilities in remote premise deployment architecture - RealConnect.

Conference Modes by Deployment Architecture

Conference Mode	Deployment Architecture - RealConnect - Phase 2 DMA as SIP Focus
	Lync 2013 AVMCU Cascaded Conferences
AVC Only	Supported Polycom future focus will be on enhancing the various aspects of this method.
Mixed Mode	Not Supported
SVC	Polycom SVC is not supported, though Microsoft SVC is supported. Note: No Polycom SVC license is required

Organization Identification

In multiple tenant scenarios, the DMA maintains a prefix table, in which each Federated organization is allocated a unique prefix, mapped to the respective organization initiating the meeting by its CAA's SIP URI.

In single tenant scenarios, since the conference ID, is unique only within the Lync server which allocated it, a prefix is added to the conference ID to enable the DMA to identify remote RealConnect Lync conferences.

The Lync service administrator of an organization hosting Lync meetings, can add the respective organization prefix into the Outlook meeting invites sent by meeting organizers. This insertion requires the Lync service administrator to configure the added text only once, via the Lync conference template, at the point of the RealConnect service deployment.

For more information on CAA SIP URI and Organization Prefix, see [Polycom Microsoft Deployment Guide](#).

Process Guidelines

- To overcome the absence of a Trusted Application Relationship, the DMA utilizes the Microsoft CAA service.
- Lync Meeting invites include the Lync conference ID, and at the bottom, the prefix of the federated organization.




- The RealConnect connection is established within 7 seconds, at the most.
- The audio/video of non-Lync participants is muted/suspended during the process, so as to keep the RealConnect process hidden.

Once RealConnect of Collaboration Server and AVMCU conferences is complete, non-Lync participants may receive audio/video depending on conference configuration (i.e., if dependent on chairperson presence).

Supported Deployment Topology

Polycom currently supports the deployment topology illustrated below.

- Multi-tenant, each owning its own CAA Service, and using an independent Service Provider containing the RPP solution. In this constellation, the DMA maintains an organization prefix table, with each prefix linked to the organization CAA Service URI.

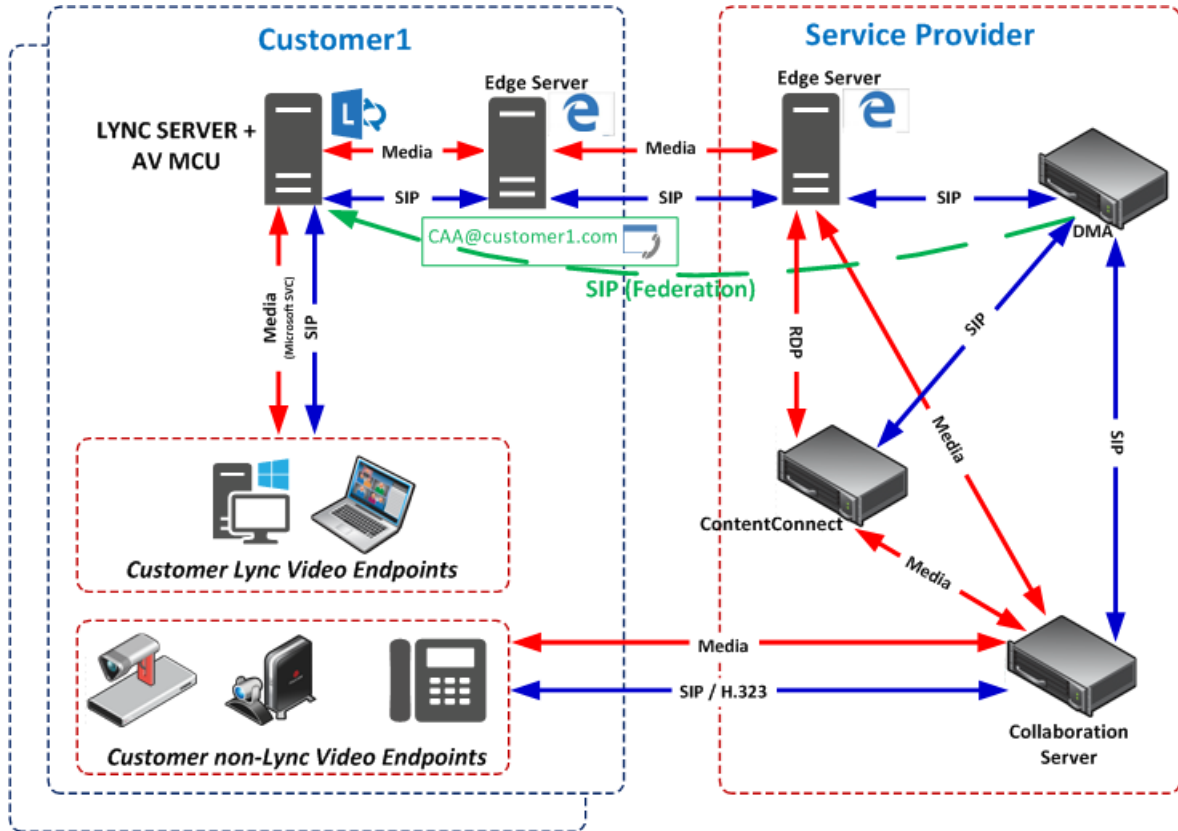

Error Handling

- If the federated organization prefix entry in the DMA table yields an erroneous CAA URI, the participant is immediately disconnected.
- If a non-Lync endpoint dials an erroneous number as the conference ID on the AVMCU, the participant is immediately disconnected.

Backward Compatibility to Lync 2010

All Lync 2013 functionality can be disabled by adding the BLOCK_NEW_LYNC2013_FUNCTIONALITY System Flag and setting its value to YES.

The flag's default value is NO. When the flag is set to YES, all Lync 2013's new functionality is disabled. All Lync 2013 clients, whether connected directly or via cascading, will connect using the RTV codec, and not the Microsoft H.264/SVC codec.

Video Resource Requirements and Implications

Lync 2013 SVC clients may not all connect to a VMR with the same stream layout. They are therefore considered H.264 AVC participants and transcoding resources are allocated to them as summarized in the following table.

Bandwidth and Resource Consumption by Video Codec

Video Codec	Resolution and Aspect Ratio	Maximum Video Payload Bit rate (Kbps)	Minimum Video Payload Bit rate (Kbps)	Resources
H.264	320x180 (16:9) Coded as 320x192 212x160 (4:3)	250	15	CIF
H.264/RTVideo	424x240 (16:9) Coded as 432x240 320x240 (4:3)	350	100	CIF
H.264	480x270 (16:9) Coded as 480x272 424x320 (4:3) Coded as 432x320	450	200	SD
H.264/RTVideo	640x360 (16:9) Coded as 640:368 640x480 (4:3)	800	300	SD
H.264	848x480 (16:9)	1500	400	SD
H.264	960x540 (16:9) Coded as 960:544	2000	500	SD
H.264/RTV	1280x720 (16:9)	2500	700	HD720p30
H.264	1920x1080 (16:9)	4000	1500	HD1080p30

Support for HD1080p Resolution

The Collaboration Server Hosted deployment supports HD1080p30 video resolution symmetrically for direct calls.

The MS AVMCU Cascade deployment supports HD1080p30 video resolution only if [Video Optimized](#) mode is selected and according to the settings of the **LYNC_AVMCU_1080p30_ENCODE_RESOLUTION** System Flag:

NO (Default) Video streams sent to and received from the MS AVMCU are HD720p30, SD, and CIF.

YES Video streams sent to the MS AVMCU are HD1080p30, SD, CIF. Video streams received from the MS AVMCU are 720p30, SD, and CIF.

Limit Maximum Resolution for MS SVC Using a System flag

The **MAX_MS_SVC_RESOLUTION** System Flag can be used to minimizing the resource usage by overriding the default resolution selection and limiting it to a lower resolution.

Range: AUTO, CIF, VGA, HD720, HD1080

Default: AUTO

The **MAX_MS_SVC_RESOLUTION** System Flag operates independently from the **MAX_RTV_RESOLUTION** System Flag allowing differing maximum resolutions to be selected for the MS SVC and RTV protocols.

If you want to modify System Flag values, the flags must be added to the System Configuration file. For more information see: [Modifying System Flags](#) and [Controlling Resource Allocations for Lync Clients Using RTV Video Protocol](#).

FEC (Forward Error Correction)

FEC is supported for RTV and MS SVC video protocols.

- FEC will be automatically turned on by the VSR (Video Source Request) message.

Redundant Audio Data (RED) is supported for the following Audio CODECS:

- G.722
- G.711A
- G.711U

The Collaboration Server transmits RED when packet loss is reported and stops sending RAD when packet loss is stopped.

For more information see [Lost Packet Recovery](#).

IPv6 Support

In addition to IPv4, IPv6 is supported in Lync 2013 environments.

Following IP modes are supported for all network connections—ICE, Media, Management, Signaling, etc.:

- IPv4 only
- IPv6 only
- IPv4 & IPv6

As in previous versions, IPv4 Candidates are advertised first in the SDP.

IPv6 is not supported by Lync 2010. All dial out calls from the Collaboration Server are considered Lync 2010 calls and utilize IPv4.

Dial out calls from DMA to Lync environments are considered to be dial in calls from the Collaboration Server perspective.

The ANAT (Alternative Network Address Types) option is not applicable in Lync environments.

For more information see [IPv6 Addressing Guidelines](#).

DHCPv6 Support for Auto IPv6 Address Assignment

DHCPv6 Auto IPv6 Addresses Assignment, as required by Lync 2013 environments is supported.

As in previous versions, SLAAC (Stateless Address Auto Configuration) continues to be supported.

System behavior can be controlled by adding the **IPV6_AUTO_ADDRESS_CONFIGURATION_METHOD** System Flag and setting its value as required.

AUTO—(default) Use DHCPv6 first in case of failure use SLAAC.

SLAAC—Use SLAAC only.

For more information see, [Modifying System Flags](#).

System Flags for Cropping Control

Cropping occurs when the video source (endpoint) aspect ratio is different from the video cell aspect ratio in the Polycom Video Layout.

For all endpoints other than ITP endpoints and panoramic cells the Collaboration Server calculates the mismatch percentage between the source video aspect ratio and Polycom video layout cell aspect ratio. The mismatch percentage is used to determine whether cropping or striping will be applied to the video cell in the Polycom video layout.

For non-panoramic layouts, cropping and striping can be controlled by adding the **CROPPING_PERCENTAGE_THRESHOLD_GENERAL** System Flag and setting its value accordingly.

For panoramic layouts, cropping and striping can be controlled by adding the **CROPPING_PERCENTAGE_THRESHOLD_PANORAMIC** System Flag and setting its value accordingly.

For both System Flags:

Range: -1-100.

Default: -1

If the calculation result is less than or equal to the value of the **CROPPING_PERCENTAGE_THRESHOLD_GENERAL** System Flag, cropping will be applied.

If the calculation result is greater than the value of the **CROPPING_PERCENTAGE_THRESHOLD_GENERAL** System Flag, striping will be applied.

If the **CROPPING_PERCENTAGE_THRESHOLD_GENERAL** System Flag value is set to 0, cropping will not be applied.

If the **CROPPING_PERCENTAGE_THRESHOLD_GENERAL** System Flag value is set to -1 cropping will always be applied.

If the CROPPING_PERCENTAGE_THRESHOLD_GENERAL System Flag value is set to 100, always apply cropping with the exception of mobile aspect ratios. Mobile aspect ratios are those with a larger vertical aspect than horizontal for example 3:4.

Example: A mobile Lync client sends 288x352 (3:4) aspect ratio. Cropping this resolution to 16:9 would require the cropping of 190 pixels on the vertical aspect. The mismatch calculation would yield 190/352 ~54. If the applicable System Flag's value is set to >= 54, striping, rather than cropping, is applied.

For more information see, [Modifying System Flags](#).

Sharing Content During a Conference

As part of supporting video conferencing in a Polycom-Lync environment, Polycom supplies Polycom® ContentConnect® for Microsoft Lync environments (previously known as Content Sharing Suite, or CSS), which enables content sharing between Lync and non-Lync conference participants.

During content sharing, content is sent from the Collaboration Server via H.264 to the ContentConnect server, and from there via Microsoft Remote Desktop Protocol to the Lync AVMCU, and vice versa.



Note: Content in RealConnect Environments

In conferences using Polycom® RealConnect™ technology between remotes premises, content is shared using Polycom® ContentConnect for Microsoft environments.

In this scenario, content sharing requires one of the following:

- Content transmission method is set to Multiple Content Resolutions, with the H.263 check-box selected.
- H.264 Cascade Optimized (see [MCU Usage Modes of Content Protocols](#))
- H.264 HD (likewise)

Two implementations of the Polycom® ContentConnect™ (previously known as CSS - Content Sharing Suite) are available in Lync 2010 and Lync 2013 environments:

- Polycom® ContentConnect™ Gateway
- Polycom® ContentConnect™ Plug in

RealPresence Polycom® ContentConnect™ Gateway

The Polycom® ContentConnect™ Gateway provides Content interoperability between Lync clients and non Lync clients in a conference. Lync clients connected to a Lync AVMCU use their native Content protocol, RDP (Remote Desktop Protocol) and Polycom endpoints, use their native SIP BFCP Content protocol, to send or receive Content, to or from the Polycom® ContentConnect™ Gateway, which renders a RDP ↔ SIP BFCP Content stream.

The Gateway functionality was previously enabled by a combination of: Content Add-on for Lync; Content Sharing Server; and BFCP Content-Only Client Plug-in. These functionalities have been incorporated into the Polycom® ContentConnect™, eliminating the need for plug-ins. The Polycom® ContentConnect™ Plug in is still supported for backward compatibility.

For more information see:

[RealPresence Polycom® ContentConnect™ Plug in](#)

[RealPresence® ContentConnect Administrator Guide](#)

[Unified Communications Deployment Guide for Microsoft Environments](#)

The Gateway allows Polycom endpoints, using native SIP BFCP, and Lync clients, using native RDP, to share Content in a conference.

Polycom® ContentConnect™ Gateway Usage Guidelines

MS AVMCU Cascade is the only Deployment Architecture that is supported.

For more information see [Deployment Architecture 2 - RealConnect Cascaded Conferences](#).

One Polycom® ContentConnect™ RDP Gateway connection is supported per conference in the Collaboration Server, initiated by the DMA through the Polycom® ContentConnect™ server.

There is no Lync client associated with the Polycom® ContentConnect™ Gateway connection and even if the AVMCU is empty the Polycom® ContentConnect™ will be still be connected. The Collaboration Server does not consider the Polycom® ContentConnect™ RDP Gateway connection as a participant and if the conferences on both the Collaboration Server and the AVMCU are empty it will disconnect the Polycom® ContentConnect™ RDP Gateway and the AVMCU link.

When a Content sharing endpoint is detected by the Collaboration Server side the Polycom® ContentConnect™ RDP Gateway will receive BFCP message triggering the RDP session on the Lync side of the topology.

RealPresence Polycom® ContentConnect™ Plug in

For backward compatibility the Collaboration Server supports Content sharing using either the Polycom® ContentConnect™ Gateway or the lug-in based Content sharing solution, however not in the same conference.

Using Polycom® ContentConnect™ Plug in, Lync 2013 clients are able to share content in Polycom Content sessions in both Collaboration Server Hosted calls and Cascaded Lync 2013 AVMCU calls, with both Lync 2010 & 2013 clients.

Content Sharing behavior is summarized in the following tables:

Content Sharing by Lync Version and Deployment Architecture

Lync Version	Collaboration Server Hosted		Cascaded Lync 2013 AVMCU	
	Polycom® ContentConnect™ Plug in	Polycom® ContentConnect™ Gateway	Polycom® ContentConnect™ Plug in	Polycom® ContentConnect™ Gateway
Lync 2010	Supported, as in previous versions.	Not supported.	Not supported.	
Lync 2013	Supported.		Supported.	

Content Sharing Behavior by Lync Connection and MCU Type

Connection Type	Content Sharing Behavior	
	Polycom® ContentConnect™ Plug in	Polycom® ContentConnect™ Gateway
Point to point: Lync client to Lync client.	Microsoft Content is used for the entire session.	
Lync calls VMR directly	Polycom Content is used for the entire session.	Not supported.
Lync calls Lync 2013 AVMCU conference with no Collaboration Server cascade participant.	Microsoft content is used until Collaboration Server will joins, from which time it will switch to Polycom content	Microsoft Native RDP Content is used.
Collaboration Server joins a Lync 2013 AVMCU conference before Content sharing is initiated.	Polycom Content is used until Collaboration Server leaves the conference.	
Collaboration Server joins a Lync 2013 AVMCU conference while Content is being shared.	When the Polycom® ContentConnect™ plug in of the Content speaker detects that Microsoft Content is being sent by the Lync client, it automatically stops the Microsoft Content and switches to Polycom Content and starts sending Polycom Content. Polycom Content is used until the Collaboration Server leaves the Lync 2013 AVMCU conference.	

Polycom® ContentConnect™ Behavior by Lync Content Type

Lync Content Type	Polycom® ContentConnect™ Behavior	
	Polycom® ContentConnect™ Plug in	Polycom® ContentConnect™ Gateway
Desktop Sharing	Send the desktop In cases where there is more than one monitor, the Lync client asks which monitor to use and the Polycom® ContentConnect™ will comply.	
Program Sharing	Only the application is sent.	

Polycom® ContentConnect™ Behavior by Lync Content Type

Lync Content Type	Polycom® ContentConnect™ Behavior	
	Polycom® ContentConnect™ Plug in	Polycom® ContentConnect™ Gateway
Power Point Sharing	<p>Not supported.</p> <p>Polycom® ContentConnect™ should not send the Power Point to the Collaboration Server but the Lync clients will be able to send/receive the Power Point. Polycom® ContentConnect™ issues a notification in the Lync Content presenter device stating that the Power Point cannot be shared with non-Lync devices.</p>	
Whiteboard Sharing	<p>Not supported.</p> <p>Polycom® ContentConnect™ should not send the whiteboard to the Collaboration Server but the Lync clients will be able to send/receive the whiteboard. Polycom® ContentConnect™ issues a notification in the Lync Content presenter device stating that the whiteboard cannot be shared with non- Lync devices.</p>	

Cisco TIP Support

Polycom's solution that allows the Collaboration Server to natively inter-operate with Cisco TelePresence Systems using Cisco TIP protocol is supported.

MLA (Multipoint Layout Application) is required for managing Cisco TelePresence layouts (whether Polycom ITP Systems are deployed or not). MLA is a Windows® application that allows conference administrators to configure and control video layouts for multipoint calls involving Polycom Immersive Telepresence (ITP) systems. For more information see the *Polycom® Multipoint Layout Application (MLA) User's Guide for Use with Polycom Telepresence Solutions*.

System behavior can be controlled by adding the MS_AV_MCU_MONITORING System Flag and setting its value accordingly as summarized in the following table.

System Behavior by MS_AV_MCU_MONITORING System Flag Value and MLA Mode

MS_AV_MCU_MONITORING	MLA Mode	Collaboration Server Side	Lync 2013 AVMCU Side
MAIN_AND_IN_SLAVE (Default)	Room Switch	Sees the AVMCU current speaker.	Sees the Collaboration Server hosted current speaker in a 1x1 layout.
	CP Layout	Sees all connected Lync Clients in the layout.	
NO (Not recommended)	Room Switch	Sees a Lync Client which may or may not be the current speaker.	
	CP Layout		
YES	Room Switch	Sees the Lync 2013 AVMCU current speaker.	
	CP Layout (Not recommended)	Sees cascaded slave Lync 2013 AVMCU s as empty cells in the layout.	

For more information see [Collaboration With Cisco's Telepresence Interoperability Protocol \(TIP\)](#) and [Collaboration with Microsoft and Cisco](#).

Lync 2013 Participant Monitoring

Lync Clients connected to a conference using the Collaboration Server Hosted architecture will experience normal monitoring, with the addition of the MS SVC codec.

Lync Clients connected to a conference using a Lync 2013 AVMCU Cascade link will be monitored as a single participant. In the Conference list the Lync 2013 AVMCU is listed as Lync AVMCU_x, where x is an incrementing number, should multiple conferences be connected using Lync 2013 AVMCU Cascade links.

Monitoring Participant Properties - Channel Status Tab

Two Channel parameters for each Lync 2013 AVMCU Cascade link are displayed: **Video in** and **Video out**.

For both Video in and Video out, the Bit Rate and Packet Loss parameters are displayed as aggregate values. For all other Channel parameters (Jitter, Latency, etc.) the highest values are displayed for each video stream.

The screenshot shows the 'Channel Status' tab in the 'user 73 Prog13sid Properties' dialog. The 'Channels Used' section contains the following data:

Channel	Faulty	Bit Rate	Packet Loss	Fraction Loss (Pd Jitter (P
<input checked="" type="checkbox"/> Audio in		24.0	0	0.00%(0.00%) 0(0)
<input checked="" type="checkbox"/> Audio out		24.0	11	0.00%(0.78%) 1(1)
<input checked="" type="checkbox"/> Video in		2,553.3	537	0.00%(0.00%) 0(0)
<input checked="" type="checkbox"/> Video out		337.0	14	0.00%(2.34%) 0(0)
Content in		0.0	0	0.00%(0.00%) 0(0)
Content out		0.0	0	0.00%(0.00%) 0(0)

The 'Sync Status' section shows:

Channel	Source	Position	Protocol Sync Loss	Video Intra Sync	Video P
Video	30611 Default	<input checked="" type="checkbox"/>	0		

Below the sync status, there is a table for Tx and Rx rates and Video Sync Loss:

	Rate	Video Sync Loss	LPR activation
Tx	4024000	(1)	
Rx	4024000	(0)	

The dialog also includes a 'Contents View' section, an 'Add to Address Book' button, and 'OK', 'Cancel', and 'Apply' buttons at the bottom.

Monitoring Participant Properties - Channel Status - Advanced Tab

Media Info of each media stream sent by the Lync 2013 AVMCU is displayed:

Stream name: The Display Name of the Lync client.


Algorithms: H.264 or RTV.

Resolution: CIF, SD, VGA, HD720 etc.

Frame Rate: 7.5, 15, 30 etc.

Annexes: Used for H.263 only

RTP Statistics are aggregated and are not detailed per stream.

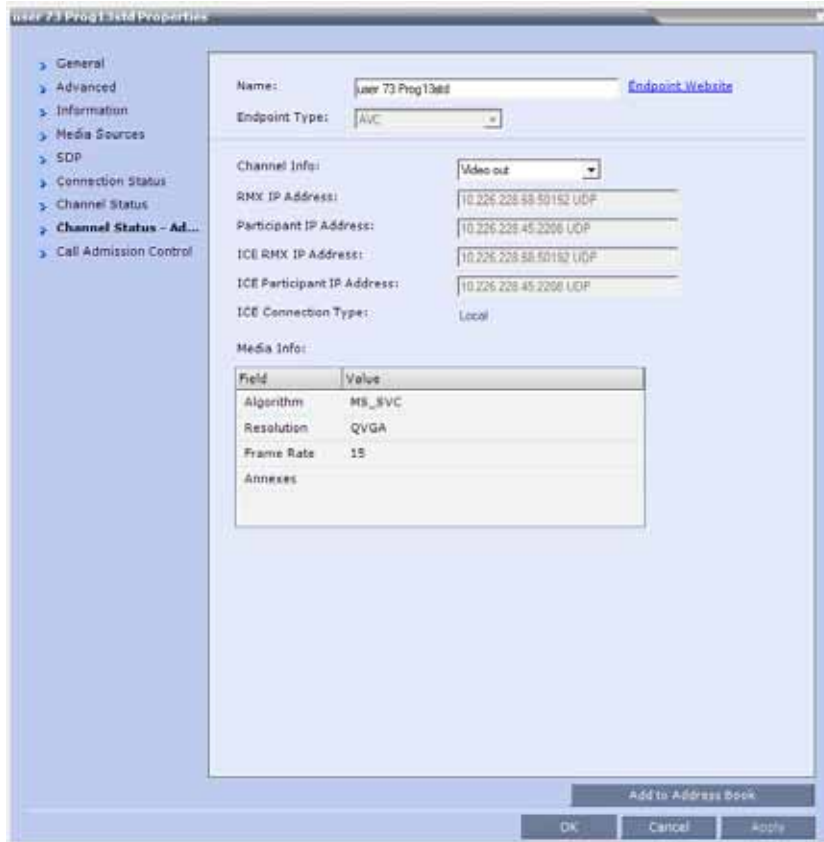

For more information see [Participant Level Monitoring](#).


DNS Load Balancing on Lync Front End Pool

In the Lync environment, the Front End server is the SIP server, Focus server and AVMCU.

Collaboration Servers 1800/2000/4000, support DNS load balancing that balances the SIP traffic to maximum up to 12 Front End servers in the same Front End Pool.

The Collaboration Server supports DNS load balancing on Lync Server 2010 and Lync Server 2013.

Following figure shows how the Collaboration Server supports DNS load balancing.

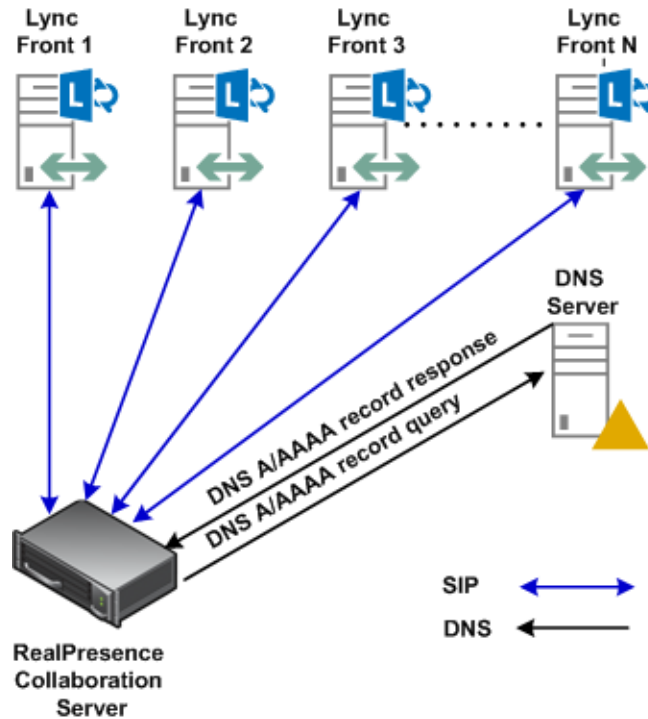


All Front End (FE) servers in the pool register themselves in DNS server with the same FQDN but different IP addresses (both IPv4 and IPv6 are supported).

The Collaboration Server supports both FE Load Balancing and FE Failover.

- FE Load Balancing, is implemented by the DNS server. Each DNS query is replied by the DNS server with different priorities, and the Collaboration Server connects with the FE with the highest priority.
- FE Failover, in case the Collaboration Server fails to communicate with the first FE in the DNS list, it will try and gain connection with the second FE in the list, and so on.

The Collaboration Server presents the FE IP connected in the **Default IP Service Properties > SIP Servers** tab as shown below:

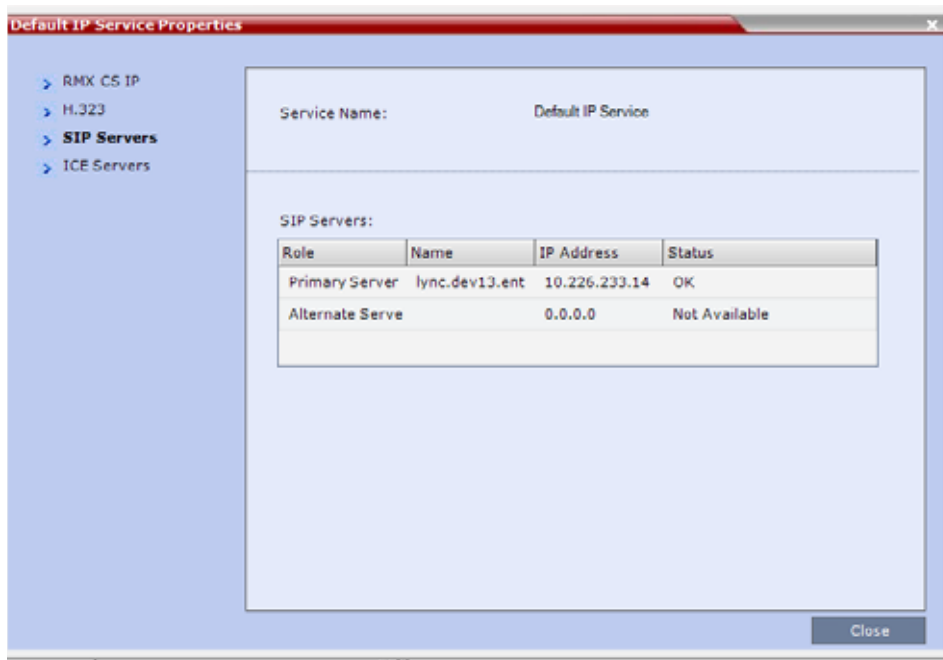

Video Resource Requirement Selection in Lync 2013 AVMCU Cascade


Collaboration Server resource usage in Lync 2013 AVMCU Cascade can be configured in the Advanced tab of the Profile dialog by selecting either Resource Optimized or Video Optimized.

Resource Optimized

Resolutions of up to HD540p30 (SD30) are supported, depending on the conference's profile setting.

Video Optimized

Resolutions of up to HD720p30 are supported, depending on the conference's profile setting.

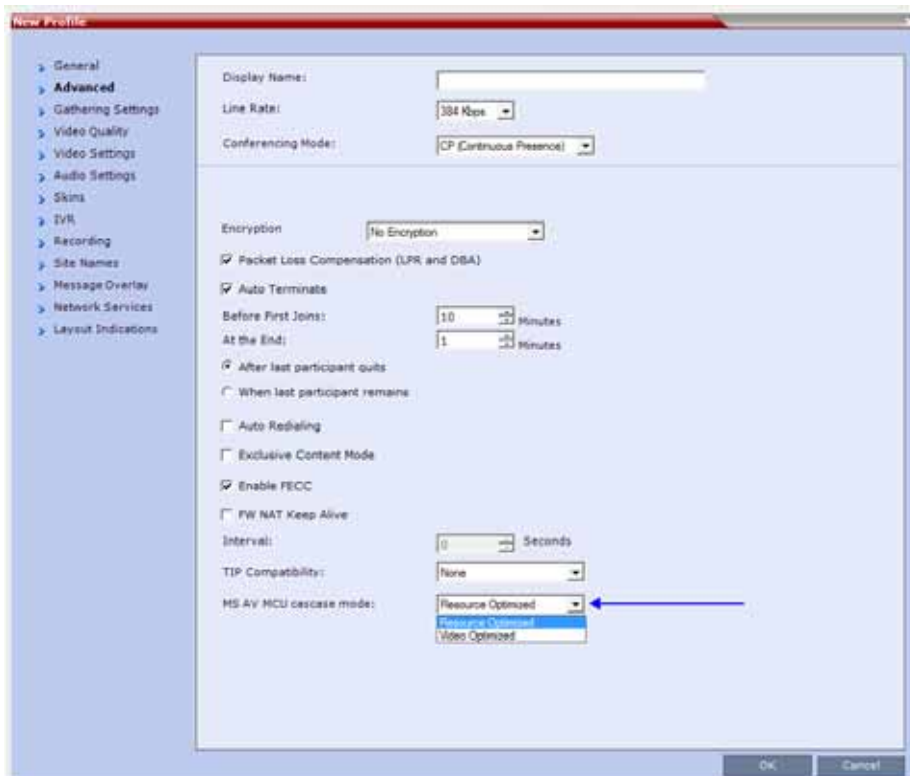

If the Collaboration Server has insufficient resources, endpoints will be connected at the lowest resolutions possible: CIF or SD. If the Collaboration Server has no available resources, endpoints will not be connected.

Calls that are initially connected as Audio Only will only have video resources allocated to them should they be escalated to video calls.

Video Forcing and Changing Layout in Lync 2013 AVMCU Cascade

Lync 2013 AVMCU Cascade behaves in the same manner as Collaboration Server to Collaboration Server Cascading.

The Conference Layout as well as the Personal Layouts of participants can be changed. Participants can be forced to appear in specific video cells of the layouts.

If Lync 2013 video streams are to be included in a Polycom Conference Layout, the Collaboration Server will remove these streams from the layout sent over the AVMCU cascade link.

If Lync 2013 video streams are to be included in a Personal Conference Layout, the Collaboration Server will not remove these streams from the layout to be sent over the AVMCU cascade link.

Handle Low Bit Rate Calls From the AVMCU

If the Collaboration Server or a Group Series endpoint is connected to the AVMCU at a bit rate of 256kbps, the AVMCU transmits only one video stream even if it receives multiple video source requests.

At bit rates lower than 256kbps (128kbps and 192kbps) the AVMCU does not transmit video.

This limitation can be controlled using the `DISABLE_LYNC_AV_MCU_128_AND_192_KBPS` System Flag. The flag must be manually added to the System Configuration and its value modified as required:

NO (Default)—The Collaboration Server sends 128kbps or 192kbps (according to the call rate) but will receive 256kbps for each incoming video stream.

YES—The Collaboration Server will not send or receive video from the Lync AVMCU. The connection is audio only.

For more information see, [Modifying System Flags](#).

Remove Empty Cells From the Video Layout

Empty cells in the Video Layout can occur as result of the following causes:

Case 1 — A camera connected to a PC that is hosting a Lync client is switched off, the cell in which the Lync client was displayed remains in the video layout and is empty.

Case 2 — A Lync 2013 Client is connected using a CIF port at a bit rate that exceeds 192kbps.

Case 1

The empty cell can be removed from the video layout by adding the `REMOVE_EP_FROM_LAYOUT_ON_NO_VIDEO_TIMER` System Flag and setting its value as required.

Range:

- 0 – 19 (seconds): The feature is disabled.
- 20 – 300 (seconds): The feature is enabled.

Default: 20

When enabled (flag value 20 - 300), the endpoint is removed when the empty cell is detected, and the cell is used for another participant if:

- No video RTP messages are received from the EP for the defined timer value in addition to one of the following timers, depending on the call type:
 - `DETECT_SIP_EP_DISCONNECT_TIMER`
 - `DETECT_H323_EP_DISCONNECT_TIMER`

- Either the PRESERVE_PARTY_CELL_ON_FORCE_LAYOUT System Flag = NO
or
The endpoint is not forced in the layout.



In Lync environments that do not include ICE, the empty cell will remain in the layout for direct Lync calls.

Case 2

The RTV_MAX_BIT_RATE_FOR_FORCE_CIF_PARTICIPANT System Flag has been added to the system with a default value of 192 (kbps). This ensures that the Lync Client sends the correct resolution and that its cell in the Video Layout is displayed correctly.

Initiate and Connect to a Conference

There are several methods that Lync clients can use to initiate, and connect to, conferences running in an environment that contains both Microsoft's AVMCU and Polycom's Realpresence Collaboration Servers.

This section discusses:

- Meet Now Lync Conferences
- RealConnect for Microsoft Lync (Requires DMA in the network infrastructure)

Meet Now Lync Conference

When using this method an ad hoc (Meet Now) Lync conference is started by the Lync client. A Collaboration Server Meeting Room is then dragged and dropped into the conference from the Contact List.

This option requires that the IP address of the destination AVMCU is routable, and that no network address translation is done on the way, so that no firewall or other barriers will trigger the NAT Traversal functionality.

To connect to an AVMCU conference:

- 1 Click **Meet Now** on the Lync menu bar, click or click the arrow next to the **Options** button and select **Meet Now** to start an ad-hoc conference.
- 2 When the **Group Conversation** dialog box is displayed, drag the Meeting Room from the Lync client **Contacts List** into the Group Conversation list.

After the Meeting Room is connected on Lync, an invitation is sent from the AVMCU to the Collaboration Server using the Centralized Conference Control Protocol (CCCP). The Collaboration Server responds triggering a standard SIP invite from the AVMCU to the Collaboration Server.

Multiple participants can now connect to both the Collaboration Server Meeting Room and the AVMCU, and participate in a cascaded conference.



When a conference begins as Audio Only, a Lync user cannot add video to the conference after the VMR is connected to the conference. The conference will remain Audio Only.

RealConnect for Lync 2013

RealConnect for Microsoft Lync requires that a conference call be scheduled and that Lync clients receive an Online Meeting invite containing the dial-in conferencing ID.

To connect to a scheduled Online Meeting:

- » Click the **Join Lync Meeting** link in the Online Meeting invite.

A call to the AVMCU is initiated. The RealPresence Platform obtains the Lync conference SIP URI is obtained. The SIP URI is used to create an ad hoc Virtual Meeting Room (VMR) which is assigned the same number as the Lync conference ID. The VMR then dials into the Online Meeting and connects as a Lync Client.

Should the RealConnect-ed Collaboration Server fail, the DMA containing the VMR to which both MCUs were connected, is capable of recreating the conference on an alternate Collaboration Server.

To achieve this, the (original) Collaboration Server provides the DMA with the AVMCU Focus (SIP) URI as part of the conference information, even for Ad-Hoc conferences.

In addition, two additional values are passed via the XML API from the Collaboration Server to the DMA within the conference information, to enable proper termination of the recreated conference (as explained in the conference termination below):

- The original AVMCU conference type - scheduled (AVMCU), scheduled (PCM), Ad-Hoc, or none (meaning non-AVMCU conference).
- The value of the "To" field in the original invitation.

Cascading Conference Reestablishment Process

- 1 Once the DMA detects a Collaboration Server failure (via XML API or ping), it disconnects all the Collaboration Server SIP connections (legs) except the SIP connection to the AVMCU.
- 2 The DMA recreates the conference on an alternate Collaboration Server, and passes to it (via XML API) the AVMCU Focus URI, the conference type, and the value of the original "To" field in the Microsoft invite, as preserved from the original conference.
- 3 The Collaboration Server uses the Focus URI to recreate the cascading link to the AVMCU, and recreates the conference using the conference type retained from the original conference.
- 4 The Collaboration Server uses the original "To" field value to create SIP sessions to the "leftover" SIP connections from the AVMCU to the original Collaboration Server in order to disconnect them.

Reestablished Cascading Conference Termination

Once all the Collaboration Server participants are disconnected, the Collaboration Server uses the retained conference type to determine whether or not the cascading link to the AVMCU should be disconnected:

- For scheduled conferences - The cascading link is disconnected.
- For Ad-Hoc conferences - The cascading link is not disconnected.

Call Admission Control

Call Admission Control (CAC) can be enabled if the RealPresence Collaboration Server system is configured with a Microsoft Edge Server. Call Admission Control (CAC) is enabled by manually adding the flags to the system Configuration and setting their values as follows:

- To enable the Call Admission Control implementation in the Collaboration Server:
 - CAC_ENABLE=YES
- In addition, to ensure that endpoints such as HDX remain connected to the conference for its duration when the Collaboration Server is configured with FQDN address and the Lync server is working with load balancing and holds more than one address, the following flags must be manually added and their settings modified:
 - SIP_TCP_PORT_ADDR_STRATEGY = 0
 - SIP_TCP_KEEP_ALIVE_TYPE=4
 - SIP_TCP_KEEP_ALIVE_BEHAVIOR=0
- When Call Admission Control is enabled in the local network, by default the local the ICE channel is closed after applying CAC bandwidth management.
 - To change and preserve the ICE channel open throughout the call:
 - PRESERVE_ICE_CHANNEL_IN_CASE_OF_LOCAL_MODE=YES.

For more information about adding and modifying System Flags and full System Flag descriptions see [Manually Adding a System Flag](#).

Conferencing Behavior

Continuous Presence Conferences

In Continuous Presence conference, Lync clients connect with any allocated bandwidth.

Video Switching Conferences

In Video Switching conferences, Lync clients must connect with the same line rate as the conference, otherwise they will be connected as Secondary (Audio Only) participants.

Mitigation of the line rate requirement can be effected by modifying the system flag:
VSW_RATE_TOLERANCE_PERCENT.

This system flag determines the line rate tolerance.

Possible values are: 0 - 75.

Setting this flag to 0 (0% - default) determines no line rate tolerance and the participant must connect at the conference line rate.

Setting this flag to a value between 1 and 75 determines the percentage of bandwidth that can be deducted from the required bandwidth to allow participants to connect to the conference.


For example, if you enter 20 (for 20%) as the flag value, the participant will be able to connect to the conference if the allocated line rate is up to 20% lower than the conference line rate (or between 80% and 100% of the required bandwidth). If the conference line rate is 1024Kbps, participant with a line rate between 819Kbps and 1024Kbps will be able to connect to the conference.

When a Tolerance is set, the Highest Common mechanism is enabled for the conference line rate. When a participant with a lower line rate connects to the conference, the line rates of all other connected participants are reduced accordingly. When the participant with the low line rate disconnects from the conference, the line rates of the remaining participants are increased to the highest possible rate common to all connected participants.

For example, if a participant with a line rate of 900Kbps connects to a conference in which all other participants are connected at a line rate of 1024Kbps; the line rate of all participants will decrease to 900Kbps. When this participant disconnects, the line rate of the remaining participants will increase to 1024Kbps.

Monitoring Participant Connections

Activation of the Call Admission Control for a call can be viewed in the Participant Properties - Call Admission Control dialog box.

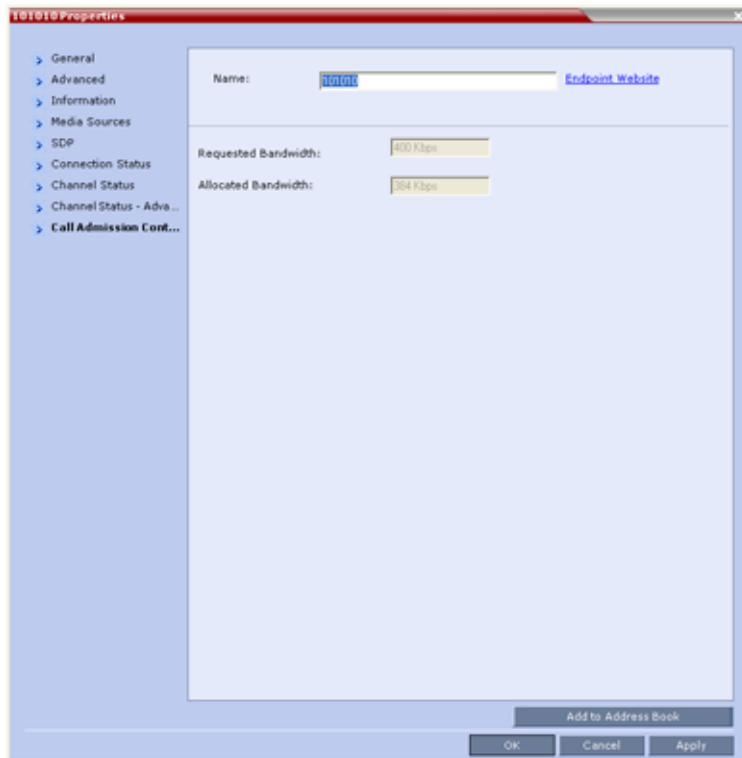

This information applies only to dial-in participants.

The following information is available:

Participant Properties - Call Admission Control Parameters

Field	Description
Requested Bandwidth	Indicates the bandwidth requested by the Lync client (usually the line rate set for the conference). NA - indicates that Call Admission Control is disabled.
Allocated Bandwidth	The actual bandwidth allocated by the Lync Policy Server. NA - indicates that Call Admission Control is disabled.

Collaboration Server Chairperson vs. AVMCU Meeting Organizer

In Microsoft Outlook, you can determine that all the participants in the conference should await the Organizer in the AVMCU lobby. This feature in AVMCU is, in fact, the equivalent of Collaboration Server chairperson concept, where participants await the chairperson presence before the conference can begin, depending on conference/profile configuration.

While the Collaboration Server cascaded link is awaiting the Organizer attendance in the AVMCU lobby, the participants connected to the Collaboration Server will also await his presence in the lobby, provided the conference profile is configured to begin upon first chairperson connecting (first check-box below).

The screenshot shows the 'lorit_exp_profileProperties' dialog box with the following settings:

- Display Name: lorit_exp_profile
- Line Rate: 384 Kbps
- Conferencing Mode: CP and SVC
- Conference IVR Service: Conference IVR Service
- Conference Requires Chairperson
- Terminate Conference after Chairperson leaves




If the conference is configured to be without a chairperson, the participants connected to the Collaboration Server can freely view and hear each other, whereas the participants connected to the AVMCU have both video and audio muted.

Once the Organizer leaves the conference, the conference should not end automatically. Instead the Collaboration Server should imitate the client behavior.

If the cascading link to the AVMCU is disconnected, the Collaboration Server should follow the conference configuration, meaning, terminate the conference only if the **Terminate Conference after Chairperson leaves** (second check-box in the figure above).

The AVMCU cascaded link is considered as chairperson, resulting in the participants connected to the Collaboration Server awaiting the connection to AVMCU in the lobby, with no actual chairperson required on the AVMCU side or at an endpoint.

The Master AVMCU participant will have a chairperson icon () attached to its name in the Collaboration Server conference participants screen.

Since chairperson password is not supported in Microsoft Outlook, it is bypassed by exploiting the fact, that the Collaboration Server does not request a chairperson password if the conference password was entered. Therefore, the DMA generates a conference password, and uses this password when calling all the participants in the conference, which in turn use it to connect the conference, without the chairperson password being required.



All ContentConnect (Polycom content sharing for Microsoft environments) related actions begin only after the Collaboration was moved from the AVMCU lobby into the conference.

Active Alarms and Troubleshooting

Active Alarms

The following active alarms may be displayed in the Collaboration Server System Alerts pane when the Collaboration Server is configured for integration in the OCS environment:

Active Alarms

Alarm Code	Alarm Description
SIP TLS: Failed to load or verify certificate files	<p>This alarm indicates that the certificate files required for SIP TLS could not be loaded to the Collaboration Server. Possible causes are:</p> <ul style="list-style-type: none"> • Incorrect certificate file name. Only files with the following names can be loaded to the system: rootCA.pem, pkey.pem, cert.pem and certPassword.txt • Wrong certificate file type. Only files of the following types can be loaded to the system: rootCA.pem, pkey.pem and cert.pem and certPassword.txt • The contents of the certificate file does not match the system parameters
SIP TLS: Registration transport error	<p>This alarm indicates that the communication with the SIP server cannot be established. Possible causes are:</p> <ul style="list-style-type: none"> • Incorrect IP address of the SIP server • The SIP server listening port is other than the one defined in the system • The OCS services are stopped <p>Note: Sometimes this alarm may be activated without real cause. Resetting the MCU may clear the alarm.</p>
SIP TLS: Registration handshake failure	<p>This alarm indicates a mismatch between the security protocols of the OCS and the Collaboration Server, preventing the Registration of the Collaboration Server to the OCS.</p>

Active Alarms

Alarm Code	Alarm Description
SIP TLS: Registration server not responding	<p>This alarm is displayed when the Collaboration Server does not receive a response from the OCS to the registration request in the expected time frame. Possible causes are:</p> <ul style="list-style-type: none"> • The Collaboration Server FQDN name is not defined in the OCS pool, or is defined incorrectly. • The time frame for the expected response was too short and it will be updated with the next data refresh. The alarm may be cleared automatically the next time the data is refreshed. Alternatively, the OCS Pool Service can be stopped and restarted to refresh the data. • The Collaboration Server FQDN name is not defined in the DNS server. Ping the DNS using the Collaboration Server FQDN name to ensure that the Collaboration Server is correctly registered to the DNS.
SIP TLS: Certificate has expired	The current TLS certificate files have expired and must be replaced with new files.
SIP TLS: Certificate is about to expire	The current TLS certificate files will expire shortly and will have to be replaced to ensure the communication with the OCS.
SIP TLS: Certificate subject name is not valid or DNS failed to resolve this name	<p>This alarm is displayed if the name of the Collaboration Server in the certificate file is different from the FQDN name defined in the OCS.</p> <p>Note: Occasionally this alarm may be activated without real cause. Resetting the MCU may clear the alarm.</p>

ICE Active Alarms

When ICE environment is enabled in the Collaboration Server, failure to communicate with a required component triggers the display of an Active Alarm in the System Alerts pane.

The following table lists these active alarms:

ICE Environment - Collaboration Server Active Alarms

Active Alarm	Phase	Alarm Displayed When	Troubleshooting
ICE failure: Failed to register with OCS. Check the Collaboration Server's Server Name.	Registration	The Collaboration Server did not receive a confirmation response from the OCS to the Registration request.	<ul style="list-style-type: none"> Check that the Collaboration Server Name in IP Network Service - SIP Advanced is identical to the User name defined for the Collaboration Server in the OCS Active Directory. Make sure that the Collaboration Server user is defined in the OCS Active Directory.
ICE failure: Failed to subscribe with the OCS, therefore the A/V Edge Server URI was not received.	Subscribe	The Collaboration Server did not receive a confirmation response from the OCS to the Subscription request. The Subscription is required for obtaining the A/V Edge Server URI which is followed by the notify message containing the credentials).	
ICE failure: The Notify message containing the A/V Edge Server URI was not received	Notify	The Notify message containing the A/V Edge Server URI was not received by the Collaboration Server.	
ICE failure: Received Notification does not contain URI.	Notify	The notify message that was sent from the A/V Edge Server does not contain the A/V Edge server URI.	Verify the A/V Edge server is configured in the OCS.
ICE failure: No response from the A/V Edge Server to the Collaboration Server Service Request	Service	The Collaboration Server did not receive a confirmation response from the A/V Edge Server to the Service request.	
ICE failure: Received Service message does not contain the Credentials.	Service	The Service message response does not contain the Credentials.	

ICE Environment - Collaboration Server Active Alarms

Active Alarm	Phase	Alarm Displayed When	Troubleshooting
ICE failure: A/V Edge server URI cannot be resolved	Service	The Collaboration Server failed to resolve The remote address of the Edge server URI.	
ICE failure: Service credential denied. A/V Edge server credentials rejected by the OCS.	Service	This alarm indicates that the OCS does not configure with the credentials. Generated by the ICE stack.	

Troubleshooting

- At the end of the installation and configuration process, to test the solution and the integration with the OCS, create an ongoing conference with two participants, one dial-in and one dial-out and connect them to the conference.
- If the active Alarm `SIP TLS: Registration server not responding` is displayed, stop and restart the OCS Pool Service.
- If the communication between the OCS and the Collaboration Server cannot be established, one of the possible causes can be that the Collaboration Server FQDN name is defined differently in the DNS, OCS and Collaboration Server. The name must be defined identically in all three devices, and defined as type A in the DNS. You can test the definition of the Collaboration Server FQDN name in the DNS by pinging it, and receiving the Collaboration Server's signaling IP from the DNS in the response.
- The communication between the OCS and the Collaboration Server can be checked in the Logger files:
 - SIP 401/407 reject messages indicate that the Collaboration Server is not configured as Trusted in the OCS and must be configured accordingly.
 - SIP 404 reject indication indicates that the connection to the OCS was established successfully.

Known Issues

- Selecting Pause my Video in the OC Client causes the call to downgrade to Audio Only if the call was not originally an Audio Only call (the call was started as a video call).
If the call is started as an Audio Only call and video is added to it, or if the call was started as a video call and during the call it was changed to Audio Only and then back to video, selecting Pause my Video will suspend it as required.
- Rarely, the OC Client disconnects after 15 minutes. The OC Client can be reconnected using the same dialing method in which they were previously connected (dial-in or dial-out).
- Rarely, all SIP endpoints disconnect at the same time. The SIP endpoint can be reconnected using the same dialing method in which they were previously connected (dial-in or dial-out).

Appendix I - Polycom Open Collaboration Network (POCN)

Collaboration With Cisco's Telepresence Interoperability Protocol (TIP)

TIP is a proprietary protocol created by Cisco for deployment in Cisco TelePresence systems (CTS). Since TIP is not compatible with standard video communication systems, interoperability between Cisco and other vendors' Telepresence systems was initially impossible.

Gateways were developed to provide interoperability but were subject to the inherent problems of additional latency (delay) in connections and low video quality resulting from the reformatting of video and audio content.

Polycom's solution is to allow the Collaboration Server to natively inter-operate with Cisco TelePresence Systems, ensuring optimum quality multi-screen, multipoint calls between:

- Polycom Immersive Telepresence Systems (ITP) Version 3.1.1:
 - RPX 200
 - RPX 400
 - OTX 300(At Telepresence Licence is required on the Collaboration Server.)
- Polycom video conferencing endpoints
 - Standalone HDX
 - Polycom Group Series 300/500
- Microsoft
 - MS Lync (using MS-ICE)
 - RTV 720p
- Cisco TelePresence® System (CTS) Versions 1.10 Collaboration Server
 - CTS 1300
 - CTS 3010

Conferences hosted on the Collaboration Server can include a mix of existing end points (that do not support TIP) and CTS endpoints.

TIP-enabled endpoints must support TIP Version 7 or higher. Calls from endpoints supporting older versions of TIP will be rejected.



- Working in the Open Collaboration Server and TIP protocol are supported in AVC Conferencing Mode only.
- Although Cisco legacy endpoints are inter-operable with Collaboration Server (RMX) 1800 with no DSP cards, the MCU is not supported for integration into third-party and partner environments.
- Collaboration Server (RMX) 1800 Entry Level is not supported in POCN.

Deployment Architectures

The following multipoint topologies are given as examples. Actual deployments will depend on user requirements and available infrastructure:


- Single company with Polycom and Cisco Infrastructure
 - CTS and Polycom Telepresence Rooms in a corporate environment.
- Company to company via Service Provider
 - **Model 1:** Mixed Polycom and Cisco infrastructure at one of the companies, Cisco only infrastructure at the other.
 - **Model 2:** Polycom only infrastructure at one of the companies, Cisco only infrastructure at the other.

Single Company Model - Polycom and Cisco Infrastructure

The deployment architecture in [Single company with Polycom and Cisco Infrastructure - Polycom endpoints using SIP](#) shows a company that has a mixture of Polycom and Cisco endpoints, room systems and telephony equipment that needs to enable multipoint calls between all its video and audio endpoints using the Collaboration Server as the conference bridge.

As shown in [Single company with Polycom and Cisco Infrastructure - Polycom endpoints using SIP](#), Cisco Telepresence endpoints can connect to conferences using the TIP protocol, Polycom endpoints connected to the same conferences using SIP protocol.

Single company with Polycom and Cisco Infrastructure - Polycom endpoints using SIP

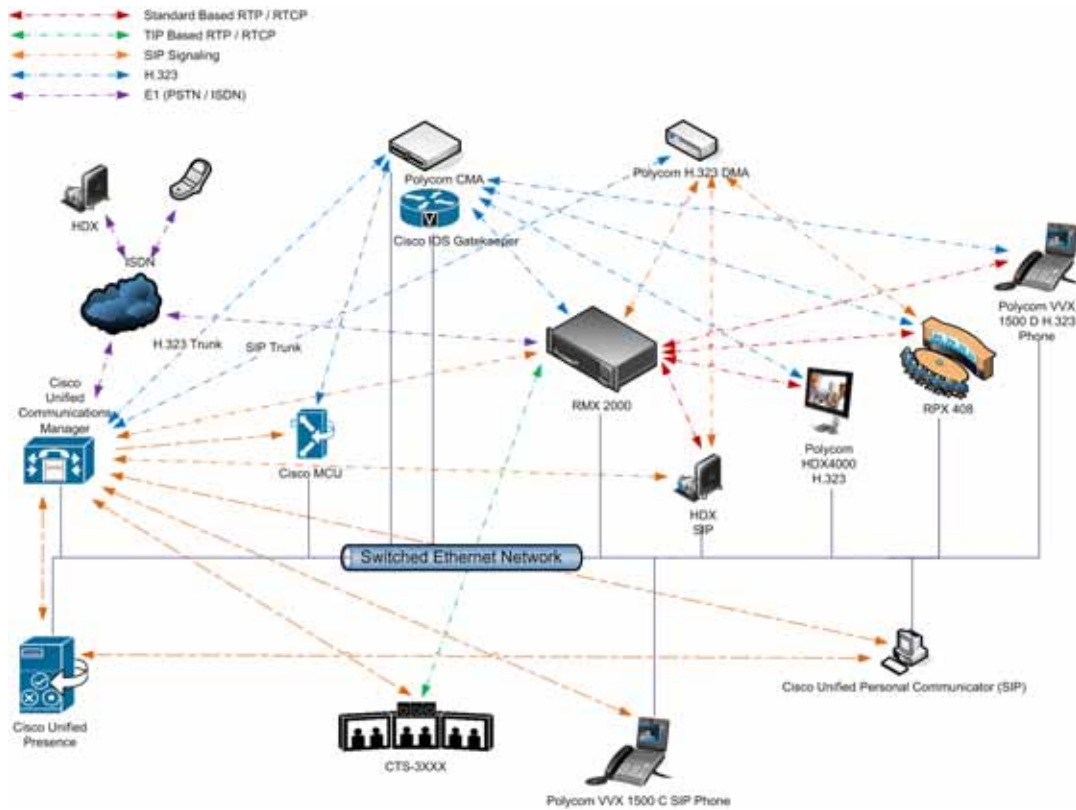

Polycom endpoints can also connect to Entry Queues, Meeting Rooms and conferences using all protocols, including TIP and SIP.

The following table lists components and versions of the Collaboration Server and Cisco Telepresence Systems (CTS) Integration Solution Architecture.

Solution Architecture Components

Component	Version	Description
CISCO Equipment		
CUCM	8.5.1, 8.6.2	Cisco Unified Communication Manager: CUCM must be configured to: <ul style="list-style-type: none"> Route calls to DMA (if present). Route all H.323 calls to the IOS gatekeeper, which can be either DMA or IOS.
IOS	15.1T	Cisco Internetwork Operating System - Gatekeeper
Endpoints (CTS)	1.7.2 (ATT), 1.8.1	Telephony, desktop and room systems. <ul style="list-style-type: none"> CTS endpoints must register to CUCM.

Solution Architecture Components

Component	Version	Description
Cisco Unified Video Conferencing 5230	7.2	MCU.
Cisco Unified Presence	8.5, 8.6	Network-based Presence and Instant Messaging.
Cisco Unified Contact Center Express	8.0, 8.5	Call distributor (ACD), interactive voice response (IVR) and computer telephony integration (CTI).
Cisco IP Communicator	7.0,8.6	Windows PC-based softphone application.
Cisco Unified Personal Communicator	8.5(2),8.5(5)	Web client for Presence and Instant Messaging.
Cisco Unified Video Advantage	2.2(2)	Video telephony functionality for Cisco Unified IP phones.
Cisco Unified IP Phones 7960, 7961, 7962, 7965, 7975	CUCM 8.5.1 / CUCM 8.6.1 compatible	IP Phones.
Cisco Unified IP Phones 9971	CUCM 8.5 / CUCM 8.6(2) compatible	
CTMS	1.7.3, 1.8.2	Cisco TelePresence Multipoint Switch.
Cisco Unified Border Element	15.1T	SBC - Voice and video connectivity from enterprise IP network to Service Provider SIP trunks.
Telepresence Server	2.2(1.54)	Telepresence Server.
VCS	X7.1	Video Communication Server / Session Manager.

Polycom Equipment

DMA 7000	4.0	<p>Polycom Distributed Media Application</p> <ul style="list-style-type: none"> • DMA is an optional component but is essential if Content sharing is to be enabled. • All SIP endpoints register to DMA as a SIP Proxy. • DMA should be configured to route SIP calls (with CTS destination) to CUCM. If DMA is not present in the solution architecture, SIP endpoints must register to CUCM as gatekeeper. • DMA must be configured with a VMR (Virtual Meeting Room). Incoming calls are then routed to the Collaboration Server.
----------	-----	---

Solution Architecture Components


Component	Version	Description
Collaboration Server	7.6 and higher	<p>MCU:</p> <ul style="list-style-type: none"> • Functions as the network bridge for multipoint calls between H.323, SIP and TIP endpoints. • The Collaboration Server can be interfaced to CUCM using a SIP trunk, enabling CTS to join multipoint calls on Collaboration Server. Signaling goes through the CUCM while the media in TIP format goes directly between the CTS and Collaboration Server. • The Collaboration Server must be configured to route outbound SIP calls to the DMA. • The H.323 Network Service of the Collaboration Server should register it's dial prefix with the DMA gatekeeper. • When the DMA is not used an Ad-hoc Entry Queue, designated as Transit Entry Queue, must be pre-defined on the Collaboration Server.
MLA	3.0.3	<p>Multipoint Layout Application</p> <p>Required for managing multi-screen endpoint layouts for Cisco CTS 3XXX, Polycom TPX, RPX or OTX systems.</p>
Endpoints		<p>Telephony, desktop and room systems.</p> <ul style="list-style-type: none"> • H.323 endpoints must register to the IOS gatekeeper. • Polycom SIP endpoints must register to DMA as SIP Proxy when DMA is used. • H.323 endpoints must register to the IOS gatekeeper.

Call Flows

Multipoint call with DMA

In this example:


- Collaboration Server prefix in the gatekeeper: 72
- Virtual Meeting Room in DMA: 725123
- DMA Meeting Number: Generated by DMA

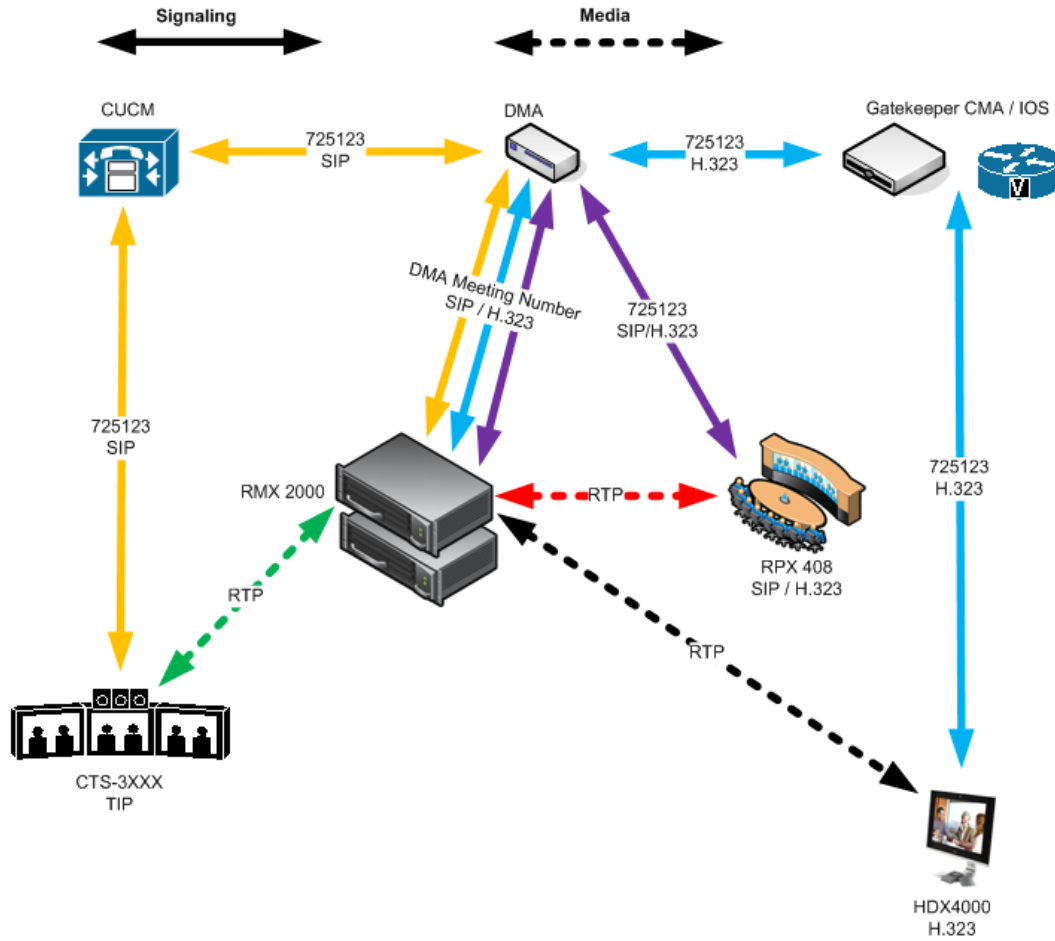

Multipoint call without DMA

In this example:

- Collaboration Server prefix in the gatekeeper: 72
- CUCM: According to its Dial Plan forwards calls with prefix 72 to the Collaboration Server

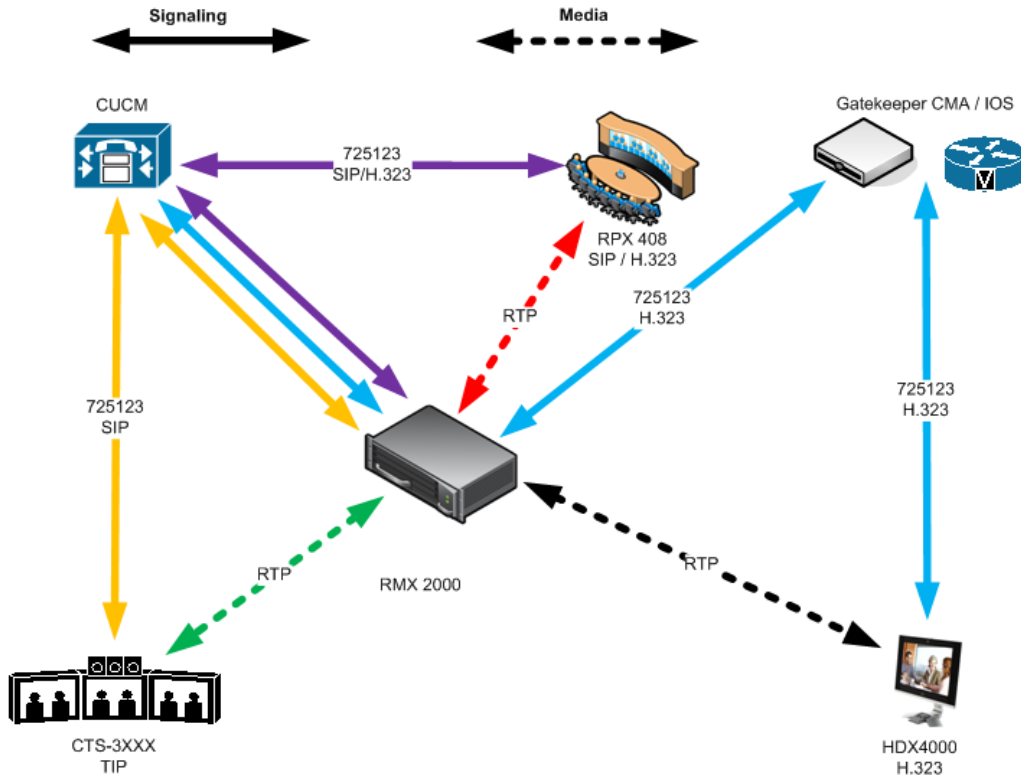

Company to Company Models Using a Service Provider

Using this topology, both companies connect to a Service Provider via a Cisco Session Border Controller (SBC). The Service Provider functions as a B2B Telepresence Exchange, enabling multipoint calls between the two companies and their respective video and audio endpoints using the Collaboration Server as the conference bridge.

The SBC functions as a firewall that the Service Provider can configure according to Trust Relationships between two or several companies. By using this method, companies do not have to open their corporate firewalls and administer connectivity with the many companies they may need to communicate with.

Two topology models are discussed:

- **Model 1:**
 - Company A has a Polycom only environment.
 - Company B has a Cisco only Environment.
- **Model 2:**
 - Company A has a mixed Polycom and Cisco environment.
 - Company B has a Cisco only Environment.

Model 1

The deployment architecture in [Call Flow](#) shows two companies: Company A and Company B.

Company A - has deployed a Polycom solution including:


- DMA
- Collaboration Server
- MLA
- Polycom telephony and desktop endpoints.

Company B - has deployed a Cisco solution including:

- CTS 1000
- CTS 3000

- Cisco telephony and desktop endpoints

Company to Company via Service Provider - Model 1

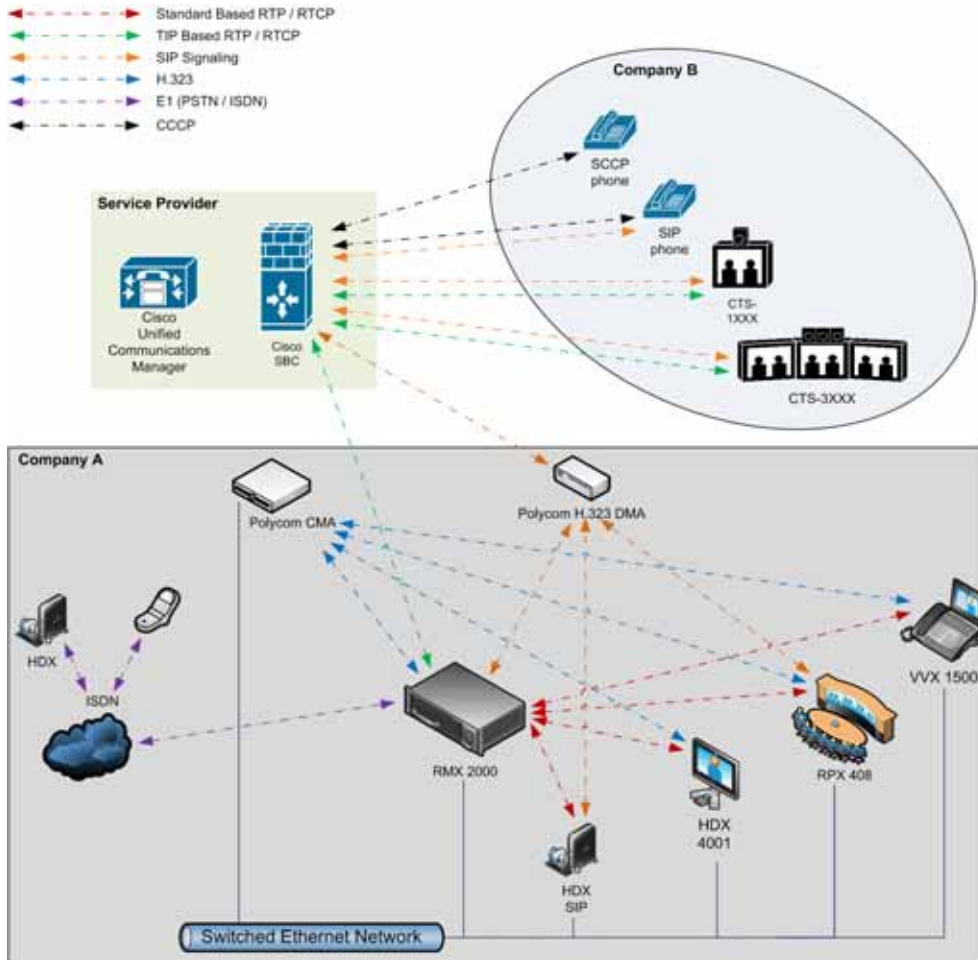


Call Flow

Multipoint call via Service Provider - Model 1

In this example:

- Collaboration Server prefix in the gatekeeper: 72
- Virtual Meeting Room in DMA: 725123
- DMA Meeting Number: Generated by DMA

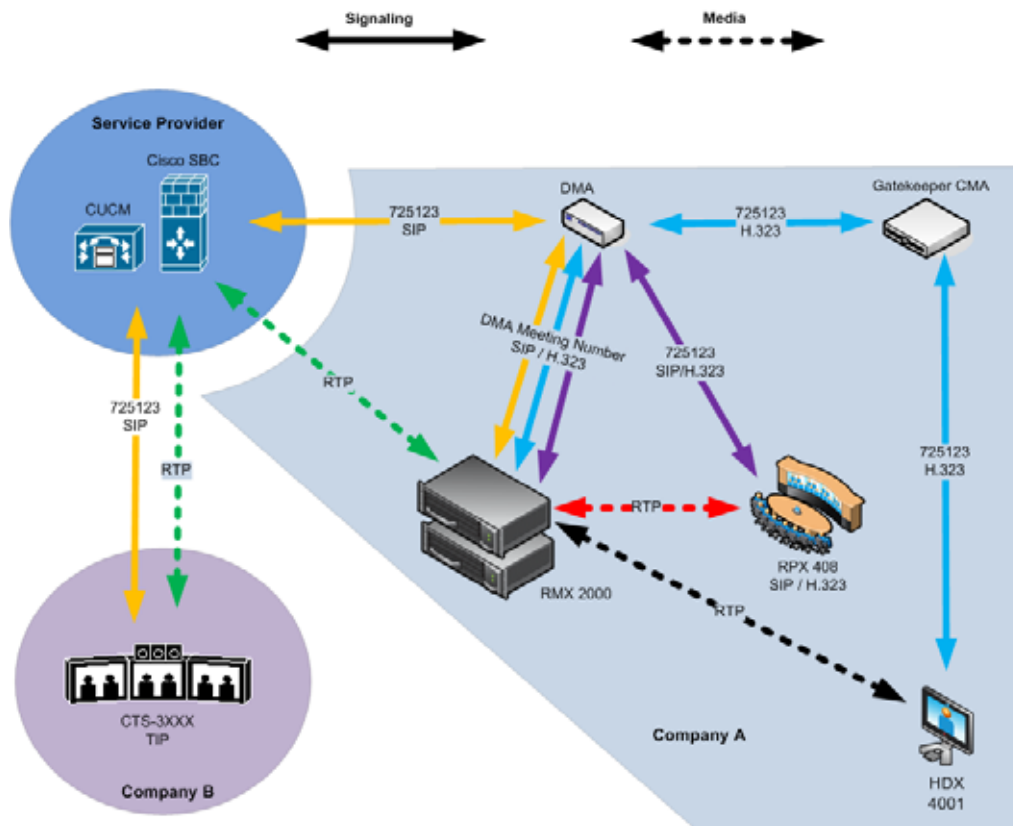


Multipoint call via Service Provider - Model 2

The deployment architecture in [The deployment architecture includes](#): shows two companies: Company A and Company B.

Company A - has the same deployment architecture as shown in [Single Company Model - Polycom and Cisco Infrastructure](#).

Company B - has deployed a Cisco solution including:

- CTS 1000
- CTS 3000
- Cisco telephony endpoints.

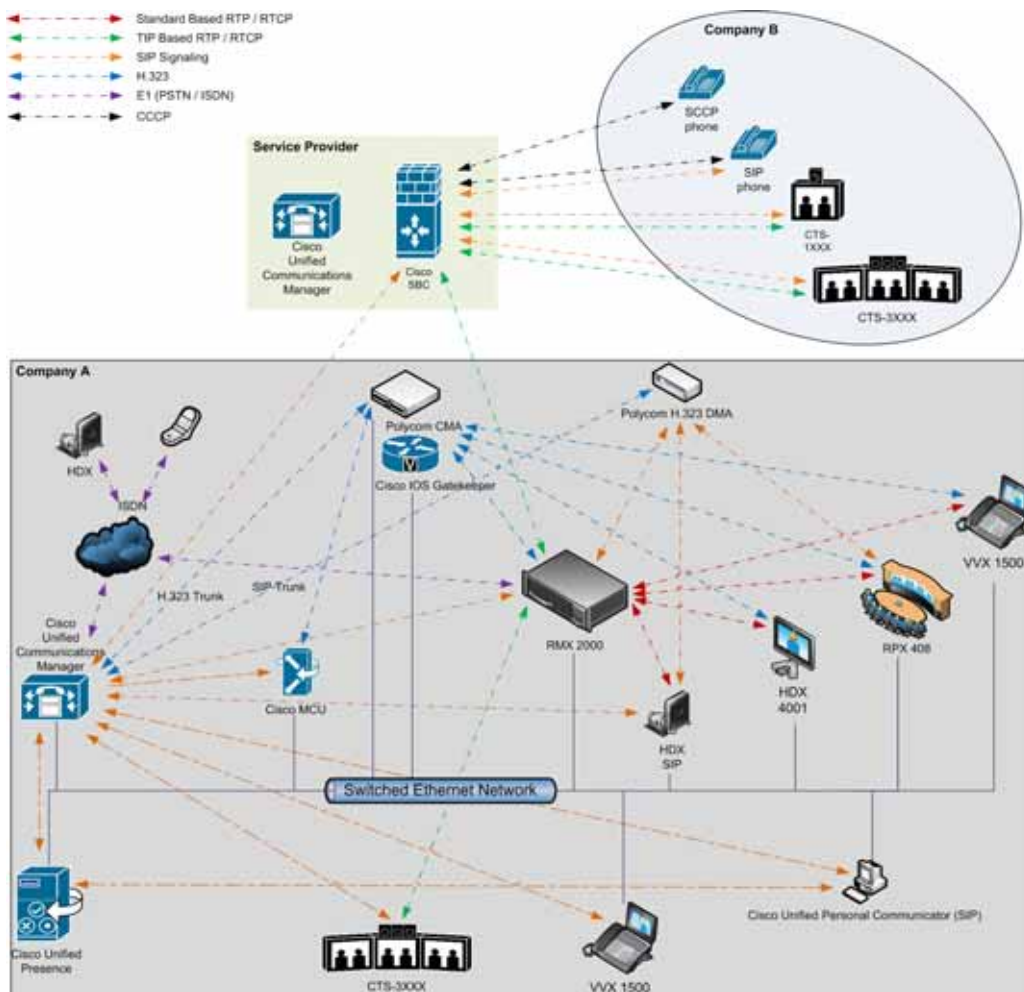

The deployment architecture includes:

Company A

For a full description of Company A's deployment, see [Single Company Model - Polycom and Cisco Infrastructure](#).

Differing or additional configuration requirements for each element of this deployment model are listed below:

Company A Solution Architecture Components

Component	Version	Description
CISCO Equipment		
CUCM	8.5	Cisco Unified Communication Manager: CUCM must be configured with a SIP trunk to the Service Provider's SBC.
Polycom Equipment		
Collaboration Server	7.6.x and up	MCU: Collaboration Server must be configured to send and receive RTP streams to and from the Service Provider's SBC.

Company B

Company B Solution Architecture Components


Component	Version	Description
CISCO Equipment		
Endpoints		Endpoints should register with the Service Provider's CUCM (or the local CUCM, if present).

Call Flow

Multipoint call via Service Provider - Model 2

In this example:

- Collaboration Server prefix in the gatekeeper: 72
- Virtual Meeting Room in DMA: 725123
- CUCM: According to its Dial Plan forwards calls with prefix 72 to the Collaboration Server

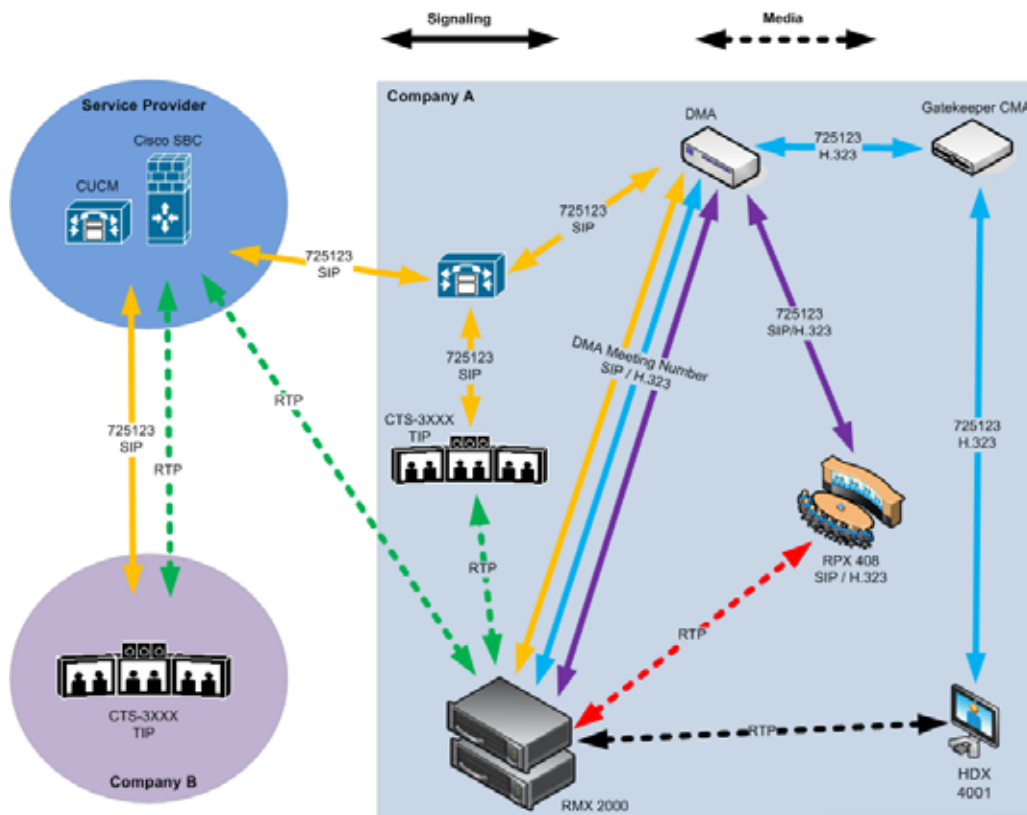

Administration

The various deployment combinations and settings within the various Deployment Architectures affects the administration of the system.

Gatekeepers

Standalone Polycom DMA System as a Gatekeeper

The Polycom DMA system can be used as the only gatekeeper for the network. Bandwidth and call admission control of endpoints registered with the DMA system is split between the DMA and the CUCM.

For more information see the *Polycom Unified Communications Deployment Guide for Cisco Environments*.

Standalone Cisco IOS Gatekeeper

The Cisco IOS Gatekeeper can be used as the only gatekeeper for the network if the management capabilities of the Polycom DMA system are not required.

For more information see the *Polycom Unified Communications Deployment Guide for Cisco Environments*.

Neighbored Cisco IOS and Polycom DMA Gatekeeper

Neighbored gatekeepers make it easier to create a common dial plan and should be considered when integrating an existing Cisco telephony environment with an existing Polycom network. Neighbored Gatekeepers allow number translation while maintaining the existing environments.

For more information see the *Polycom Unified Communications Deployment Guide for Cisco Environments, DMA*

The Polycom DMA system can be configured as a SIP proxy and registrar for the environment. When used as a SIP peer, the DMA system can host video calls between Cisco endpoints that are registered with the CUCM and Polycom SIP endpoints that are registered with the DMA system.

For more information see the *Polycom Unified Communications Deployment Guide for Cisco Environments*.

CUCM

When Polycom SIP endpoints (voice and video) are registered directly with CUCM you can take advantage of supported telephone functions. CUCM may not support the full range of codecs and features available on the Polycom equipment. CUCM supported codecs and features will be used in such cases.

For more information see *Polycom Unified Communications Deployment Guide for Cisco Environments*.

Configuring the Cisco and Polycom Equipment

MLA (Multipoint Layout Application) is required for managing CTS 3XXX layouts whether Polycom TPX, RPX or OTX systems are deployed or not. MLA is a Windows® application that allows conference administrators to configure and control video layouts for multipoint calls involving Polycom Immersive Telepresence (ITP) systems.

Call Detail Records (CDR) are generated on both the DMA Gatekeeper and the CUCM for reporting and billing purposes.

Cisco Equipment

To configure the various Cisco entities the following procedures are required.

CUCM

- » Configure the CUCM to send and receive calls from the H.323 network.
 - a With Neighbored IOS and DMA Gatekeepers
 - b With IOS Gatekeeper

For more information see the *Polycom Unified Communications Deployment Guide for Cisco Environments*.

IOS Gatekeeper

- Set up zones and gateway type prefixes to enable dialing to DMA and Collaboration Server systems.

IOS and DMA Gatekeepers (Neighbored)

- Configure the Cisco IOS Gatekeeper for two separate zones.

Polycom Equipment

The following table lists the Polycom products supported within the various Deployment Architecture.

Only Collaboration Server configurations are described in detail in this document.

Configuration procedures for all other solution components are described in the *Polycom Unified Communications Deployment Guide for Cisco Environments*.

Supported Polycom products

Polycom TIP and SIP	Version(s)
Polycom DMA 7000 system	V4.0
Polycom RealPresence Collaboration Server (RMX) 2000/4000 systems	V7.6 and higher
Immersive Telepresence Systems: <ul style="list-style-type: none"> • RPX 200 and 400 systems • OTX 300 system • TPX HD 306 system • ATX HD 300 system 	V3.0.3 Requires TIP option key. Requires Polycom Touch Control.
HDX Systems: <ul style="list-style-type: none"> • 7000 HD Rev C • 8000 HD Rev B • 9006 • 4500 	V3.0.3 Requires TIP option key.
Peripheral Polycom Touch Control	1.3.0
SIP ONLY (no TIP support)	Version(s)

Supported Polycom products

Spectralink wireless phones 8020/8030	
Polycom VVX 1500	V4.0
Polycom VVX 1500 C	V3.3.1
KIRK Wireless Server 300/600v3/6000	

The following procedures **1 -16** are a summary of the configuration procedures.

The detailed procedures **1 - 16** begin with [Procedure 1: Set the MIN_TIP_COMPATIBILITY_LINE_RATE System Flag](#).

Configuring the Collaboration Server

- 1 Set the **MIN_TIP_COMPATIBILITY_LINE_RATE** System Flag
- 2 Configuring the Collaboration Server to statically route outbound SIP calls to DMA or CUCM
- 3 Configuring the Collaboration Server's H.323 Network Service to register with DMA gatekeeper
- 4 Configuring a TIP enabled Profile on the Collaboration Server
- 5 Configuring an Ad Hoc Entry Queue on the Collaboration Server if DMA is not used
- 6 Configuring a Meeting Room on the Collaboration Server
- 7 Configuring Participant Properties for dial out calls

Configuring DMA

If DMA is present in the configuration perform procedures [Configuring DMA to route SIP calls to CUCM](#) and [Configuring a Virtual Meeting Room \(VMR\)](#), otherwise skip to procedure [Configuring CMA to route H.323 calls to Collaboration Server](#).

- 1 Configuring DMA to route SIP calls to CUCM
- 2 Configuring a Virtual Meeting Room (VMR)

The procedures for configuring DMA are described in detail in the *Polycom Unified Communications Deployment Guide for Cisco Environments*.

Configuring Endpoints

- 1 Configuring H.323 endpoints to register to the IOS gatekeeper
The procedures for configuring H.323 endpoints are described in detail in the *Polycom Unified Communications Deployment Guide for Cisco Environments*.
- 2 Configuring SIP endpoints to register to:
 - a DMA as SIP Proxy
 - b CUCM as SIP Proxy

The procedures for configuring SIP endpoints are described in detail in the *Polycom Unified Communications Deployment Guide for Cisco Environments*.
- 3 Configuring TIP endpoints to register to:
 - a DMA

b CUCM

The procedures for configuring TIP-enabled endpoints are described in detail in the *Polycom Unified Communications Deployment Guide for Cisco Environments*

Configuring Entry Queues and IVR Services

Conference IVR and Entry Queue/Virtual Entry Queues are supported with AVC TIP protocol in conferences that include both TIP-enabled and non-TIP-enabled endpoints.

A Virtual Entry Queue can be configured to either IVR Only Service Provider or External IVR Control mode.

TIP-enabled endpoints can be moved from the Entry Queue to the destination conference if the TIP Compatibility Modes settings in the Profile are identical for both conferencing entities (it is recommended to use the same Profile for both entities).

TIP IVR users can access the conference directly or enter the Entry Queue/Virtual Entry Queue and provide a password to access the conference.

The IVR services can be enabled with **Prefer TIP** TIP compatibility mode.

IVR media files, WAV for voice messages and JPG for video slides, are all stored on the Collaboration Server.

Guidelines

- IVR default audio files are enabled for all TIP Compatibility Modes.
- In order for the MCU to detect DTMF digits from TIP-enabled endpoints, the system flag `SIP_REDUCE_AUDIO_CODECS_DECLARATION` must be set to YES.
If the flag is set to NO, the MCU cannot detect DTMF digits from TIP endpoints.
- In an mixed TIP environment there is no support for content in cascaded conferences.

Entry Queue and Virtual Entry Queue Access

TIP endpoints can dial-in to conferences directly using the IVR, Entry Queue/Virtual Entry Queue and IVR Only Service Provider.

Configuring the Conference and Entry Queue IVR Services

The IVR module includes two types of services:

- Conference IVR Service that is used with conferences
- Entry Queue IVR Service that is used with Entry Queues

The configuration process is the same for TIP and non-TIP enabled Conferences and Entry Queues.

Content

Polycom and Cisco endpoints can share Content within a Cisco TelePresence environment. The content sharing experience depends on whether the endpoints are registered with the DMA or CUCM.

Endpoint Registration Options - Content Sharing Experience

Multipoint Calls on Collaboration Server	Content Sharing	People + Content
Endpoints Registered to DMA		
HDX/ITP to HDX/ITP	Yes	Yes
HDX/ITP to Cisco CTS	Yes	Yes
Cisco CTS to HDX/ITP	Yes	No
Endpoints Registered to CUCM		
HDX/ITP to HDX/ITP	Yes	No
HDX/ITP to Cisco CTS	Yes	No
Cisco CTS to HDX/ITP	No	No

- H.239
 - A variety of resolutions and frame rates are supported.
For more information see [Content Sharing Using H.239 Protocol](#) and [Content Sharing Using People+Content Protocol](#).
 - Can be used with SIP and H.323 endpoints, desktop (CMAD), room systems (HDX) and ITP (OTX, RPX).
 - Not supported by Lync clients, IBM clients and Cisco CTS endpoints.
 - Cannot be used when HDX endpoints are registered to CUCM.
- TIP
 - The resolution is fixed at XGA at 5fps, 512 Kbps.
 - Supported on HDX, Polycom ITP and Cisco CTS systems.
- The following content compatibility options are available:
 - None (TIP not enabled) – TIP endpoints cannot join the conference.
 - Prefer TIP - Both TIP and non-TIP endpoints can share content via H.264, base profile, using resolution and rate as described above.
For more information see [Procedure 4: Configuring a TIP Enabled Profile on the Collaboration Server](#).

Procedure 1: Set the MIN_TIP_COMPATIBILITY_LINE_RATE System Flag

The **MIN_TIP_COMPATIBILITY_LINE_RATE** System Flag determines the minimum line rate at which an Entry Queue or Meeting Room can be TIP enabled.

CTS version 1.9.1 is required, and if CUCM is present in the environment, a minimum line rate of 1280 kbps must be set in the conference profile. Calls at lower line rates are rejected, therefore the System Flag value must be set to 1280 or higher.

HD Video Resolutions for TIP calls are determined according to the following table:


TIP HD Video Resolution by Line Rate

Line Rate	Video Resolution
Line Rate >=3Mbps	HD1080p30
3Mbps > Line Rate >= 936kbps	HD720p30
Line Rate < 936kbps	Call is dropped.

For more information see [Modifying System Flags](#).

Procedure 2: Configuring Collaboration Server to statically route outbound SIP calls to DMA or CUCM

- 1 In the **IP Network Services Properties** dialog box, click the **SIP Servers** tab.
- 2 In the **SIP Server** field, select **Specify**.
- 3 In the **SIP Server Type** field, select **Generic**.
- 4 Set **Refresh Registration** to every **3600** seconds.
- 5 If not selected by default, change the **Transport Type** to **TCP**.
- 6 In the **SIP Servers** table:
 - a Enter the IP address of the DMA or CUCM in both the **Server IP Address or Name** and **Server Domain Name** fields.
 - b The **Port** field must be set to its default value: **5060**. DMA and CUCM use this port number by default.
- 7 In the **Outbound Proxy Servers** table:
 - a Enter the IP address in the Server IP Address or Name field. (The same value as entered in Step 6a.)
 - b The **Port** field must be set to its default value: **5060**.
(By default, the **Outbound Proxy Server** is the same as the **SIP Server**.)

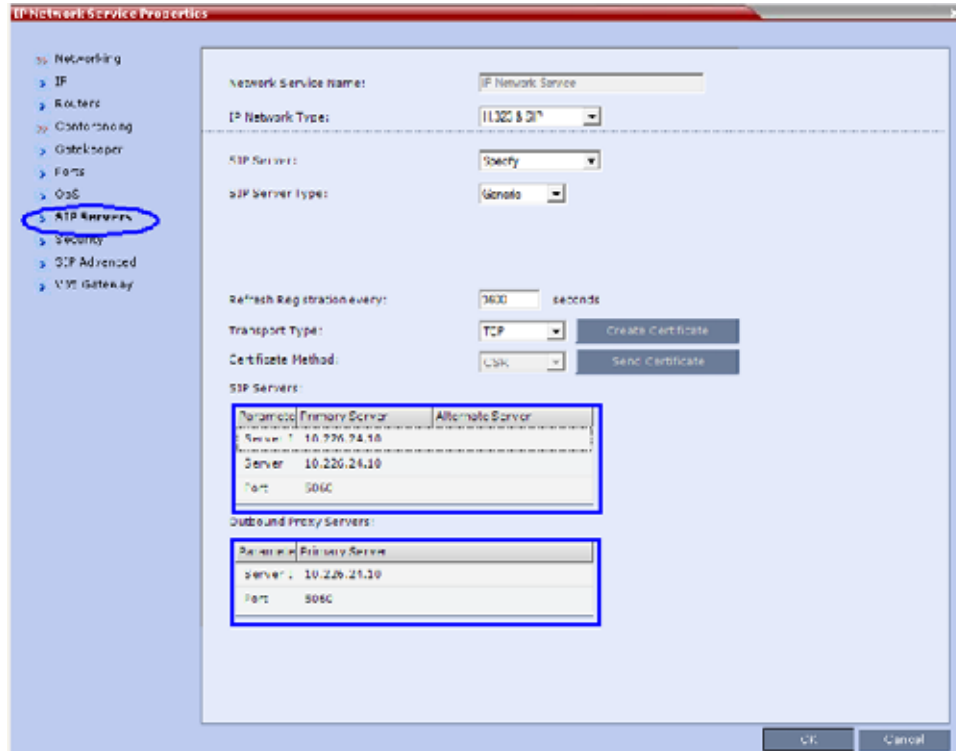


When configuring Collaboration Server to statically route SIP calls to DMA or CUCM, it is important to also configure the Collaboration Server's H.323 Network Service to register with DMA gatekeeper. For more information see [Procedure 3: Configuring the Collaboration Server's H.323 Network Service to register with DMA gatekeeper](#).

Procedure 3: Configuring the Collaboration Server's H.323 Network Service to register with DMA gatekeeper

- 1 In the **IP Network Services Properties** dialog box, click the **Gatekeeper** tab.

- 2 In the **MCU Prefix in Gatekeeper** field, enter the prefix that the Collaboration Server uses to register with the gatekeeper.

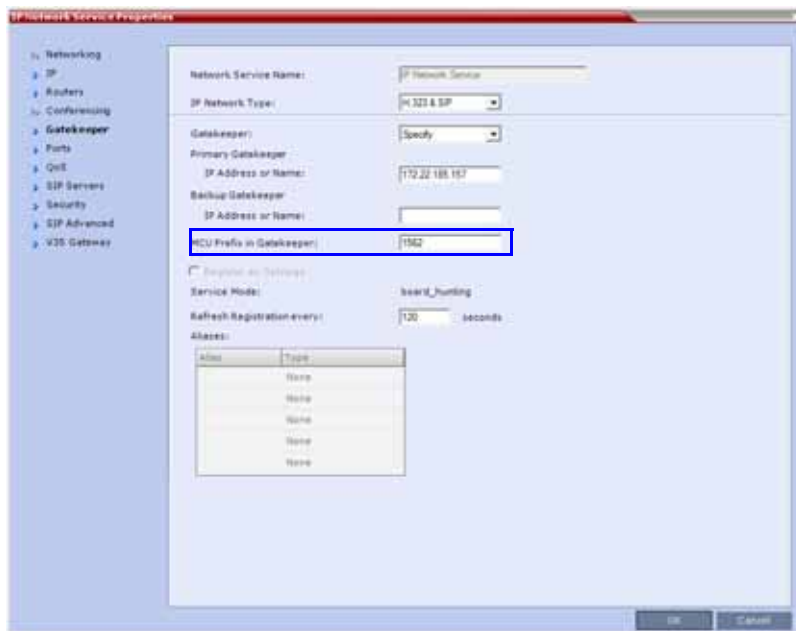


Procedure 4: Configuring a TIP Enabled Profile on the Collaboration Server

TIP enabled profiles must be used for the Entry Queues and Meeting Rooms defined on the Collaboration Server. (Different Profiles can be assigned to Entry Queues and Meeting Rooms, however they must be TIP enabled.) When TIP is enabled in the Profile, Gathering Settings and Message Overlay options are disabled.

- 1 Create a New Profile for the Meeting Room.

- 2 In the **New Profile - General** tab, set the **Line Rate** to a value of at least that specified for the **MIN_TIP_COMPATIBILITY_LINE_RATE** System Flag in Procedure 1.

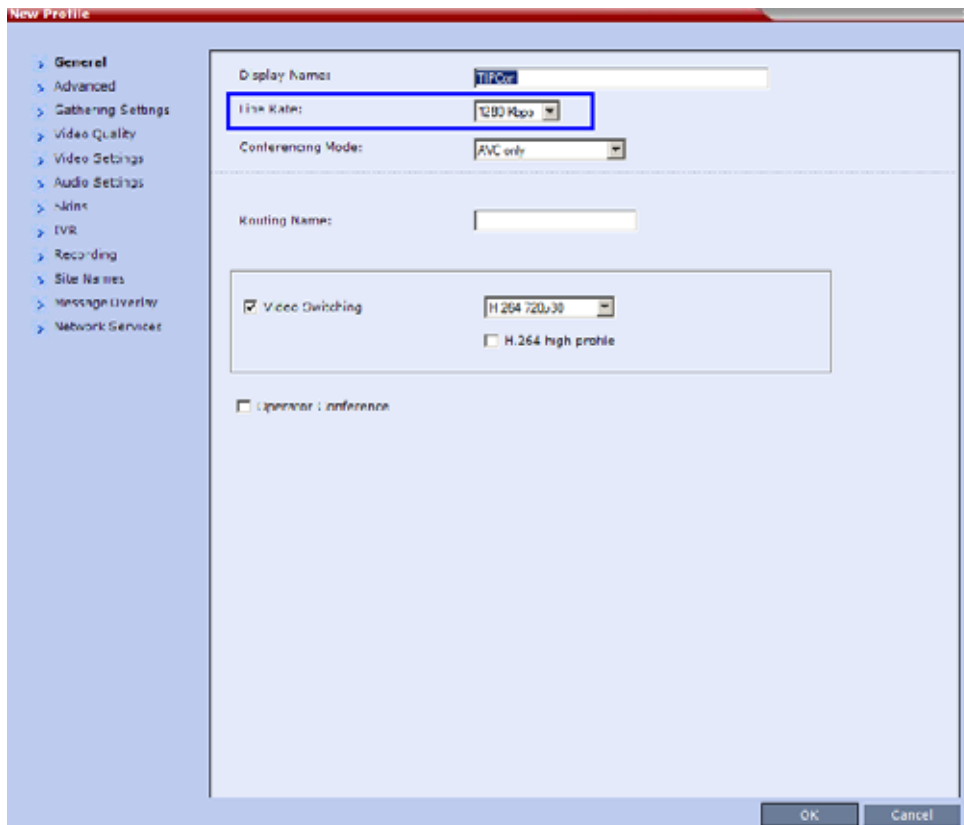

3 Click the **Advanced** tab.


The screenshot shows the 'Factory_Video_Profile Properties' dialog box with the 'Advanced' tab selected. The left sidebar lists various settings categories, with 'Advanced' highlighted. The main area contains the following configuration options:

- Display Name: Factory_Video_Profile
- Line Rate: 384 Kbps
- Conferencing Mode: CP (Continuous Presence)
- Encryption: No Encryption
- Packet Loss Compensation (LPR and DBA)
- Auto Terminate
 - Before First Joins: 10 Minutes
 - At the End: 1 Minutes
 - After last participant quits
 - When last participant remains
- Auto Redialing
- Exclusive Content Mode
- Enable FECC
- FW NAT Keep Alive
 - Interval: 0 Seconds
- TIP Compatibility: Prefer TIP
- MS AV MCU cascade mode: Resource Optimized

Buttons for 'OK' and 'Cancel' are located at the bottom right of the dialog.

4 Select **Prefer TIP** as the **TIP Compatibility** mode. To view its behavior, see the [Content Sharing Behavior](#) tables listed at the end of this procedure.

5 Click the **Video Quality** tab.

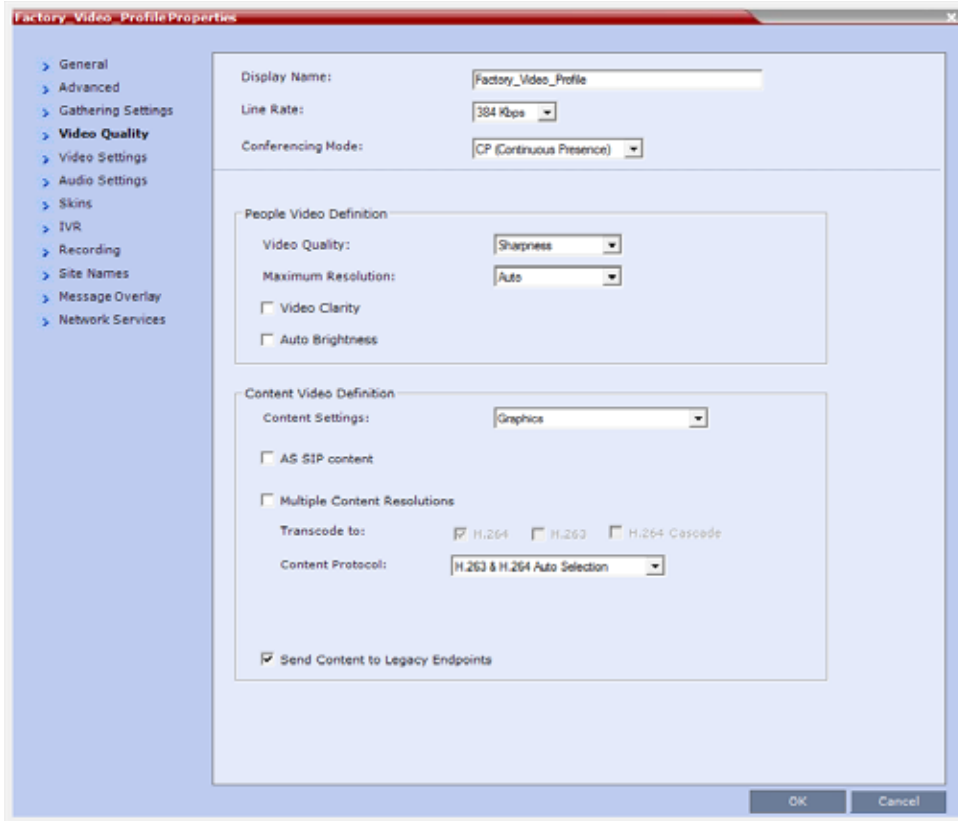

Content Settings is disabled if **TIP Compatibility** is set to **Prefer TIP** in the **Advanced** tab.

6 Click the Video Settings tab.

New Profile

> General
> Advanced
> Gathering Settings
> Video Quality
Video Settings
> Audio Settings
> Skins
> IVR
> Recording
> Site Names
> Message Overlay
> Network Services

Display Name:

Line Rate: 304 Kbps

Conferencing Mode: AVC only

Presentation Mode

Telepresence Mode: Auto

Same Layout

Telepresence Layout Mode: Continuous Presence

Lecturer View Switching

Auto Scan Interval(s): 10

Auto Layout

1
2
3
4
5+
9
10+
Overlay

OK Cancel

7 Set the Telepresence Mode to Auto.**8 Assign the New Profile to the Meeting Room. For more information see [Creating a New Meeting Room](#).**

Content Sharing Behavior

The following tables list the system's Content sharing behavior for the various combinations of TIP Compatibility mode settings and the following endpoints:

Polycom Immersive Telepresence Systems (ITP) Version 3.0.3:

- RPX 200
- RPX 400
- OTX 300
- TPX HD 306
- ATX HD 300

Polycom video conferencing endpoints (HDX) Version 3.0.3:

- 7000 HD Rev C
- 8000 HD Rev B
- 9006
- 4500

Cisco TelePresence® System (CTS) Versions 1.7 / 1.8:

- CTS 1000
- CTS 3000

TIP Compatibility - None

None		Content Receiver	
		HDX / ITP	CTS
Content Sender	HDX / ITP	Media: H.264 Flow Control: H.323 via H.239 SIP via BFCP	Not Connected
	CTS	Not Connected	Not Connected

TIP Compatibility - Prefer TIP


Prefer TIP		Content Receiver	
		HDX / ITP	CTS
Content Sender	HDX / ITP	Media: H.264 Flow Control: H.323 via H.239 SIP via BFCP	TIP via Auto Collaboration
	CTS*		

* CTS Version 1.9.1 and higher support H.264 Content.


In Prefer TIP mode, it is pre-requisite that the CTS and CUCM versions support H.264 base profile content without restrictions and that the CTS version be 1.9.1 or higher and that CUCM version be version 9.0 or higher.

Procedure 5: Configuring an Ad Hoc Entry Queue on the Collaboration Server if DMA is not used

- 1 Create or select the **Entry Queue** as described in [Entry Queues](#).
- 2 In the New Entry Queue or Entry Queue **Properties** dialog box, ensure that **Ad Hoc** is selected.

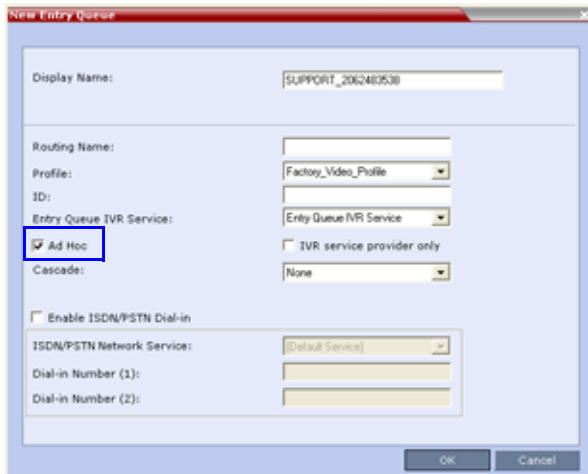

- 3 Ensure that the Entry Queue is designated as the **Transit Entry Queue** as described in [Setting a Transit Entry Queue](#).

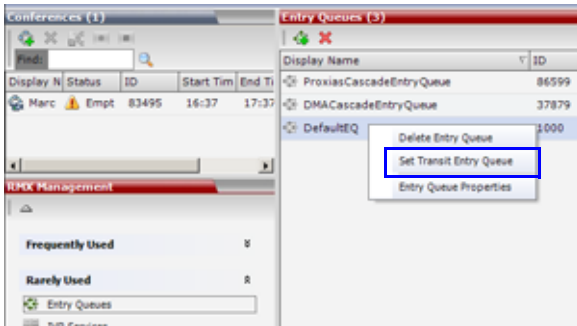

Procedure 6: Configuring a Meeting Room on the Collaboration Server


The Profile for the Meeting Room must be TIP enabled as described in Procedure 4.

For more information see [Creating a New Meeting Room](#).

Procedure 7: Configuring Participant Properties for dial out calls

Participant Properties must be configured to ensure that defined participants inherit their TIP settings from the Profile assigned to the Meeting Room.

- a Define the **New Participant - General** settings. For more information see [Adding a Participant to the Address Book](#).
- b Click the **Advanced** tab.

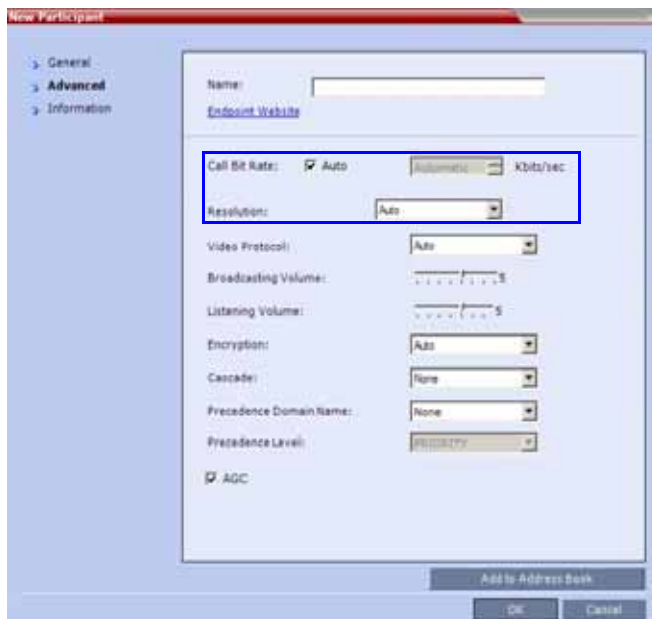

- c Ensure that:
 - ◆ Call Bit Rate is set to Automatic or at least equal to or greater than the value specified by the **MIN_TIP_COMPATIBILITY_LINE_RATE** System Flag.
 - ◆ Resolution is set to **Auto** or at least **HD 720**.
 - ◆ Video Protocol is set to **Auto** or at least **H.264**.

Collaboration with Microsoft and Cisco

This solution enables Polycom, Microsoft and Cisco users, each within their own environment, to participate in the same conference running on an Collaboration Server.

The Collaboration Server natively inter-operates with Microsoft Lync and Cisco TelePresence Systems, ensuring optimum quality multi-screen, multipoint calls between:

- Polycom Immersive Telepresence Systems (ITP) Version 3.1.1:
 - RPX 200
 - RPX 400
 - OTX 300
- Polycom video conferencing endpoints
 - Standalone HDX
 - Polycom Group Series 300/500
- Microsoft
 - MS Lync (using MS-ICE)

- RTV 720p
- Cisco TelePresence® System (CTS) Versions 1.10
 - CTS 1300
 - CTS 3010

The deployment architecture in [Single company with Polycom and Cisco Infrastructure - Polycom endpoints using SIP](#) shows a company that has a mixture of Polycom, Cisco and Microsoft endpoints, room systems and telephony equipment that needs to enable multipoint calls between all its video and audio endpoints using the Collaboration Server as the conference bridge.

This solution enables Polycom, Microsoft and Cisco users, each within their own environment, to participate in the same conference running on an MCU.

In the solution described in [Single company with Polycom and Cisco Infrastructure - Polycom endpoints using SIP](#):

- DMA is required as all calls are dial-in to Virtual Meeting Rooms (VMR) provisioned on the DMA.
- Microsoft and Cisco clients dial the same VMR number to connect to the conference.
- Dial- out calls directly from the RMX are not supported.
- Lync Clients cannot share content with CTS
- SIP trunks are required to the DMA from:
 - MS Lync as a Static Route.
 - CUCM


Deployment Architecture:

- DMA is required as all calls are dial-in to Virtual Meeting Rooms (VMR) provisioned on the DMA.
- Microsoft and Cisco clients dial the same VMR number to connect to the conference.
- Dial- out calls are not supported
- Lync Clients can not share content with CTS
- SIP trunks are required to the DMA from:
 - MS Lync as a Static Route.
 - CUCM



For more information, see [Cisco TIP Support](#).

POCN Polycom, Microsoft and Cisco Infrastructure. Solution Architecture components

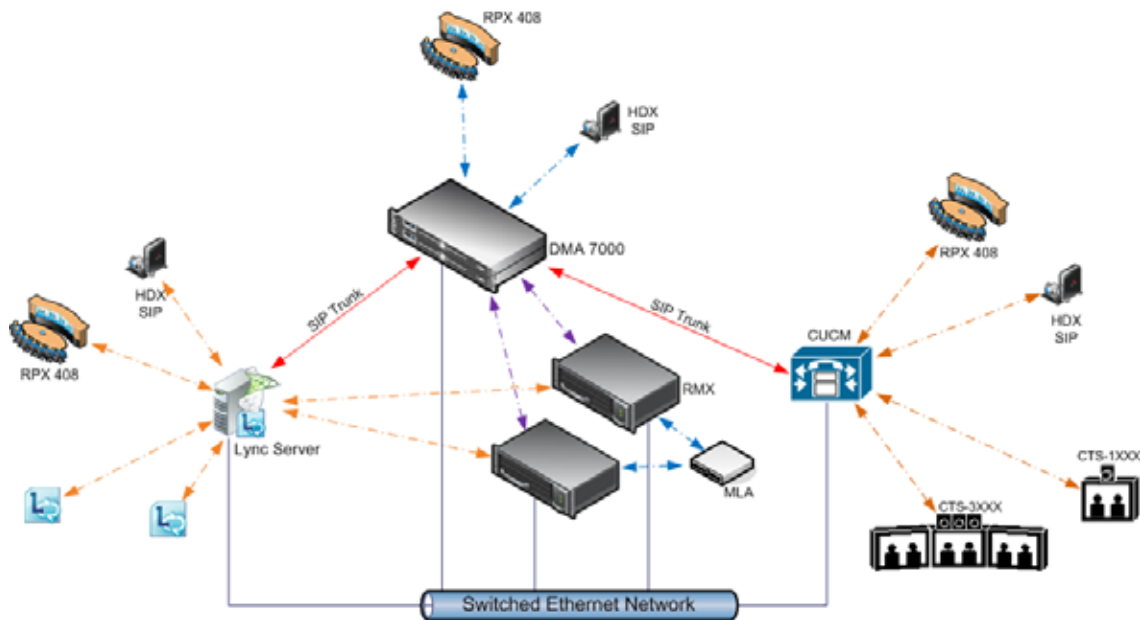

POCN Polycom, Microsoft and Cisco Infrastructure. Solution Architecture components

Component	Version
Polycom	
HDX	3.0.5
Polycom® RealPresence® Media Suite	1.7
DMA	5.0
CMAD	5.2.3
ITP (OTX, RPX, ATX, TPX)	3.0.5
Conferencing for Outlook (PCO)	1.0.7
Touch Control	1.3
Microsoft	
Microsoft Lync 2010 Server	4.0.7577.223(CU10)
Microsoft Lync 2013 Server	5.0.8308.556 (CU3)
Microsoft Lync 2010 client	4.0.7577.4051 CU4
Exchange 2007 R2 SP3	8.3.213.1
Exchange 2010 SP2	14.2.247.5

POCN Polycom, Microsoft and Cisco Infrastructure. Solution Architecture components

Component	Version
Outlook 2007	12.0.6557.5001 SP2
Outlook 2010	14.0.6112.5000
Cisco	
CUCM	8.5, 8.6.2
Cisco Unified Personal communicator	8.5(2),8.5(5)
Cisco Unified IP Phones 7960, 7961, 7962, 7965, 7975	CUCM 8.5 / CUCM 8.6(2) Compatible
CTS	1.7.4, 1.8.1
C90, C20	TC5.0

The following are not supported:


- In the Lync environment:
 - Sending or receiving Content.
 - Dial-out to Lync clients.
 - Presence of VMRs
- In the Cisco environment:
 - TLS and SRTP
 - OBTP

Call Flow

Multipoint Calls using DMA

In this example:

- Endpoint registration: To either DMA, Lync or CUCM.
- DMA dial in Prefix: 72
- Virtual Meeting Room in DMA: 725123
- DMA Meeting Number: Generated by DMA

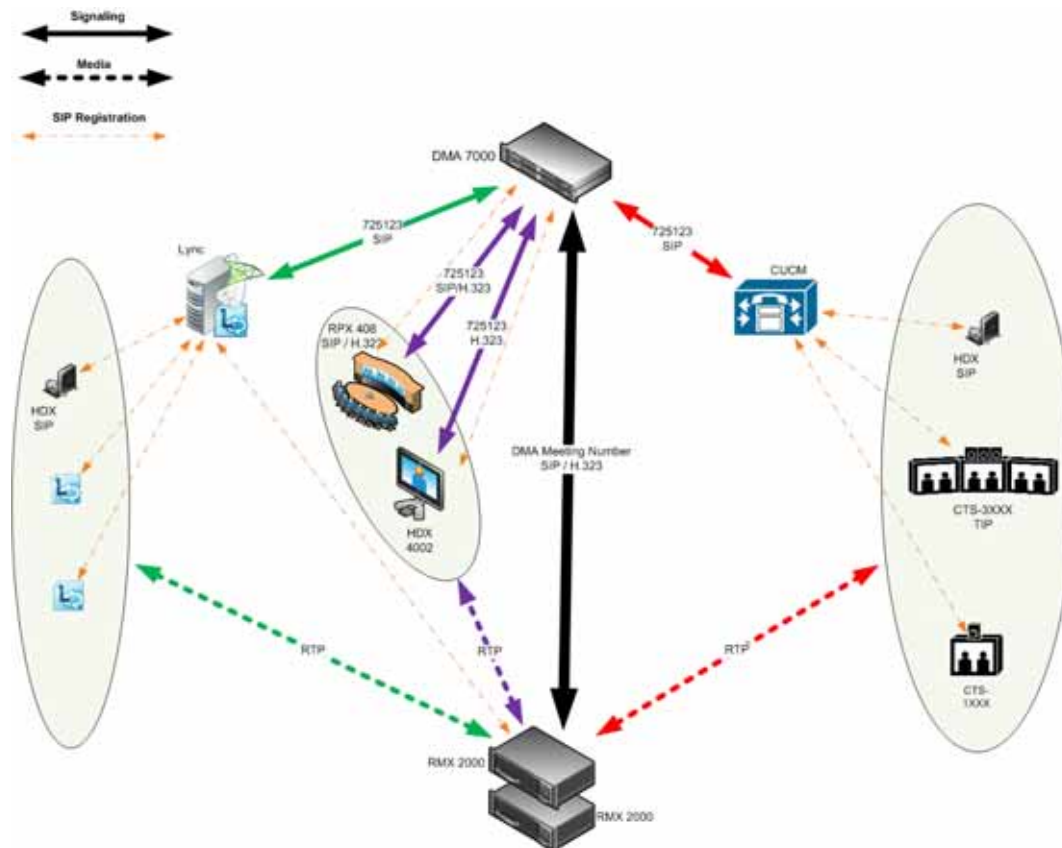

Administration

The various deployment combinations and settings within the Deployment Architecture affects the administration of the system.

DMA

The DMA system can be configured as a SIP proxy and registrar for the environment as well as a Gatekeeper for dial in H.323 calls. When configured as a Gateway for dial in H.323 calls, it enables H.323 endpoints to connect to the same VMR as SIP clients.

When used as a SIP peer, the DMA system can host video calls between Cisco endpoints that are registered with the CUCM, Lync Clients that are registered with the Lync Server and Polycom endpoints that are registered with the DMA system.

For more information see [Using a Polycom DMA System as SIP Peer](#) in the *Polycom Unified Communications Deployment Guide for Cisco Environments*.

Microsoft Lync Server

Microsoft Lync Server manages Presence for each registered Polycom endpoint and enables video calls between Lync Clients and Polycom endpoints allowing Lync contacts to be called without needing to know their addresses.

RTV video, MS-ICE and Lync-hosted conferencing are supported when Polycom endpoints are registered to Lync Server. Polycom endpoints use H.264, while Lync Clients use the RTV protocol.

CUCM

When Polycom SIP endpoints (voice and video) are registered directly with CUCM you can take advantage of supported telephone functions. CUCM may not support the full range of codecs and features available on the Polycom equipment. CUCM supported codecs and features will be used in such cases.

For more information see [Direct Registration of Polycom Endpoints with the Cisco Unified Communications Manager Participants](#) in the *Polycom Unified Communications Deployment Guide for Cisco Environments*.

Solution Interoperability Table

The following table lists components and versions of the Collaboration Server, Microsoft and Cisco Telepresence Systems (CTS) Integration Solution Architecture.

Solution Architecture Components

Component	Version	Description
CISCO Equipment		
CUCM	9.0.1	Cisco Unified Communication Manager: <ul style="list-style-type: none"> • CUCM must be configured to route calls to ASR/SBC. CUCM must be configured with a SIP trunk to the Service Provider's SBC. • All endpoints must register once with the CUCM • SIP trunks from CUCM to Polycom system components (eg. DMA) should be configured with Music on Hold disabled.

Solution Architecture Components

Component	Version	Description
ASR (Cisco SBC)	100x	The Cisco Aggregation Services Routers (ASR) Series includes Cisco IOS XE Software Internetwork Operating System - Gatekeeper. It controls and manages real-time multimedia traffic flows between IP/SIP network borders, handling signaling, data, voice, and video traffic.
Polycom Equipment		
DMA	6.0.0_ATT_Build_25	<p>Polycom Distributed Media Application</p> <ul style="list-style-type: none"> DMA is an optional component but is essential if Content sharing is to be enabled. All SIP endpoints register to DMA as a SIP Proxy. DMA should be configured to route SIP calls (with CTS destination) to CUCM. DMA can be configured with a VMR (Virtual Meeting Room). Incoming calls are then routed to the Collaboration Server.
Collaboration Server	8.1.1 and up	<p>MCU:</p> <ul style="list-style-type: none"> Functions as the network bridge for multipoint calls between H.323, SIP and TIP endpoints. The Collaboration Server can be interfaced to CUCM using a SIP trunk, enabling CTS to join multipoint calls on Collaboration Server. Signaling goes through the CUCM while the media in TIP format goes directly between the CTS and Collaboration Server. The Collaboration Server must be configured to route outbound SIP calls to DMA. Collaboration Server must be configured to send and receive RTP streams to and from the Service Provider's SBC.
MLA Server	3.0.5	<p>Multipoint Layout Application</p> <p>Required for managing multi-screen endpoint layouts for Cisco CTS 3XXX, Polycom TPX, RPX or OTX systems.</p>
HDX and ITP Endpoints	3.1.1.1	<p>Telepresence, desktop and room systems.</p> <ul style="list-style-type: none"> Polycom SIP endpoints must register to DMA as SIP Proxy.
Microsoft		
Lync 2010	4.0.7577.183 CU4	
Lync 2010 client	4.0.7577.405 1 CU4	
Exchange 2007 R2 SP3	8.3.213.1	
Exchange 2010 SP2	14.2.247.5	

Solution Architecture Components

Component	Version	Description
Outlook 2007	12.0.6557.50 01 SP2	
Outlook 2010	14.0.6112.50 00	

TIP Layout Support & Resource Usage

Cisco Telepresence endpoints using TIP protocol support only one (CTS 1000) or three (CTS 3000) display screens. Therefore, Polycom Telepresence endpoints will adjust their display to use one or three screens as follows:

- **OTX system** - Works with three screens, therefore no adjustment is required and it should be set to work in room switch Telepresence Layout Mode (while avoiding zooming in/out)
- **RPX 2xx** - This endpoint works with two screens, therefore it will adjust to use only **one** screen.
- **RPX 4xx** - This endpoint works with four screens, therefore it will adjust to use only **three** screens.
- **Standalone HDX** - behaves as the CTS 1000 and uses **only** one screen.
- **Group system 300/500** - behaves as the CTS 1000 and uses **only** one screen.

The Polycom MLA Server manages the conference template layouts for Telepresence systems.

The number of screens used by each TIP-enabled endpoint is determined during the capabilities exchange phase of the dial-in connection. It affects the usage and allocation of resources used with TIP-enabled endpoints.

Supported TIP Resolutions and Resource Allocation**Supported Resolutions**

In Telepresence TIP-enabled environment, only two video resolutions are available: 720p30 and 1080p30.

Supported resolution per conference line rate

Conference Line Rate	Selected Resolution
3Mb or higher	1080p 30 fps
963kbps to 3Mb	720p 30 fps
Up to 936kbps	Call is disconnected.

Resource Allocation

The MCU media processor (ART) supports up to three TIP-enabled screens as follows:

- One TIP-enabled endpoint with three screens
- Up to three TIP-enabled endpoint with one screen

TIP-enabled endpoint with three screens must be handled by the same media processor. This endpoint may fail to connect if there is no one fully free media (ART) processor available.

The MCU will always try to fill up one media processor with up to three TIP-enabled endpoint with one screen, to save free media processors for TIP-enabled endpoint with three screens.

When monitoring an ongoing Telepresence conference with TIP-enabled endpoints (Cisco and Polycom), virtual participants are used to indicate the additional screens in the in the Web Client. For example, if the endpoint has three screens, the system will display three participants, one for each screen.

An additional virtual Audio Only participant is used for the audio only telephone connected to the TIP endpoint.

Configuring the Microsoft, Cisco and Polycom Components

Carry out the following steps to configure the various system components to enable TIP.

To configure the Microsoft, Cisco and Polycom components:

- 1 Configure a SIP Trunk connection between the Polycom DMA system and the Cisco Unified Communications Manager (CUCM).

For more information see the *Polycom Unified Communications Deployment Guide for Cisco Environments*

- 2 Register the Collaboration Server to the Lync Server

- a Install a Security Certificate on the Collaboration Server.

The Certificate is obtained from the System Administrator and saved on the Workstation.


- b In the **SIP Servers** tab of the **IP Network Services Properties** dialog box:

- 1 In the **Certificate Method** drop-down menu, select **PEM/PFX**.

- 2 Click the **Send Certificate** button.

The **Install File** dialog box is displayed.

- iii Browse to the saved Certificate on the Workstation and click the **Yes** button to install the certificate.

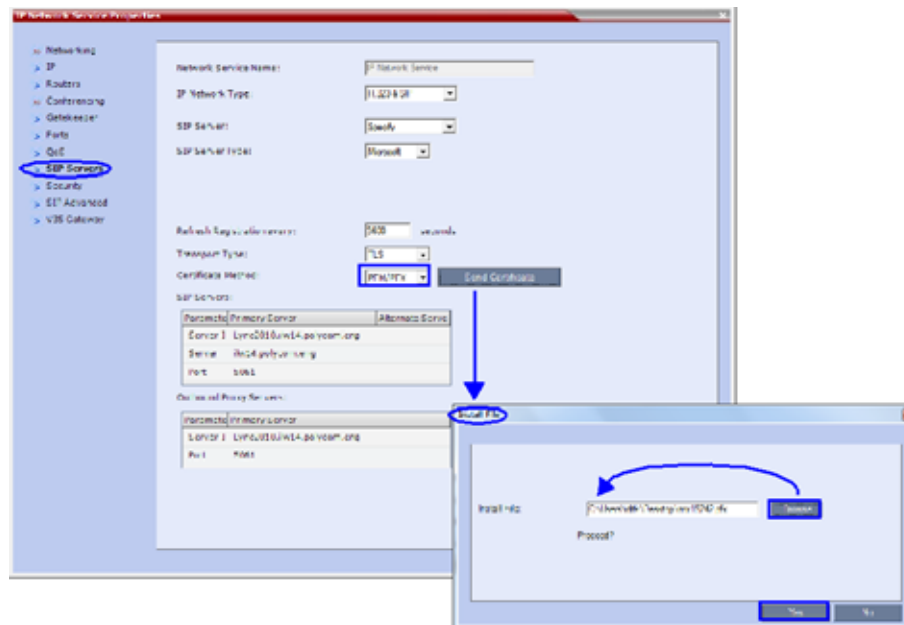


For more information see:

- ◆ [Appendix H - Integration Into Microsoft Environments.](#)
- ◆ *The Polycom Unified Communications Deployment Guide for Cisco Environments.*

- 3 Register the Collaboration Server with the Lync Server.
- a In the **IP Network Services Properties** dialog box, click the **SIP Servers** tab.
 - b In the **SIP Server** field, select **Specify**.
 - c In the **SIP Server Type** field, select **Microsoft**.
 - d Set **Refresh Registration** to every **3600** seconds.
 - e If not selected by default, change the **Transport Type** to **TLS**.
 - f In the **SIP Servers** table, enter the IP address of the Lync Server in both the **Server IP Address or Name** and **Server Domain Name** fields.
 - g In the **SIP Servers** table, the **Port** field must be set to **5061**.
 - h In the **Outbound Proxy Servers** table, enter the IP address in the **Server IP Address or Name** field. (The same value as entered in **Step f**.)

- i In the **Outbound Proxy Servers** table, the **Port** field must be set to **5061**. (The same value as entered in Step g.)

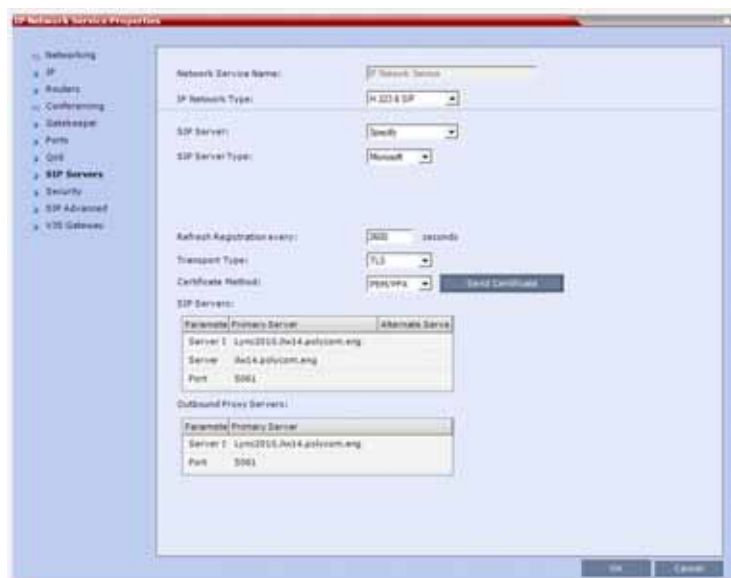

For more information see the *Polycom Unified Communications Deployment Guide for Cisco Environments*

- 4 Set the **ITP_CERTIFICATION** System Flag to **YES**.

When set to **NO** (default), this flag disables the Telepresence features in the Conference Profile.

- 5 Set the **MIN_TIP_COMPATIBILITY_LINE_RATE** System Flag.

The **MIN_TIP_COMPATIBILITY_LINE_RATE** System Flag determines the minimum line rate at which a Profile can be TIP enabled.

CTS version 1.7 requires a minimum line rate of 1024 kbps and will reject calls at lower line rates, therefore the System Flag value must be **1024** or higher.

- 6 If required, manually add and set the **FORCE_720P_2048_FOR_PLCM_TIP** System Flag using one of the following values:

FORCE_720P_2048_FOR_PLCM_TIP (Default) - Forces HD 720p video resolution and a line rate of 2048kbps for all Polycom TIP-enabled endpoints that connect to the TIP-enabled Telepresence conference. This setting is the recommended setting.

FORCE_2048_FOR_PLCM_TIP - Forces a line rate of 2048kbps for all Polycom TIP-enabled endpoints connecting to the TIP-enabled Telepresence conference.

NO_FORCE - No forcing is applied and Polycom TIP-enabled endpoints can connect to the TIP-enabled Telepresence conference at any line rate or resolution.

- 7 Reset the Collaboration Server.
8 Register the DMA to the Lync server

For more information see the *Polycom Unified Communications Deployment Guide for Cisco Environments*

- 9 Register the ITP endpoints to the Lync server.

10 Register Lync Clients to the Lync server.

For more information see the relevant Lync documentation.

11 Register DMA to the CUCUM server

12 Register CTS1000 and CTS3000 endpoints to the CUCUM server

For more information see the relevant Cisco documentation.

13 Register ITP endpoints to the CUCM server.

14 Register HDX endpoints to the DMA as Gatekeeper

15 Open MLA to configure ITP Layouts

MLA (Multipoint Layout Application) is required for managing CTS 3XXX layouts whether Polycom TPX, RPX or OTX systems are deployed or not. MLA is a Windows® application that allows conference administrators to configure and control video layouts for multipoint calls involving Polycom Immersive Telepresence (ITP) systems.

For more information see the *Polycom Unified Communications Deployment Guide for Cisco Environments*.

16 Configure a TIP Enabled Profile on the Collaboration Server.

- a Create a New Profile for the Meeting Room.**

- b In the **New Profile - General** tab, set the Line Rate to a value of at least that specified for the MIN_TIP_COMPATIBILITY_LINE_RATE System Flag in [Procedure 1: Set the MIN_TIP_COMPATIBILITY_LINE_RATE System Flag](#).

The screenshot shows the 'New Profile' dialog box with the 'General' tab selected. The 'Line Rate' dropdown menu is highlighted with a blue box and is set to '1024 Kbps'. Other visible settings include 'Conferencing Mode' set to 'H.264', 'Video Switching' set to 'H.264 HQ30', and 'Operator Conference' unchecked. The 'Display Name' field is empty.

- c Click the **Advanced** tab.

The screenshot shows the 'New Profile' dialog box with the 'Advanced' tab selected. The 'TIP Compatibility' dropdown menu is highlighted with a blue box and is set to 'Prefer TIP'. Other visible settings include 'Encryption' set to 'No Encryption', 'Facsimile Loss Compensation (FLC and DTMF)' checked, 'Auto Terminate' checked, 'Before First Joins' set to '10 Minutes', 'At the End' set to '1 Minutes', and 'Interval' set to '0 Seconds'.

- d Select **Prefer TIP** as the **TIP Compatibility** mode. To view its behavior, see the [Content Sharing Behavior](#) tables that are listed below.



When **Prefer TIP** is selected, **Video Switching**, **Gathering Settings**, **Skins**, **Message Overlay**, **Site Names** and **Network Indications** are disabled.

Content Sharing Behavior

The following tables list the system's Content sharing behavior for the various combinations of TIP Compatibility mode settings and the following endpoints:

Polycom Immersive Telepresence Systems (ITP) Version 3.0.3:

- RPX 200
- RPX 400
- OTX 300
- TPX HD 306
- ATX HD 300

Polycom video conferencing endpoints (HDX) Version 3.0.3:

- 7000 HD Rev C
- 8000 HD Rev B
- 9006
- 4500

Cisco TelePresence® System (CTS) Versions 1.7 / 1.8:

- CTS 1000
- CTS 3000

TIP Compatibility - None

None		Content Receiver	
		HDX / ITP	CTS
Content Sender	HDX / ITP	Media: H.264 Flow Control: H.323 via H.239 SIP via BFCP	Not Connected
	CTS	Not Connected	Not Connected

TIP Compatibility - Prefer TIP

Prefer TIP		Content Receiver	
		HDX / ITP	CTS
Content Sender	HDX / ITP	Media: H.264 Flow Control: H.323 via H.239	SIP via BFCP TIP via Auto Collaboration
	CTS*		

* CTS Version 1.9.1 and higher support H.264 Content.

In Prefer TIP mode, it is pre-requisite that the CTS and CUCM versions support H.264 base profile content without restrictions and that the CTS version be 1.9.1 or higher and that CUCM version be version 9.0 or higher.

Encryption

Encryption between the RealPresence Collaboration Server (RMX) 1800/2000/4000 and a CISCO environment is supported. Media is encrypted using SRTP, while control is encrypted using SRTCP. TIP is encrypted using SRTCP. SIP is be encrypted using TLS. When upgrading, the Collaboration Server automatically creates a self-signed certificate to support encrypted communications with CISCO endpoints.

For media encryption. the Collaboration Server will first attempt to exchange keys using DTLS. If the Collaboration Server fails to exchange keys using DTLS, SIP TLS encrypted with SDES is used to exchange media encryption keys.


Guidelines

- This feature is not supported in Ultra Secure Mode.
- Voice activity metrics and RTP are not encrypted.
- In the event that DTLS negotiation fails, SIP will be encrypted using TLS if enabled in the IP Management Network properties, SIP Servers tab. DTLS negotiation does not require SIP TLS.
 - In a mixed CISCO and Microsoft Lync environment, in order to assure encrypted communications with both CISCO endpoints and Microsoft Lync in the event of DTLS negotiation failure, the certificate defined in the IP Management Network Services properties dialog box, SIP Servers tab, must have been issued by the same certificate authority that issued the certificates used by both the Microsoft Lync server and the CUCM server.
- The flag, SIP_ENCRYPTION_KEY_EXCHANGE_MODE, is used to control this feature. The possible values are:
 - AUTO (default): Normal encryption flow
 - DTLS: Only use DTLS for encryption
 - SDES: Only use SDES (SRTP) for encryption
 - NONE: Encryption is disabled
- The feature was tested using the following CISCO components:
 - Cisco CUCM Version 9.0
 - Cisco TPC Version 2.3

- Cisco endpoints running Version 1.9.1
 - ◆ C20, C40, C60, and C90 running TC5
 - ◆ CTS500
 - ◆ CTS1310
 - ◆ CTS3010

To enable DTLS negotiation for content encryption:

- 1 In a new or existing **Profile**, click the **Advanced** tab.

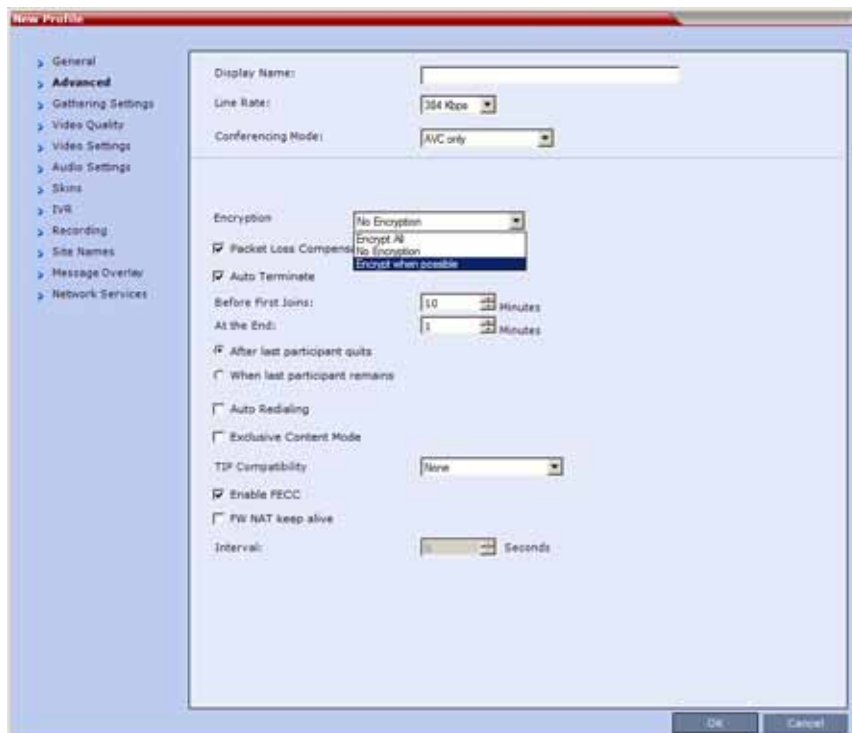


- 2 Set **Encryption** to either **Encrypt All** or **Encrypt when possible**.
- 3 Set `FORCE_ENCRYPTION_FOR_UNDEFINED_PARTICIPANT_IN_WHEN_AVAILABLE_MODE` System Flag to **NO**

These setting will enable encrypted and non-encrypted H.323 participants to connect to encrypted or non-encrypted conferences.


For more information see [Encryption](#).

- a Click the **Video Quality** tab.

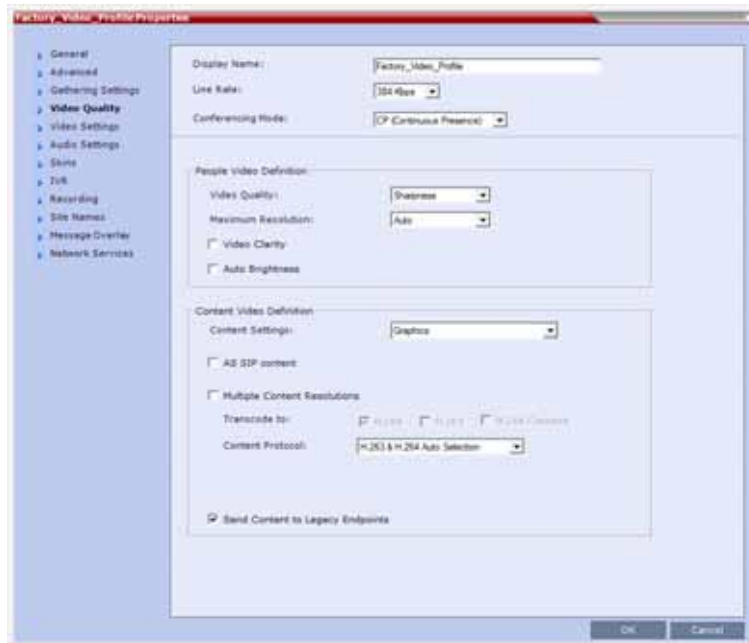

Content Settings is disabled if **TIP Compatibility** is set to **Prefer TIP** in the **Advanced** tab.

- b Click the **Video Settings** tab.

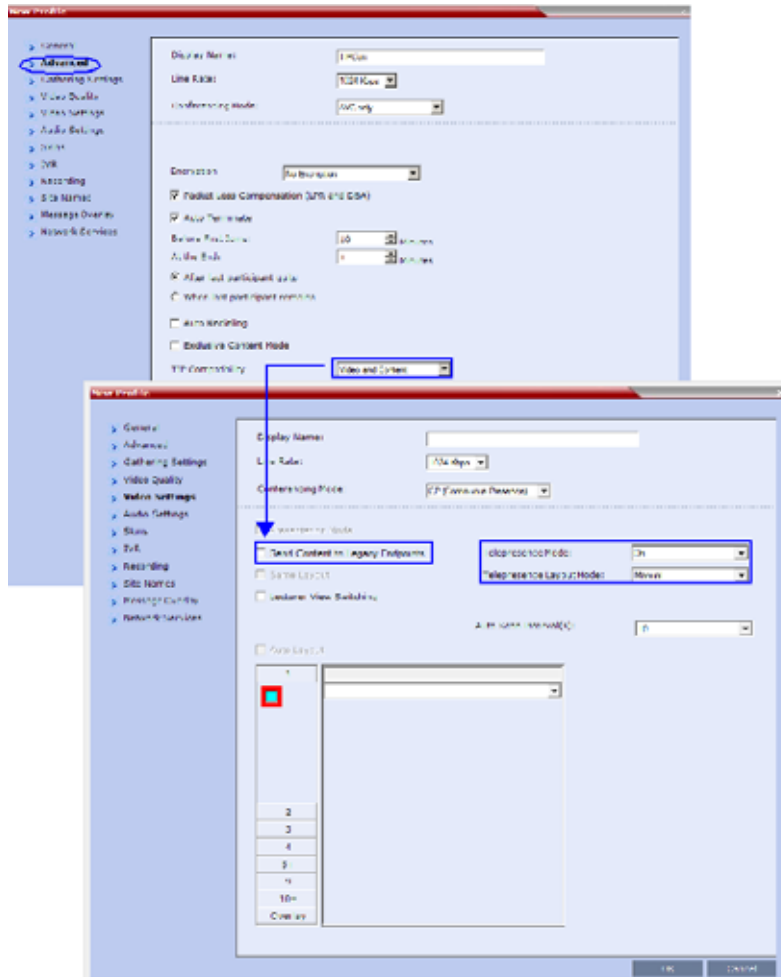

- c Set the **Telepresence Mode** to **Auto/On** and select the **Telepresence Layout Mode**.
- 4 Assign the New Profile to the Meeting Room. For more information see [Creating a New Meeting Room](#).
 - 5 Configure a Virtual Meeting Room (VMR) on the DMA.

The procedures for configuring *DMA* are described in detail in the *Polycom Unified Communications Deployment Guide for Cisco Environments*.

Resolution Configuration

The resolution configuration dialog box is not applicable to TIP-enabled conferences as it uses fixed settings.

HD Video Resolutions for TIP calls are determined according to the following table:

TIP HD Video Resolution by Line Rate

Line Rate	Video Resolution
Line Rate >=3Mbps	HD1080p30
3Mbps > Line Rate >= 936kbps	HD720p30
Line Rate < 936kbps	Call is dropped.

Endpoints

- 1 Configure HDX endpoints to register to Lync Server.
- 2 Configure H.323 endpoints to register to DMA as SIP Proxy
- 3 Configure SIP endpoints to register to:
 - ◆ DMA as SIP Proxy
 - ◆ Lync Server as SIP Proxy
 - ◆ CUCM as SIP Proxy
- 4 Configure TIP endpoints to register to:
 - ◆ DMA
 - ◆ CUCM

For more information on the above, see *Polycom Unified Communications Deployment Guide for Cisco Environments*.

Content

Endpoint Registration and Dialing Method affect the Video and Content Sharing characteristics of the conference as detailed below.

Video and Content

Endpoint Registration	Lync	CUCM	DMA
Dialing Method	ITP /HDX RTV Key is required for HDX and ITP	ITP /HDX TIP Key is required for HDX	ITP /HDX TIP Key is required for HDX
HDX to Collaboration Server	<ul style="list-style-type: none"> • HD H.264 Video • SIP P+C • Content: XGA,5fps • ICE 	<ul style="list-style-type: none"> • HD H.264 Video • No Content • ICE not supported 	<ul style="list-style-type: none"> • HD H.264 Video • SIP P+C • Content: XGA,5fps • ICE not supported

Video and Content

Endpoint Registration	Lync	CUCM	DMA
Dialing Method	ITP /HDX RTV Key is required for HDX and ITP	ITP /HDX TIP Key is required for HDX	ITP /HDX TIP Key is required for HDX
Lync to Collaboration Server	<ul style="list-style-type: none"> • HD Video (RTV) • No Content Sharing • Content sent to Lync using Content for Legacy Endpoints 		
CTS to Collaboration Server	<ul style="list-style-type: none"> • HD1080p30 • TIP Content Sharing • Content: XGA,5fps 		

Operations During Ongoing Conferences


Moving participants between TIP enabled meetings and non TIP enabled meetings is not possible.

Monitoring

CTS Participants

- 1 In the **Participant List** pane double-click the participant entry. Alternatively, right-click a participant and select **Participant Properties**.
The **Participant Properties - General** dialog box opens.
- 2 Click the **SDP** tab.
The following are indicated in the **Remote Capabilities**, **Remote Communication Mode** and **Local Communication Mode** panes:
 - AAC_LD - Audio Protocol

- Main Profile - Video protocol

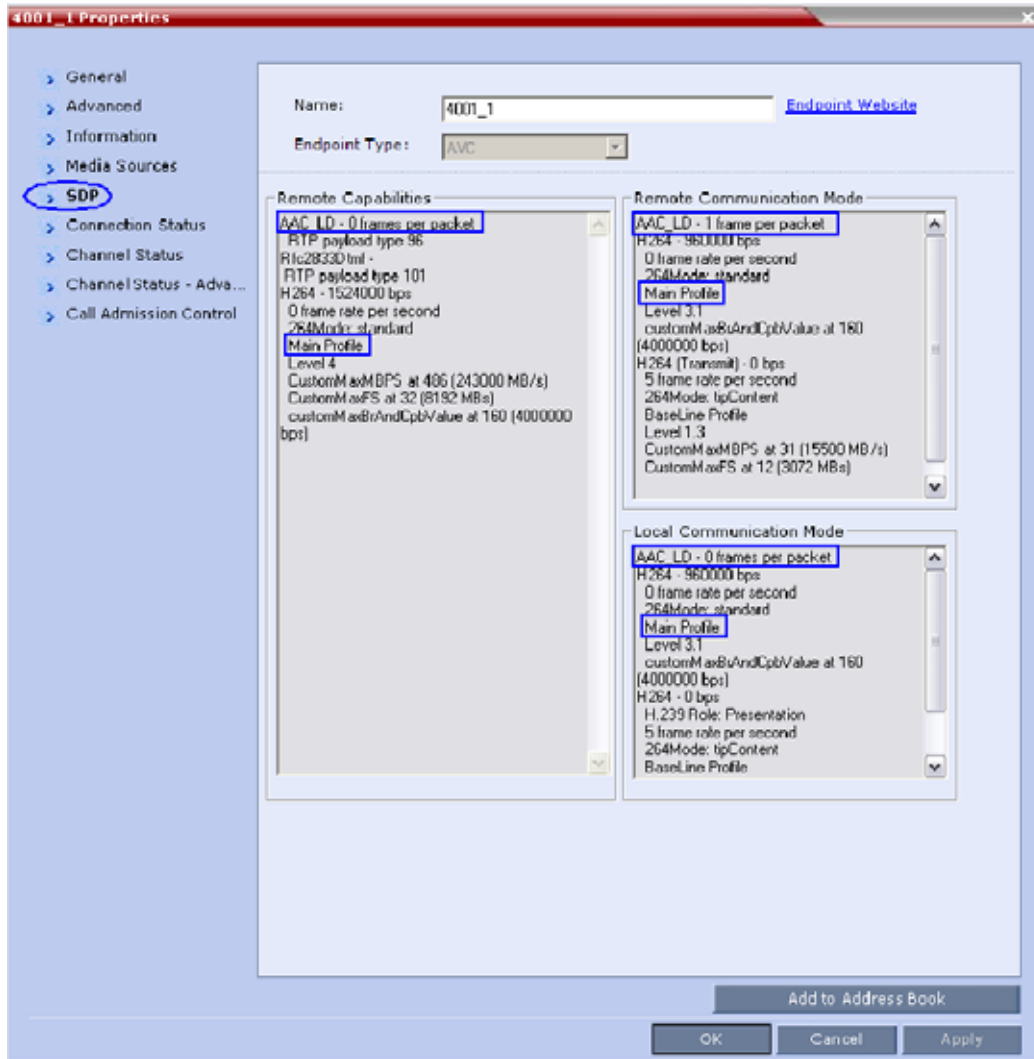

When viewing CTS systems in the *Participants* list, the individual video screens and the Audio Channel (AUX) of the CTS system are listed as separate participants. The Participant list below shows a connected CTS 3000, a 3-screen system.

Name	Status	Role	IP Address	Alias Na	Network	Dialing Dr	Audio	Video	Encryptio	Service N	FECC Tok	Cont
SUPPORT_419473727 (4 participants)												
1502_1	Connected		0.0.0.0	1502@1	SIP	Dial o				IP Netw		
1502_aux	Connected		0.0.0.0	1502@1	SIP	Dial o				IP Netw		
1502_3	Connected		0.0.0.0	1502@1	SIP	Dial o				IP Netw		
1502_2	Connected		0.0.0.0	1502@1	SIP	Dial o				IP Netw		

Diagram showing connections: 1502_1 and 1502_2 are connected to 'Video', while 1502_1 and 1502_aux are connected to 'Audio'.


Lync Participants (RTV)

- 1 In the **Participant List** pane double-click the participant entry. Alternatively, right-click a participant and select **Participant Properties**.

The **Participant Properties - General** dialog box opens.

- 2 Click the **SDP** tab.

RTV is indicated in the **Remote Capabilities**, **Remote Communication Mode** and **Local Communication Mode** panes:

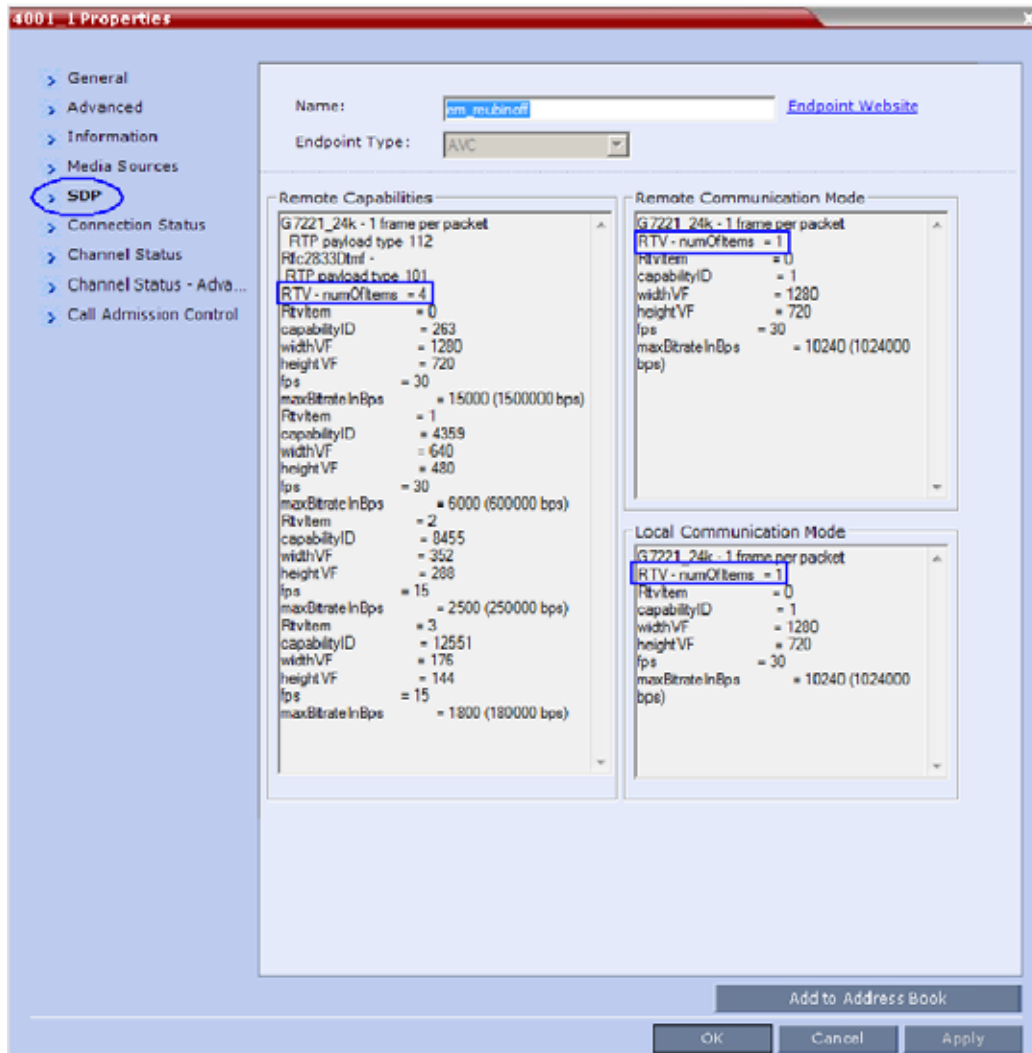

- 3 Click the **Channel Status - Advanced** tab

- 4 In the **Channel Info** drop-down menu select **Video Out**.
Media Info displays **RTV Channel Status** parameters:

The screenshot shows the '4001 Properties' dialog box with the 'Channel Status - Ad...' tab selected. The 'Channel Info' section has 'Video out' selected in the dropdown menu. The 'Media Info' section displays a table with the following data:

Field	Value
Algorithm	RTV
Resoluti	QCIF
Frame R	29
Annexes	

Known Limitations

The following may occur in the collaborative environment:

- Artifacts and ghosting may appear when Lync Clients and CTS endpoints connect to the VMR.
Frequency: Seldom.
- Lync Client receives fast updates (Intra) from CTS 500 endpoints causing the screen to refresh repeatedly.
Frequency: Often.
- Audio volume and video quality decreases on CTS endpoints.
Frequency: Seldom.

- CTS endpoint connects and then disconnects after a few seconds.
Frequency: Seldom.
- Lync Clients always connect encrypted to non-encrypted conferences.
- Auto Layout sometimes ignored for CTS and Lync Clients calling through DMA.
Frequency: Rarely.
- Content sent from HDX endpoint is received by all endpoints for 1 second before stopping.
Conference is Content to Legacy enabled and TIP Compatibility is Prefer TIP.
Frequency: Often.

Appendix J - Restore Defaults

Administrators can erase the current Collaboration Server configurations and restore default system settings. Two options are available:

- **Standard Restore**
Delete customer conferencing entities and keep only system default conferencing entities. However, the management network service and license info are not deleted.
- **Comprehensive Restore**
Restore the MCU to the settings it had when shipped from the factory. The Default Management Network and license information are deleted and the system hard disk file partition is formatted.

Perform a Standard Restore

A standard restore deletes the following files:

- CDR
- Address Book
- Log Files
- Faults
- Dump Files
- Notes


In addition, all the conferencing entities are deleted:

- Entry Queues
- Profiles
- Meeting Rooms
- IVR Services
- Default Network IP Service

When the system is restarted, these conferencing entities are created based on the system defaults. In addition, the Fast Configuration Wizard runs automatically, enabling the user to configure the Default IP Network Service.

To perform a Standard Restore using the RMX Web Client:

- 1 In the RMX Web Client, click **Administration > Tools > Restore Factory Defaults**.
- 2 In the **Restore Factory Defaults** dialog, select **Standard Restore**.

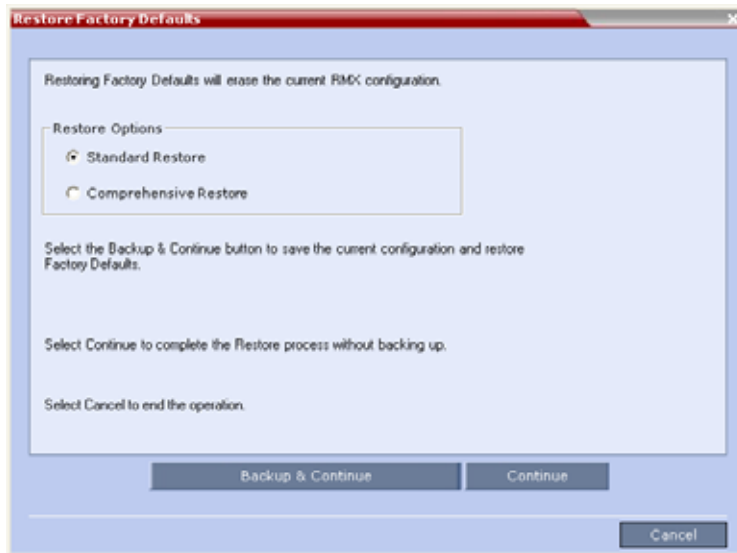

- 3 Click one of the following buttons:
 - **Backup & Continue**—Backup of the current Collaboration Server configuration. Select this option if you wish to restore the current conferencing entities and system configuration after the Standard Restore.
Proceed with [step 4](#).
 - **Continue**—Initializes all the current system configuration files and conferencing entities and then restores them to their system default values according to the selected restore level.
Proceed with [step 5](#).
 - **Cancel**—cancels and exits this dialog box.
- 4 In the **Backup Configuration Dialog** dialog, click **Browse** to select the **Backup Directory Path** and select **Backup**.
The system initiates the backup of the Collaboration Server configuration files. When the **backup** completes, a confirmation dialog box is displayed. To cancel the backup, click **Close**.
- 5 Click **Yes** to restore the Collaboration Server.
- 6 When prompted to reset the system now, click **Yes**.
- 7 Following the system restart, follow the instructions in the *RealPresence Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*:
 - [Modify Network Settings in USB Key](#)
 - [First Time Power Up](#)

Perform a Comprehensive Restore

Restore the MCU to the default settings of the current software version.

In addition to files deleted when you [Perform a Standard Restore](#), the following files are also deleted:

- CFS license information
- Management Network Service



Note: Product Activation Key is required after a Comprehensive Restore

After a Comprehensive Restore, the Product Activation Key is required to reconfigure the Management Network Service during the First Entry Configuration.

You can perform a comprehensive restore in one of the following ways:

- Using the RMX Web Client (Recommended).
- Using the USB key.

Use the USB key for system restore only when you cannot do it from the system Web Client. For example, when the Web Client isn't accessible.



Warning: Insert a USB device into the Collaboration Server's USB port ONLY when you want to perform a system restore


Inserting a USB key containing the following files causes the Collaboration Server to exit Secure Mode and perform a Comprehensive Restore:

- Collaboration Server (RMX) 2000/4000—*RestoreToFactoryDefault.txt* and *lan.cfg*
- Collaboration Server (RMX) 1800—*USB_action.cfg* and *lan.cfg*

Do not insert a USB device into the Collaboration Server's USB port unless it is your intention to disable Secured Mode or perform a Comprehensive Restore to system defaults.

To perform a comprehensive restore using the RMX Web Client:

- 1 In the RMX Web Client, click **Administration > Tools > Restore Factory Defaults**.
- 2 In the **Restore Factory Defaults** dialog, select **Comprehensive Restore**.

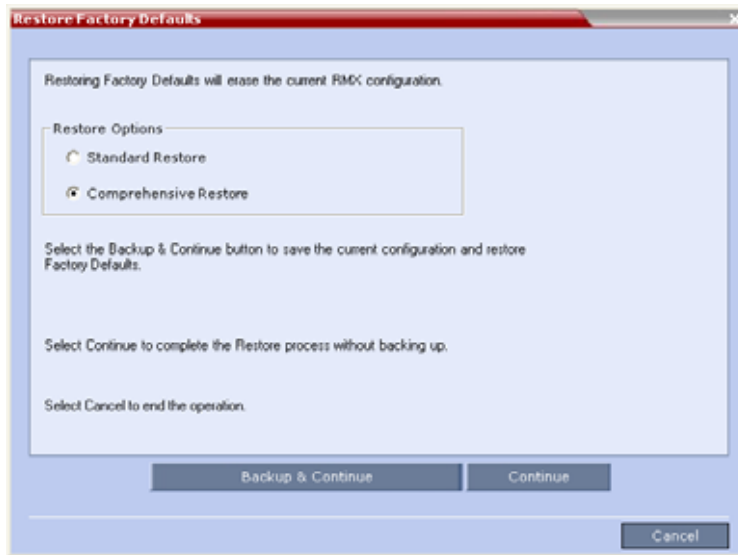

- 3 Click one of the following buttons:
 - **Backup & Continue**—Backup of the current Collaboration Server configuration. Select this option if you wish to restore the current conferencing entities and system configuration after the Standard Restore.
Proceed with [step 4](#).
 - **Continue**—Initializes all the current system configuration files and conferencing entities and then restores them to their system default values according to the selected restore level.
Proceed with [step 5](#).
 - **Cancel**—cancels and exits this dialog box.
- 4 In the **Backup Configuration Dialog** dialog, click **Browse** to select the **Backup Directory Path** and select **Backup**.
The system initiates the backup of the Collaboration Server configuration files. When the **backup** completes, a confirmation dialog box is displayed. To cancel the backup, click **Close**.
- 5 Click **Yes** to restore the Collaboration Server.
- 6 When prompted to reset the system now, click **Yes**.
- 7 Following the system restart, follow the instructions in the *RealPresence Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*:
 - [Modify Network Settings in USB Key](#)
 - [First Time Power Up](#)

To perform a Comprehensive Restore using the USB key (2000/4000):


- 1 **Optional.** Back up the system configuration:
 - a In the RMX Web Client, click **Administration > Software Management > Backup Configuration**.
 - b Click **Browse** to select a backup directory.
 - c Click **Backup**.

Perform this step if you wish to restore the current conferencing entities and system configuration after the Comprehensive Restore.

- 2 Insert the USB key that was included with your system into the workstation.

By default, the USB key contains files *ToFactoryDefault.txt* and a *lan.cfg* file which are used to trigger the restore. However, if they are missing, you can create two blank .txt files with these names. (The content of these two files doesn't matter.)

- RealPresence Collaboration Server (RMX) 2000—at the bottom right corner of the RTM IP card on the back panel.

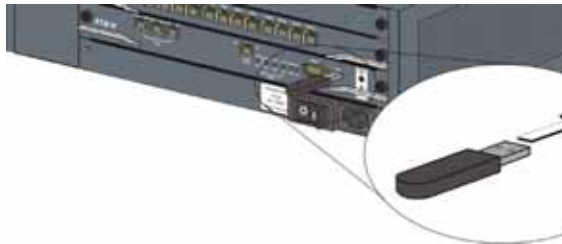

- RealPresence Collaboration Server (RMX) 4000—at the bottom right corner of the RTM IP 4000 card on the back panel.



- 3 Power off and then power on the Collaboration Server.

- 4 Following the system restart, follow the instructions in the *RealPresence Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*:
 - [Modify Network Settings in USB Key](#)
 - [First Time Power Up](#)

To perform a comprehensive restore using the USB key (1800):

- 1 Insert the USB key that is included with the system into your workstation:
 - In Windows XP:
The **Polycom Documentation** option is automatically selected. Click **OK**.
 - In Windows 7:
Select **Open Folder to view files using Windows Explorer**.
- 2 Double-click the *index.hta* file.
- 3 In the **Language Menu** window, click the hyperlink for the required documentation language.
- 4 In the **Polycom End User Licenses Agreement** window, read the agreement and click the **Accept Agreement** button.
In the **Product Type Selection** window, click **RealPresence Collaboration Server 1800**.
- 5 Under the **Support Utilities**, select **Restore to Factory Defaults**.
- 6 **Optional.** In **Restore to Factory Defaults** window, select **LAN Configuration** and configure the following:
 - Control Unit IP Address
 - Subnet Mask:
 - Default Router IP Address

This will configure the system to the local network so the administrator can access the RMX Web Client from the local workstation when the system restarts.

If you skip this step, you can configure these settings later using the **LAN Configuration Utility** included on the USB key.
- 7 Remove the USB key from the workstation.
 - Insert the USB key into either of the two USB ports on the back panel of the Collaboration Server (RMX)1800 system.



- 8 Power off and then power on the Collaboration Server1800 system.
- 9 Following the system restart, follow the instructions in the *RealPresence Collaboration Server (RMX) 1800/2000/4000 Getting Started Guide*:
 - [Modify Network Settings in USB Key](#)
 - [First Time Power Up](#)

Appendix K - SIP RFC Support

SIP RFC Support in RealPresence Collaboration Server (RMX) Systems

SIP RFC	Description	Note
1321	MD5	
2032	RTP Payload for H.261	
2205	RSVP	
2327	Session Description Protocol (SDP)	
2429	RTP Payload for H.263+	
2833	RTP Payload for DTMF	
2617	HTTP Authentication	
2976	SIP Info Method	
3261	SIP	
3264	Offer/Answer Model	
3265	SIP Specific Event Notification	Limited support
3266	SDP Support for IPv6	
3311	SIP Update Method	
3515	SIP Refer Method	Limited support
3550	RTP	
3551	RTP Profile for Audio/Video	
3711	SRTP	
3890	Transport Independent Bandwidth Modifier for SDP	
3891	SIP Replaces header	Limited support
3892	SIP Referred-by Mechanism	Limited support
3984	RTP Payload format for H.264	
4028	Session Timers in SIP	
4145	TCP Media Transport in SDP	
4566	Session Description Protocol (SDP)	
4568	SDP Security Descriptions	
4573	H.224 RTP Payload (FECC)	

SIP RFC Support in RealPresence Collaboration Server (RMX) Systems

SIP RFC	Description	Note
4574	SDP Label Attribute	
4582	Binary Floor Control Protocol (BFCP)	
4583	SDP for BFCP	
4796	SDP Content Attribute	
5168	XML Schema for Media Control (Fast Update)	
cc-transfer	Call Transfer Capabilities in SIP	Limited support
draft-ice-19	ICE spec for firewall traversal in SIP	
draft-turn-07	TURN spec for firewall traversal in SIP	
draft-rfc3489bis-15	STUN spec for firewall traversal in SIP	

Appendix L - Media Traffic Shaping

Polycom integrated traffic shaping capabilities into the RealPresence Collaboration Server to enable deploying Collaboration Server systems in networks limiting packet bursts within 100ms time intervals (or more). Setting router policies to limiting of bandwidth within a time interval, causes the router to drop packets exceeding the allowed bandwidth within this interval. Therefore, using this feature enables the MCU to flatten the traffic, and minimize traffic bursts, without exceeding the bandwidth allowed within the time interval.

Though the Collaboration Server supports high level network features, high quality of service requires end-to-end video network operation. The Collaboration Server traffic shaping capabilities cannot compensate for network level violations/limitations generated by elements outside the MCU, such as endpoints, routers, etc.

Traffic shaping can flatten a momentary burst (meaning, within a 100ms time interval). However, it cannot “flatten” longer bursts resulting from endpoints sharing content in video switching conferences. Similarly, this feature helps reducing packets dropping by routers following momentary traffic bursts, yet it does not resolve packet lost by faulty network connections or network congestion.

Note that during VSW content sessions, should source endpoint exceed the negotiated content rate for over 100ms, the Collaboration Server can flatten the video channel but not the incoming content channel.

Traffic Shaping Guidelines

- Traffic shaping is applied in the following conferencing modes and scenarios:
 - AVC conferences (both CP and VSW)
 - Mixed CP and SVC conferences - applied only on AVC endpoints
 - Content VSW

This feature is **not** applied on TIP endpoints.

- Traffic shaping code is embedded in the DSP ART modules thus requiring enlarging PCI memory size to 18Mbps, and content memory size to that of video.
- Should license port capacity be lower than the number of hardware ports, the unlicensed ports are used for traffic shaping to decrease capacity reduction.
- Traffic shaping is applied on the aggregation of both content and people channels.
- Delays due to traffic shaping, if any, are limited to 10ms.
- This feature is not applied on audio, since the encoder output audio rate is constant.
- When LPR is enabled, traffic shaping is applied following packets repair and prior to packets sending.

System Flags

Traffic shaping usage is controlled by Collaboration Server configuration system flags (for the entire bridge):

- **ENABLE_RTP_TRAFFIC_SHAPING** - Controls traffic shaping. When set to **YES**, traffic shaping is applied to all ports, resulting in some port capacity reduction (see [Capacity Reduction](#)). When set to **NO** (default), traffic shaping is disabled.
- **VIDEO_BIT_RATE_REDUCTION_PERCENT** - Indicates the percentage of actual reduction in bit rate sent from the MCU to the endpoint (negotiated bit rate is not reduced). This flag is applicable only when traffic shaping is enabled (**ENABLE_RTP_TRAFFIC_SHAPING** set to **YES**).
Range: **0-60**; Default value: **15**
- **TRAFFIC_SHAPING_MTU_FACTOR** - Used for the MTU (Maximum transmitting Unit - the size of transmitted packets) dynamic calculation:

$$\text{New MTU} = \text{video bit rate} / \text{TRAFFIC_SHAPING_MTU_FACTOR}$$

where the new MTU value is guaranteed to be a minimum of 410, and a maximum of 1460 (MAX_MTU). The purpose of this calculation is to match video rate in outgoing video to call rate, yet force lower encoder bit rates to avoid overflow.

This flag is applicable only when traffic shaping is enabled.

Range: **0-5000**, where **0** signifies no change in MTU; Default value: **800**

To modify any of these flags, manually add them into the MCMS user parameters section of the system configuration flags, and then modify their value (see [Manually Adding and Deleting System Flags](#)).

Capacity Reduction During Traffic Shaping

The table below describes the maximum capacity left after reduction due to traffic shaping in Collaboration Servers 2000/4000. There is no capacity reduction in Collaboration Server 1800.

Capacity Reduction

Resolution	Non-mixed Mode	Mixed Mode
CIF	150 *	100 *
SD	150 *	100 *
HD720p	100	66
HD1080p	50	40
Audio Only	300	150

* Assuming conference bit rate ≤ 1024 Kbps

System Limitation

Currently, Traffic shaping is limited to conferences using a minimum of 384 bit rate. Under this bit rate, the user might experience bursts of data.

Appendix M - Homologation for Brazil

H.323 & SIP Protocol Flag Options

Using a set of system flags, the user has the ability to select either Polycom proprietary or H.323/SIP standard protocol settings.

H.323 & SIP Flag Settings

Three flags are enabled on the Collaboration Server, allowing the user to define and select either standard or proprietary H.323 and SIP protocol settings.

Flag name: SIP_TIMERS_SET_INDEX

Description: SIP Timer type timeout settings according to standard or proprietary protocol.

Flag section: CS_MODULE_PARAMETERS

Possible Values: either 0 or 1.

0 - Polycom standard (flag default setting)

1 - SIP Standard recommendation. For homologation and certification testing, this flag must be set to 1.

For use as a reference, the following table lists the SIP timer types for each flag setting and their corresponding timeout values in milliseconds.

SIP Timer Types

SIP TIMER Types	Value (in milliseconds)	
	POLYCOM (flag default)	Standard Recommended
T1	50000	500
T2	20000	4000
TimerB	35000	32000
TimerC	35000	60000
TimerD	32000	32000
TimerF	35000	32000
TimerH	35000	32000
TimerI	5000	5000
TimerJ	32000	32000
TimerK	5000	5000

Flag name: H323_TIMERS_SET_INDEX

Flag description: Enables or disables H.323 index timer according to standard or proprietary H.323 protocol.

Section CS_MODULE_PARAMETERS

Possible values:

0 - Sets the H.323 index timer to Polycom proprietary (flag default setting)

1 - Sets the H.323 index timer based on the H.323 Standard recommendation. For homologation and certification testing, this flag must be set to 1.

Flag name: DISABLE_DUMMY_REGISTRATION

Flag description: Enables or disables SIP dummy registration on the domain.

Flag Section: MCMS_PARAMETERS_USER

Possible values:

NO - Disables SIP dummy registration (flag default setting).

YES - Enables SIP dummy registration. For homologation and certification testing, the flag must be set to **YES**.